




NOTE: The hardware packaging is in a red plastic bag and hung at both ends of the box. If you cannot find it, please try searching on the inside of both ends of the box.

**PDHC 6051**

## ASSEMBLY INSTRUCTION

Attention: Do not tighten the screws until all of them are in right positions. Please contact us if you are missing any of the parts, or if you have a damaged part. Please let us know the part number, we will offer a good solution asap.  
Customer service E-mail: [cservice7@yeah.net](mailto:cservice7@yeah.net)  
Please attach your Order ID so that we can assist you better.


① X1

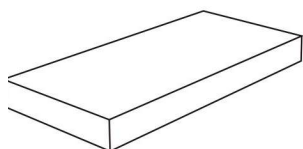

② X4



③ X1

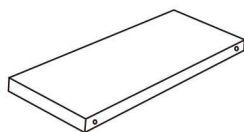

**A X12+1**  
M8X40mm



**B X1**



**C X4+2**




**D x4+1**  
M4X30mm



### STEP 1

**A X8**  
M8X40mm

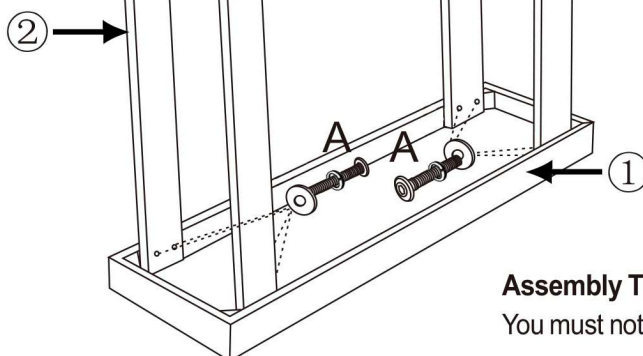


#### Assembly Tips:

You must not tighten any screw yet in this step.

### STEP 2

**A X4**  
M8X40mm

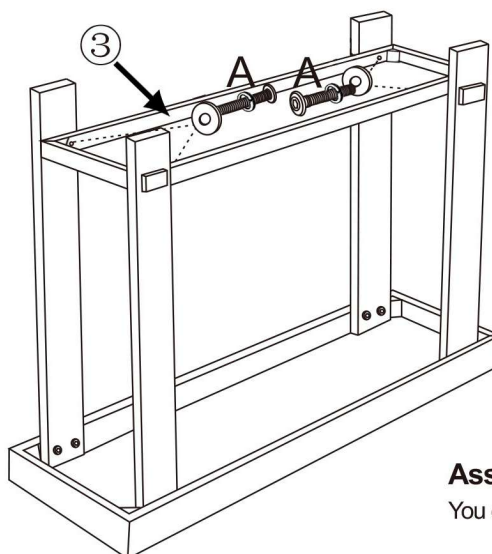


**Assembly Tips:** When every part is OK, You can tighten all screws in this step.

### STEP 3

**C X4**

**D X4**  
M4X30mm

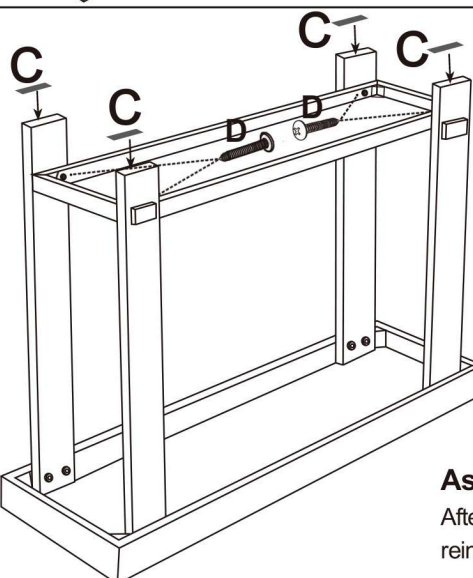

#### Assembly Tips:

After ensuring that the 4 feet are vertical, reinforce with 4 self-tapping screws D.