

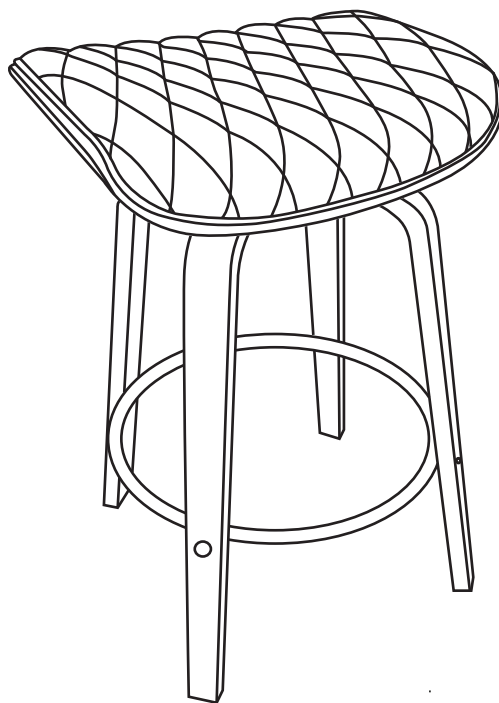
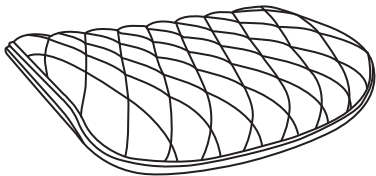
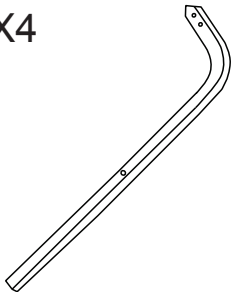


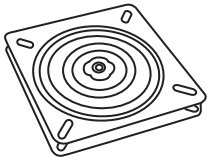





AX1 	BX4 	CX1 	DX1 	EX1 
FX4+1Ext  M6X30mm	GX12+1Ext  M6X20mm	HX4+1Ext  PLASTIC CAP	IX1  M6	JX1  SPARE FOOTNAIL

1

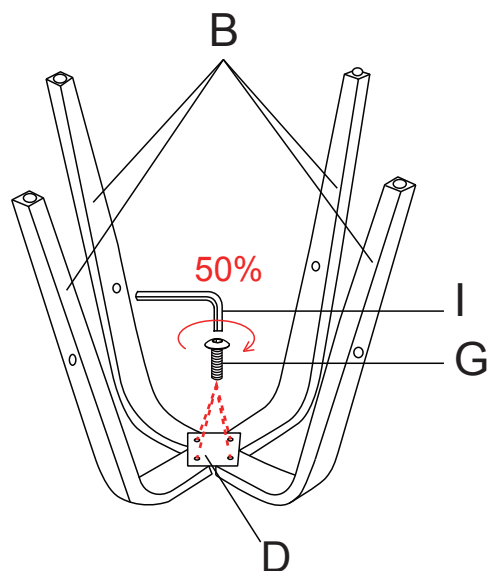


Note: Do NOT tighten the screws(G) in step 1

2

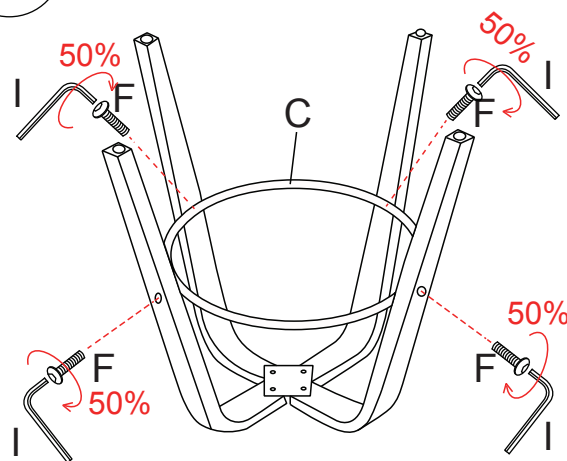


Note: Do NOT tighten the screws(F) in step 2

3

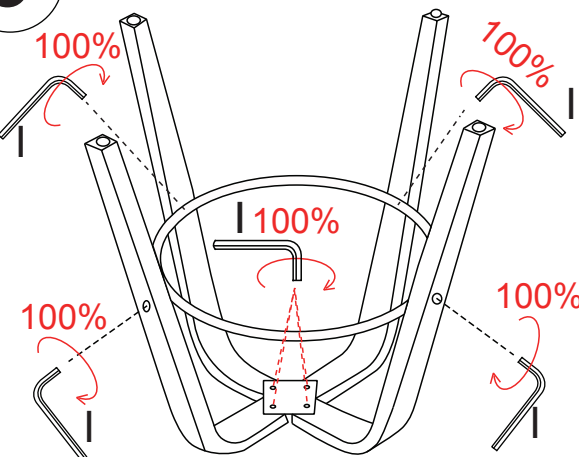


Note: Tighten the screws(G) and screws(F) in step 3


4

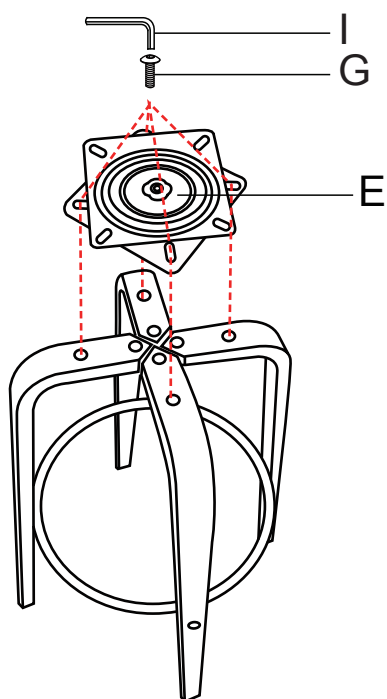

5

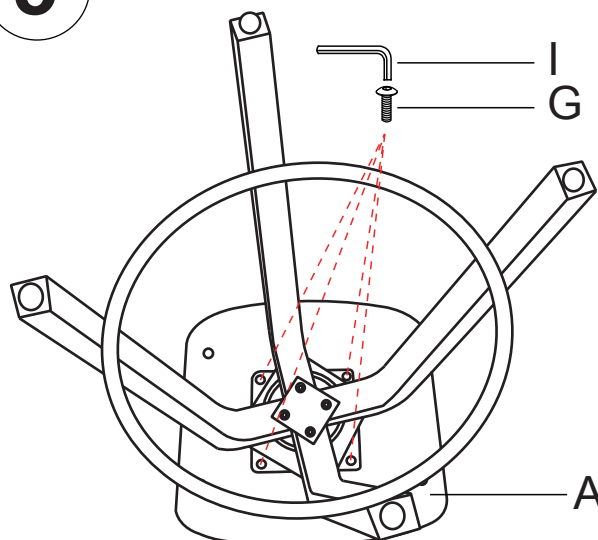

6

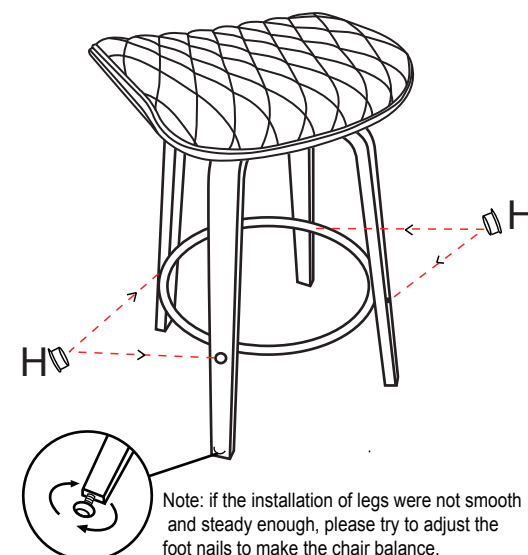

Note: if the installation of legs were not smooth and steady enough, please try to adjust the foot nails to make the chair balance.