


ASSEMBLY INSTRUCTIONS


ITEM NO.:N719P380281

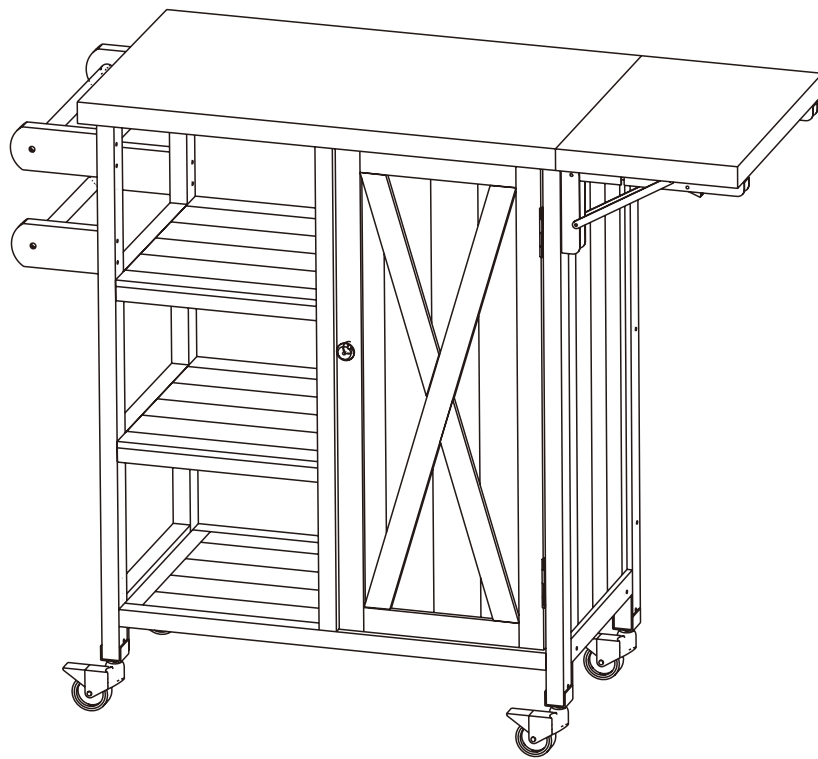














IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.


Detail View

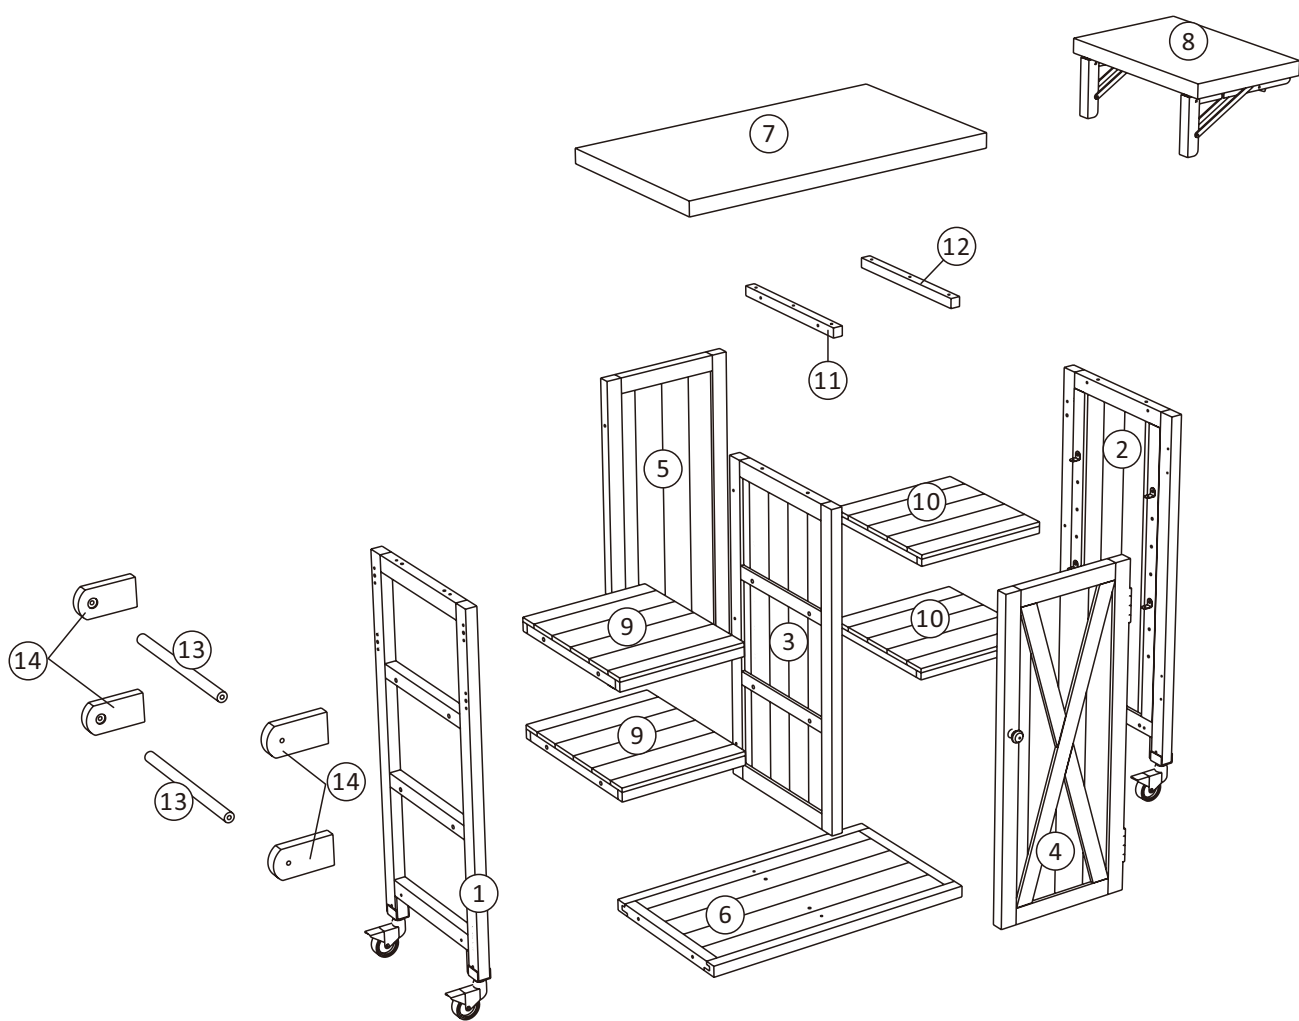

N719P380281

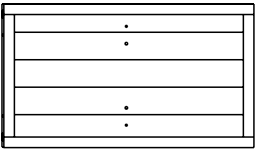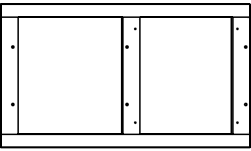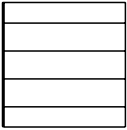1		2		3		4	
1x		1x		1x		1x	
5		6		7		8	
1x		1x		1x		1x	
9		10		11		12	
2x		2x		1x		1x	
13		14					
2x		4x					





Hardware List


A	 Ø 3.5*50 10x	B	 Ø 3.5*45 12x	C	 Ø 3.5*40 10x	D	 Ø 3.5*25 10x
E	 Ø 3.0*16 10x	F	 Ø 6.0*50 8x	G	 Ø 6.0*30 4x	H	 Ø 4.0*35 4x
I	 20x	J	 8x	K	 2x	L	 1x
M	 4x	N	 2x	O	 1x	P	 1x

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS !

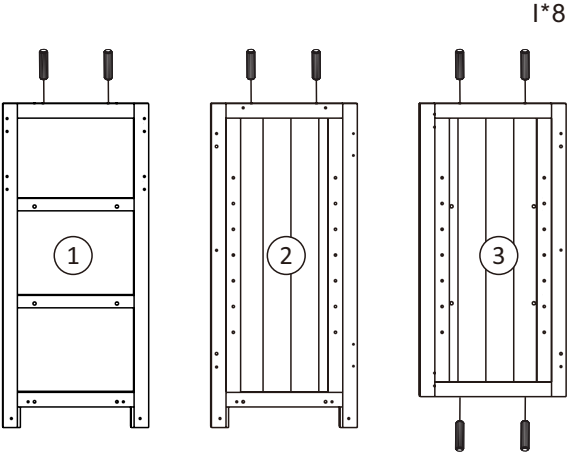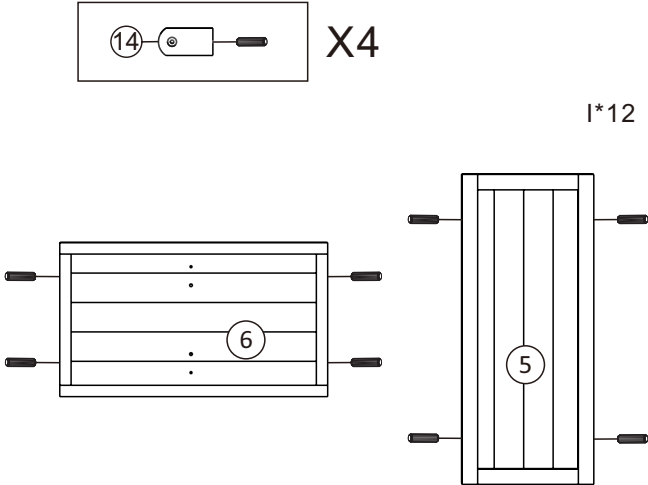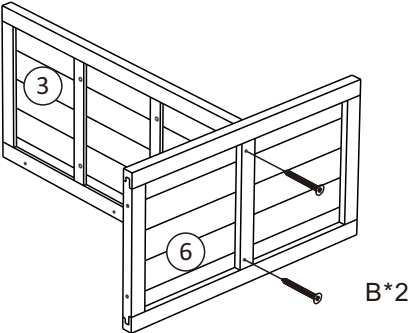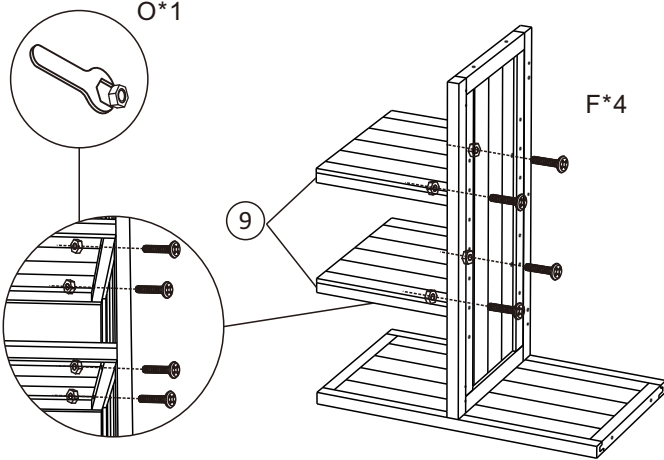	
1 I*8	2 I*12
	
3 3.5*45MM B*2	4 6.0*50MM F*4 O*1

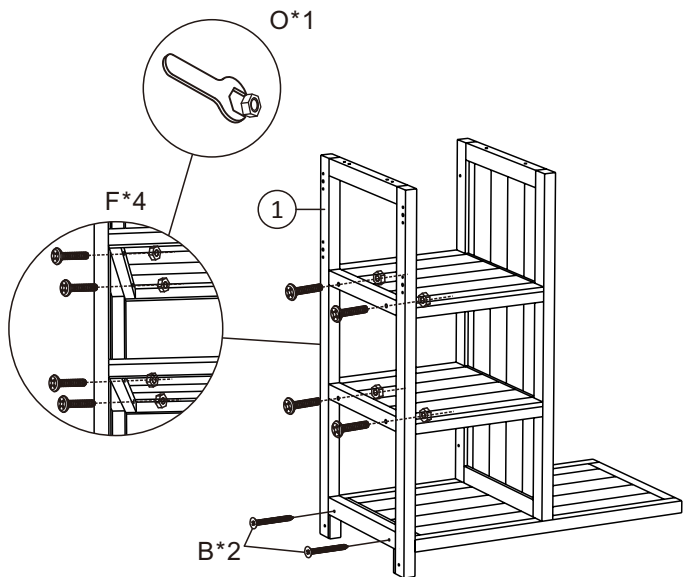


5

		
3.5*45MM	6.0*50MM	
B*2	F*4	O*1

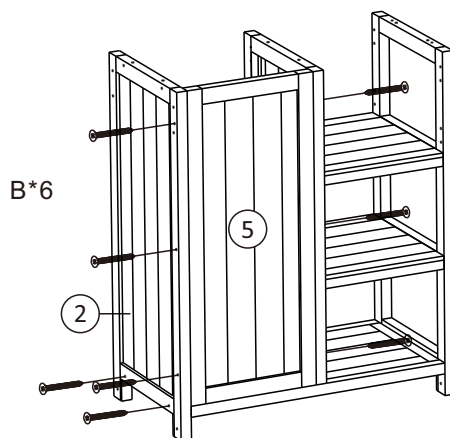


6


3.5*45MM
B*8

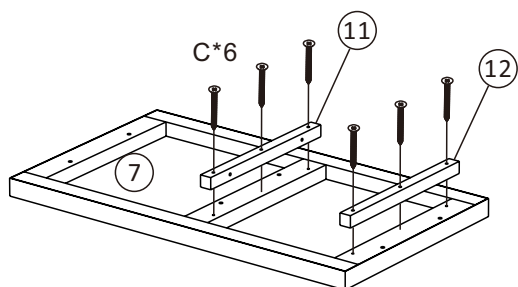


7


3.5*40MM
C*6

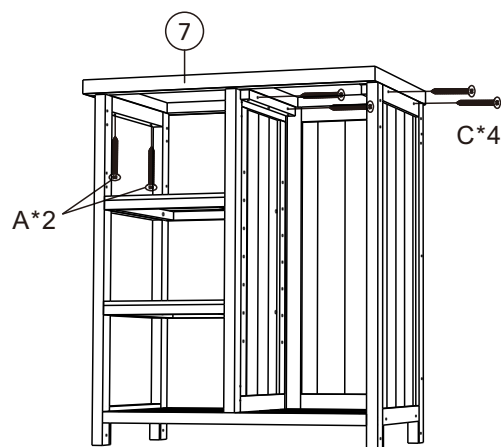


8

	
3.5*50MM	3.5*40MM
A*2	C*4

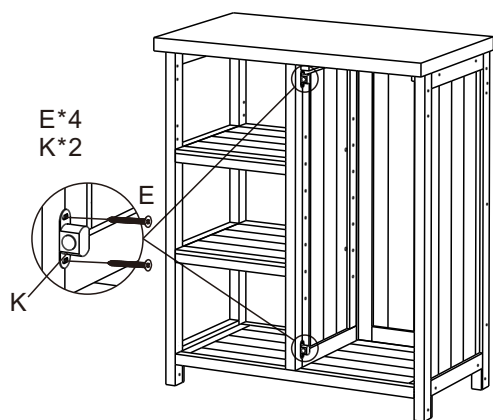

E*4
K*2

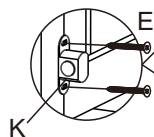


9

3.0*16MM

E*4



K*2

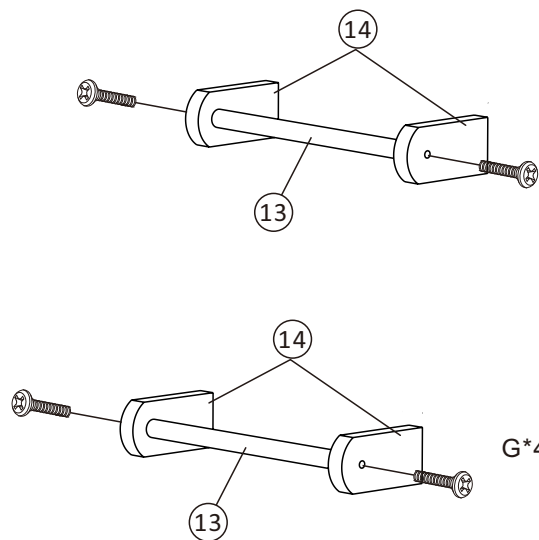


G*4

10


6.0*30MM

G*4

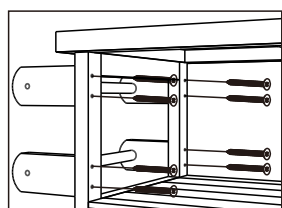

A*8


14

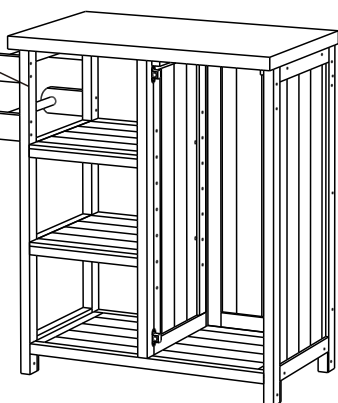

11

3.5*50MM

A*8

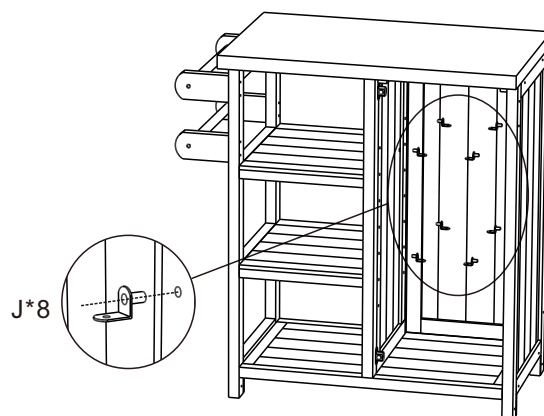


J*8


12



J*8

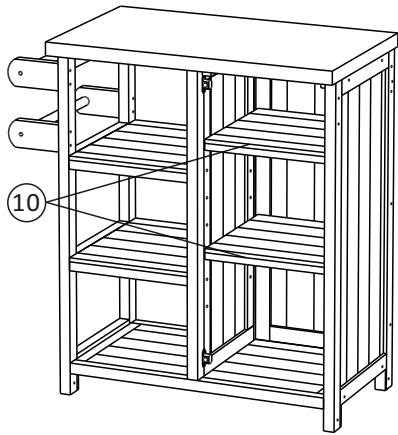


13

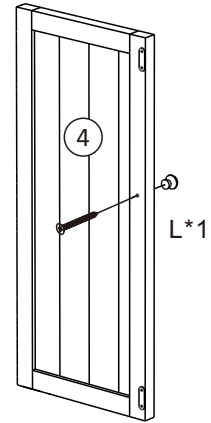

14



L*1

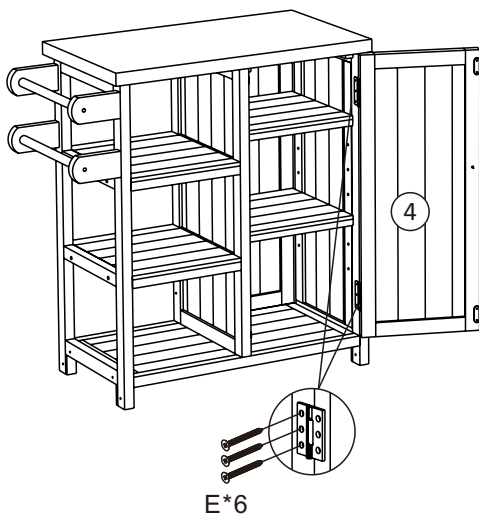


15

3.0*16MM

E*6

16

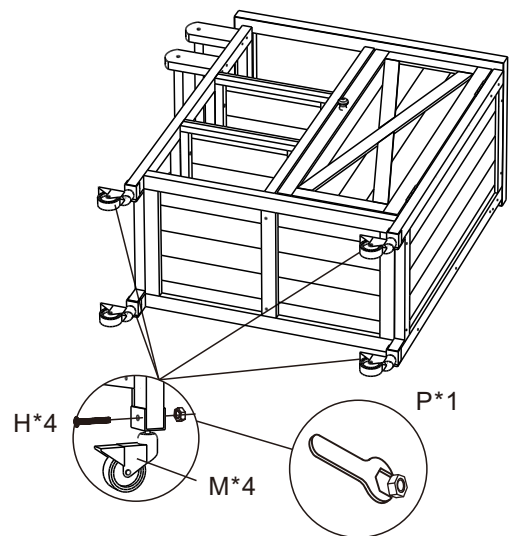

4.0*35MM


H*4



M*4



P*1


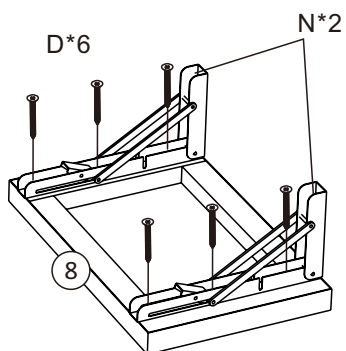


17



3.5*25MM
D*6


N*2

18

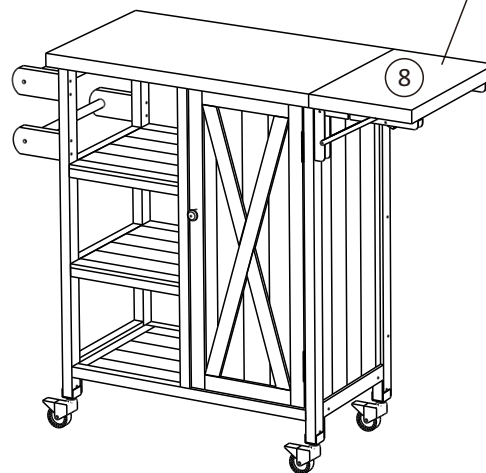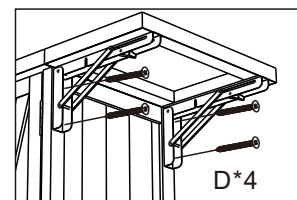


3.5*25MM
D*4

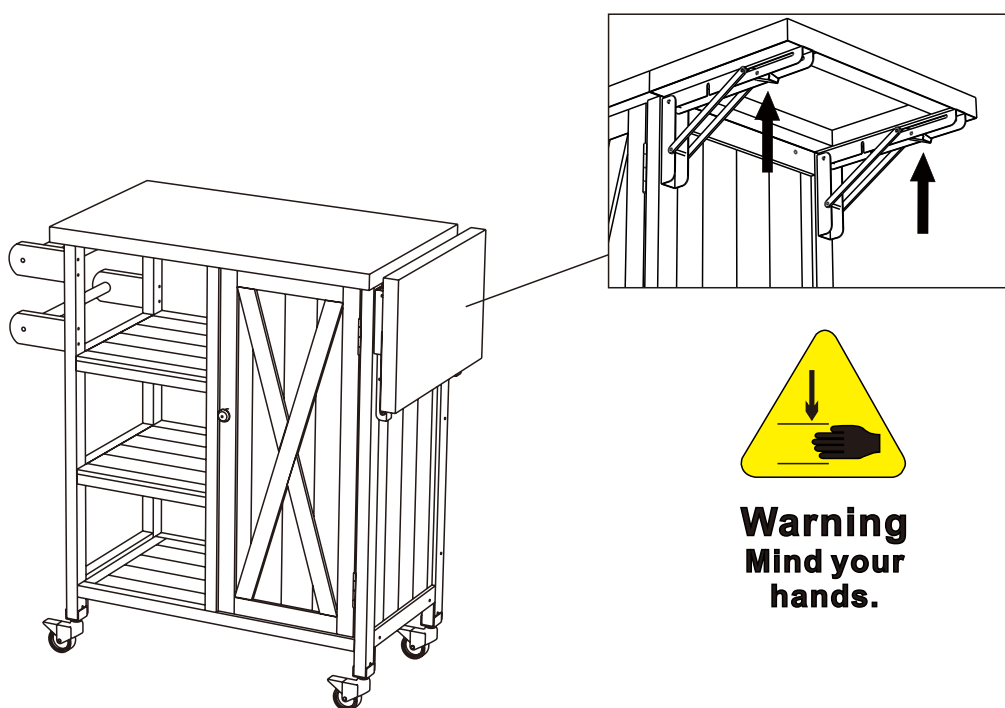

Warning
Mind your
hands.

19