

COMPUTER DESK

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:


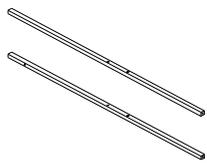



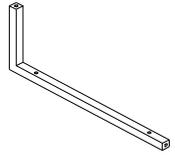

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning!!

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

<p>A</p> <p>TOP WOOD PANEL</p>		<p>1PC</p>	<p>D</p> <p>TOP CROSS BAR</p>		<p>2PCS</p>
<p>B</p> <p>LEFT SIDE</p>		<p>1PC</p>	<p>E</p> <p>BOTTOM CROSS BAR</p>		<p>1PC</p>
<p>C</p> <p>RIGHT SIDE</p>		<p>1PC</p>	<p>F</p> <p>SMALL CROSS BAR</p>		<p>2PCS</p>
			<p>G</p> <p>SMALL WOOD PANEL</p>		<p>1PC</p>

HARDWARE PACKAGE

Z	DESCRIPTION	FIGURE	Q'TY
1	ALLEN BOLT		8PCS
2	MEDIUM ALLEN BOLT		10PCS
3	CAP		4PCS
4	ALLEN KEY		1PC
5	METAL		1PC
6	SMALL ALLEN BOLT		2PCS
7	LARGE ALLEN BOLT		2PCS

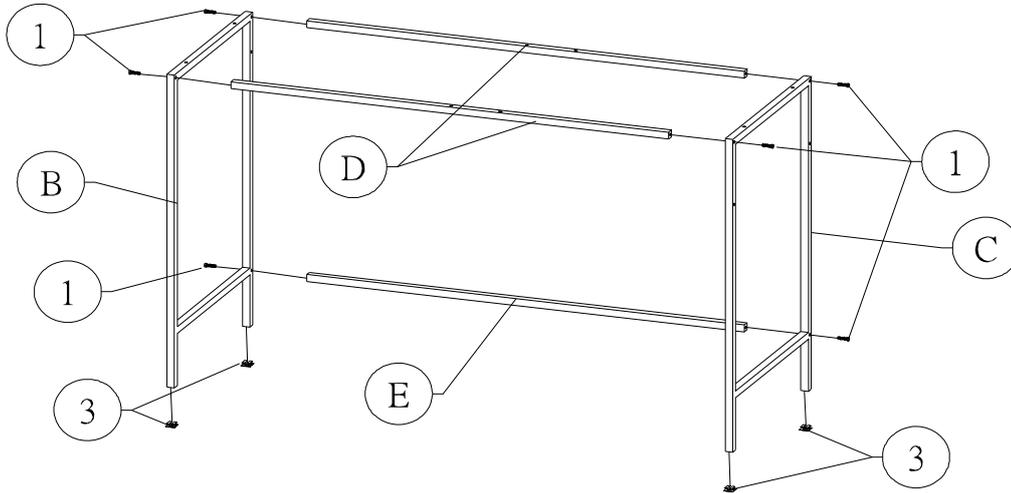
STEP 1



STEP 1 :

1. Connect the TOP CROSS BAR (D) with LEFT SIDE (B) and RIGHT SIDE (C) using ALLEN BOLT (1).
2. Connect the BOTTOM CROSS BAR (E) with LEFT SIDE (B) and RIGHT SIDE (C) using ALLEN BOLT (1).
3. Insert CAP (3) into the hole at LEFT SIDE (B) and RIGHT SIDE (C).

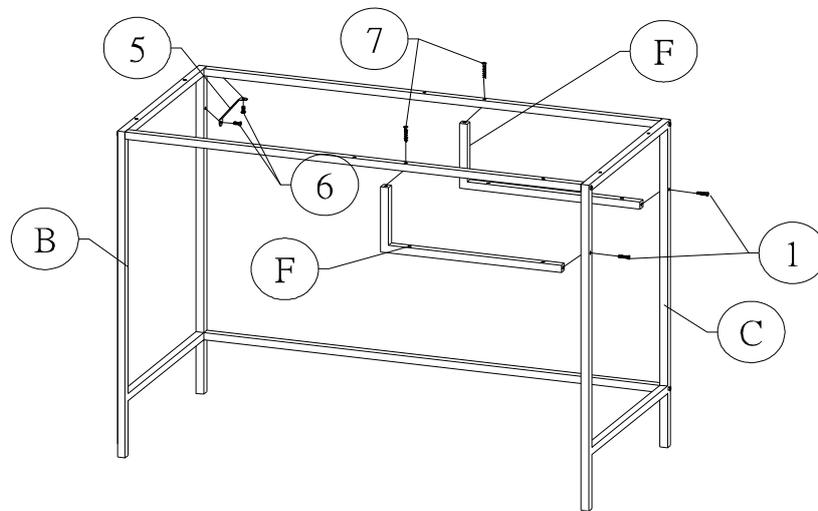
STEP 2



STEP 2 :

1. Connect the SMALL CROSS BAR (F) with RIGHT SIDE (C) and TOP CROSS BAR (D) using ALLEN BOLT (1) and LARGE ALLEN BOLT (7).
2. Connect the METAL (5) with LEFT SIDE (B) and TOP CROSS BAR (D) using SMALL ALLEN BOLT (6).

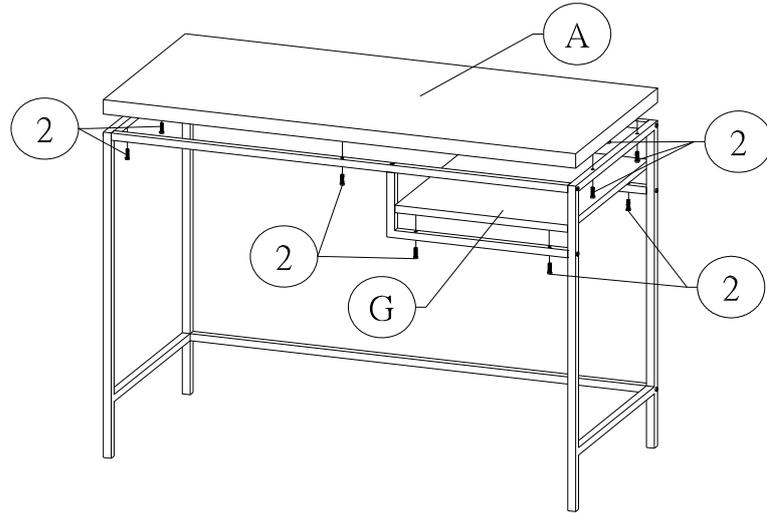STEP 3



STEP 3 :

1. TOP WOOD PANEL (A) is locked with LEFT SIDE (B) and RIGHT SIDE (C) and TOP CROSS BAR (D) using MEDIUM ALLEN BOLT (2).
2. WOOD PANEL (G) is locked with CROSS BAR (F) using MEDIUM ALLEN BOLT (2).
3. All the bolts shall be locked tightly.

FINISH

