

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY


Notice:


- 1.Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2.Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3.If you encounter any problems during installation, refer to two solutions: Follow the installation video tutorial on the Amazon product page or contact our customer service.


Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
A		x12	K	K1 K2	x2 sets
B		x12	L	M4x18	x2
\bigcirc	Ø8x30	x6	M	c	x2
		x2	N	0	x4
E	(%)))))))))> Ø4x16	x2	0	√∪∪∪∪∪ Ø4x40	x2
F		x4	P	سبر Ø7.8x38	x2
(D)		x4	Q		x4
\bigcirc H	©) Ø4x16	x16	-		-
	® M6x50	x4			
	Ø3.5x14	x28			


Item	Poforonco Imago	Qty.	Item	Poforonco Imago	Qty.
no.	Reference Image	Qiy.	no.	Reference Image	Qiy.
1		x1	10		x2
2		x1			
3		x1			
4		x1			
5		x1			
6		x1			
7		x1			
8		x4			
9		x2			


Explosion Diagram

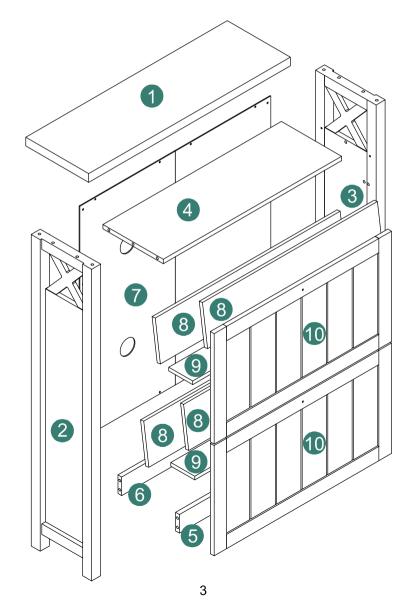





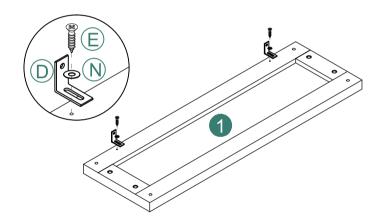





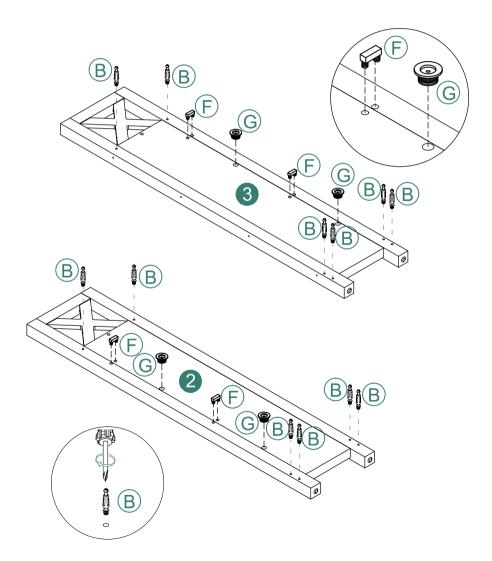




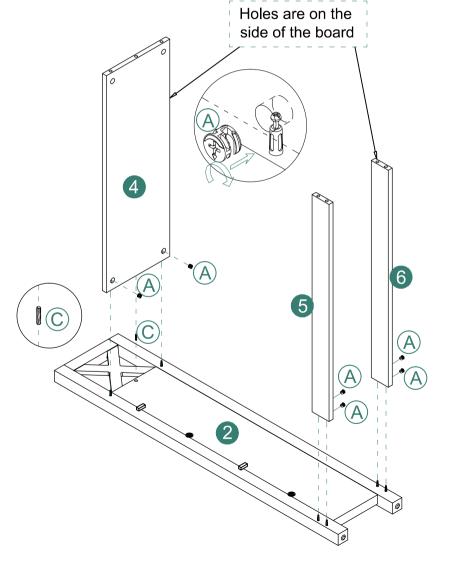





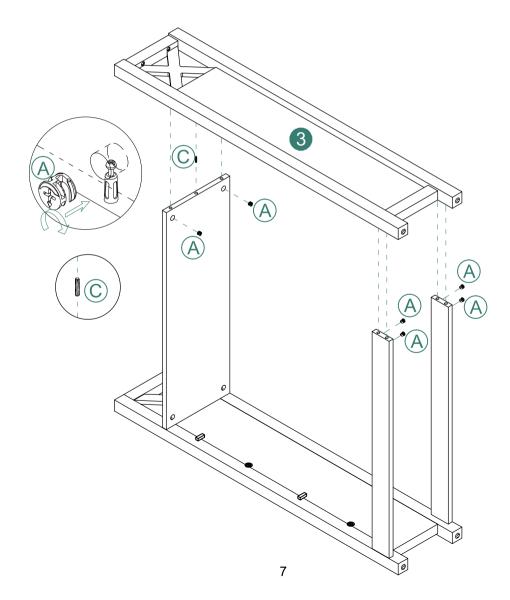

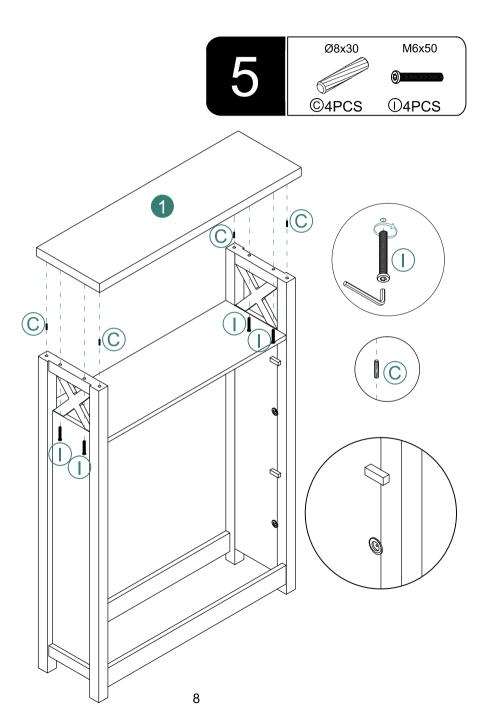

Ø4x16 € 16PCS ⑦1PC

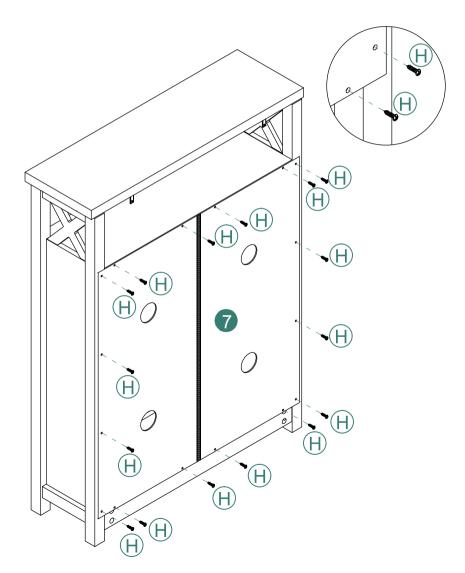

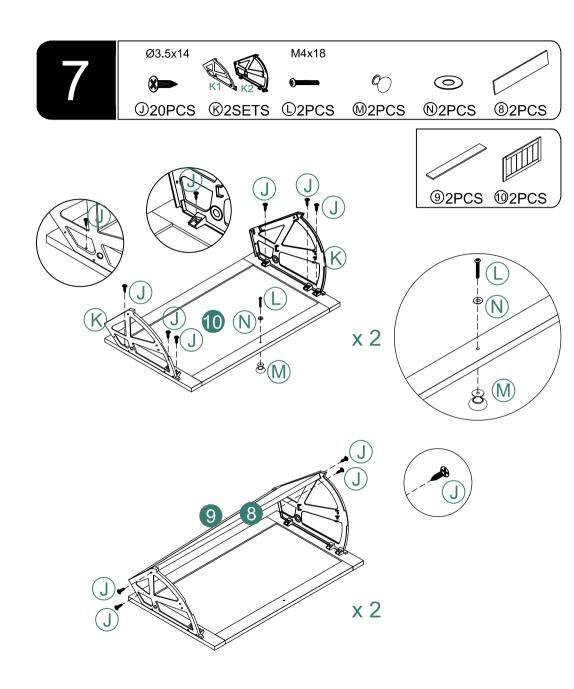

8

M3.5x14





J4PCS


@4PCS

M3.5x14


© D4PCS 82PCS

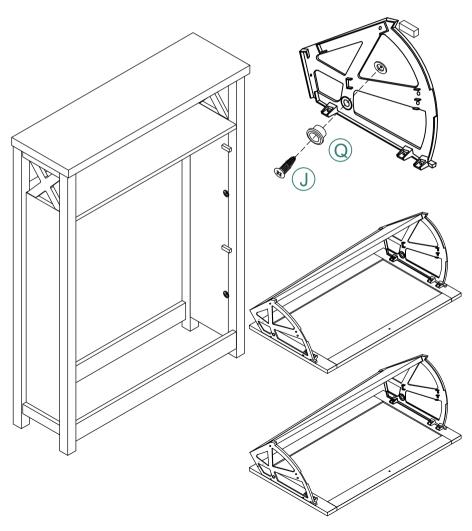

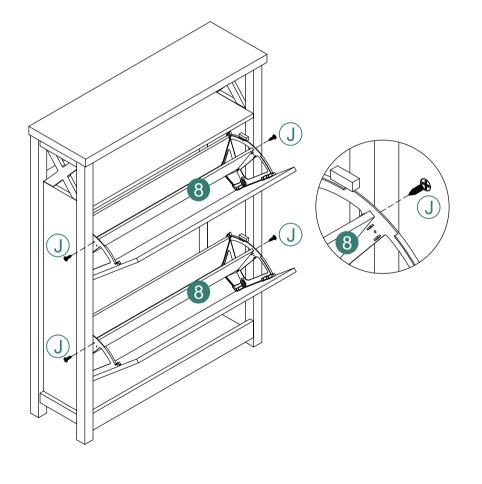




Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

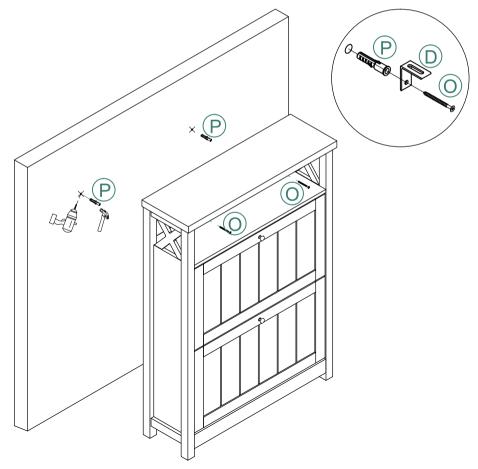

11

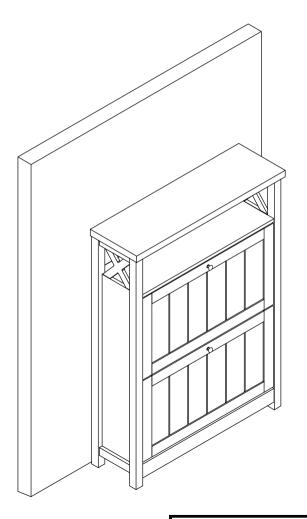

Installation Completed