
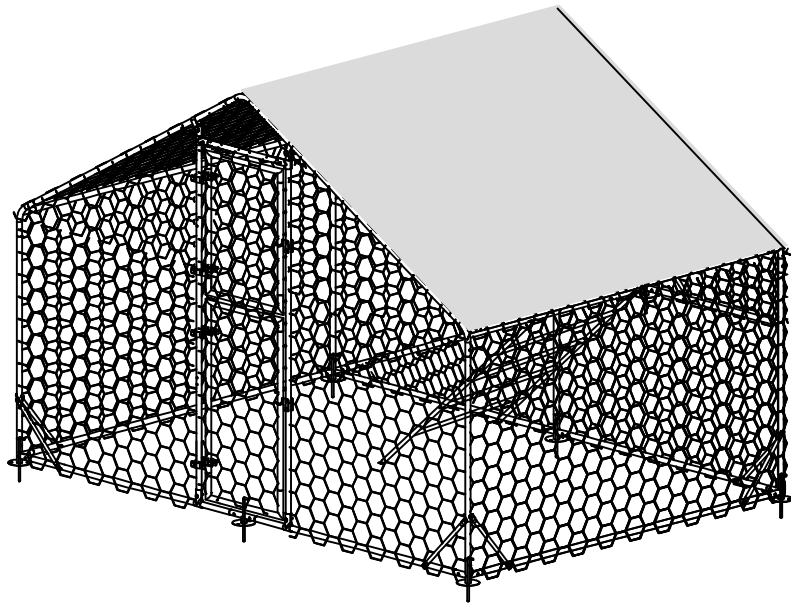
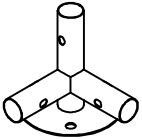
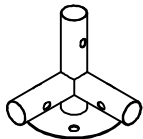
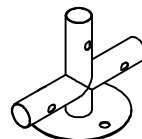
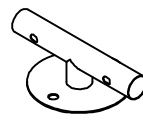







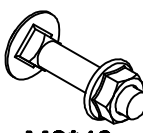

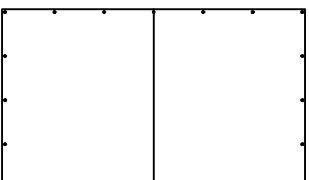




CHICKEN COOPS INSTRUCTIONS

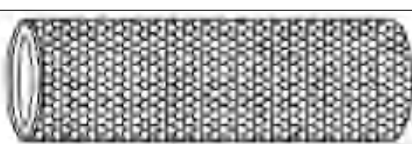


- 1.Recommend multiple people to assemble.
- 2.Do not over torque screws an bolts.
- 3.Do not install on flammable place in case of fire.
- 4.Use on a flat ground.
- 5.Gloves must be worn during assembly.

IMPORTANT.RETAIN FOR FUTURE REFERENCE


NO.	PIC	TYB	PCS		A1		A2		A3		A4
1		1364mm	4		2		2		1		1
2		1919mm	3								
3		1919mm	2								
4		1049mm	4		B1		B3		C		D
5		1505mm	4		5		1		8		4
6		1715mm	2								
7		515mm	1		E1		E2		F1		F2
8		1881mm	1		4		4		2		4
9		742mm	4								
10			4		G		L		K		R
11		385mm	8		8	M8*40	8	M6*40	28		10
12			2		S				JP		U
13			4		1				1		1
			W		Z		L1		S1		
			1		1	M6*35	8	4#	1		

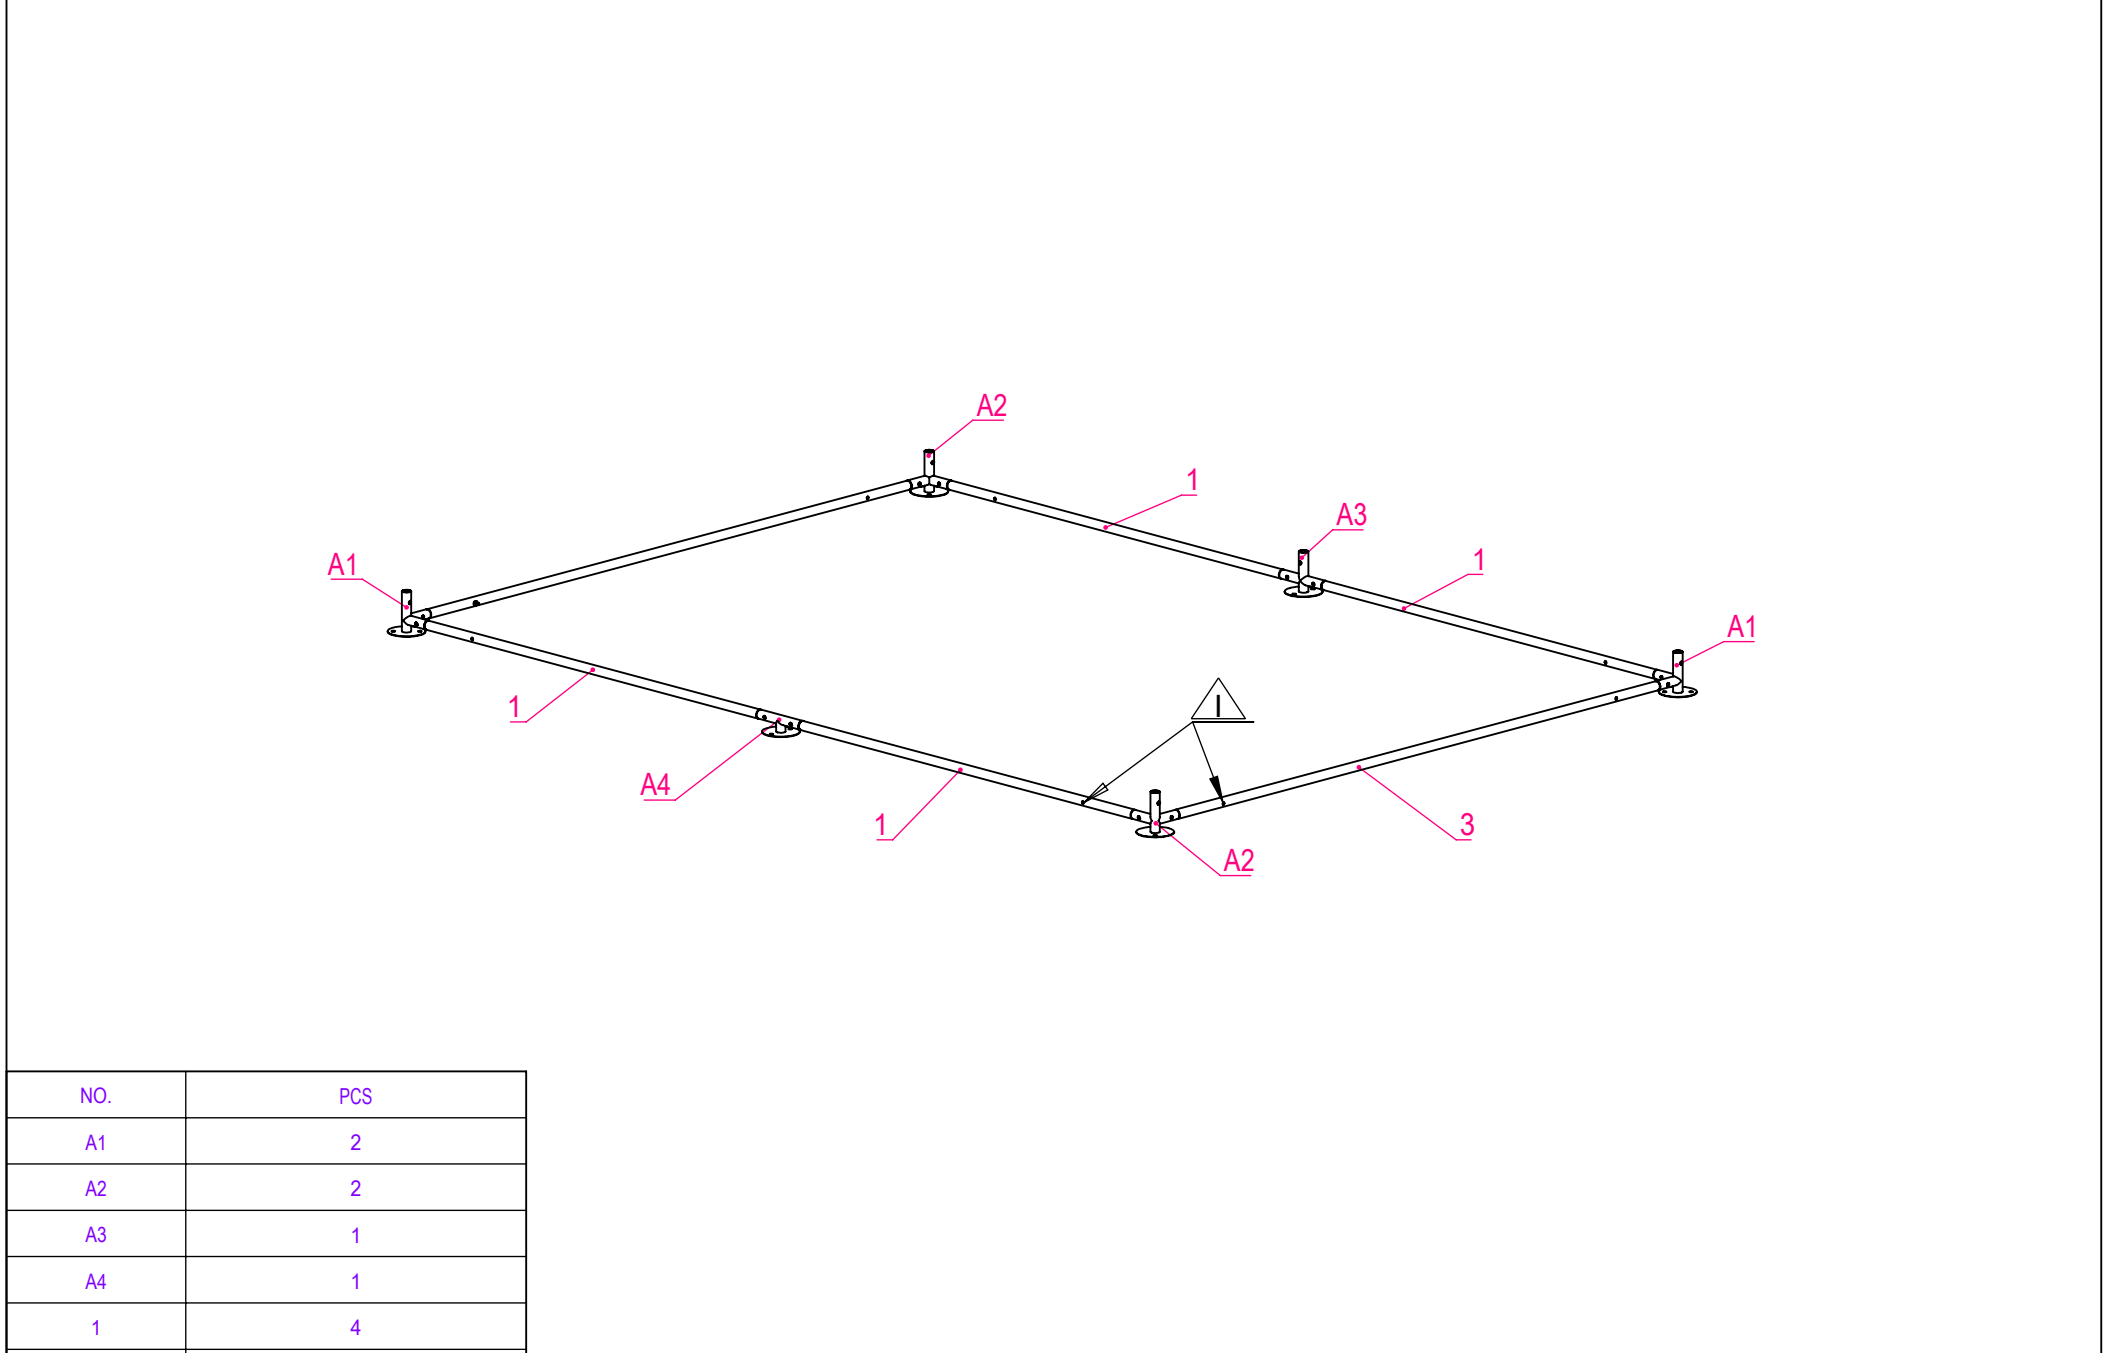

NO.	PCS
A1	2
A2	2
A3	1
A4	1
1	4


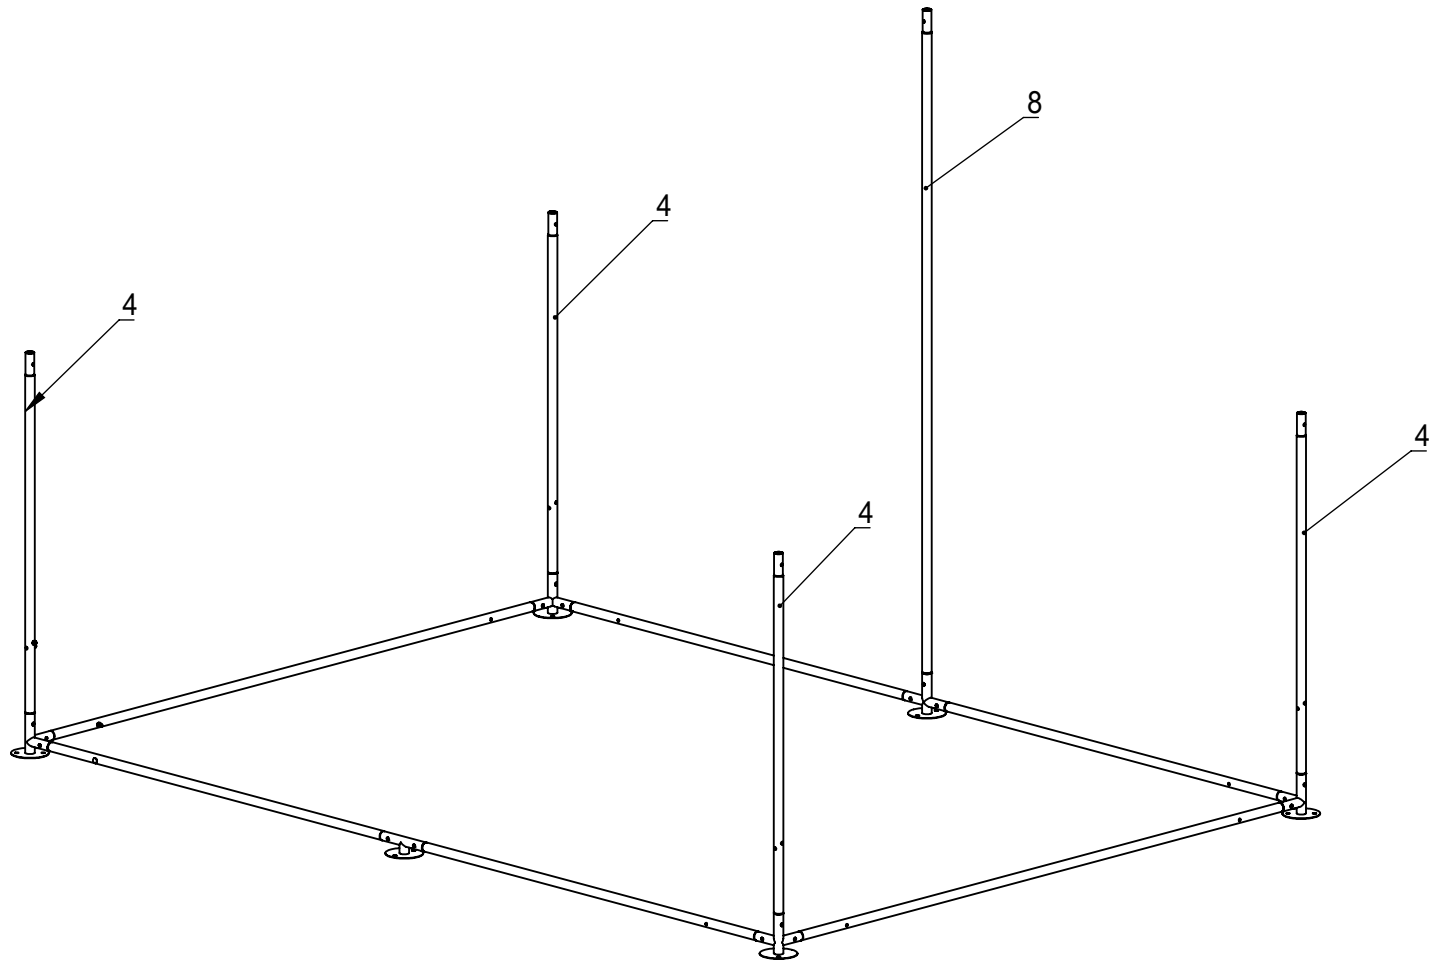


NO.	PCS
4	4
8	1

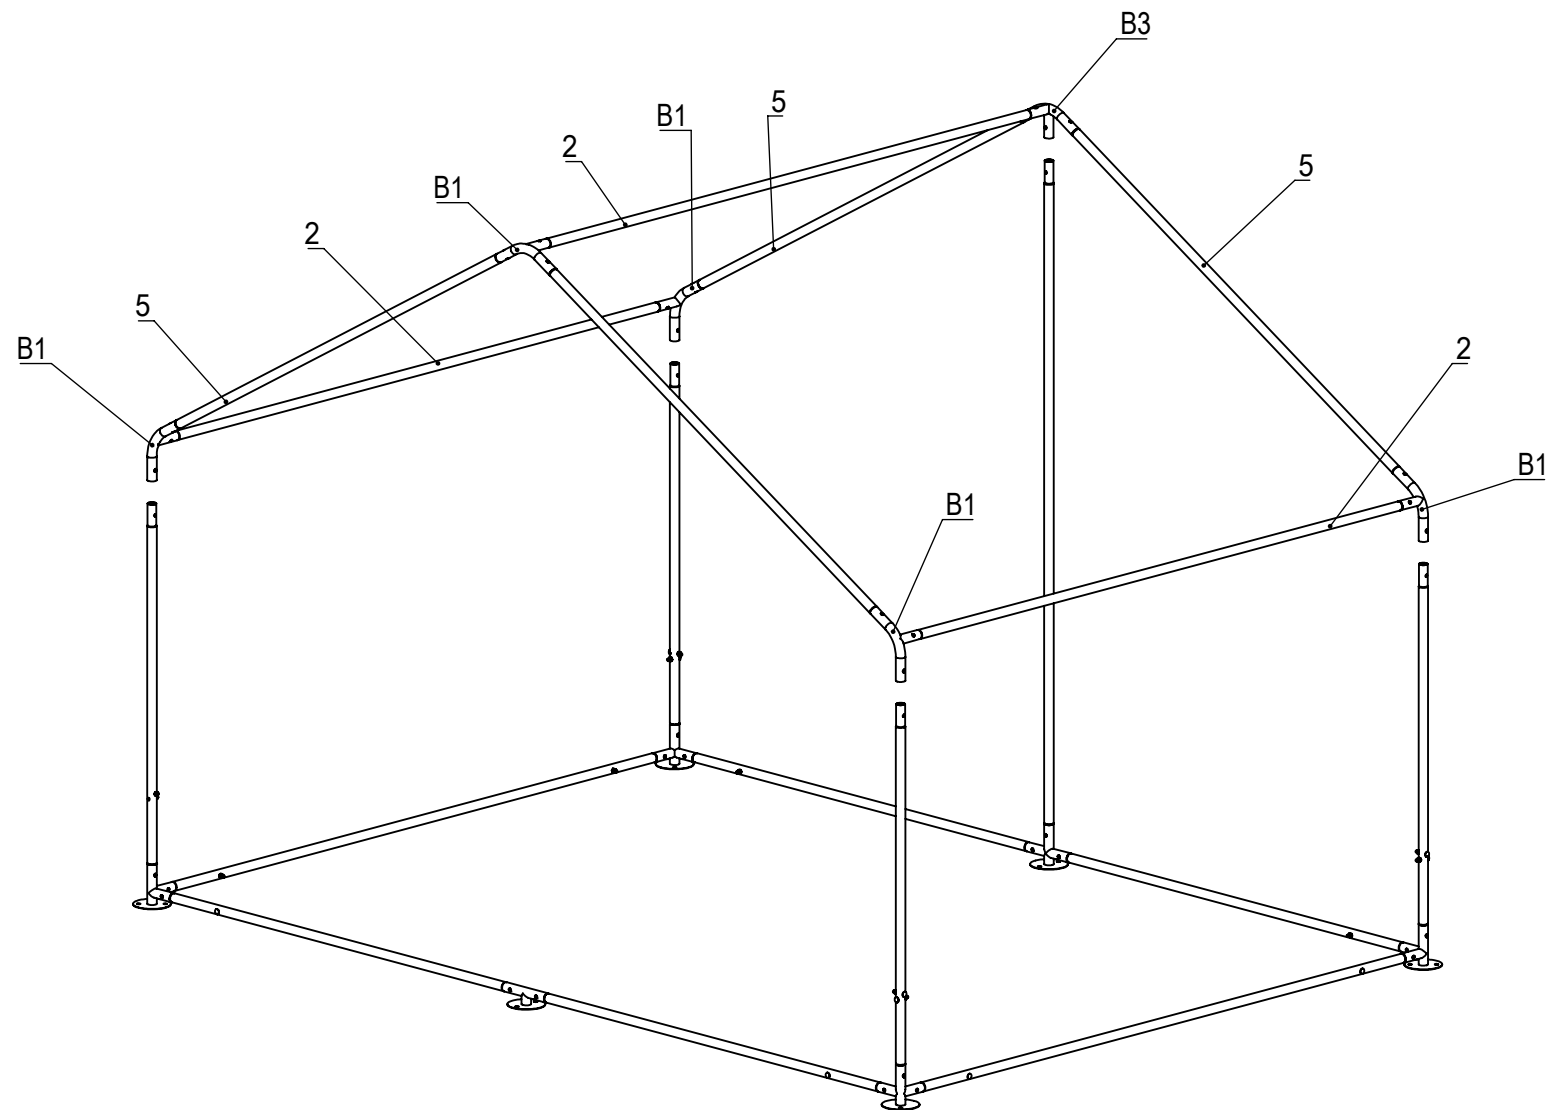


NO.	PCS
2	3
5	4
B1	5
B3	1

I
1 : 5

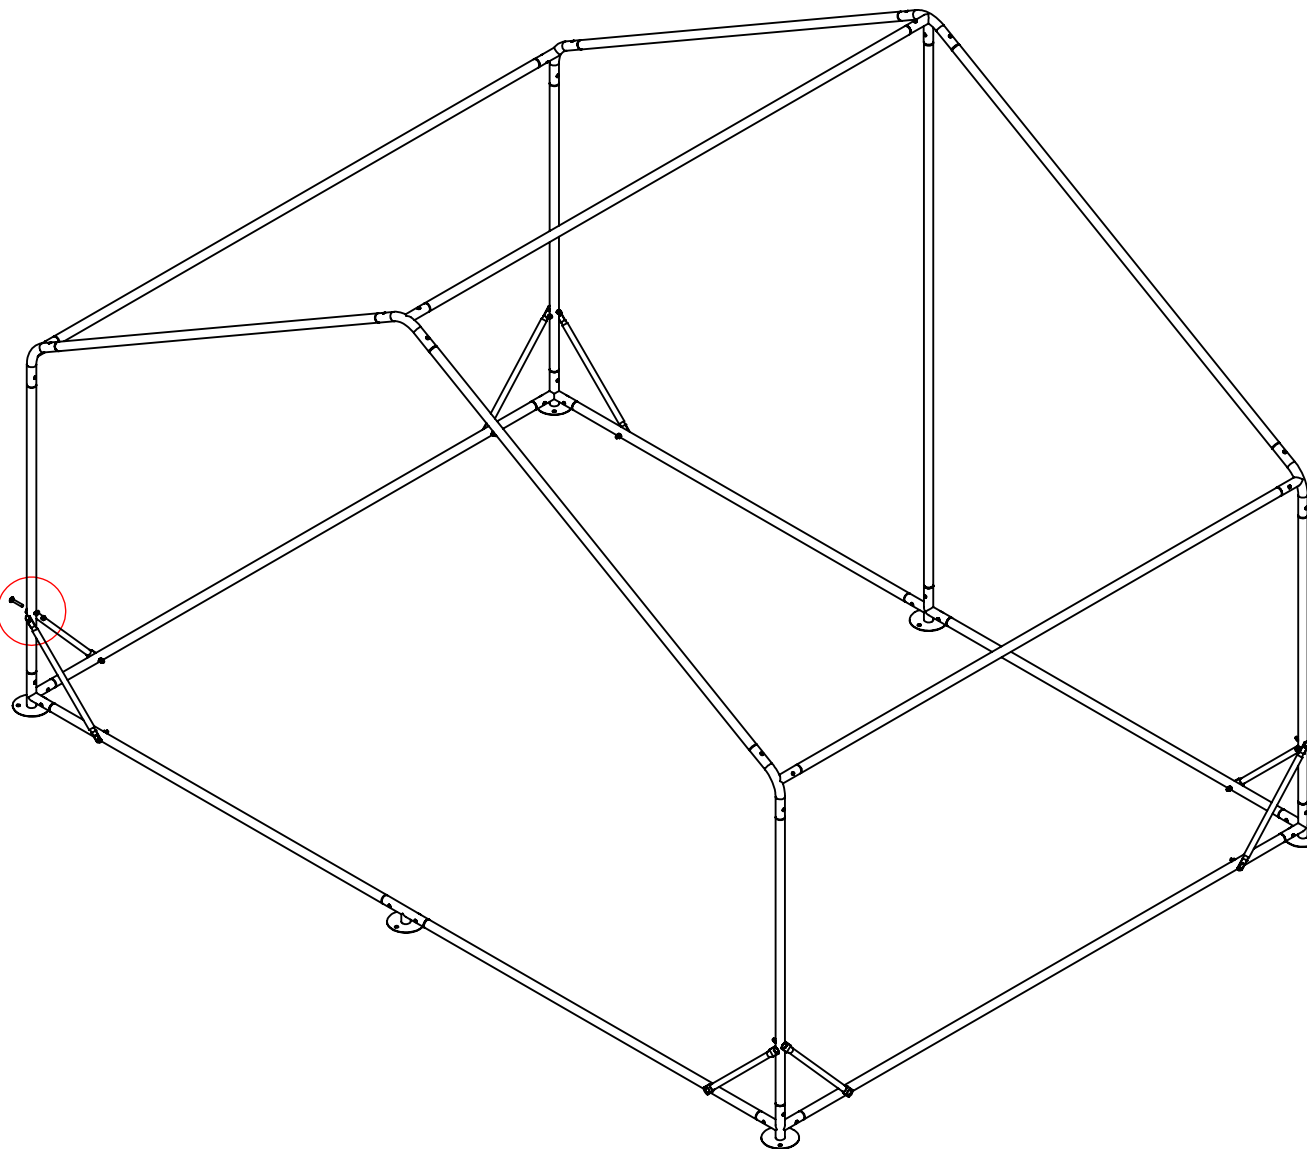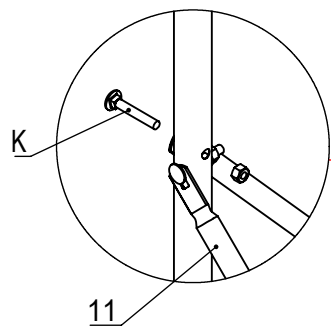




NO.	PCS
11	8
K(M6*40)	16

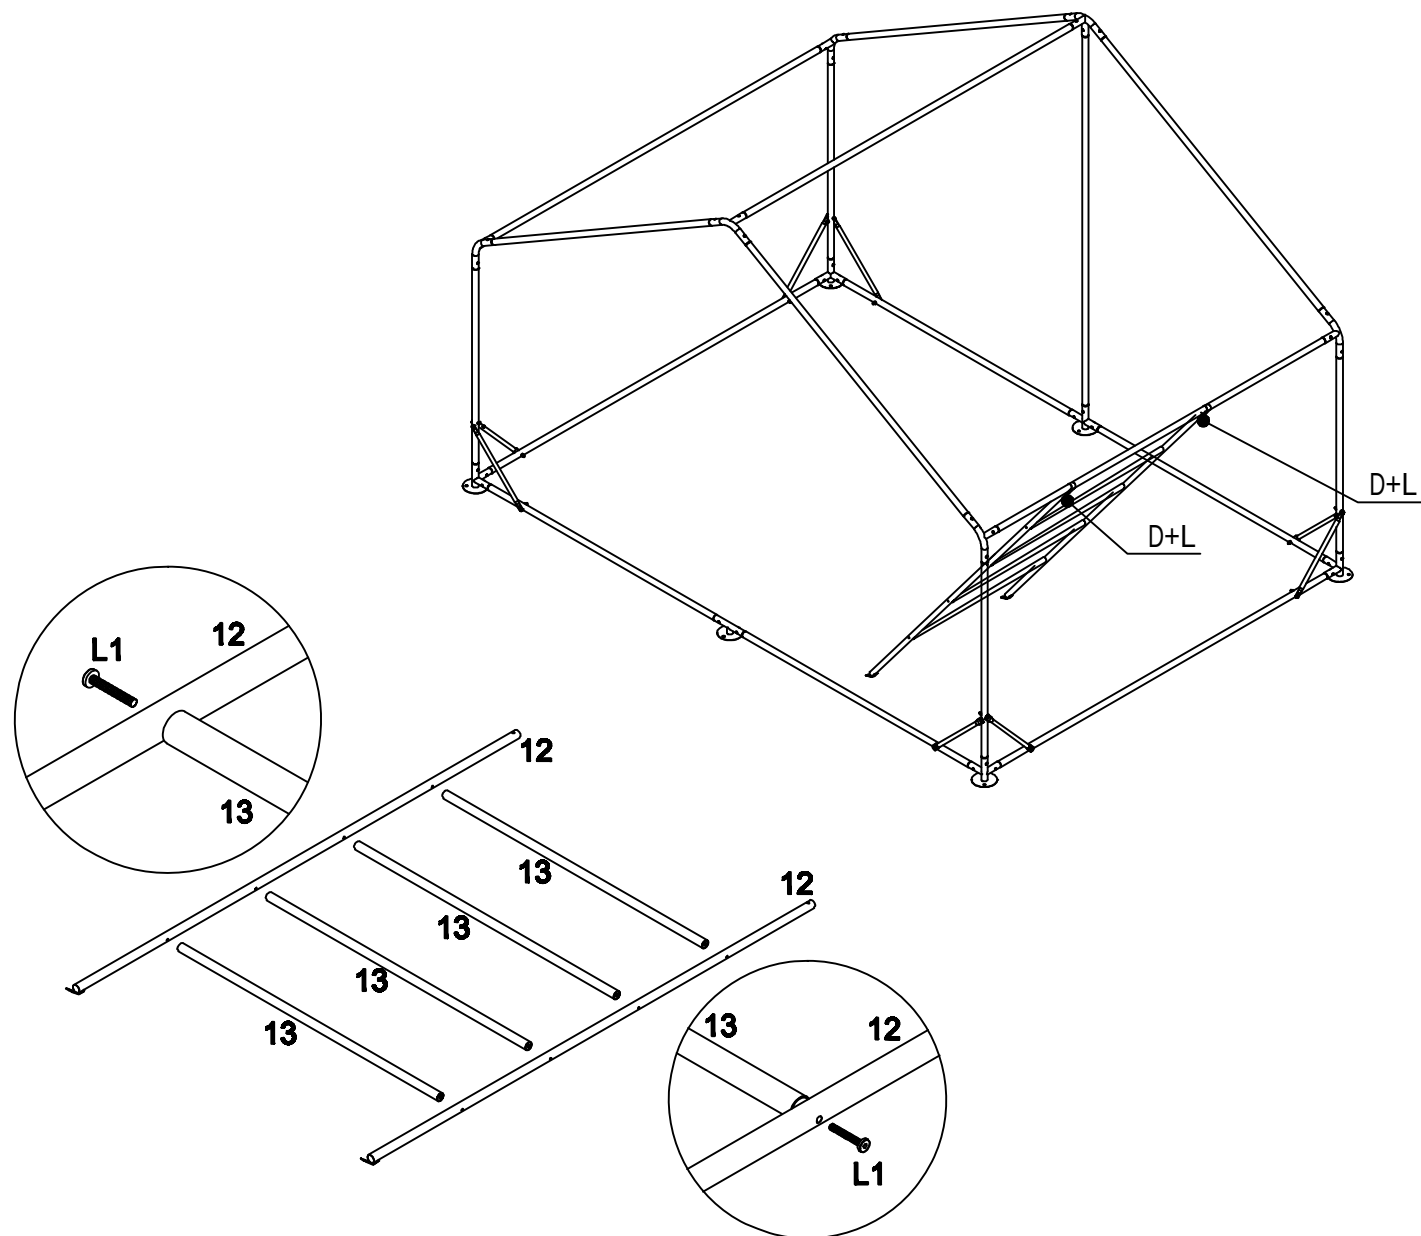







NO.	PCS
L1 M6*35	8
S1 4#	1
12	2
13	4
D	2
L	2


NO.	PCS
D	2
C	8
6	2
7	1
E2	4
F2	4
F1	2
L	2
K	12




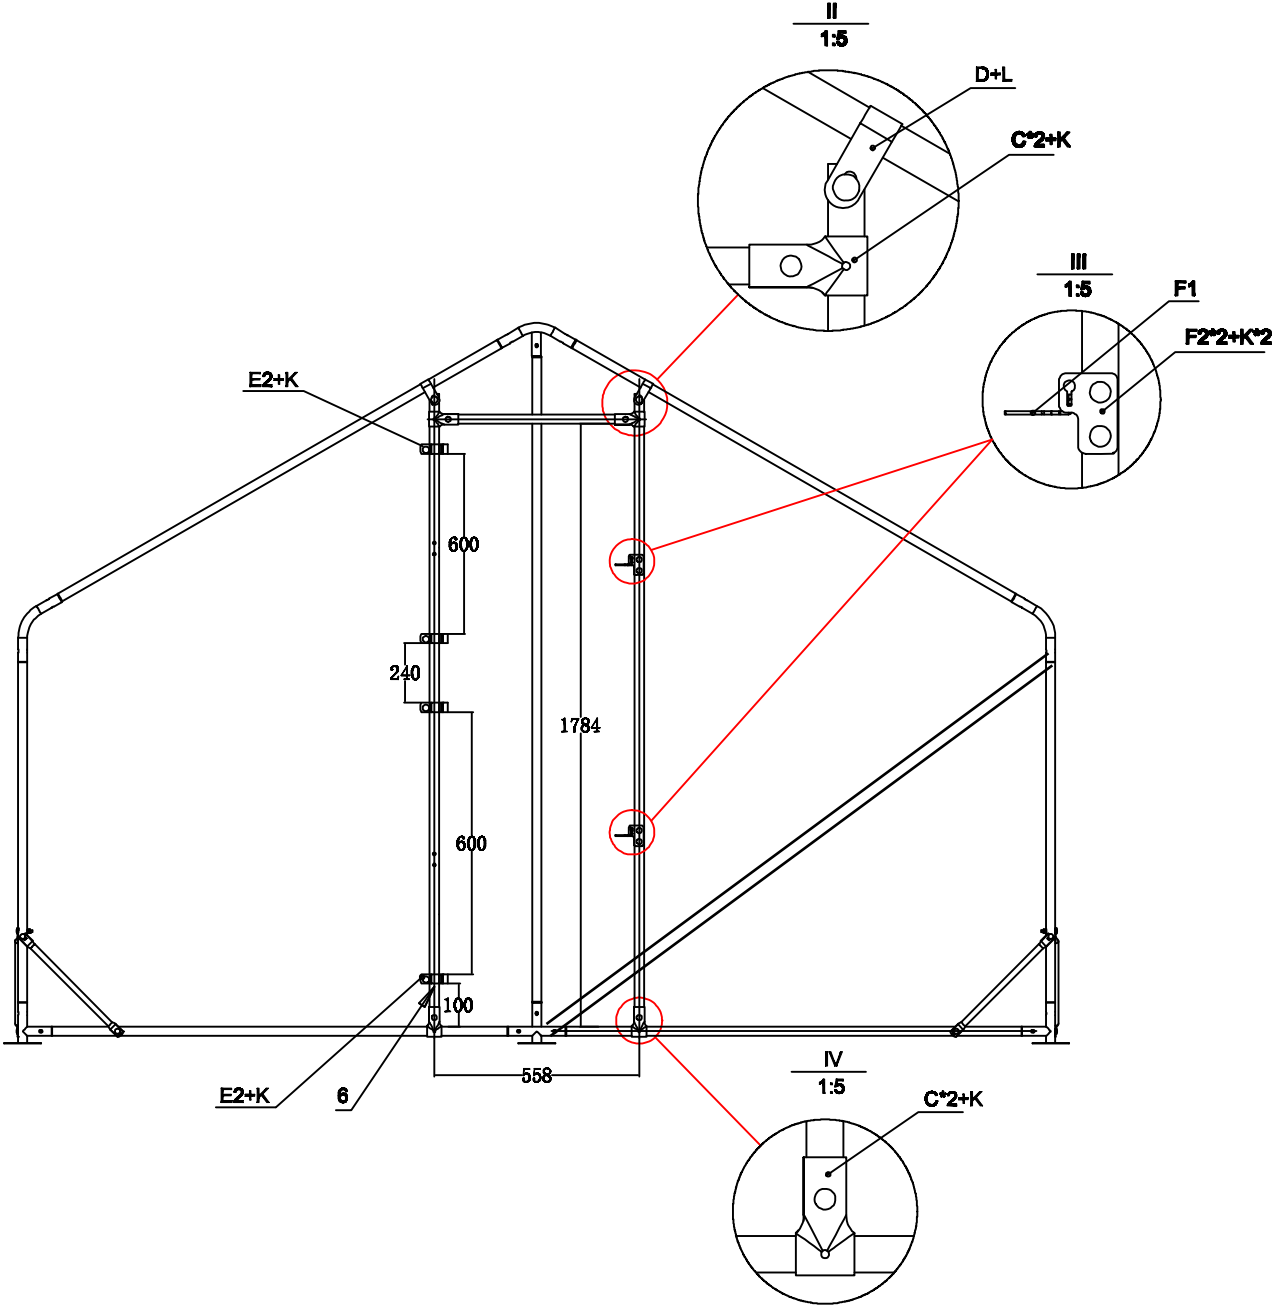


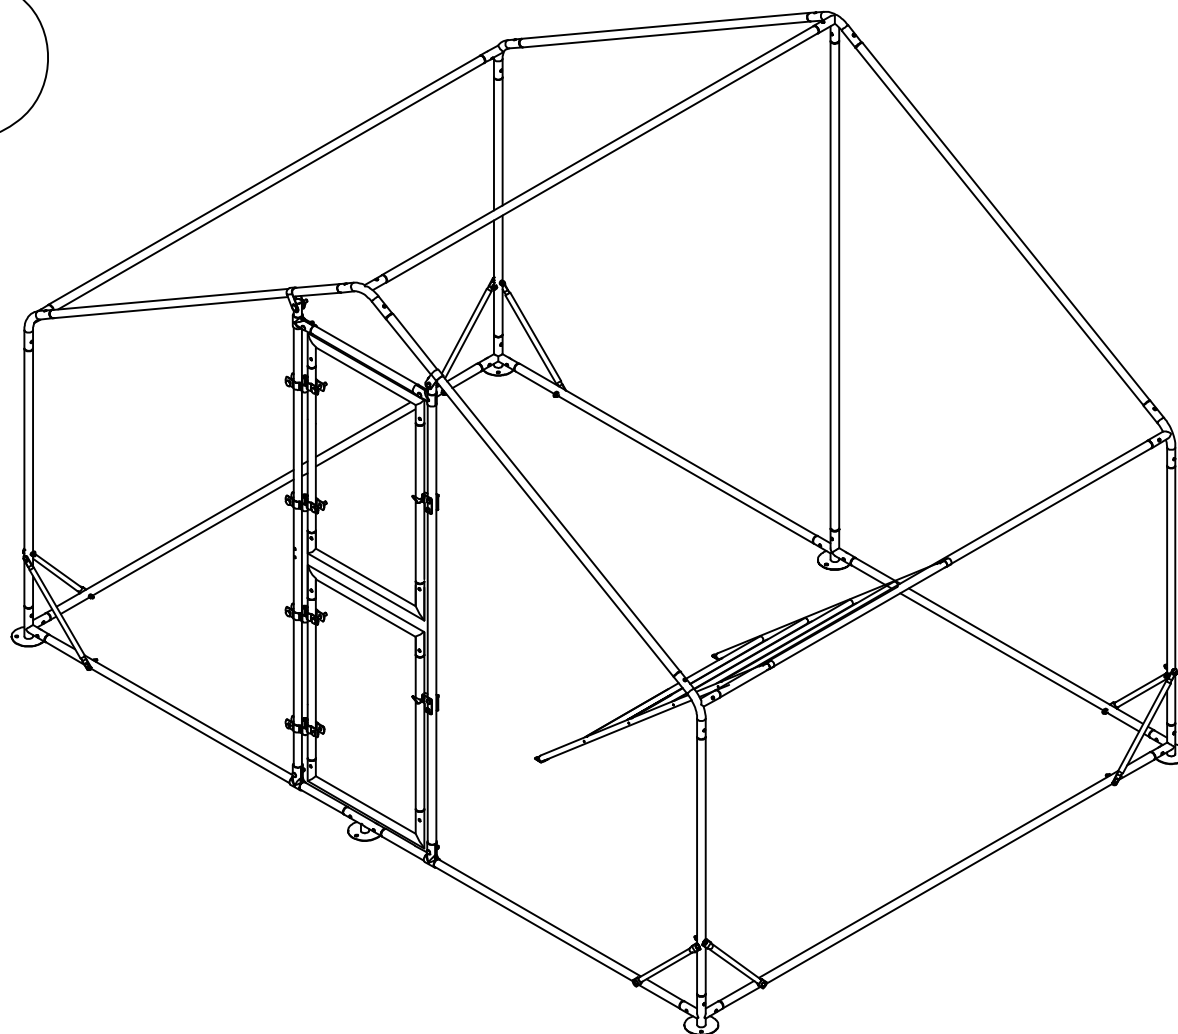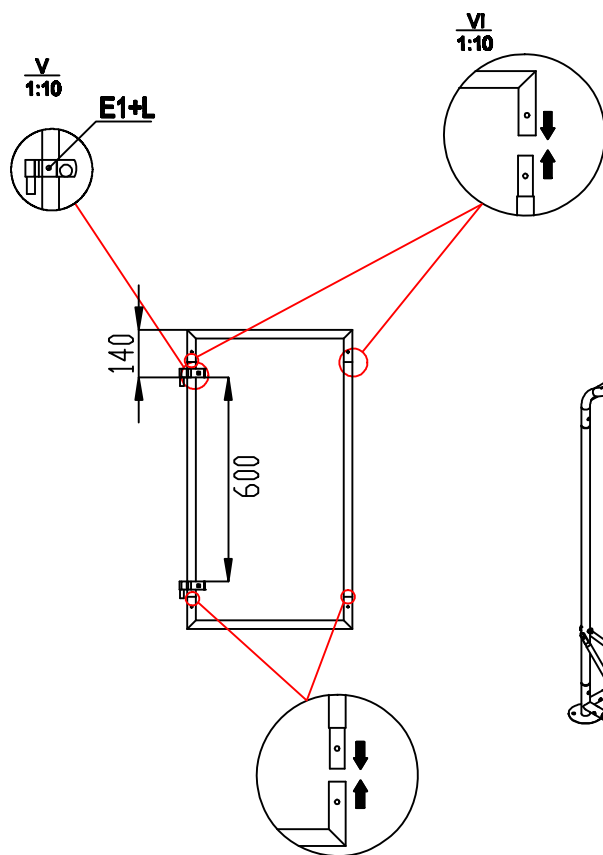


NO.	PCS
10	4
9	4
E1	4
L	4

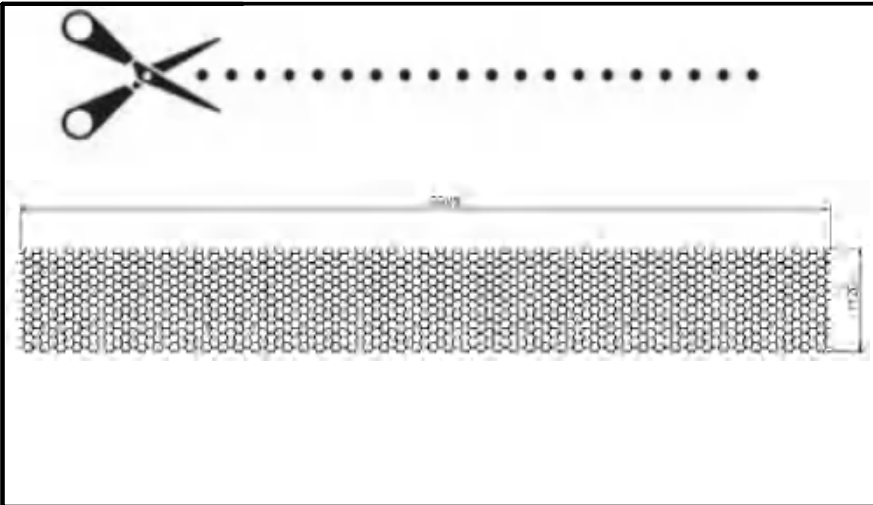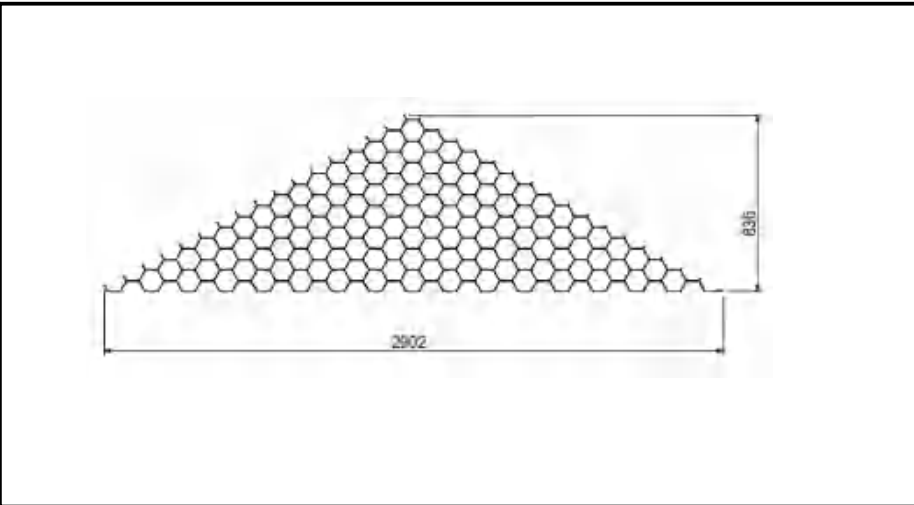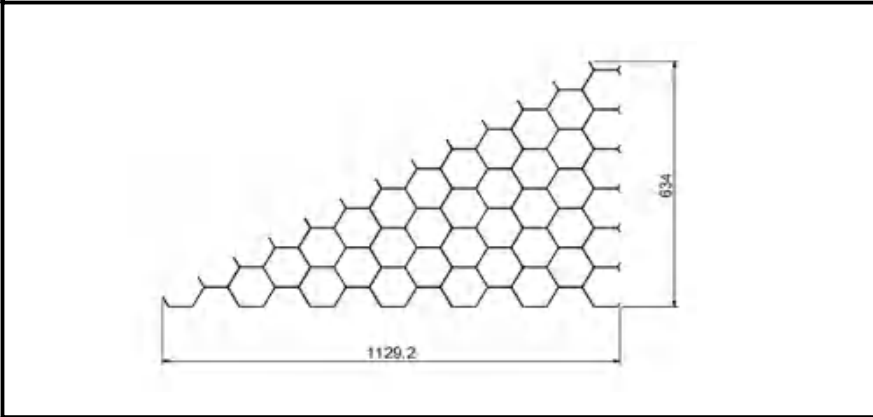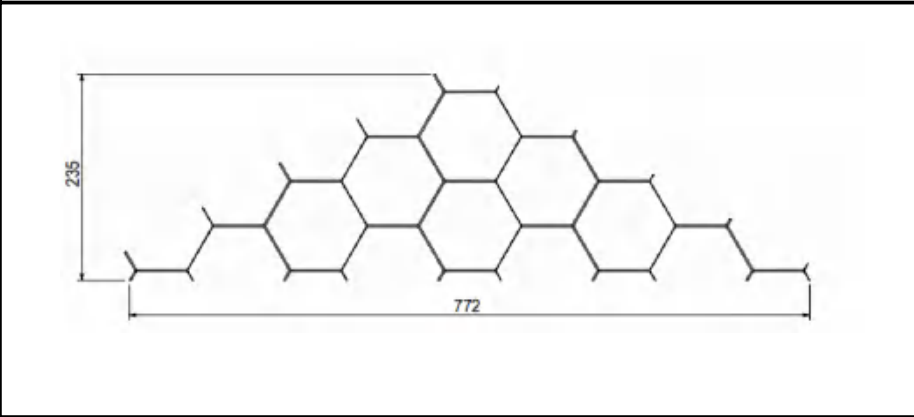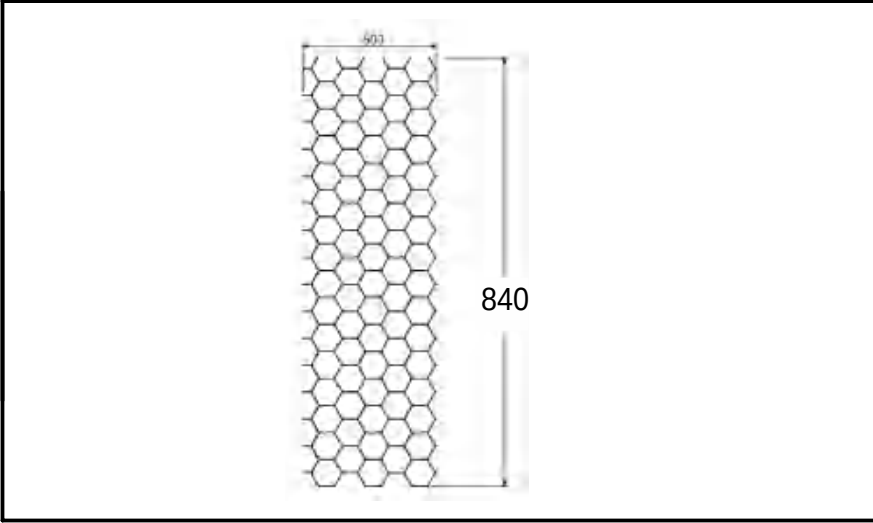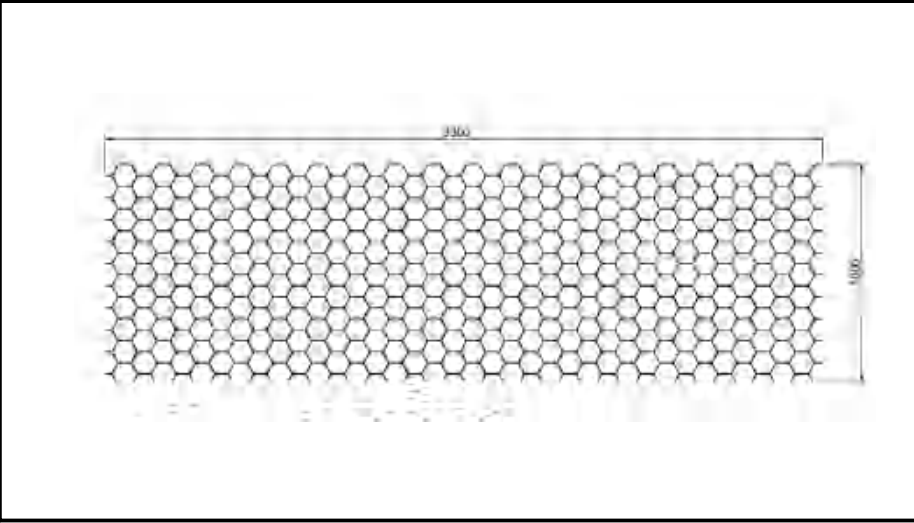	W1		WJ1
1	1	1	1
	WJ2		WJ3
2	2	1	1
	WJ4		WJ5
2	2	2	2

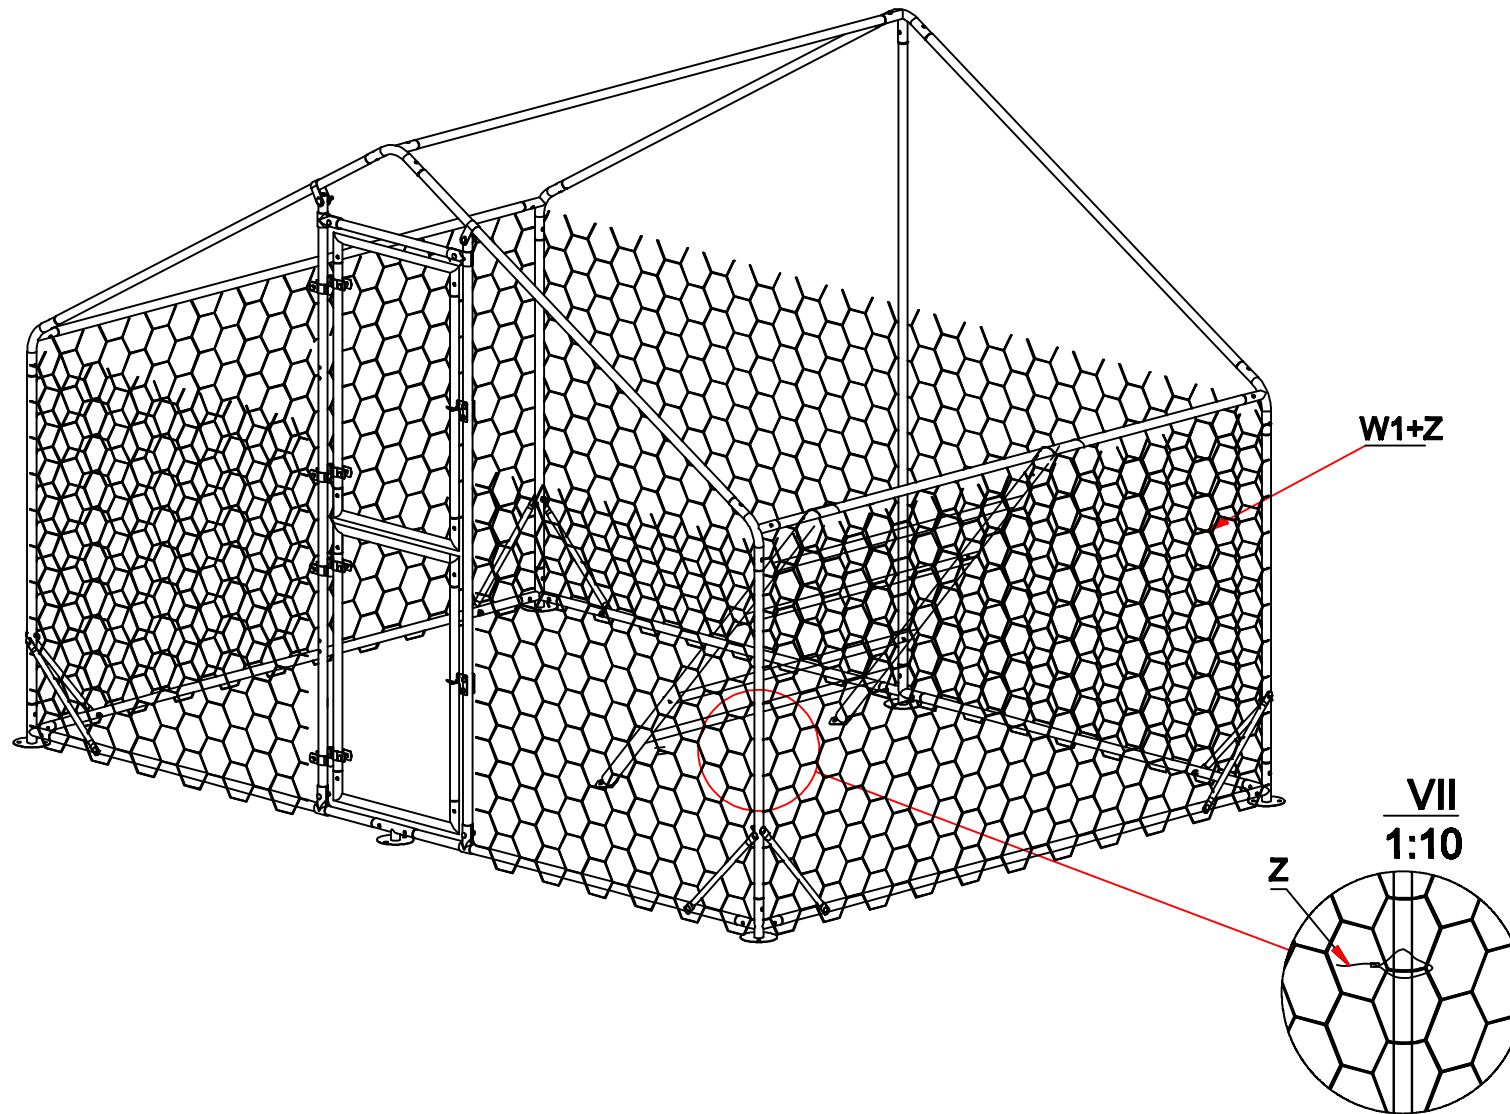

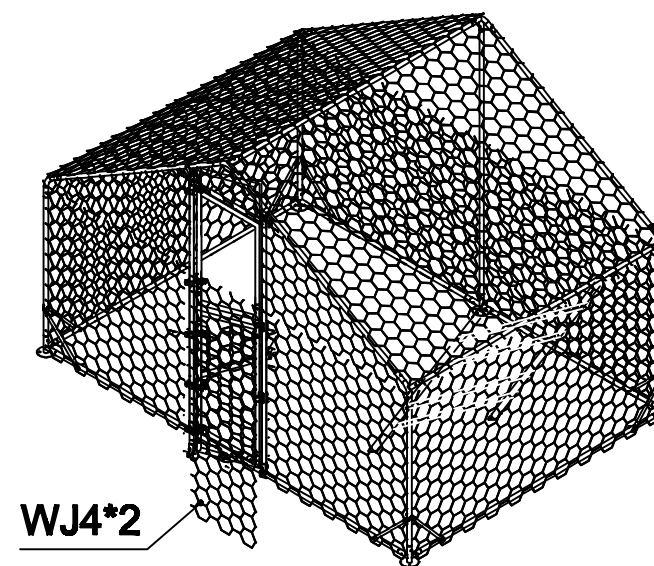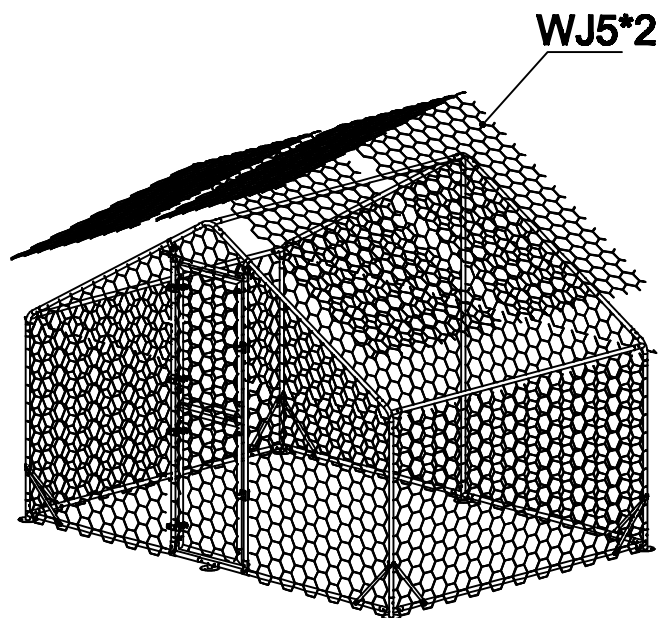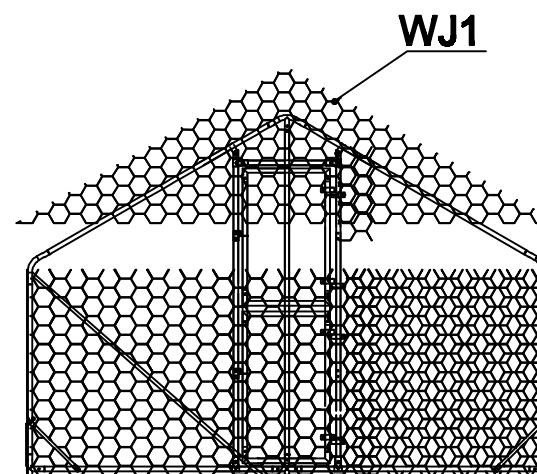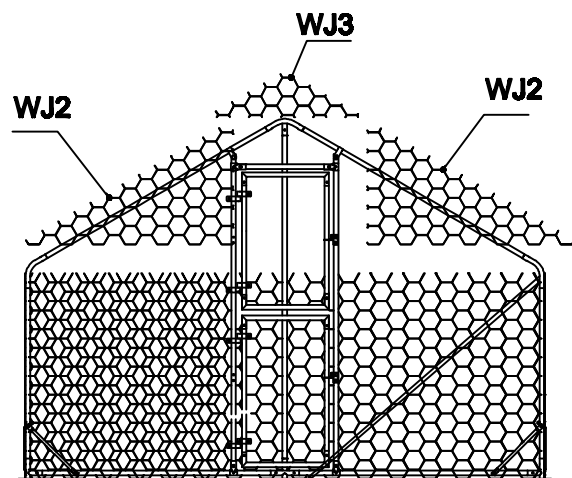

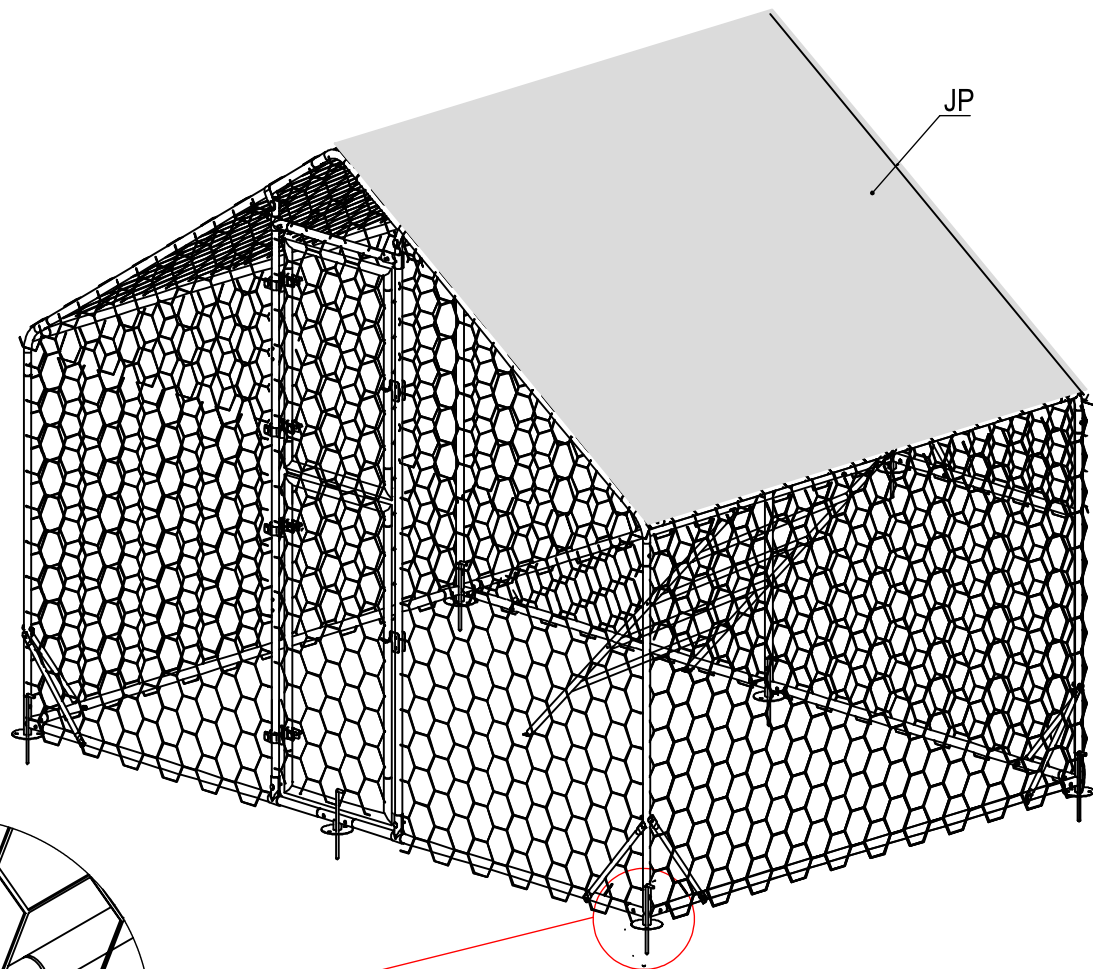

KQ

NO.	PCS
G	8