


INSTRUCTION FOR INSTALLATION

Executive Desk

Step 1

Assemble the Base (Bottom Frame)

Place the two rectangular base units side by side, with anti-slip pads facing down. Insert the connecting bracket (I/H-shaped) in the middle and tighten it with Cam Locks (Minifix) to ensure the base is stable.

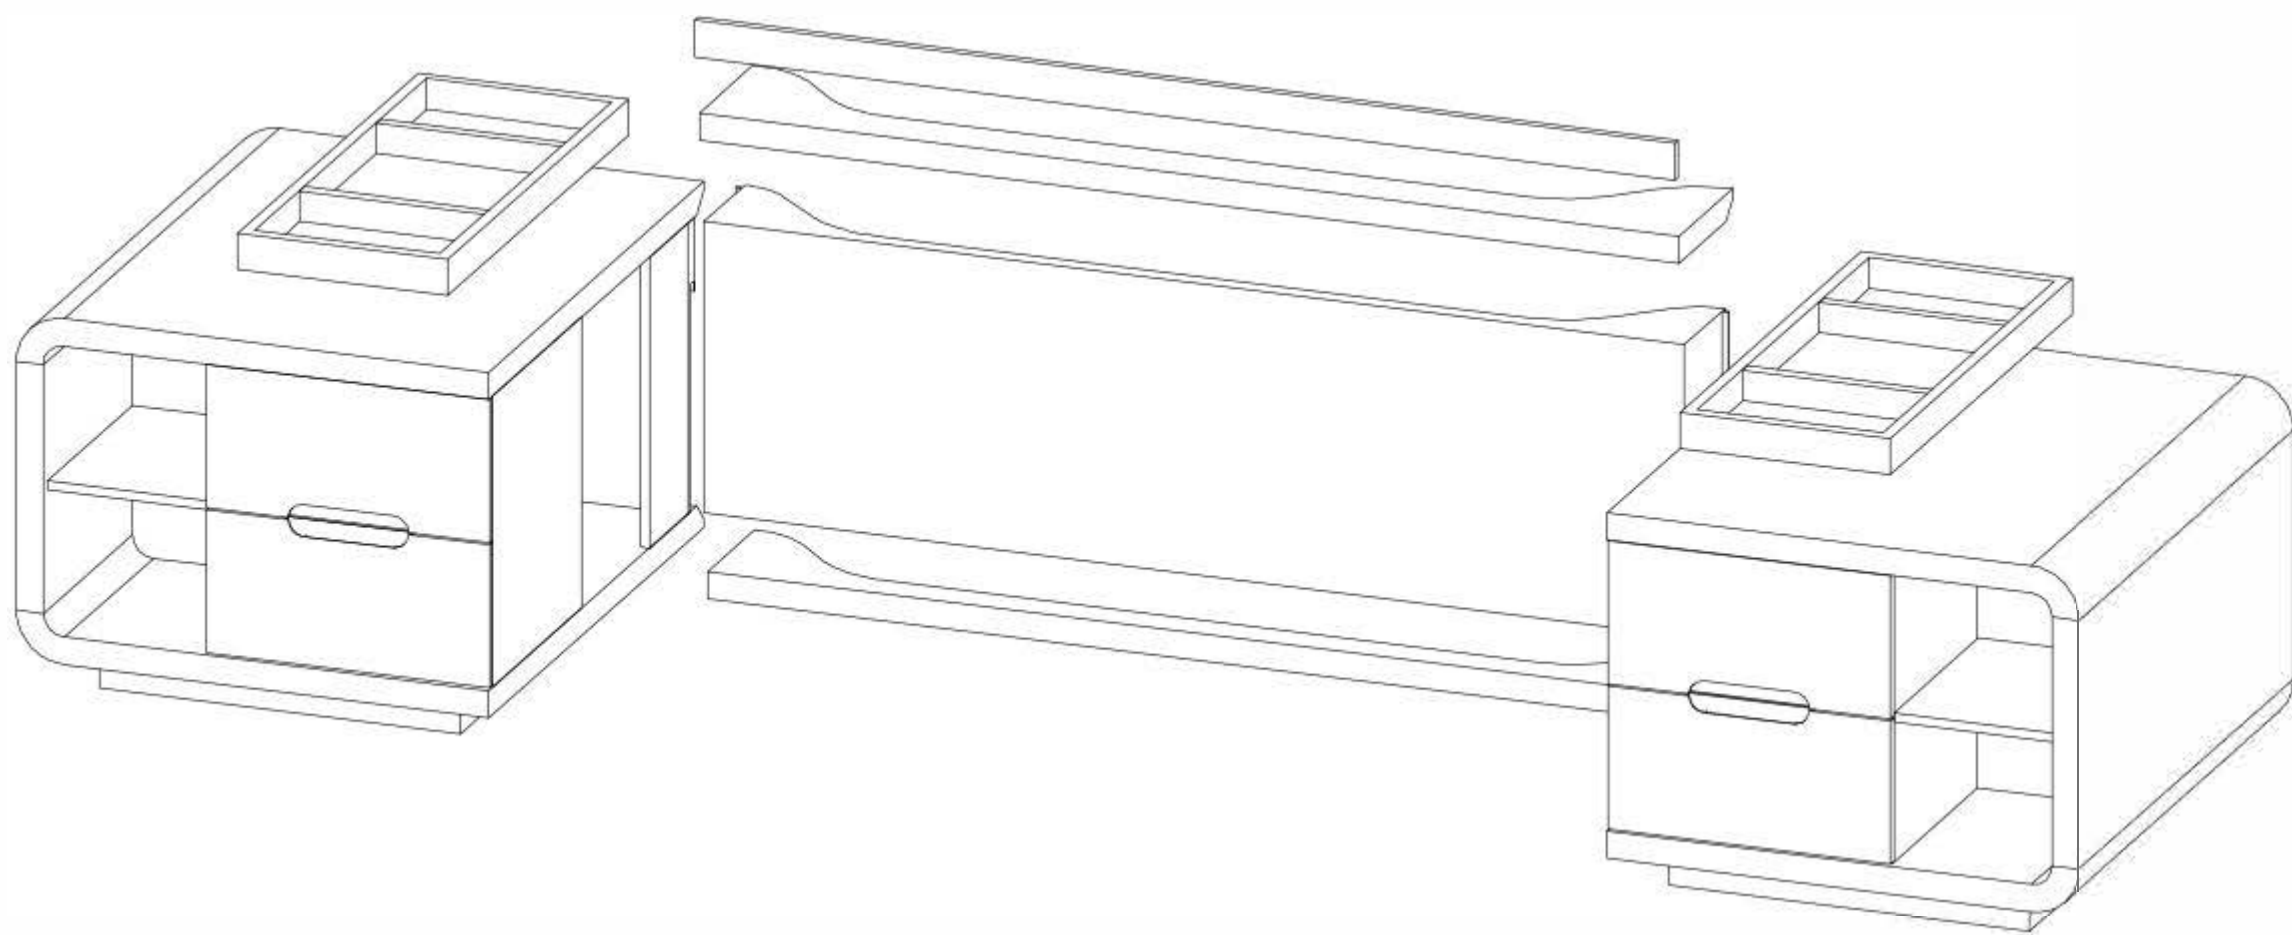

Step 2

1.Install the Side Panels (Modesty Panels)Key

Point: The side panels are also fixed using cam locks.

First, screw the bolts into the edges of the side panel, align them with the holes on the base, insert them, and then turn the cam locks to secure them. Ensure the side panels are flush with the base and there are no gaps.


2. Reinforce with Angle Brackets (Load-Bearing)

Attach metal angle brackets (L-shaped) to the key load -bearing points on the top of the base.

Note: The angle brackets are used to support the desktop, so make sure the screws are tightened securely.

3. Mount the Desktop (Final Assembly)

With the help of another person, lift the large desktop onto the base, aligning it with the angle brackets and base holes below. Drive screws from underneath to fix the desktop in place.

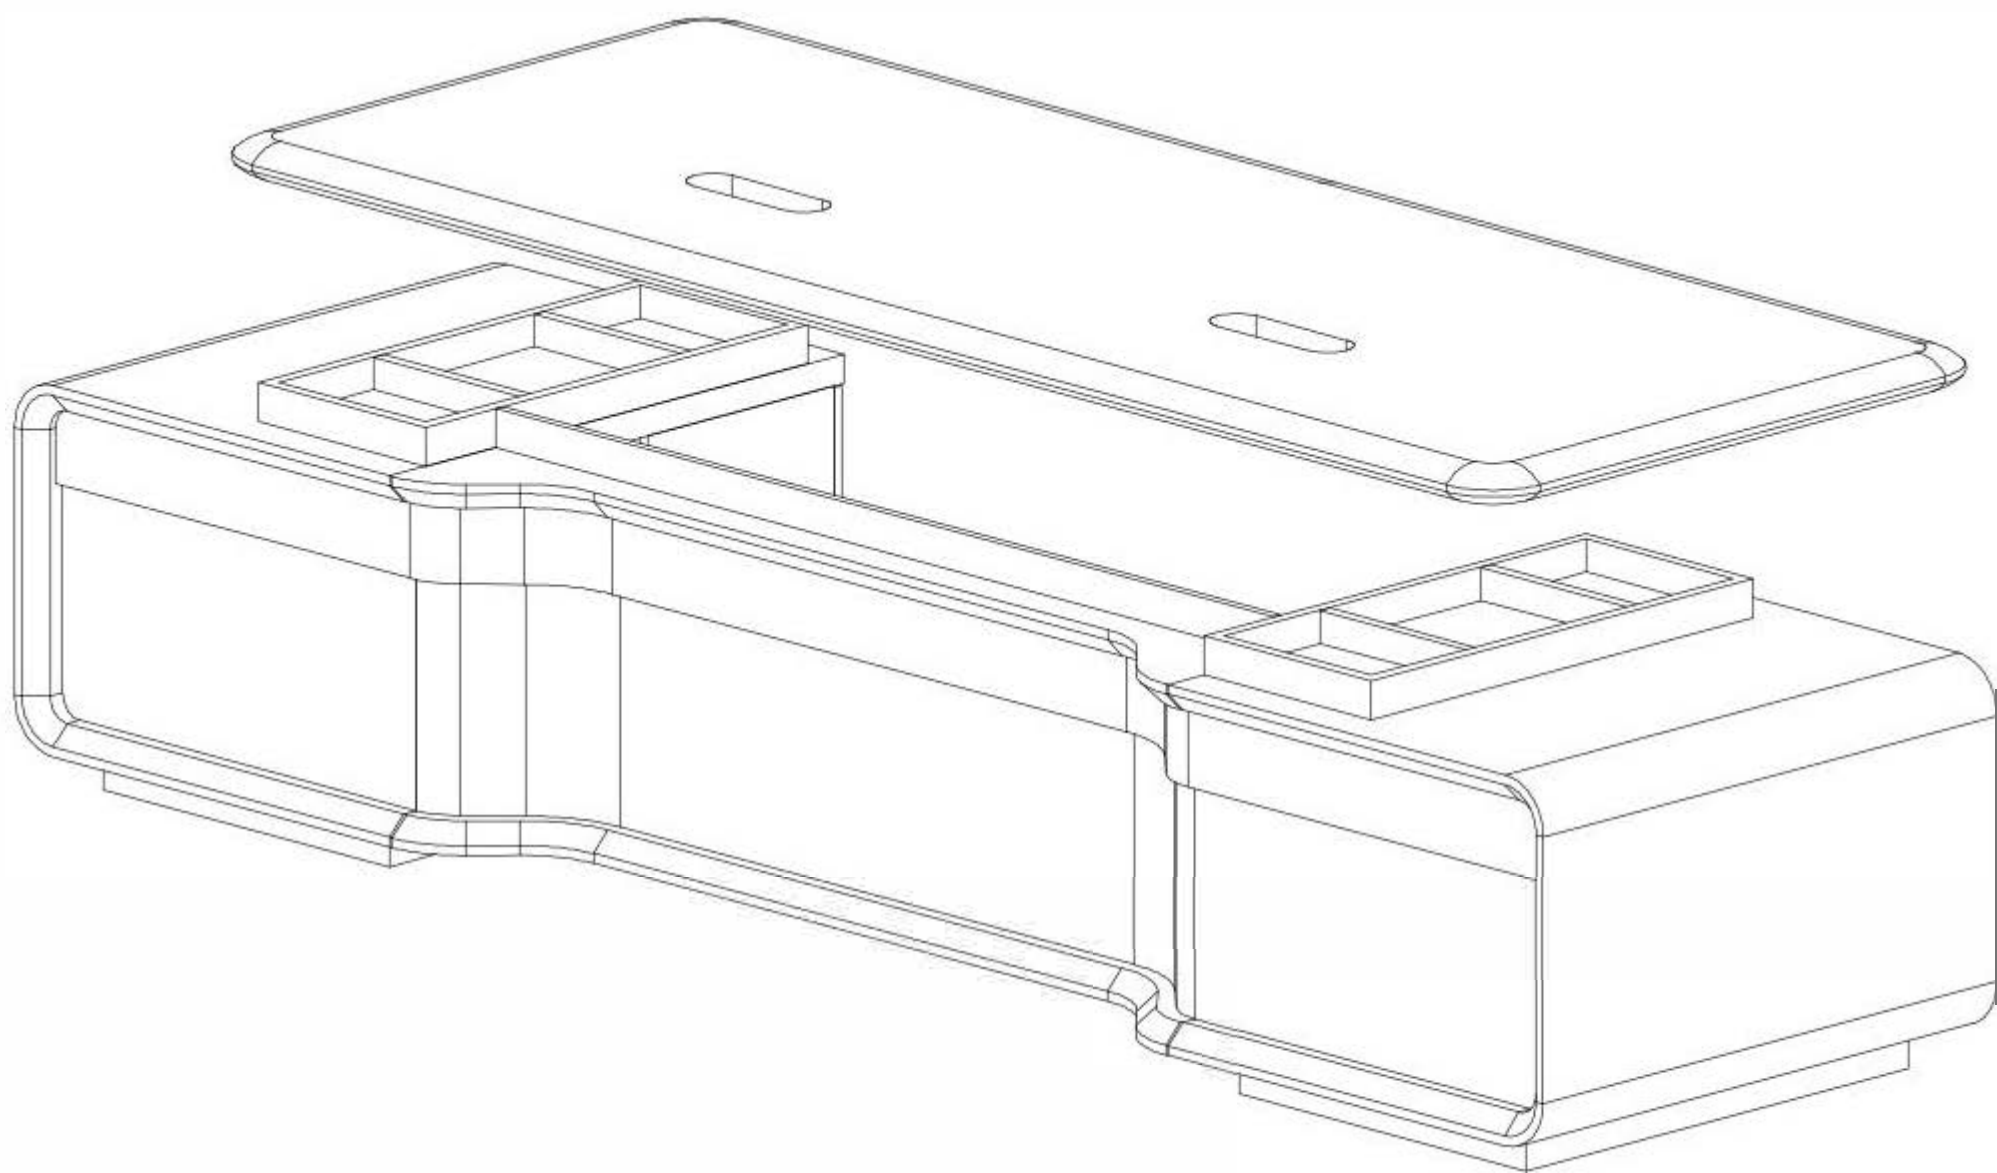

Use the angle iron as a connector. Align the holes of both side cabinets with the angle iron, then screw them tight to lock everything together."



Installation Complete

Notes for Installers

- 1.Check Parts: Before starting, please count the cam locks and angle brackets to ensure nothing is missing.
- 2.Protect the Boards:Do not set the electric screwdriver torque too high to avoid cracking the boards.
- 3.Check Stability:After installation, push the desk to make sure there is no wobbling or noise.

