



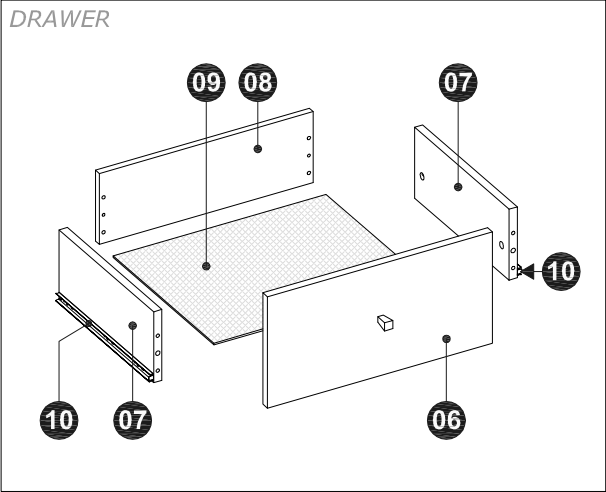

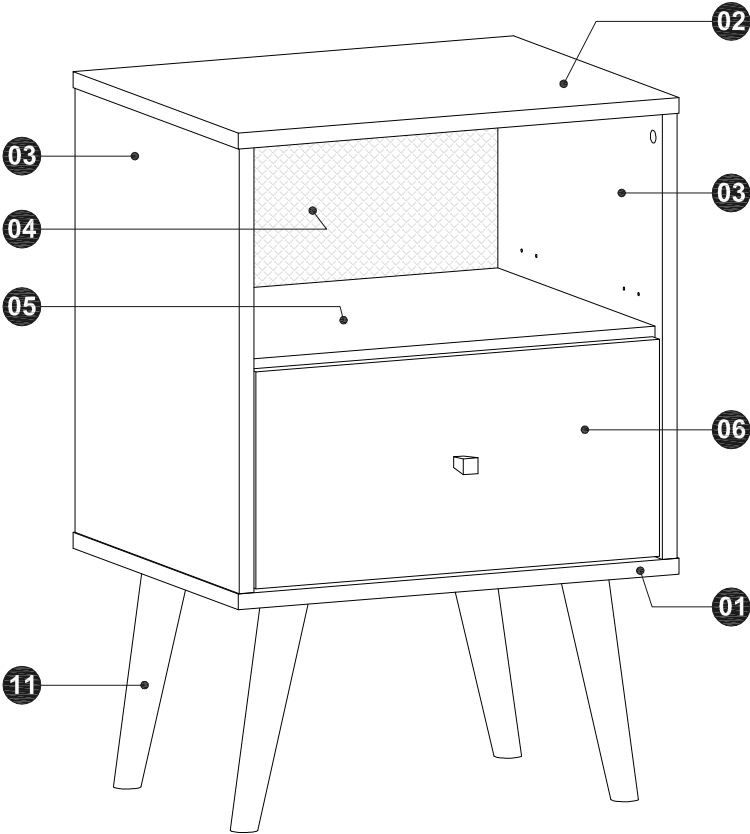

Nightstand 1.0

INCLUDED IN THE PACKAGE











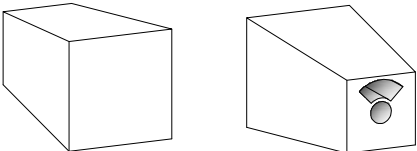



n.° ID	Parts Identification (Description)	Quantity
01	Base	1
02	Top Panel	1
03	Side Panel	2
04	Back Panel	1
05	Shelf	1
06	Front of the Drawer	1
07	Side Panel of the Drawer	2
08	Rear Panel of the Drawer	1
09	Base of the Drawer	1
10	Telescopic drawer slide 300mm (pair)	1
11	Wood Feet	4


TOOLS NEEDED

  	
--	---

INCLUDED IN THE PACKAGE


A 20x 	B 2x 	C 8x 
D 8x 	E 8x 	F 4x 
G 20x 	H 4x 	I 4x 
J 12x 	K 1x 	L 1x 

STEP 1

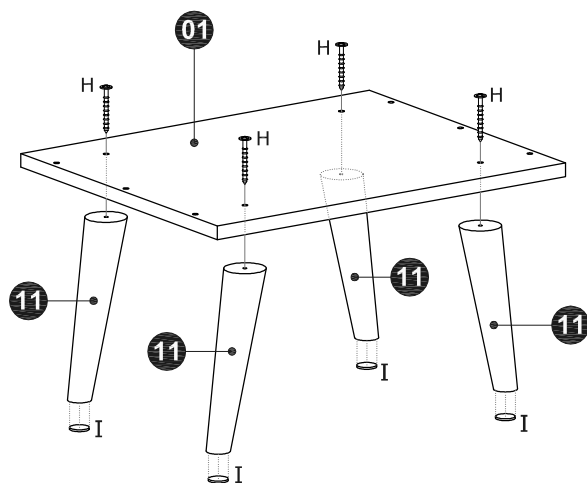


- Fix the feet (11) under the Base (01) with bolts (H).
- Apply the protective felt covers (I) on the bottom of the feet (11).

STEP 2

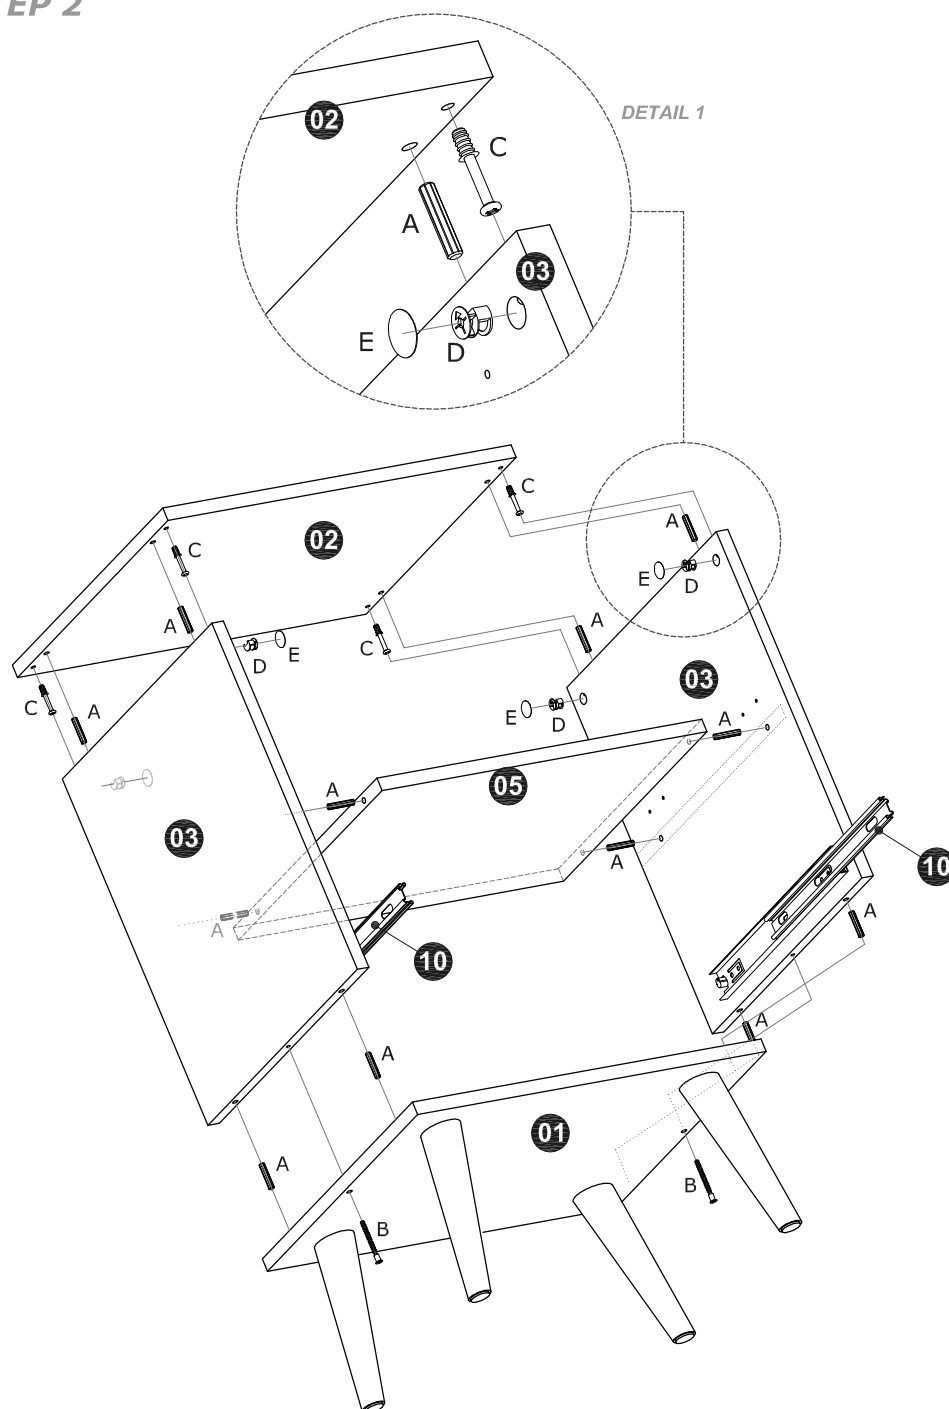


- Fit the Self (05) at the Side Panels (03) with dowels (A).
- Connect the Base (01) into the Side Panels (03) with dowels (A) and bolts (B).
- Connect the Top Panel (02) onto the Side Panels (03) with dowels (A) and Minifix hardware (C + D).
- Apply adhesive covers (E) on the Minifix hardware (D).

STEP 3

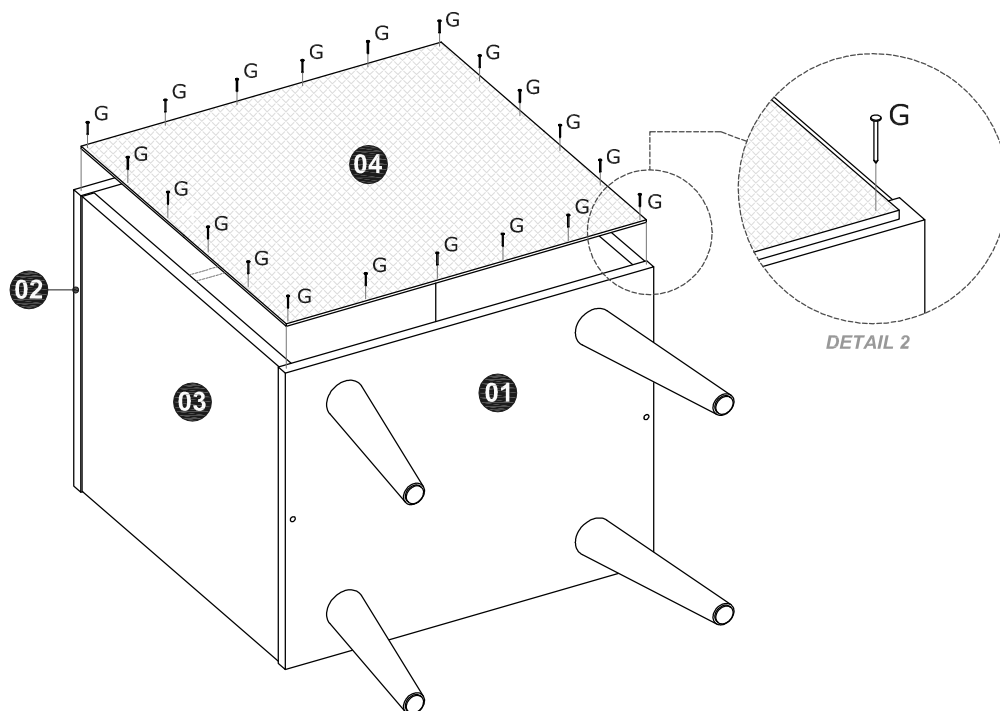


- Place the Rear Panel (04) with the painted face turned down into the module and fasten it with nails (G).

STEP 4

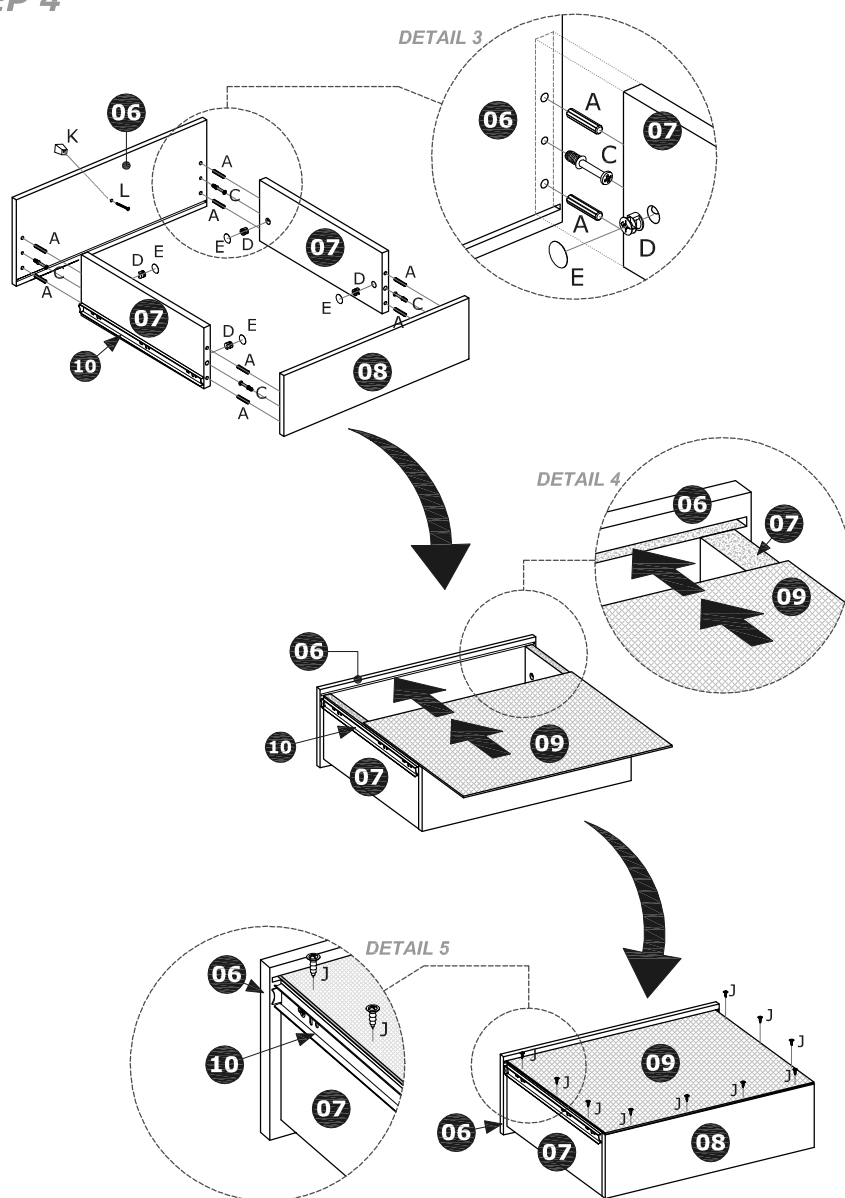

- Fix the handle (K) in Front of the drawer (06) with bolt (L).
- Connect the parts (06), (07) and (08) with dowels (A) and Minifix hardware (C+D).
- Apply adhesive covers (E) on the Minifix hardware (D).
- Insert the Base of the drawer (09) into the channel in the Front of the drawer (06), as shown in DETAIL 4, and align their edges with the Side Panels of the drawer (07).
- Check the alignment of the assembled drawer and apply bolts (J) to fix the Base of the drawer (09) at the lower edge of the parts (07) and (08), as shown in DETAIL 5.

STEP 5

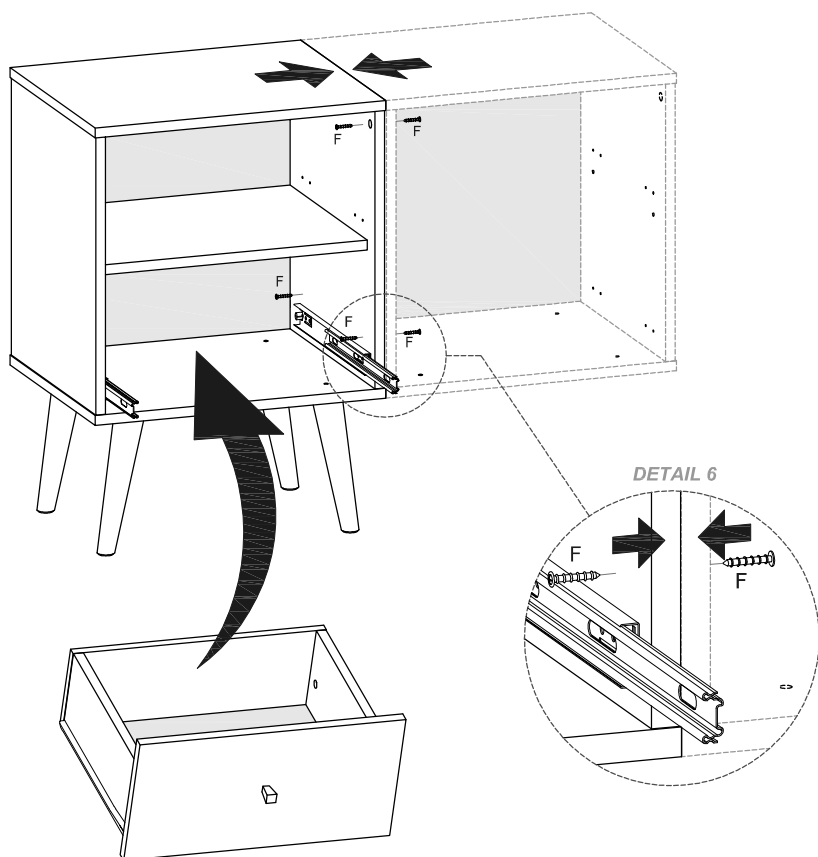

! IMPORTANT!
The Nightstand 1.0 can be installed in two or more modules compositions.

- Place a module next to another, properly align the edges and apply bolts (F).
- With the drawer already assembled, insert it in the module, fitting the metallic slides so that slide smoothly.