



ASSEMBLY INSTRUCTIONS

PARTS:

(2) Top/Bottom Pieces

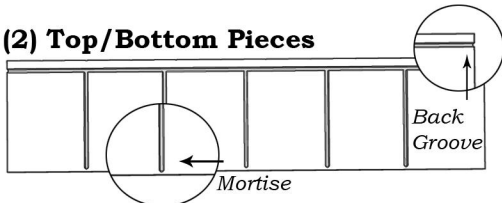


(2) Side Pieces




Center Shelf Piece




(2) Shelf Pieces

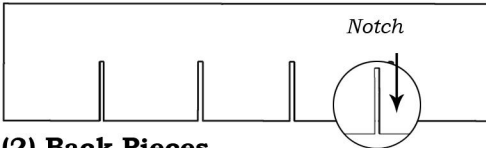

(2) 3/8" Thick Dividers

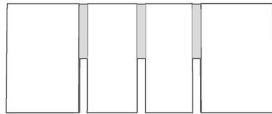


(4) Shelf Dividers

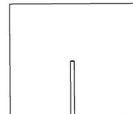

24 Hex Screws 1 allen wrench




(2) Back Pieces

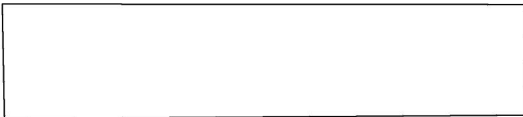


NOTICE - KEEP BACK GROOVES ALIGNED

Step 1: Insert edge of **bottom** piece into mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes on **side** piece and tighten down halfway.

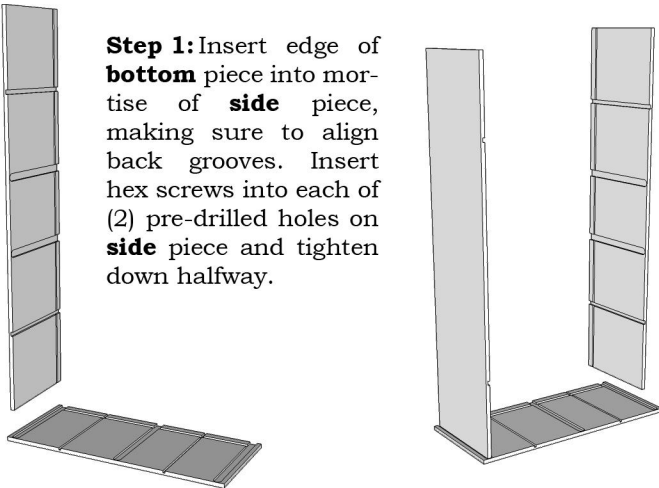


Step 2: Insert edge of **top** piece into opposite mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes on **side** piece and tighten down halfway.

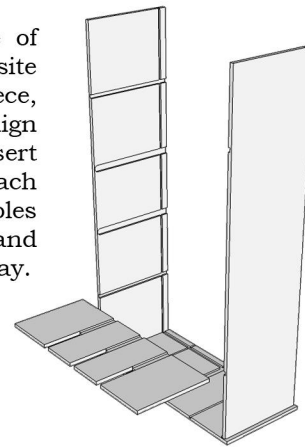


Step 3: Slide in one **3/8" divider** so that edges rest in lowest mortises of **top** and **bottom** piece. Align so that notches of **divider** face away from back grooves.


Step 4: Slide in second **3/8" divider** so that edges rest in highest mortises of **top** and **bottom** piece. Align so that notches of **divider** face away from back grooves.

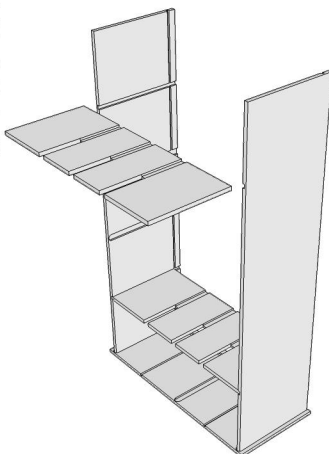

Step 5: Align **center shelf** piece perpendicular to **top** and **bottom** piece with notches facing towards back grooves. Insert so that notches intersect with notches of **3/8" dividers** and edge rests in center mortise of **side** piece. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

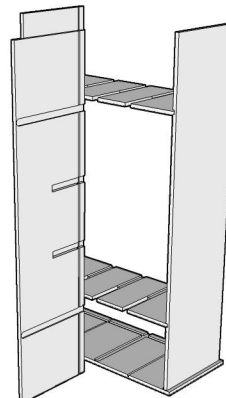


Step 6: Align **shelf** piece perpendicular to **center shelf** piece with notches facing towards back grooves. Insert so that notches intersect with notches of **dividers** and edge rests in mortise of **side** piece.

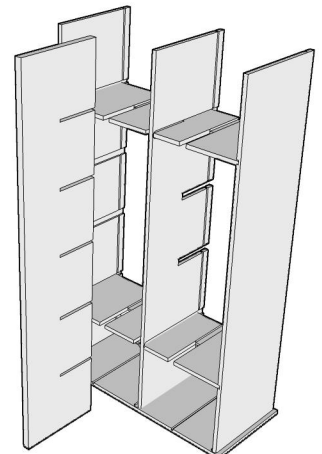


ASSEMBLY INSTRUCTIONS

NOTICE - KEEP BACK GROOVES ALIGNED


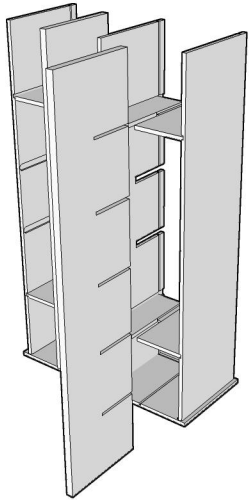


Step 7: Align remaining **shelf** piece parallel to **center shelf** piece with notches facing towards back grooves. Insert so that notches intersect with notches of **dividers** and edge rests in remaining mortise of **side piece**.

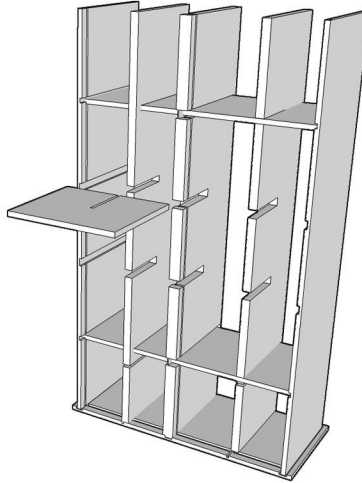


Step 8: Insert edge of **shelf divider** into mortise of **top** piece, so that notch of **shelf divider** intersects with notch of **shelf** piece. Insert hex screws into each of (2) pre-drilled holes in **top** piece and tighten down half-way.

Step 9: Repeat **step 8** to install remaining (3) **shelf dividers**.

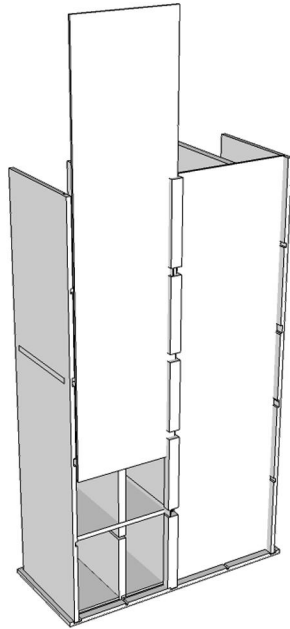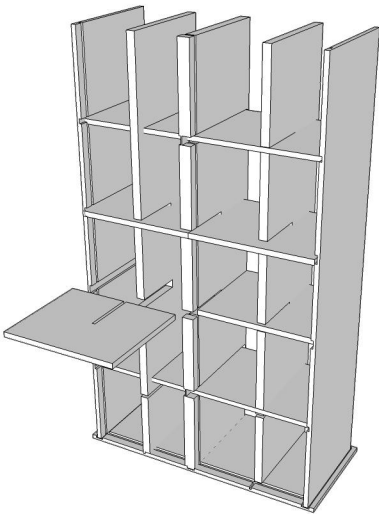

Step 10: Fit sides of one **back** piece into back grooves of **top** piece and **center shelf** piece and slide in so that edge rests firmly in back groove of **side** piece. Fit sides of second **back** piece into the **back** grooves of **center shelf** and **bottom** piece so that edge rests firmly in back groove of **side** piece.

Step 11: Install remaining **side** piece so that edges of assembled pieces fit firmly into mortises and back grooves. Insert hex screws into each of (6) pre-drilled holes in remaining **side** piece and tighten down halfway.

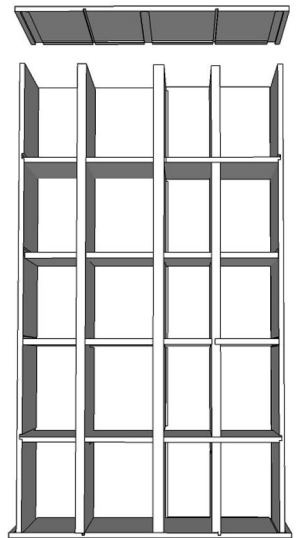

Step 12: Tighten down all screws until snug. DO NOT OVER TIGHTEN. DO NOT DRILL. Rotate unit so that it rests on **bottom** piece and edges of **side** pieces. Assembly is now complete.

