


10-Section Wall Locker

Item #VL1140/7160


9 Capper Drive Dailey Industrial Park Pacific, MO 63069

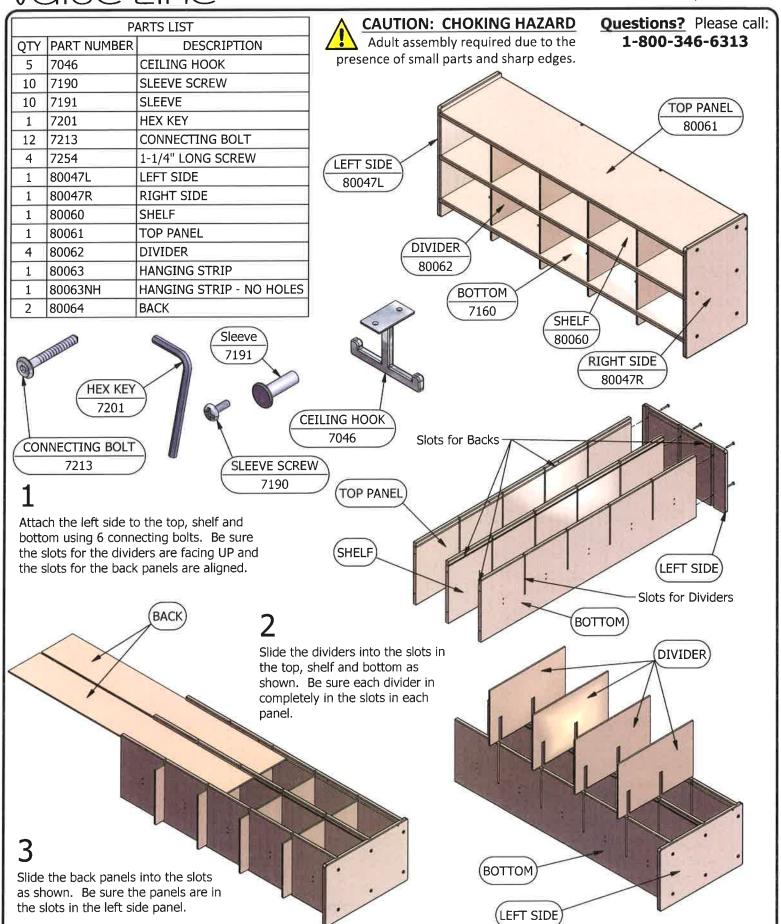



Attach the right side using 6 connecting bolts. Be sure the top, shelf, bottom and back panels are in the slots in the side panel. Go back and make sure all bolts are tight in both side panels.

HANGING STRIP

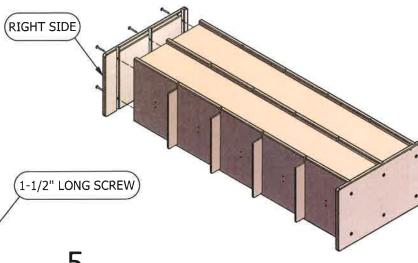

Angled side DOWN and facing FRONT 1-1/2" LONG SCREW

5

Attach the hanging strip (with holes) to the top and side panels using 4, 1-1/4" long screws. The angled side on the strip must be facing towards the FRONT of the cabinet. Be sure all screws are tight.

6

Attach the hang strip to the wall using fasteners that are appropriate for your building construction. Be sure the angled side is facing UP and the angle is facing the wall. The hanging strip MUST be attached to a wall stud. DO NOT HANG THIS UNIT ON DRYWALL ONLY!!

After wall strip is securely in place, lift the cabinet onto the strip.

CHECK ALL SCREWS PERIODICALLY TO MAKE SURE THEY ARE TIGHT!!

Angle On Strip Towards Wall-

WARNING: It is critical that the hanging strip is fastened to the wall correctly. The cabinet may fall off the wall if installed incorrectly. We recommend you consult a building professional if you are unsure of the correct fastener.

Attach the 5 coat hooks onto the bottom panel. Place a sleeve through each hole and attach each hook as shown. Be sure all screws are tight.

