

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: CB29287-RC 253323 253376
263511 263512

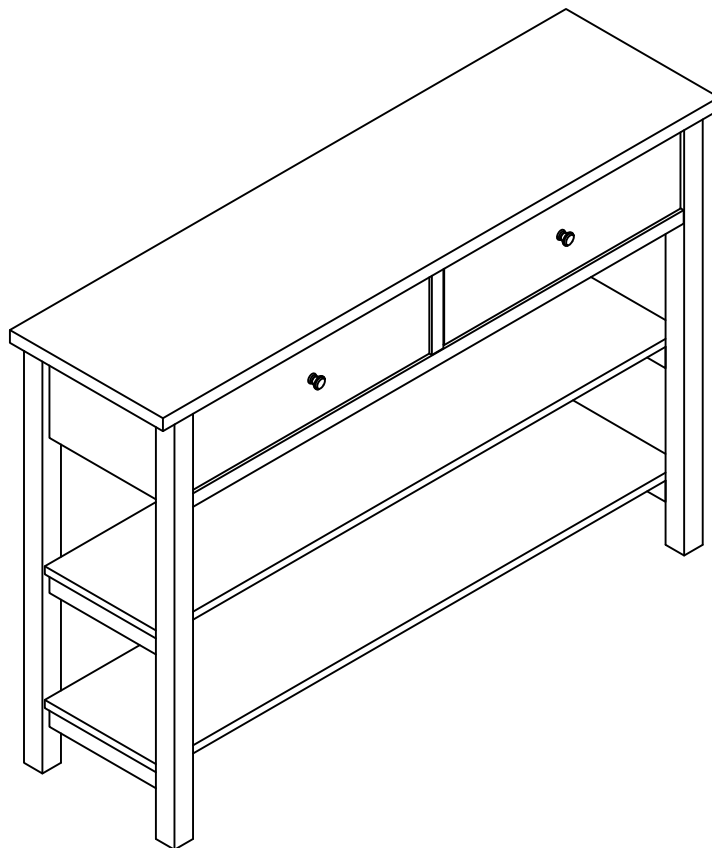

PARTS IDENTIFICATION







ITEM#:CB29287-RC 253323 253376
263511 263512

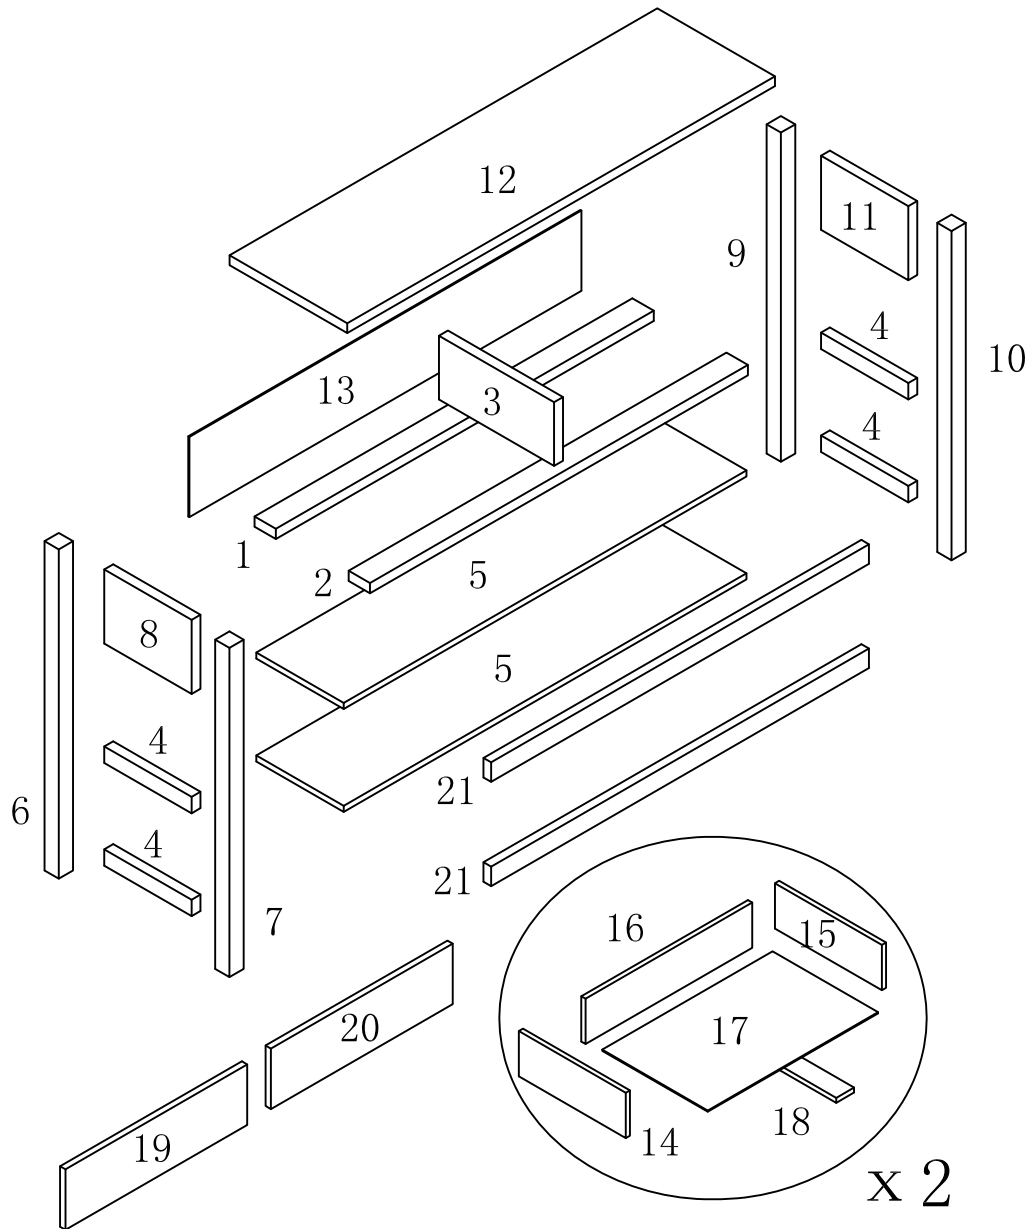

(1)	1pc	(8)	1pc	(15)	2pcs
(2)	1pc	(9)	1pc	(16)	2pcs
(3)	1pc	(10)	1pc	(17)	2pcs
(4)	4pcs	(11)	1pc	(18)	2pcs
(5)	2pcs	(12)	1pc	(19)	1pc
(6)	1pc	(13)	1pc	(20)	1pc
(7)	1pc	(14)	2pcs	(21)	2pcs


HARDWARE IDENTIFICATION

ITEM#:CB29287-RC 253323 253376
263511 263512

A		□4×30	8pcs
B		□4×25	4pcs
C		L20	8pcs
D		□12	8pcs
E			2pcs
F		□4×22	2pcs
G		□8×25	13pcs
H		□4×45	16pcs
I		L29	26pcs
J		□15	26pcs
K		□18	4pcs
L		Z1016	30pcs
M		□6×30	4pcs
N		□16	4pcs
O			1pc
P		□5×40	1pc
Q		□8×40	1pc
R		□4×25	1pc
S		12×12×1	2pcs


ASSEMBLY INSTRUCTION

ITEM#: CB29287-RC 253323 253376
263511 263512

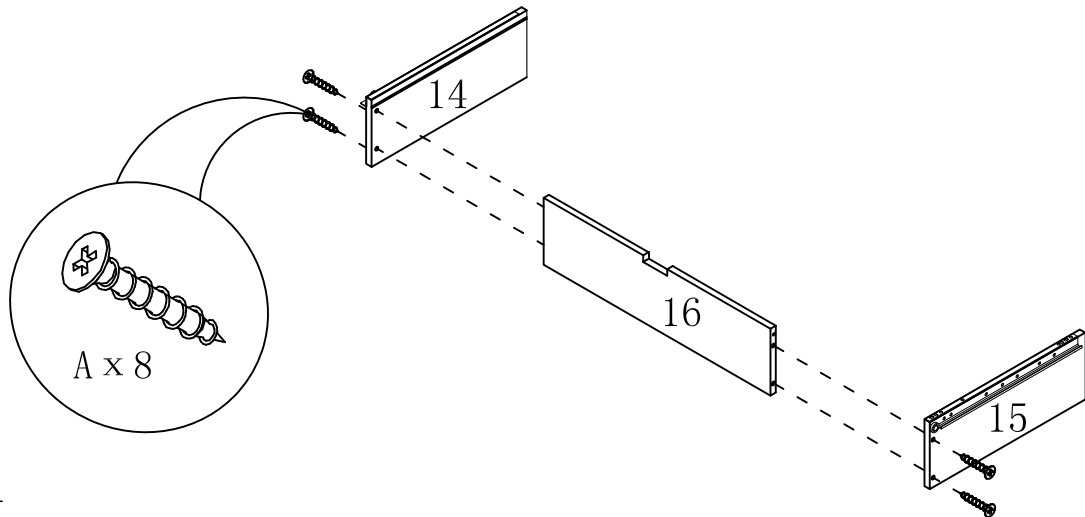


STEP1

STEP2

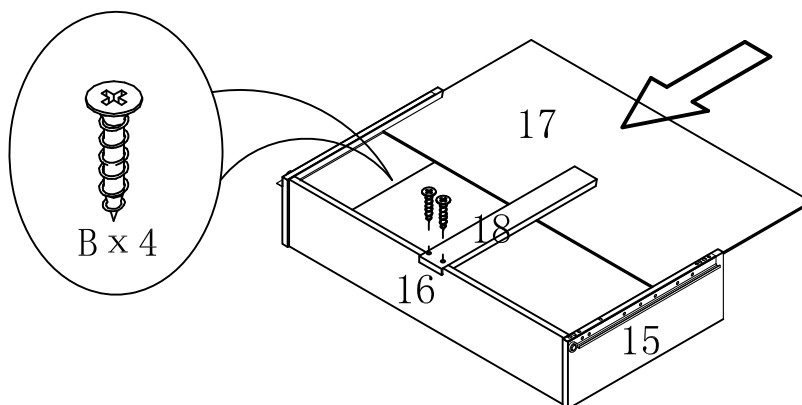


STEP3

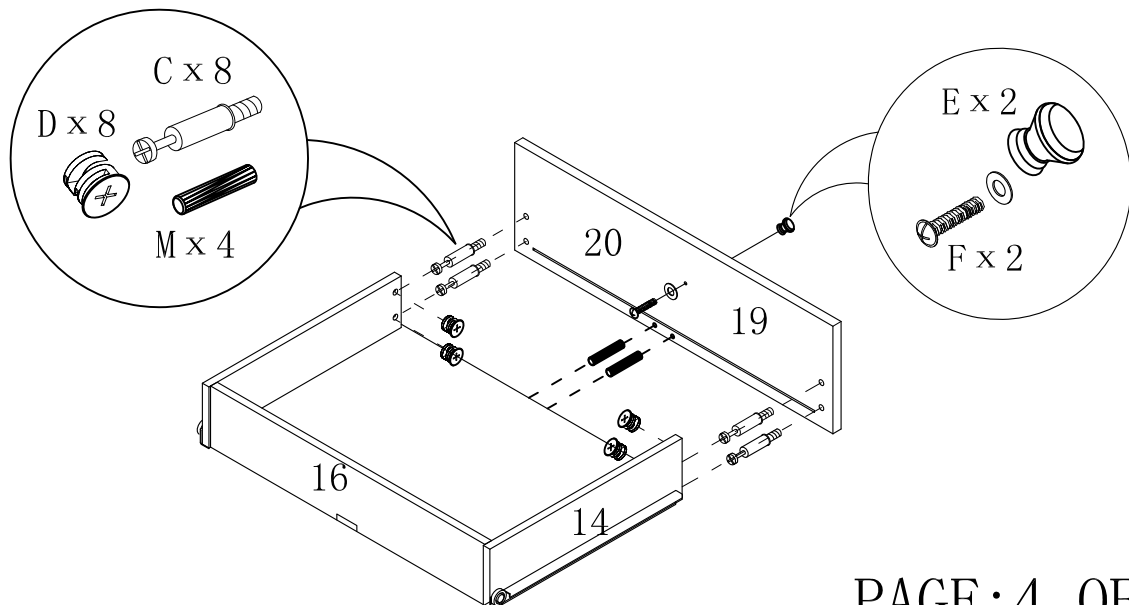


ASSEMBLY INSTRUCTION

ITEM#:CB29287-RC 253323 253376
263511 263512

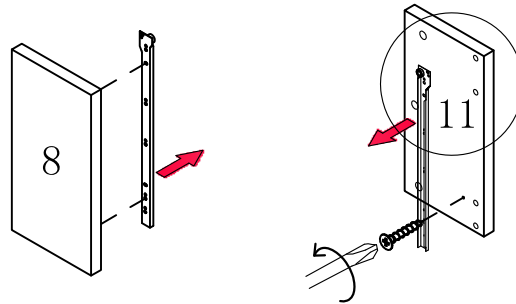


STEP4

STEP5

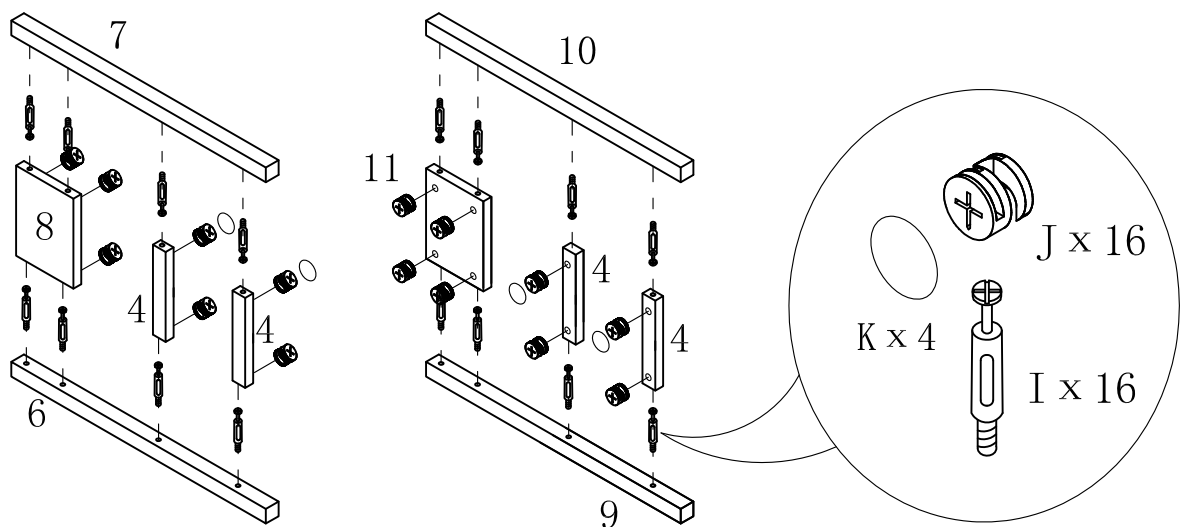


ASSEMBLY INSTRUCTION

ITEM#:CB29287-RC 253323 253376
263511 263512

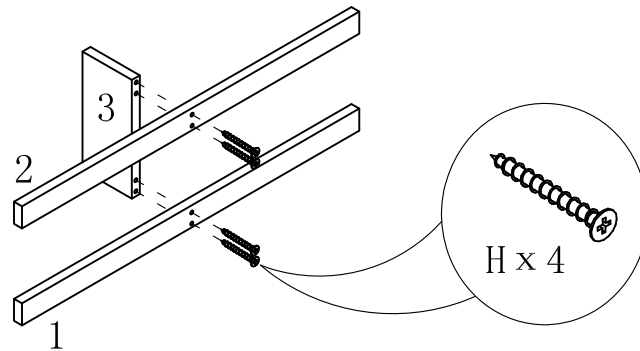


STEP6

STEP7

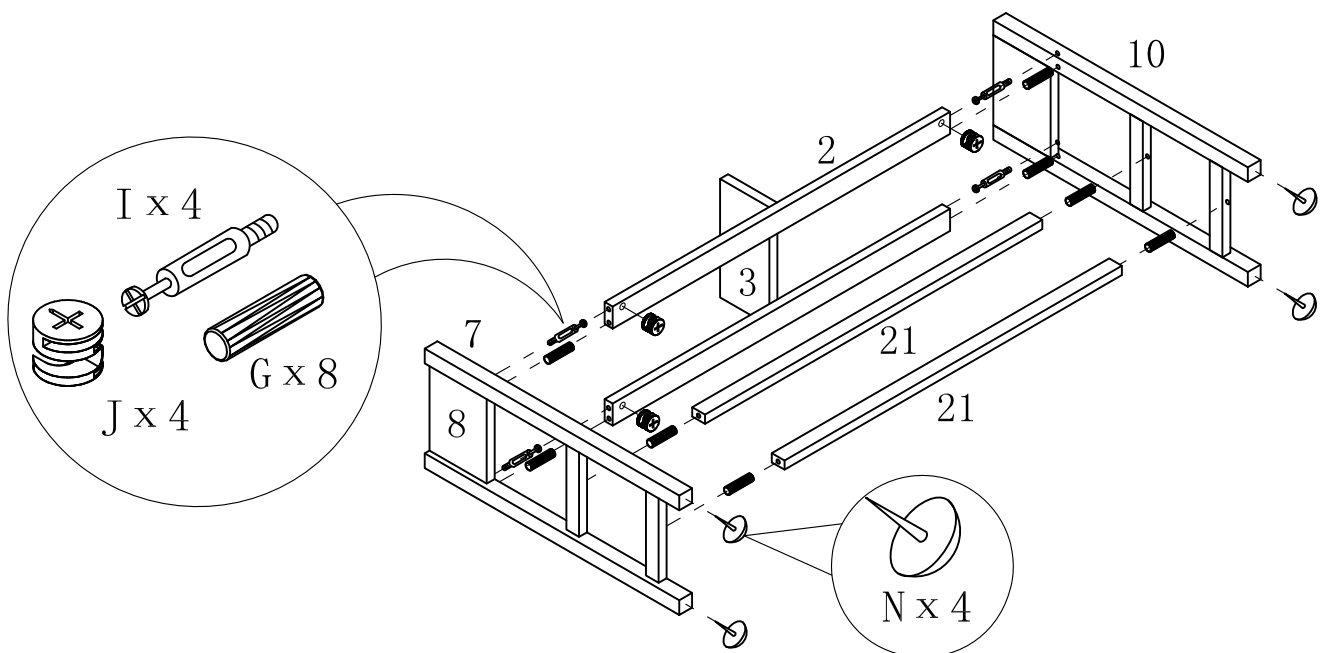


ASSEMBLY INSTRUCTION

ITEM#:CB29287-RC 253323 253376
263511 263512

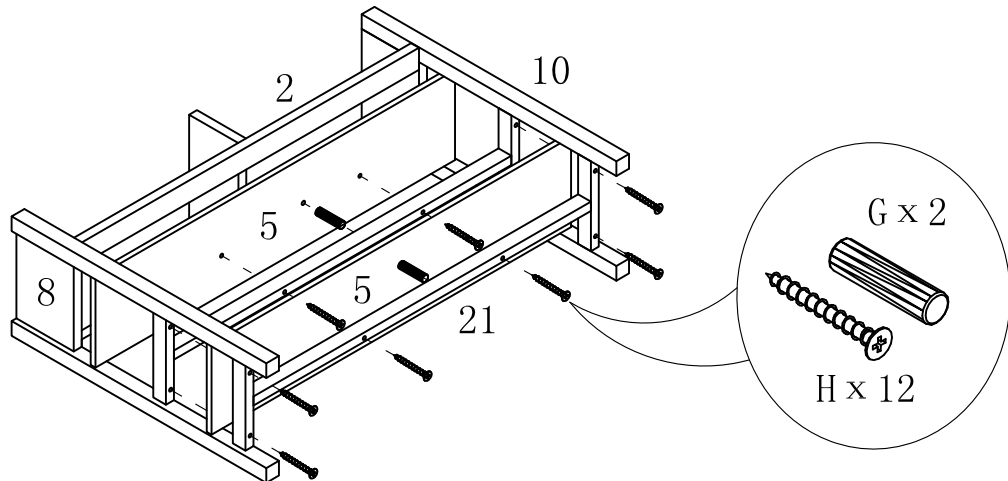


STEP8

STEP9

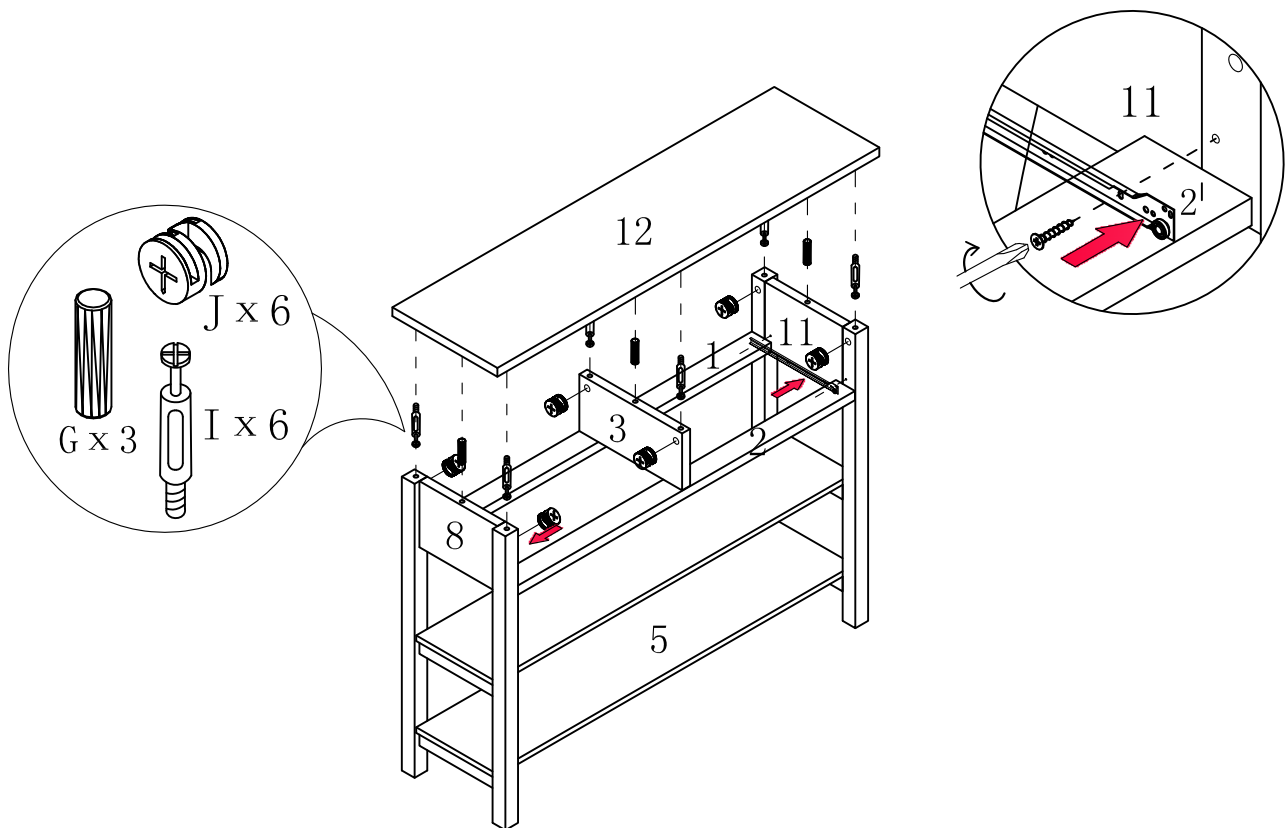


ASSEMBLY INSTRUCTION

ITEM#:CB29287-RC 253323 253376
263511 263512

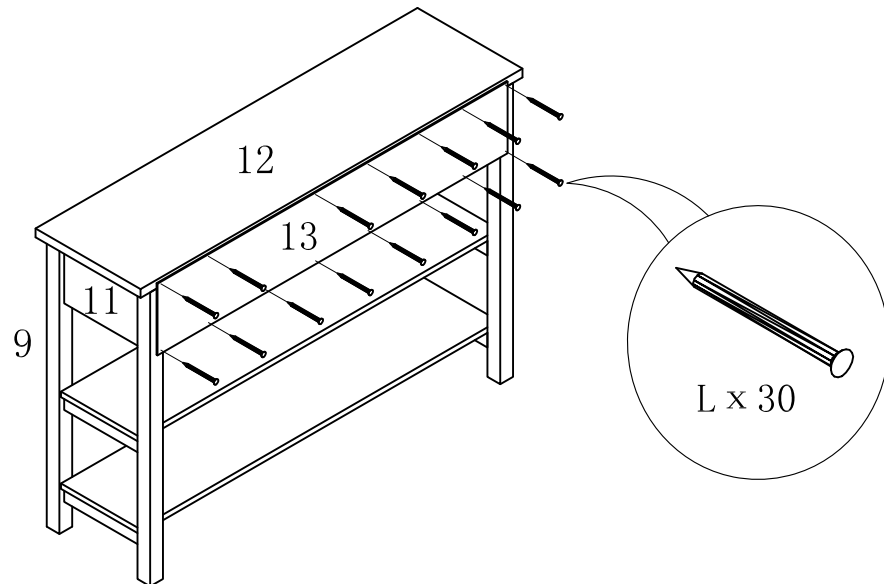


STEP10

STEP11

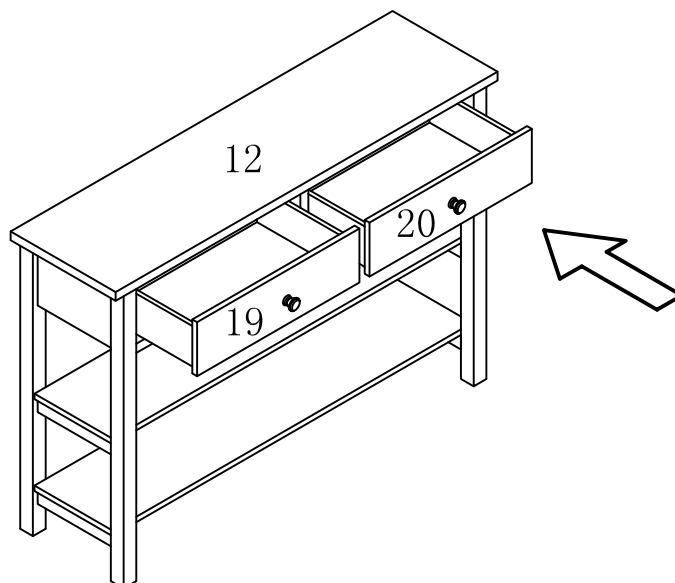


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

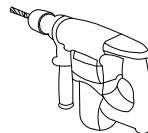


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

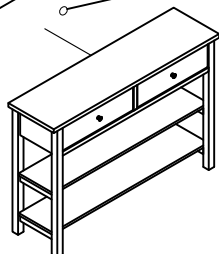


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

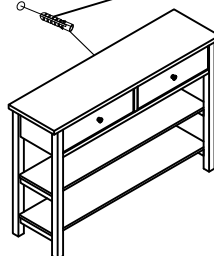


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

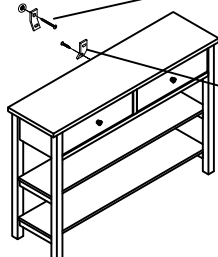

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

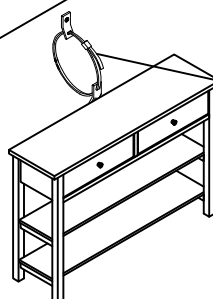

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.