


Assembly Instruction


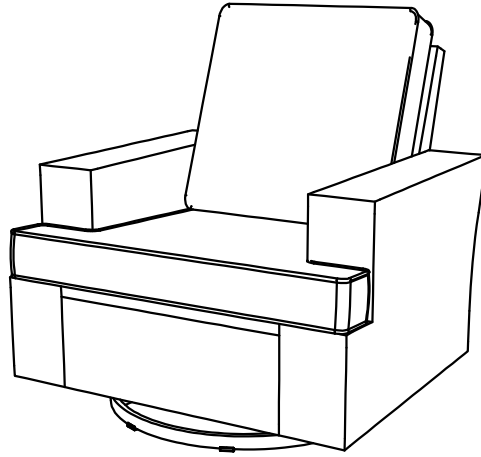



Advice:








- 1.Power tools are suggested to be used during installation.
- 2.More than one person may be required to assemble this product.
- 3.The best advice is not tightening up any screws until the whole piece is assembled.If having difficulty aligning holes,loosen the screws already installed and readjust the armrest.
- 4.To avoid mess-up or mismatch,please use the hardware of each box to install the furniture in the same box.




Single Swivel Chair

Parts List


NO.	Picture	Description	QTY
SC-A		Chair Back	1
SC-B		Chair Seat	1
SC-C		Front Panel	1
SC-D		Right Arm	1
SC-E		Left Arm	1

NO.	Picture	Description	QTY
V		Screw (M6*35)	2
T		Screw (M6*45)	2
S		Screw (M6*60)	12
N		Washer (M6)	28
H		Anti-slip Screw (M6)	12
L		Allen Key	1
J		Wrench (M6)	1

STEP 1

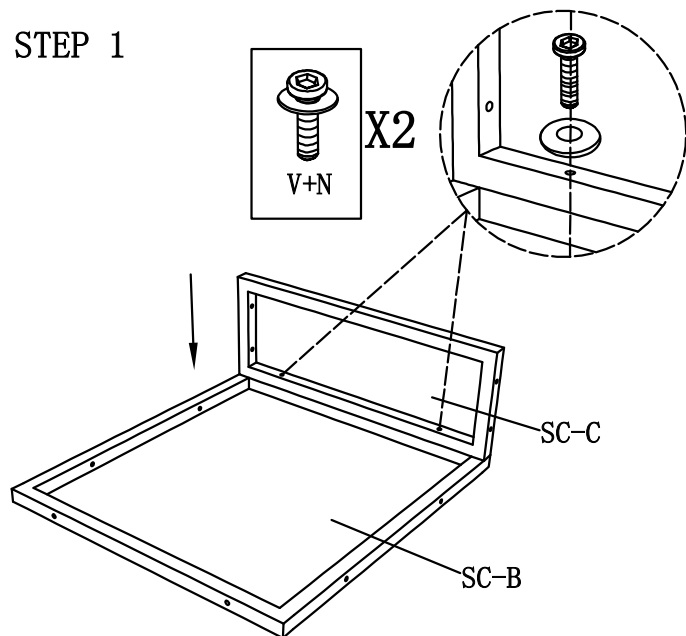


STEP 2

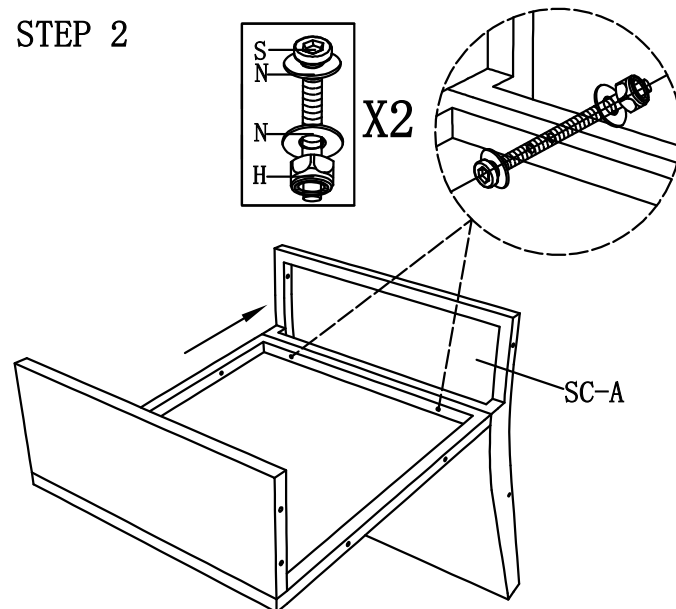


The best advice is not tightening up any screws until the whole piece is assembled.


STEP 3

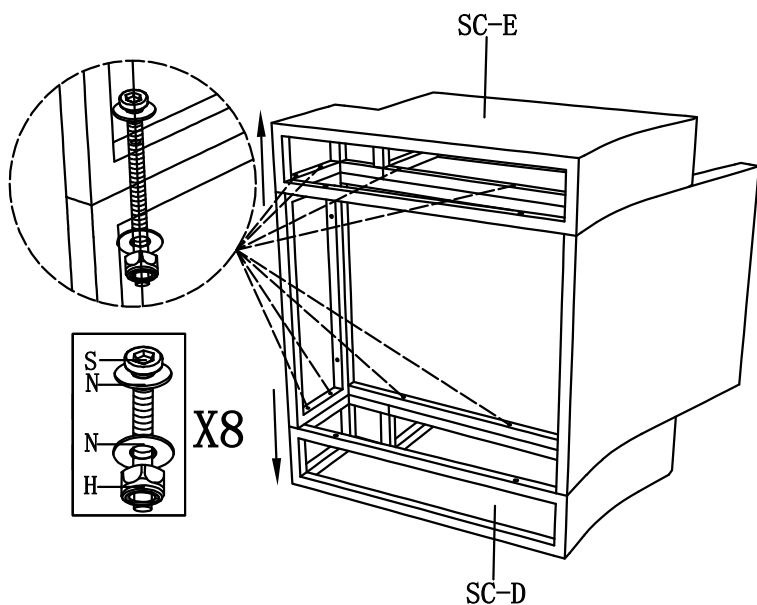

STEP 4

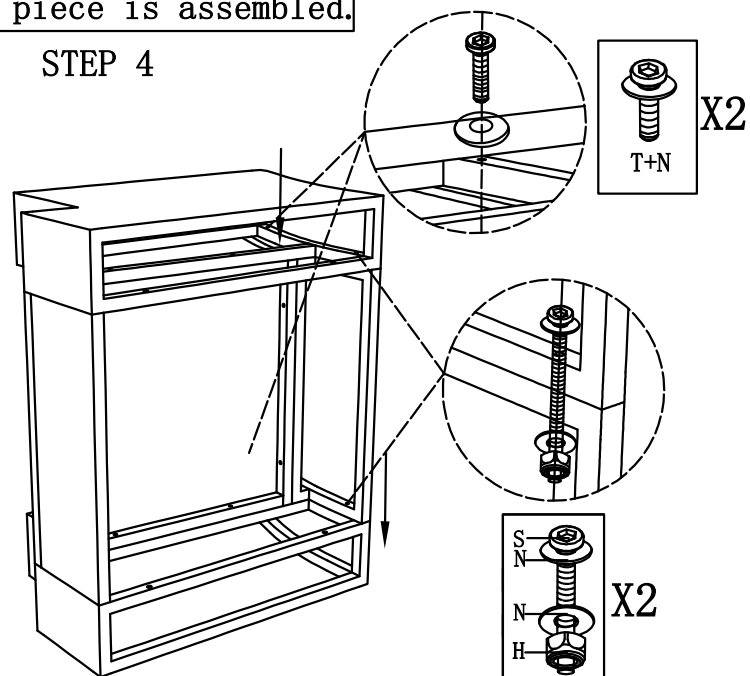


FINISH

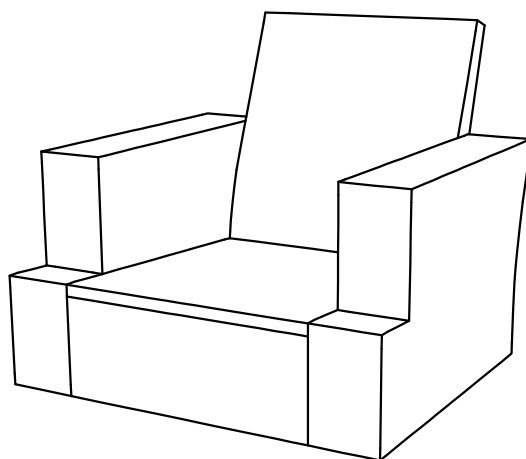

Assembly Instruction





Advice:

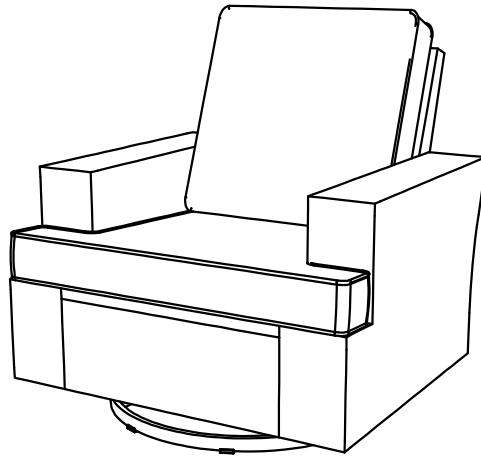





- 1.Power tools are suggested to be used during installation.
- 2.More than one person may be required to assemble this product.
- 3.The best advice is not tightening up any screws until the whole piece is assembled.If having difficulty aligning holes,loosen the screws already installed and readjust the armrest.
- 4.To avoid mess-up or mismatch,please use the hardware of each box to install the furniture in the same box.




Single Swivel Chair

Parts List

NO.	Picture	Description	QTY
SC-G		Back Cushion	1
SC-H		Seat Cushion	1
SC-J		Chair Base #1	1
SC-K		Chair Base #2	1


NO.	Picture	Description	QTY
V		Screw (M6*35)	4
T		Screw (M6*45)	4
N		Washer (M6)	16
H		Anti-slip Screw (M6)	8
L		Allen Key	1
J		Wrench (M6)	1

STEP 1

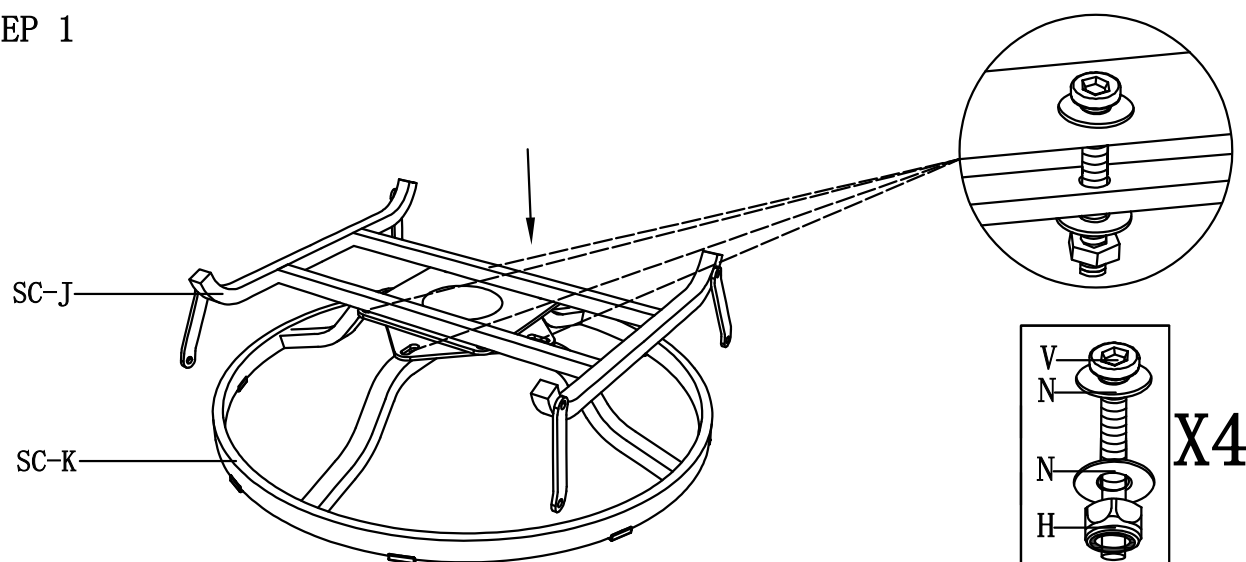


The best advice is not tightening up any screws until the whole piece is assembled.

STEP 2

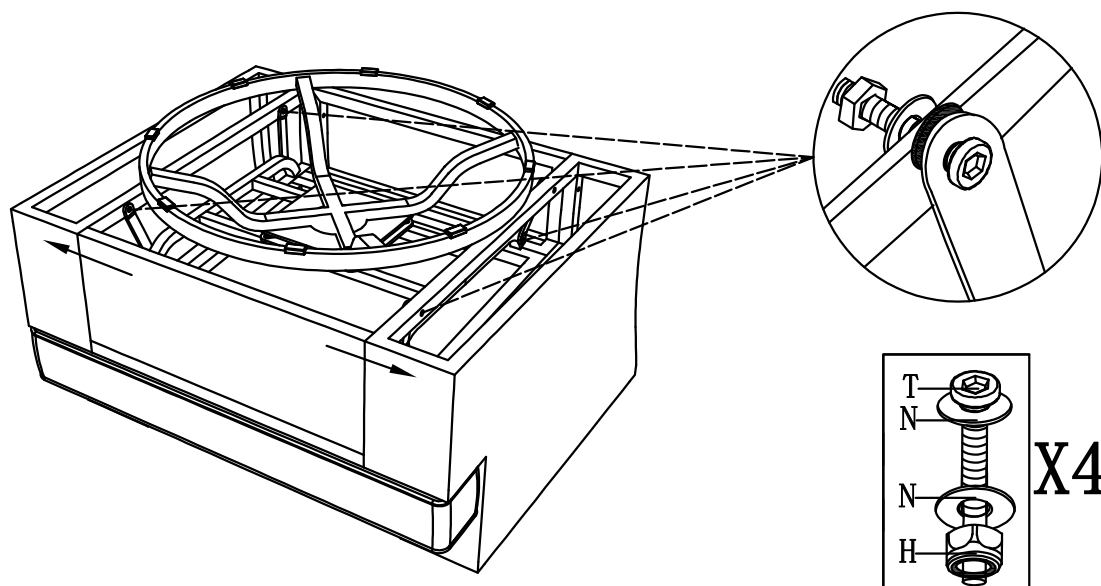

FINISH

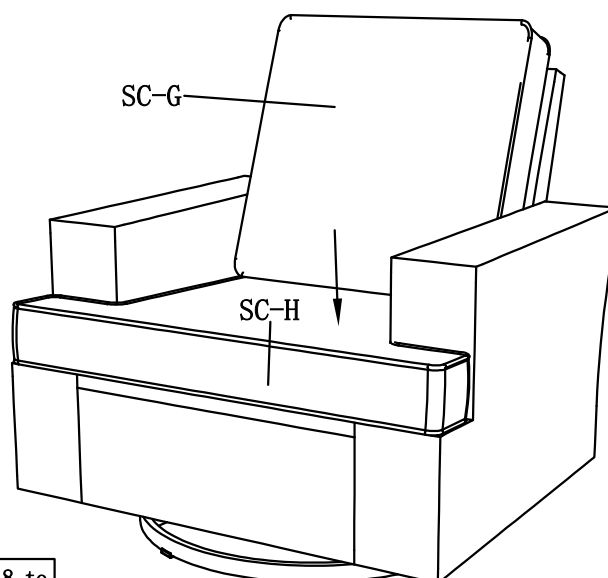

Please tap the cushions and wait 48 to 72 hours to fully rebound