


There is no hardware included with this 2x2 bookcase/Storage Cabinet. No tools are required for assembly. It simply slides together.

CLEANING INSTRUCTION


After assembly, clean and wipe with a damp cloth. Be sure to dry this paper veneer product after wiping. Never let water accumulate on the surface. Never let the unit sit in water or a moist environment.

ASSEMBLY INSTRUCTION




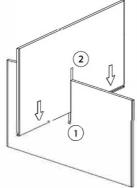

Insert center panel (2) into center panel (1) so that the finished front edge is facing up and the back panel grooves are closest to the ground Align the center groove on panel (3) with the dovetail on the end of panel (1) and gently slide it into position

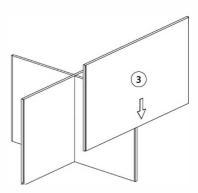




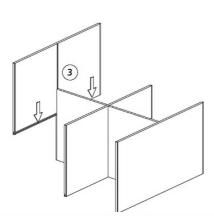


Align the center groove on panel (3) with the dovetail on the end of panel (1) and gently slide it into position



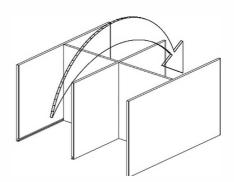


Rotate 90° for the next assembly as shown



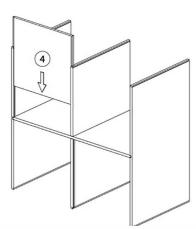

Slide back panel (4) into the rear panel grooves on panels (2) & (3) as shown



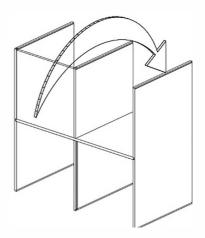

Rotate 180° for the next assembly as shown


There is no hardware included with this 2x2 bookcase/Storage Cabinet. No tools are required for assembly. It simply slides together.

CLEANING INSTRUCTION


After assembly, clean and wipe with a damp cloth. Be sure to dry this paper veneer product after wiping. Never let water accumulate on the surface. Never let the unit sit in water or a moist environment.

Assembly Instruction

7 Slide the second back panel (4) into the rear panel grooves on panels (2) & (3) as shown

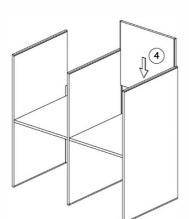


8

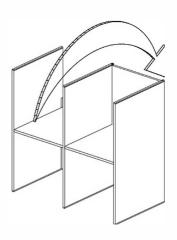


Rotate 90° for the next assembly as shown

Align the grooves on panel (5) with the dovetails the end of panels (1) and both panel 3's. Gently slide the panel into position, do not force it past the front edge of the panel (5)

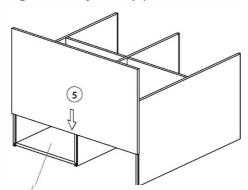

(10) Repeat with the second panel (5)

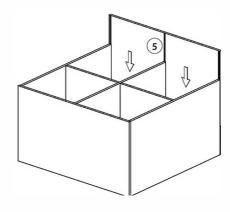

Note back panels should be on the ground

There is no hardware included with this 2x2 bookcase/Storage Cabinet. No tools are required for assembly. It simply slides together.

CLEANING INSTRUCTION

After assembly, clean and wipe with a damp cloth. Be sure to dry this paper veneer product after wiping. Never let water accumulate on the surface. Never let the unit sit in water or a moist environment.