

installation instructions:

SIGNATURE URETHANE GABLE BRACKET

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

Gable brackets are not load-bearing, decorative use only.

TOOL & MATERIAL CHECKLIST

- | | |
|---|--|
| <input type="checkbox"/> electric drill | <input type="checkbox"/> sand paper |
| <input type="checkbox"/> drill bit for pilot hole | <input type="checkbox"/> wood blocks |
| <input type="checkbox"/> countersink bit | <input type="checkbox"/> construction adhesive |
| <input type="checkbox"/> lag screws & washers | <input type="checkbox"/> caulking gun |
| <input type="checkbox"/> caulk | <input type="checkbox"/> mechanical fasteners |

IMPORTANT INFO

- It is highly recommended that you paint/finish our brackets before installation.
- Once installed, you can apply any necessary touch-up paint/finish.
- Clean installation surface and bracket of all dirt and dust with a clean cloth or dry sponge.
- Measure and mark the location where the bracket is going to be installed.
- Wood blocking strips should fit snugly into the back of bracket.

INSTALL INSTRUCTIONS:

Hollow Bracket

Attach wood blocks to surface with screws.

The top and back pieces of bracket will "slip" over wood blocking.

Screw through side of bracket into wood blocks to properly secure.

Use acrylic caulk to seal edges of bracket against surface after installation.

Fill in any holes with caulk and smooth the surface with finger.

Touchup as needed with caulking, filling any visible voids or gaps.

Apply touchup paint as needed.

Solid Bracket

Slide bracket into place behind fascia board.



Pre-drill holes into bracket through fascia board.

Screw bracket to fascia board through back if possible or screw through front of fascia board into bracket.

Touchup as needed with caulking, filling any visible voids or gaps.

Apply touchup paint as needed.

EXAMPLE DIAGRAM:

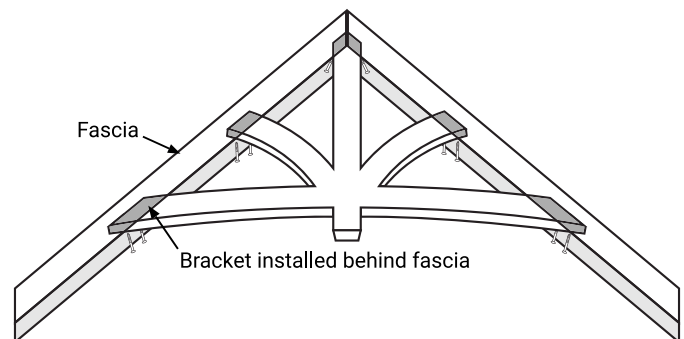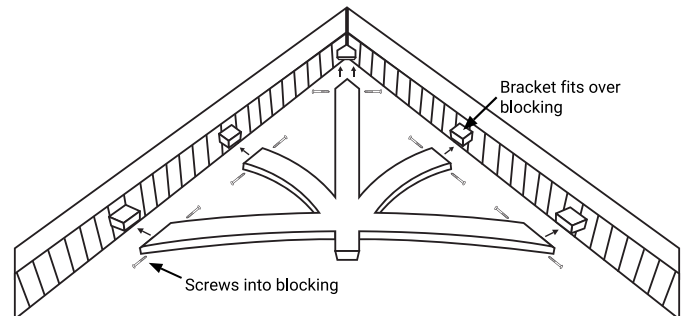

We Can Help. Call (866) 607-0453



EKENA
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com