ASSEMBLING & INSTALLATION INSTRUCTIONS PRODUCT For Wall Mount Fixture

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

MOUNTING THE FIXTURE

Installation (see fig.1)

- 1. Disconnect power at main electrical panel before installation.
- 2. Thread the two mounting screws about 1/4" into the pre-drilled holes in the mounting plate, spaced about the same distance apart as the holes in the fixture back plate. Attach the mounting plate to the junction box using two junction box screws. The side of the mounting plate marked "GND" must face out.
- 3. Guide fixture wires through hole in center of mounting plate.
- 4. Follow wiring instructions carefully (see fig.2)
- 5. Place the fixture body (D) over the mounting plate, aligning the hole with mounting screw, then screw the ball nuts (E) onto the mounting screws.
- 6. Attach the glass shade (B) to the lamp holder by turning it clockwise until tight. Attach the glass shade (A) to the lamp holder, aligning the hole with protuberance nut then lock it securely with knob screw(C).
- 7. Install the light bulbs in accordance with the fixture's specifications. DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

Wiring (see fig.2)

- Connect the electrical wires as follows. Connect the Black wire from the fixture to the black house (hot) Wire. Connect the white wire from the fixture to the white (neutral) house wire. Make sure all wire nuts are secured. You may wrap the connections with electrical tape. If your outlet box has a ground wire (green or bare copper) connect fixture's ground wire to it. Otherwise attach the bare copper fixture wire to the green ground screw on the mounting plate.
- 2. Tuck the wire connections neatly into the wall junction box.

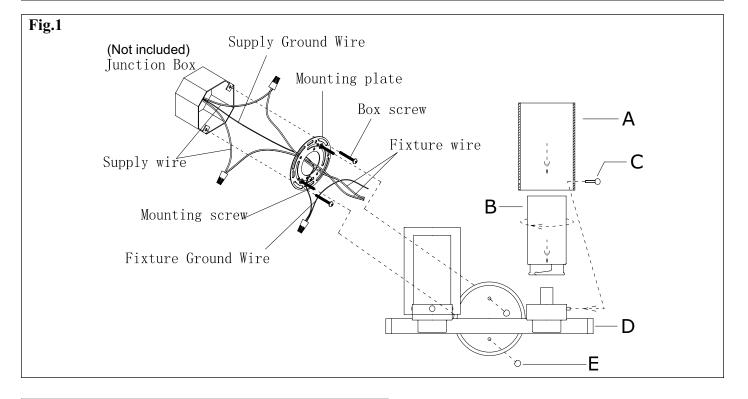


Fig.2			
FIXTURE WIRES Black or Smooth	FIXT WIRE Whit HOUSE WIRES Black (Hot)	S For A Hondowski Alexandrian Alexandri Alexandrian Alexandrian Alexandrian Alexandrian Alexandrian Al	FIXTURE WIRES Bare Copper Ground) HOUSE WIRES Green or Bare Copper(Ground)