





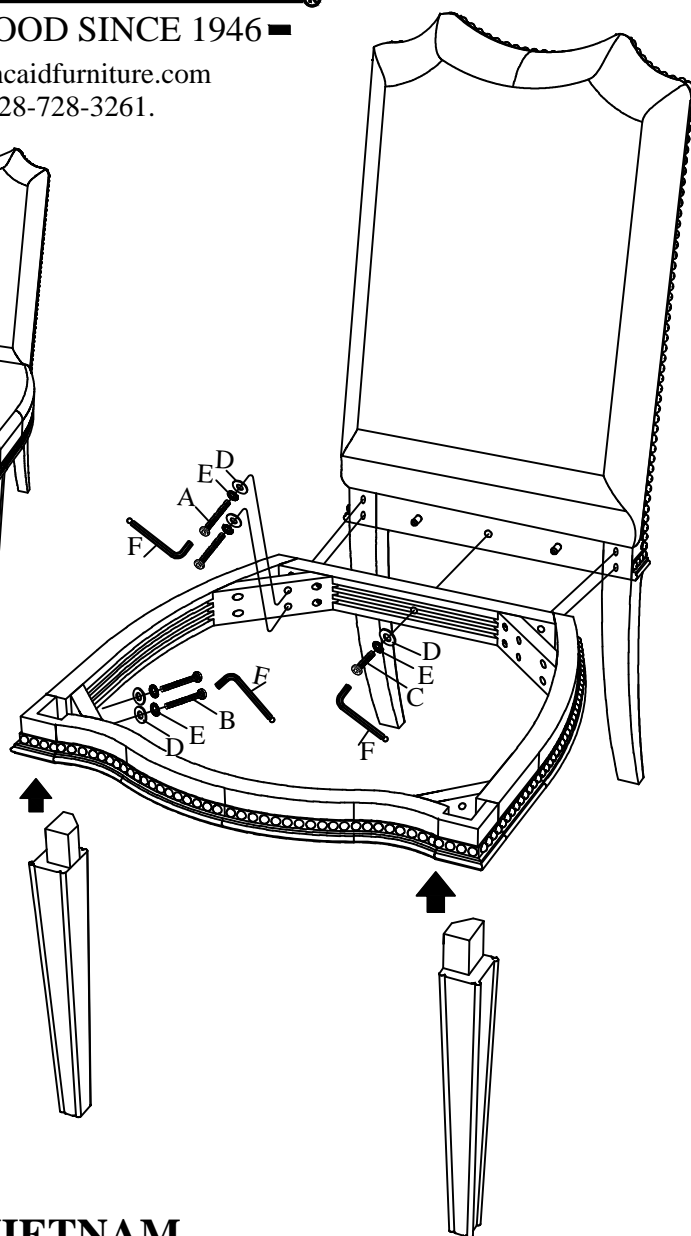

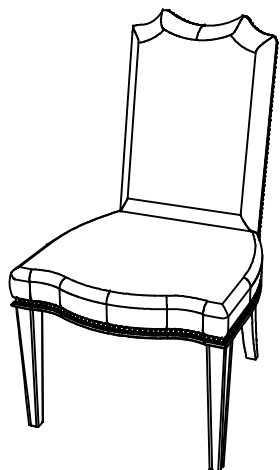

KINCAID

—SOLID WOOD SINCE 1946—

www.kincaidfurniture.com
phone :828-728-3261.



607-622 Upholstered Side Chair Assembly Instruction Hardware List

CODE		DESCRIPTION	QTY
A		Bolts "Ó"7B8\$, "5/316\$	4
B		Bolts "Ó"7B8\$, "4\$	4
C		Bolts "Ó"7B8\$, "3/314\$	1
D		Hrcv"Y kuj gt"Ó"7B8\$, "3;	9
E		Nqeni"Y kuj gt"Ó"7B8\$	9
F		Allen Key 100*50*5 MM	1

IMPORTANT NOTES

- . Place all wooden parts on clean and smooth surface such as rug or carpet to prevent the parts from being scratched.
- . Check to be sure that you have all parts and hardware.
- . Remove all wrapping materials, including staples and packing straps before you start to assemble.
- . Do not tighten all crews and bolts until completely assembled.
- . Keep all hardware out of the reach of children

- Step 1: Assemble the seat frame with the chair back with flat washer (D), lock washer (E) and bolt (C). Do not tighten the bolt now.
- Step 2: Fasten the chair frame to the back leg with flat washer (D), lock washer (E) and bolt (A). Two bolts per leg. Tighten the bolts (A) and (C) with Allen key (F).
- Step 3: Insert the front legs to the apron and secure with flat washer (D), lock washer (E) and bolt (B). Two bolts per leg. Tighten the bolts (B) with Allen key (F).

MADE IN VIETNAM