

## AFTERSALE SERVICE

Dear customer,

Thank you so much for purchasing the product from us, we really appreciate your support.

We are aimed to provide the best shopping experience to our customers. We also want to build a mutually beneficial relationship with our customers, and step further to make our brand both reliable, responsible and recommendable.

We hope that our products could meet your needs and expectations, please consider us again if you need more products for your home and kitchen.


The package would be out of our control during shipping, please contact us through your purchasing channel directly if there is anything wrong with the box or contents. We are always here offering you our service.

We will reply your messages within 24 hours, please kindly wait for the response from our professional service team.

Your comfort and contentment are of utmost importance.



Best Regards,  
Customer Care Specialist

## ASSEMBLY INSTRUCTION

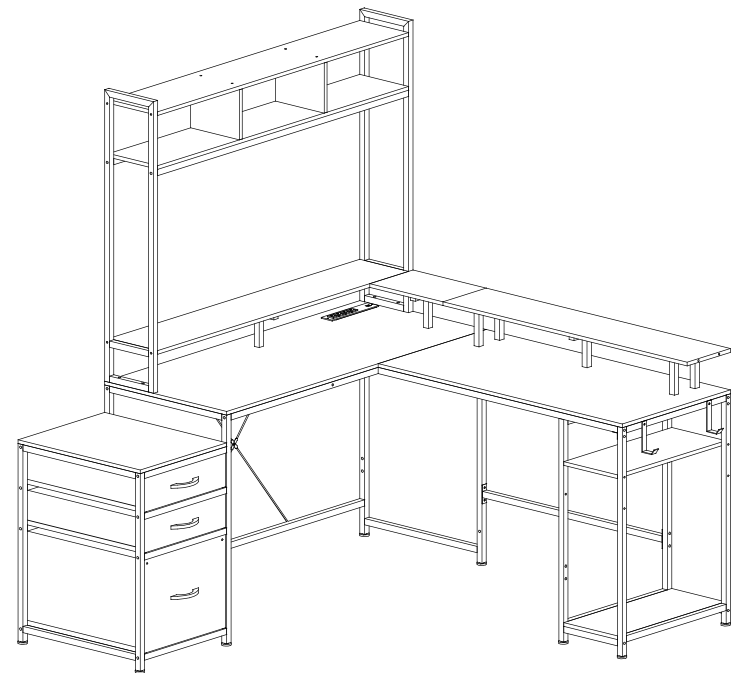

Please check all parts and accessories according to the parts list before assembling, make sure all contents are sufficient and in good condition. If there is any parts missing or defective, please contact us immediately with purchase platform message to get replacement parts.

## PARTS:

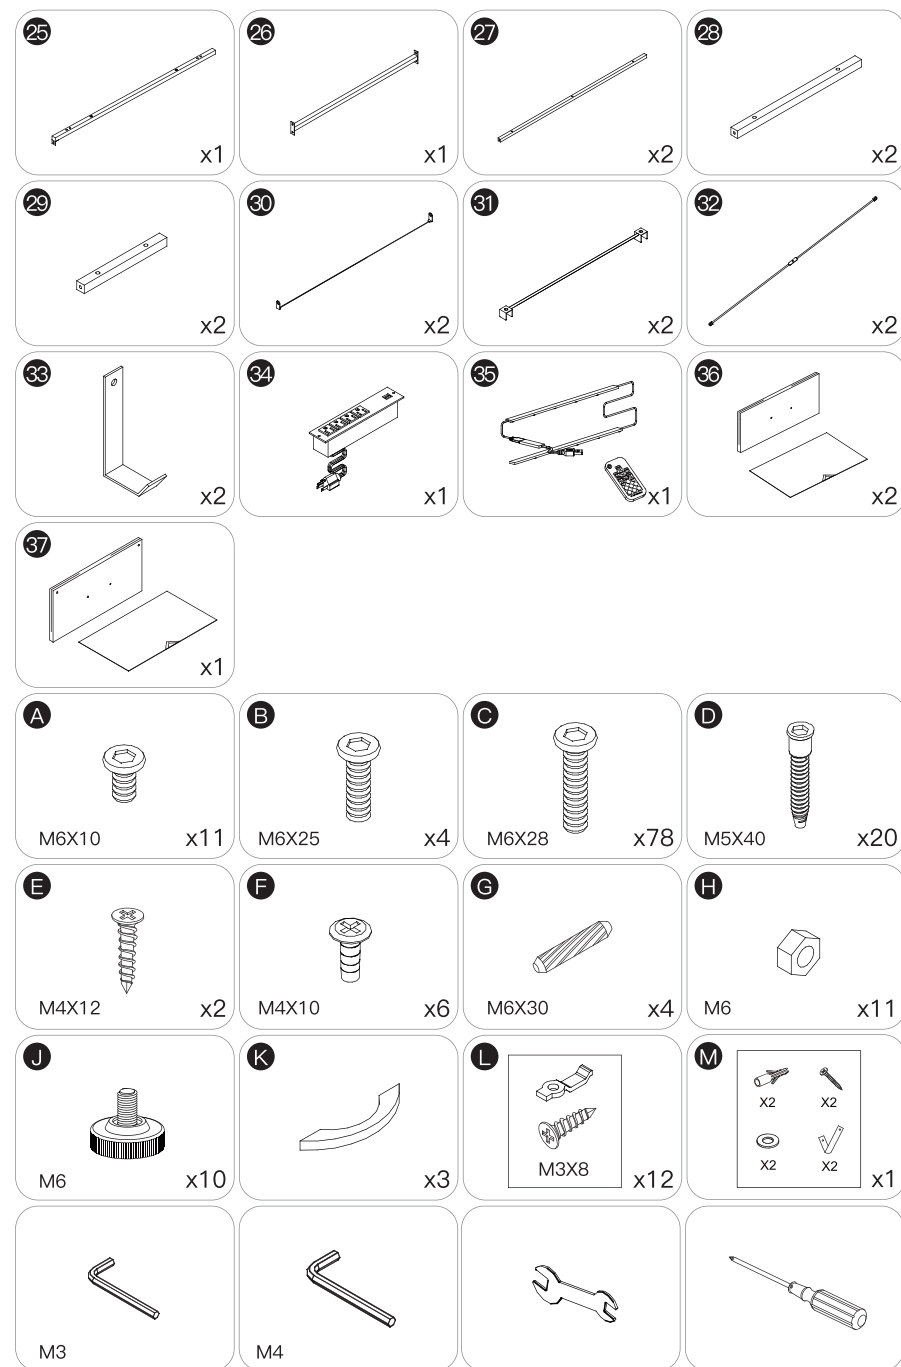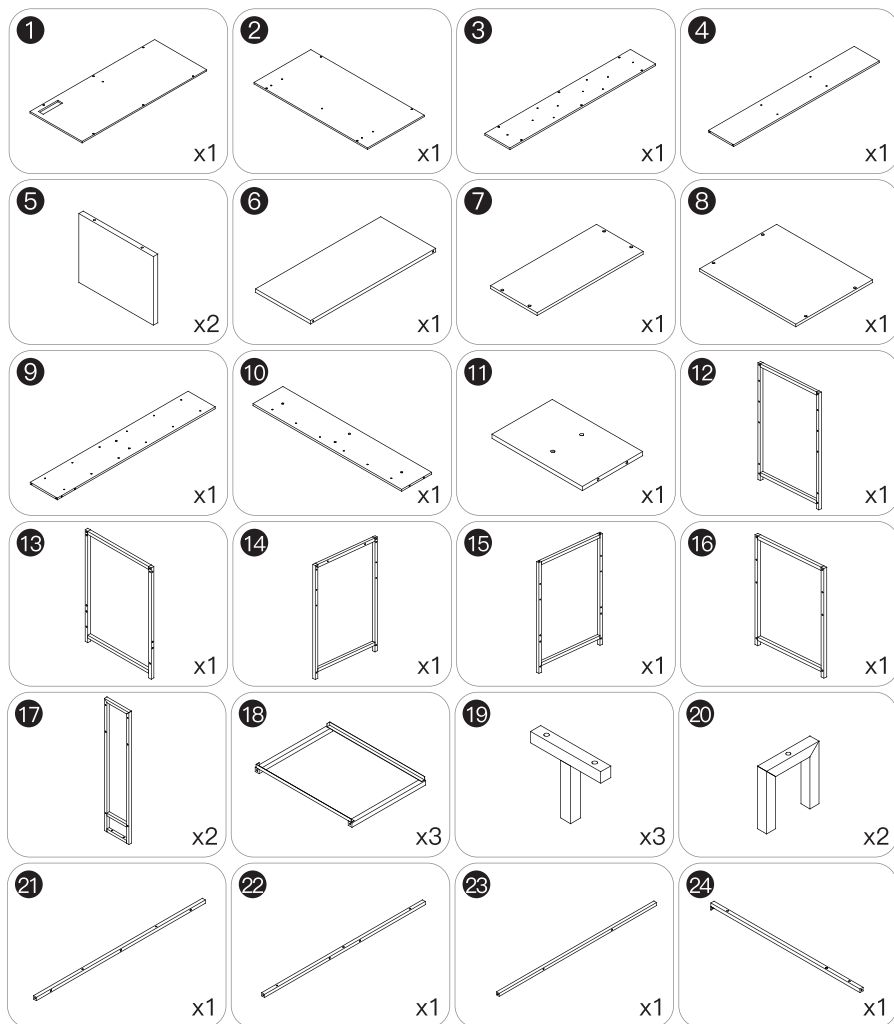




## INSTALLING LIGHT STRIPS I

The installation location may vary according to preference.


The installation location may vary according to preference.

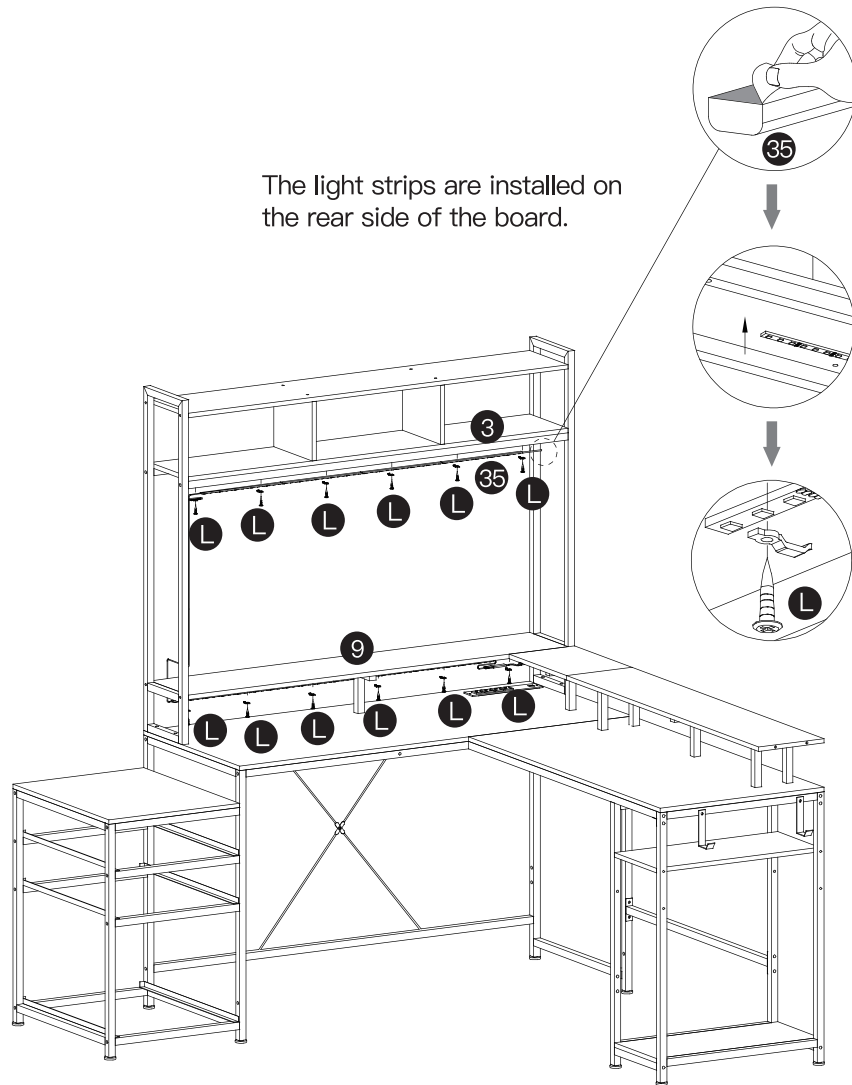


## INSTALLING LIGHT STRIPS II


The installation location may vary according to preference.

The installation location may vary according to preference.

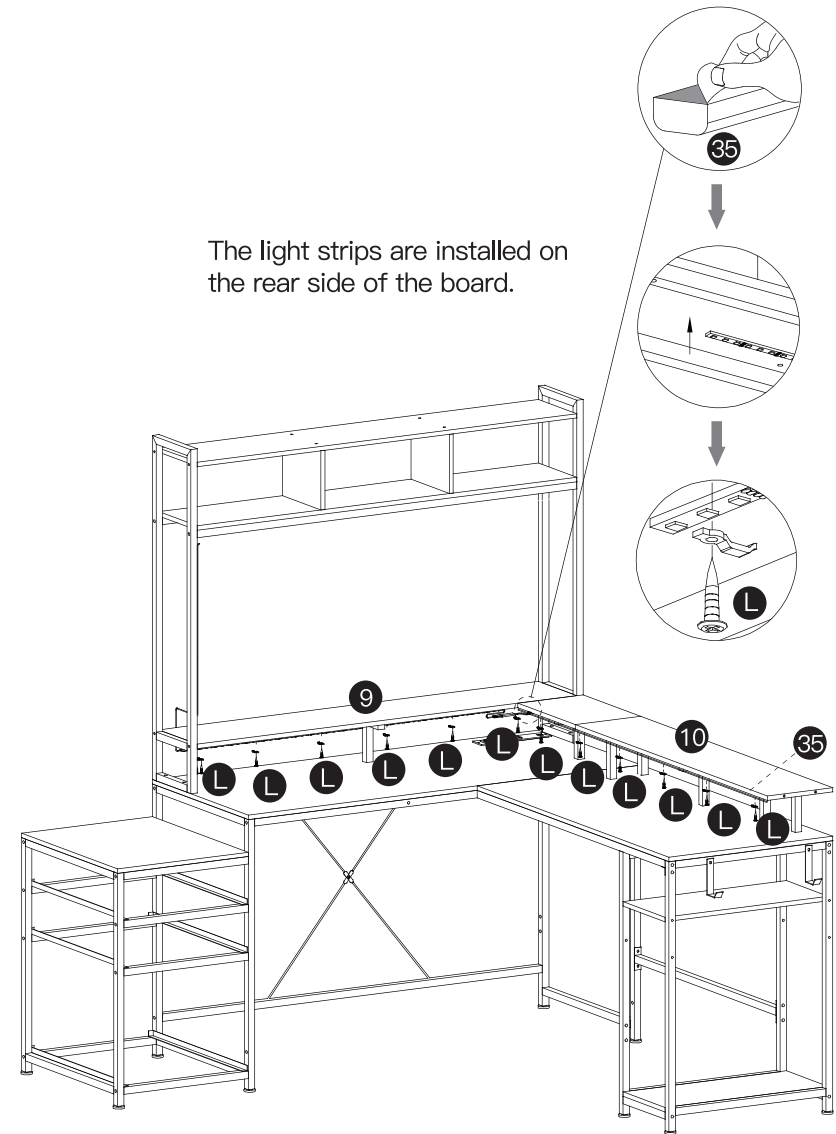


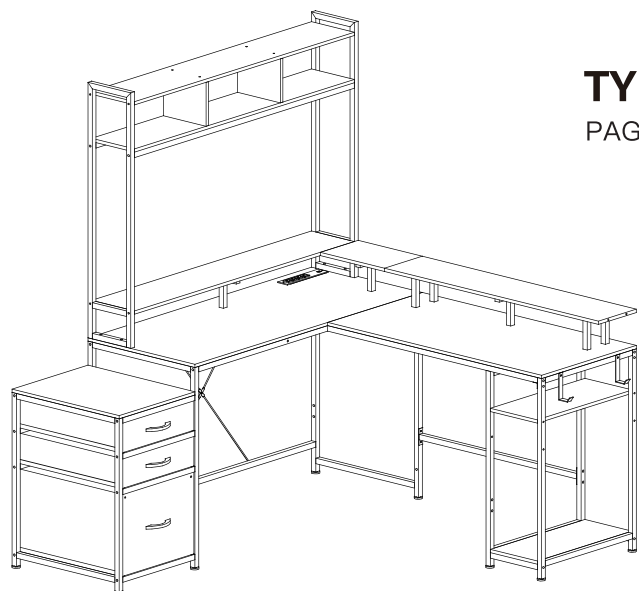


**TYPE A**  
PAGE 003–029

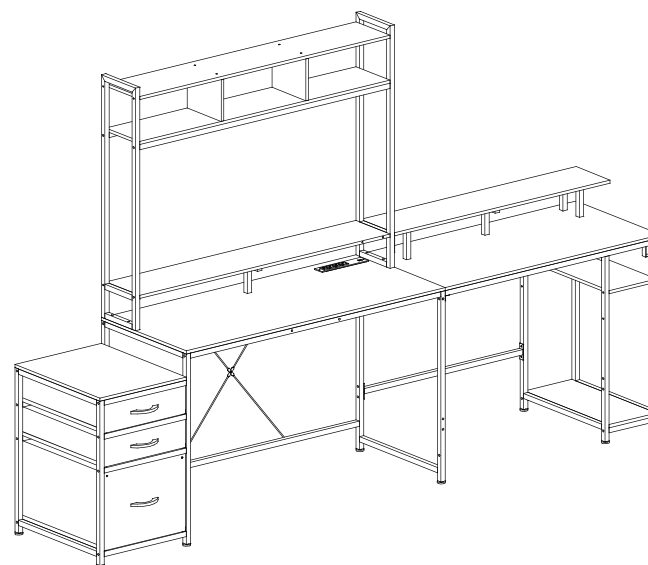

**TYPE C**  
PAGE 057–080

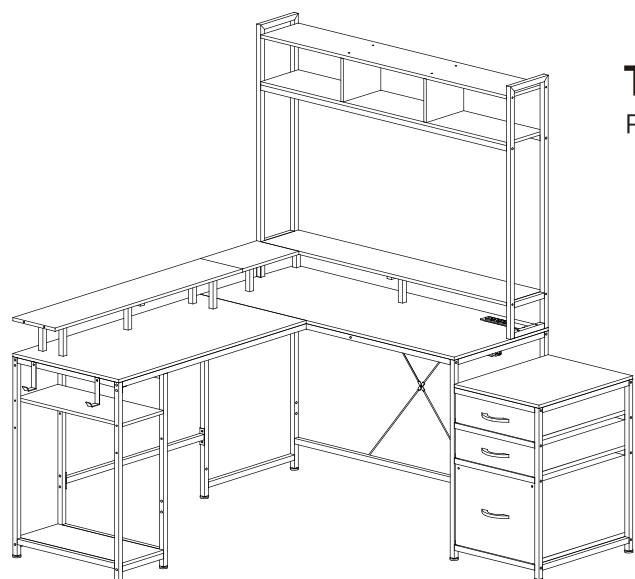



**TYPE B**  
PAGE 030–056

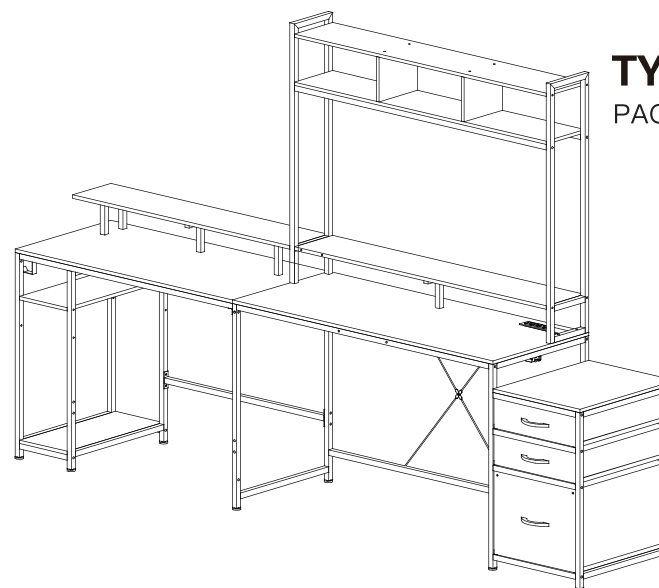

**TYPE D**  
PAGE 081–104


## TYPE A HOW TO INSTALL

**Step 1** Install part **J** on part **12** **13** **14** **15** **16**.

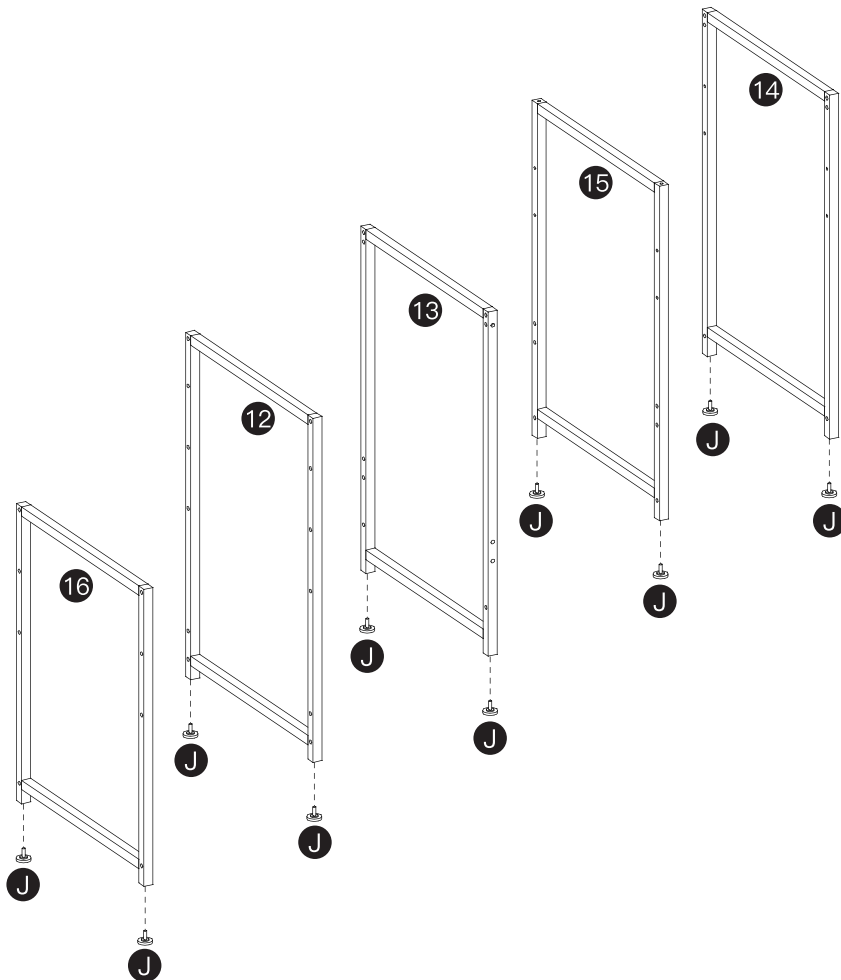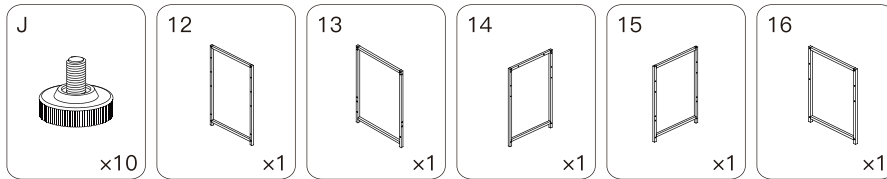


**Step 2**

Connect part **12** and part **13** with part **21** & **22** & **23**, use part **C** to screw them.

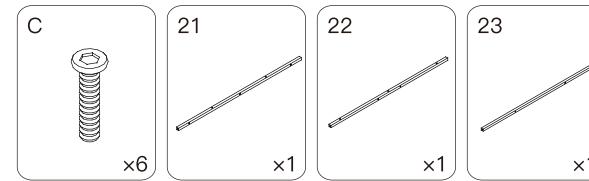

### REMARK:



Make sure the side without holes face the front.

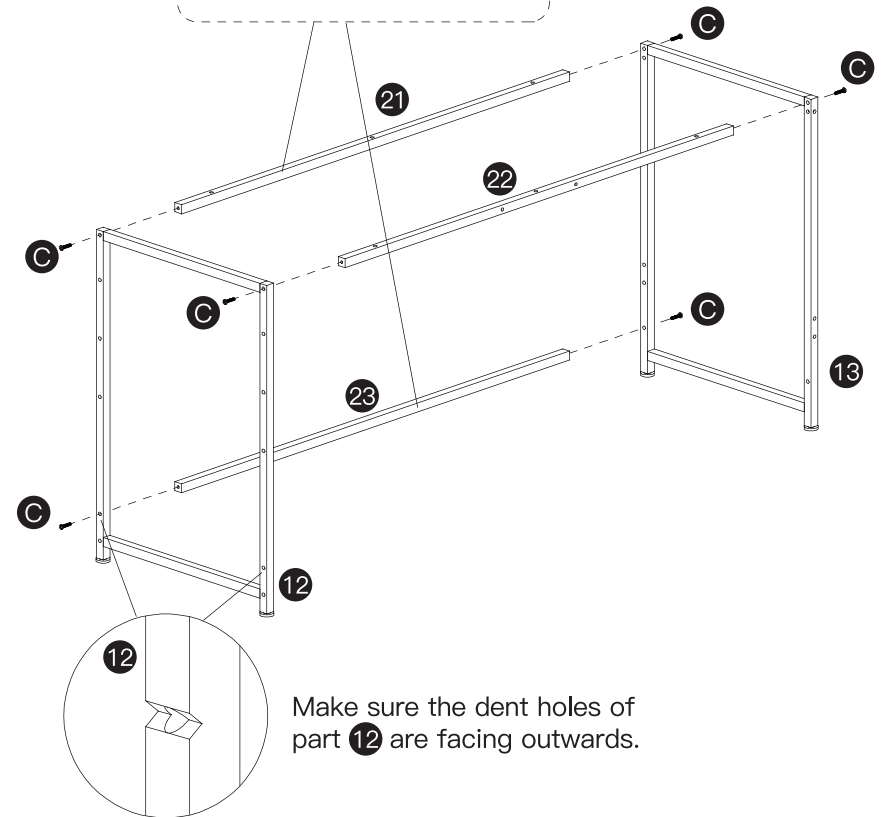

Make sure the dent holes of part **12** are facing outwards.



### Step 3

Connect part 12 and part 16 with part 18 & 28, use part C to screw them.

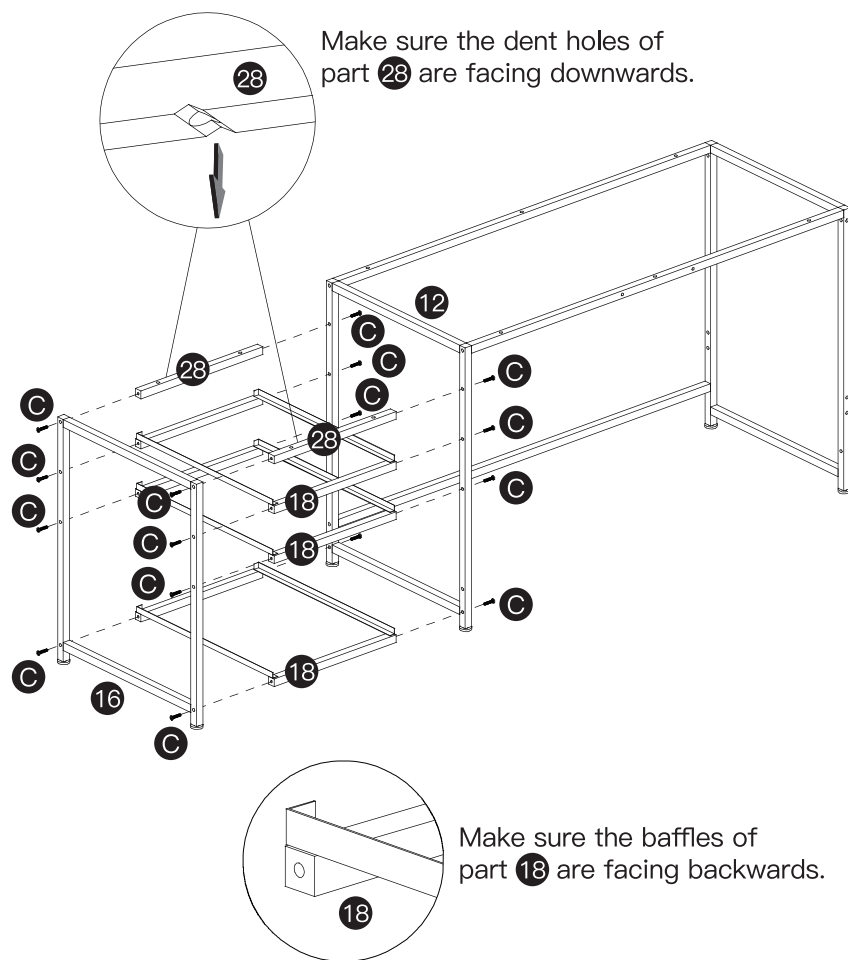
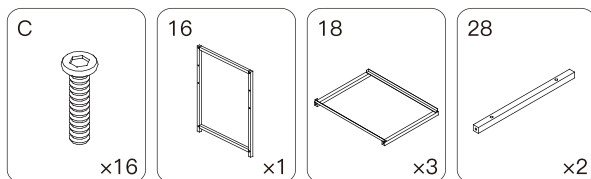


### Step 4


Install part 8 on part 28, use part B to screw them.

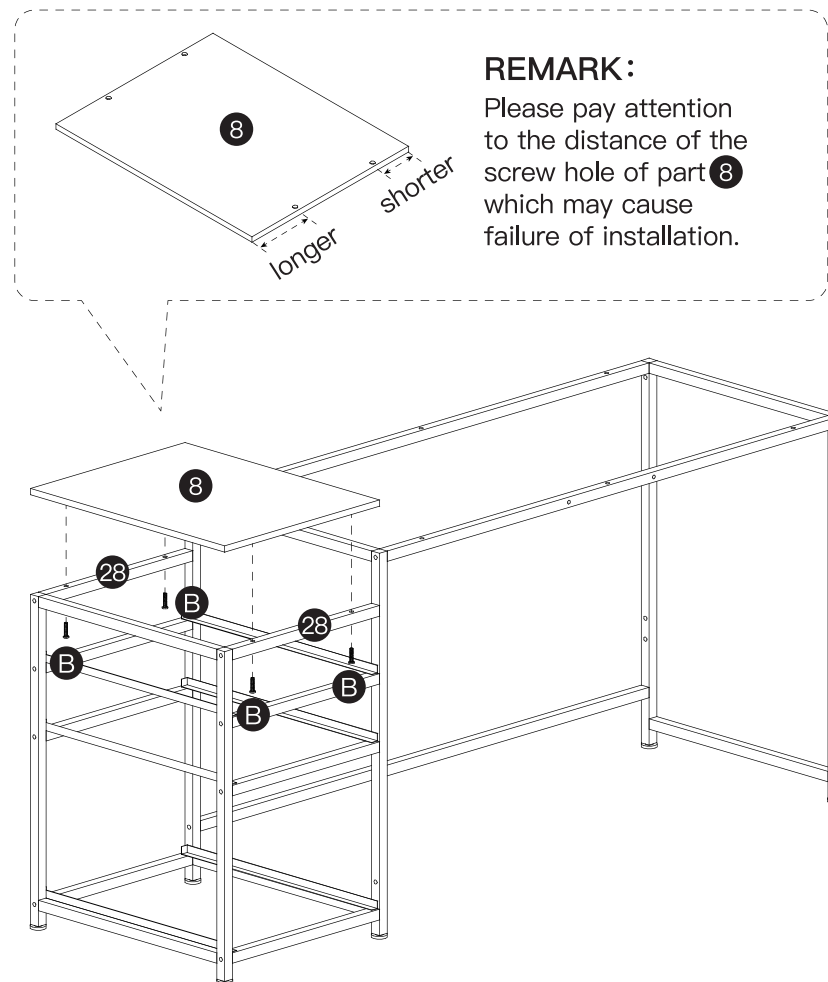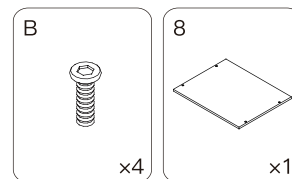



**Step 5** Install part 29 on part 7, use part C to screw them.

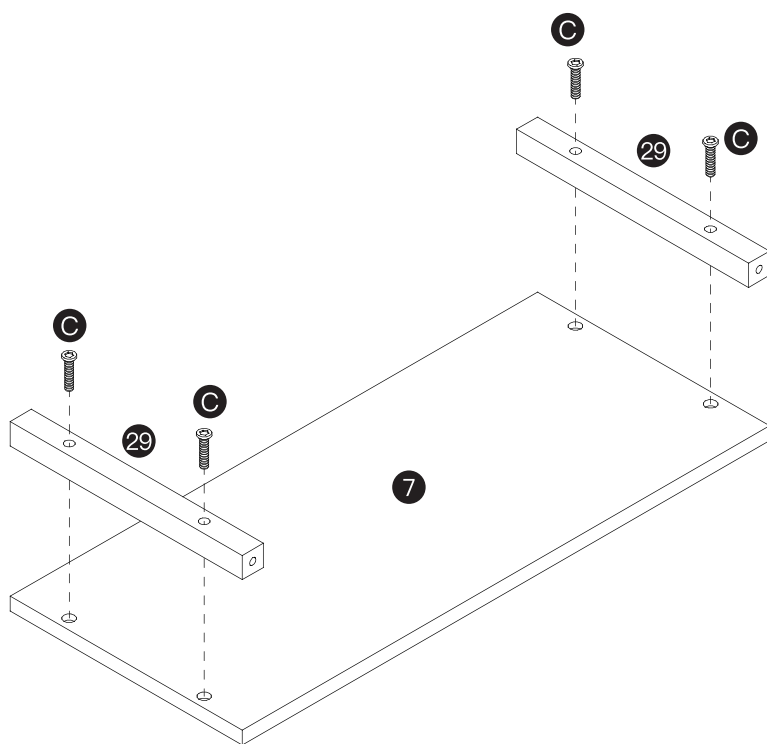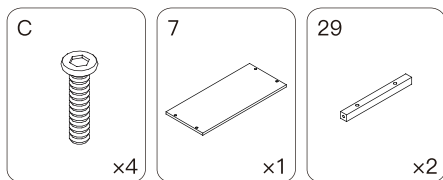

**Step 6** Connect part 15 and part 14 with part 6 & 7, use part C & D to screw them.

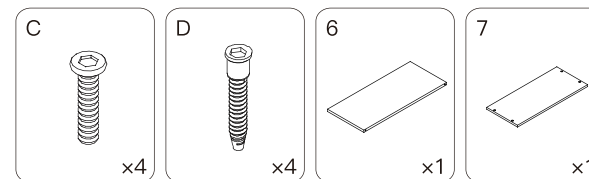



The hole faces outward

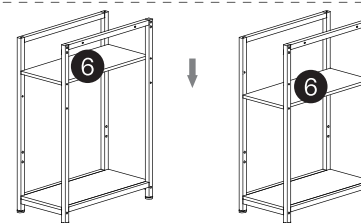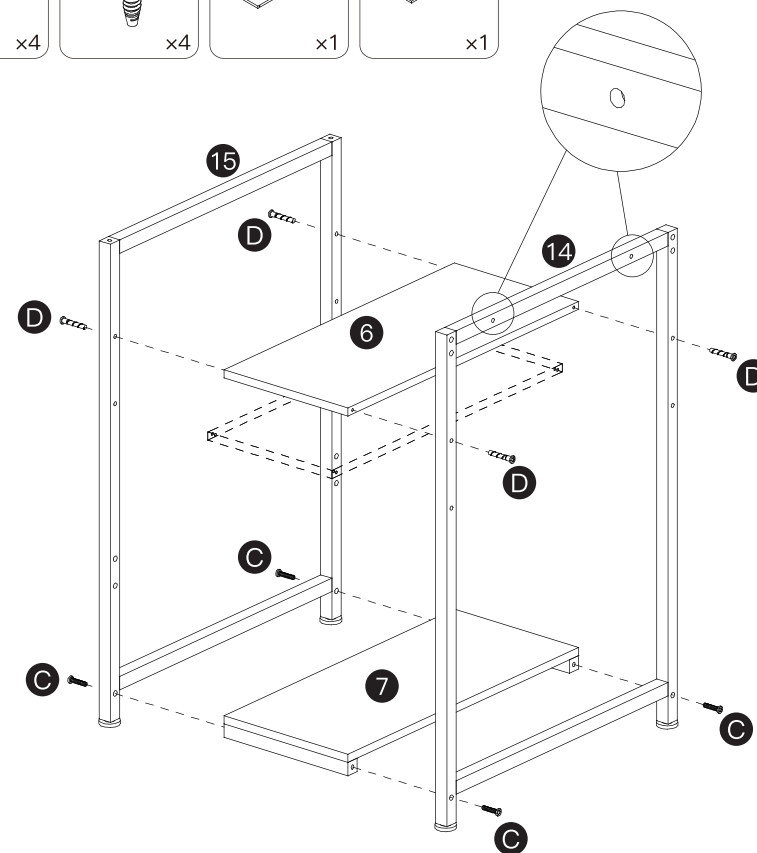

**REMARK:**  
The position of part 6 is adjustable according to your preference.



## Step 7

Connect the frames assembled previously with part 24 25 26, use part C & H to screw them.


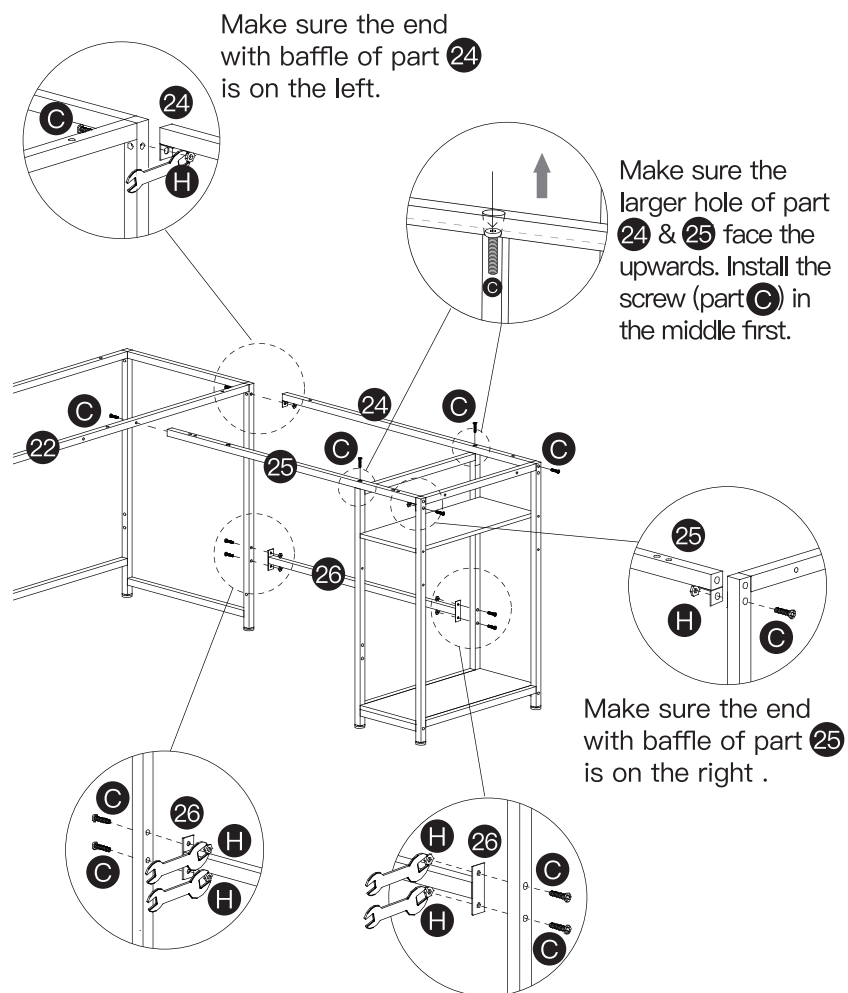
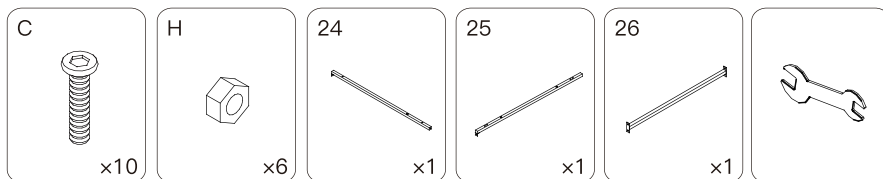


## Step 8



Install part 1 and part 2 on the top of the frame, use part C to screw them.

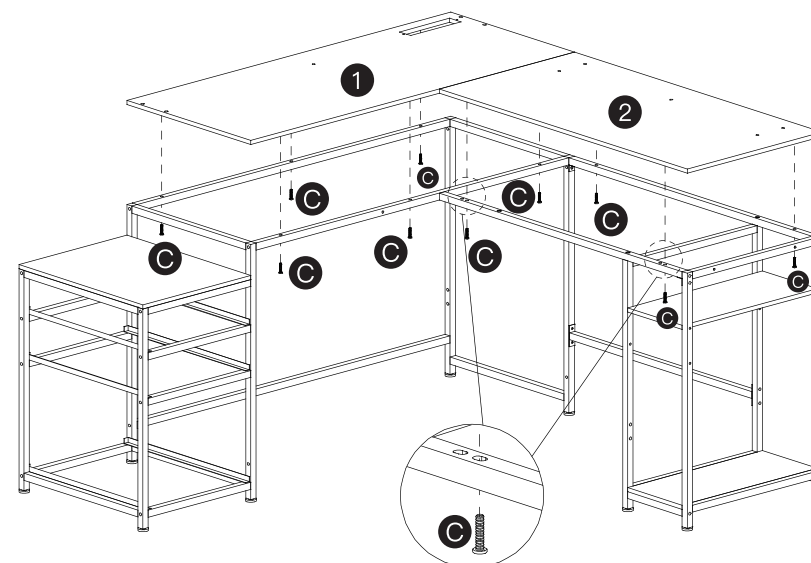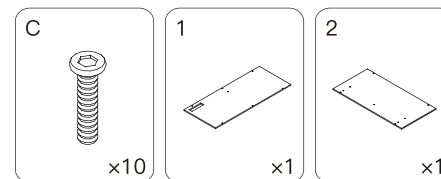



**Step 9** Install part 34 on part 1, use part E to screw them.

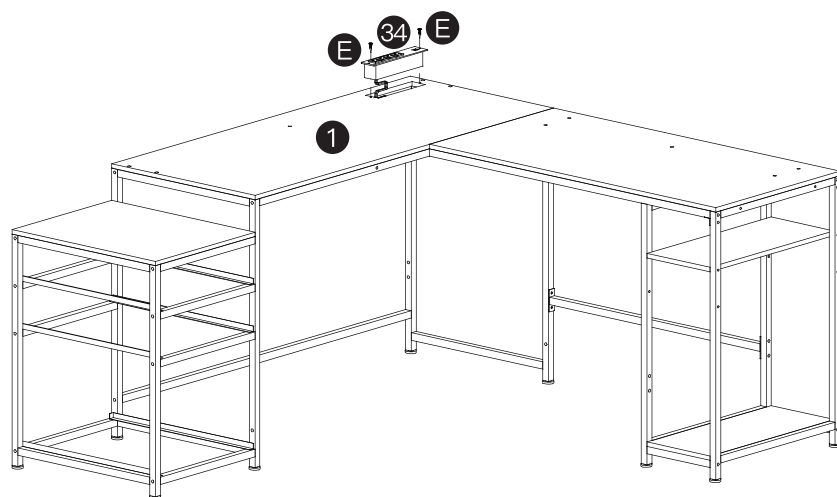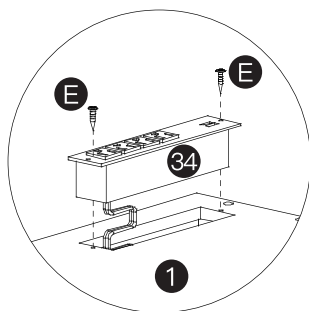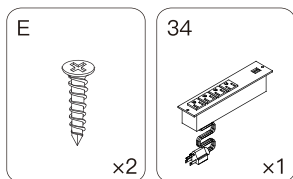



**Step 10** Install part 17 on part 1, use part C to screw them.

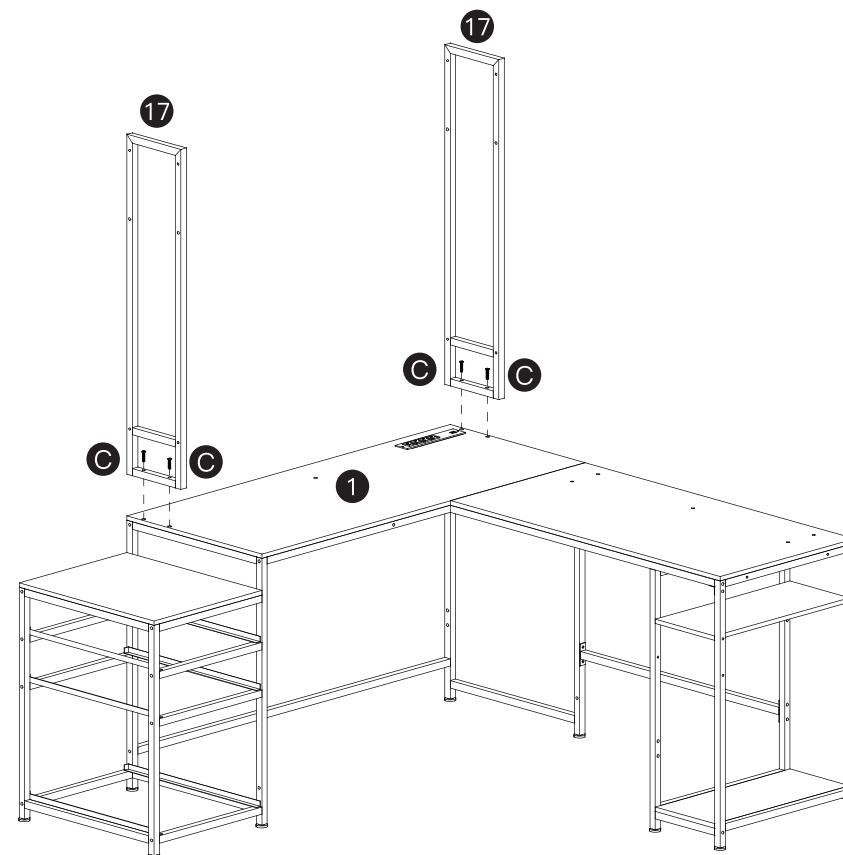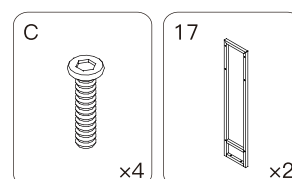

**Step 11** Connect part 17 with part 27, use part C to screw them.

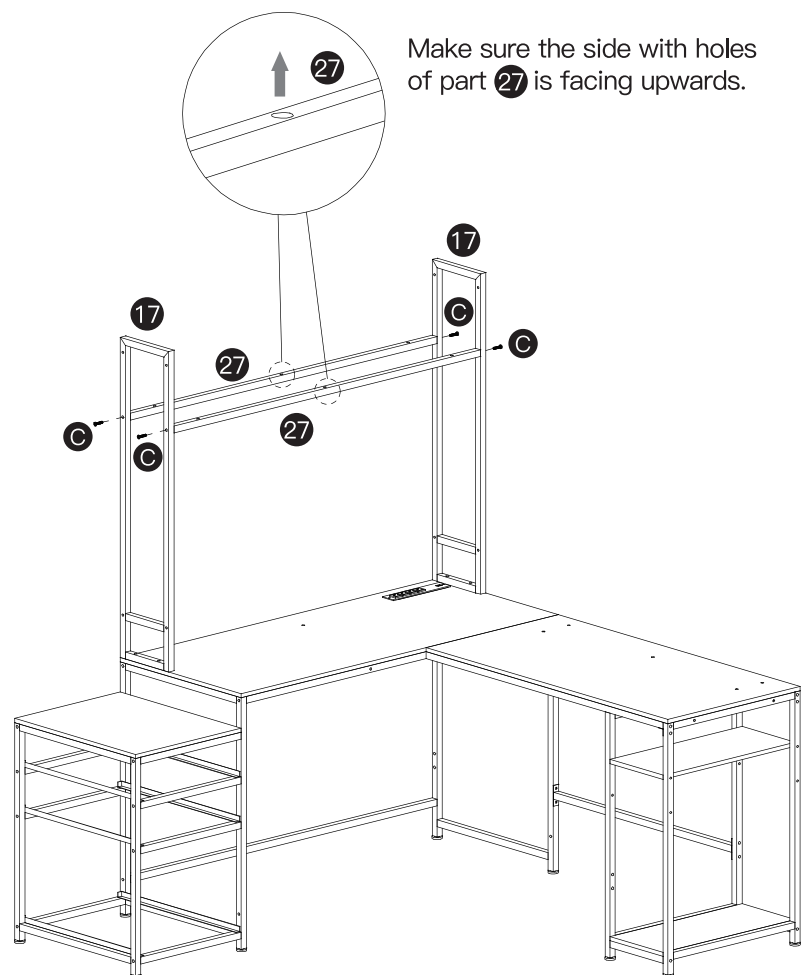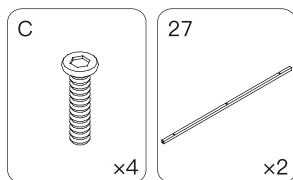



**Step 12** Connect part 3 and part 4 with part 5, use part D to screw them.

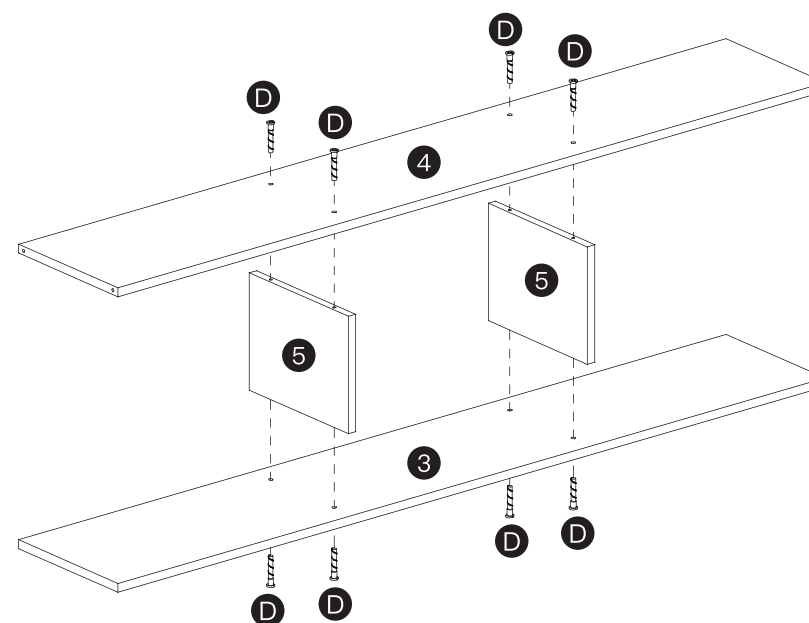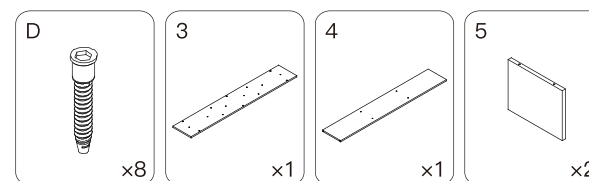





### Step 13

Install the part of last step on the frame, use part **C** and **D** to screw them.

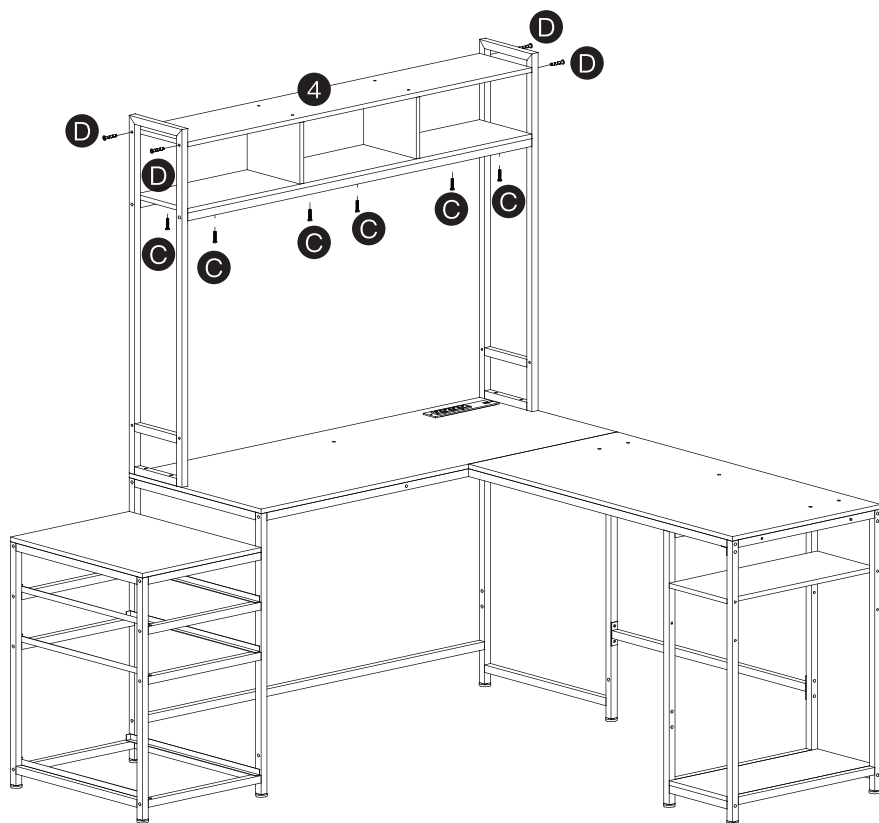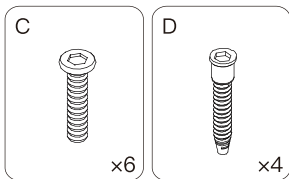


### Step 14

Install part **19** on part **9**, use part **C** to screw them.

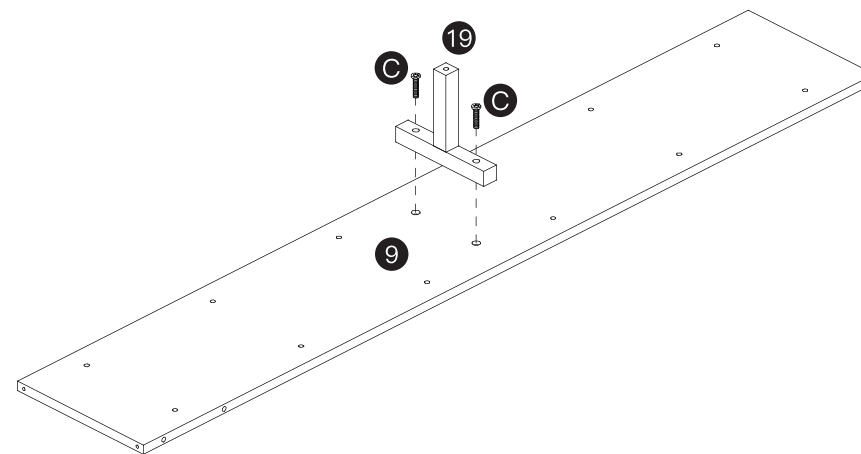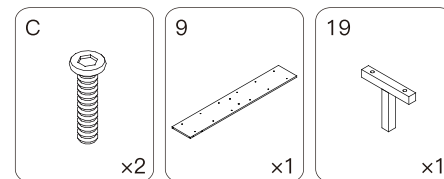


## Step 15

Connect part 17 with part 9, use part C & D to screw them.


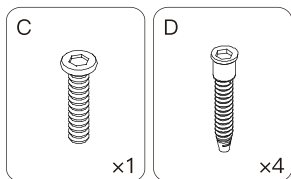


Make sure the hole of part 9 is on the right side.

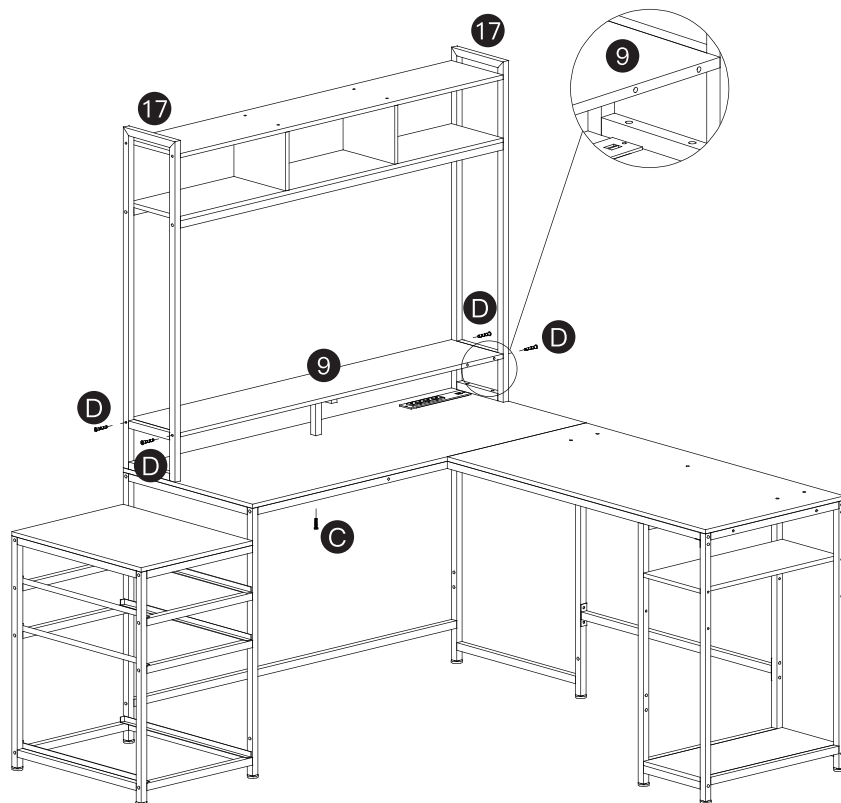



## Step 16

Install part 19 on part 11, use part C to screw them.

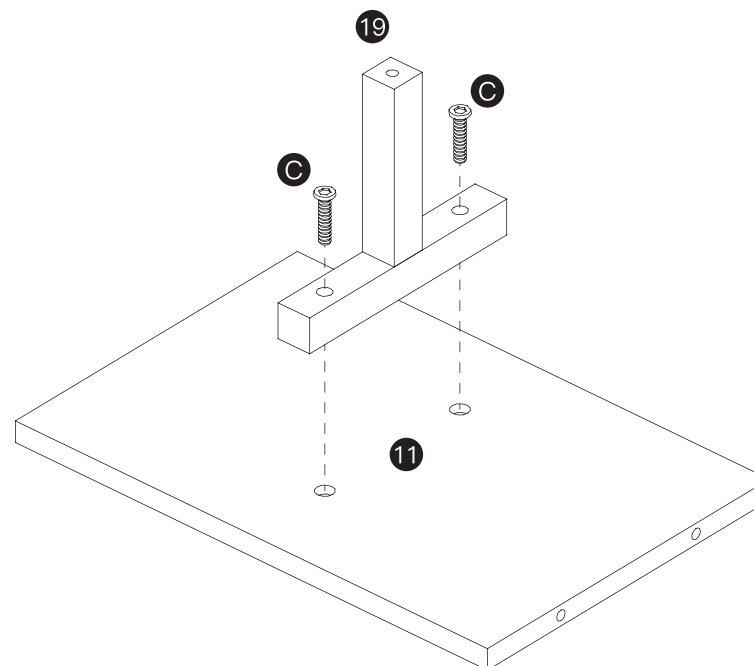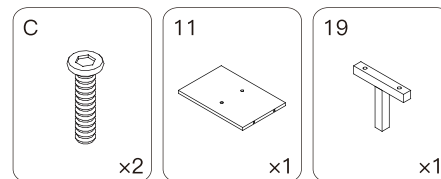






## Step 17

Connect part 9 and part 11 with part G.

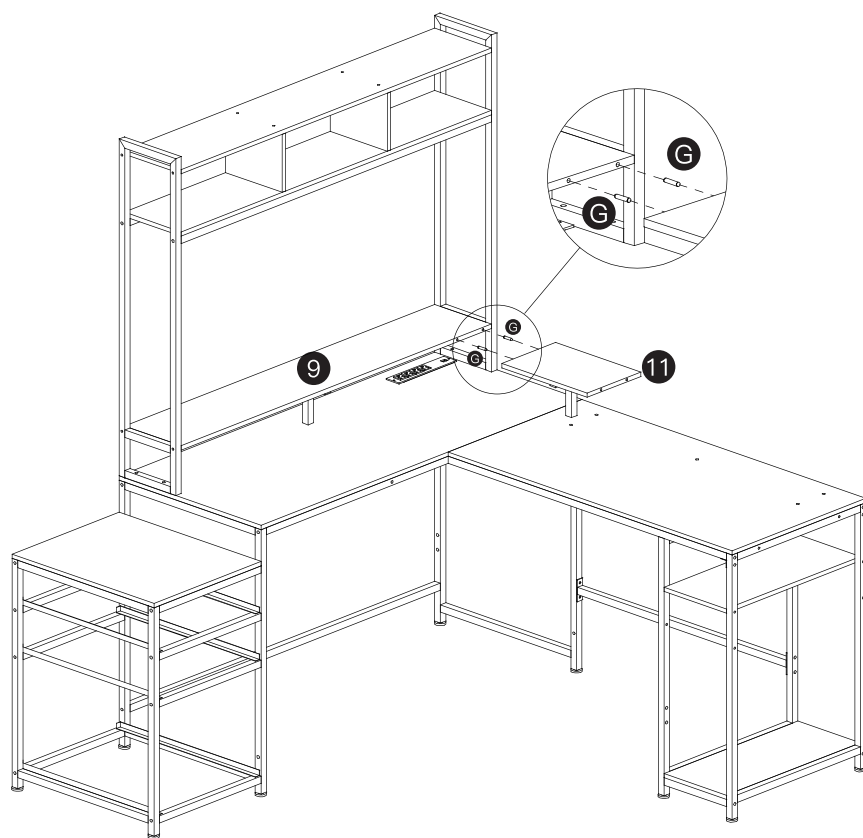
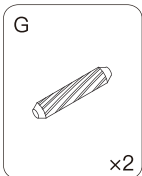


## Step 18



Install part 19 and part 20 on part 10, use part C to screw them.

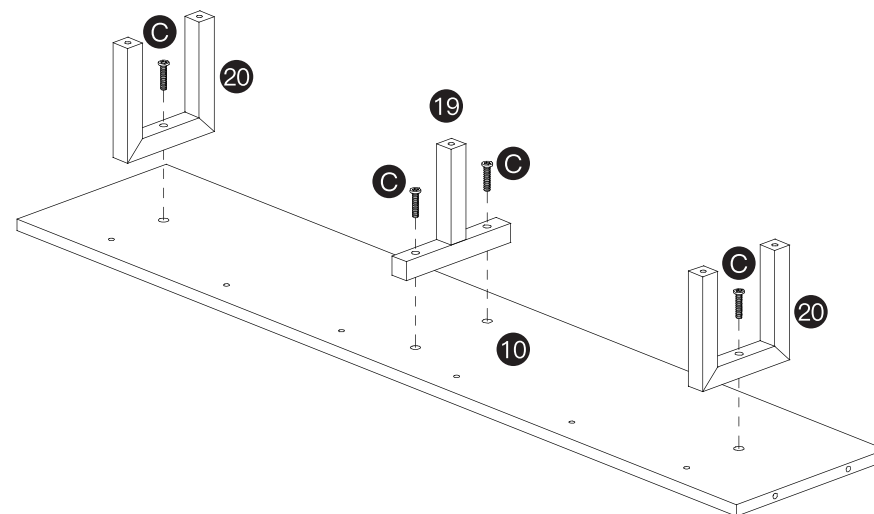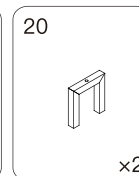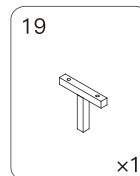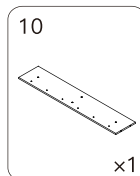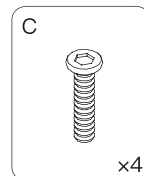

**Step 19** Connect part 10 and part 11 with part G.

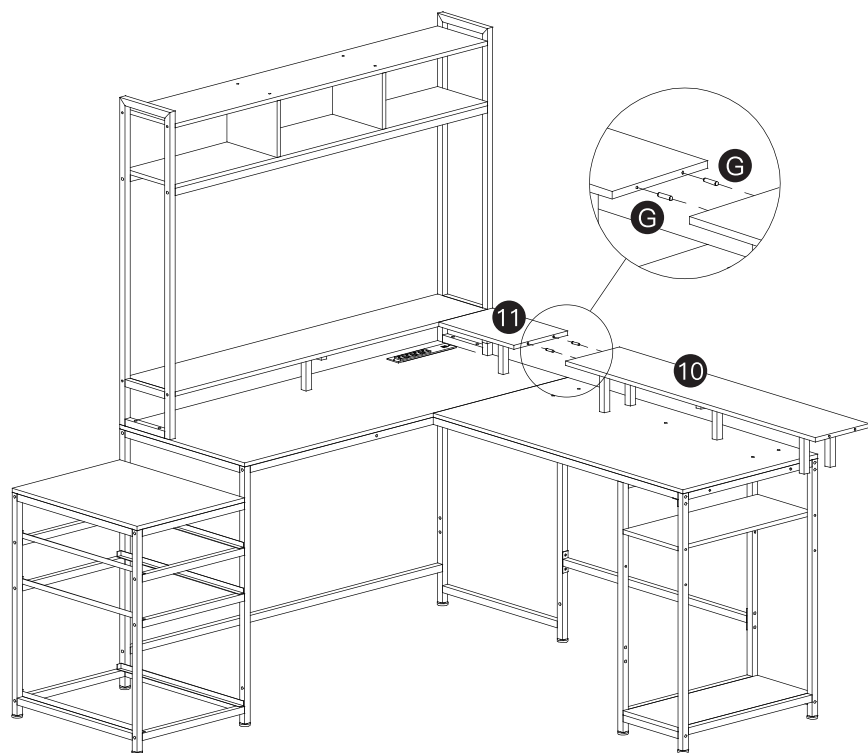
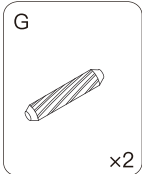


**Step 20** Use part C to fix part 10.

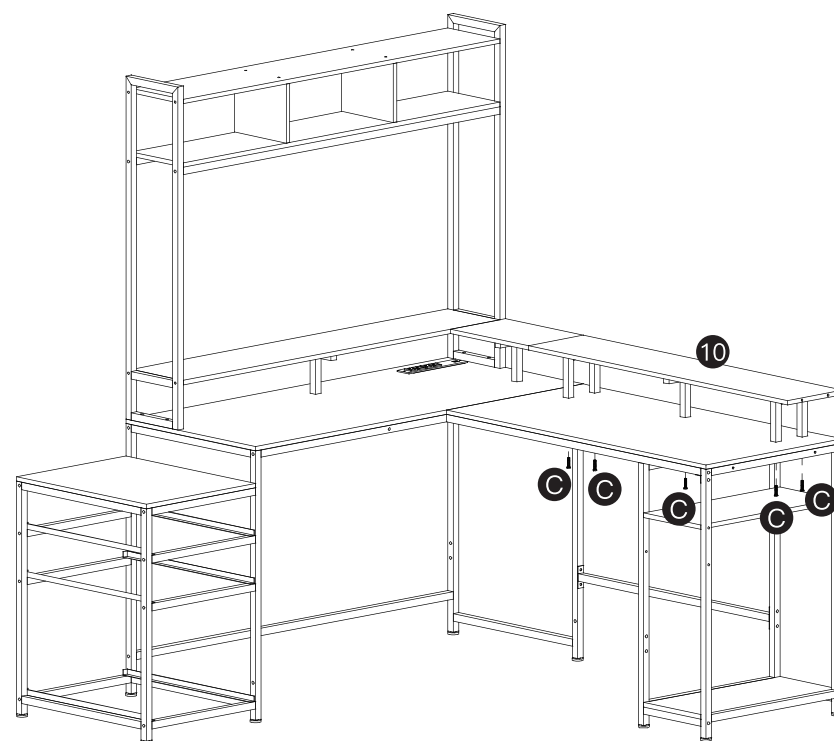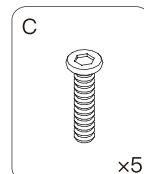



## Step 21

Connect part 32 with part A & H to form two X-Shape parts.

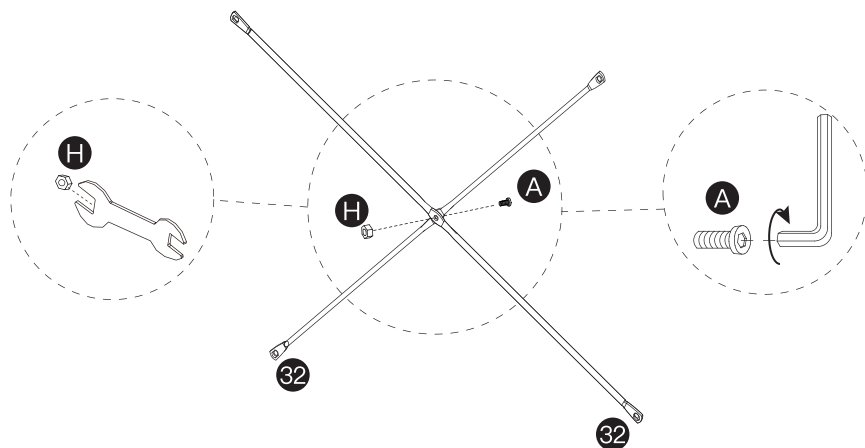
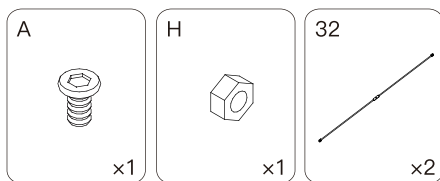


## Step 22




Attach the X-shape parts to the back of the frame, use part A to lock them in.

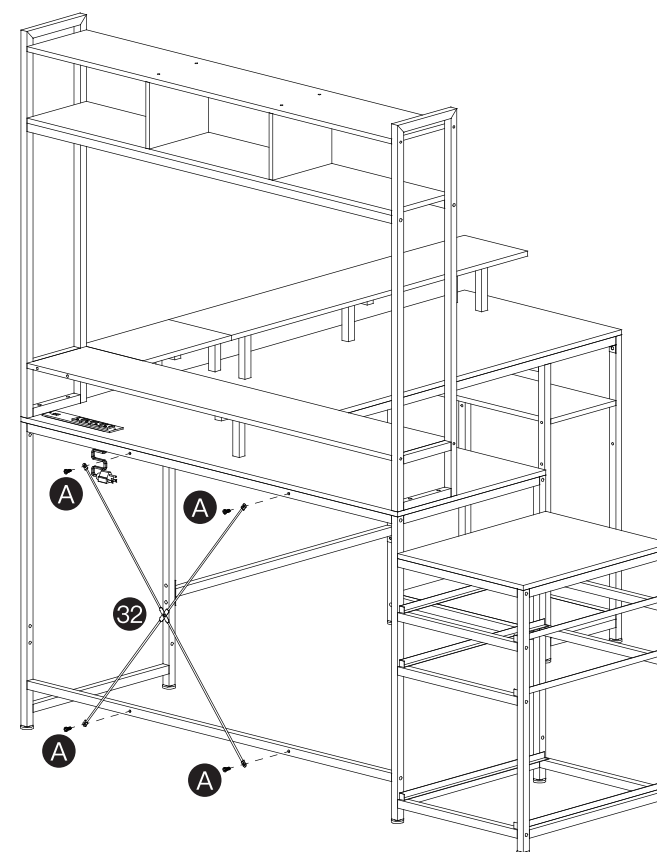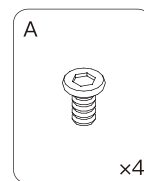

**Step 23** Install part 33 on part 14, use part A to screw them.

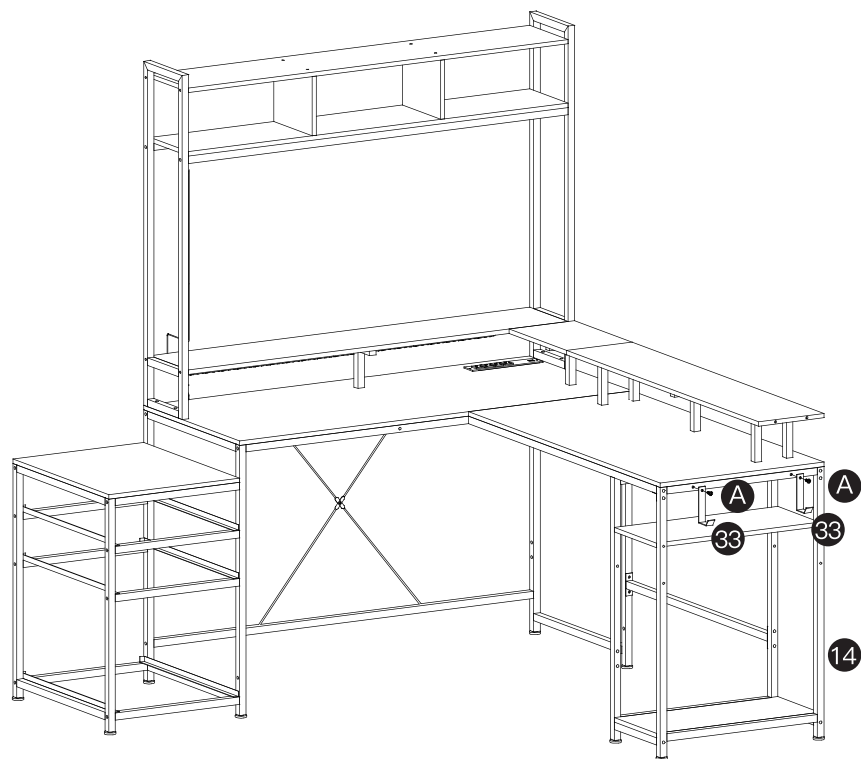
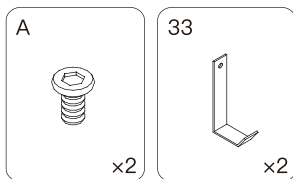


**Step 24** Open the drawers (part 36 & 37) and put the support boards inside, and install part K on with part F.

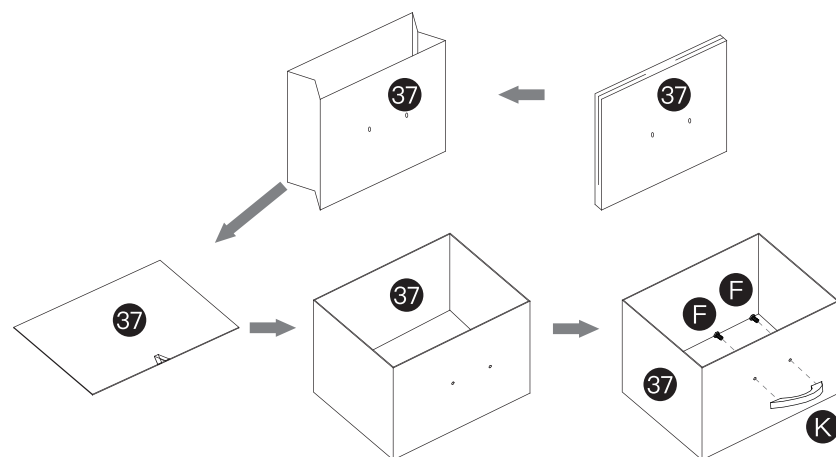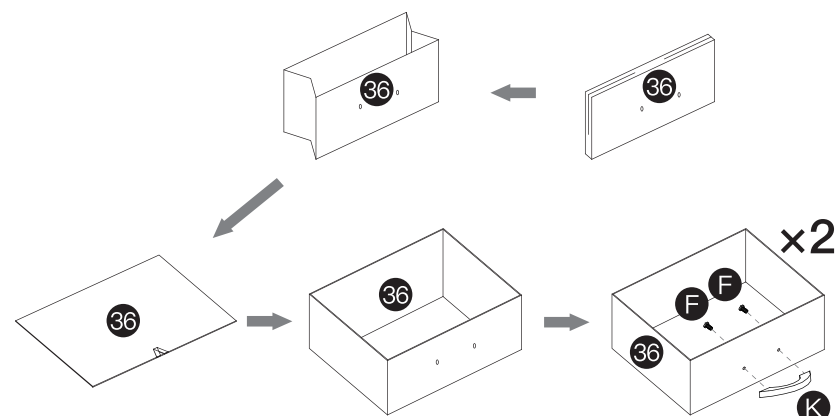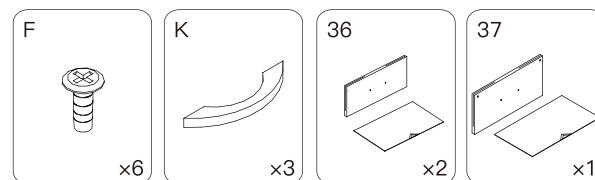


## Step 25

Install part 30 on part 37, use part A & H to screw them. Then put part 31 on part 30.

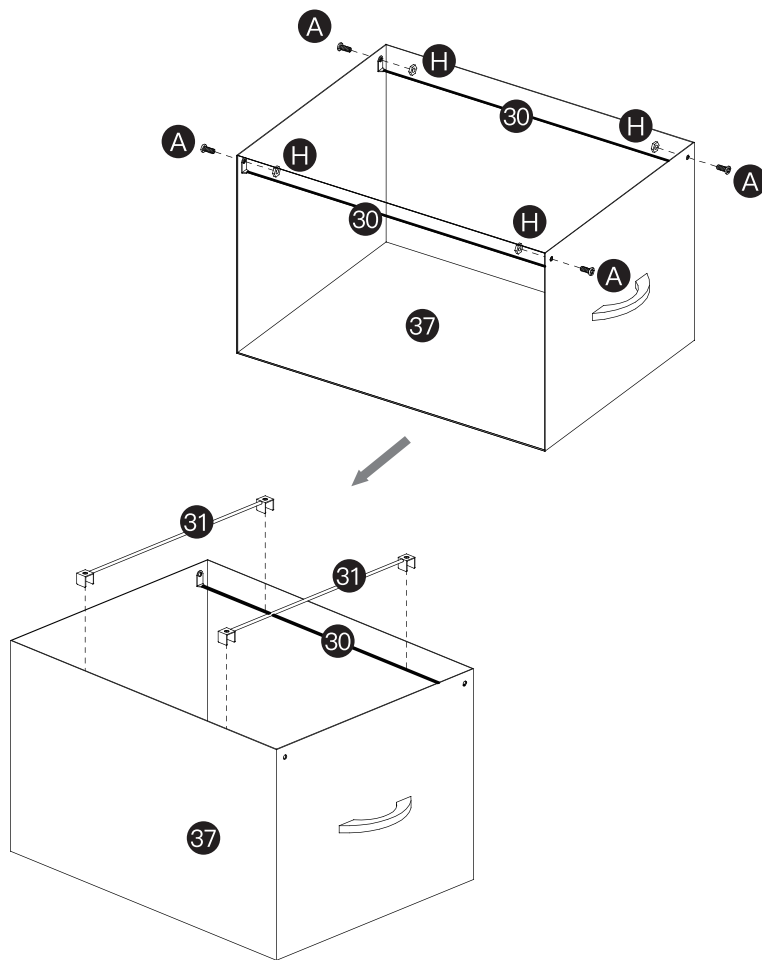
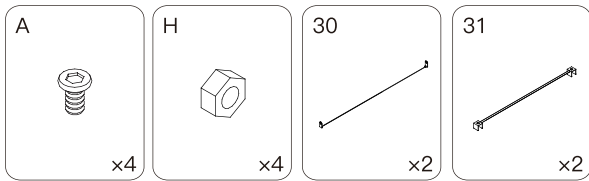


## Step 26

Put all drawers in.

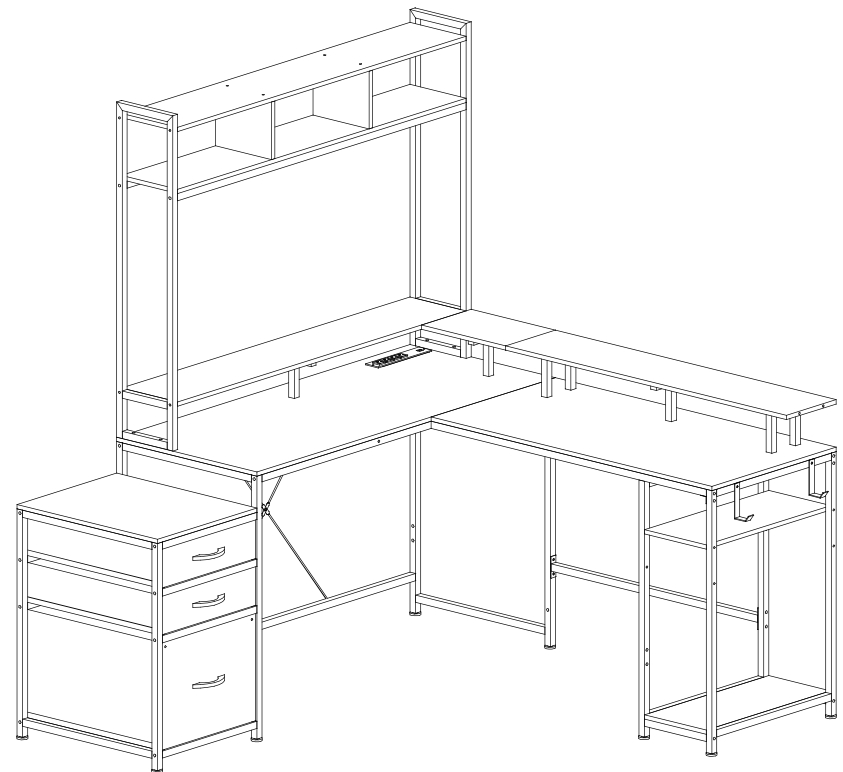


**Step 27** (Optional) Install the anti-tip device (part **M**).

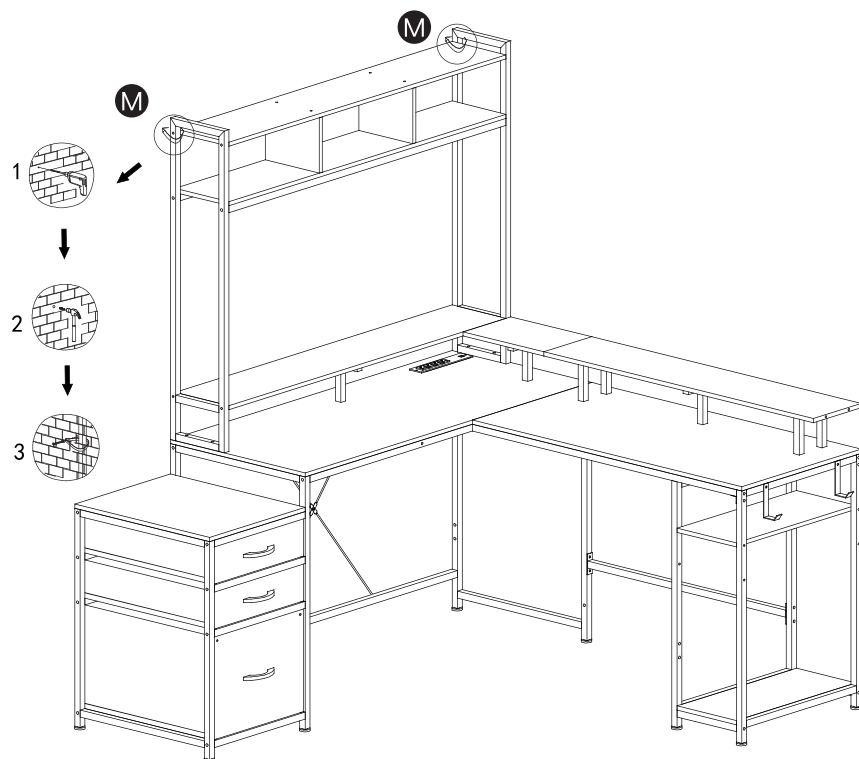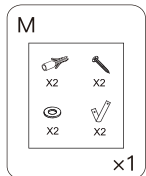

## TYPE B HOW TO INSTALL


**Step 1** Install part **J** on part **12 13 14 15 16**.

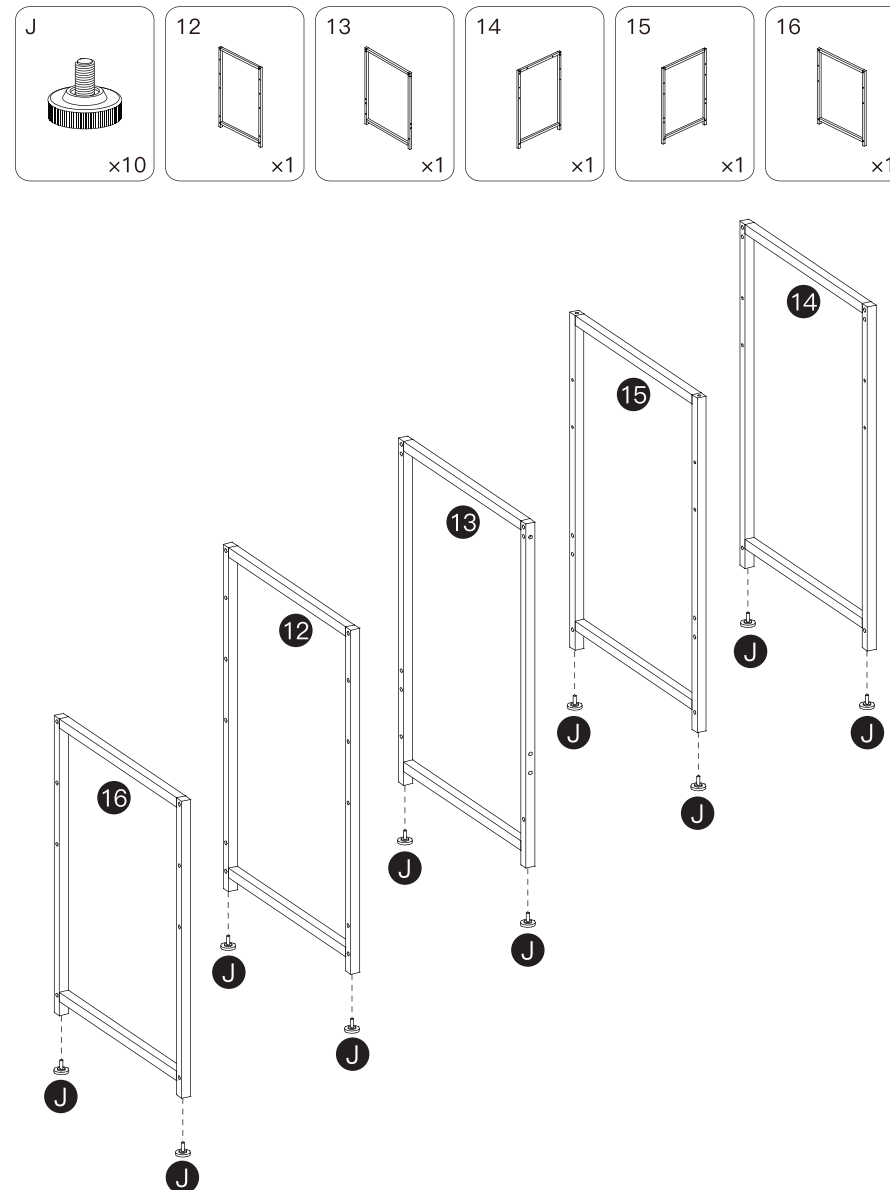




## Step 2

Connect part 12 and part 13 with part 21 & 22 & 23, use part C to screw them.

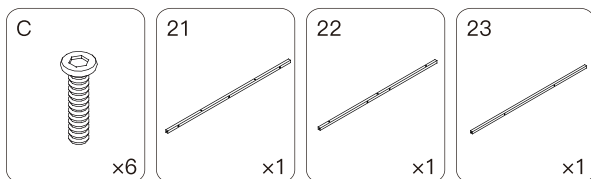


### REMARK:

Make sure the side without holes face the front.

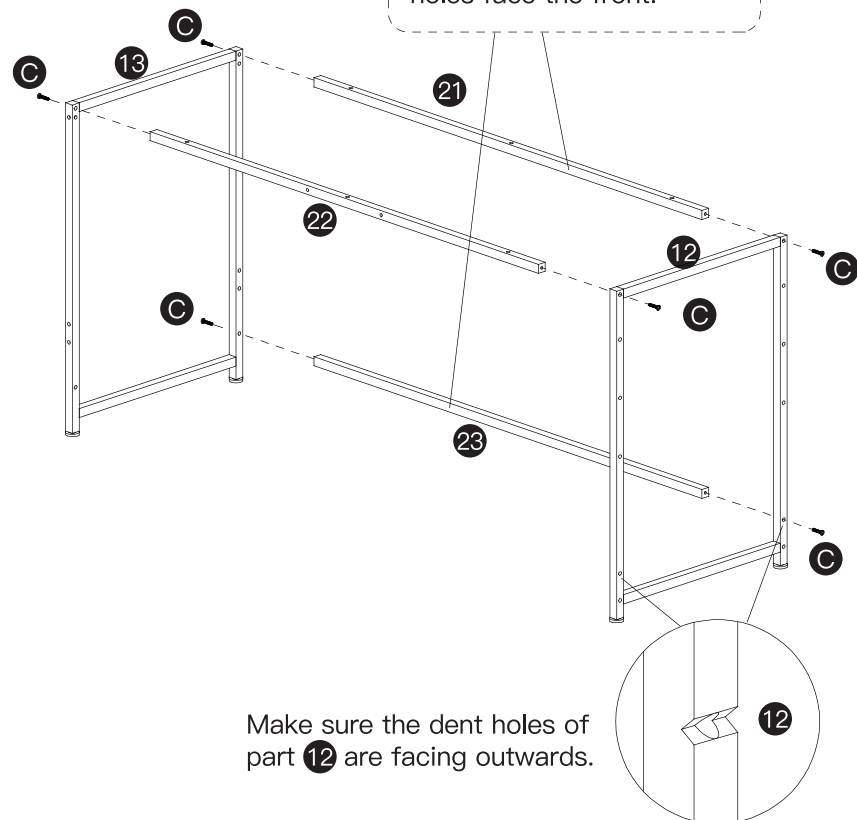


## Step 3


Connect part 12 and part 16 with part 18 & 28, use part C to screw them.

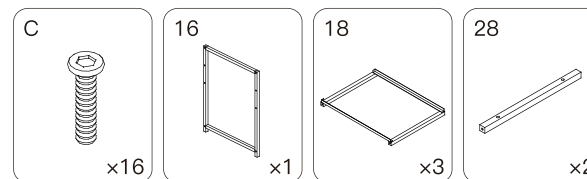

Make sure the dent holes of part 28 are facing downwards.


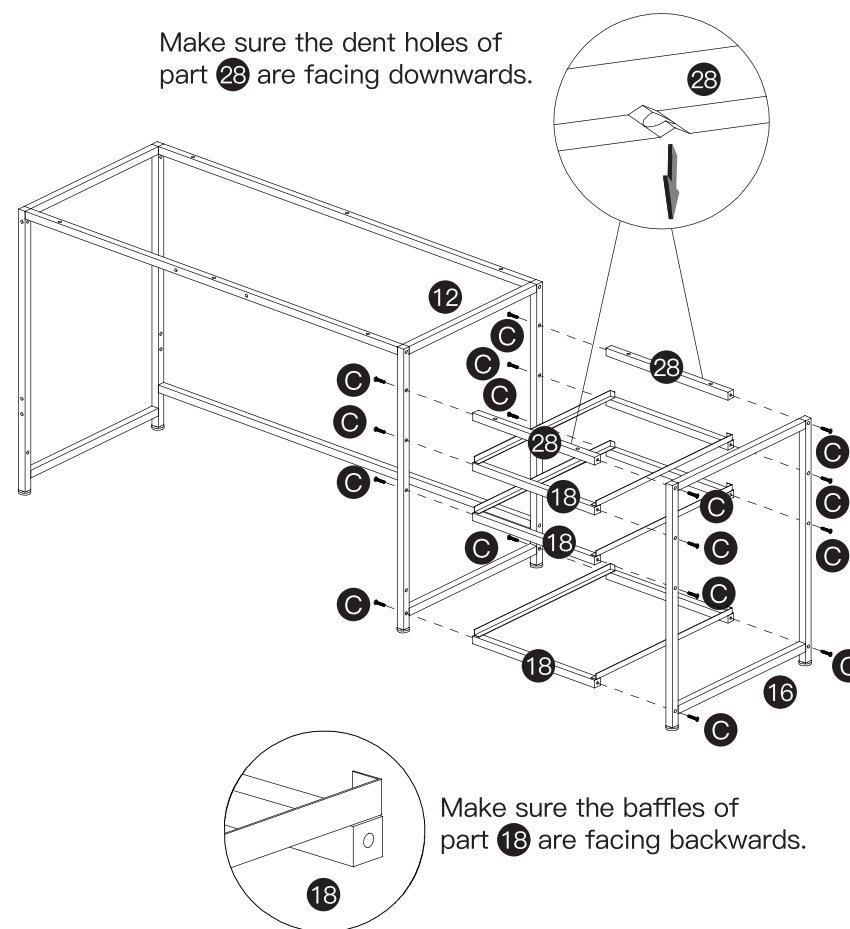


**Step 4** Install part 8 on part 28, use part B to screw them.


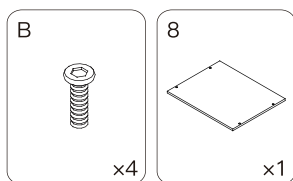


**REMARK:**

Please pay attention to the distance of the screw hole of part 8 which may cause failure of installation.


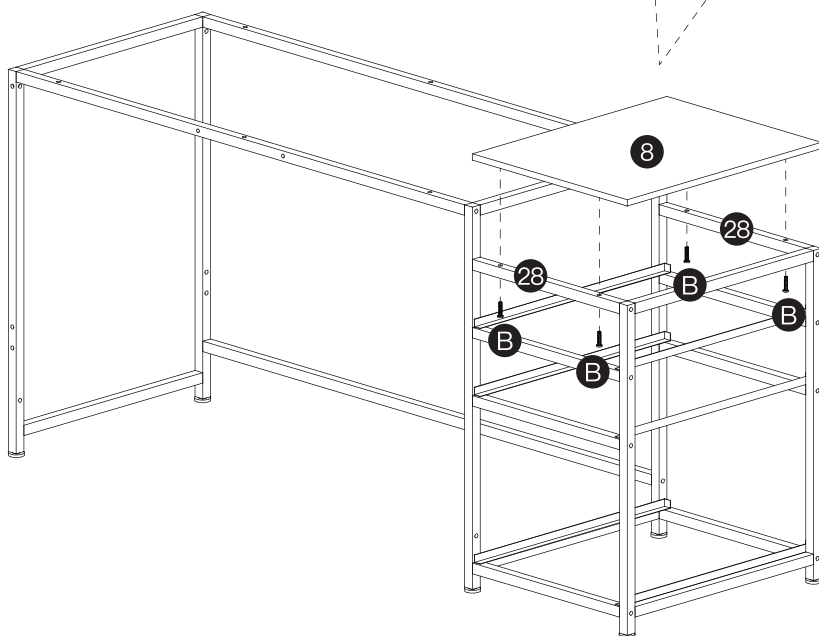
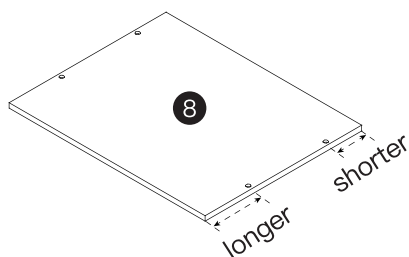


**Step 5** Install part 29 on part 7, use part C to screw them.

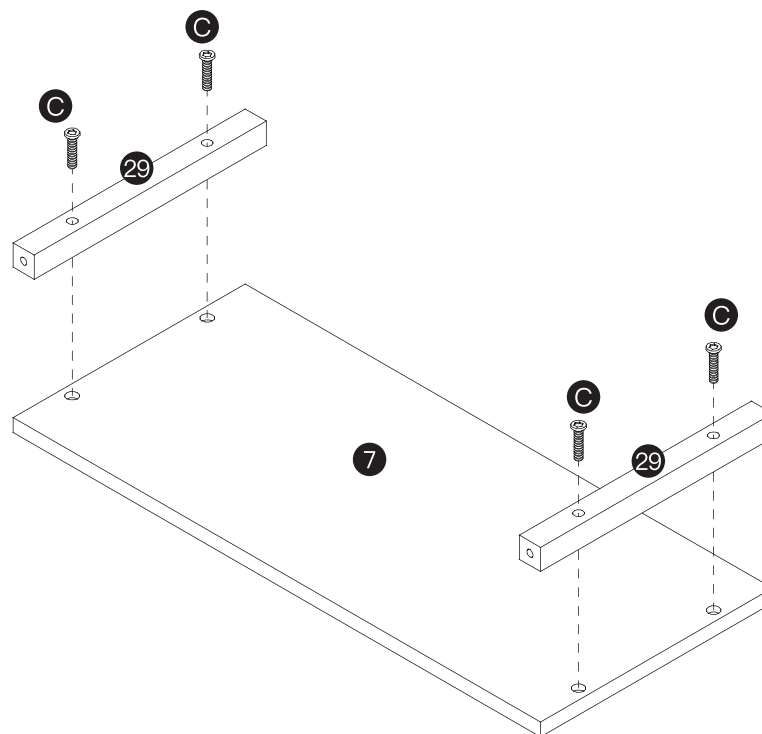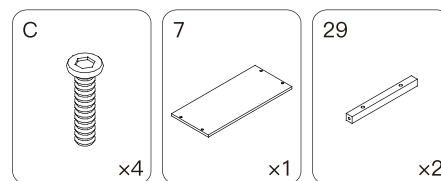

## Step 6

Connect part 15 and part 14 with part 6 & 7, use part C & D to screw them.

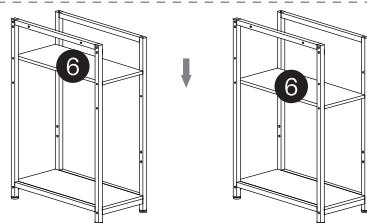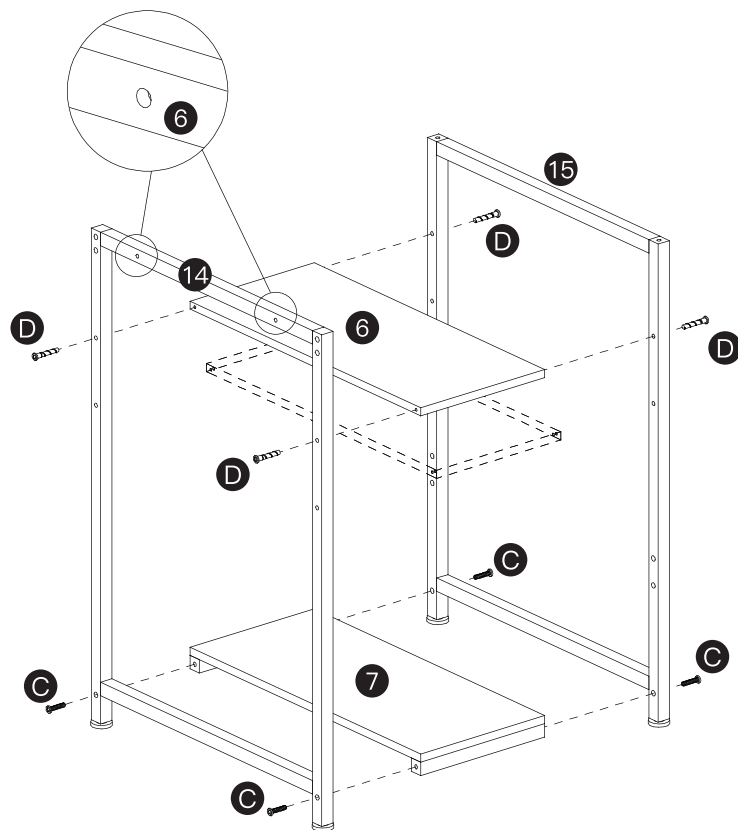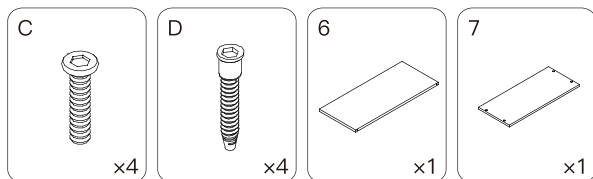


### REMARK:

The position of part 6 is adjustable according to your preference.


## Step 7

Connect the frames assembled previously with part 24, 25, 26, use part C & H to screw them.

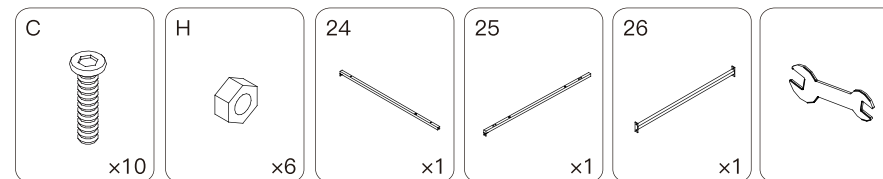

Make sure the end with baffle of part 24 is on the right.



Make sure the larger hole of part 24 & 25 face the upwards. Install the screw (part C) in the middle first.

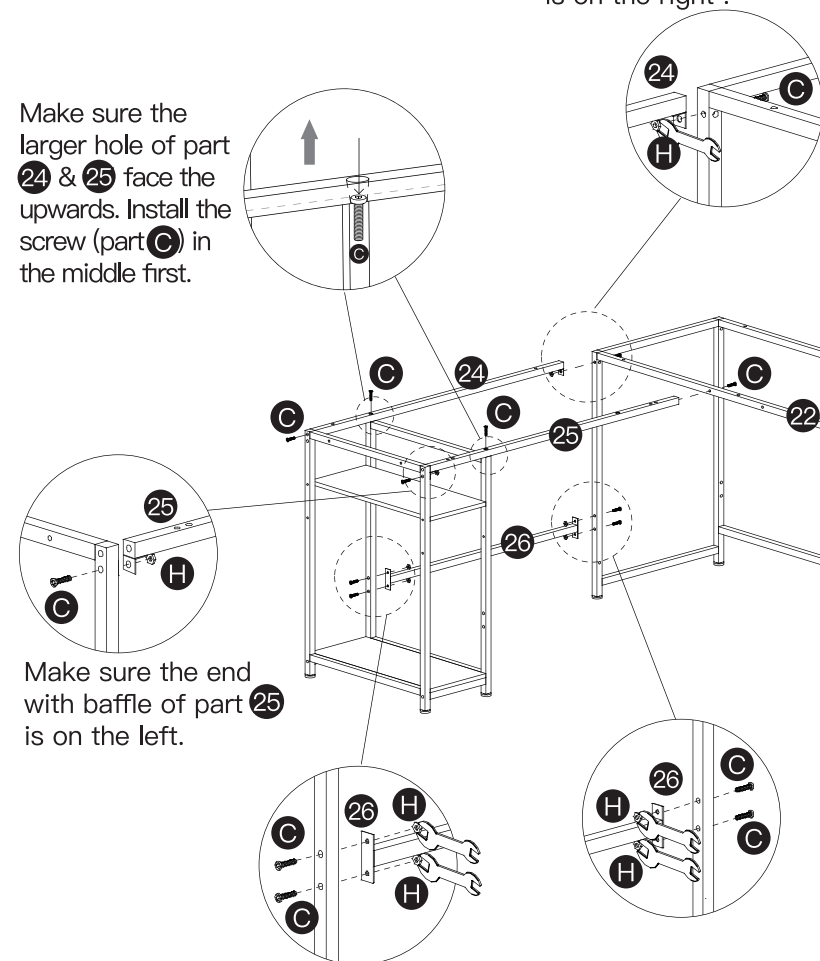

Make sure the end with baffle of part 25 is on the left.

## Step 8




Install part **1** and part **2** on the top of the frame, use part **C** to screw them.

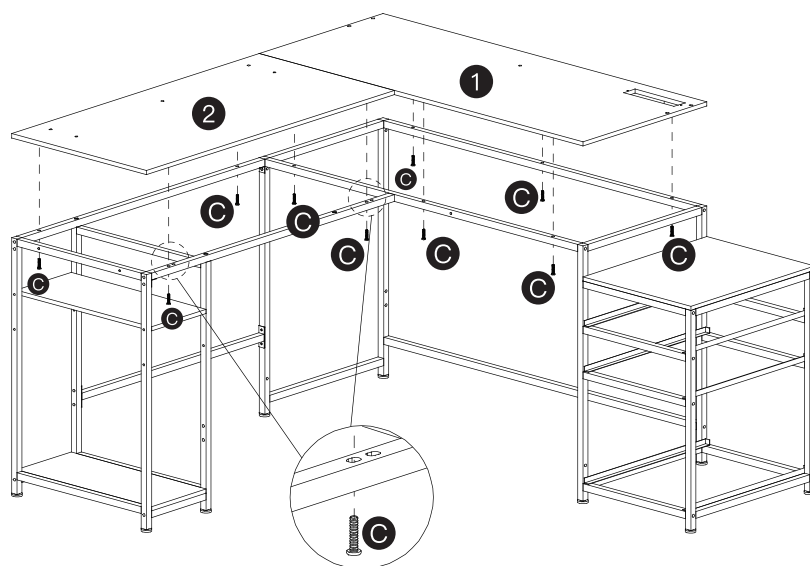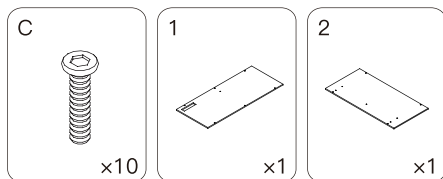



Make sure these screws are through the holes on the left side.

## Step 9


Install part **34** on part **1**, use part **E** to screw them.

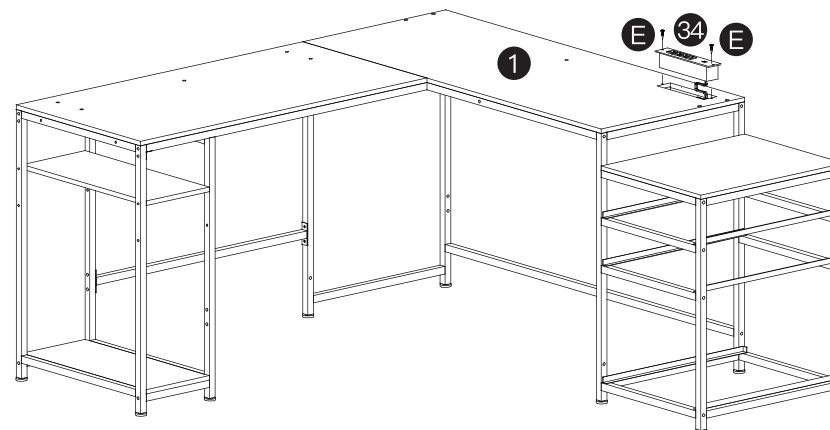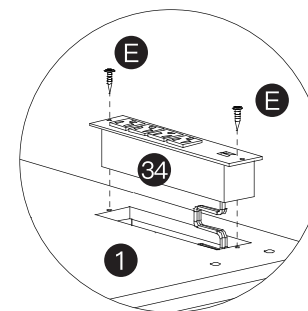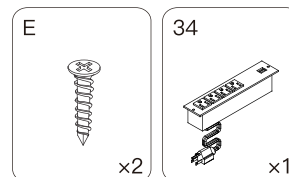


**Step 10** Install part 17 on part 1, use part C to screw them.

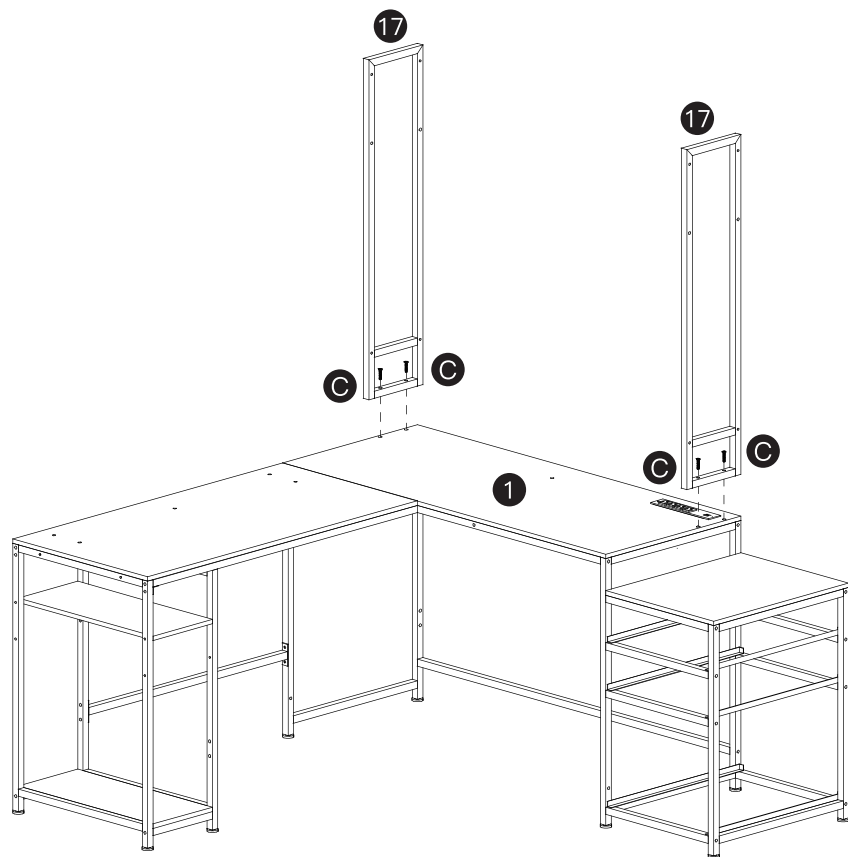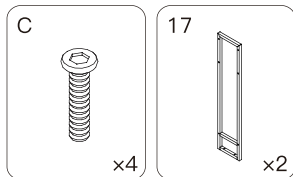

**Step 11** Connect part 17 with part 27, use part C to screw them.


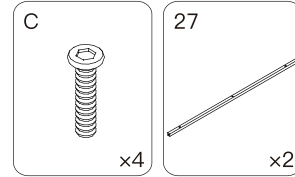


Make sure the side with holes of part 27 is facing upwards.

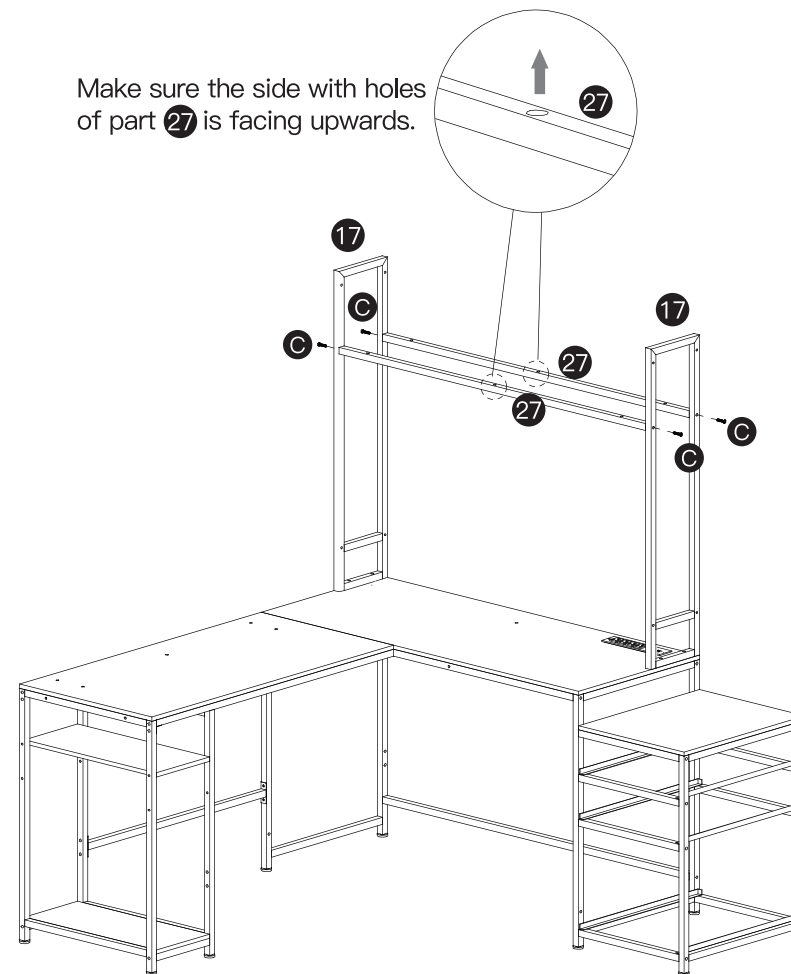



## Step 12

Connect part ③ and part ④ with part ⑤, use part ① to screw them.

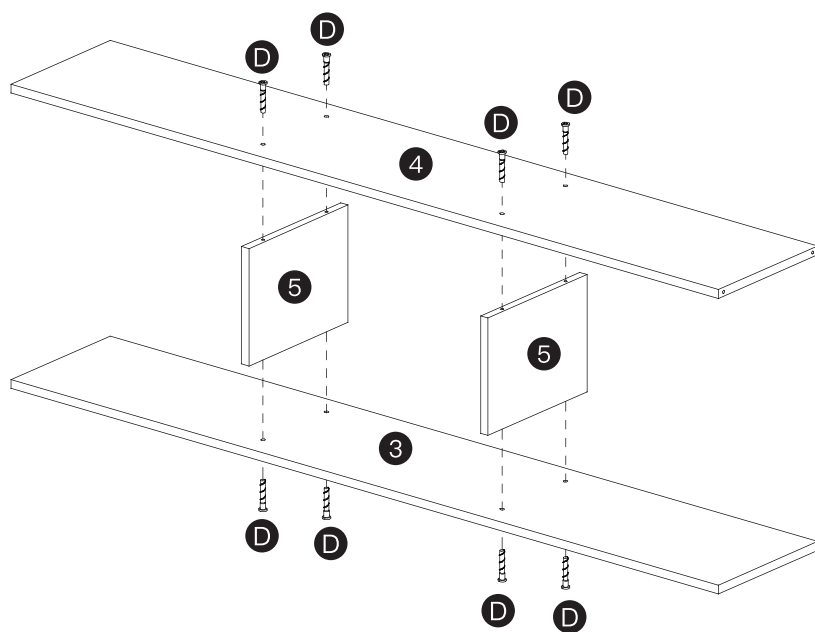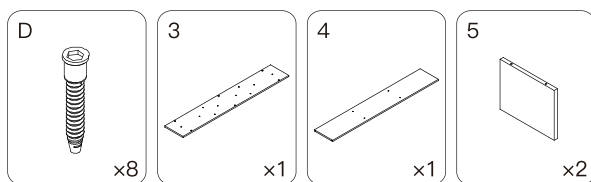



## Step 13

Install the part of last step on the frame, use part ② and ① to screw them.

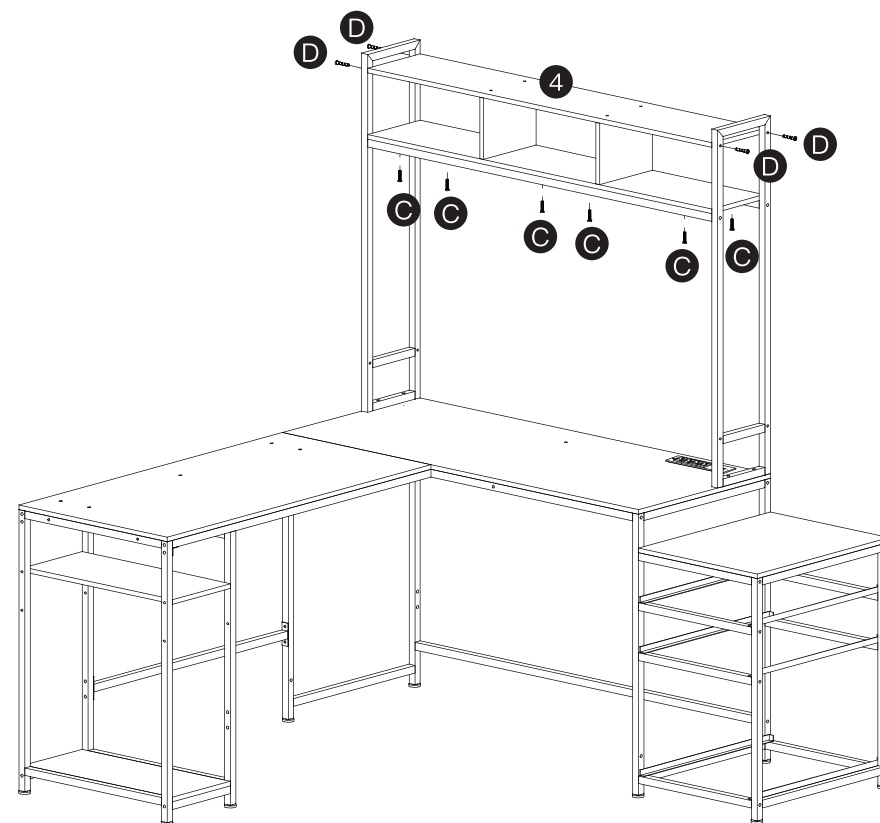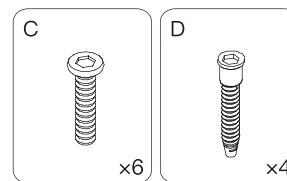



### Step 14

Install part 19 on part 9, use part C to screw them.

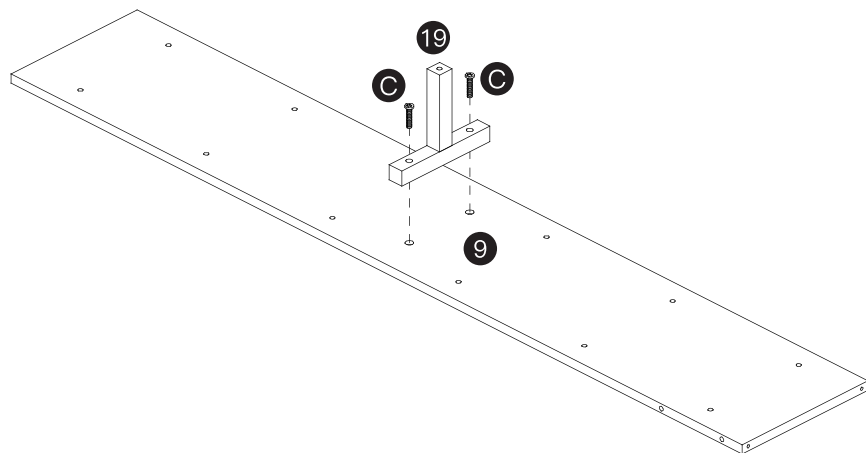
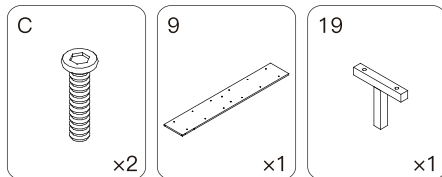


### Step 15



Connect part 17 with part 9, use part C & D to screw them.

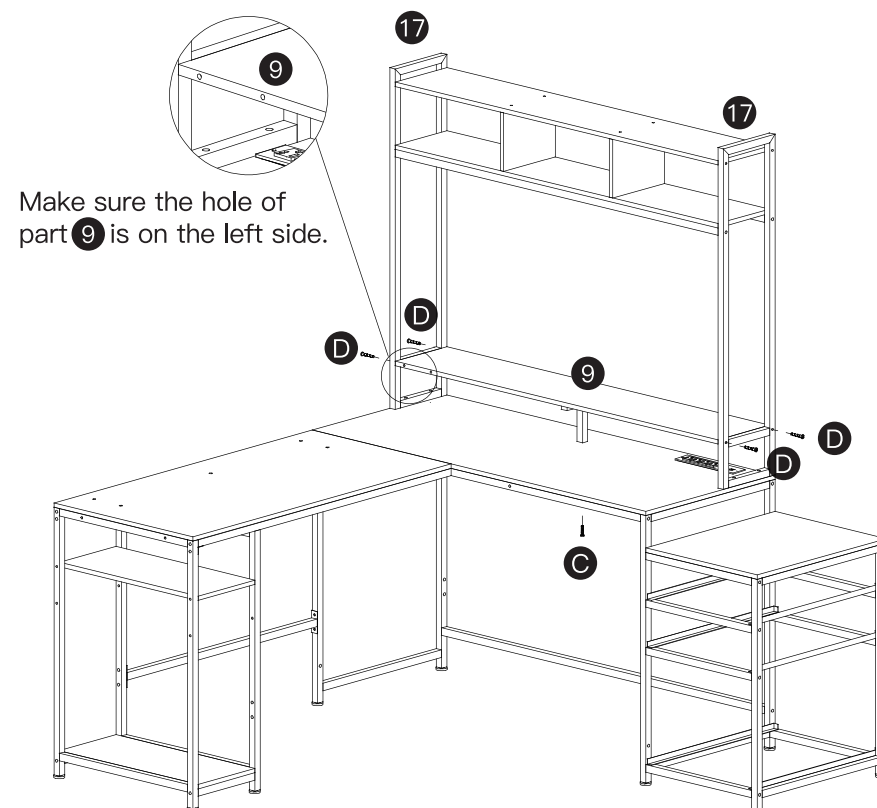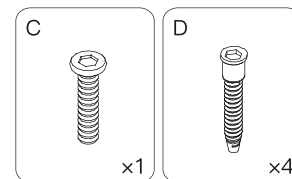

**Step 16** Install part 19 on part 11, use part C to screw them.

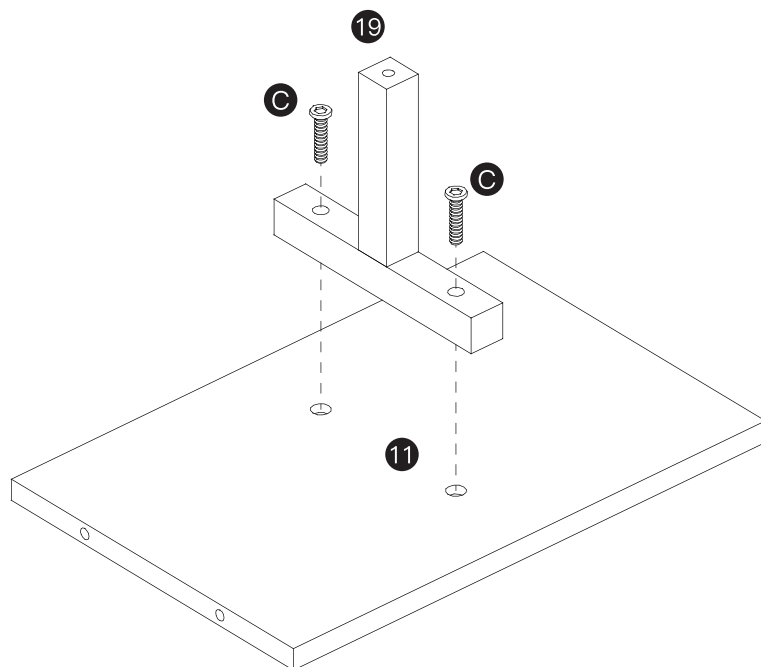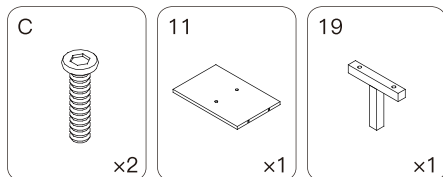



**Step 17** Connect part 9 and part 11 with part G.

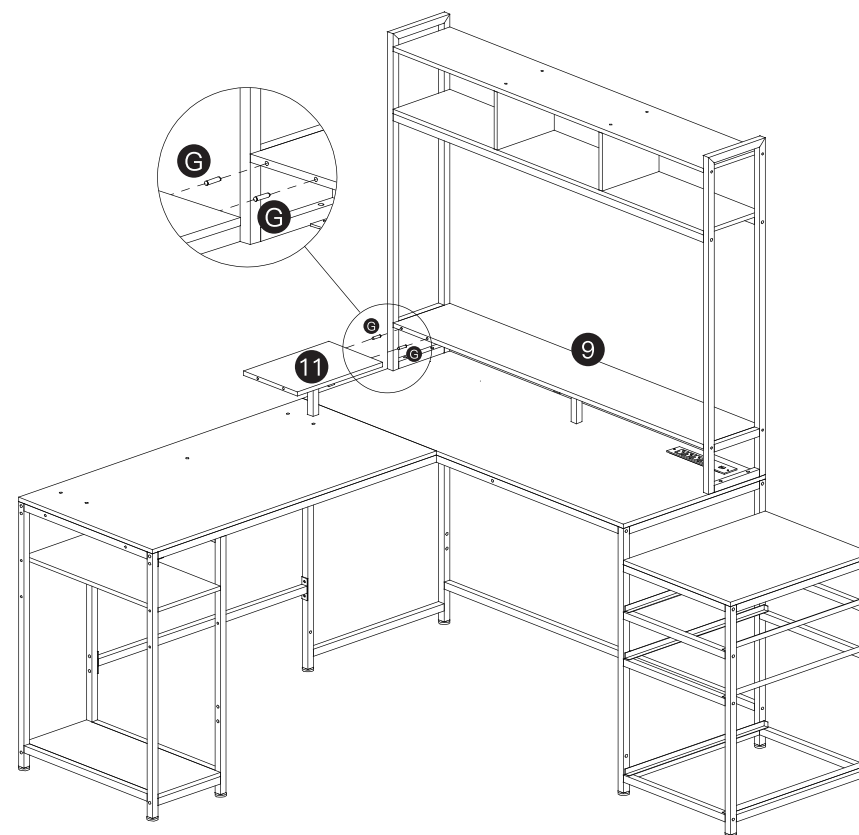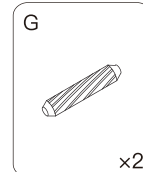





## Step 18

Install part 19 and part 20 on part 10, use part C to screw them.

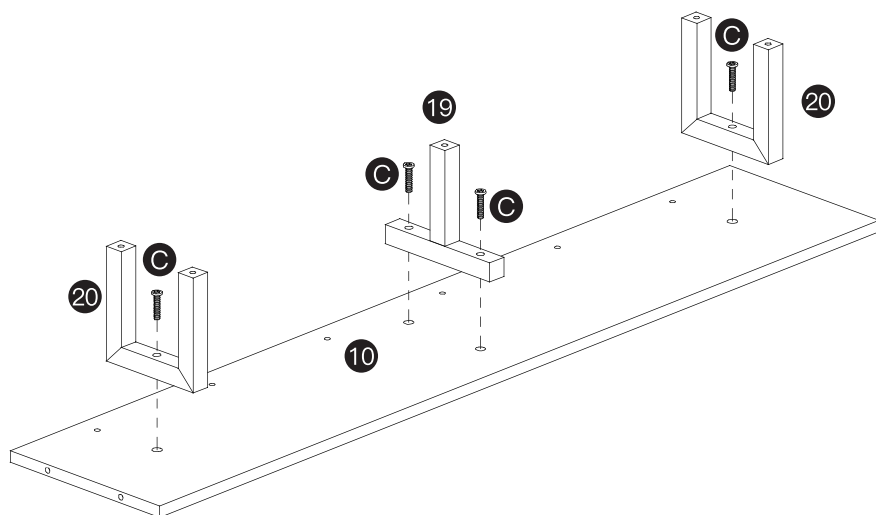
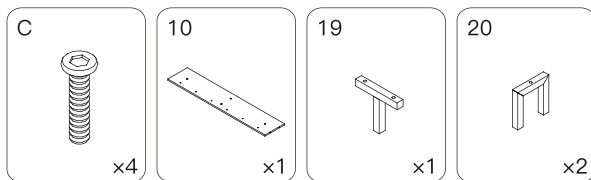


## Step 19





Connect part 10 and part 11 with part G.

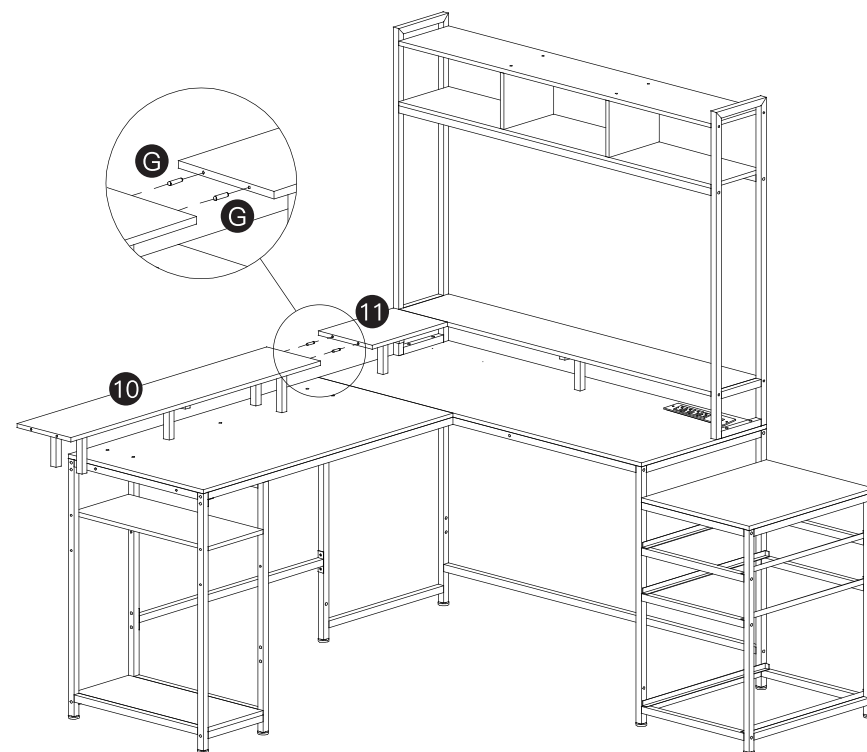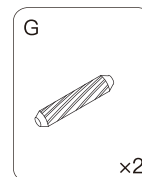

## Step 20 Use part **C** to fix part **10**.

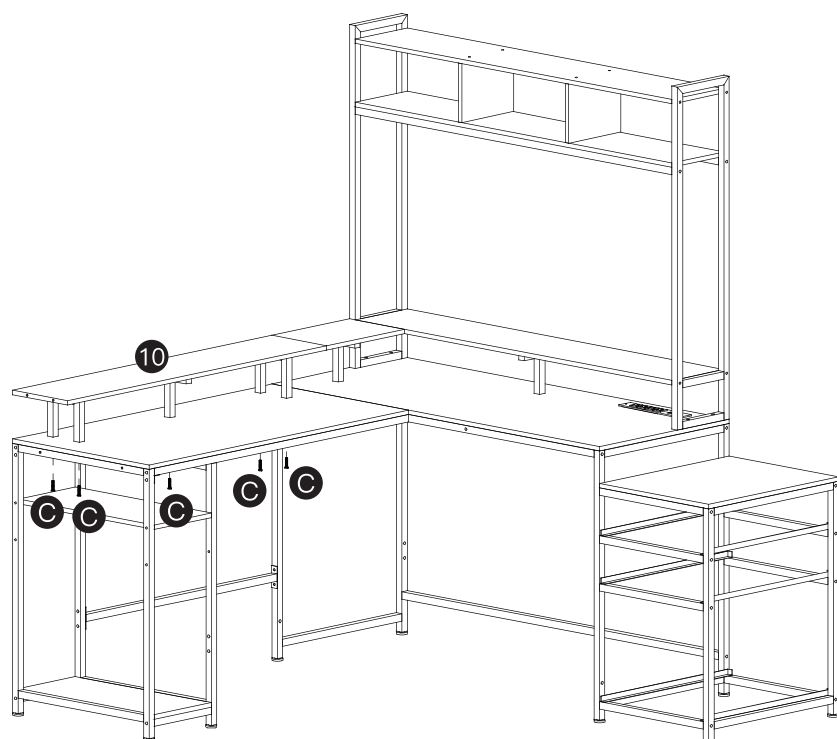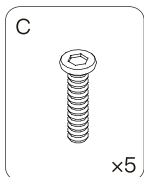

## Step 21 Connect part **32** with part **A** & **H** to form two X-Shape parts.

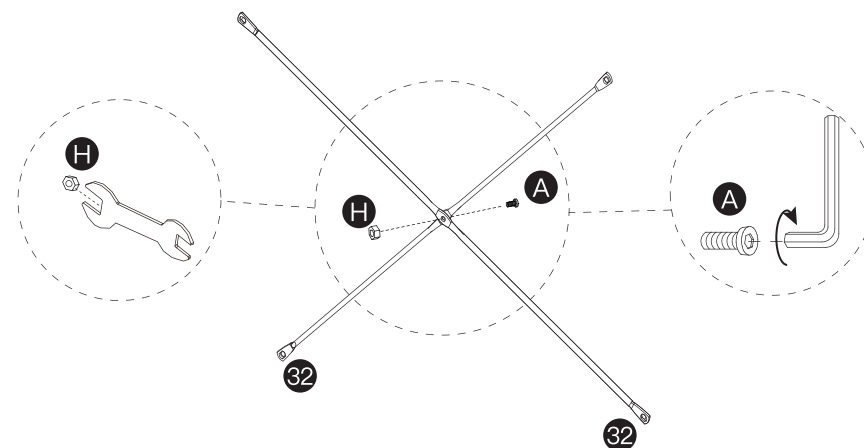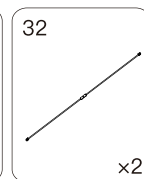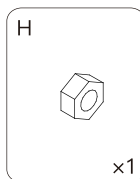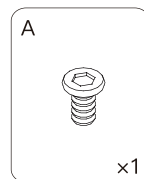


## Step 22

Attach the X-shape parts to the back of the frame, use part **A** to lock them in.

A



x4

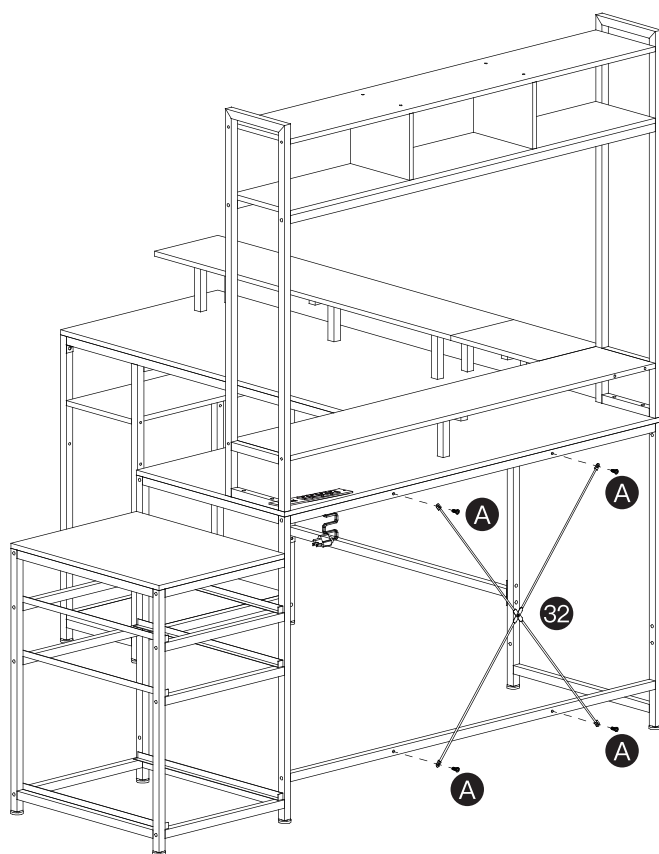

## Step 23

Install part **33** on part **14**, use part **A** to screw them.

A




x2

33






x2

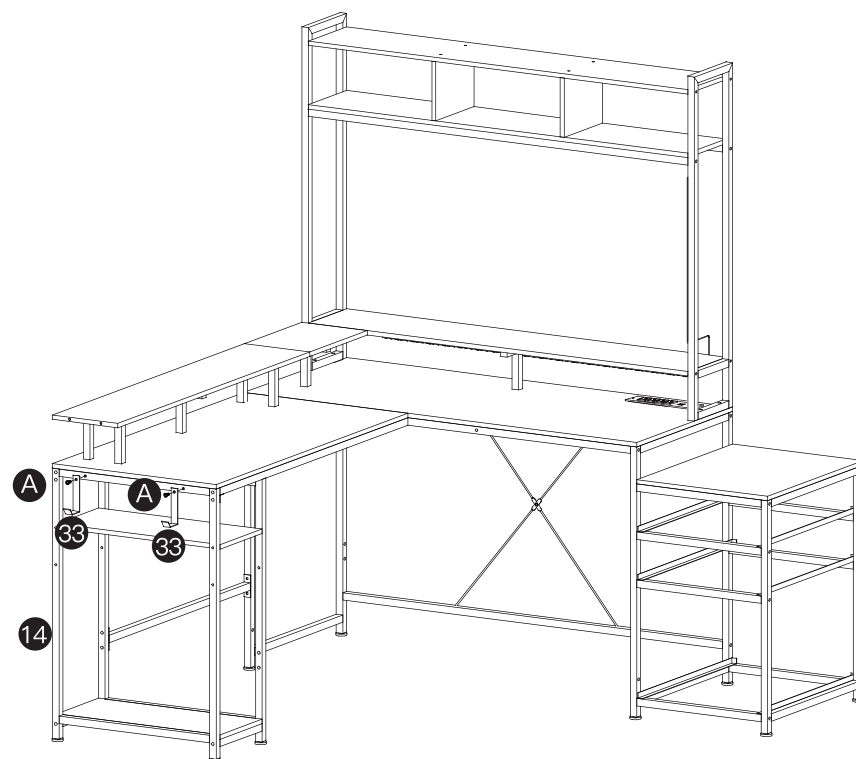




## Step 24

Open the drawers (part 36 & 37) and put the support boards inside, and install part K on with part F.

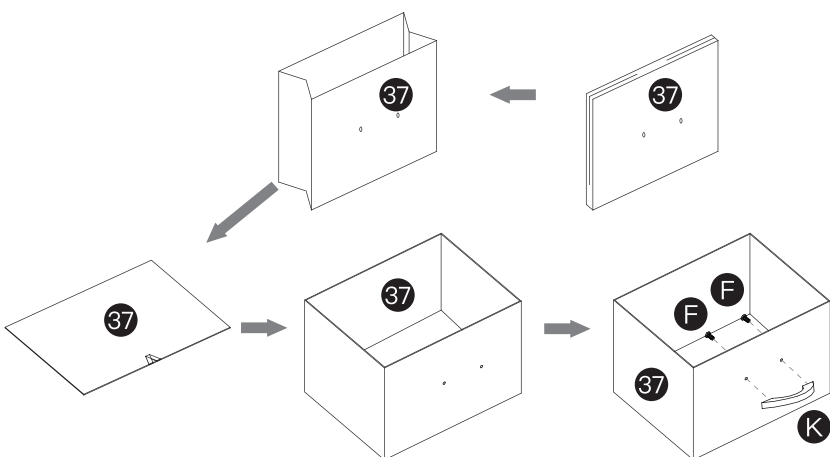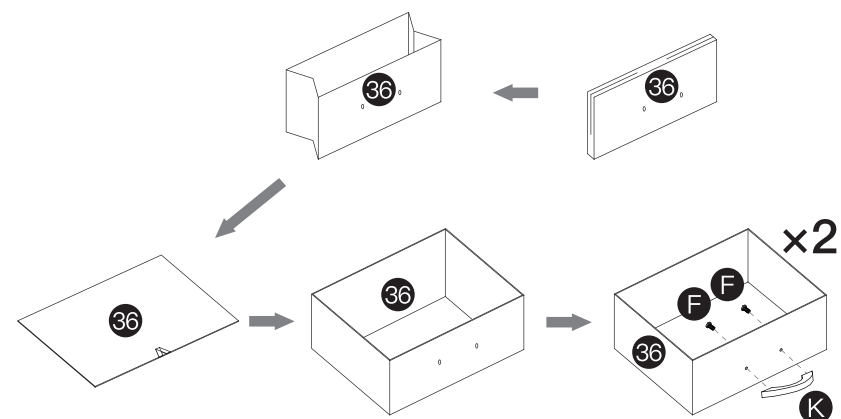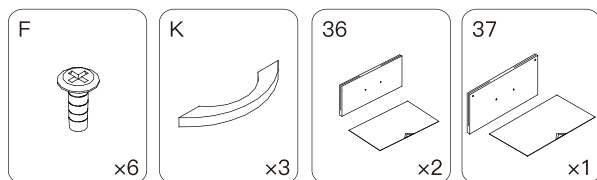


## Step 25

Install part 30 on part 37, use part A & H to screw them. Then put part 31 on part 30.

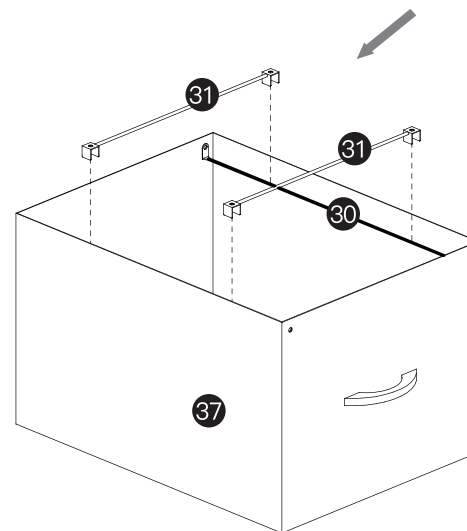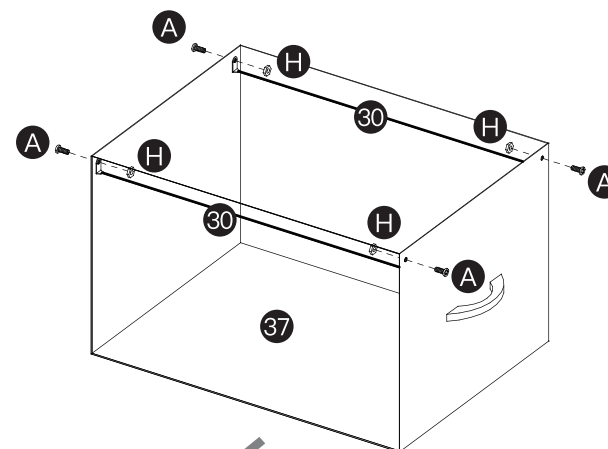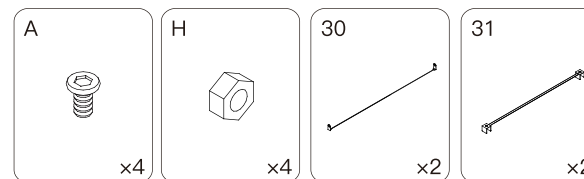



## Step 26

Put all drawers in.

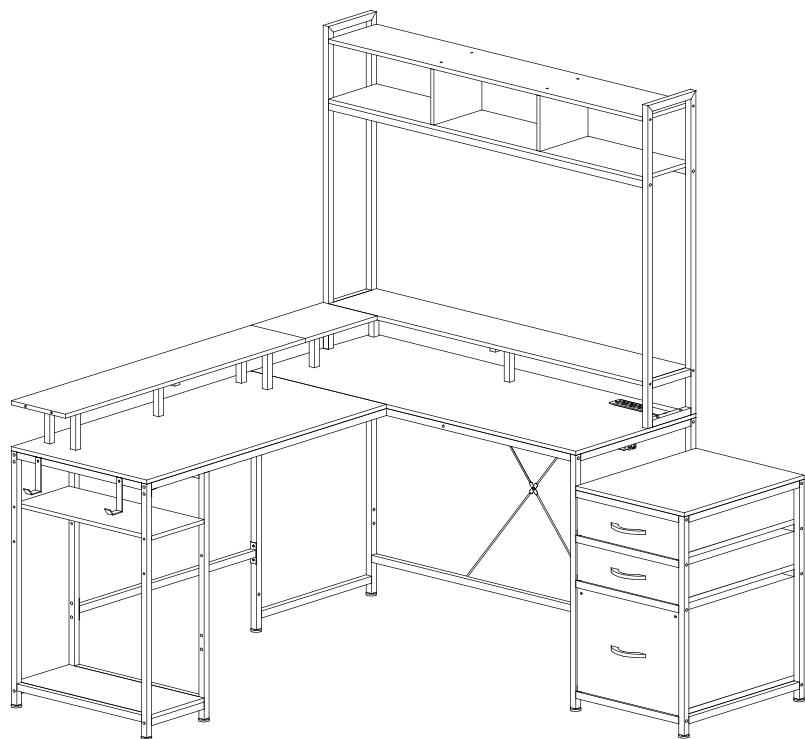



## Step 27

(Optional) Install the anti-tip device (part M).

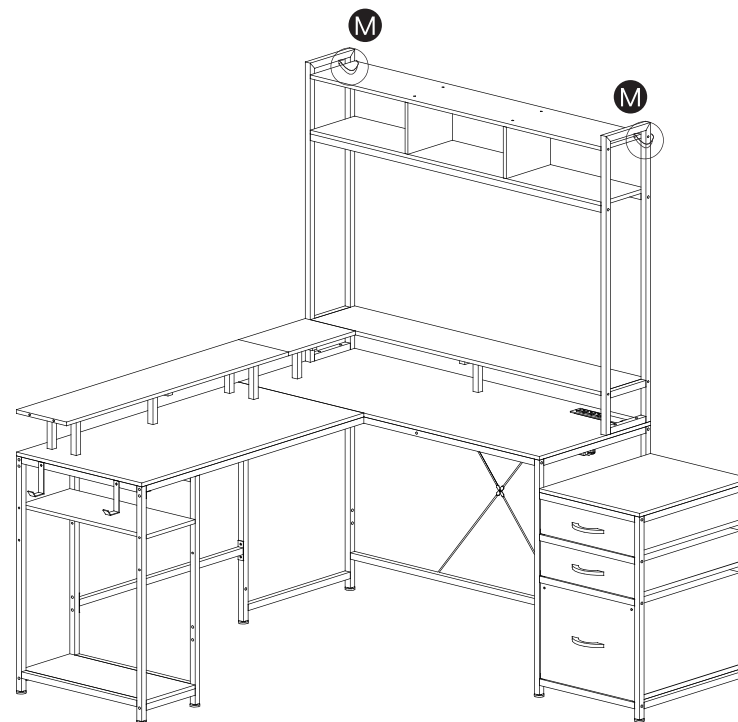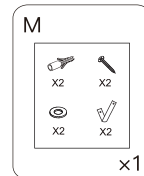


## TYPE C HOW TO INSTALL


**Step 1** Install part **J** on part **12** **13** **14** **15** **16**.

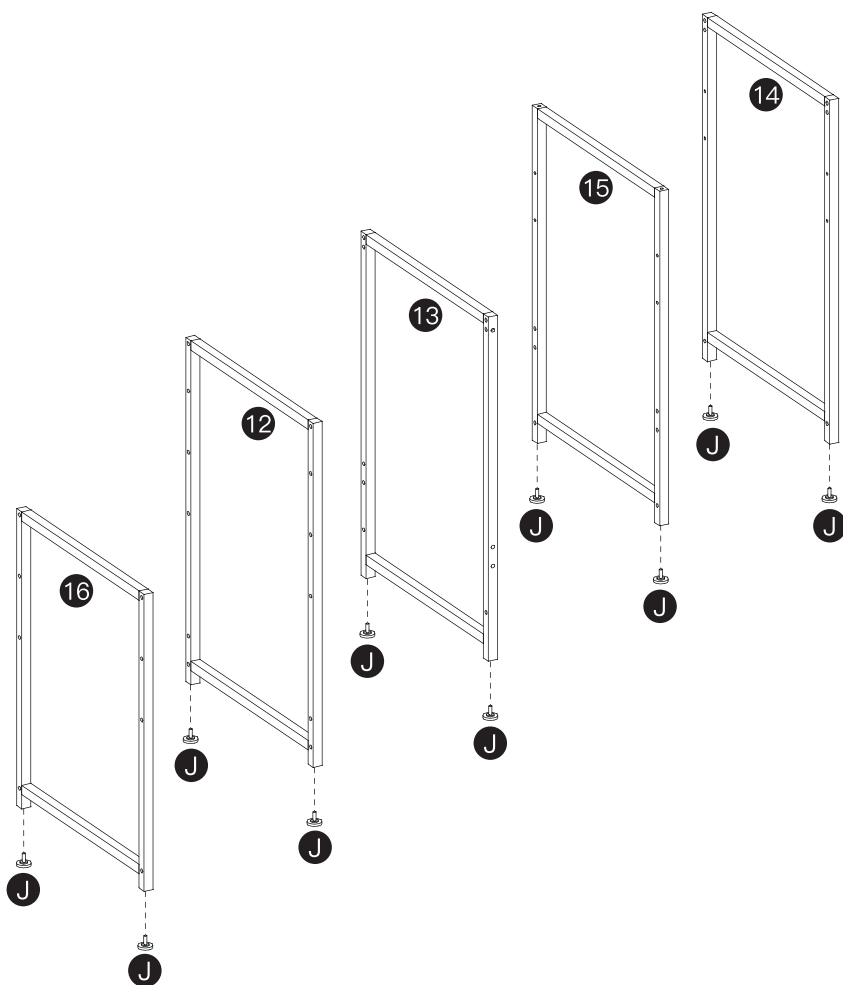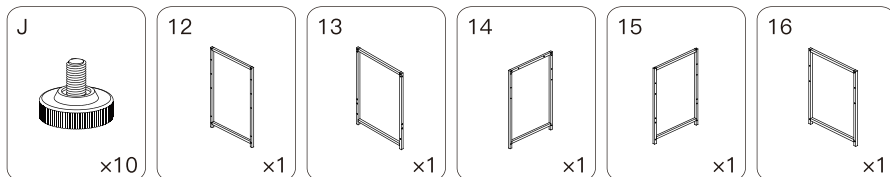

**Step 2** Connect part **12** and part **13** with part **21** & **22** & **23**, use part **C** to screw them.


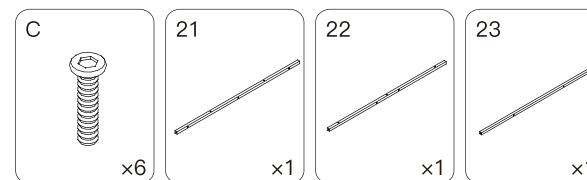


**REMARK:**  
Make sure the side without holes face the front.

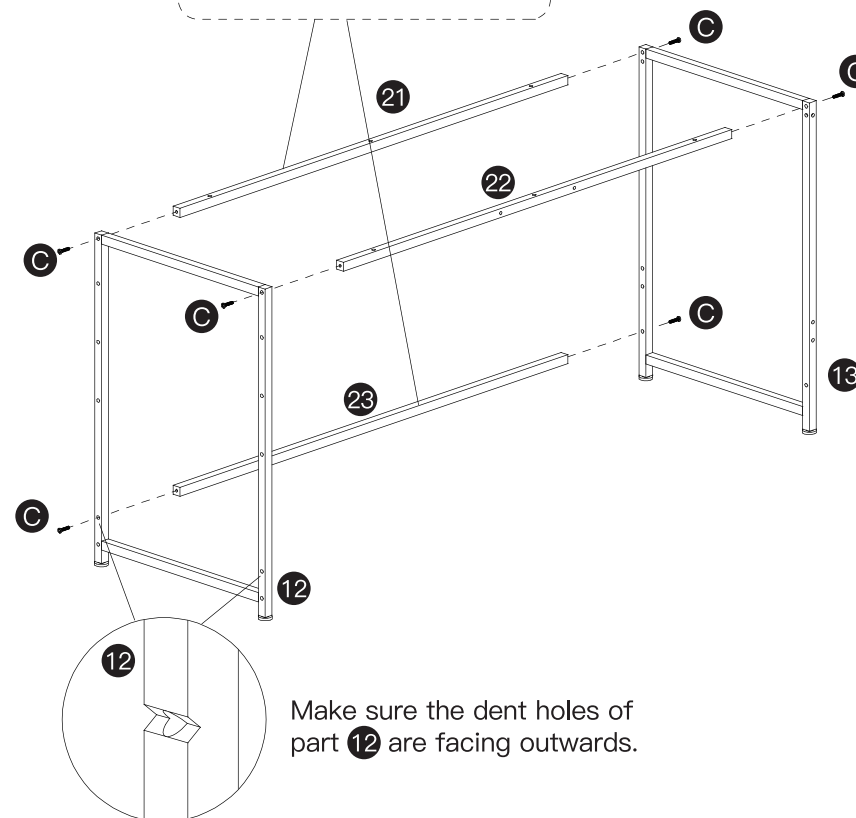



### Step 3

Connect part 12 and part 16 with part 18 & 28, use part C to screw them.

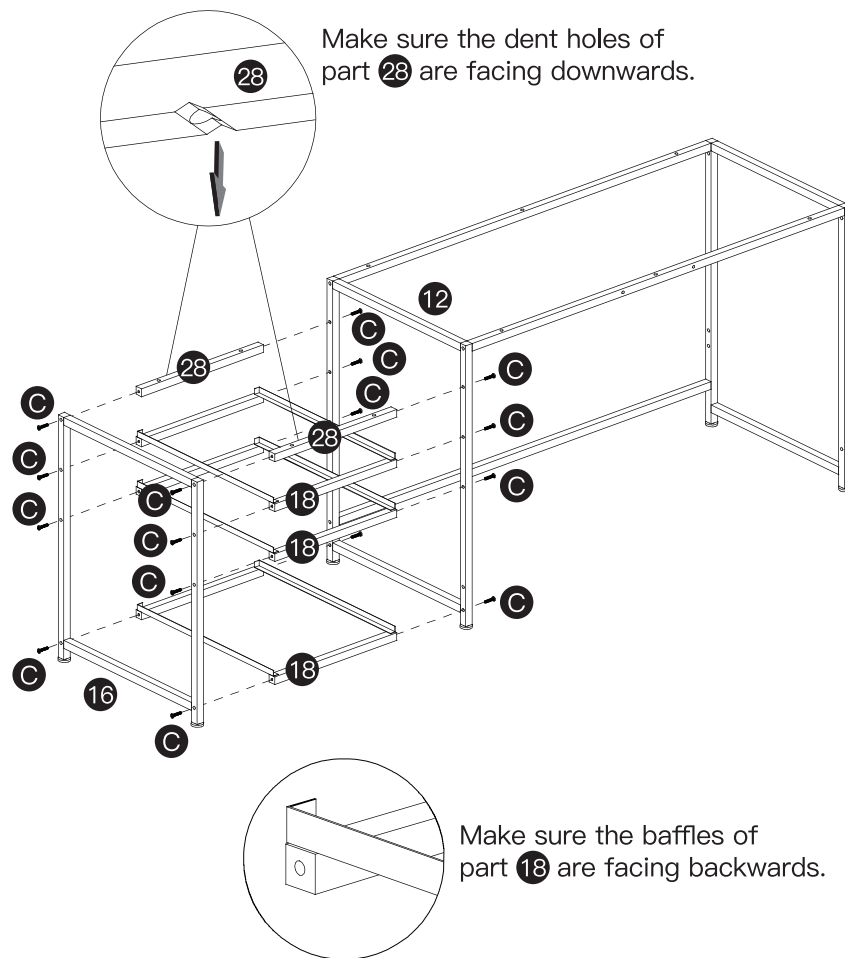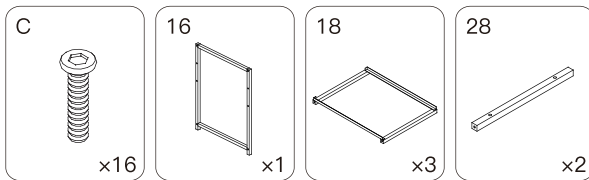

### Step 4



Install part 8 on part 28, use part B to screw them.

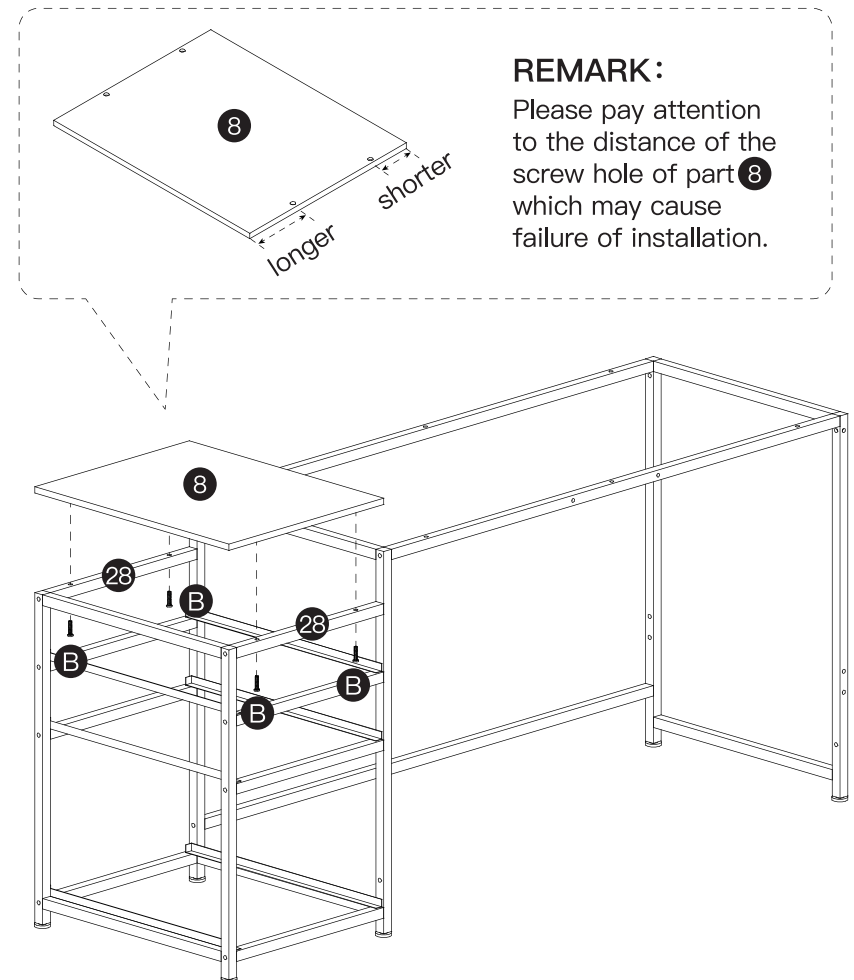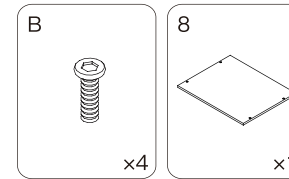




#### REMARK:

Please pay attention to the distance of the screw hole of part 8 which may cause failure of installation.

**Step 5** Install part 29 on part 7, use part C to screw them.

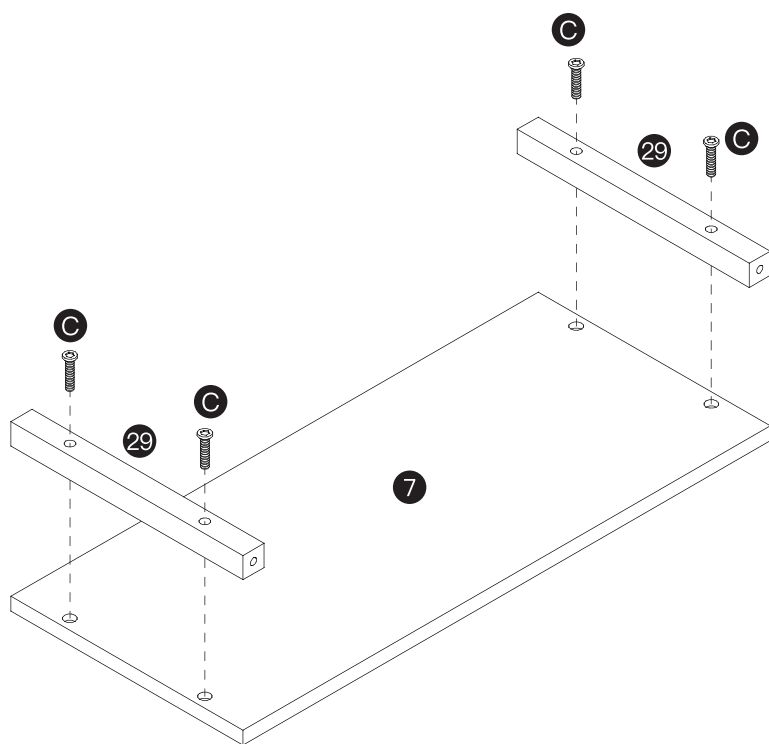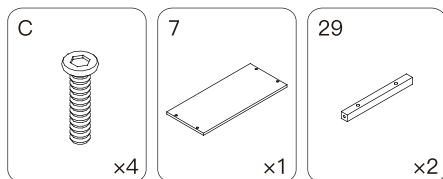

**Step 6** Connect part 15 and part 14 with part 6 & 7, use part C & D to screw them.

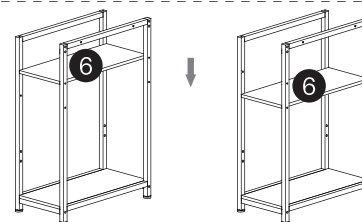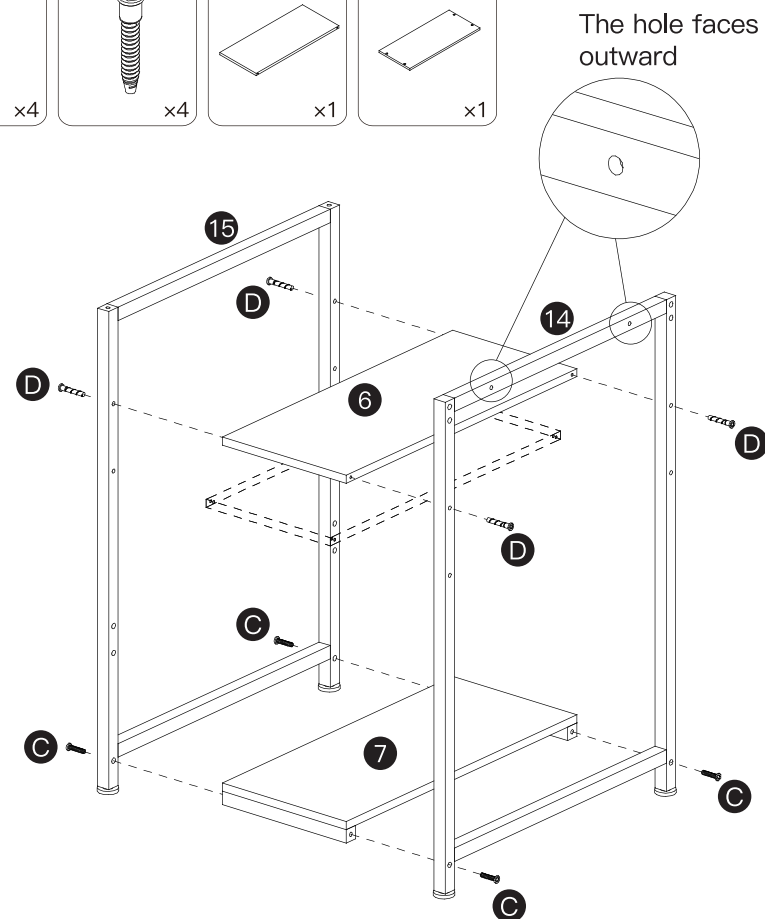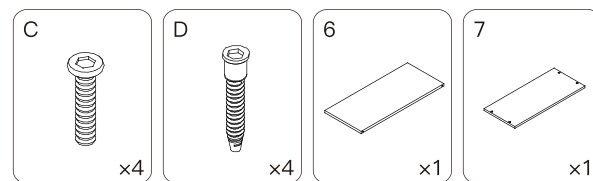



**REMARK:**

The position of part 6 is adjustable according to your preference.





## Step 7

Connect the frames assembled previously with part 24 25 26, use part C & H to screw them.


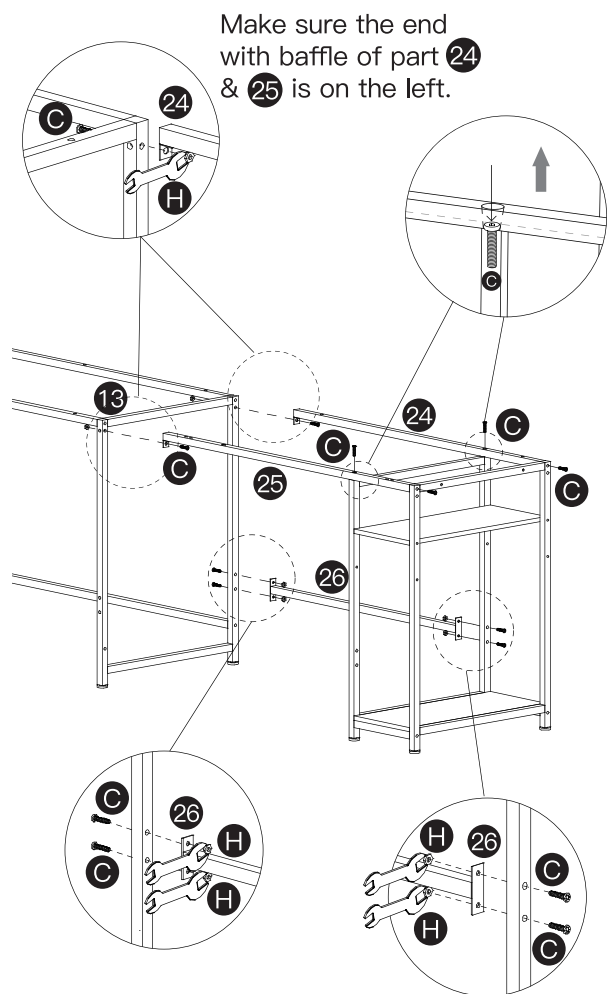
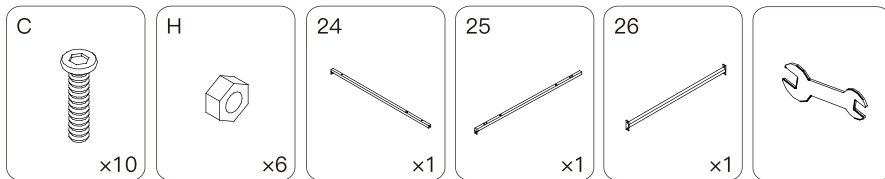


## Step 8



Install part 1 and part 2 on the top of the frame, use part C to screw them.

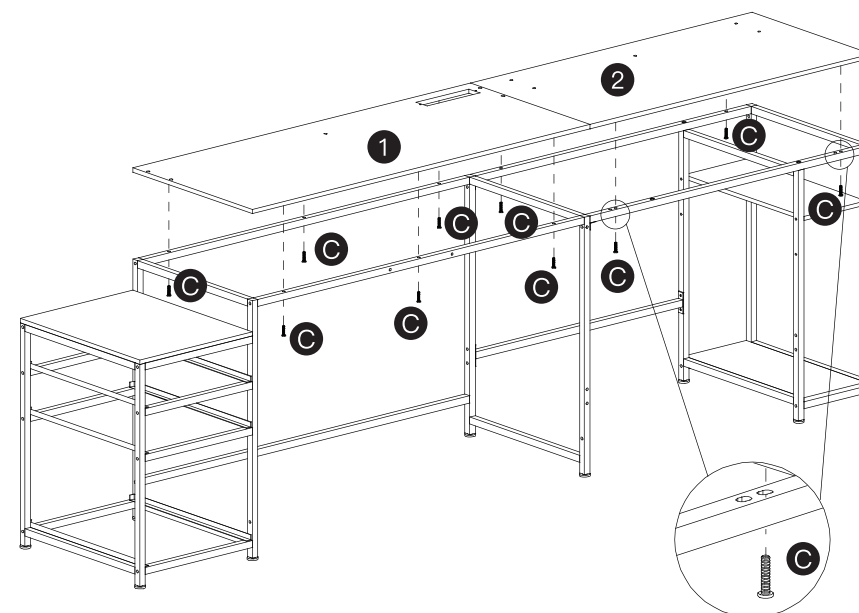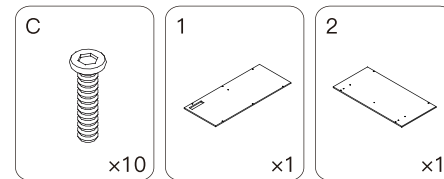



**Step 9** Install part 34 on part 1, use part E to screw them.

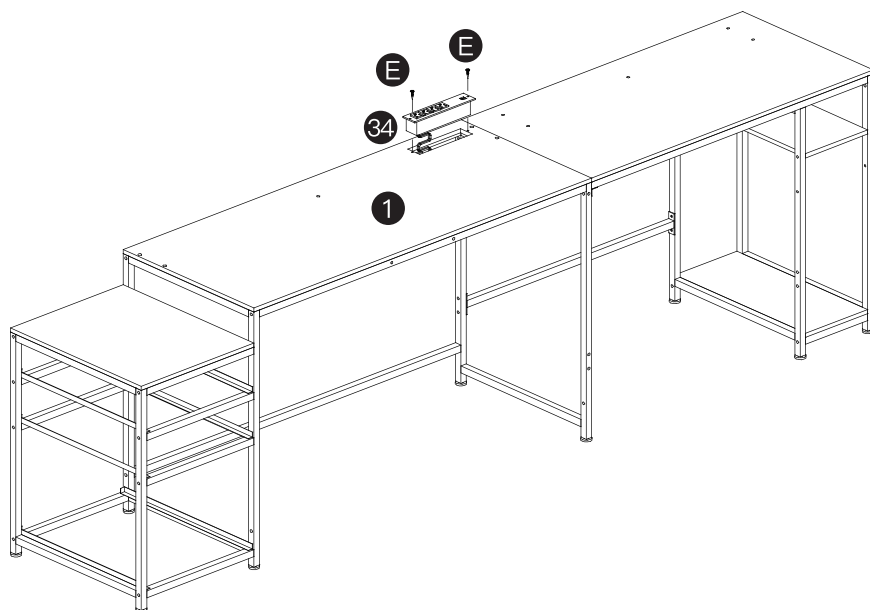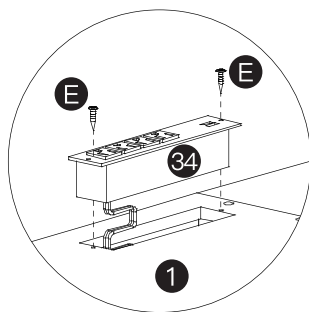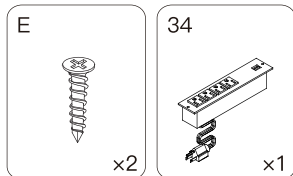



**Step 10** Install part 17 on part 1, use part C to screw them.

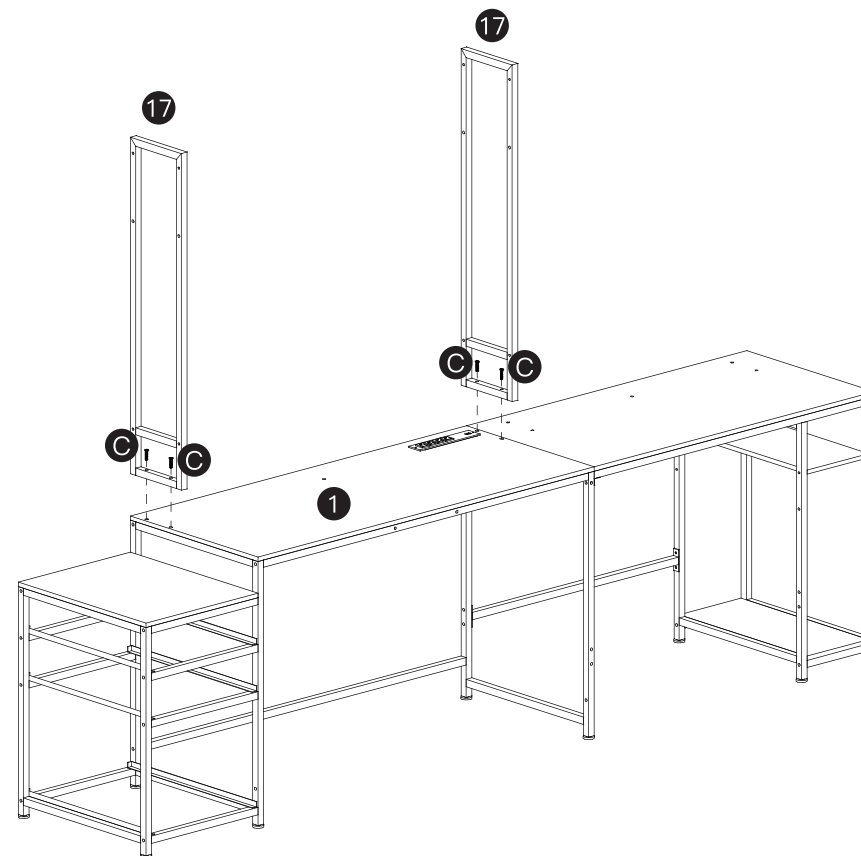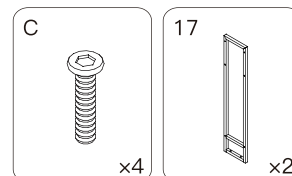

**Step 11** Connect part 17 with part 27, use part C to screw them.

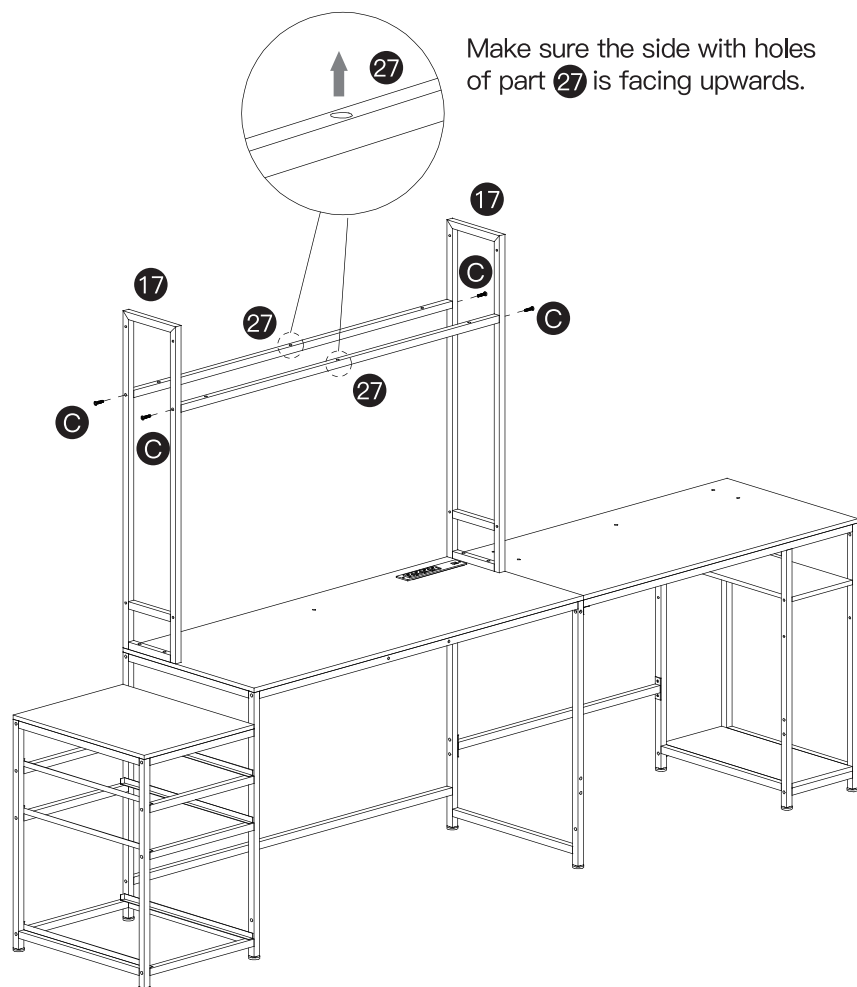
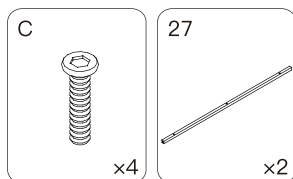


**Step 12** Connect part 3 and part 4 with part 5, use part D to screw them.

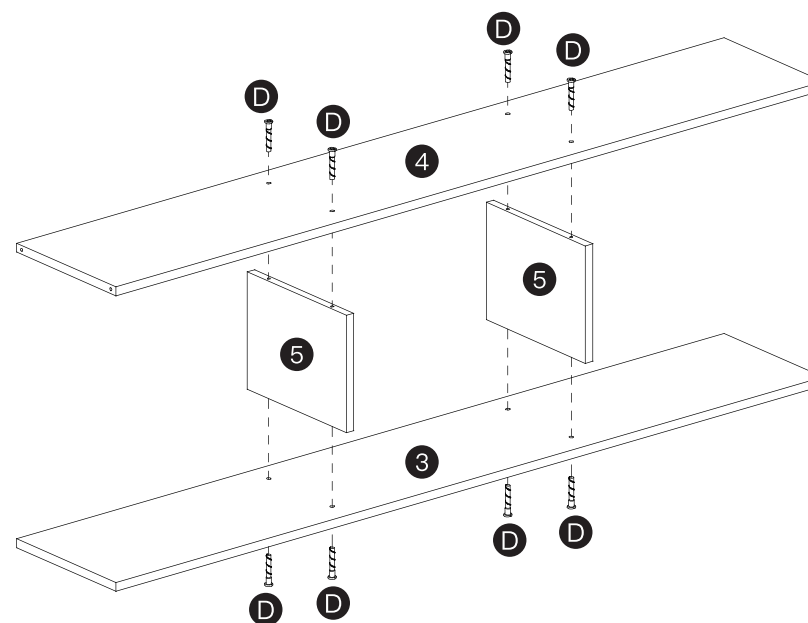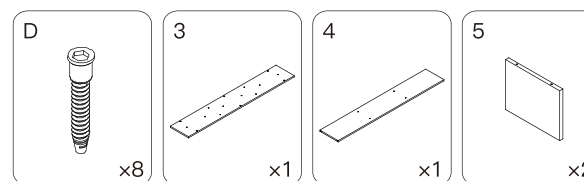



### Step 13

Install the part of last step on the frame, use part **C** and **D** to screw them.

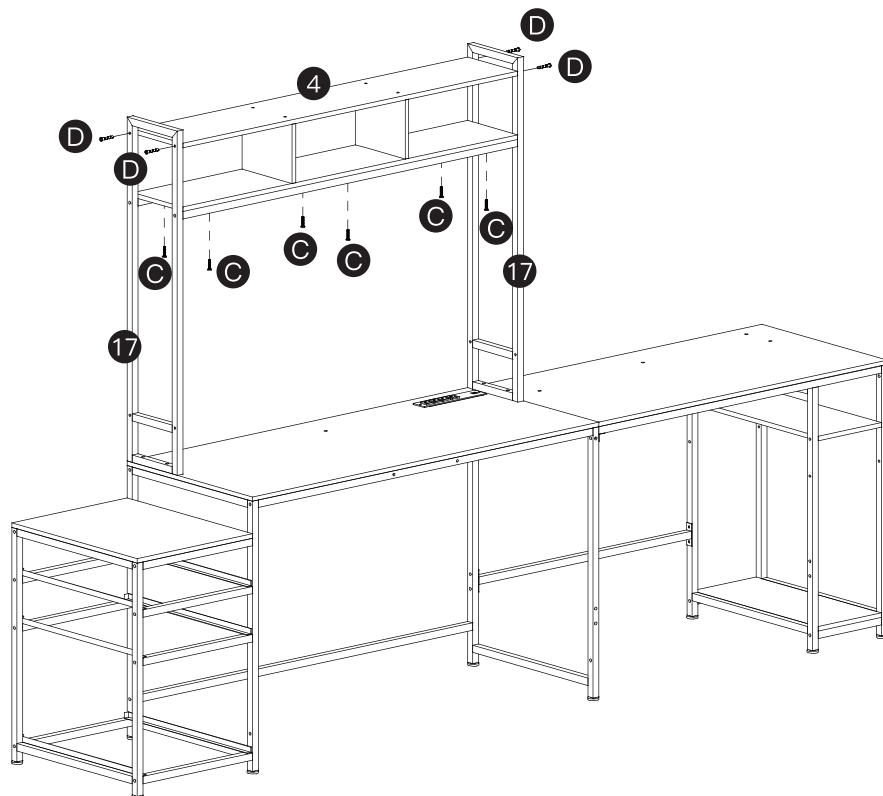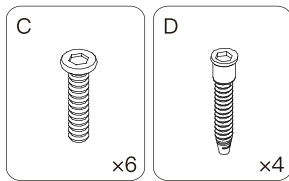



### Step 14

Install part **19** on part **9**, use part **C** to screw them.

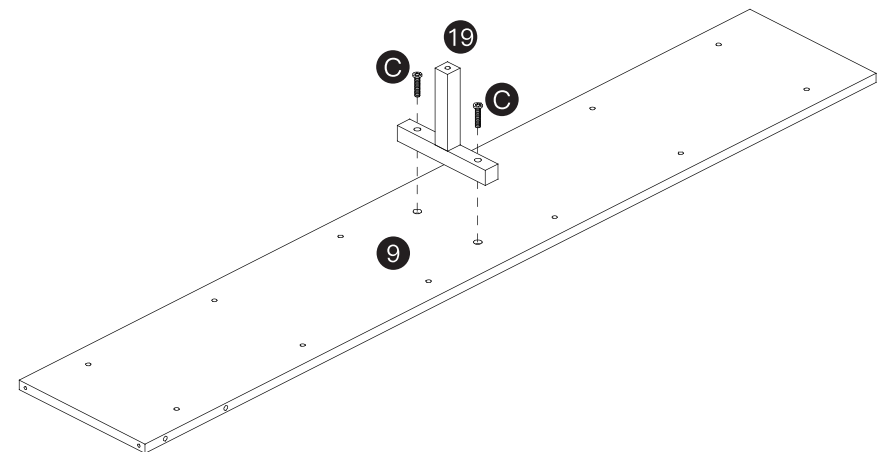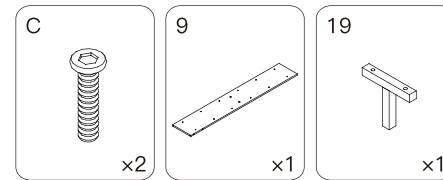



## Step 15

Connect part 17 with part 9, use part C & D to screw them.

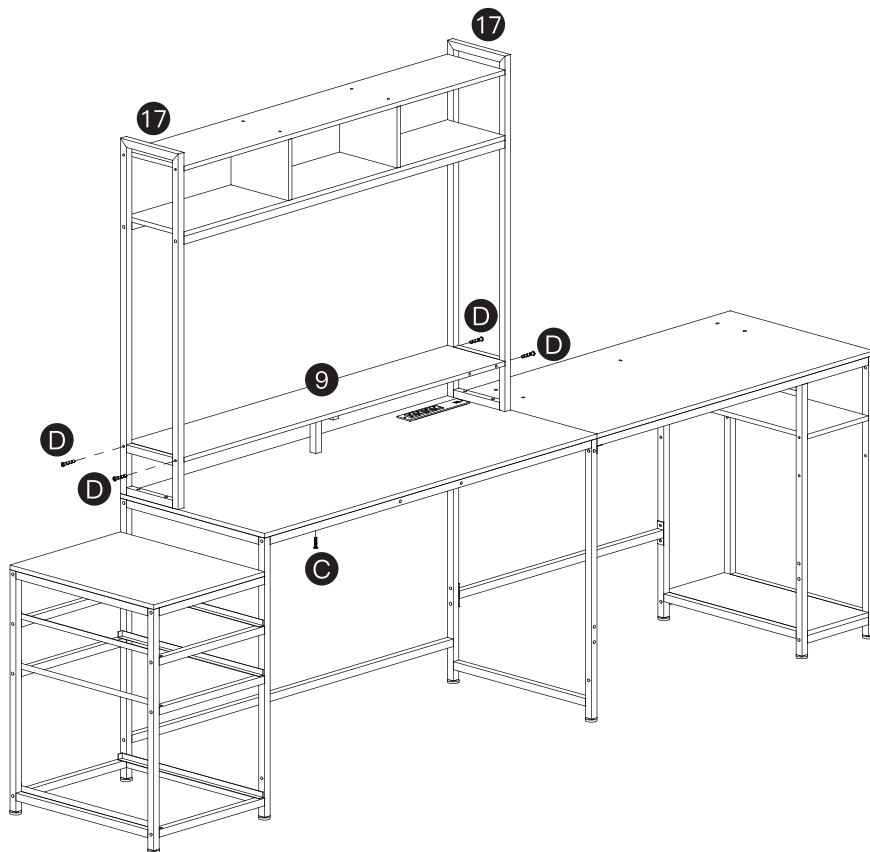
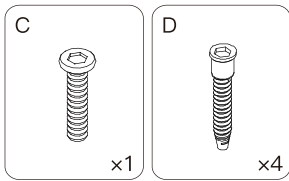


## Step 16



Install part 19 and part 20 on part 10, use part C to screw them.

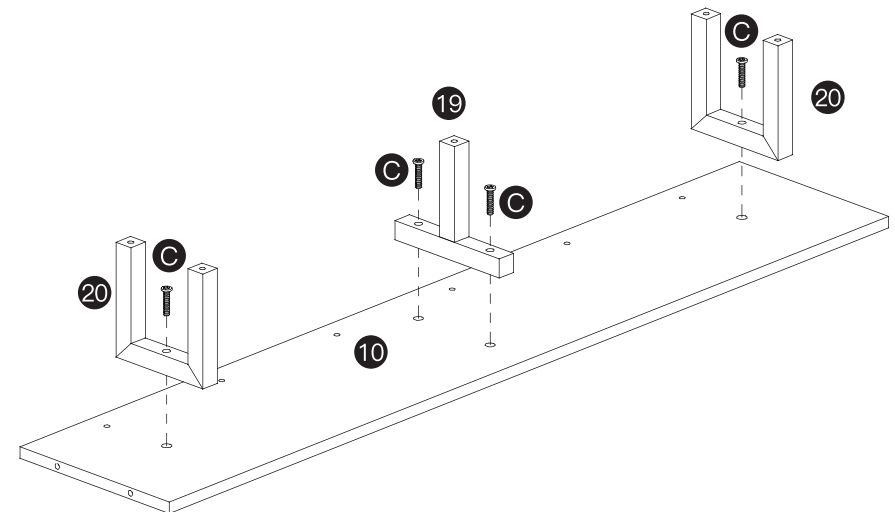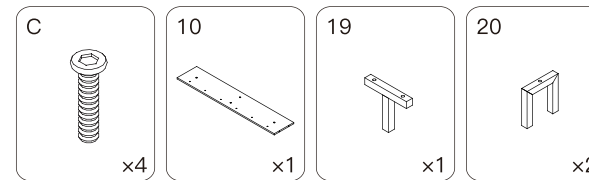

## Step 17 Use part **C** to fix part **10**.

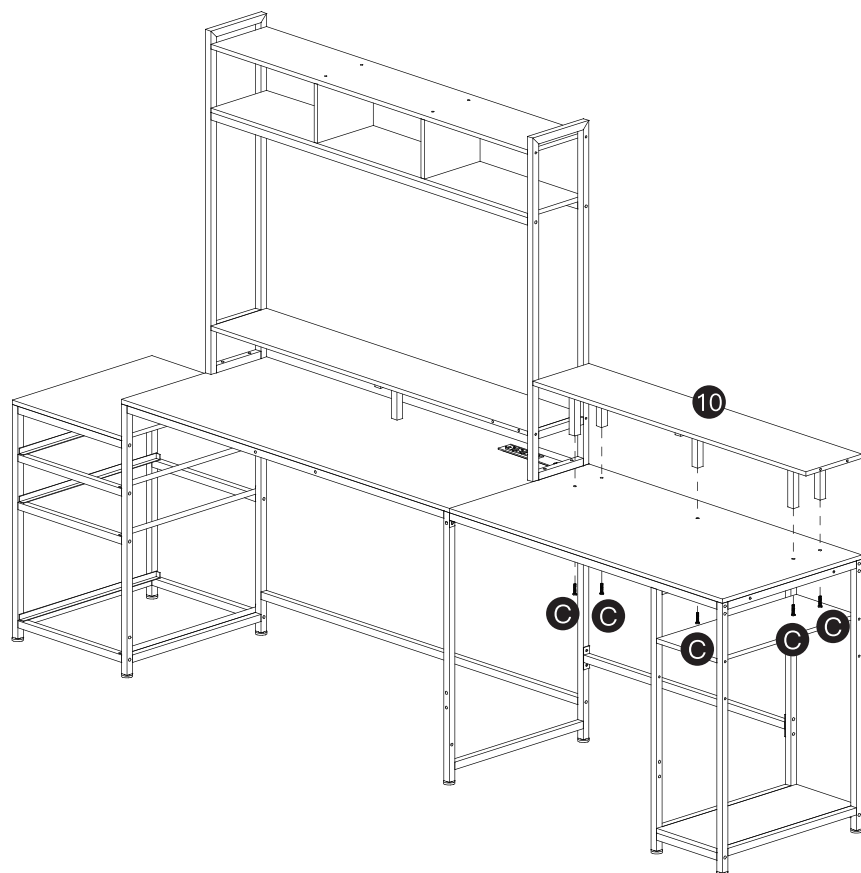
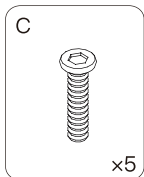


## Step 18 Connect part **32** with part **A** & **H** to form two X-Shape parts.

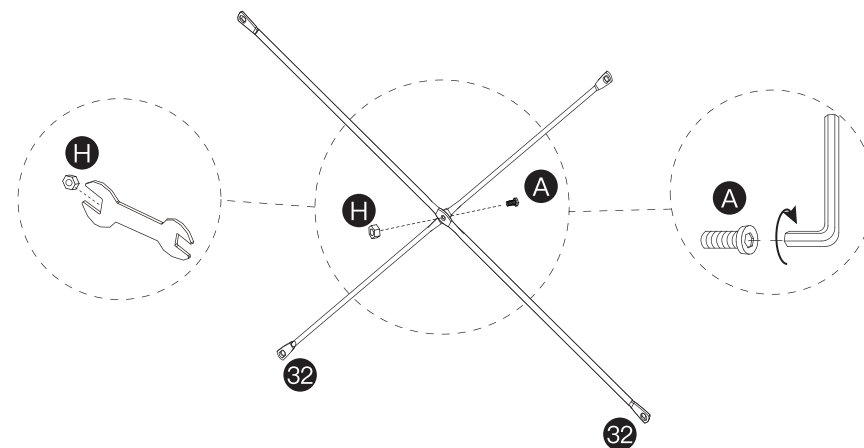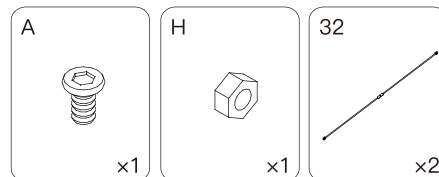



## Step 19

Attach the X-shape parts to the back of the frame, use part **A** to lock them in.

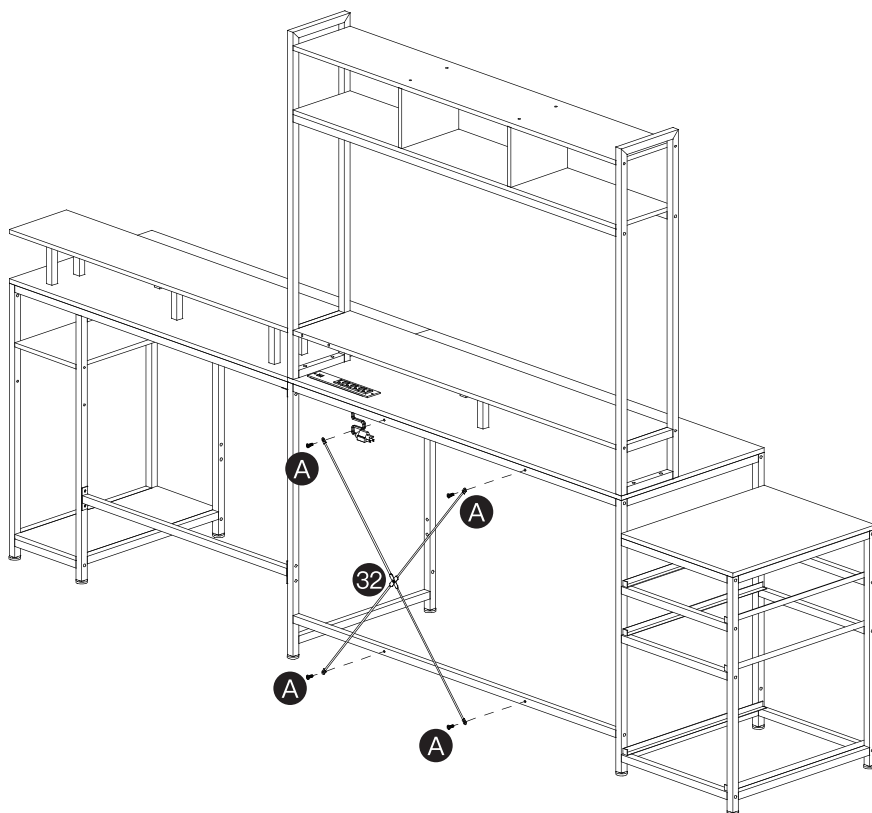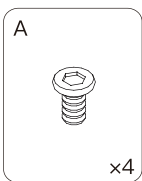




## Step 20

Install part **33** on part **14**, use part **A** to screw them.

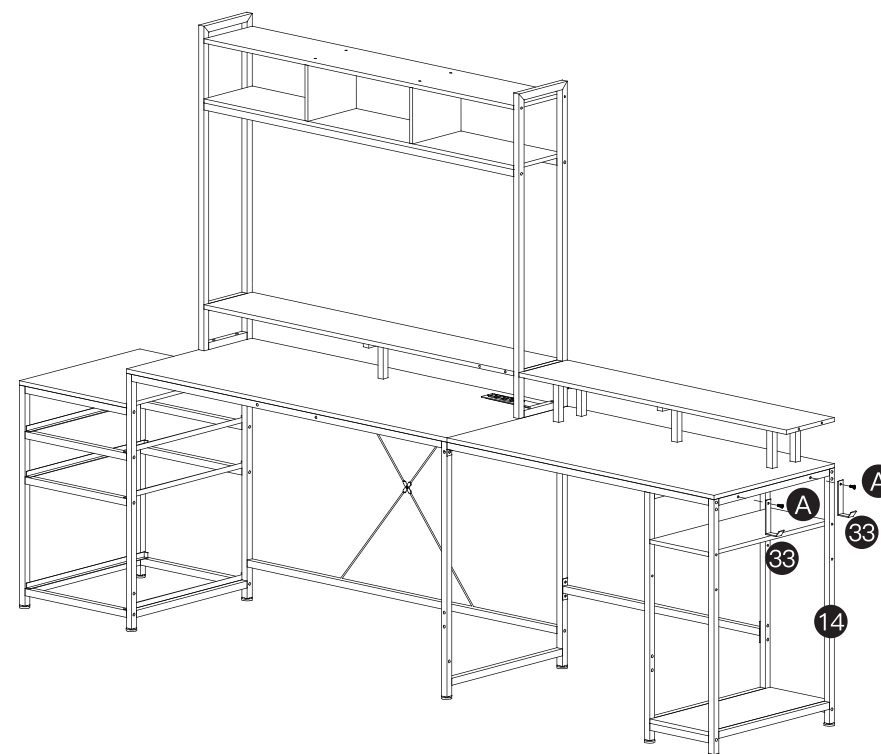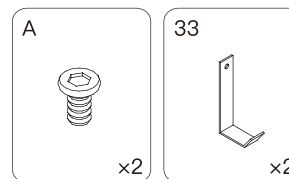




## Step 21

Open the drawers (part 36 & 37) and put the support boards inside, and install part K on with part F.

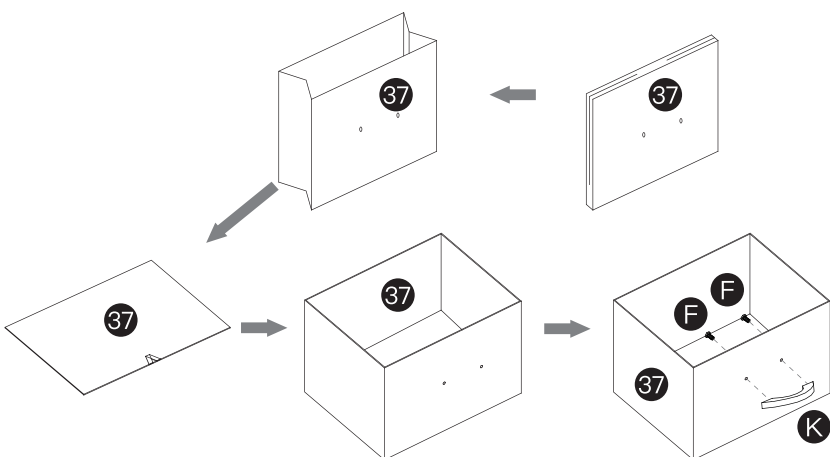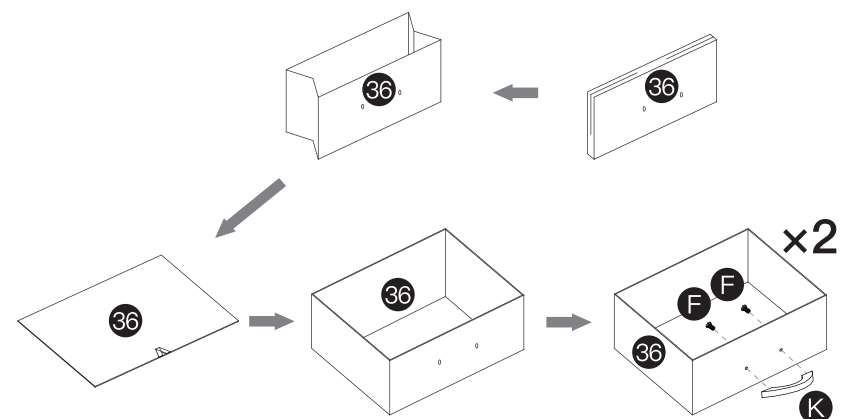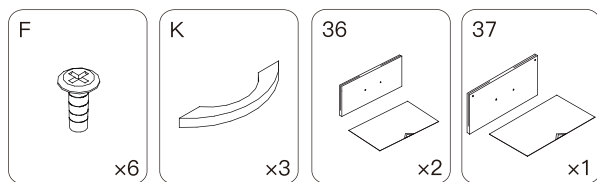

## Step 22


Install part 30 on part 37, use part A & H to screw them. Then put part 31 on part 30.

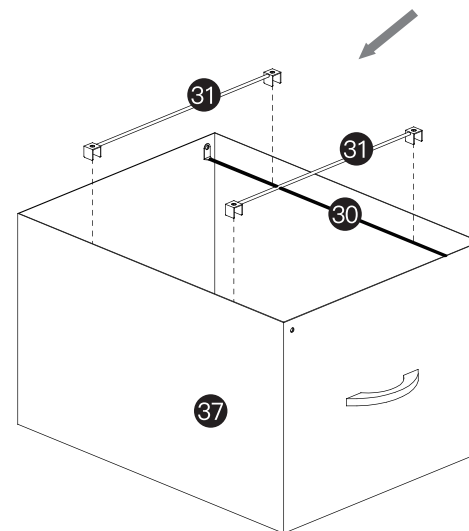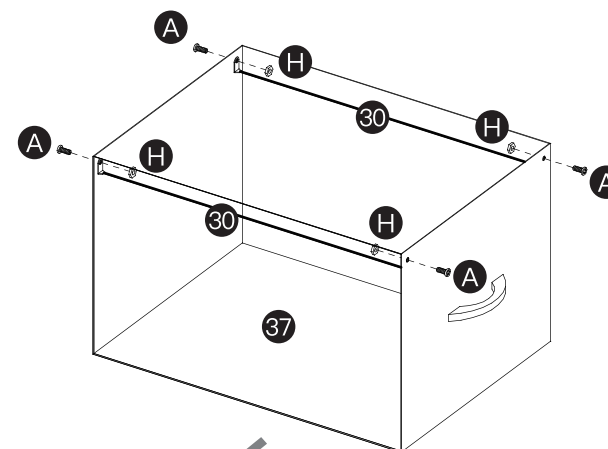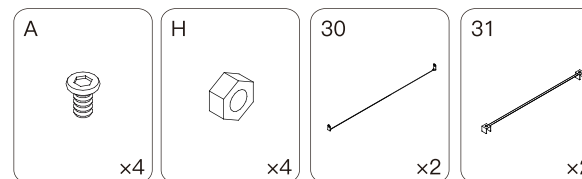





## Step 23

Put all drawers in.

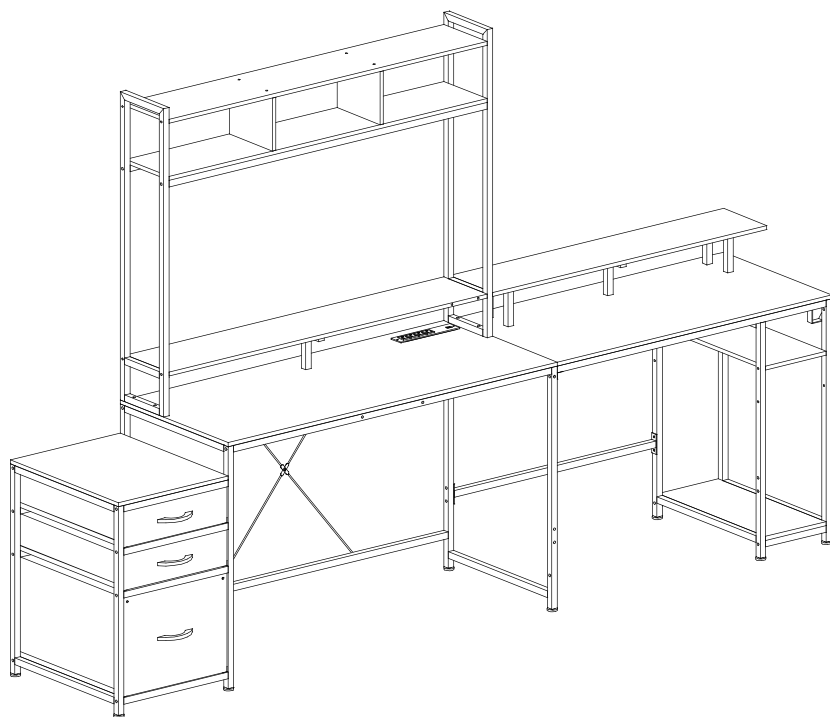


## Step 24

(Optional) Install the anti-tip device (part **M**).

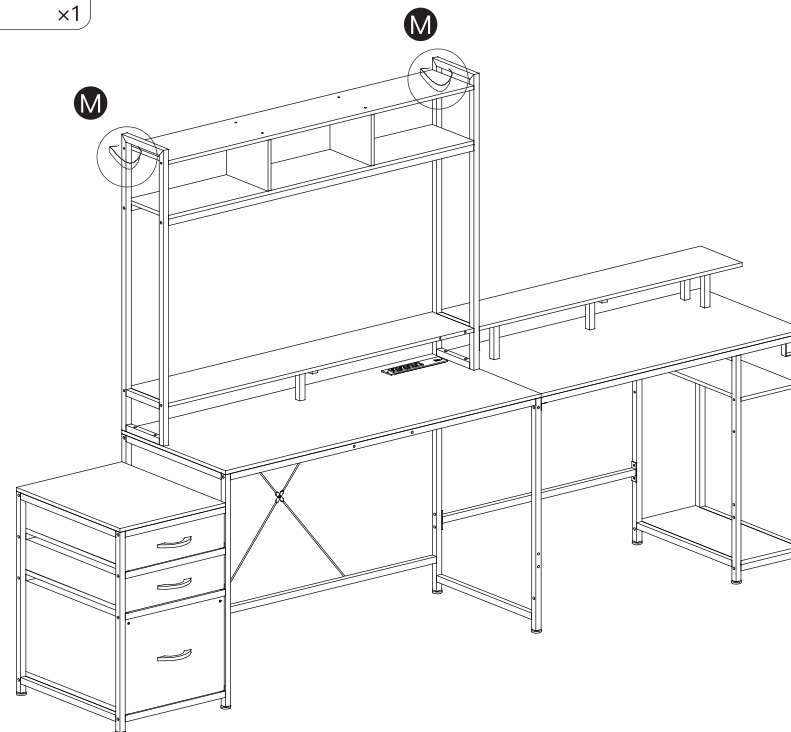
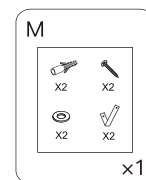


## TYPE D HOW TO INSTALL

**Step 1** Install part **J** on part **12** **13** **14** **15** **16**.

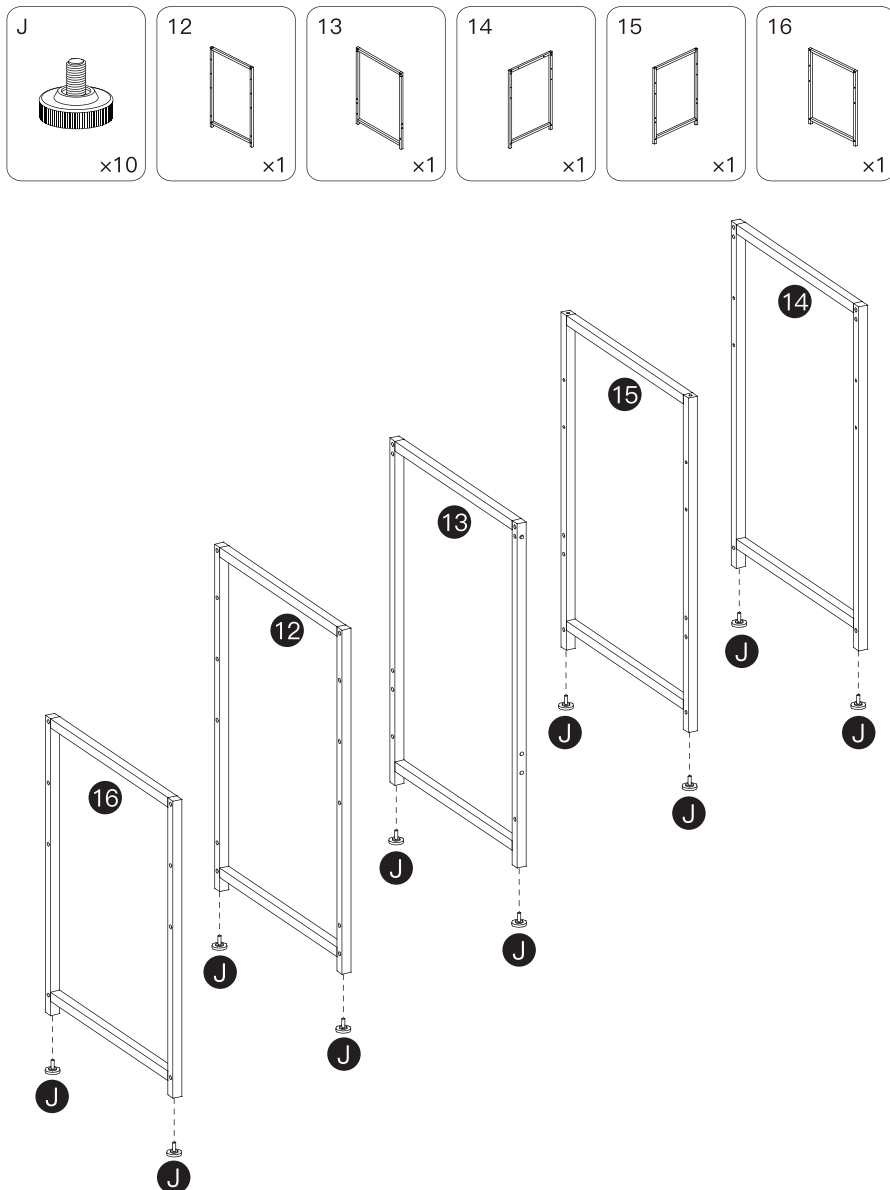


**Step 2** Connect part **12** and part **13** with part **21** & **22** & **23**, use part **C** to screw them.

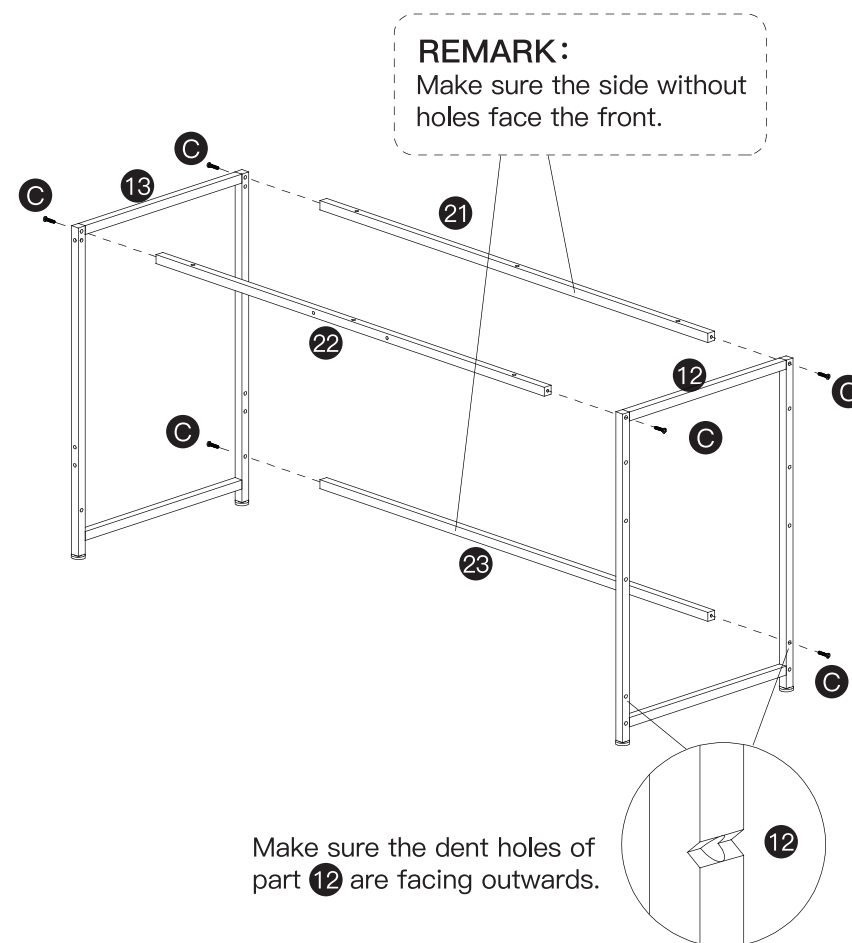
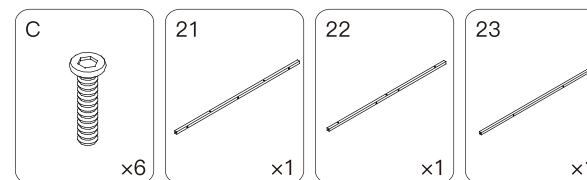


### Step 3

Connect part 12 and part 16 with part 18 & 28, use part C to screw them.

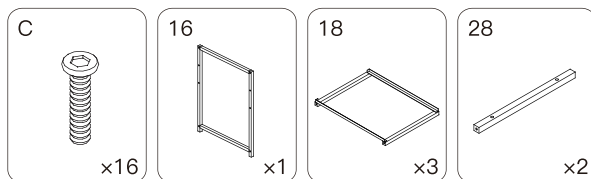


Make sure the dent holes of part 28 are facing downwards.

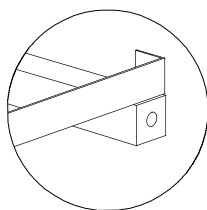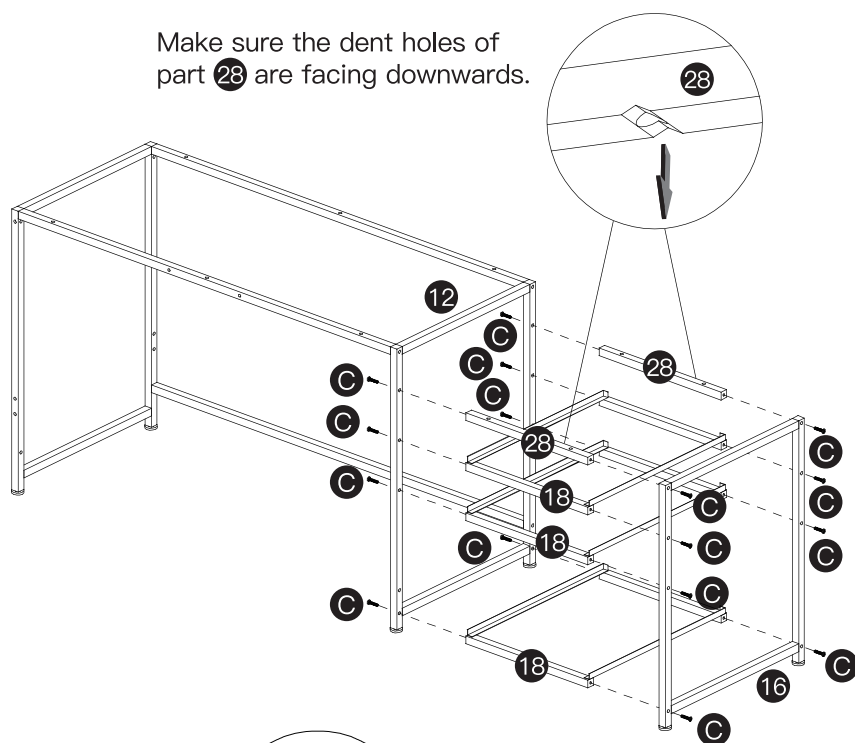

Make sure the baffles of part 18 are facing backwards.



### Step 4

Install part 8 on part 28, use part B to screw them.


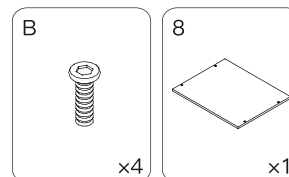


#### REMARK:




Please pay attention to the distance of the screw hole of part 8 which may cause failure of installation.

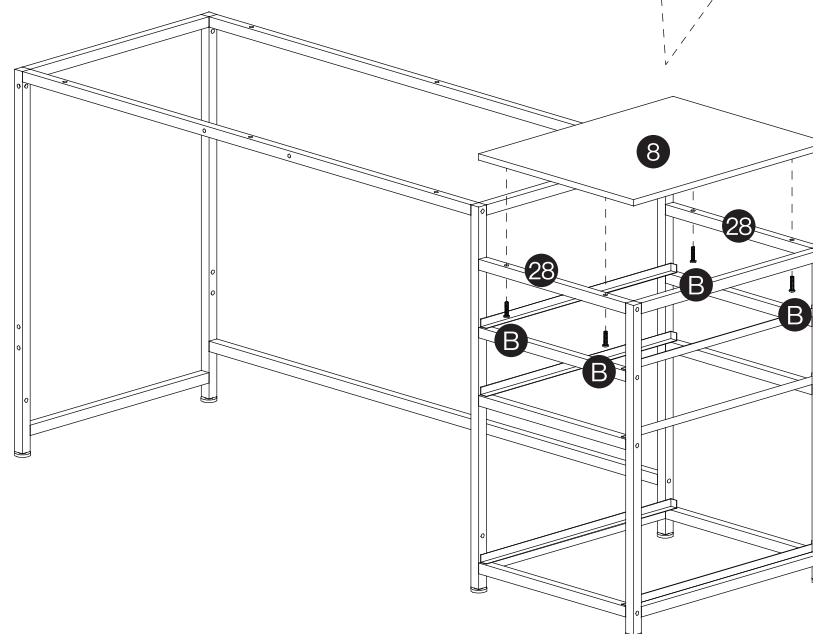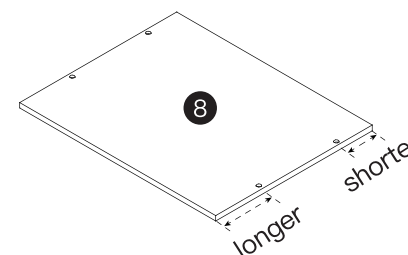

**Step 5** Install part 29 on part 7, use part C to screw them.

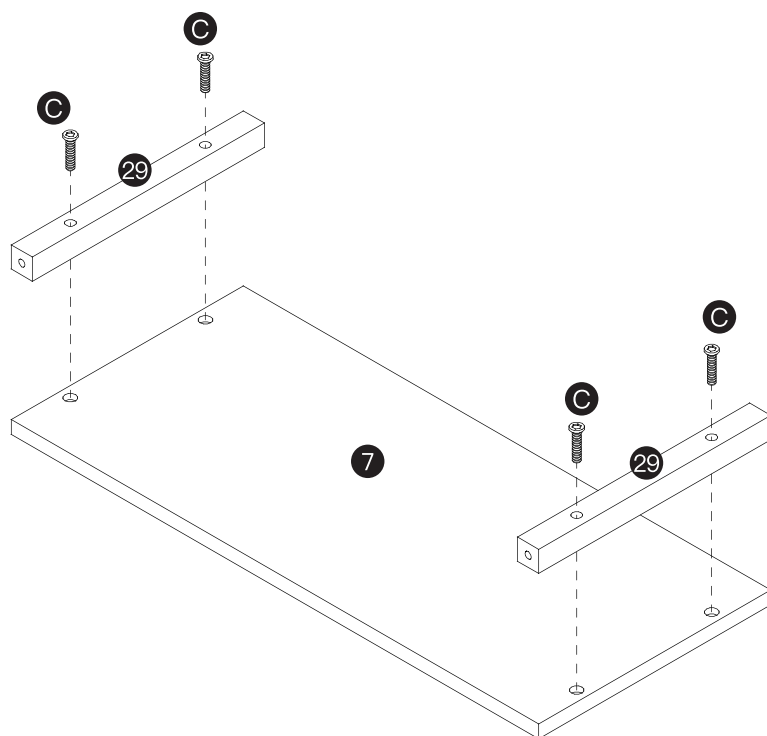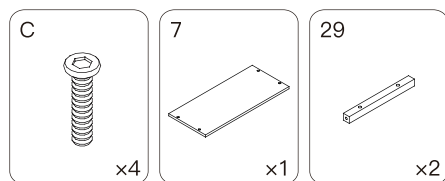


**Step 6** Connect part 15 and part 14 with part 6 & 7, use part C & D to screw them.

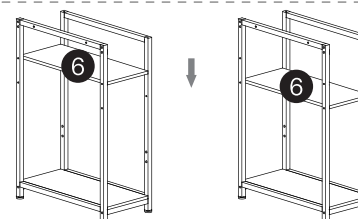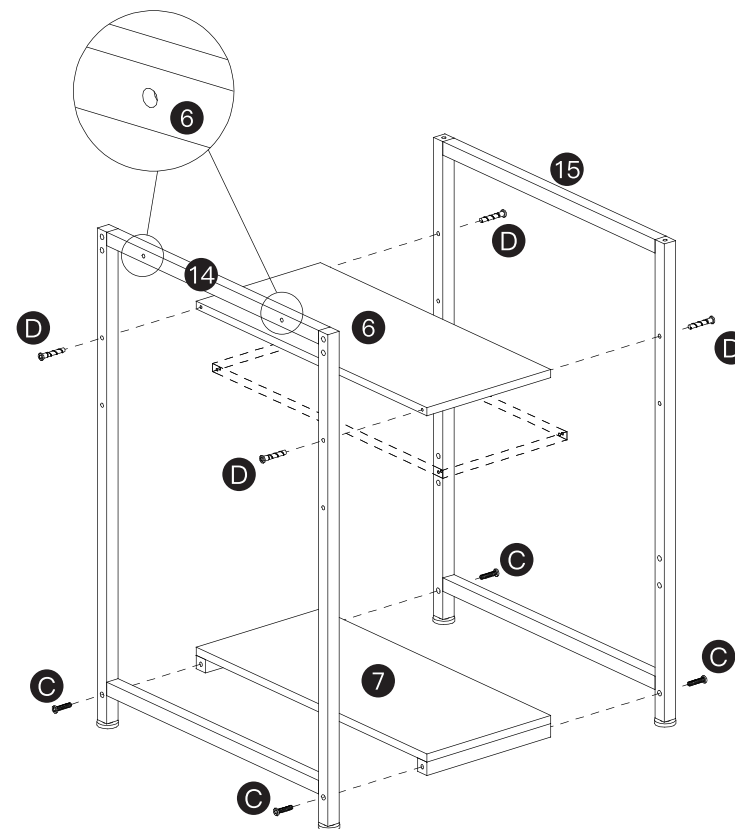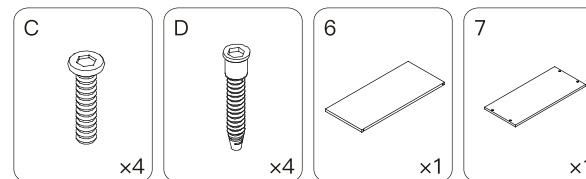

**REMARK:**  
The position of part 6 is adjustable according to your preference.


## Step 7

Connect the frames assembled previously with part 24 25 26, use part C & H to screw them.

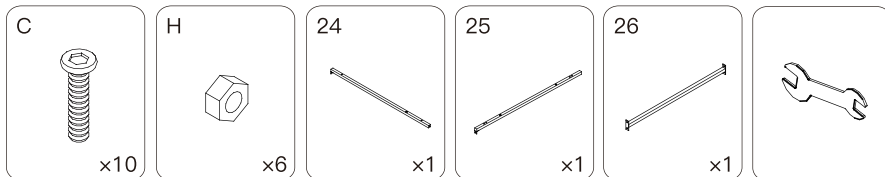



Make sure the larger hole of part 24 & 25 face the upwards. Install the screw (part C) in the middle first.

Make sure the end with baffle of part 24 & 25 is on the right.

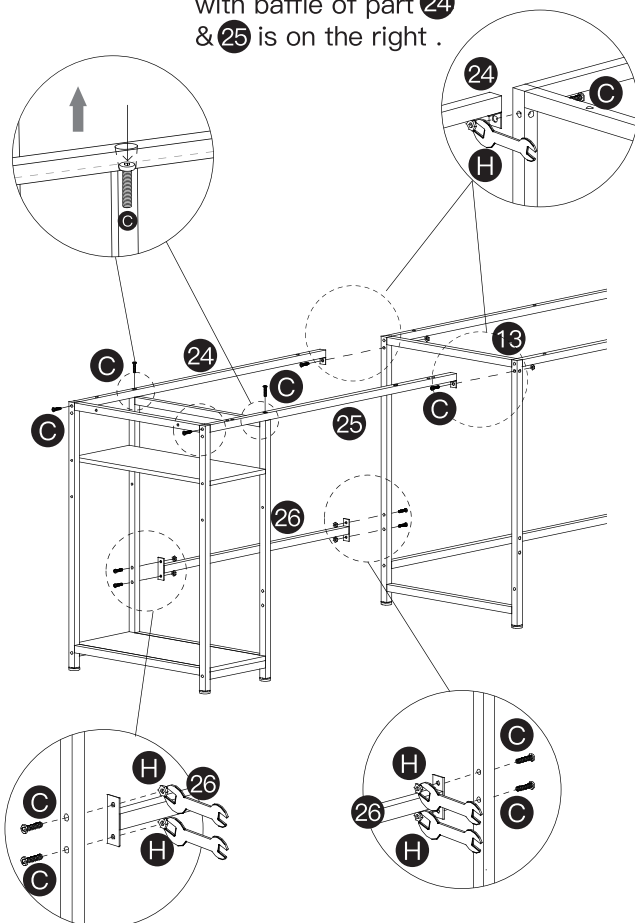




## Step 8

Install part 1 and part 2 on the top of the frame, use part C to screw them.

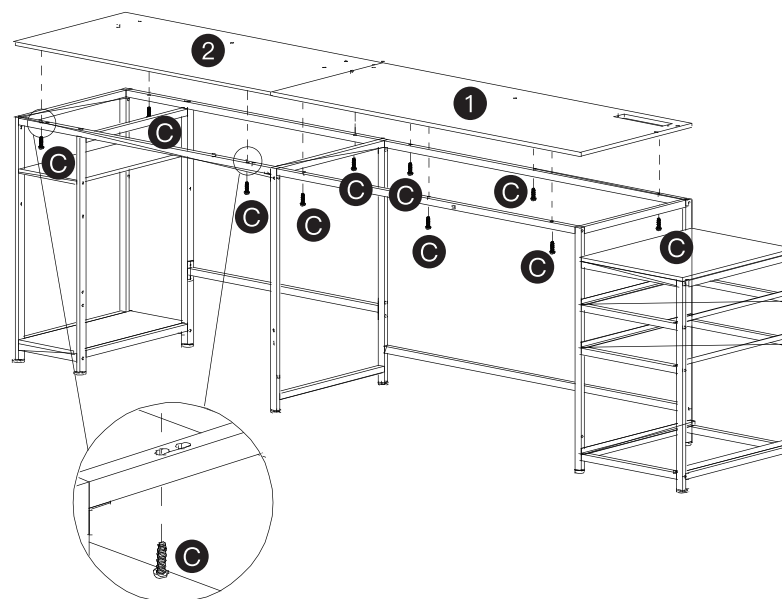
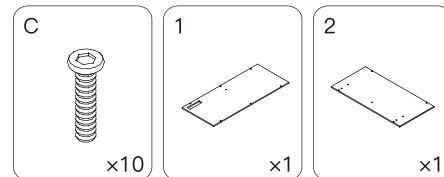


Make sure these screws are through the holes on the left side.

**Step 9** Install part 34 on part 1, use part E to screw them.

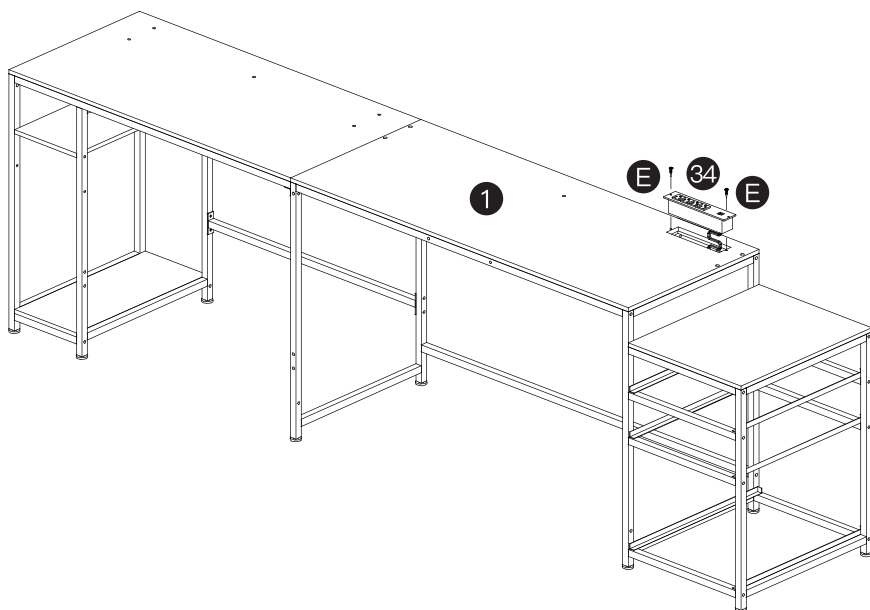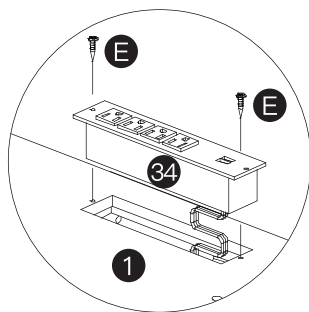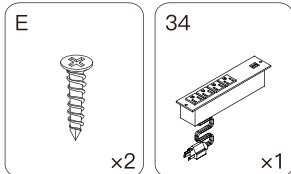


**Step 10** Install part 17 on part 1, use part C to screw them.

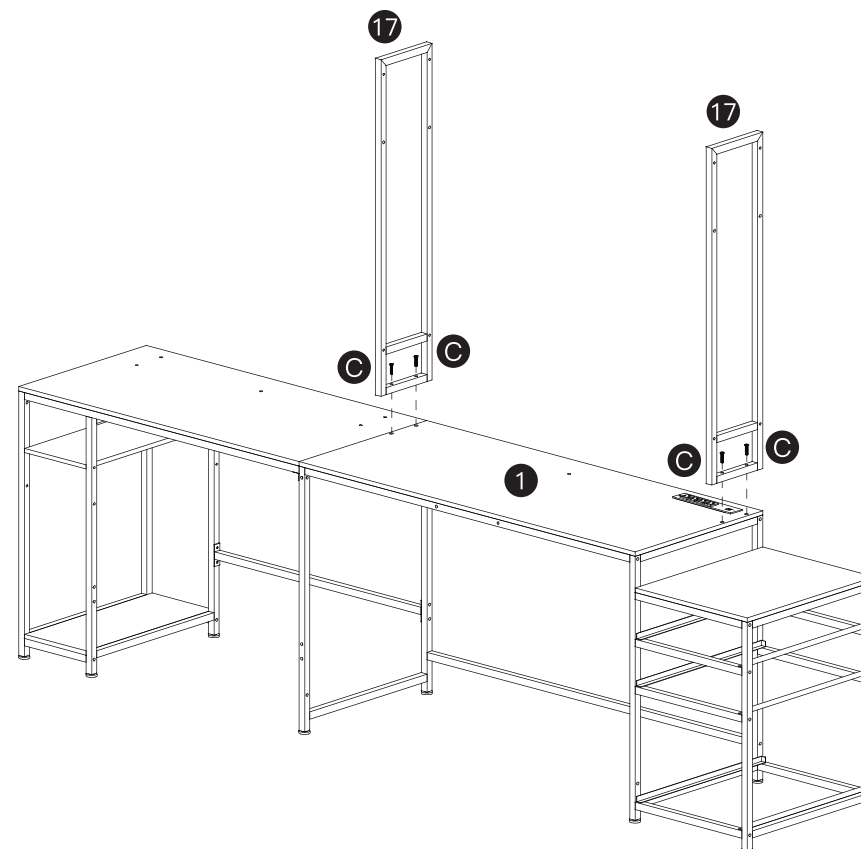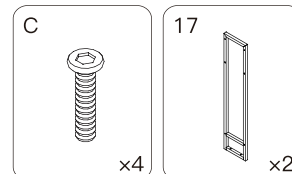


## Step 11

Connect part 17 with part 27, use part C to screw them.


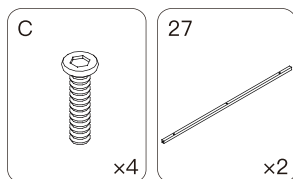


Make sure the side with holes of part 27 is facing upwards.

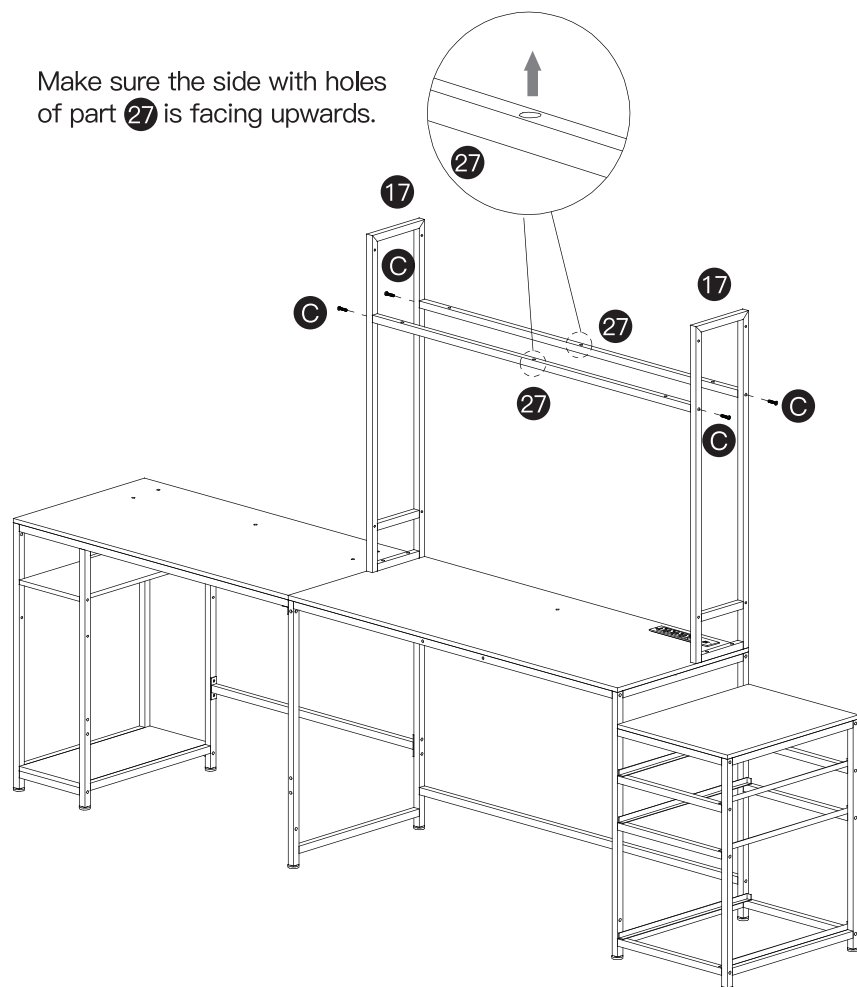



## Step 12

Connect part 3 and part 4 with part 5, use part D to screw them.

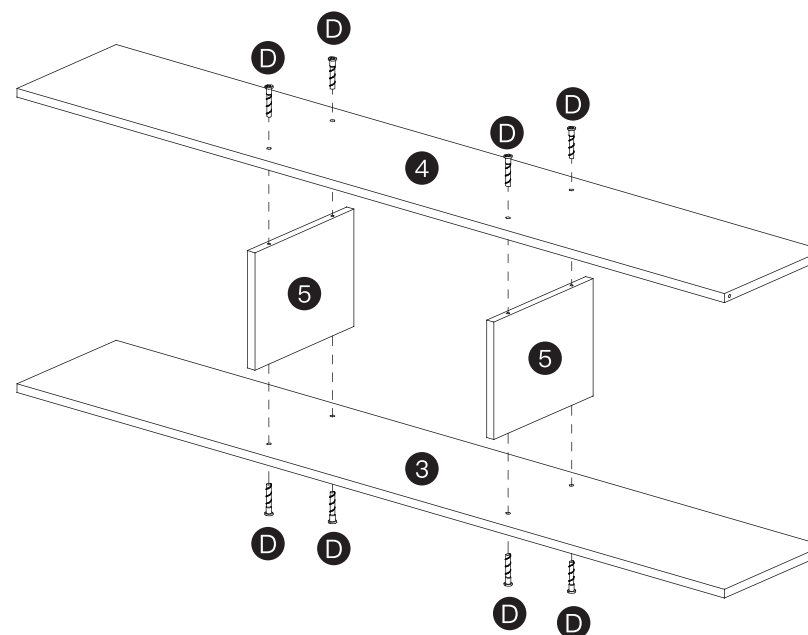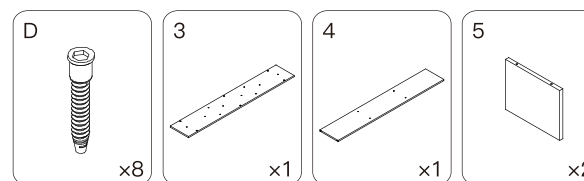



### Step 13

Install the part of last step on the frame, use part **C** and **D** to screw them.

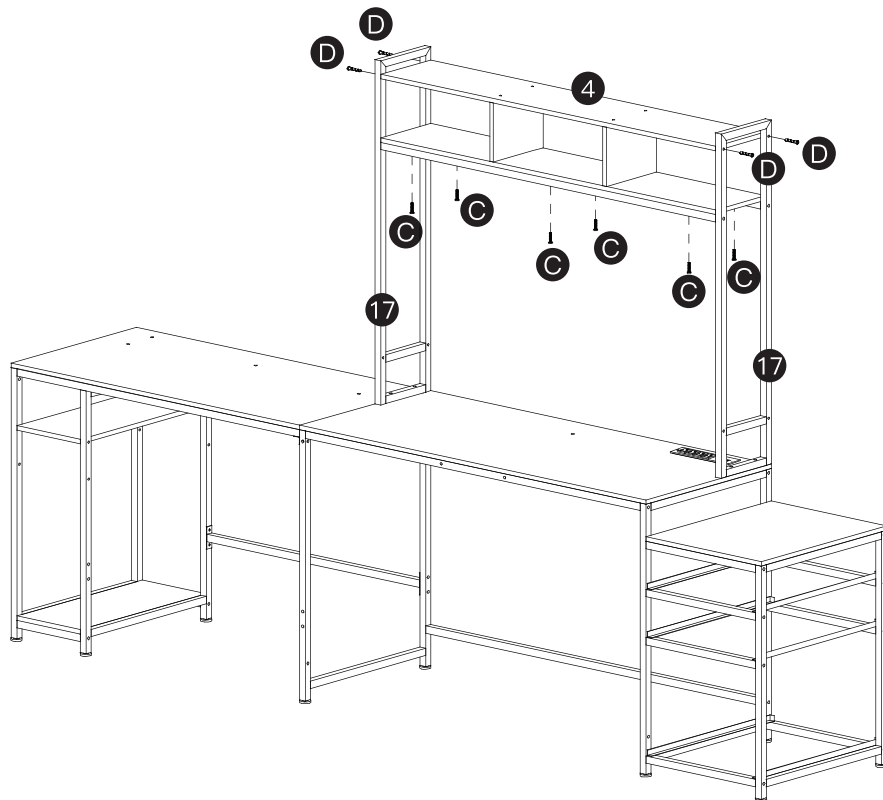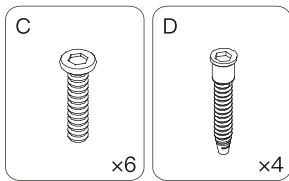

### Step 14



Install part **19** on part **9**, use part **C** to screw them.

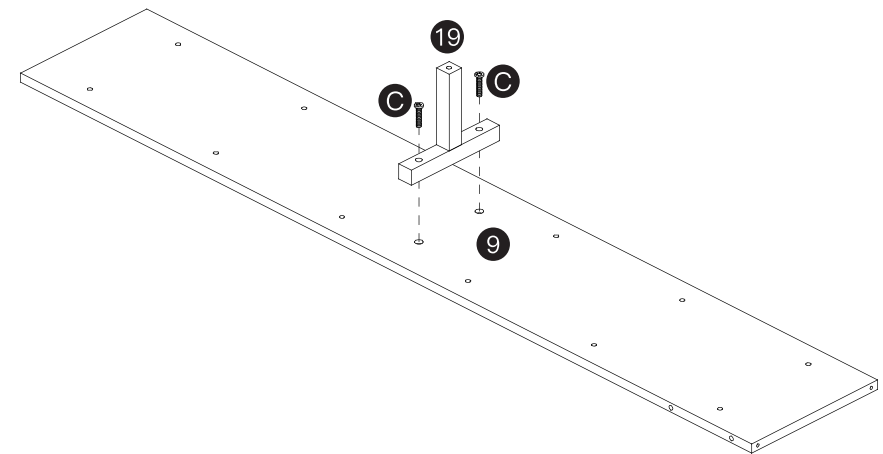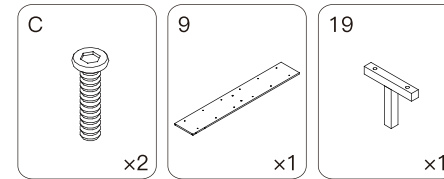





## Step 15

Connect part 17 with part 9, use part C & D to screw them.

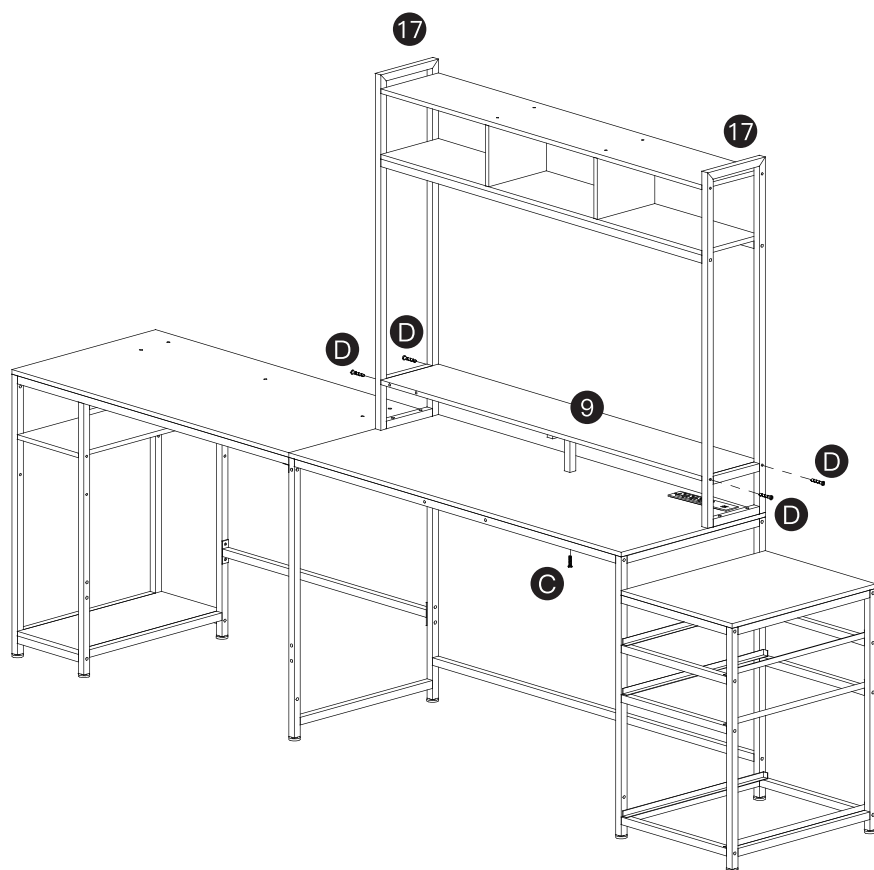
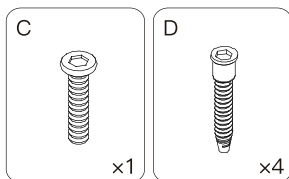


## Step 16





Install part 19 and part 20 on part 10, use part C to screw them.

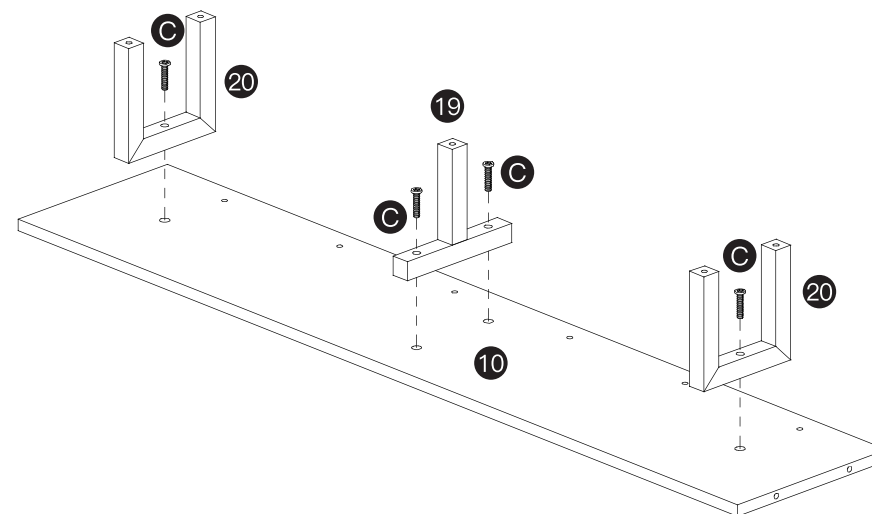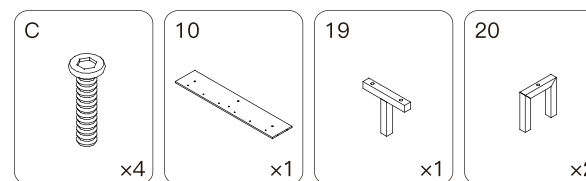

## Step 17 Use part **C** to fix part **10**.

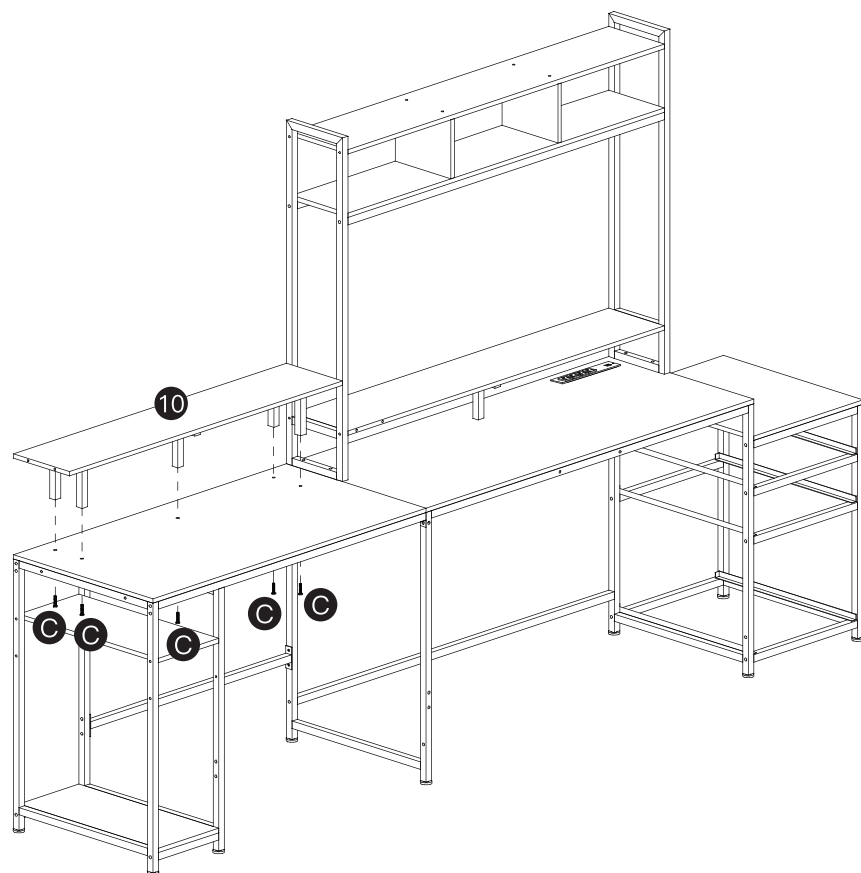
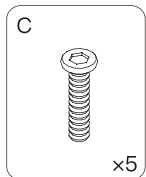


## Step 18 Connect part **32** with part **A** & **H** to form two X-Shape parts.

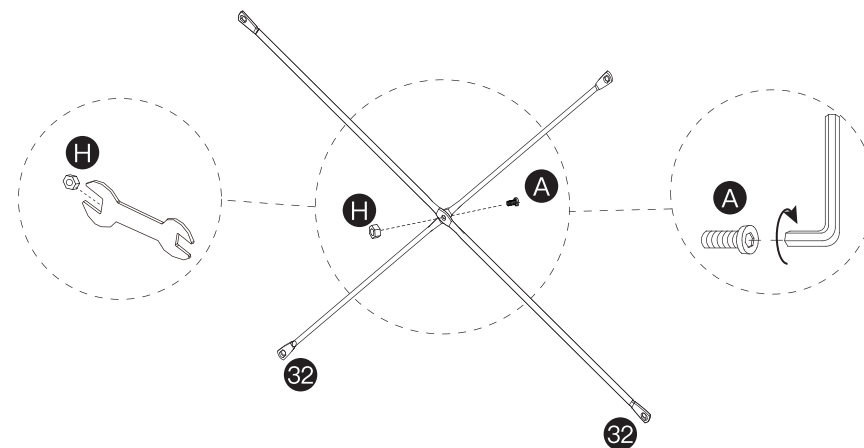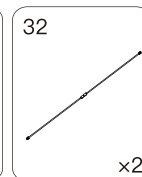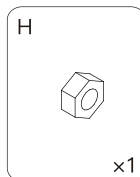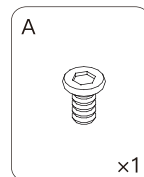



## Step 19

Attach the X-shape parts to the back of the frame, use part **A** to lock them in.

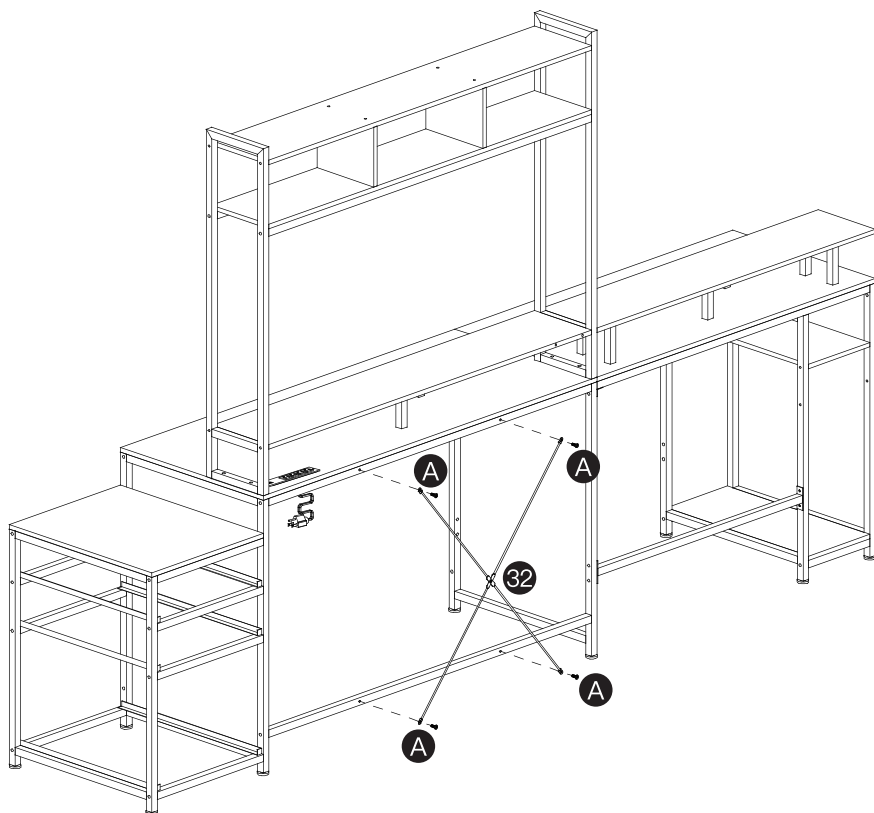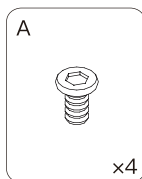




## Step 20

Install part **33** on part **14**, use part **A** to screw them.

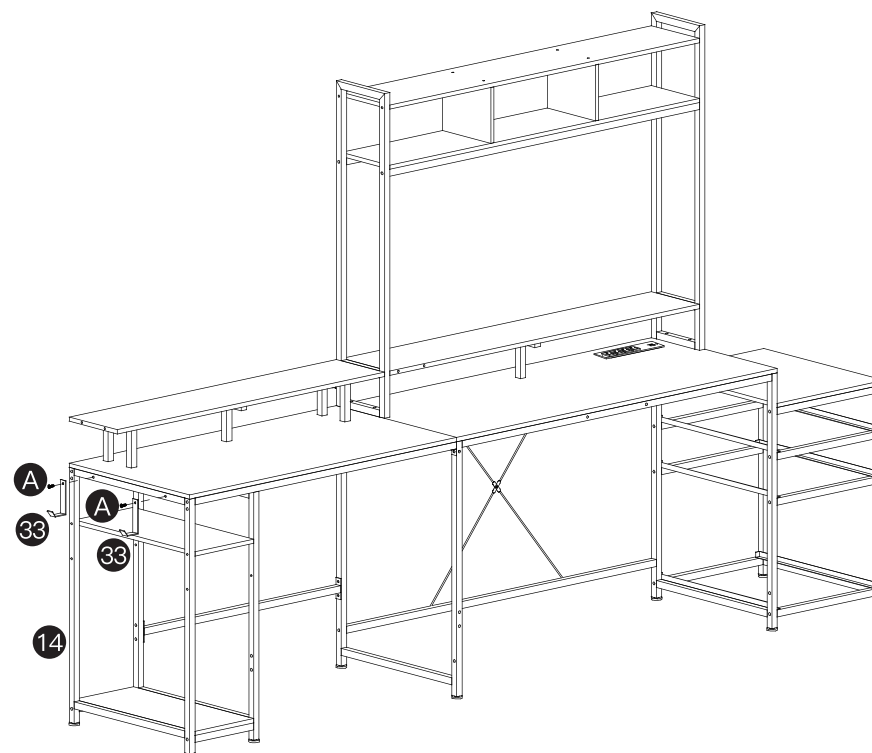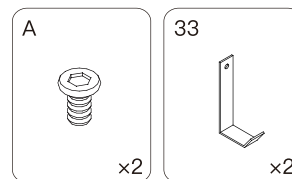




## Step 21

Open the drawers (part 36 & 37) and put the support boards inside, and install part K on with part F.

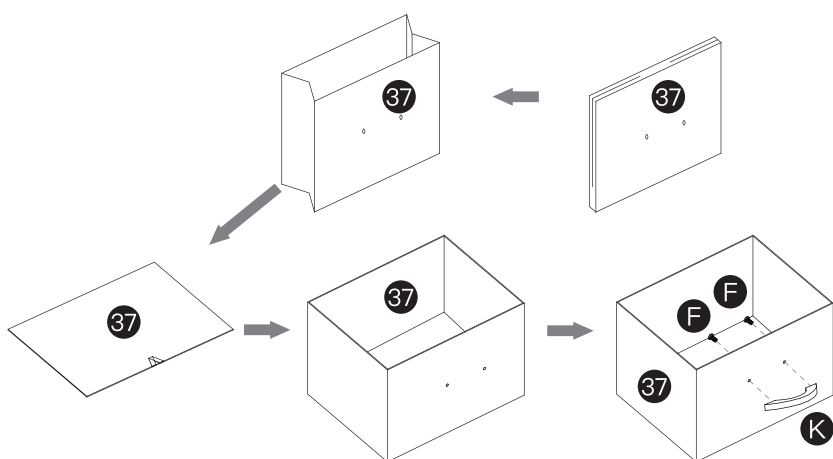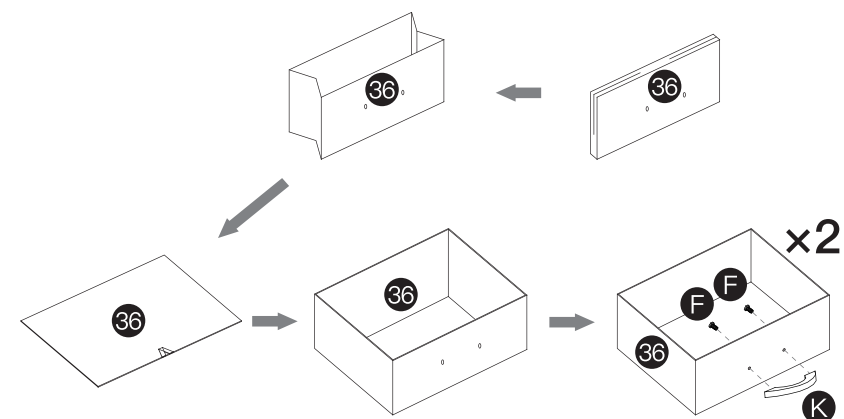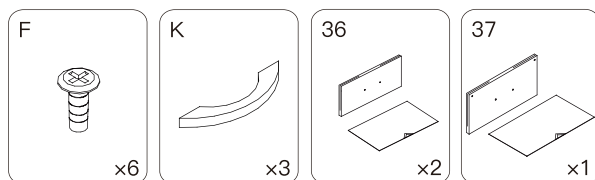


## Step 22

Install part 30 on part 37, use part A & H to screw them. Then put part 31 on part 30.

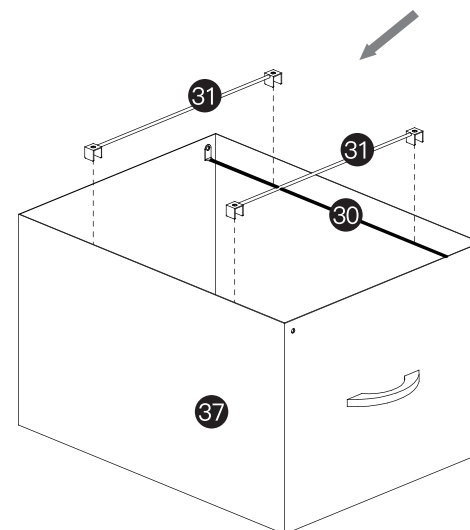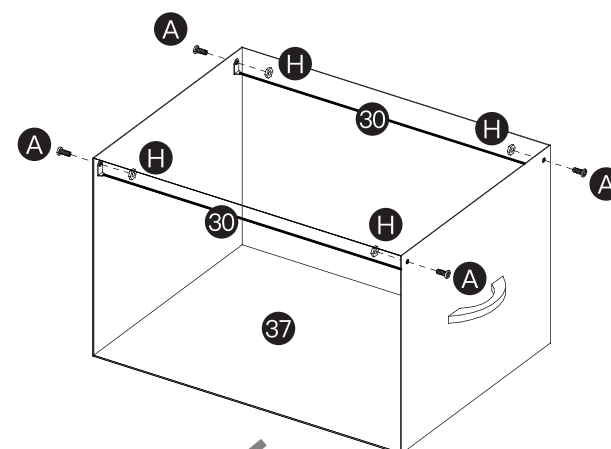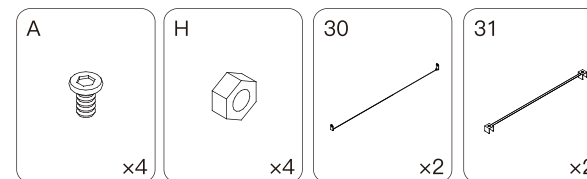



## Step 23

Put all drawers in.

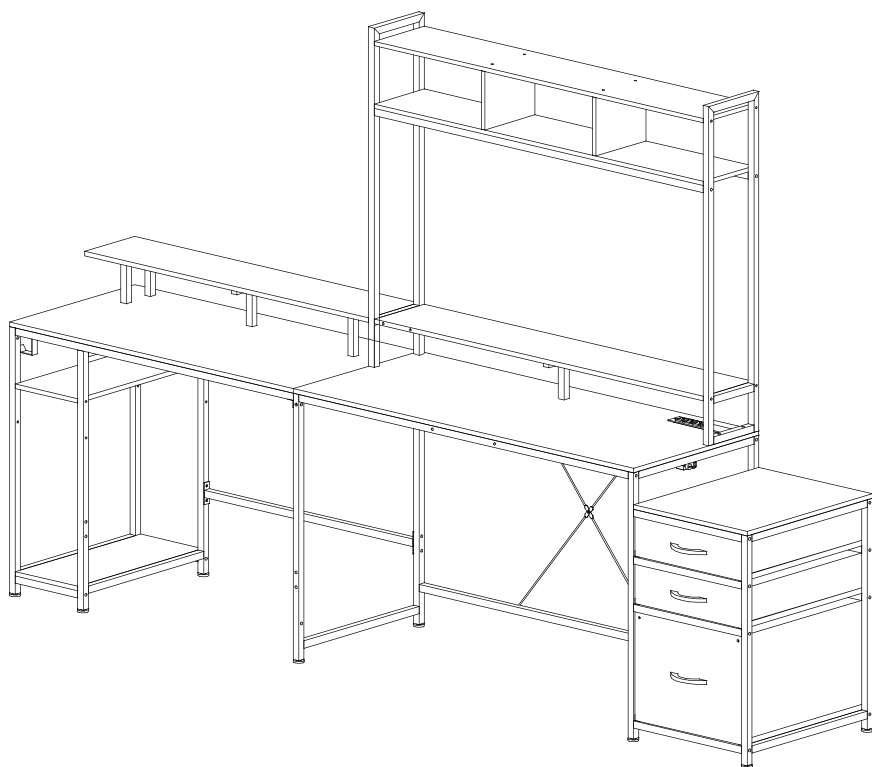


## Step 24

(Optional) Install the anti-tip device (part M).

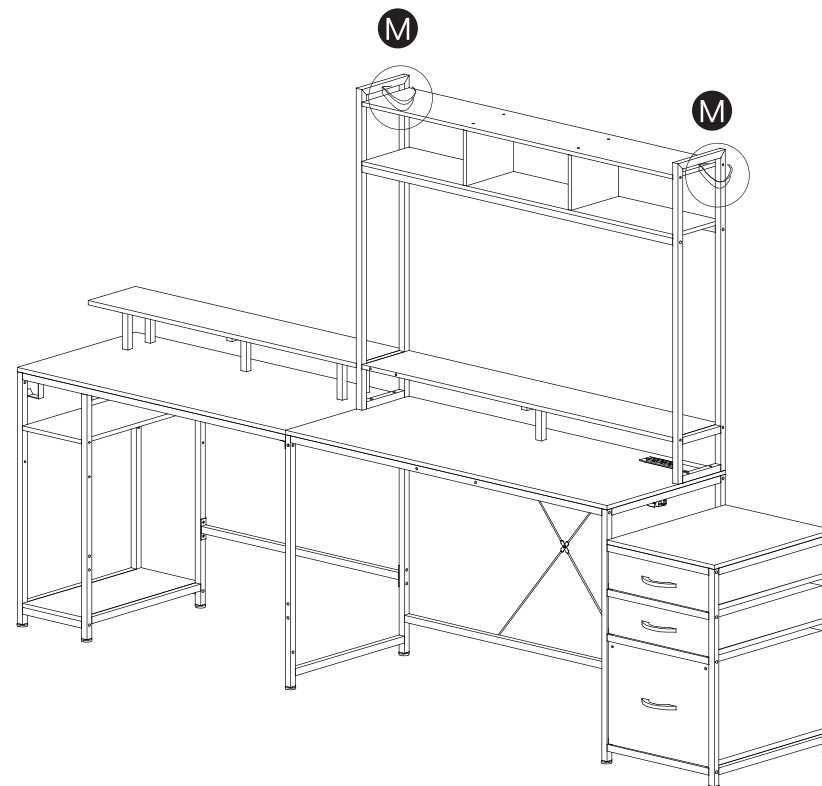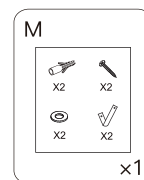

## REMOTE CONTROL MANUAL

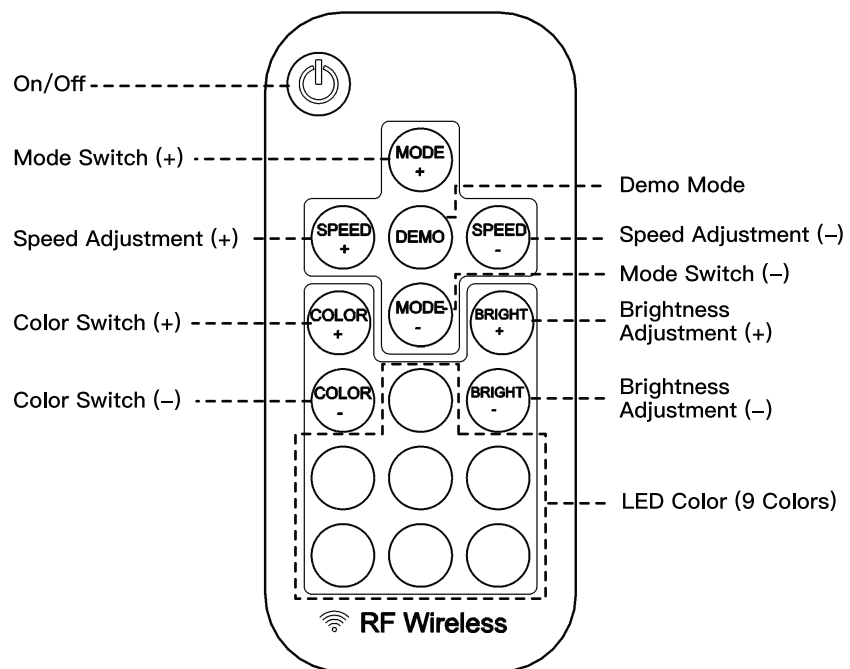

**NOTE:** To use the remote control, it must be pointed directly at the sensor on the light strip.

