
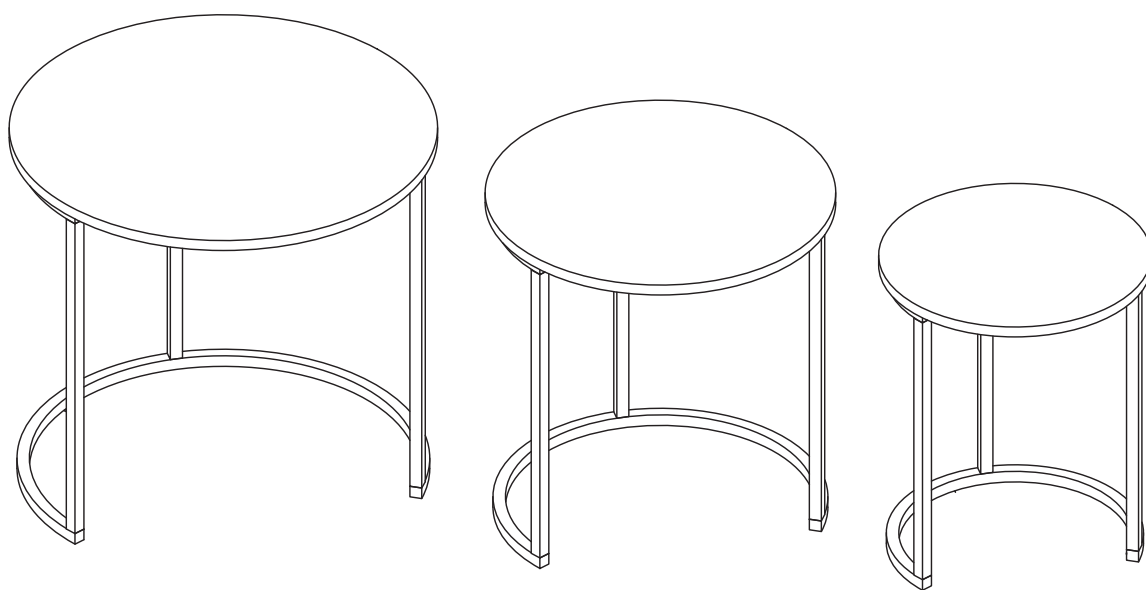
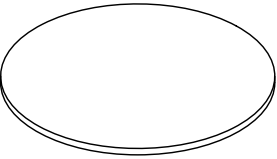
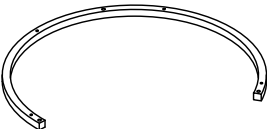

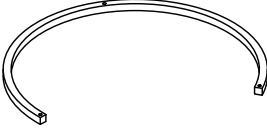
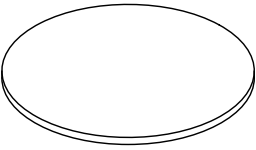
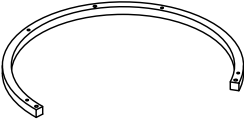







ASSEMBLY INSTRUCTION

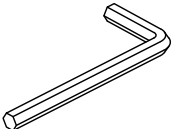


PACKAGE CONTENTS

1  1pc	2  1pc	3  3pcs	4  1pc
5  1pc	6  1pc	7  3pcs	8  1pc
9  1pc	10  1pc	11  3pcs	12  1pc


A  18pcs	B  1pc	C  11pcs	
---	---	--	--

Tools needed: Allen wrench(B-included), Phillips screwdrive(not included)


A
6pcs




Step 1

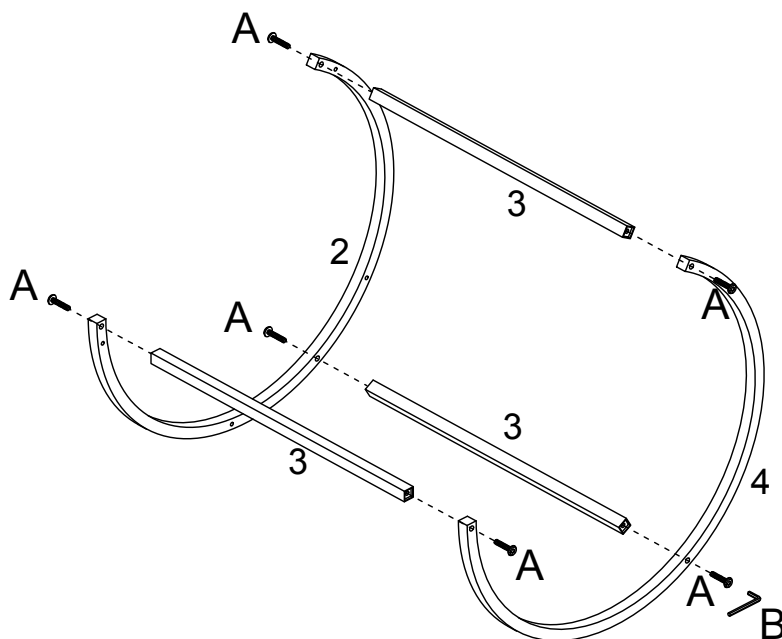


C
4pcs




Step 2

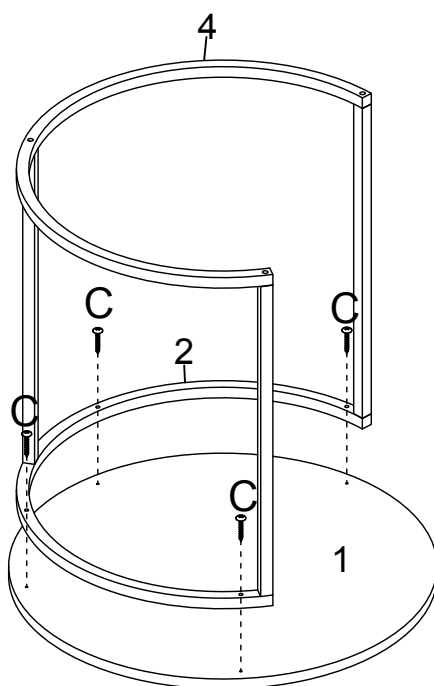


A
6pcs




Step 3

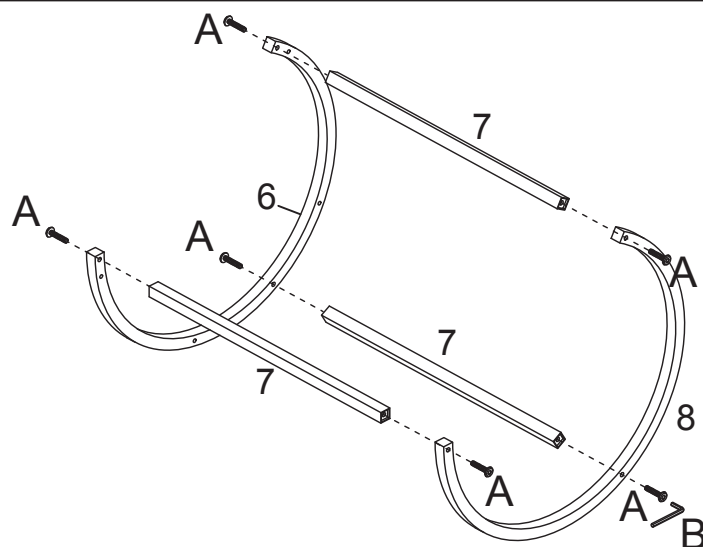


C
4pcs




Step 4

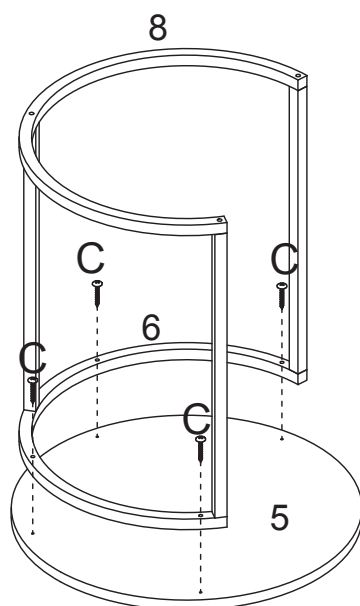


A
6pcs




Step 5

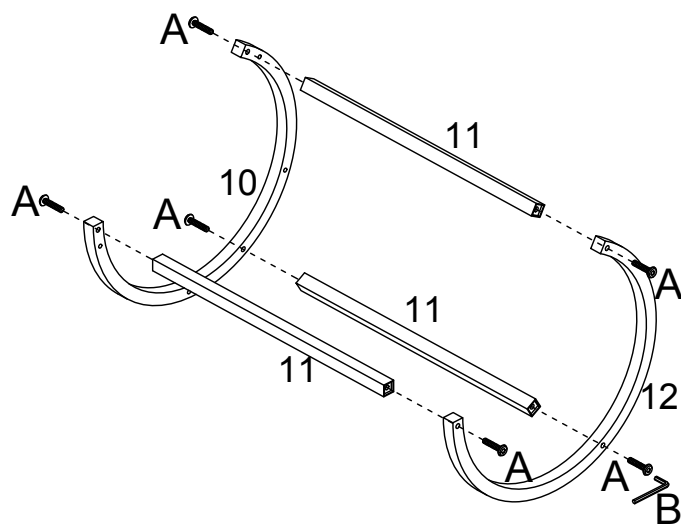


C
3pcs



Step 6

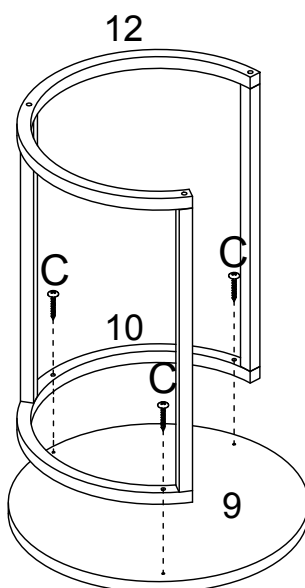

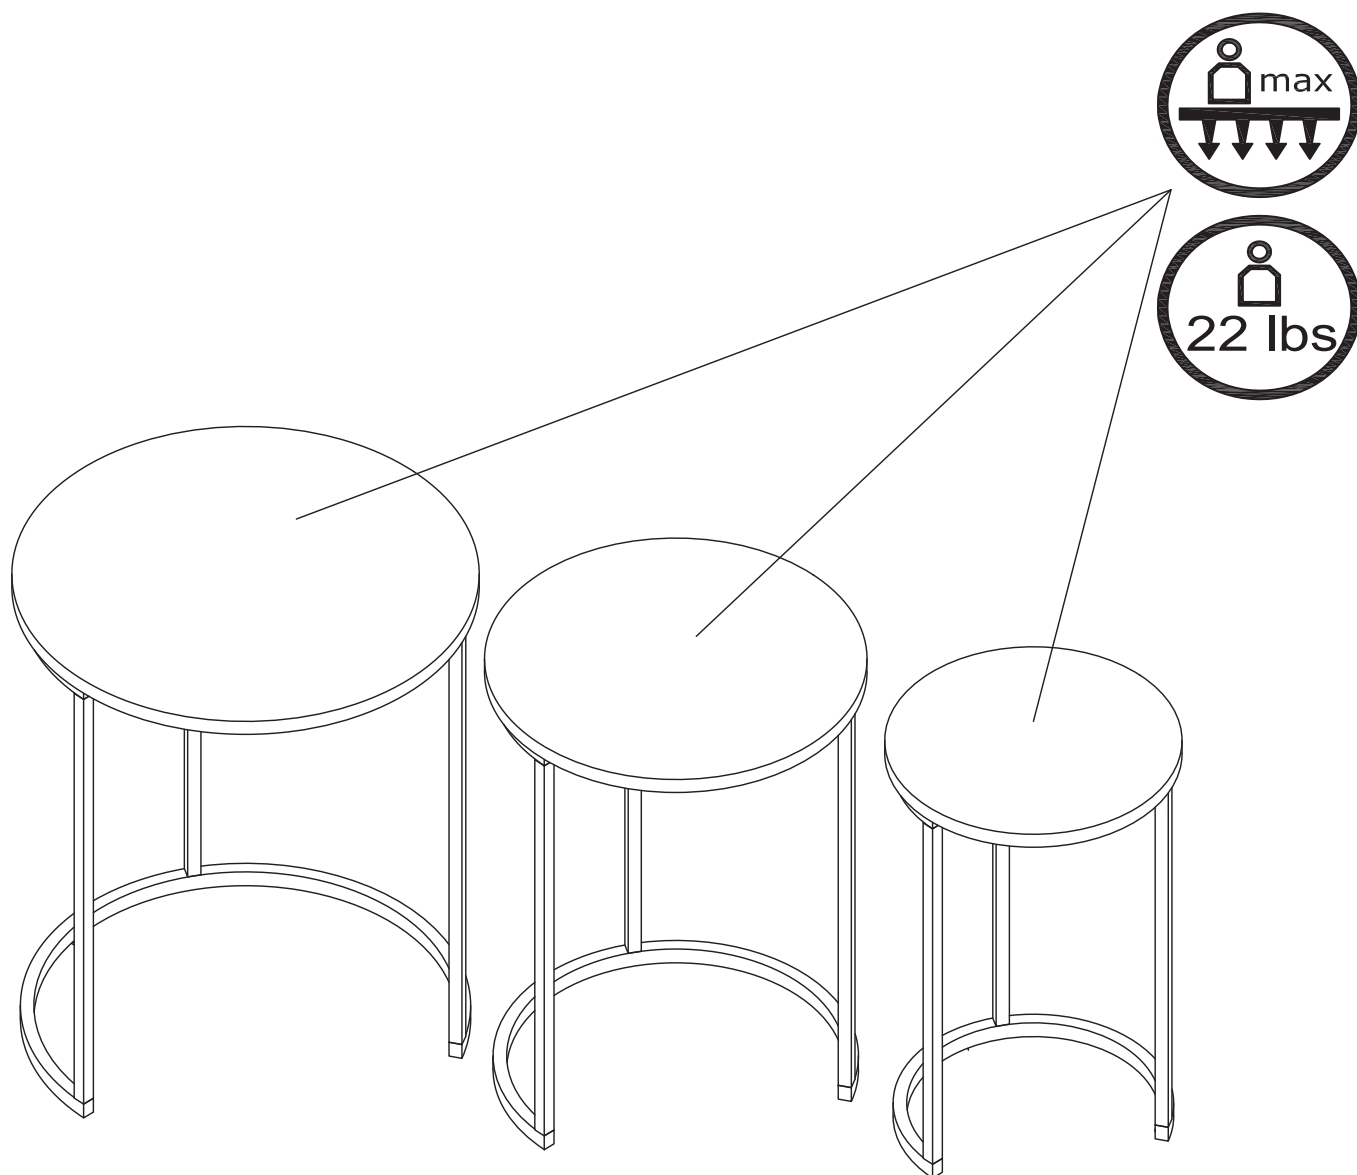

CLEANING INSTRUCTION:

- Dust using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish.

FOR INDOOR USE ONLY.