

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 202811 202812

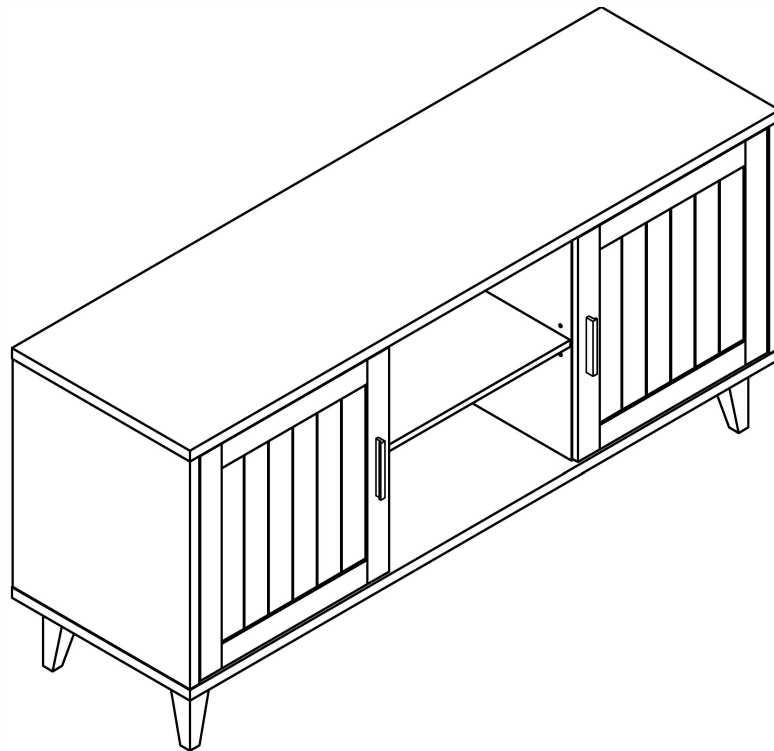







PARTS IDENTIFICATION

ITEM#: 202811 202812

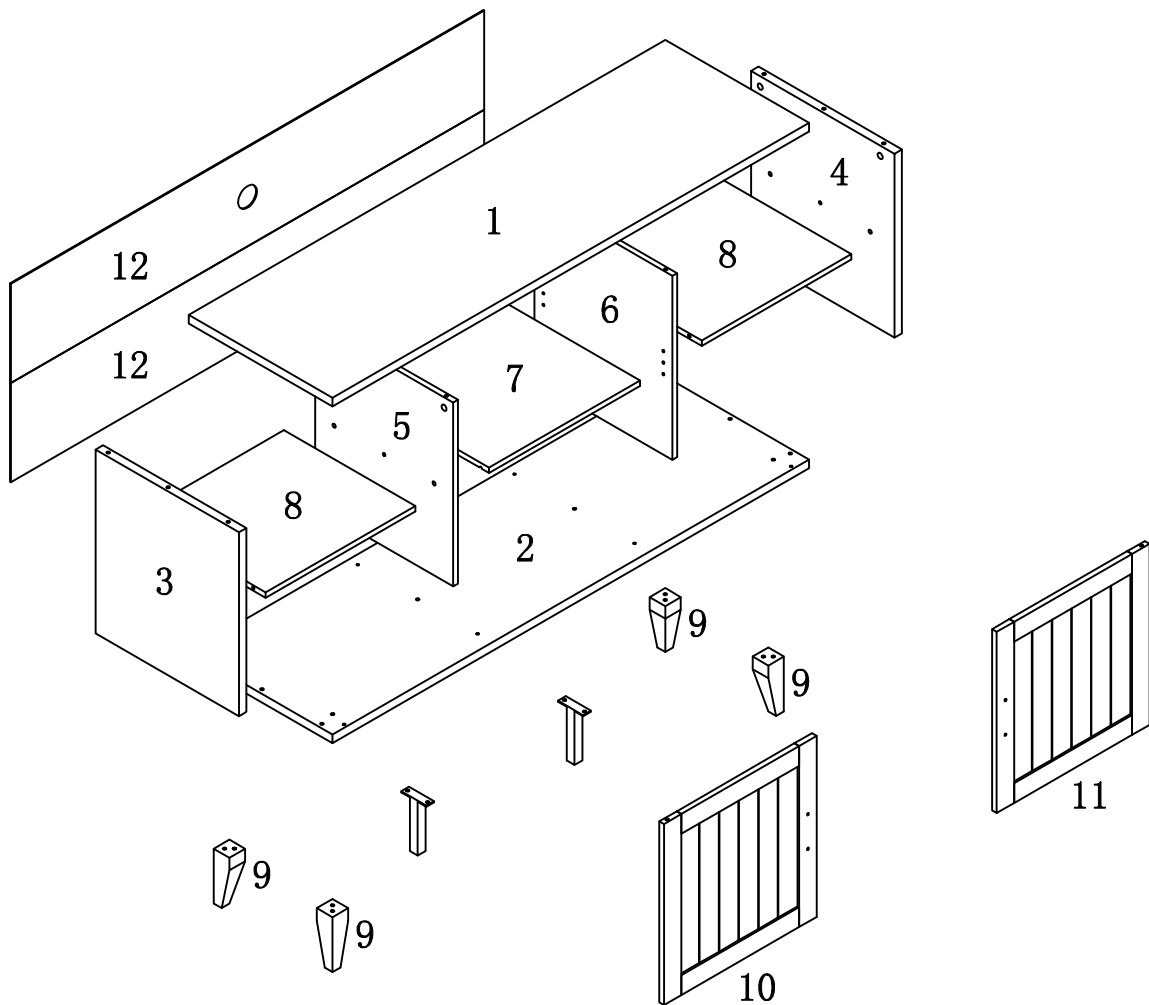

(1)	1pc	(7)	1pc
(2)	1pc	(8)	2pcs
(3)	1pc	(9)	4pcs
(4)	1pc	(10)	1pc
(5)	1pc	(11)	1pc
(6)	1pc	(12)	2pcs


HARDWARE IDENTIFICATION

	ITEM#: 202811	202812	
A		L29	16pcs
B		ø15	16pcs
C		ø8x25	16pcs
D		ø3x14	4pcs
E		ø3x16	4pcs
F		ø4x45	4pcs
G			2pcs
H			2pcs
I			2pcs
J		ø7x48	4pcs
K		ø16xø8x2	8pcs
L			46pcs
M		ø22	20pcs
N		ø16	4pcs
O		ø5	4pcs
P			4pcs
Q			1pc
R			2pcs
S		M4x22	4pcs
T		M6x12	4pcs
U		80x25x152	2pcs
V		197×5×1	1pc
W		ø4x25	1pc
X		ø5x40	1pc
Y		ø8 x 40	1pc
Z		12×12×1	2pcs
A1		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

HOW TO




Cam Bolt




Cam Lock

1

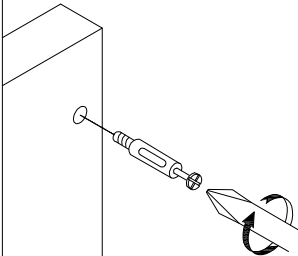


1. Screw Cam Bolt into panel.

2

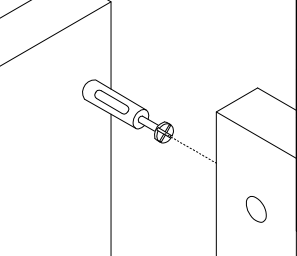


2. Insert Cam Bolt into bolt hole of joining panel.

3

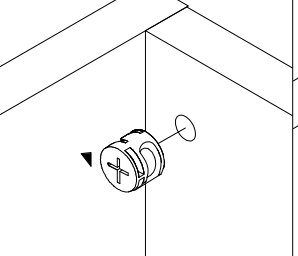


3. Insert Cam Lock. arrow facing bolt.


4

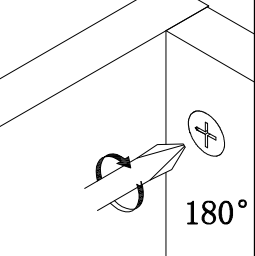

4. Gently turn Cam Lock clockwise to lock position.

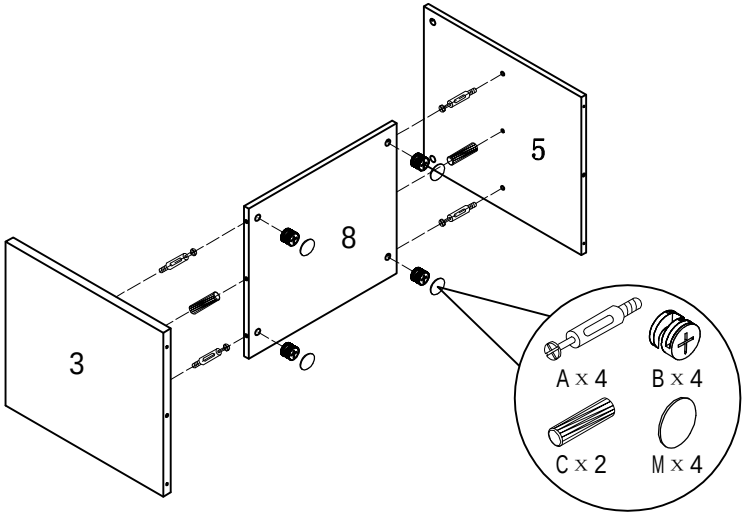


STEP1

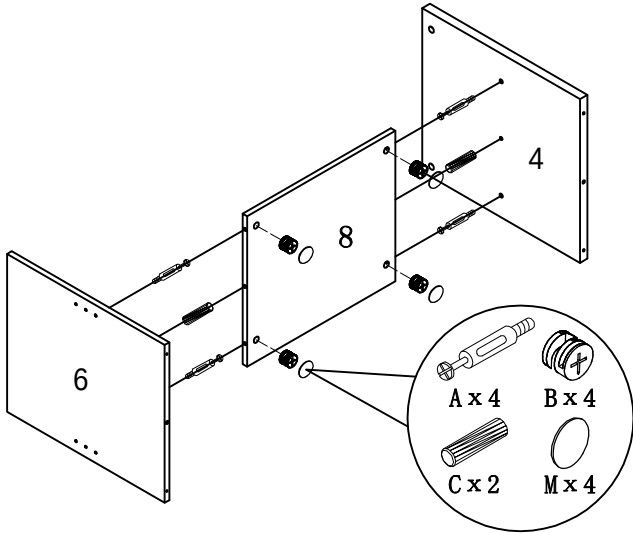

STEP2


ASSEMBLY INSTRUCTION

ITEM#:202811 202812

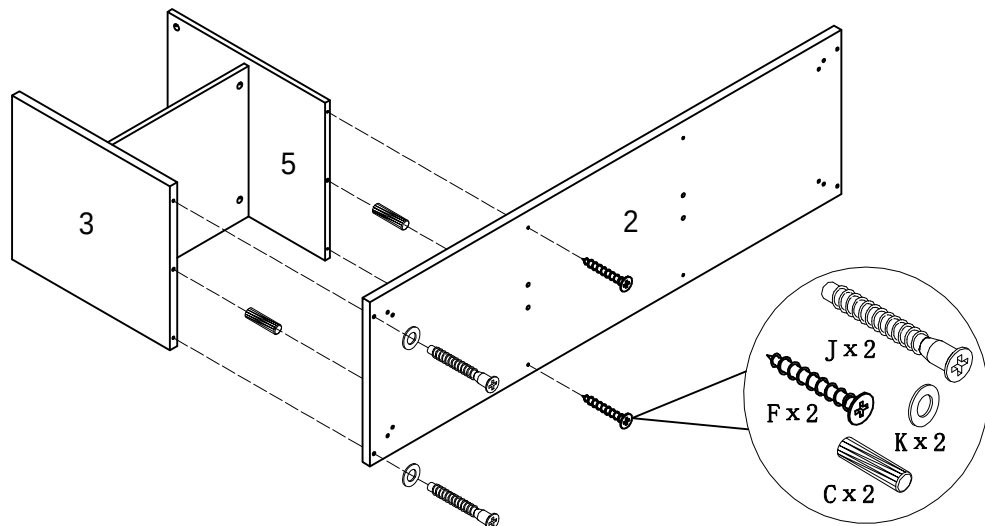


STEP3

STEP4

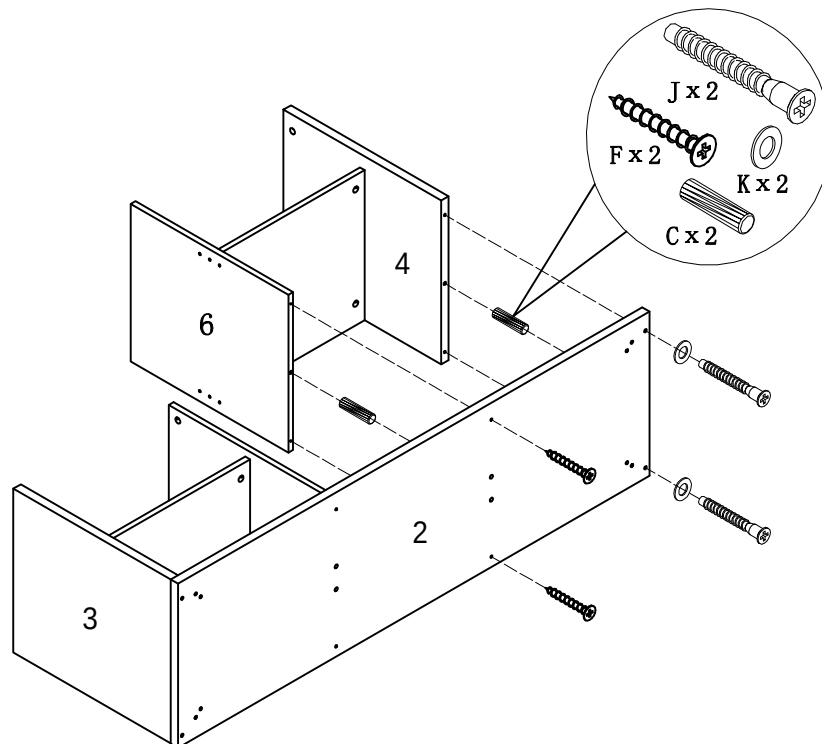


ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

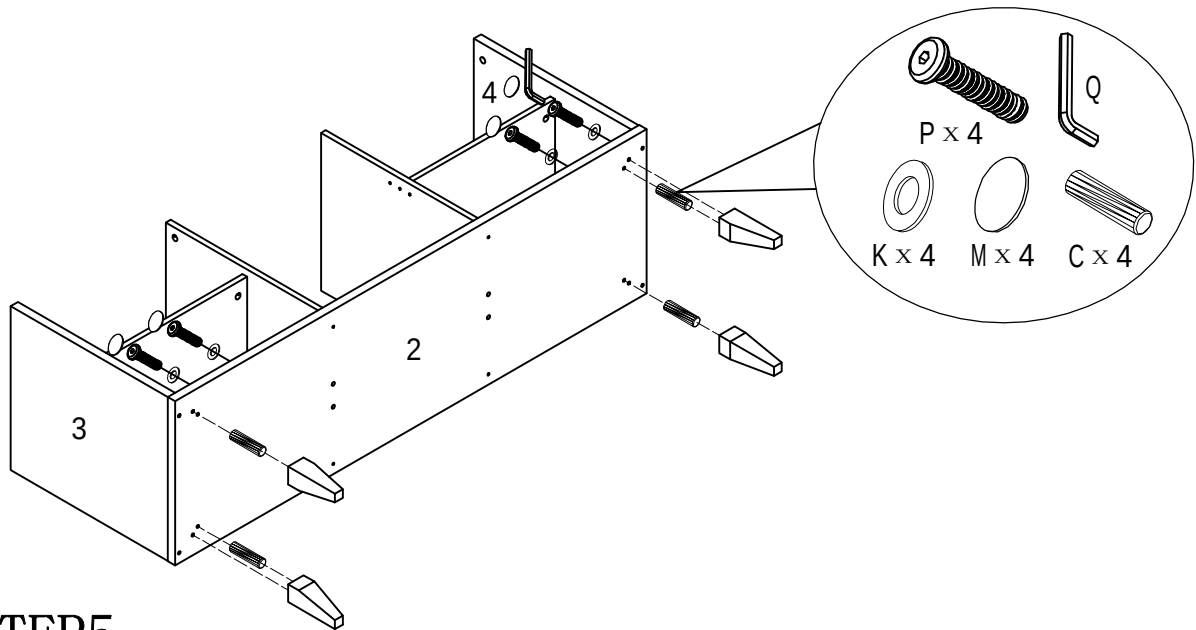


STEP 5

STEP 6

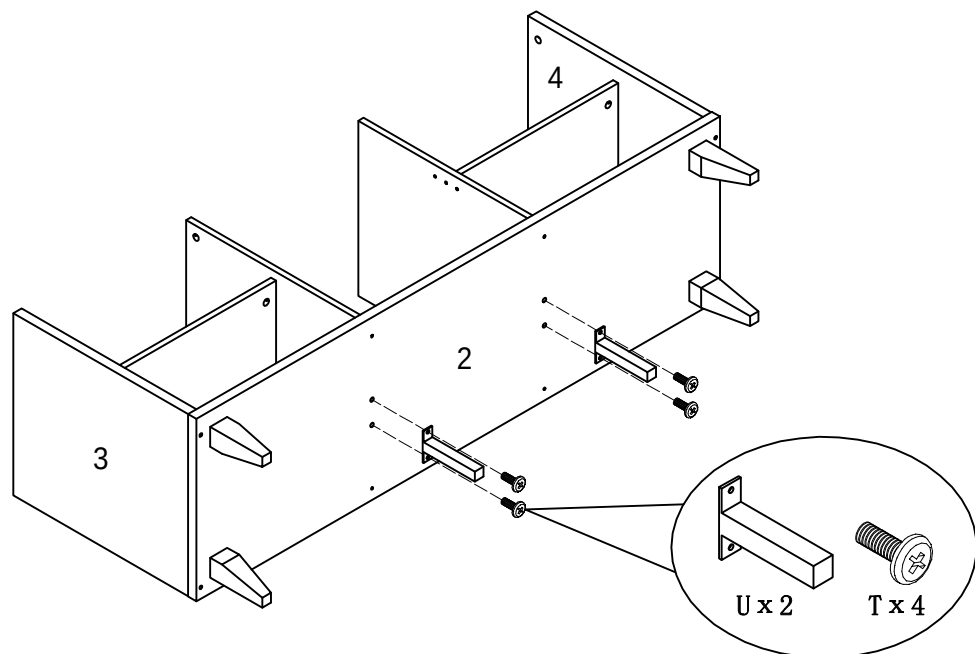


ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

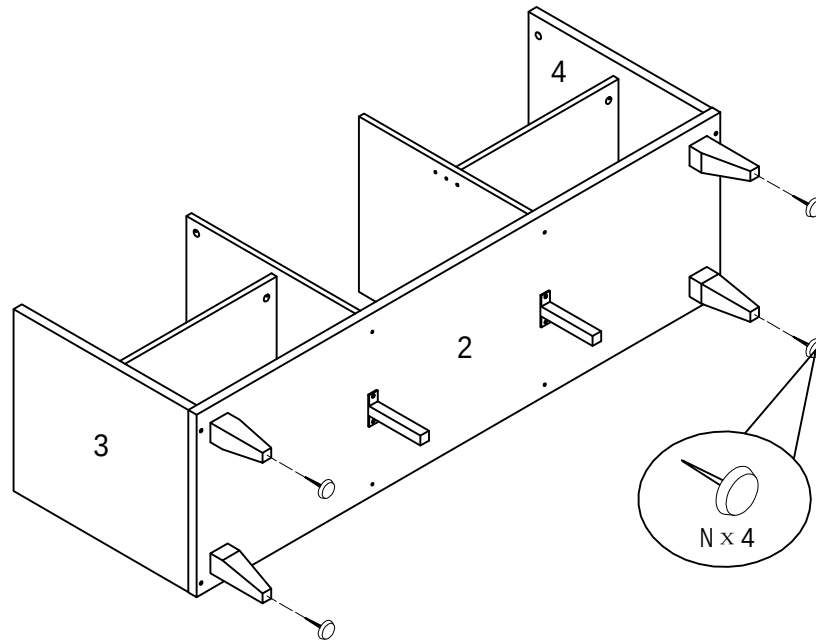


STEP 7

STEP 8

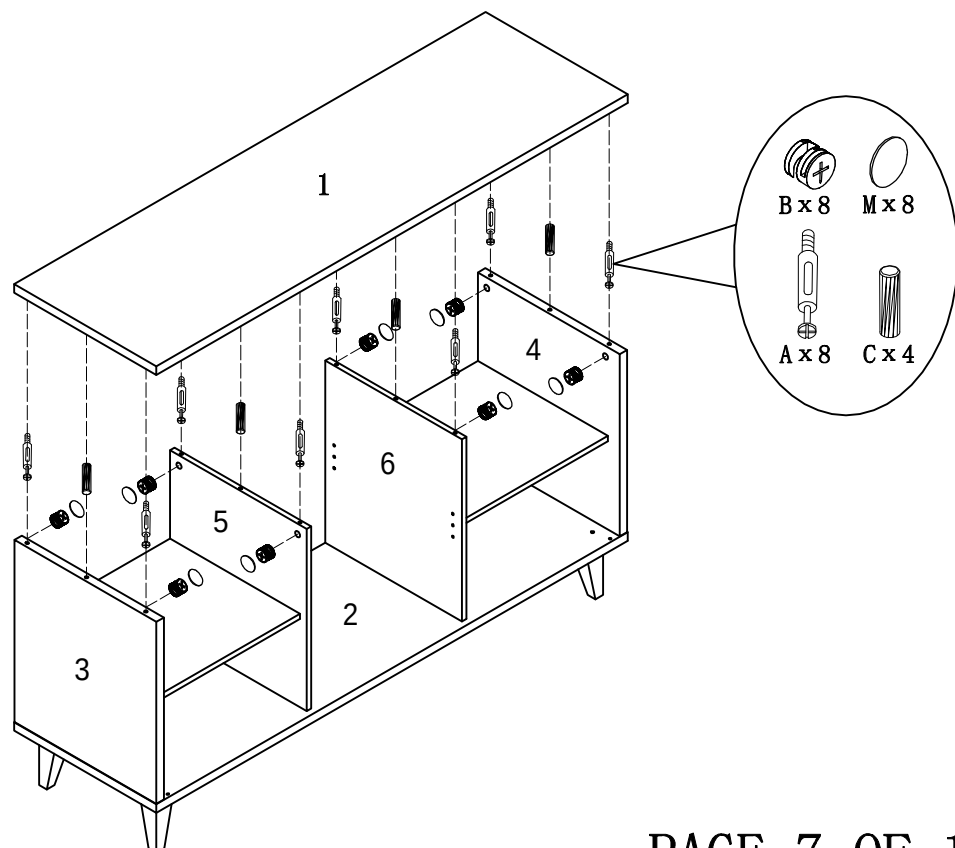


ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

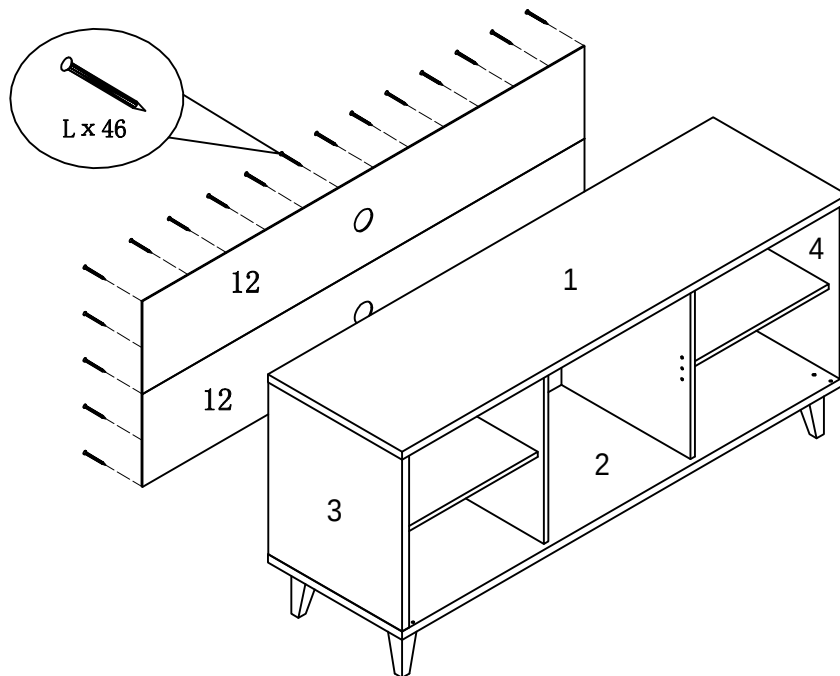


STEP9

STEP10

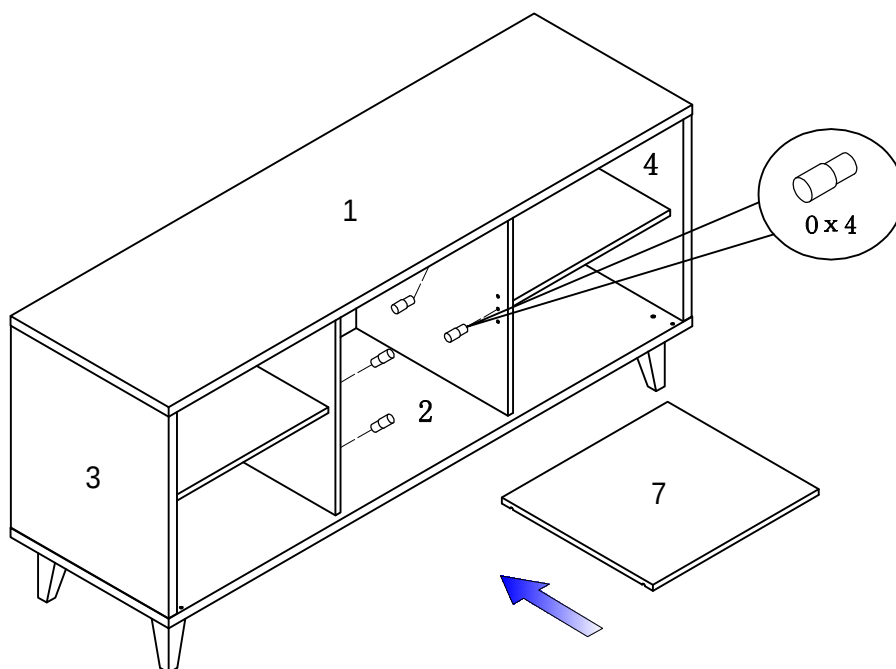


ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

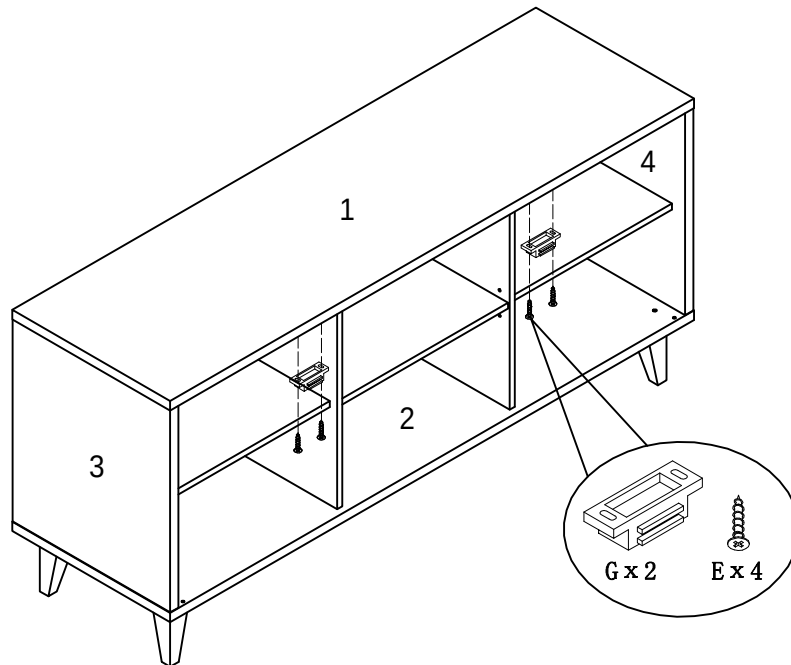


STEP11

STEP12

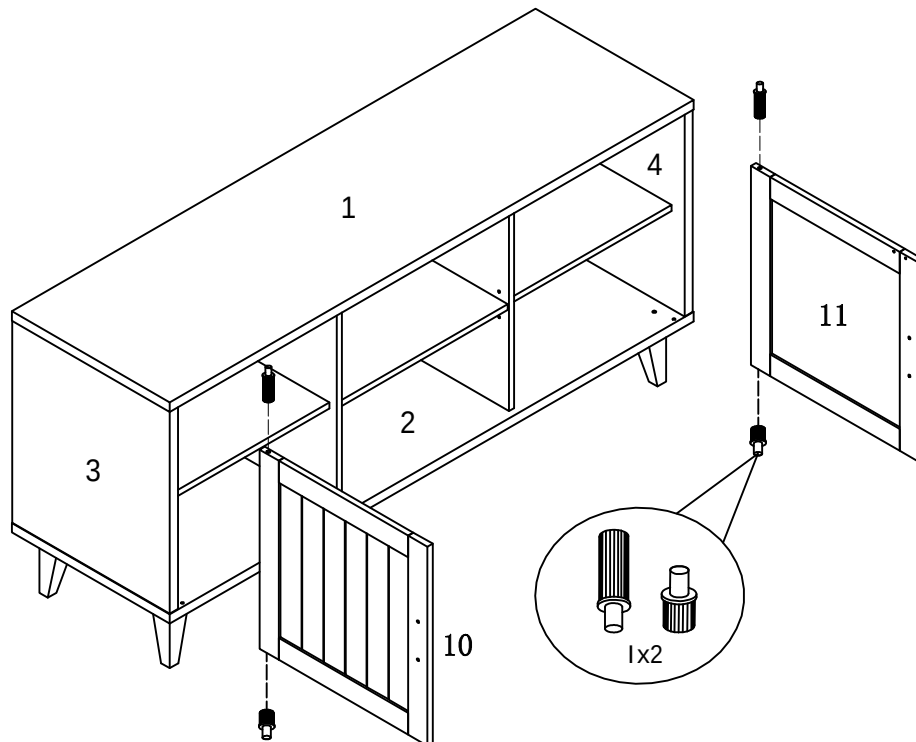


ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

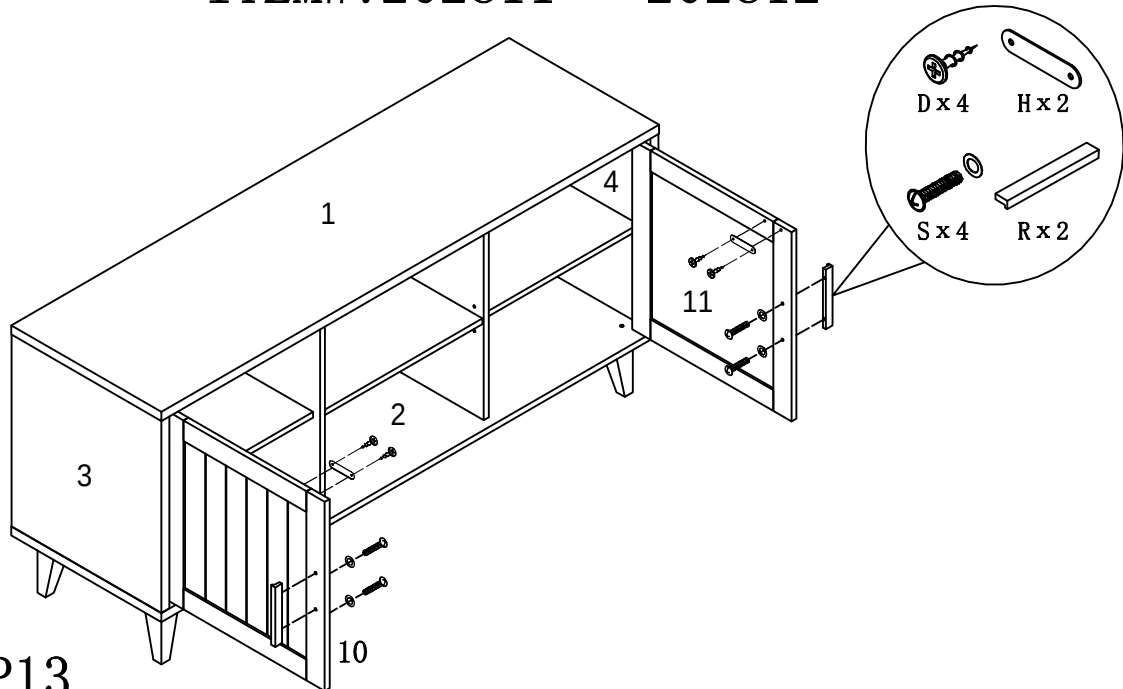

STEP13

STEP14

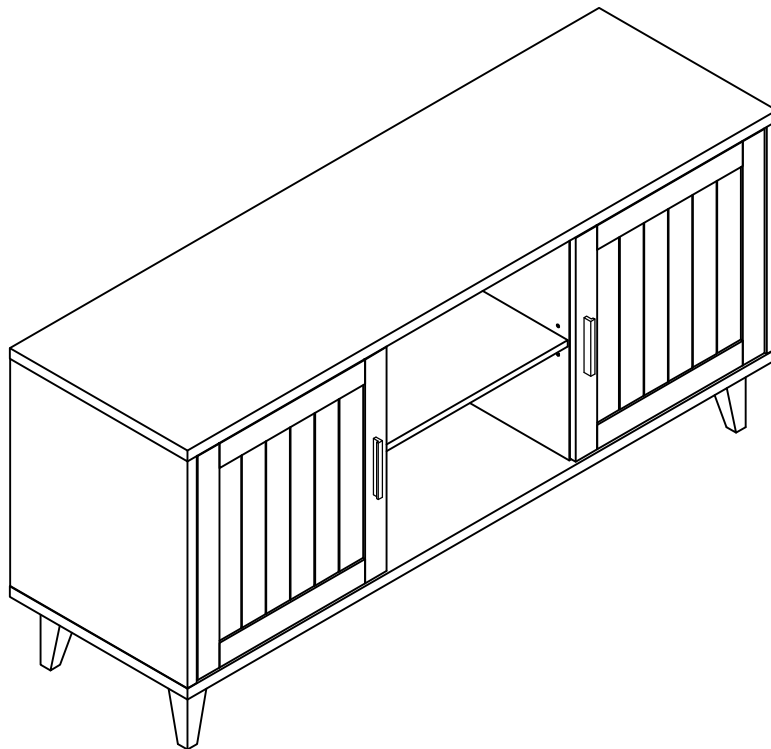

ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :


TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

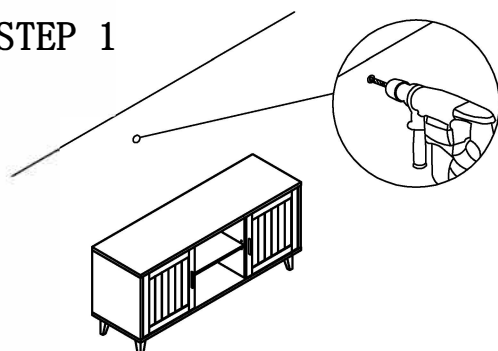


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

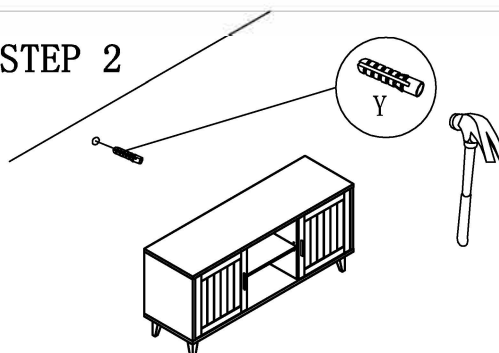


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

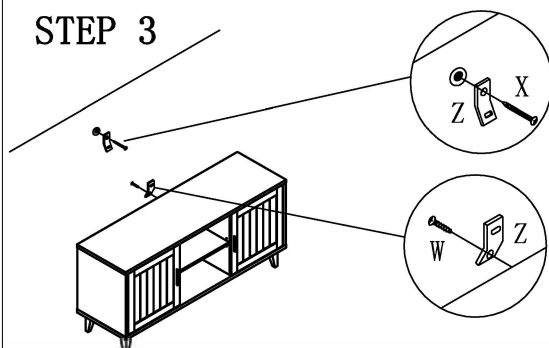

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

STEP 4

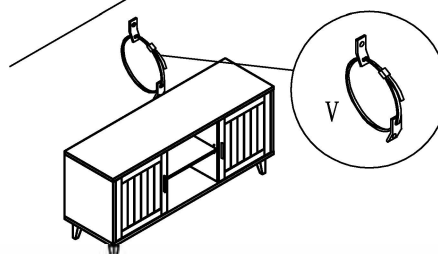

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.