


# ASSEMBLY INSTRUCTIONS


## Console Table

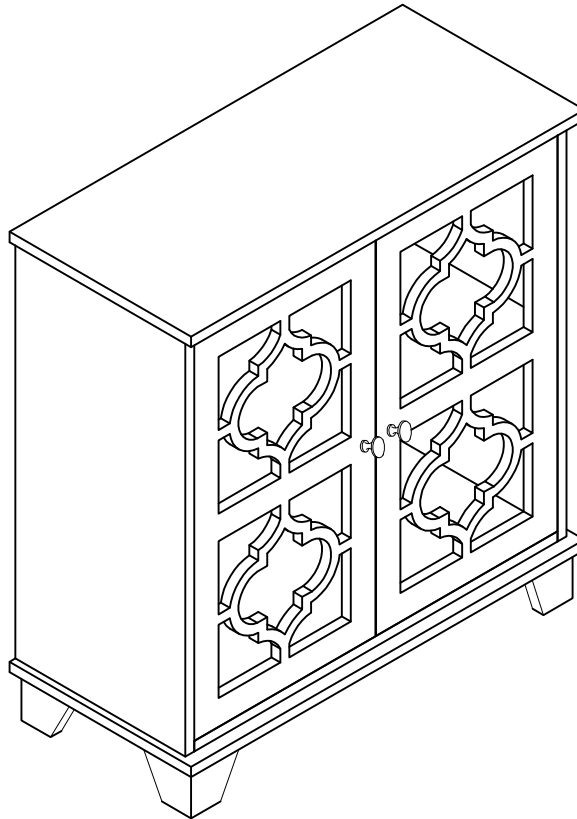


### NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


## To insert a cam lock: (Please read below instructions before assembling)

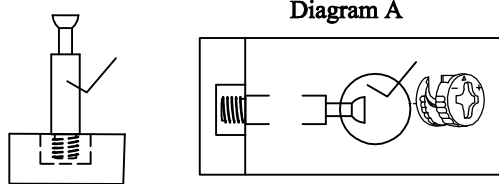


1. Insert cam screw into hole as shown in diagram A .

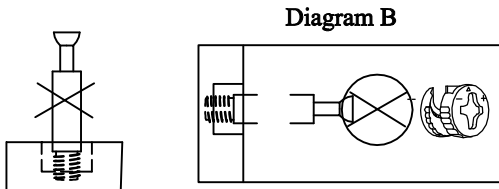


Make sure not to insert the cam screw:  
Too deep as shown in figure B as this will cause the  
cam screw to be misaligned and unable to  
interlock properly.

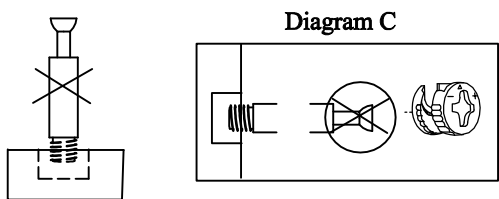


Also avoid inserting the cam screw too close to the  
surface of the hole as shown in figure C, as this will  
cause the cam lock to be too loose, and not interlock  
properly.

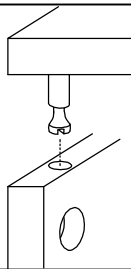

2. Connect the panels together.

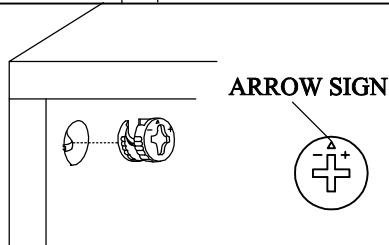

3. When inserting the cam lock make sure the arrow  
of the cam lock faces the cam screw.

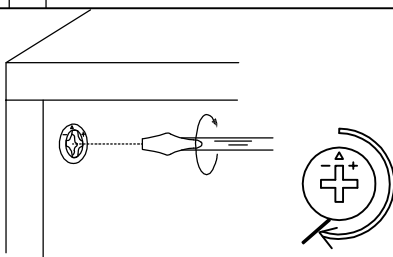





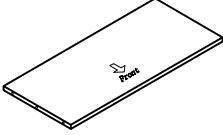

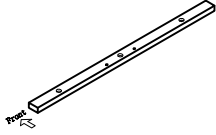
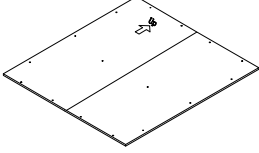
4. To tighten the cam lock turn the cam lock clockwise  
90-180 degree or until the arrow is facing opposite  
the place cam lock was inserted.

NOTE: DO NOT USE AN AUTOMATIC  
SCREWDRIVER TO TIGHTEN CAM LOCKS.










### Note:

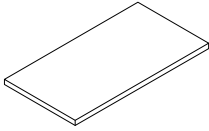- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.


# Part List



<b>A1</b> Quantity of 1  Top Panel	<b>A2 (L&amp;R)</b> Quantity of 2  Side Panel	<b>A3</b> Quantity of 1  Bottom Panel	<b>A4</b> Quantity of 4  Leg
<b>A5</b> Quantity of 1  Shelf	<b>A6</b> Quantity of 2  Door (L&R)	<b>A7</b> Quantity of 6  Cross Bar	<b>A8</b> Quantity of 1  Back Panel

# Hardware List

<b>B1</b> Quantity of 10  Wood Dowel	<b>B2</b> Quantity of 12  Cam-Lock	<b>B3</b> Quantity of 3  Screw	<b>B4</b> Quantity of 1  Magnet
<b>B5</b> Quantity of 4  Hinge	<b>B6</b> Quantity of 20  Screw	<b>B7</b> Quantity of 2  Door Knob	<b>B8</b> Quantity of 4  Bolts with Washers
<b>B9</b> Quantity of 2  Wood Dowel			

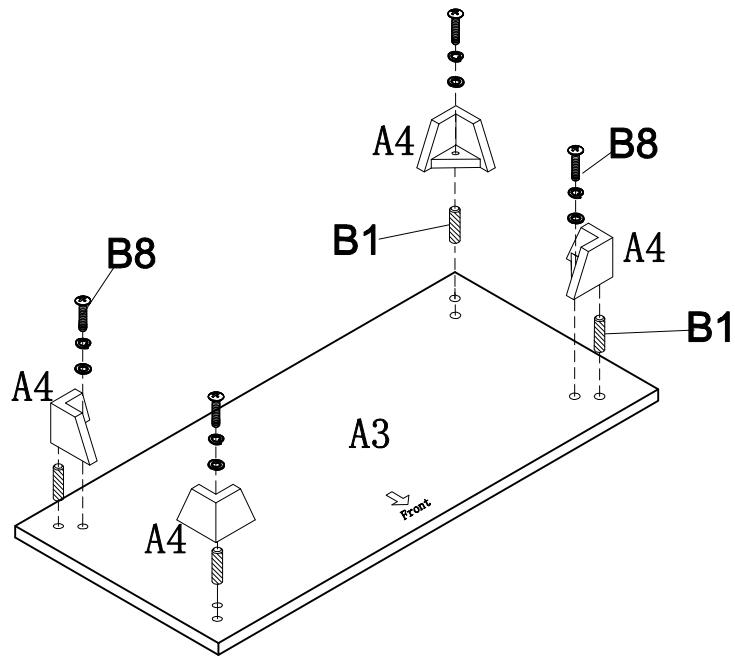
## STEP 1





B1		4pcs
B8		4sets

Assemble Legs A4 to Bottom Panel A3 using Wood Dowels B1 and Bolts B8 with washers.

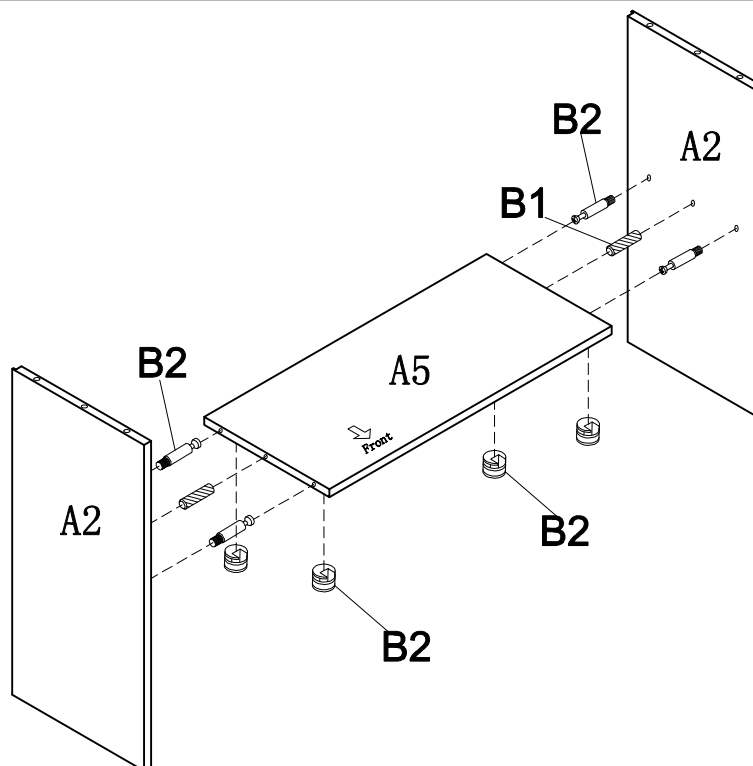
## STEP 2



B1		2pcs
B2		4sets


Assemble Side Panel A2(L&R) to Shelf A5 using CamLocks B2 and Wood Dowels (B1).

## STEP 3

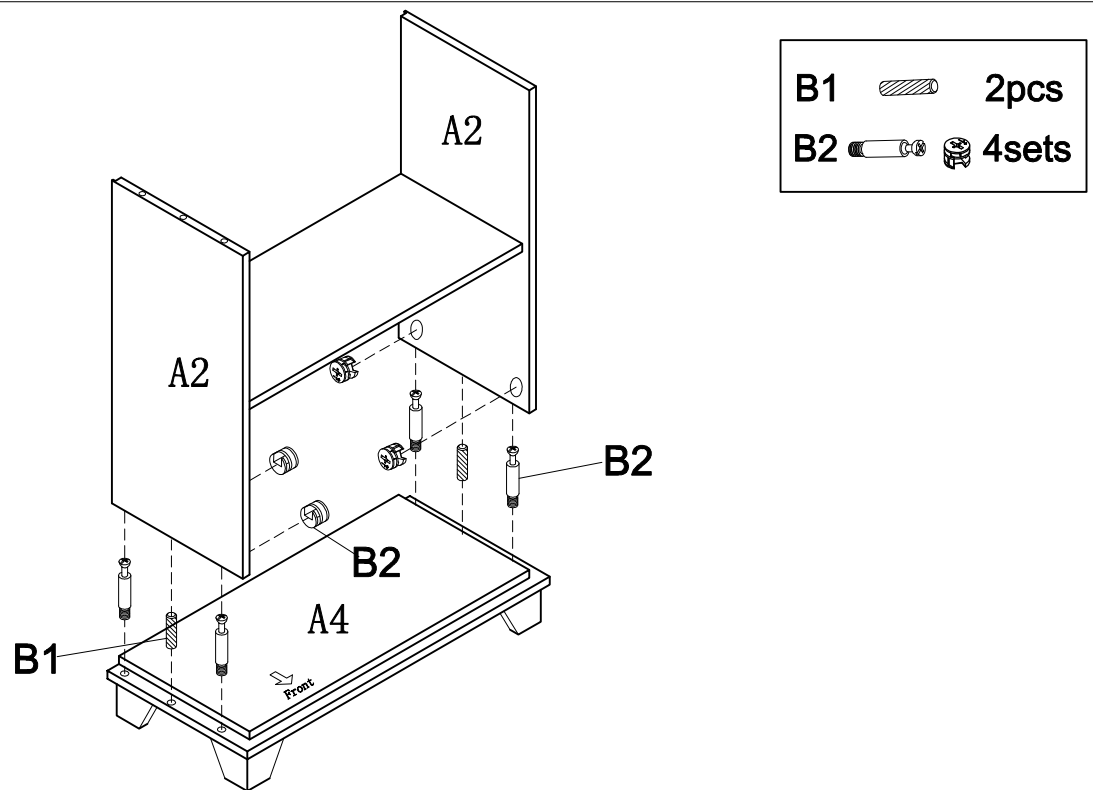


Assemble Side Panels A2(L&R) to Bottom Panel A4 using Wood Dowels B1 and CamLocks B2.

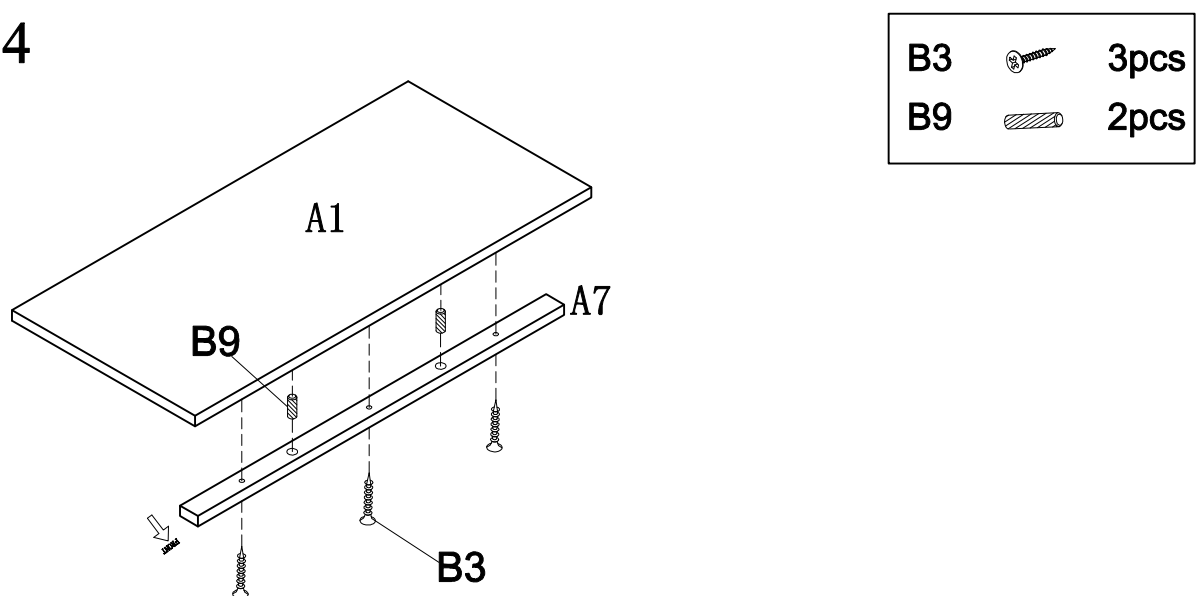

## STEP 4



Assemble Cross Bar A7 to the bottom of Top Panel A1 using Wood Dowels B9 and Screws B3.

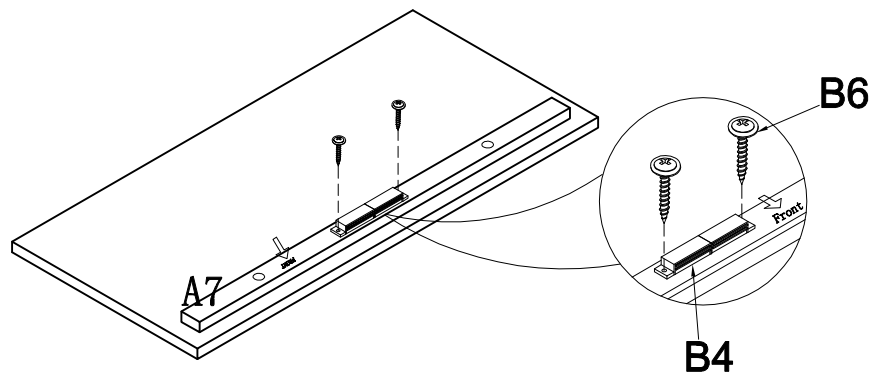
## STEP 5





B4		1pcs
B6		2pcs

Assemble Magnet B4 to Cross Bar A7 using Screws B6, please note holes are pre-drilled.


## STEP 6

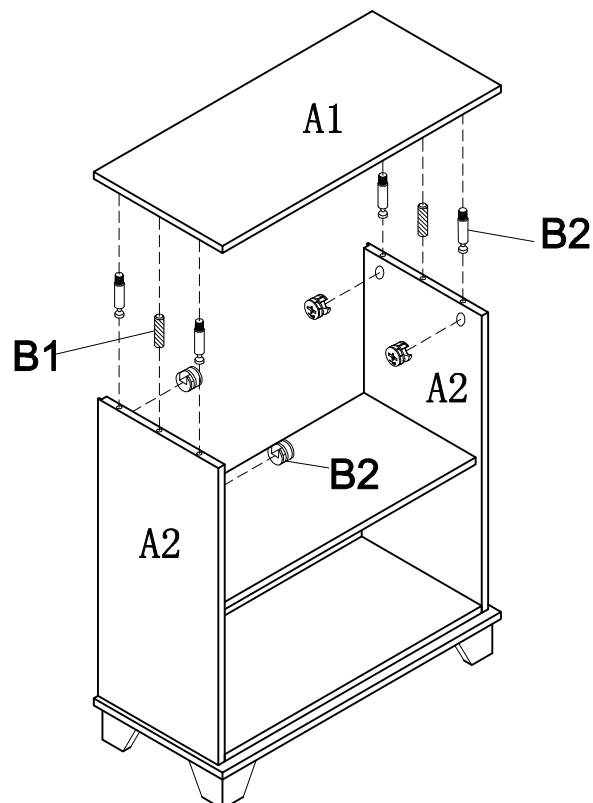


B1		2pcs
B2		4sets

Attach Top Panel A1 to Side Panels A2(L&R) using Wood Dowels B1 and CamLocks (B2).

## STEP 7


B6  18pcs

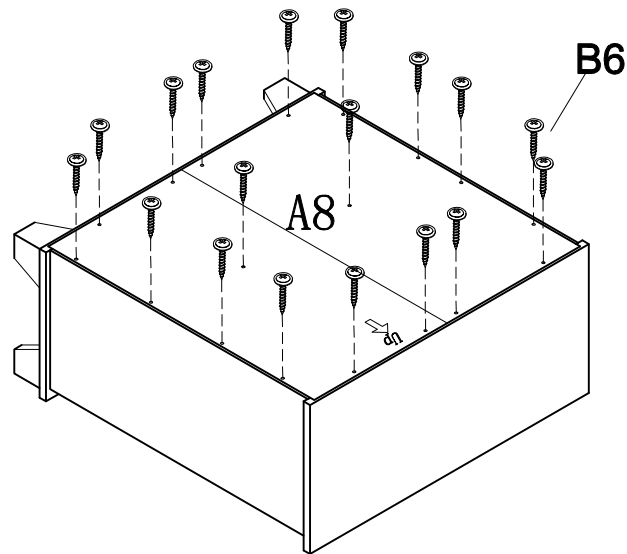

Attach Back Panel A8 to the back of the unit using Screws B6.

## STEP 8


B5  4sets

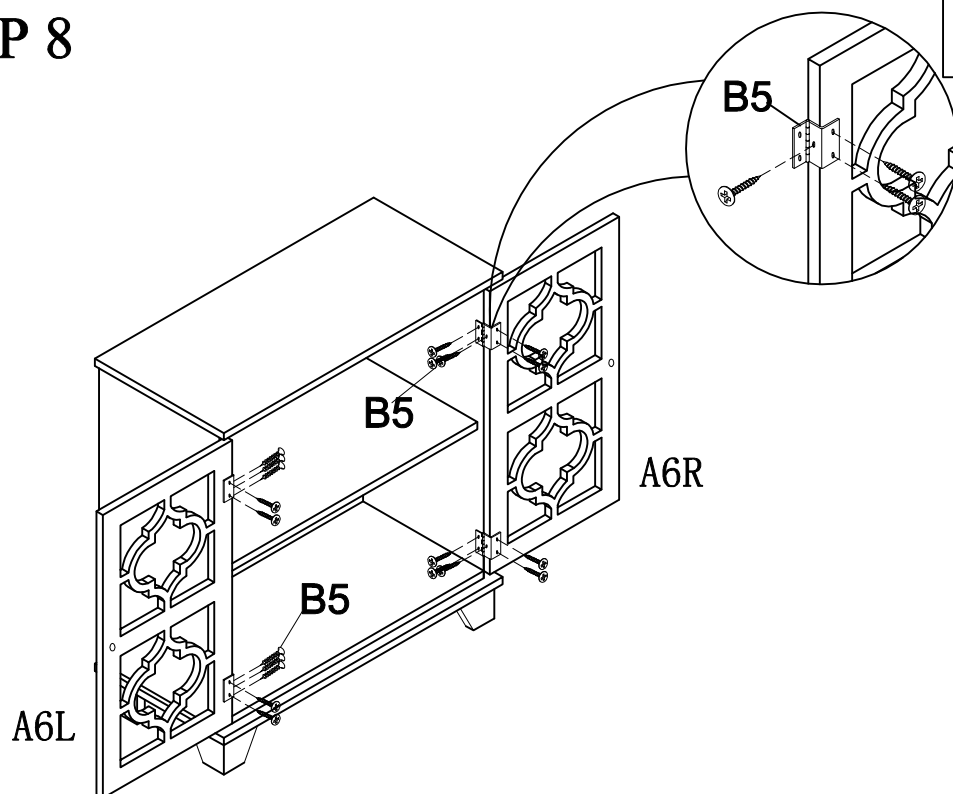










Assemble Doors A6(L&R) to Side Panels A2(L&R) using Hinge B5 with included screws

# STEP 9

**B7**   **2sets**

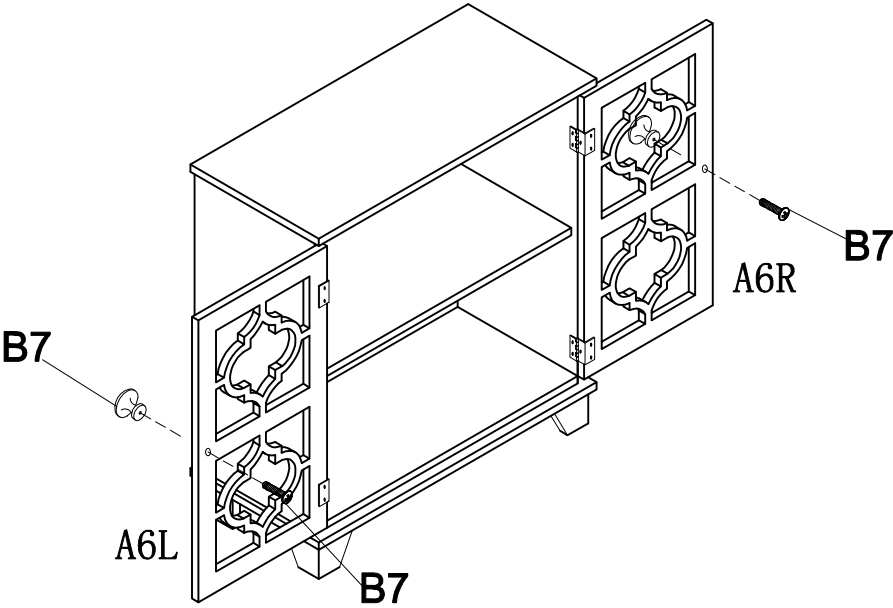

Attach Door Knob B7 to Doors A6(L&R) using included bolts.
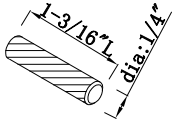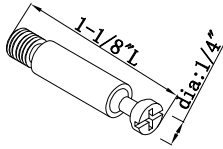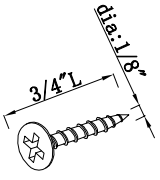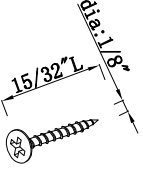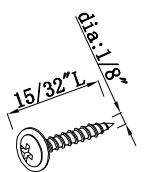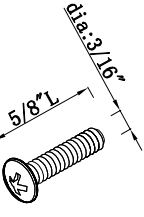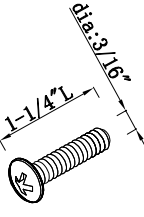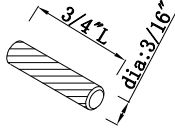
<p><b>B1</b></p>  <p>Wood Dowel</p>	<p><b>B2</b></p>  <p>Cam-bolt</p>	<p><b>B3</b></p>  <p>Cam-Lock</p>	<p><b>B4</b></p>  <p>Screw</p>
<p><b>B5</b></p>  <p>Screw</p>	<p><b>B6</b></p>  <p>Screw</p>	<p><b>B7</b></p>  <p>Bolt</p>	<p><b>B8</b></p>  <p>Bolt</p>
<p><b>B9</b></p>  <p>Wood Dowel</p>			