


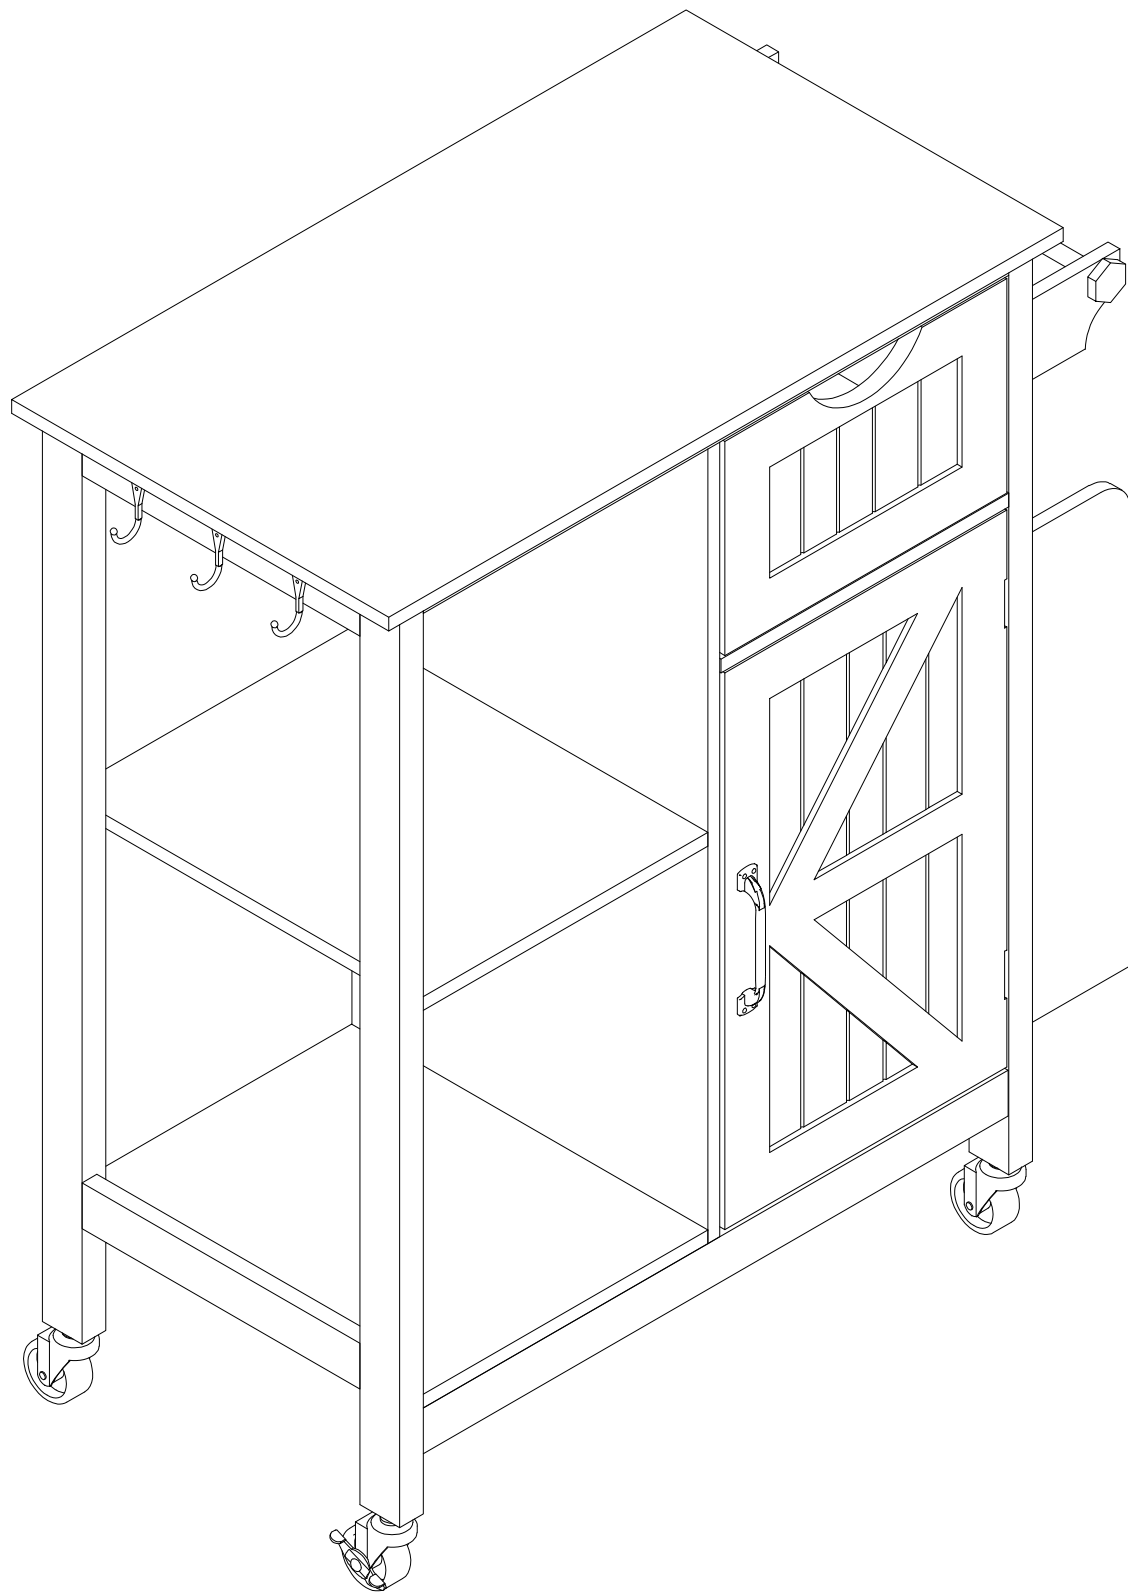
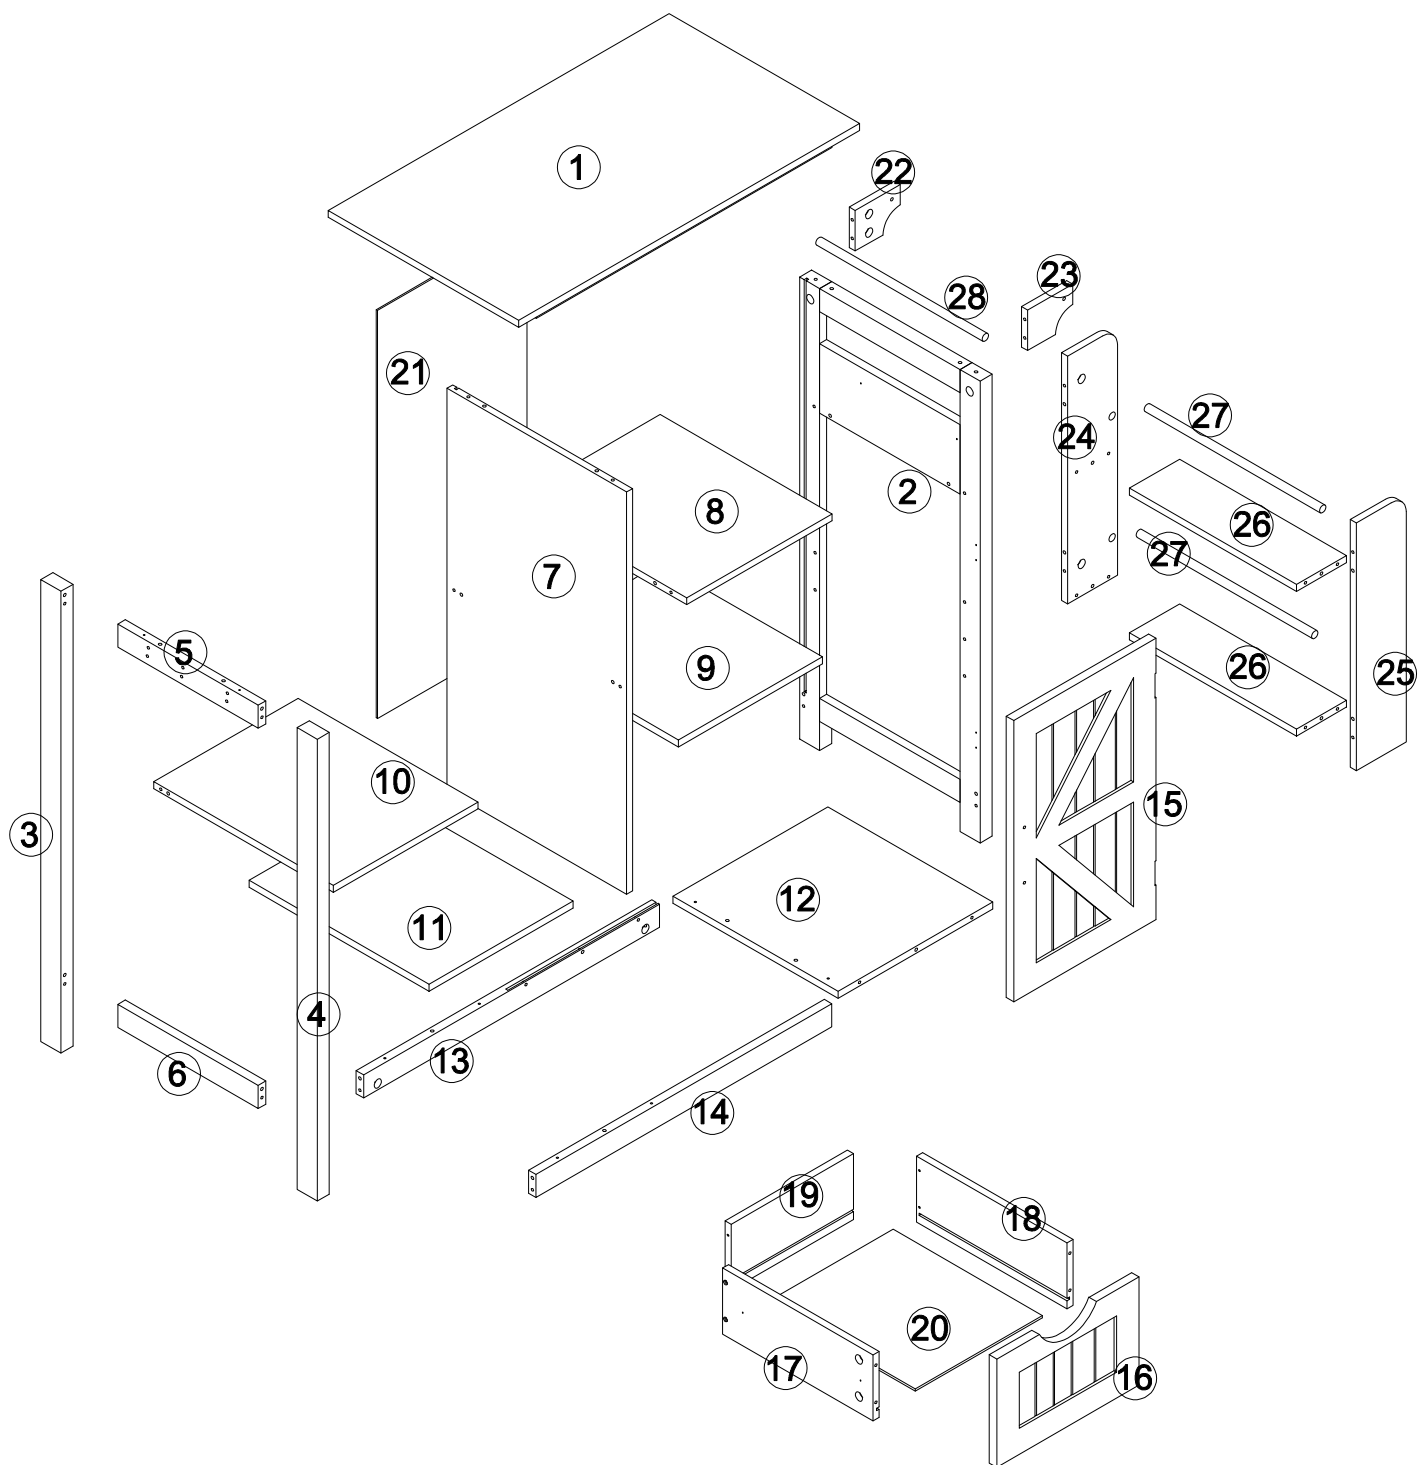









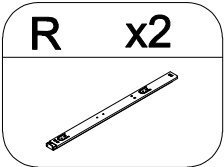





A x44  Ø6x35mm	B x34  Ø15x9mm	C x36  Ø6x30mm	D x10  Ø15x12mm	E x18  Ø3x12mm	F x12  Ø4x35mm
G x6  Ø3x12mm	H x4 	I x10  Ø3x14mm	J x2  Ø4x18mm	K x1 	L x1 
M x8 	N x2 	O x3 	P x2 	Q x1 	R x2 
S x2 	T x2 	U x1 			

Step 1

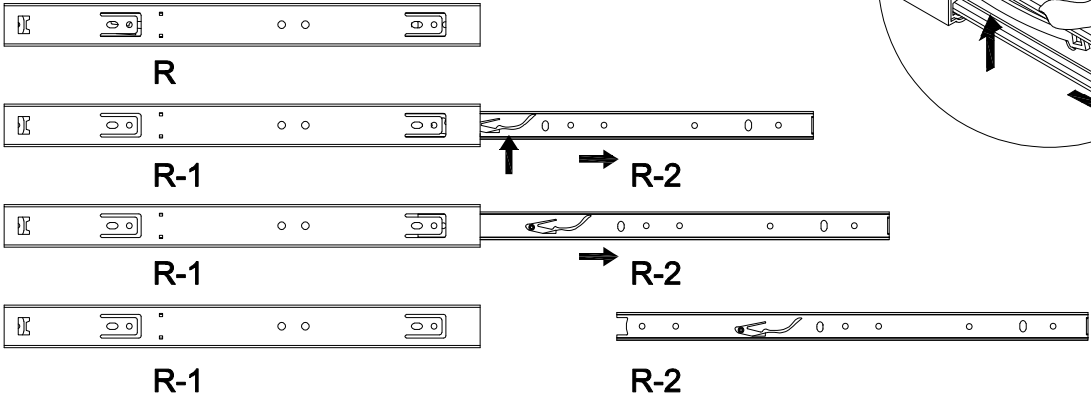



x2

Step 2

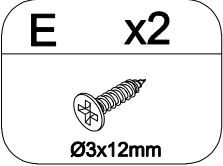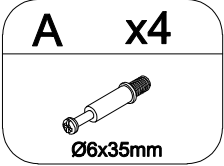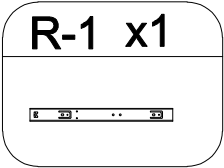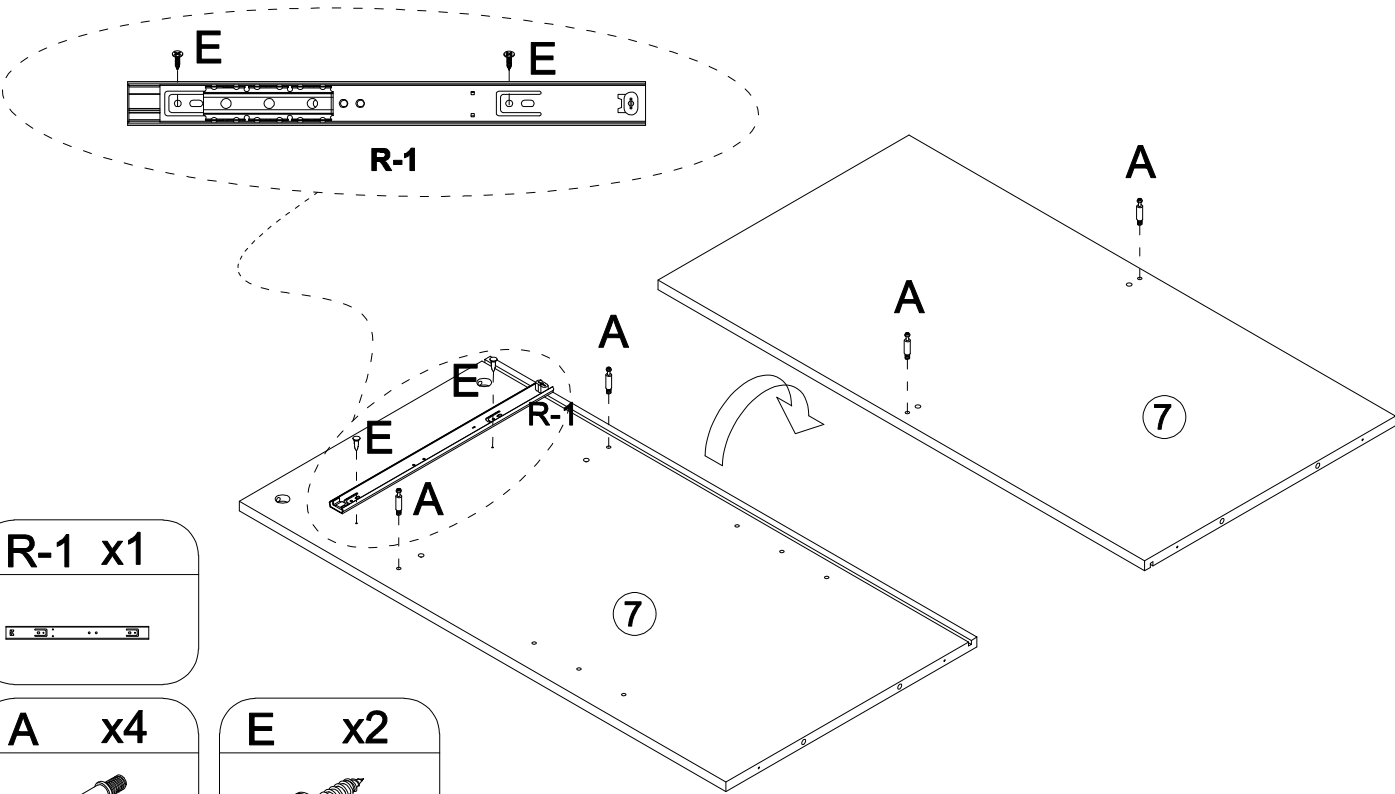


Step 3

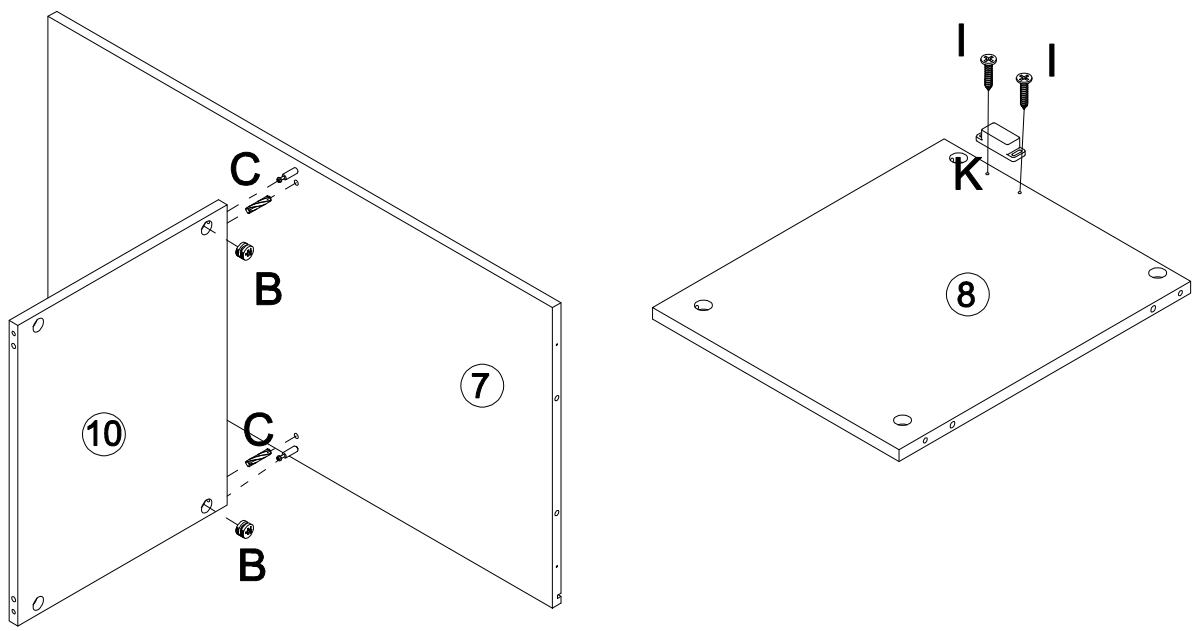


B x2	C x2	K x1	I x2
			
Ø15x9mm	Ø6x30mm		Ø3x14mm

Step 4

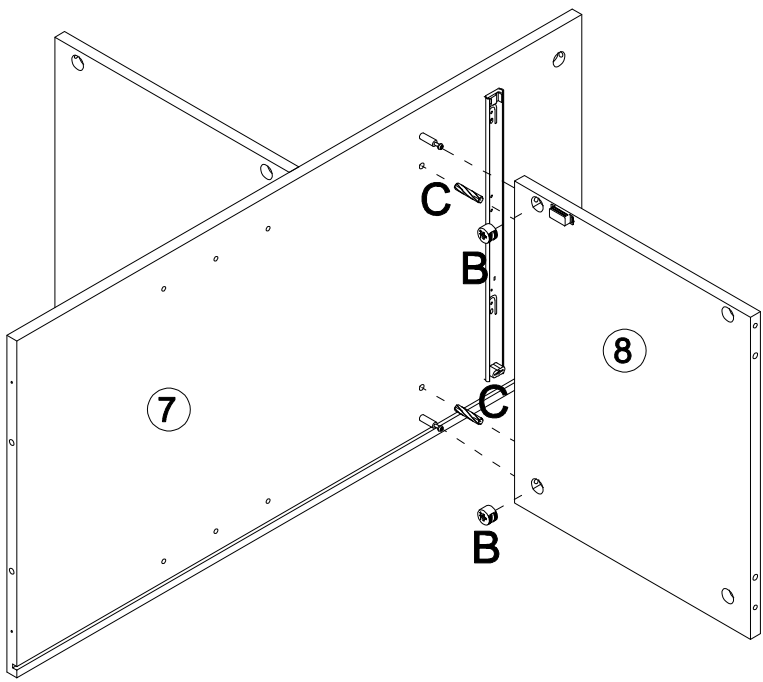

B x2	C x2
	
Ø15x9mm	Ø6x30mm


Step 5

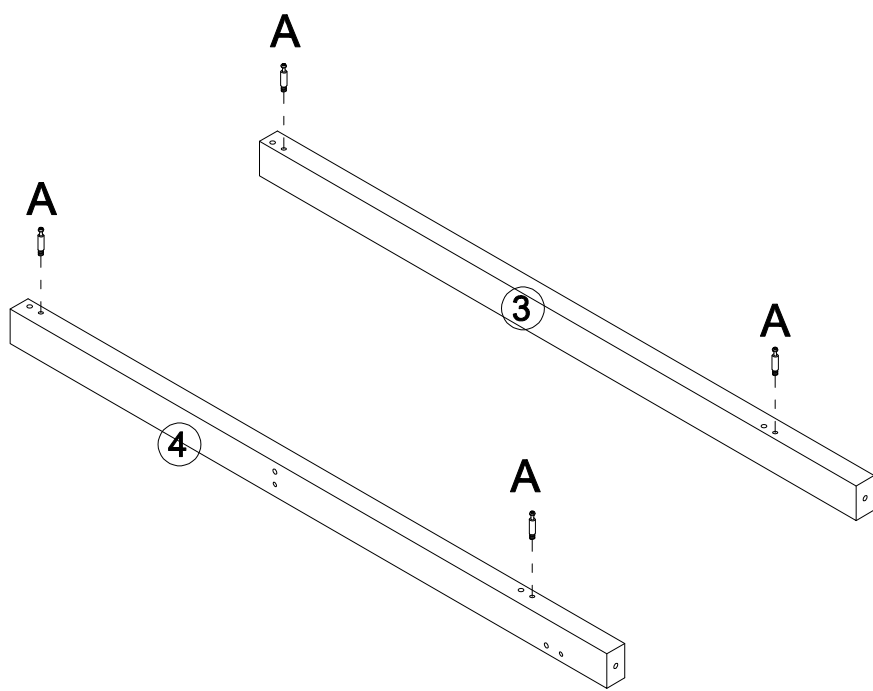

A x4


Ø6x35mm

Step 6

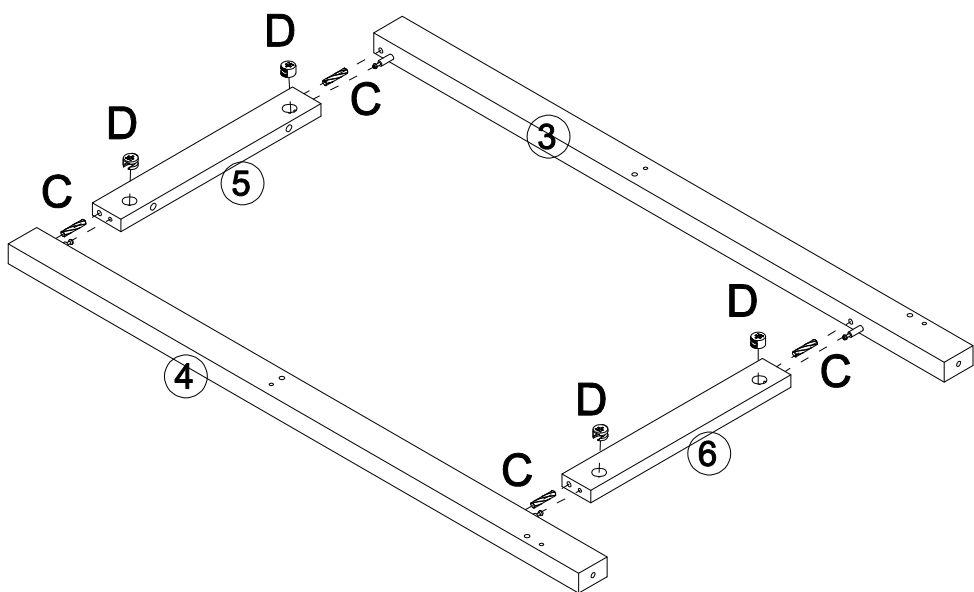


D x4


Ø15x12mm



C x4


Ø6x30mm


Step 7

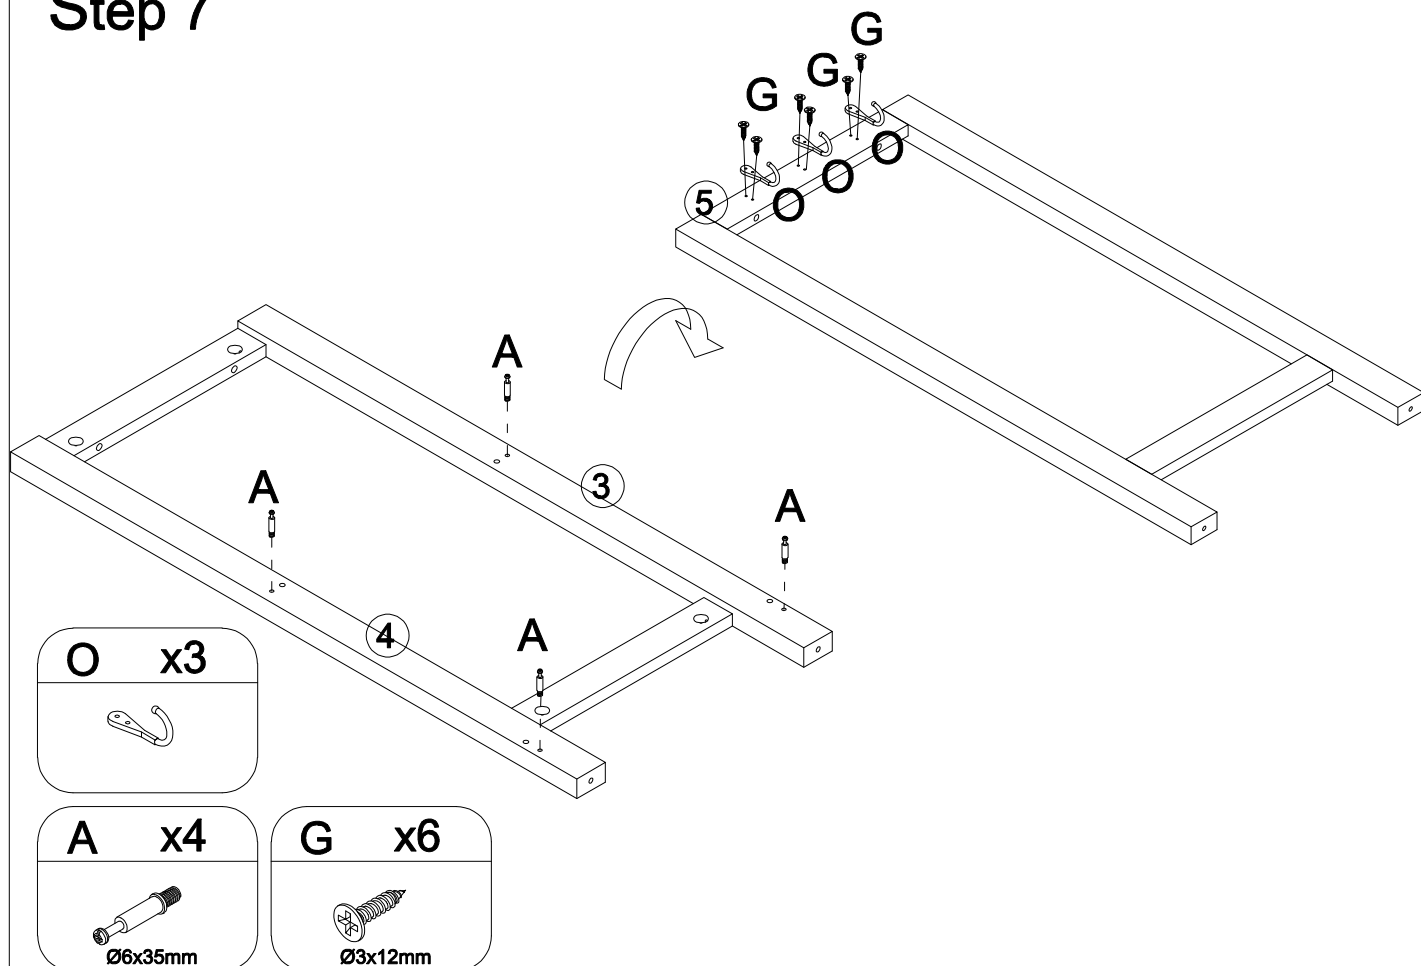

Step 8

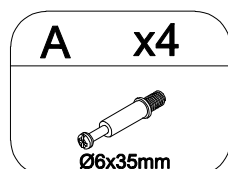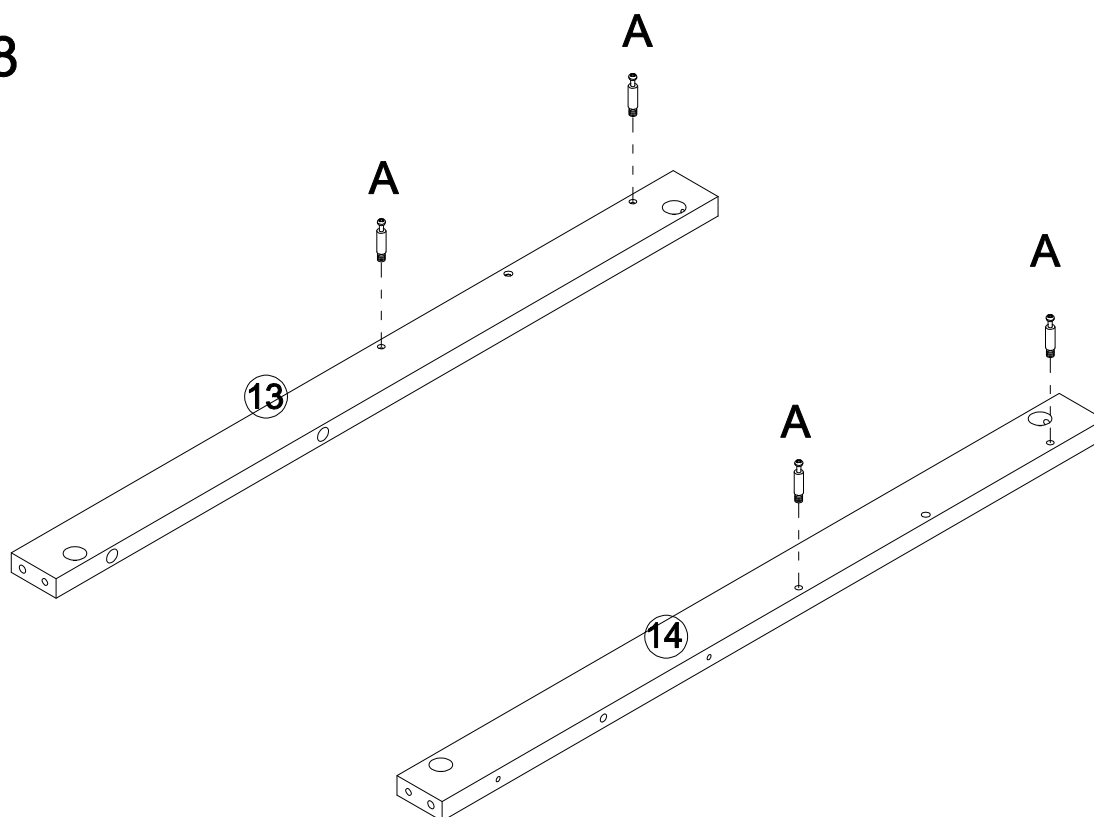

Step 9

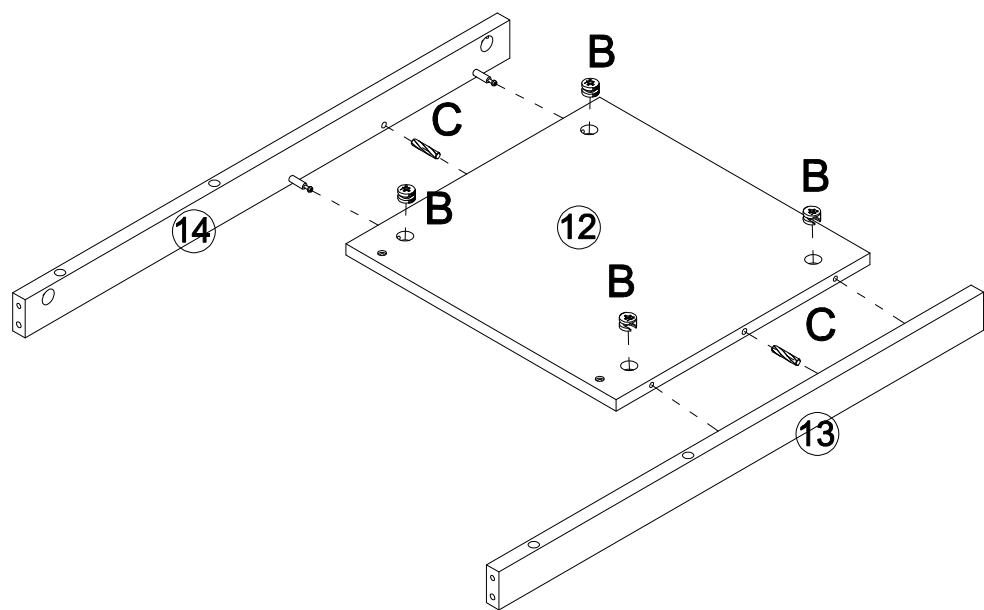


Bx4


Ø15x9mm

Cx2


Ø6x30mm

Step 10

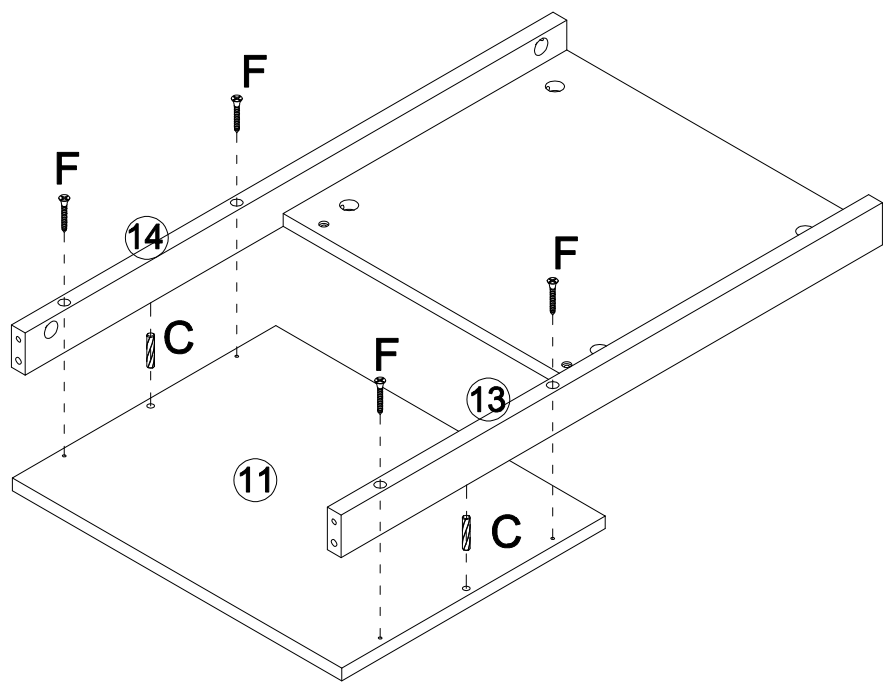


Fx4


Ø4x35mm

Cx2


Ø6x30mm

Step 11

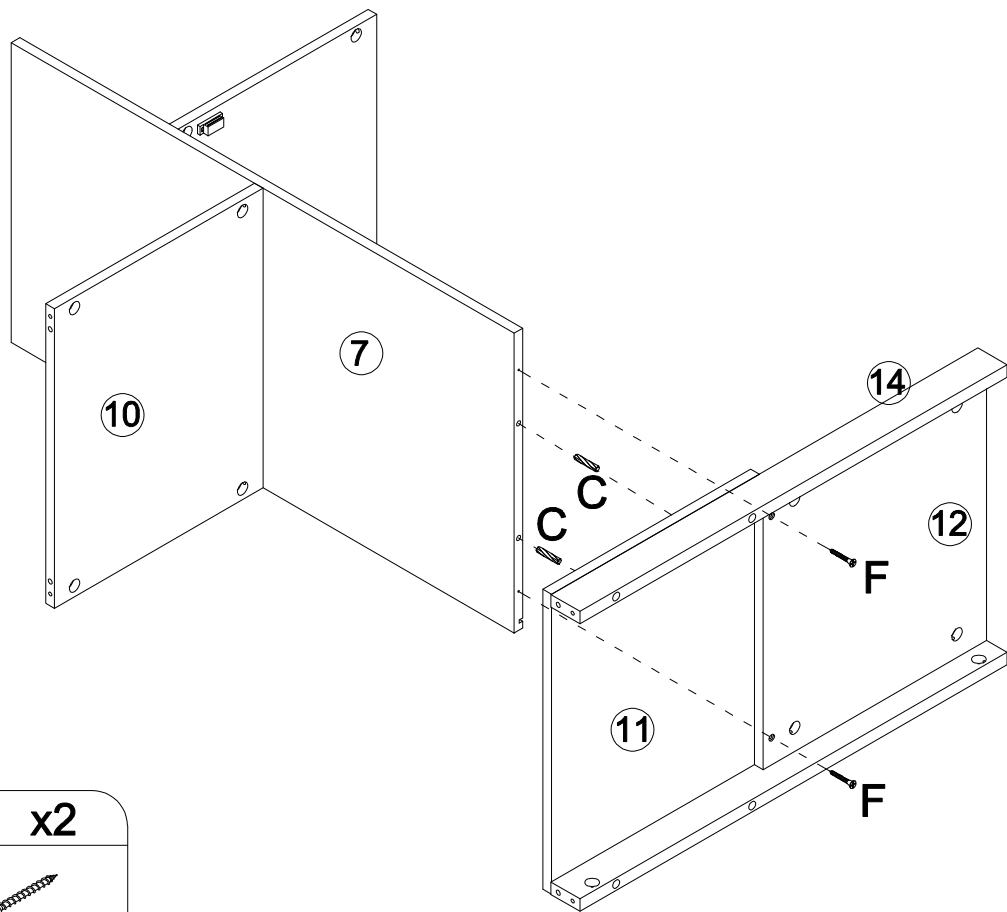

C x2




Ø6x30mm

F x2



Ø4x35mm

Step 12

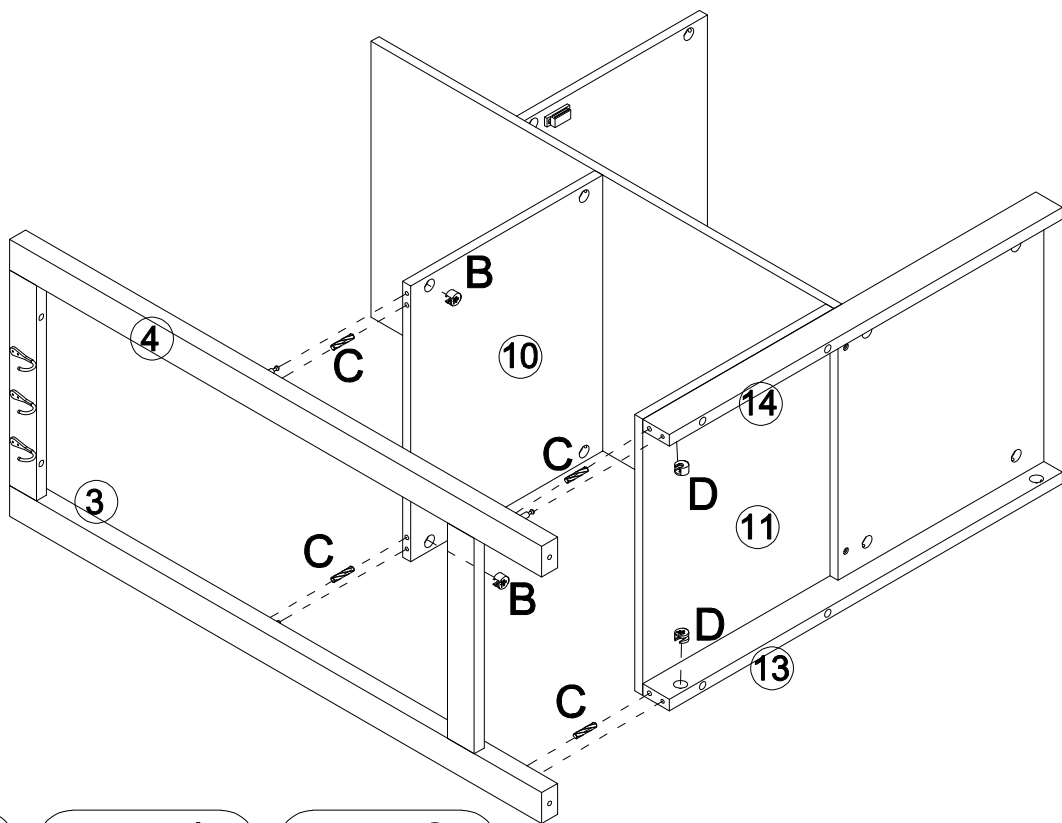

B x2



Ø15x9mm

C x4







Ø6x30mm

D x2





Ø15x12mm

Step 13

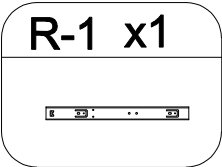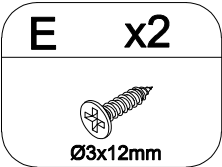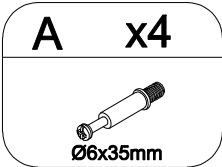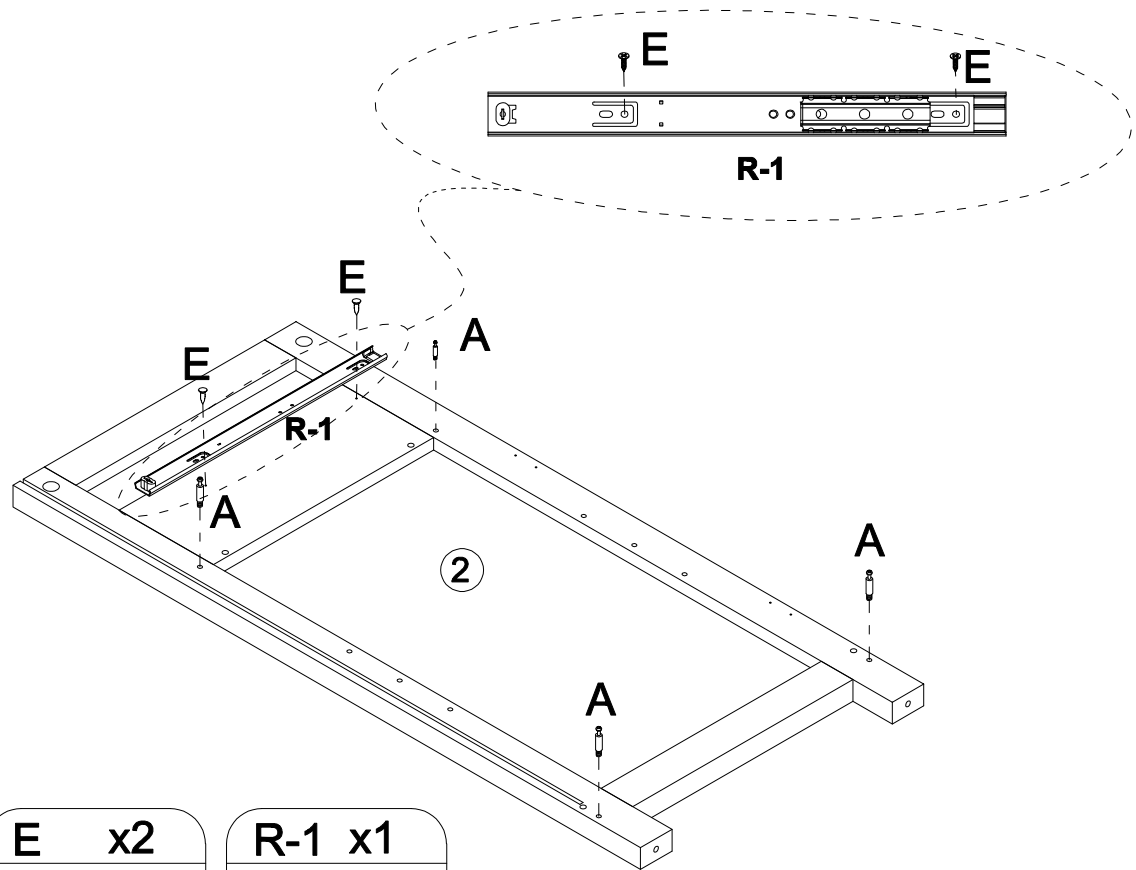

Step 14

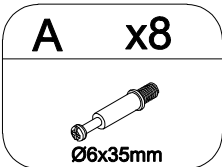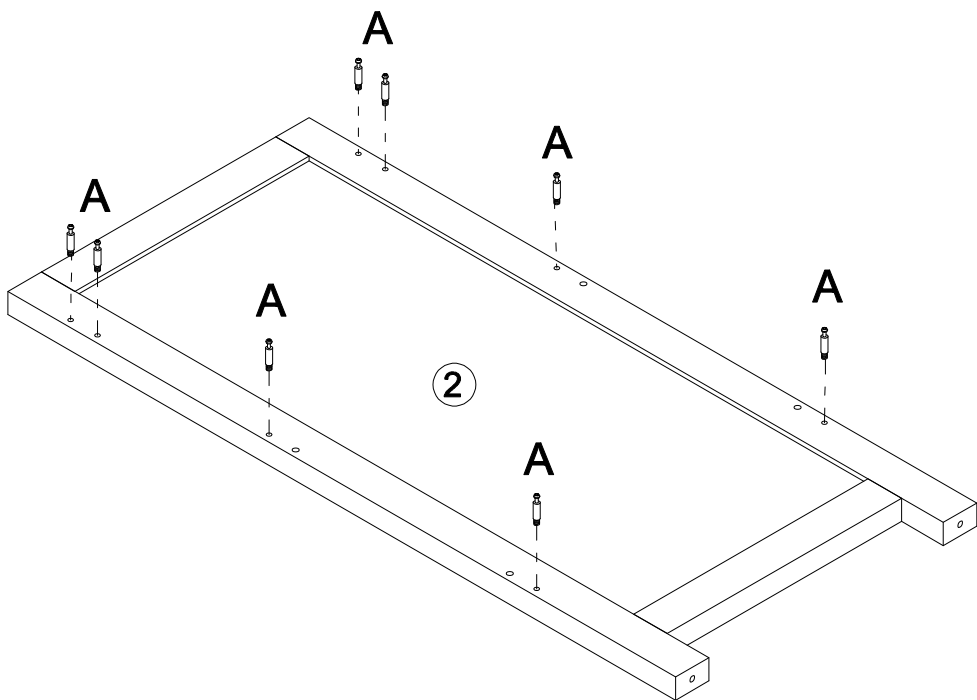

Step 15

D x2



Ø15x12mm

B x2


Ø15x9mm


C x4


Ø6x30mm

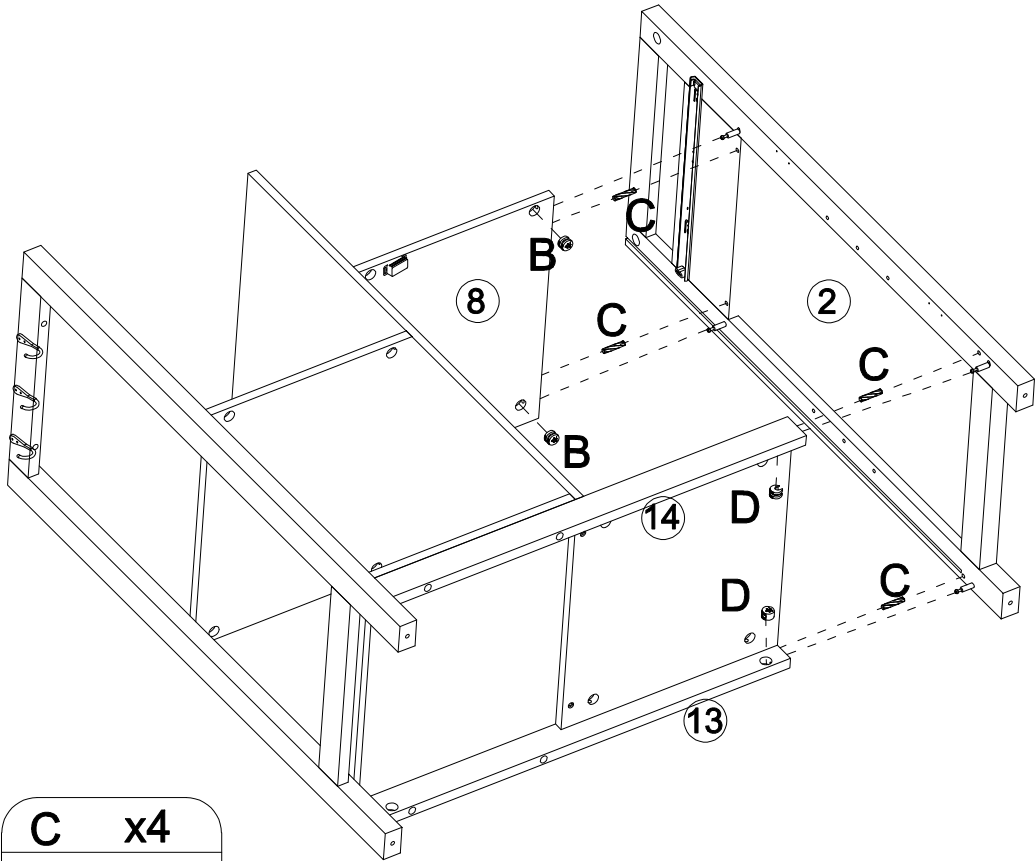

Step 16

U x1




S x2




T x2





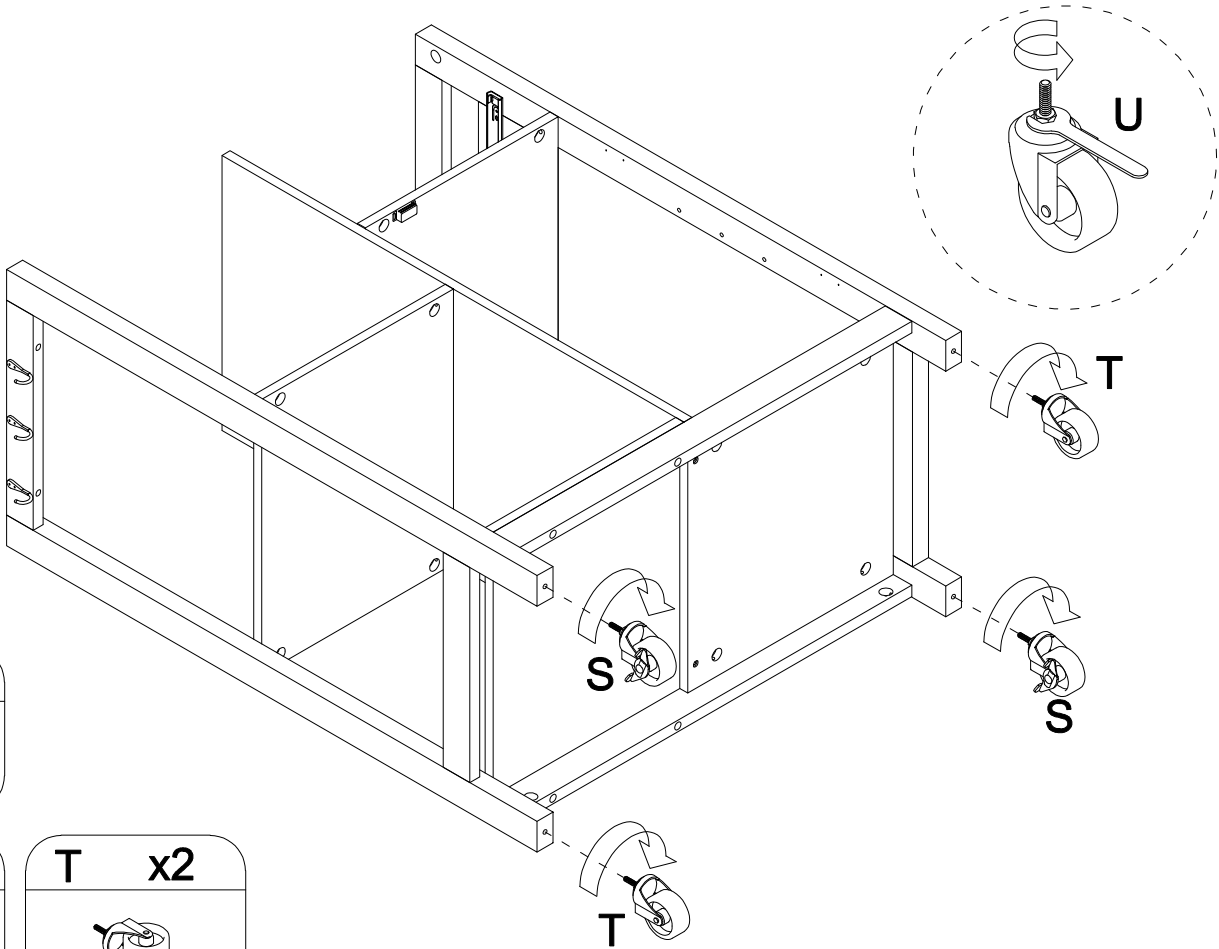


Step 17

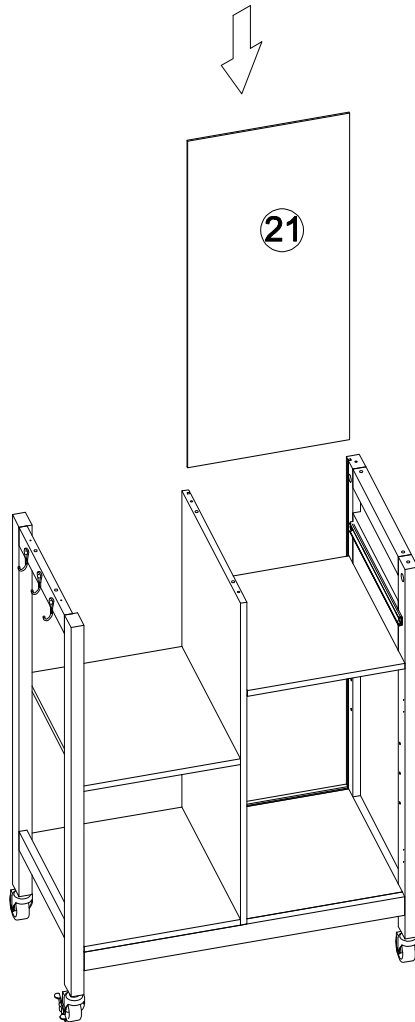

Step 18

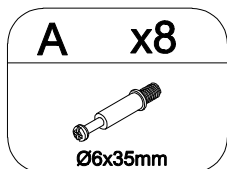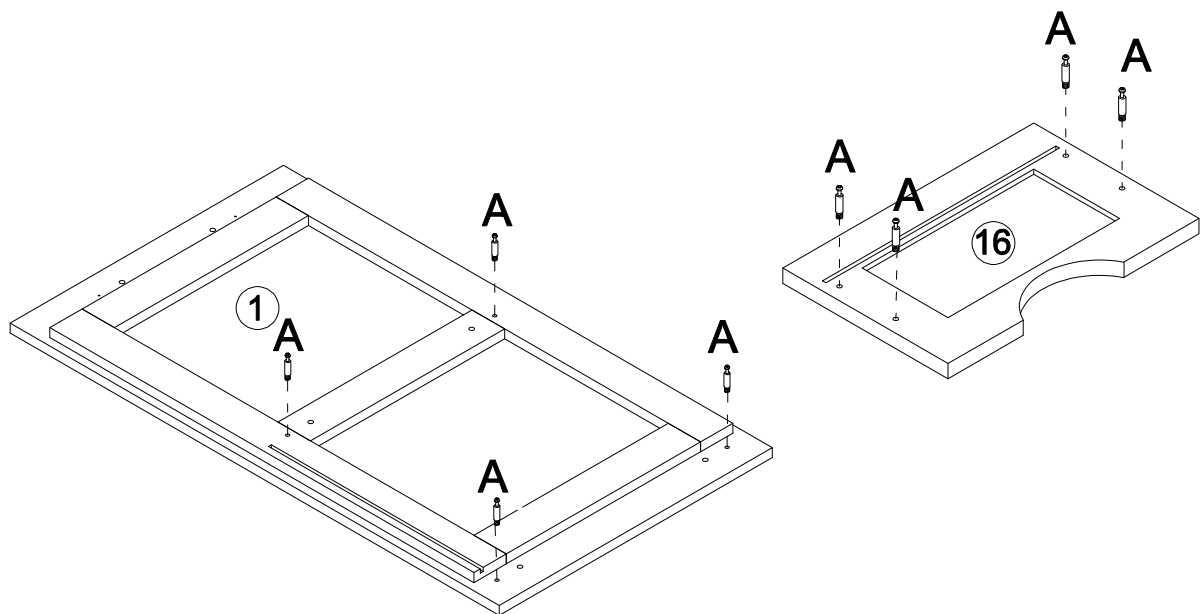


Step 19

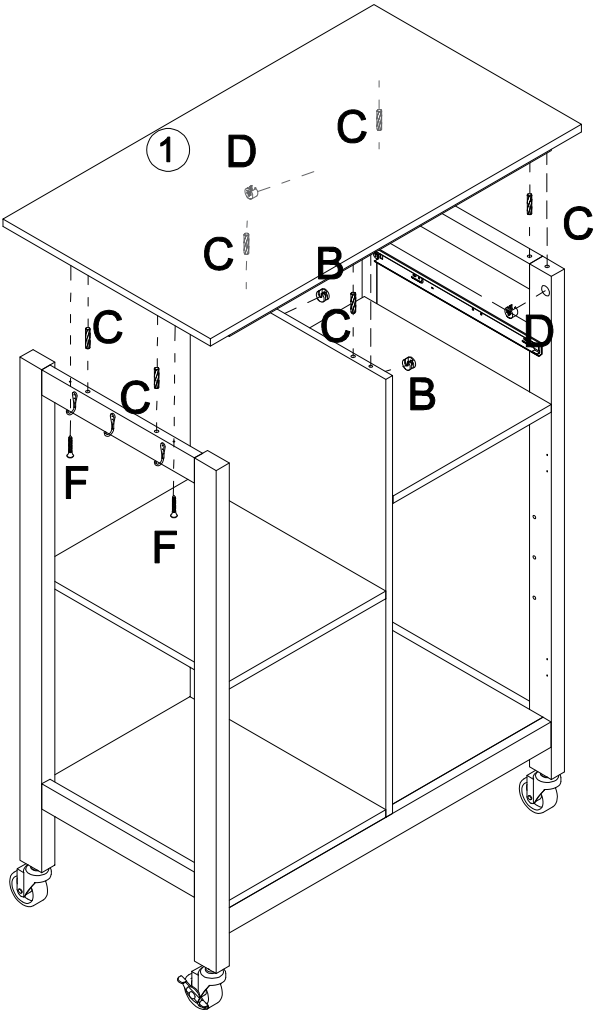


F x2	D x2
 Ø4x35mm	 Ø15x12mm
B x2	C x6
 Ø15x9mm	 Ø6x30mm

Step 20

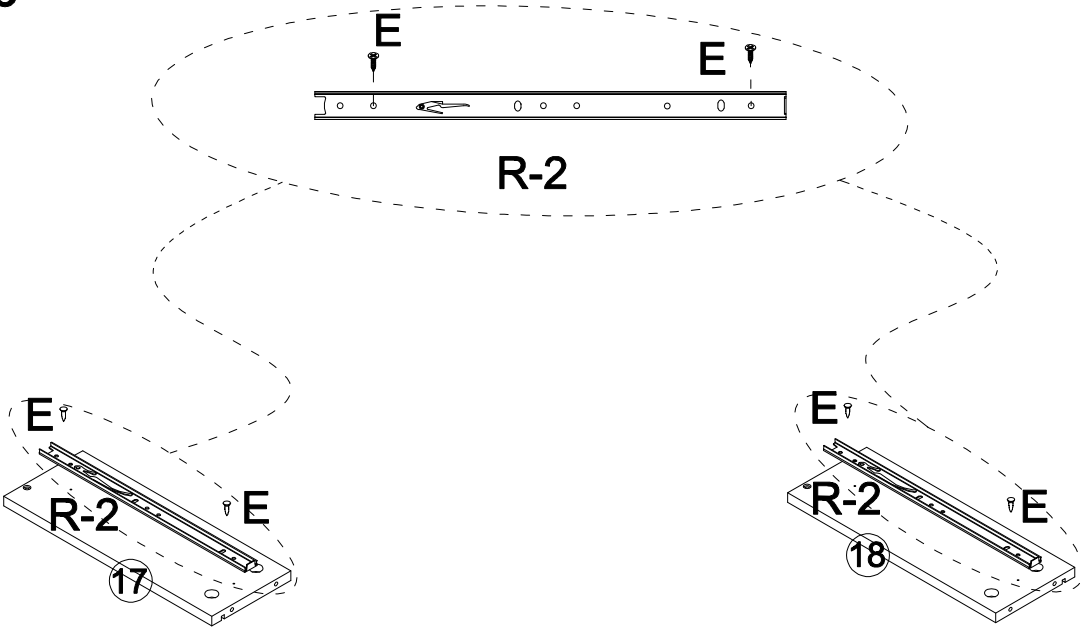

R-2 x2	E x4
	 Ø3x12mm


Step 21

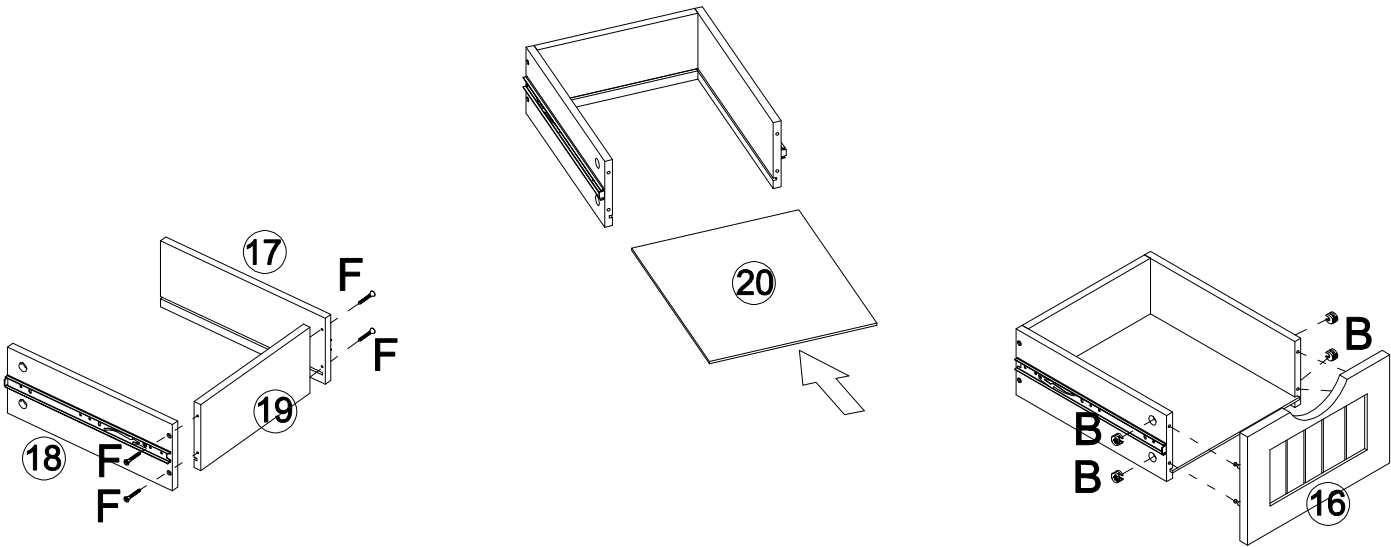

B	x4
	
Ø15x9mm	

F	x4
	
Ø4x35mm	

Step 22



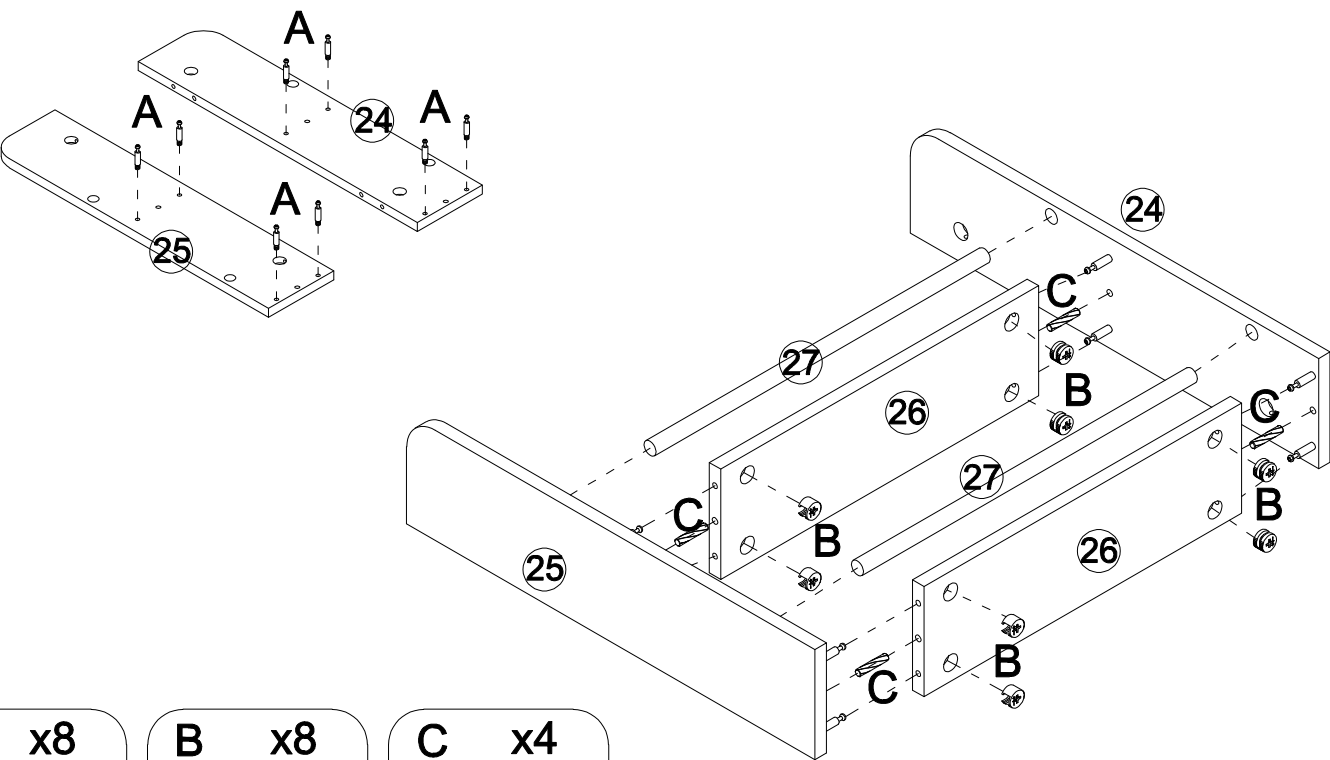


A	x8
	
Ø6x35mm	



B	x8
	
Ø15x9mm	

C	x4
	
Ø6x30mm	


Step 23

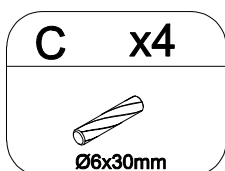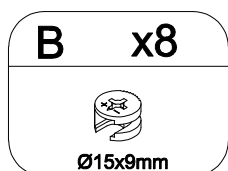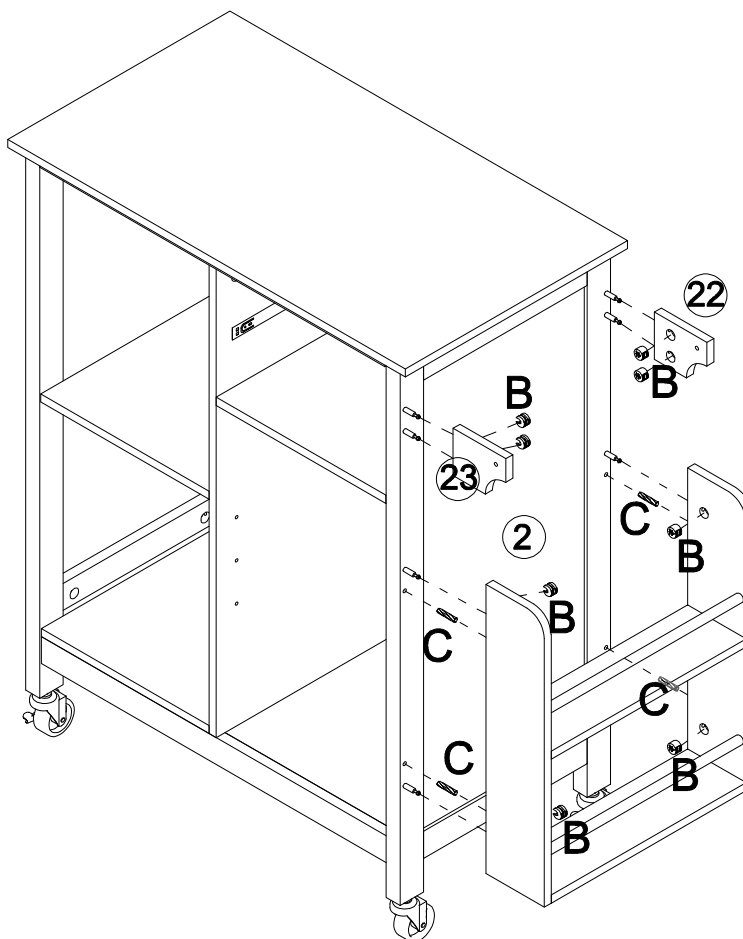



Step 24

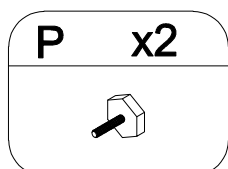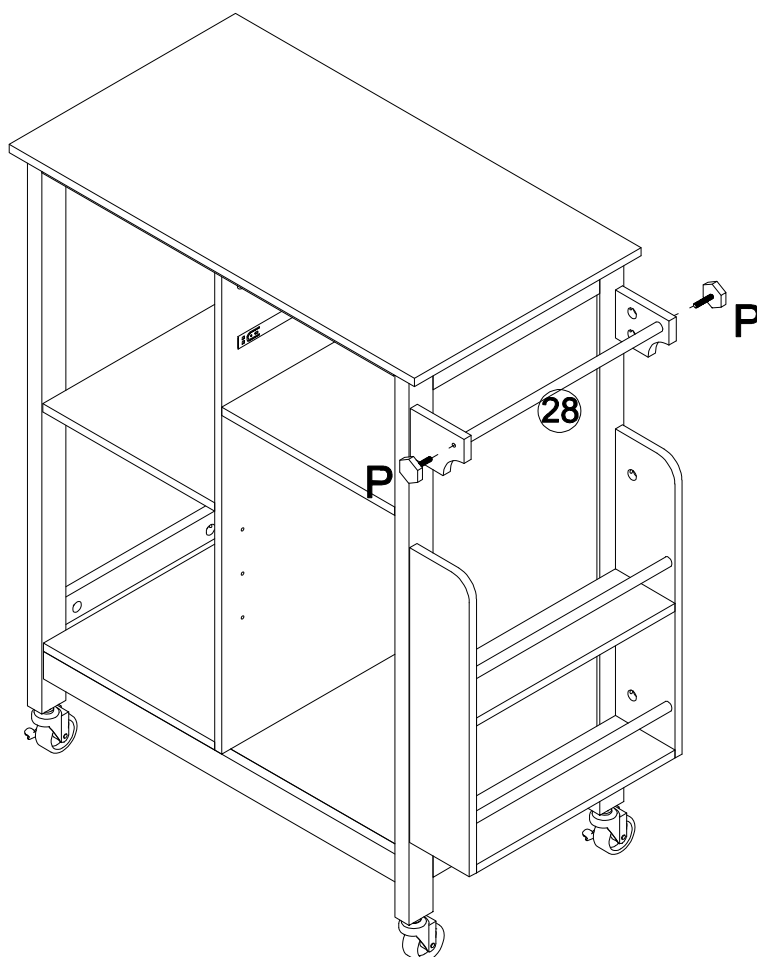


Step 25

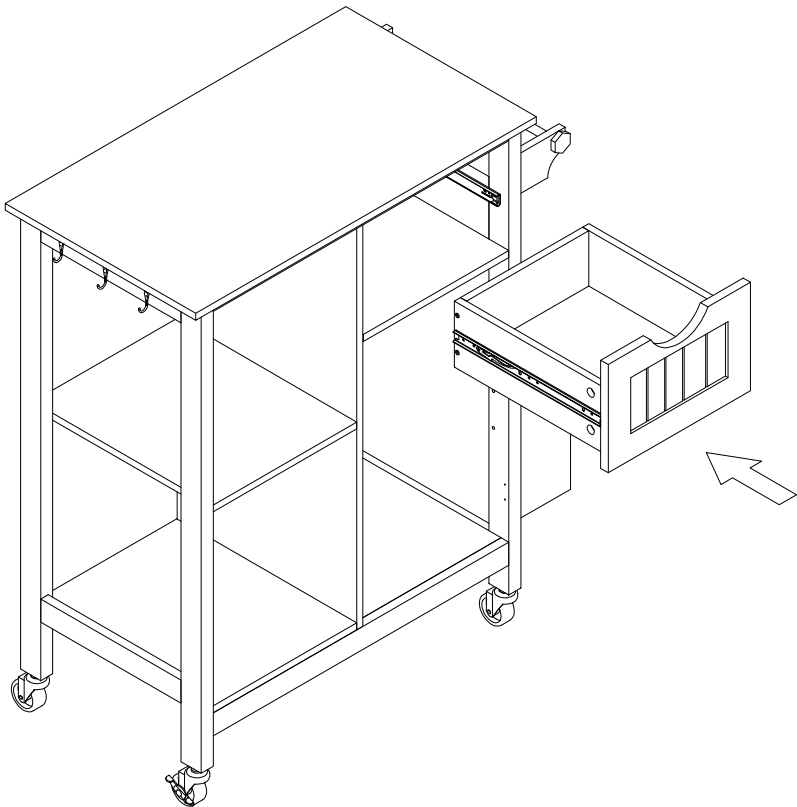


Step 26

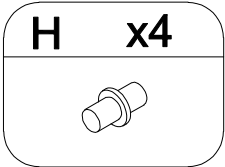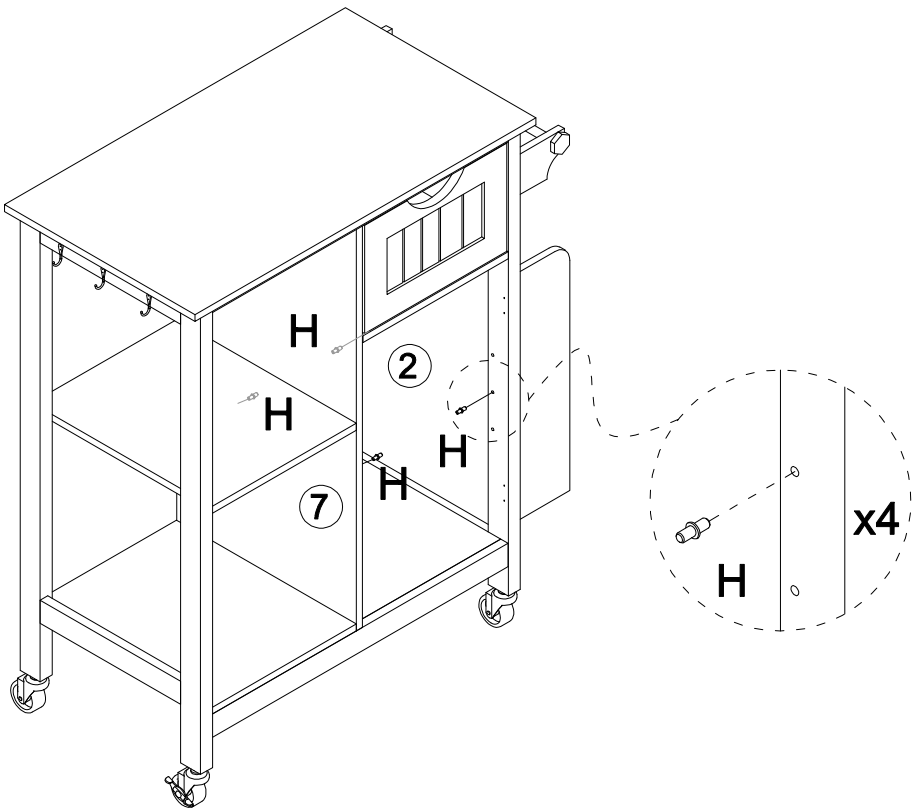

Step 27

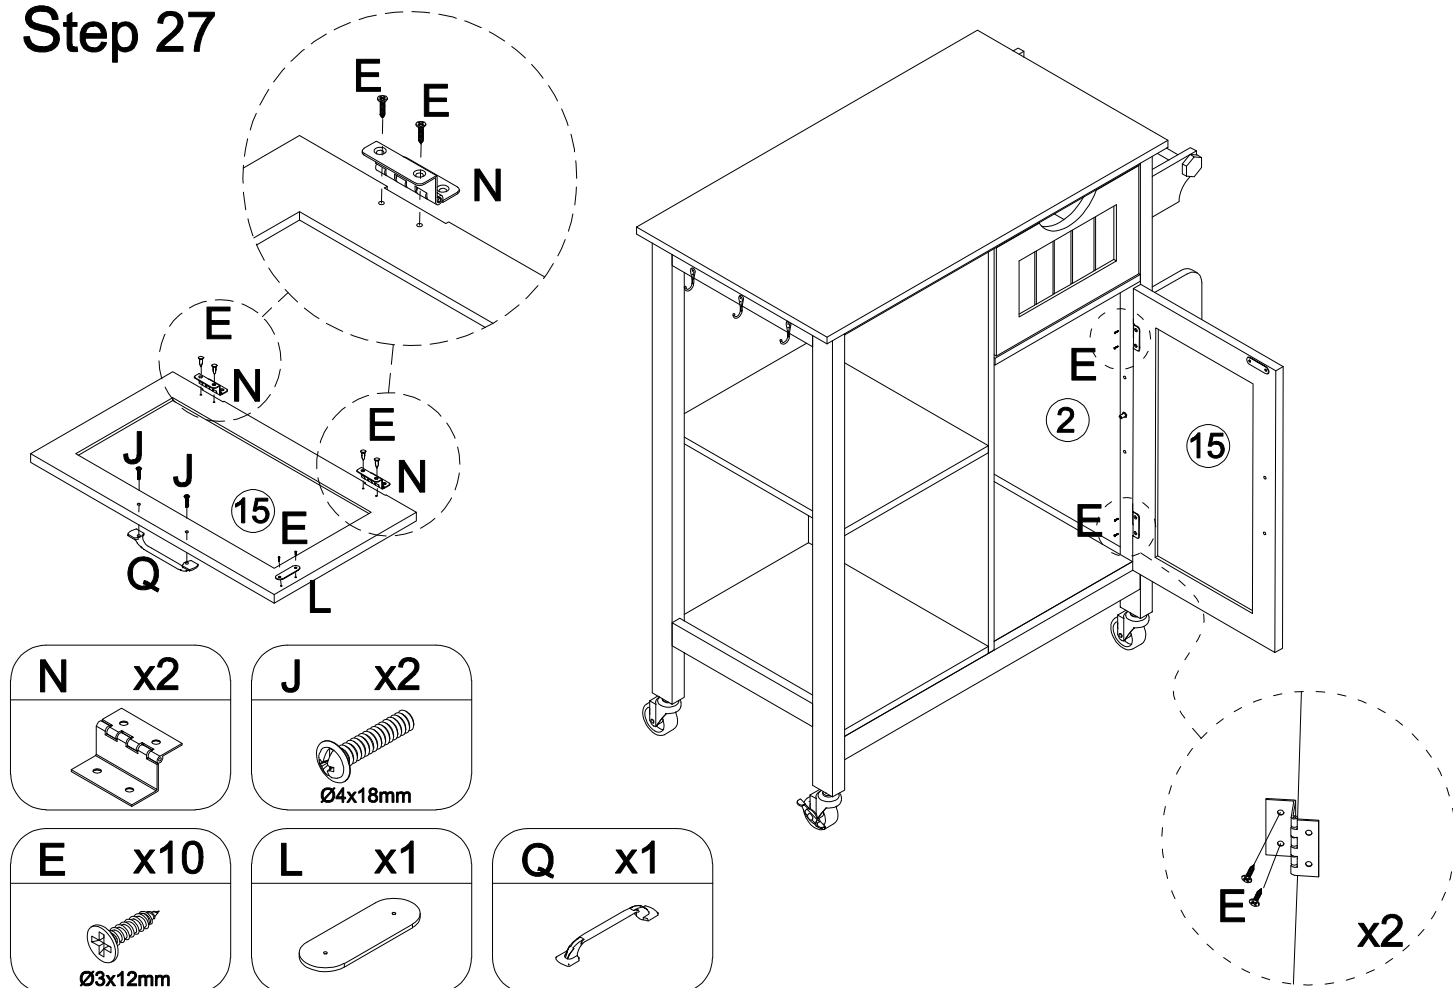

Step 28

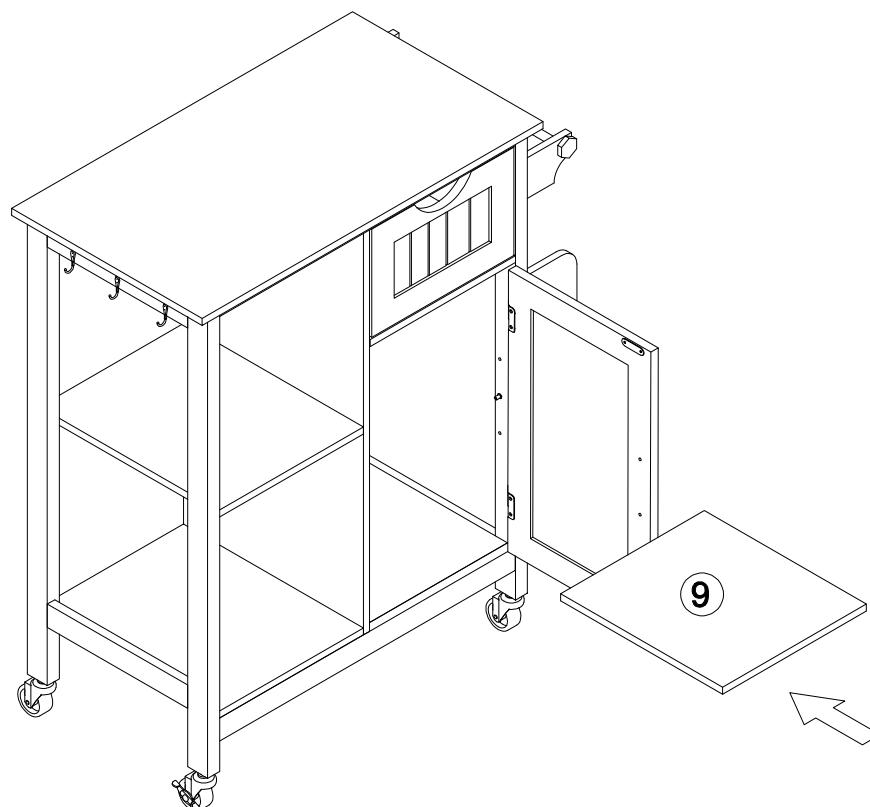

Step 29

