


Assembly Instructions

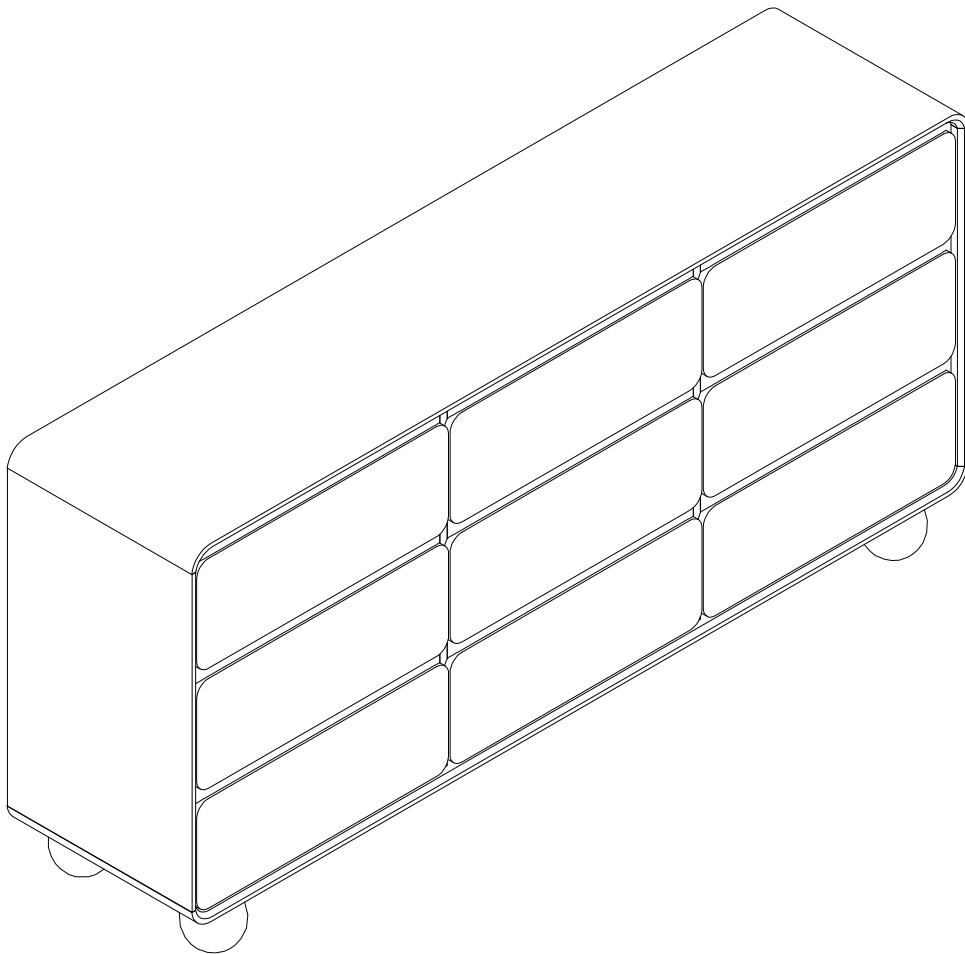

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

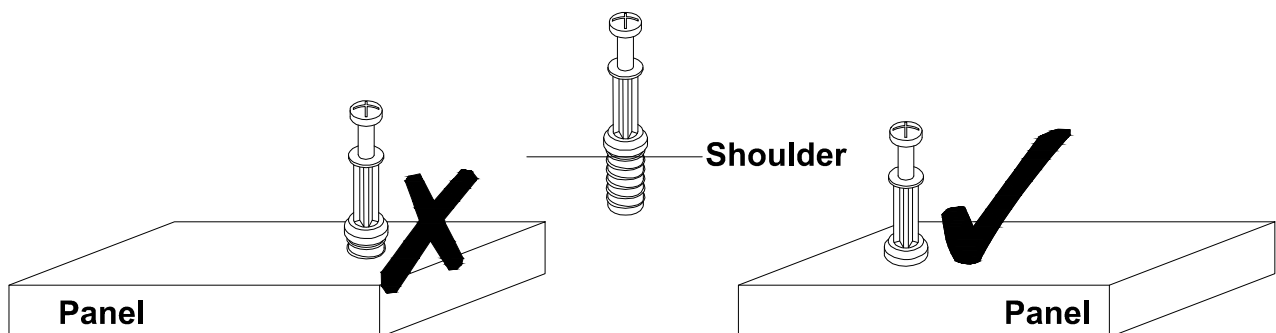


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

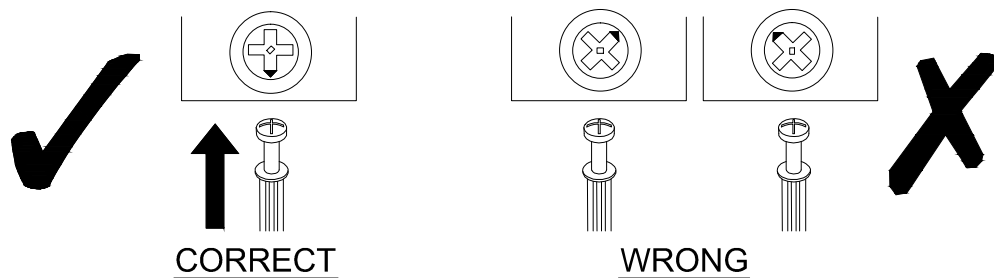


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

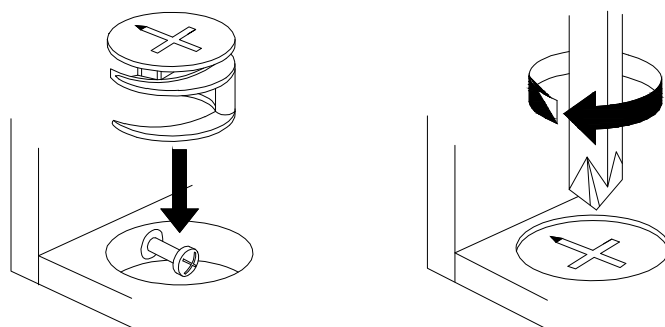

Turn cam lock clockwise to tighten.

Product structure

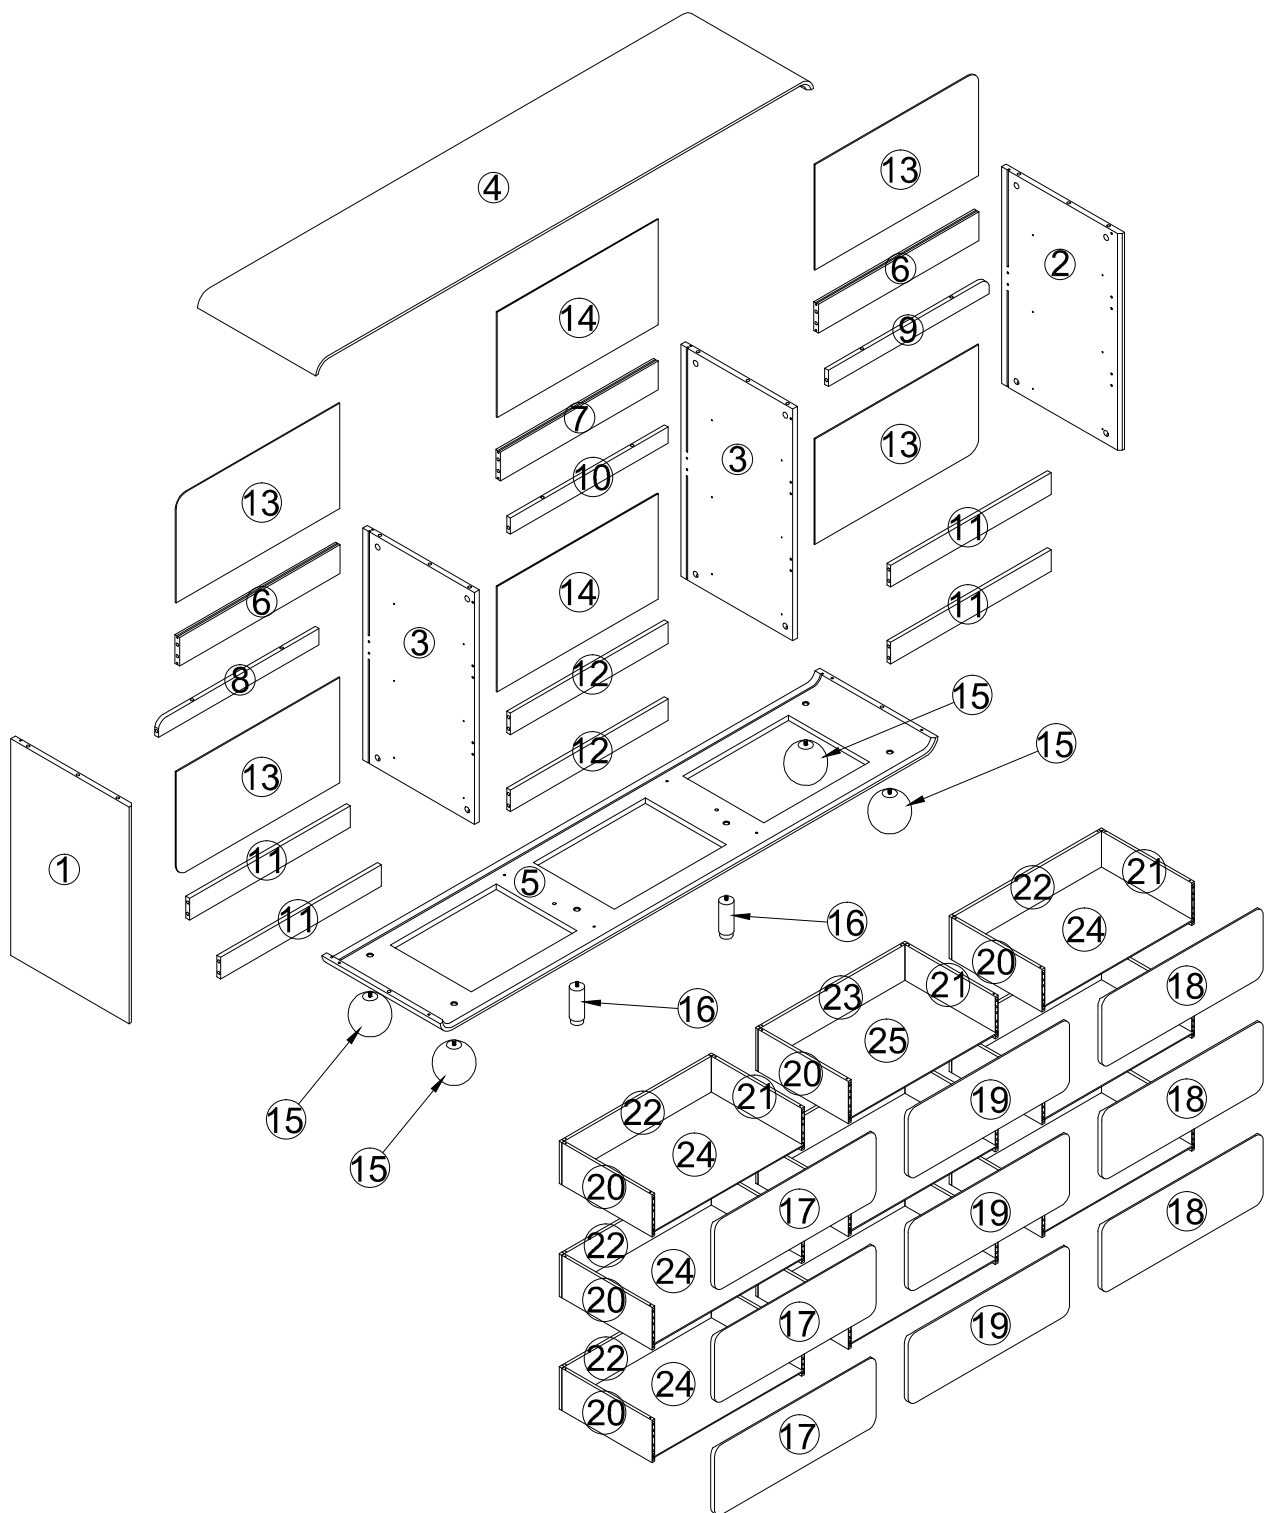

“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


No. A

Quantity:64 Pcs
Cam Lock Dowel
8*28mm



No. B

Quantity:64 Pcs
Cam
φ15




No. C

Quantity:64 Pcs
Sticker
Ø20




No. D

Quantity:8 Pcs
Dowel
8*30mm



No. E

Quantity:9 Sets
Ordinary bottom-dragging rail
12"

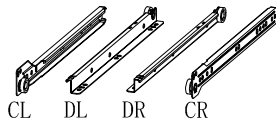

No. F

Quantity:72 Pcs
Screw
M3.5*12mm



No. G

Quantity:72 Pcs
Screw
M3*12mm



No. H

Quantity:2 Pcs
Adjust The Foot




No. I

Quantity:4 Pcs
Foot Pad
Ø20



No. J

Quantity:36 Pcs
Cam Lock Dowel
8*25mm




No. K

Quantity:36 Pcs
Rubber particles
Ø6*12mm




No. L

Quantity:18 Pcs
Drawer Connector




No. M

Quantity:24 Sets
Plastic Wedge




No. N


Quantity:2 Sets
Anti-falling Parts




STEP 1

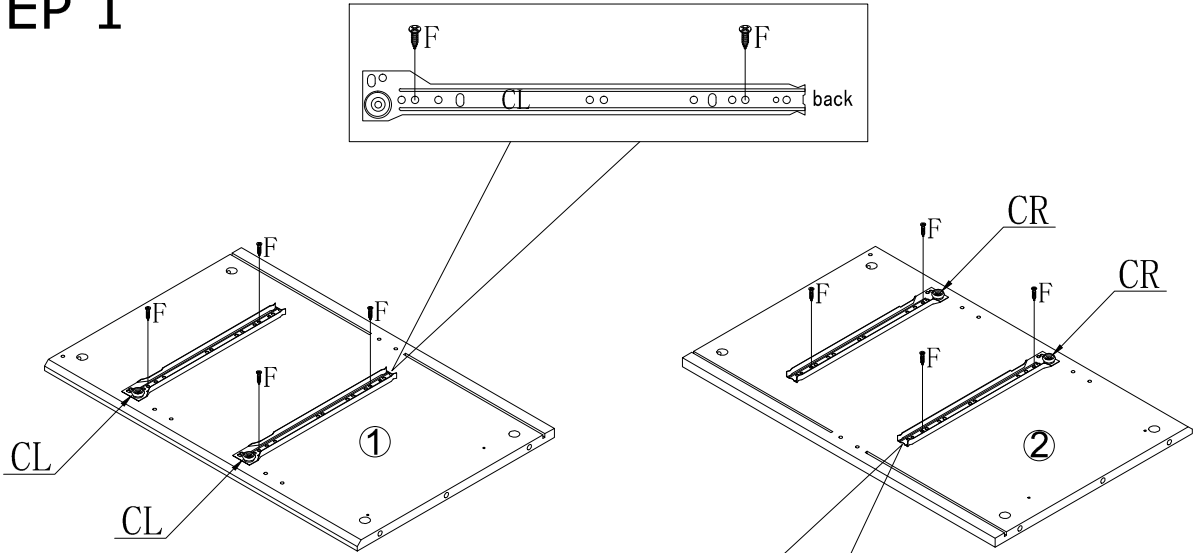


No. E
Quantity: 2 Sets
12"




No. F
Quantity: 8 Pcs
M3.5*12mm

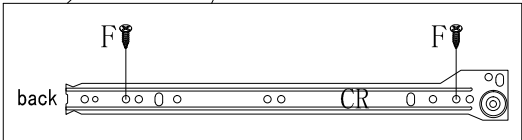


STEP 2

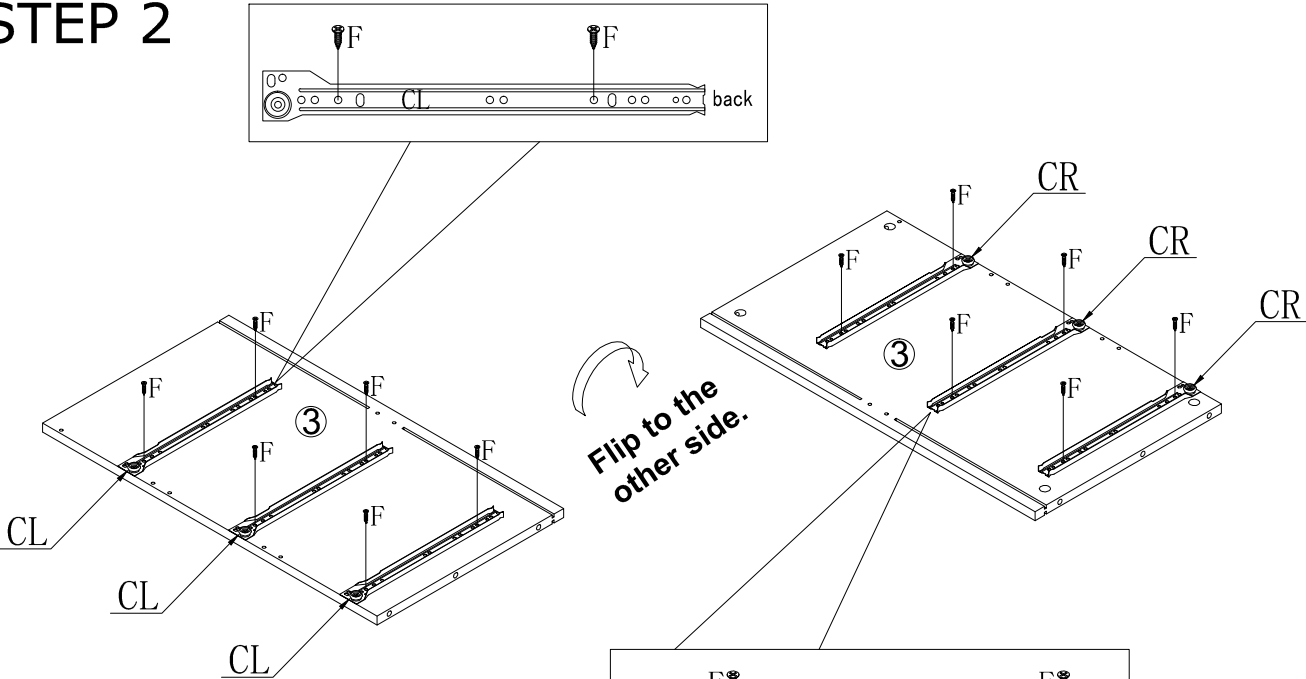

No. E
Quantity: 6 Sets
12"




No. F
Quantity: 24 Pcs
M3.5*12mm

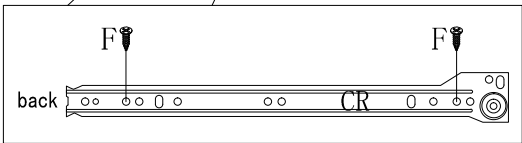


×2


STEP 3

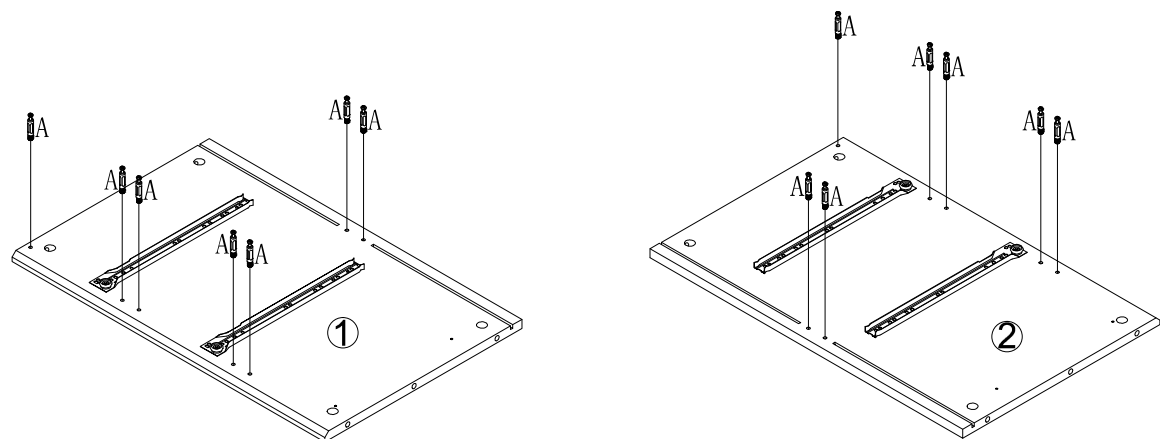


No. A
Quantity: 14 Pcs
8*28 mm



STEP 4

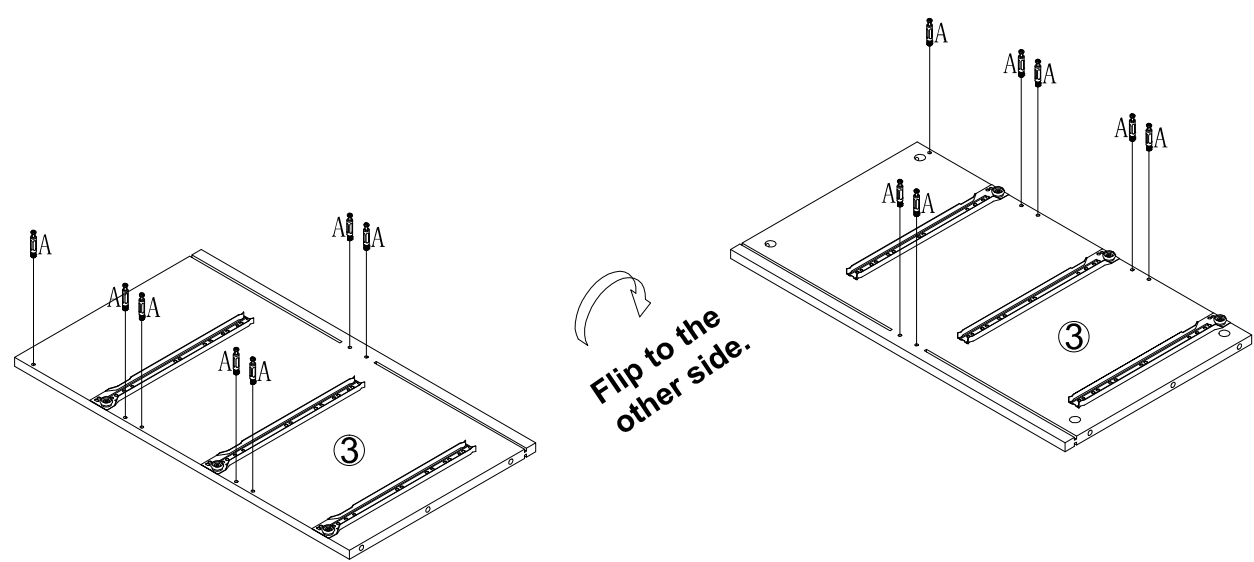

No. A
Quantity: 28 Pcs
8*28 mm




x2

STEP 5

No. B
Quantity: 5 Pcs
Ø15



No. C
Quantity: 5 Pcs
Ø20

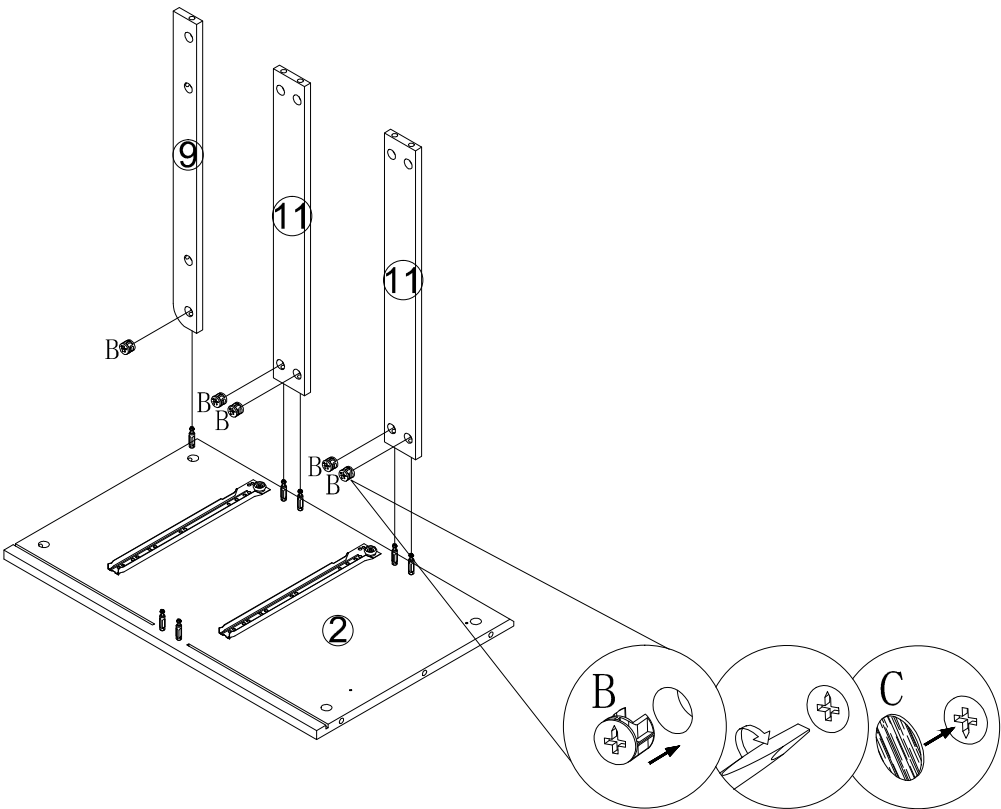


STEP 6

No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20

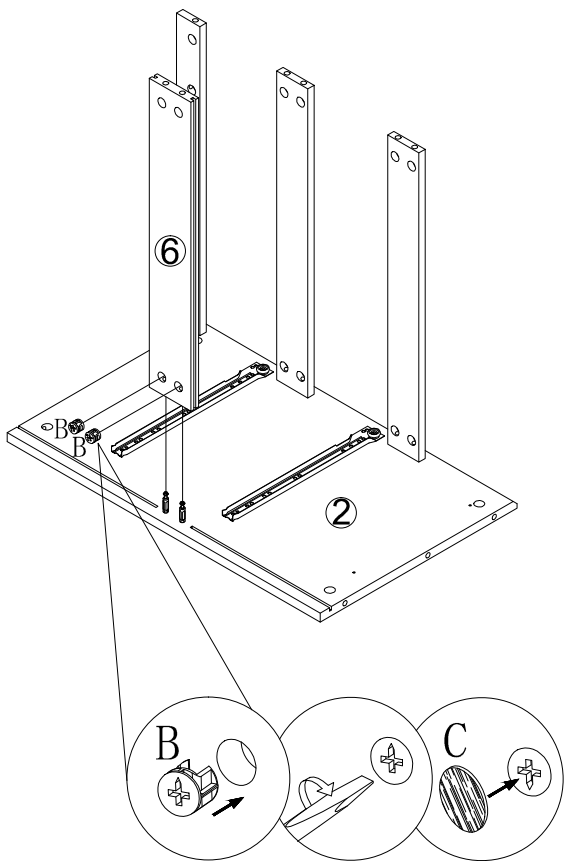


STEP 7

No. B
Quantity: 7 Pcs
Ø15



No. C
Quantity: 7 Pcs
Ø20

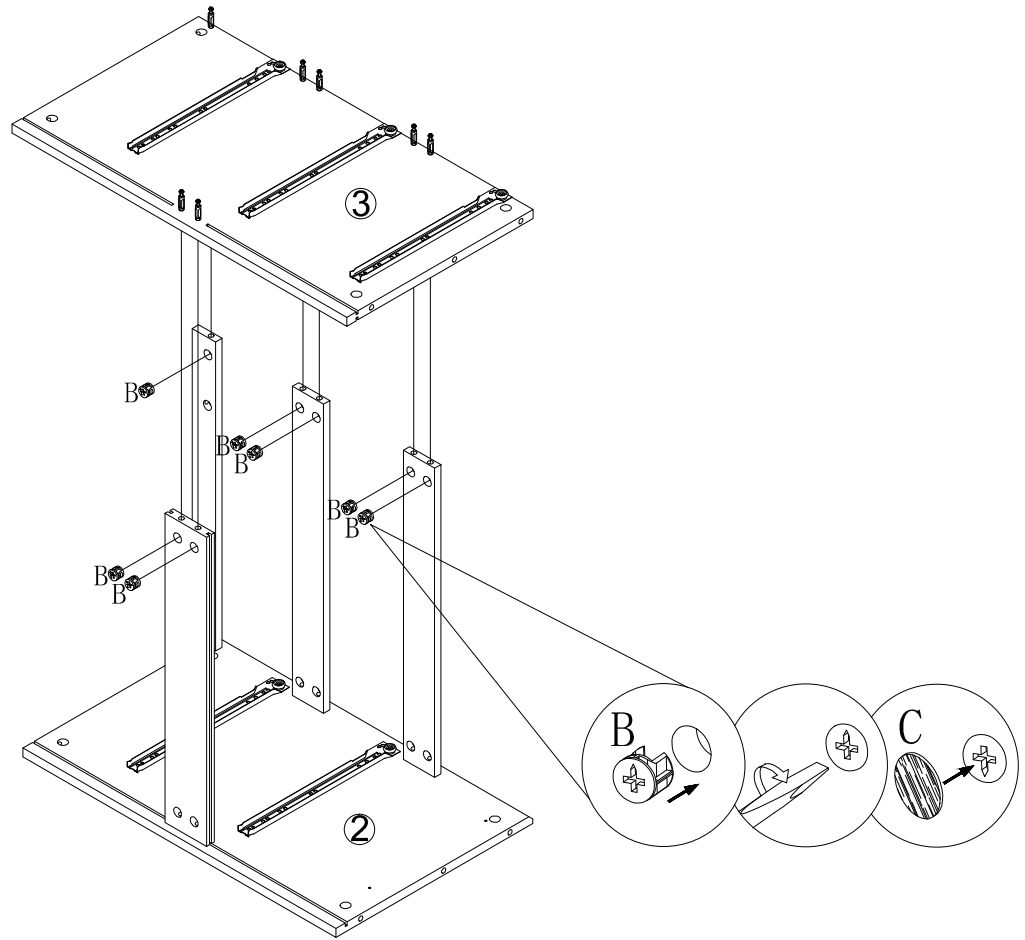


STEP 8


No. B
Quantity: 5 Pcs
Ø15



No. C
Quantity: 5 Pcs
Ø20

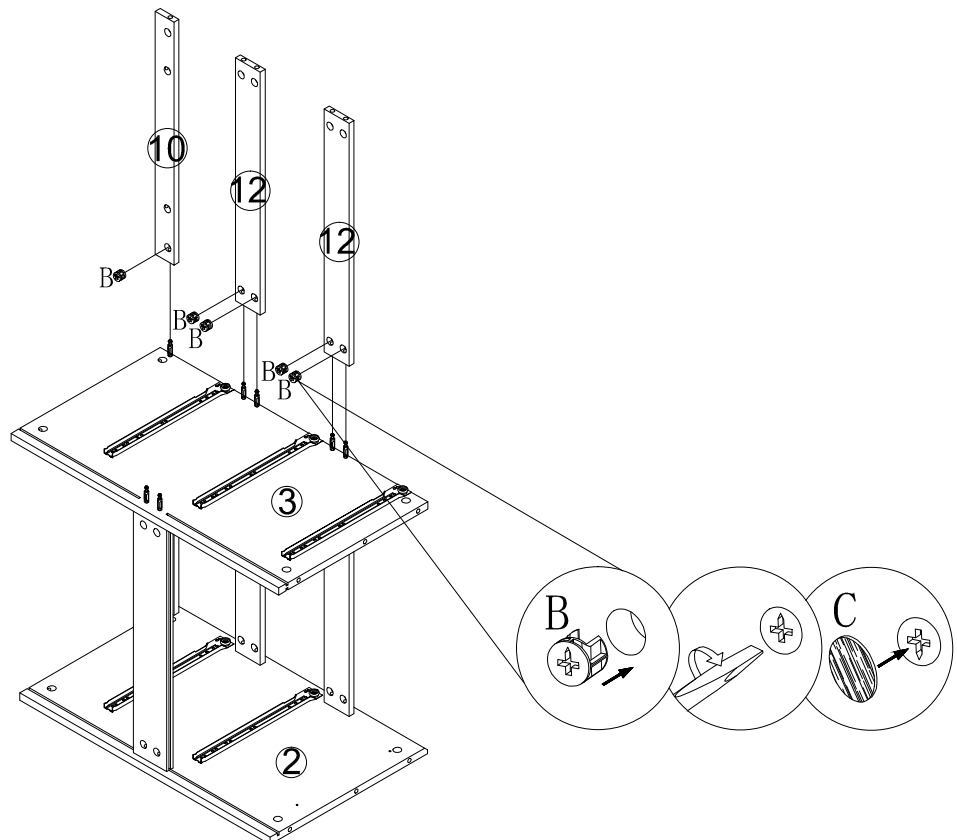

STEP 9

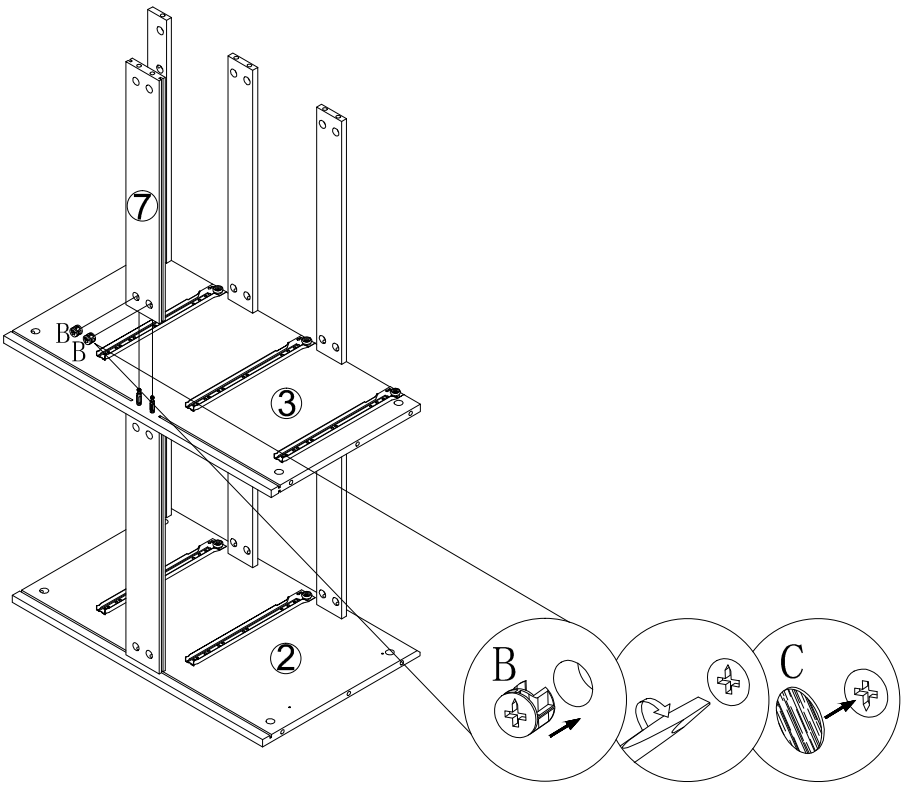


No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20



STEP 10

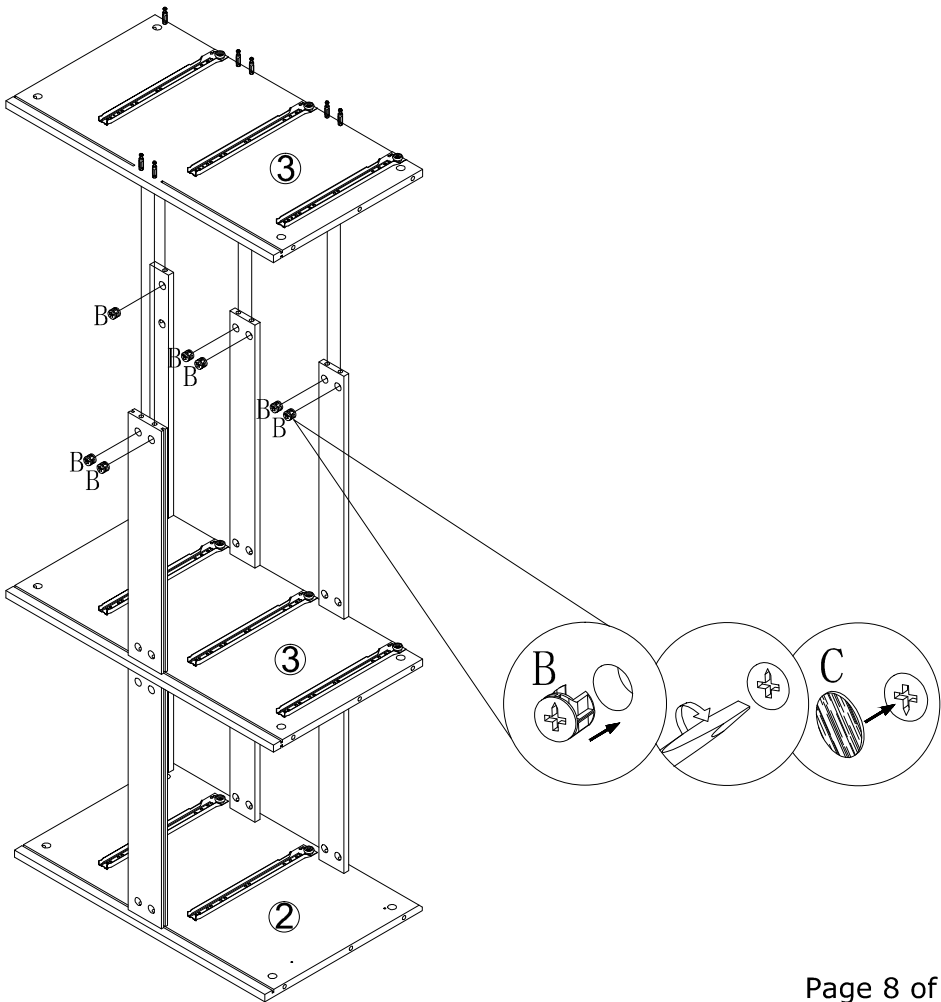

No. B
Quantity: 7 Pcs
Ø15



No. C
Quantity: 7 Pcs
Ø20




STEP 11

No. B
Quantity: 5 Pcs
Ø15



No. C
Quantity: 5 Pcs
Ø20

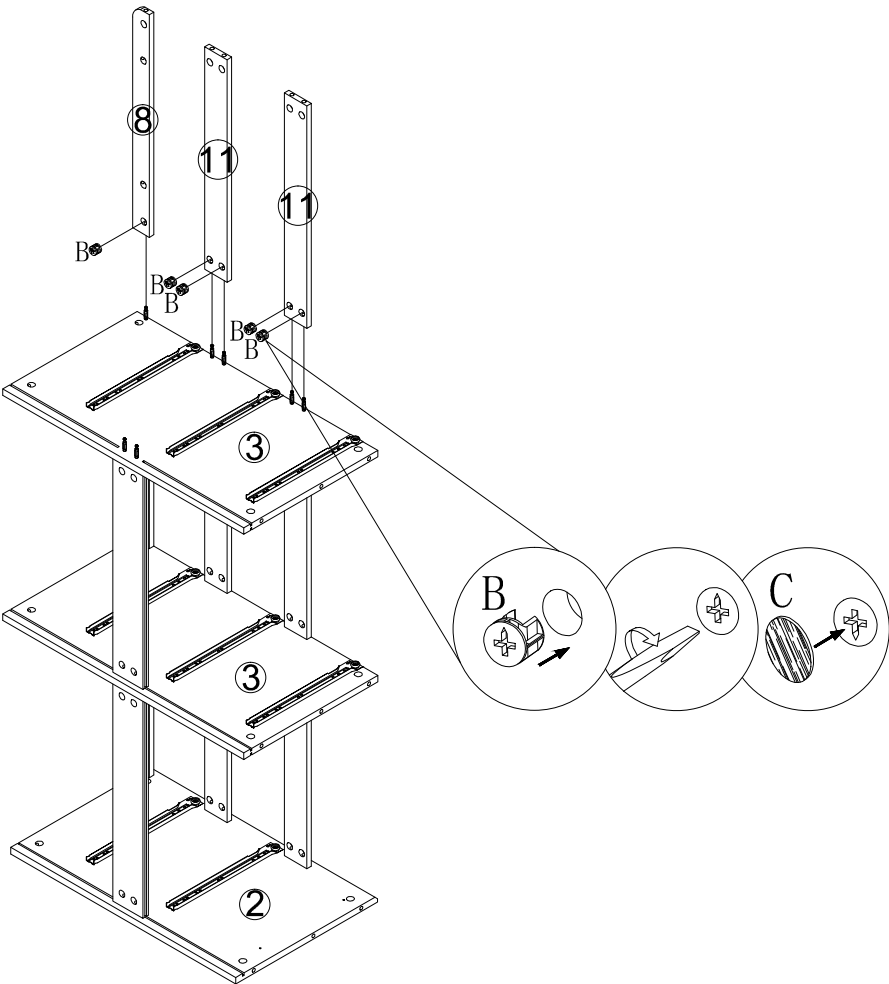


STEP 12

No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20

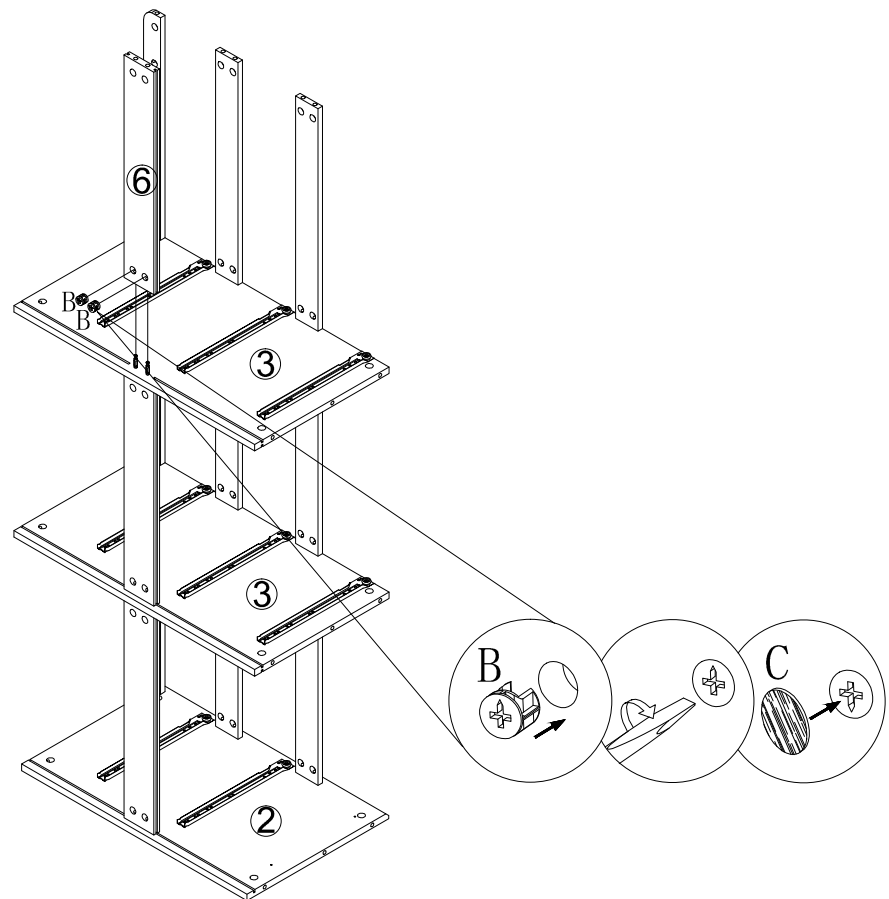


STEP 13


No. B
Quantity: 7 Pcs
Ø15




No. C
Quantity: 7 Pcs
Ø20

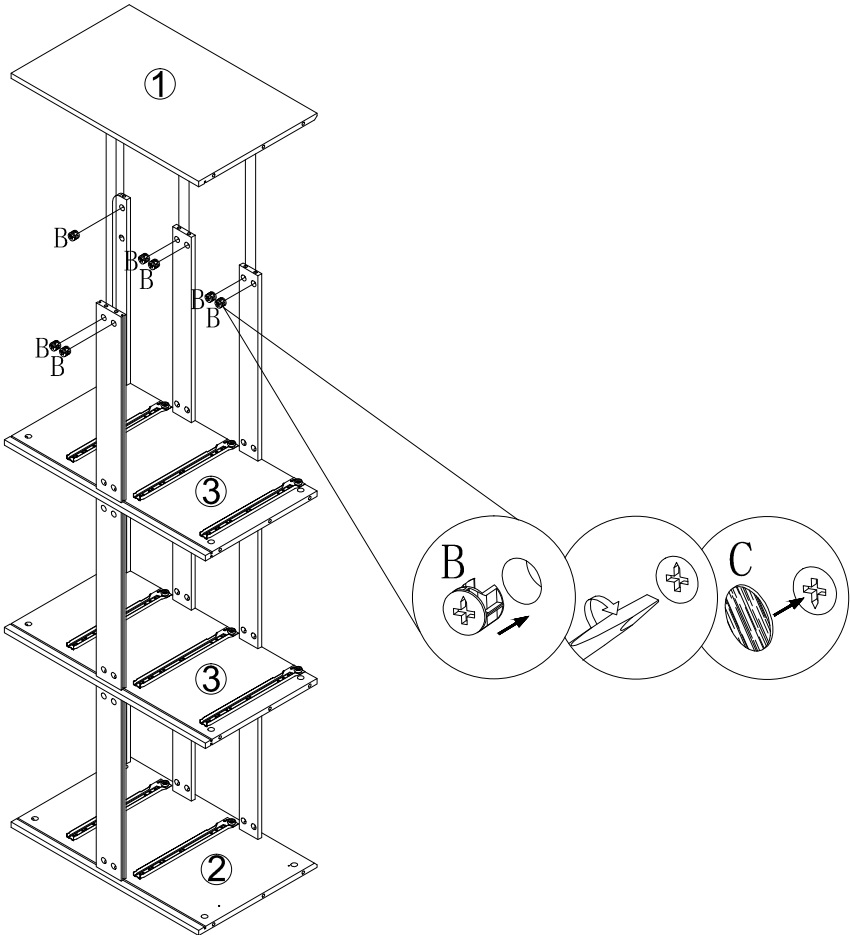


STEP 14

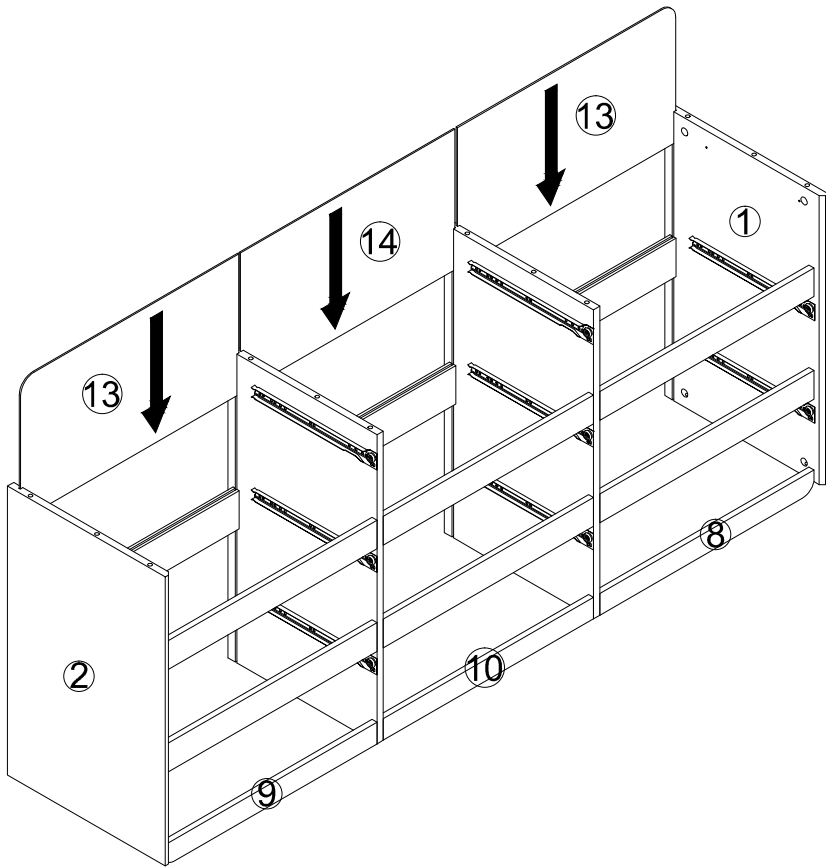


STEP 15

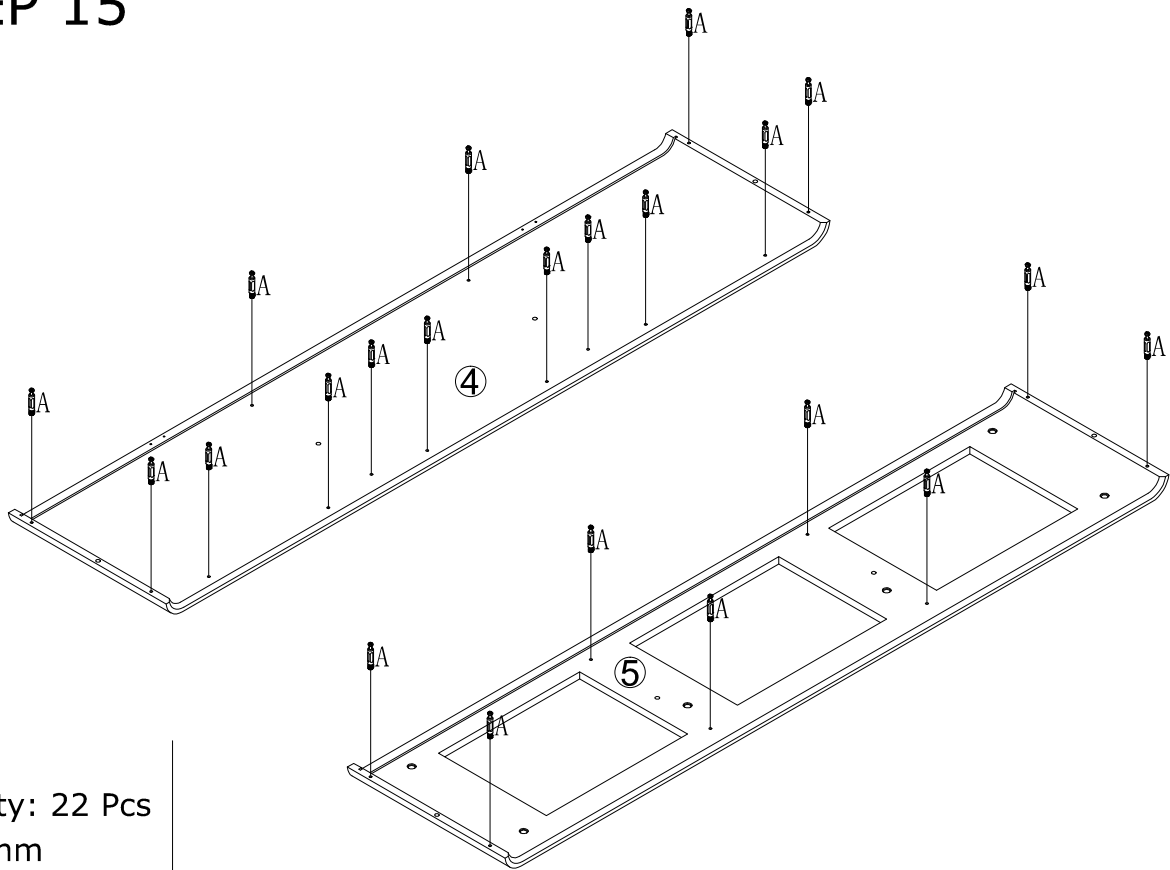

No. A
Quantity: 22 Pcs
8*28 mm



STEP 16

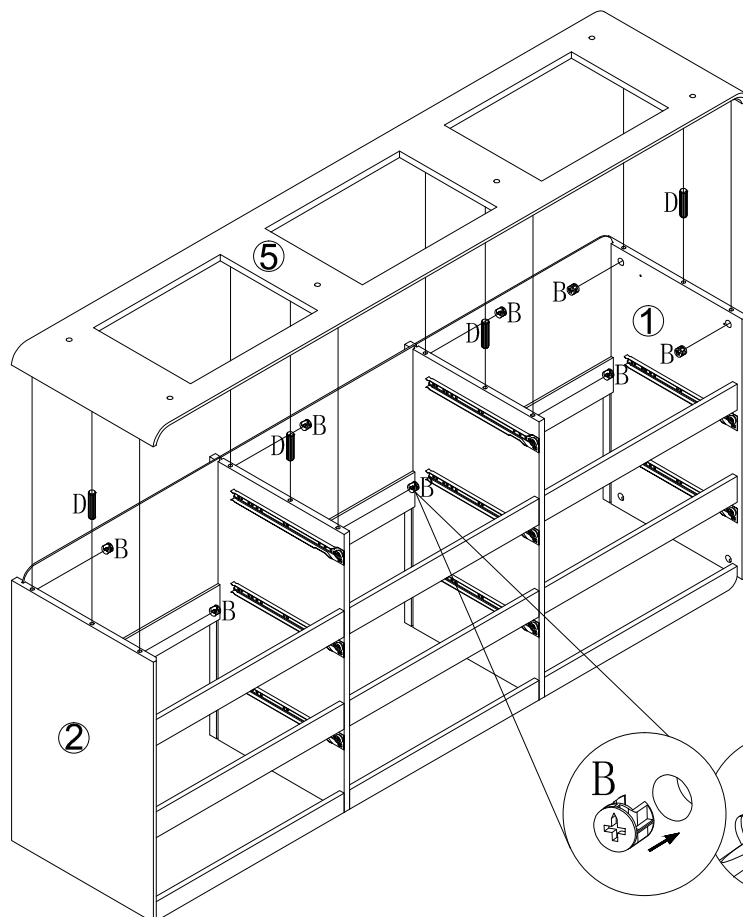



No. B
Quantity: 8 Pcs
Ø15



No. C
Quantity: 8 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm

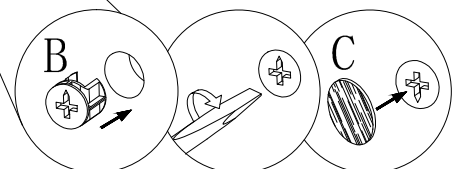


STEP 17


No. E
Quantity: 1 Sets
12"



No. F
Quantity: 4 Pcs
M3.5*12mm

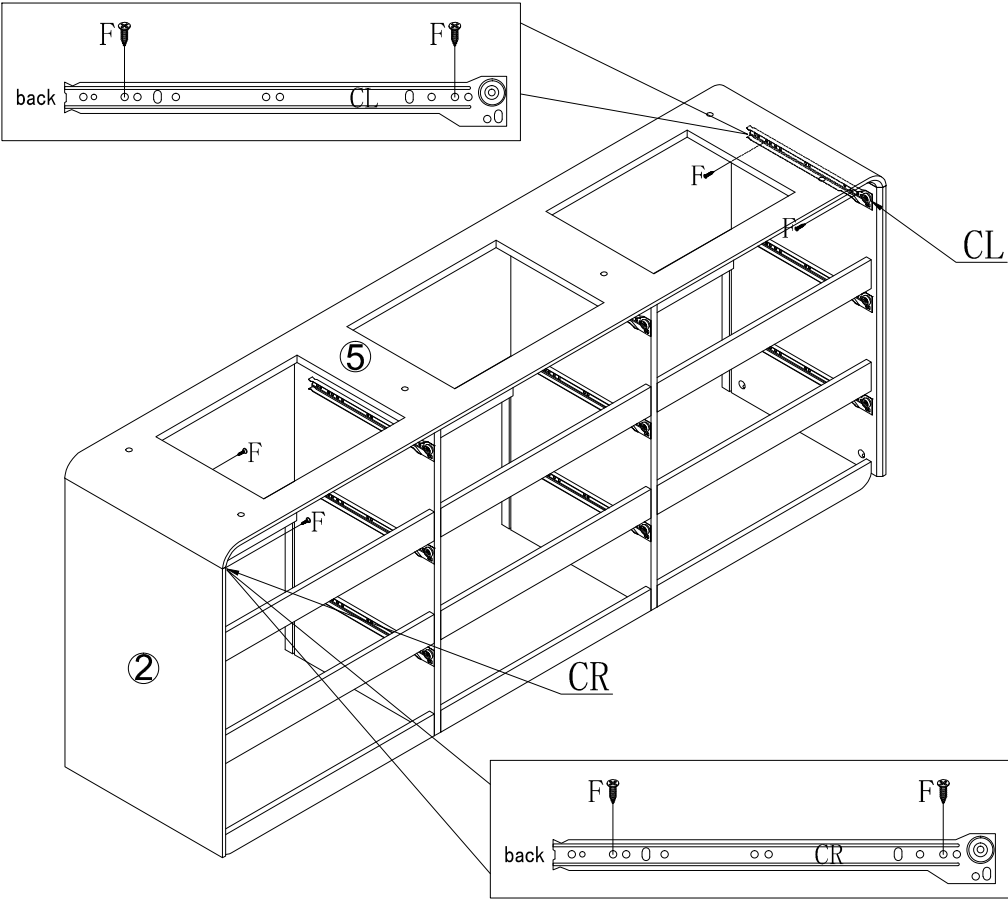


STEP 18

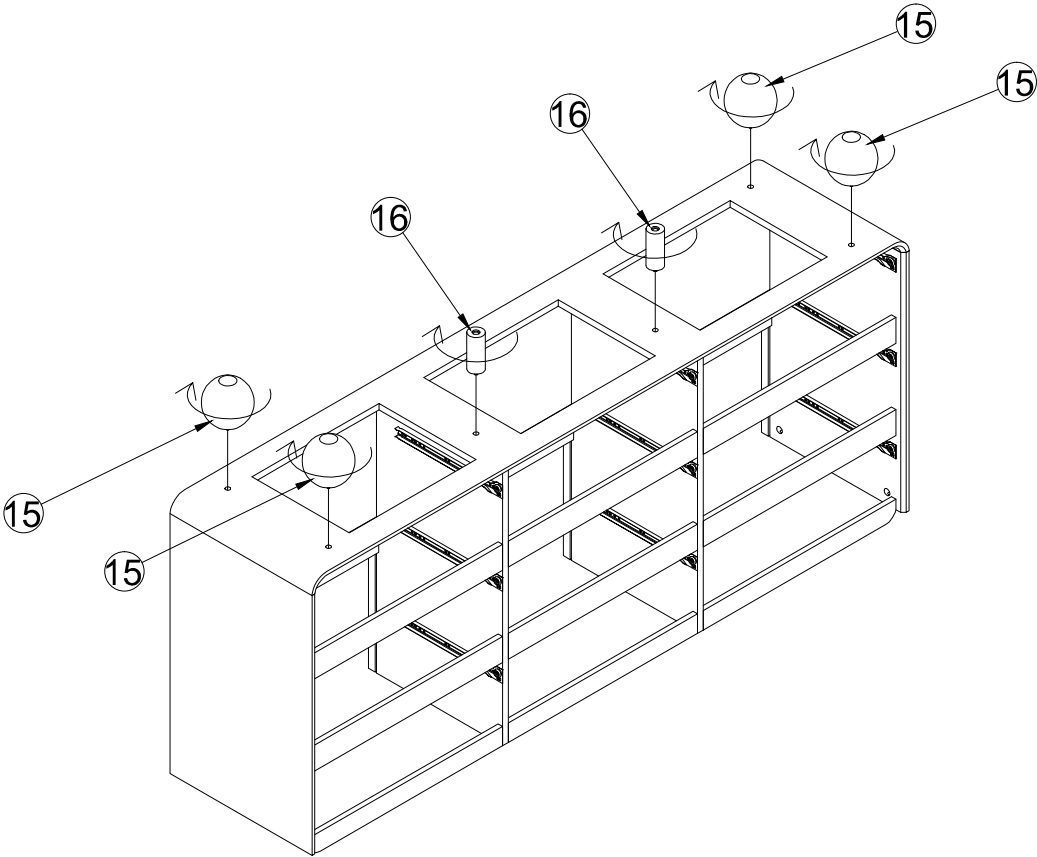


STEP 19


No. H
Quantity: 2 Pcs



No. I
Quantity: 4 Pcs
Ø20

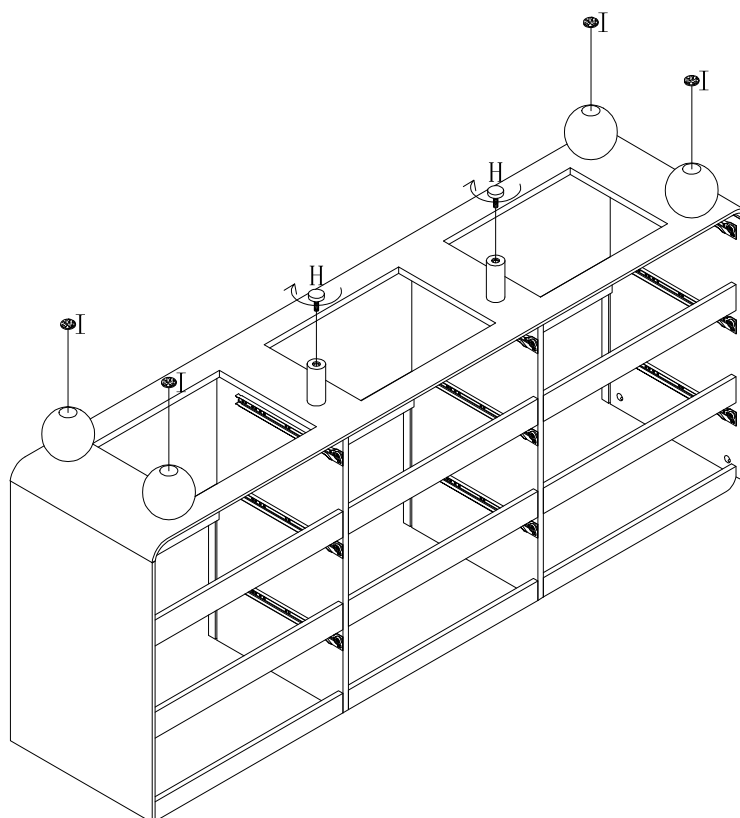

STEP 20

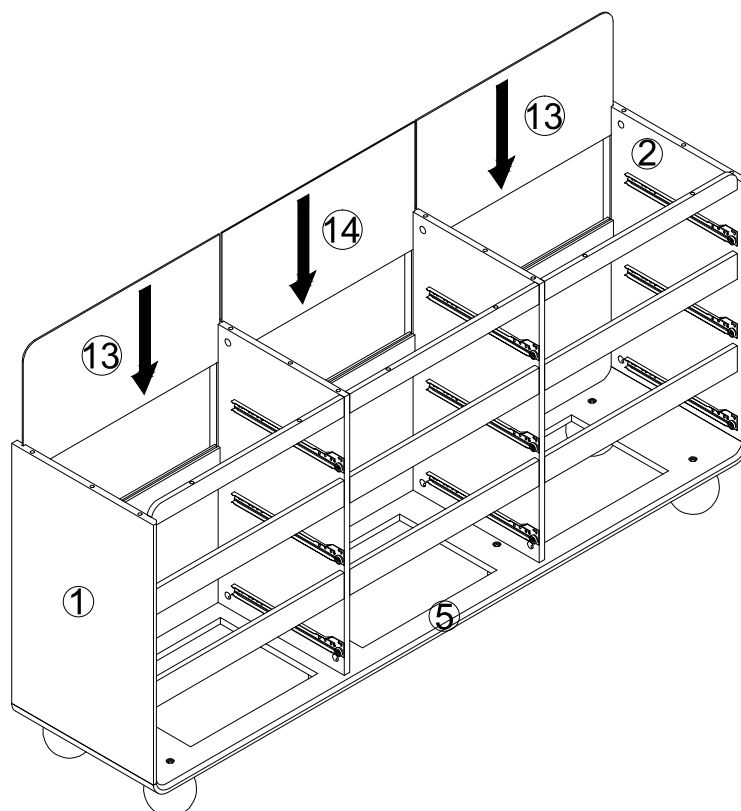

STEP 21



No. B
Quantity: 14 Pcs
Ø15



No. C
Quantity: 14 Pcs
Ø20





No. D
Quantity: 4 Pcs
8*30mm

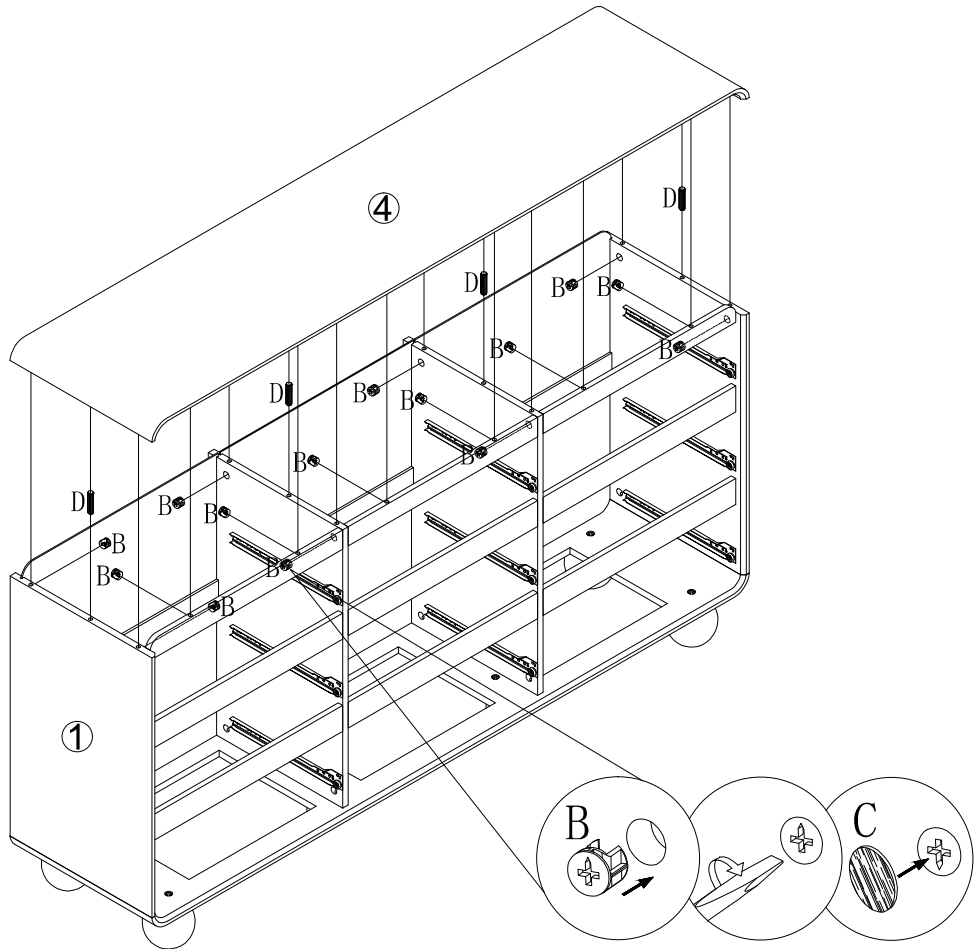


STEP 22

No. J
Quantity: 36 Pcs
8*25mm

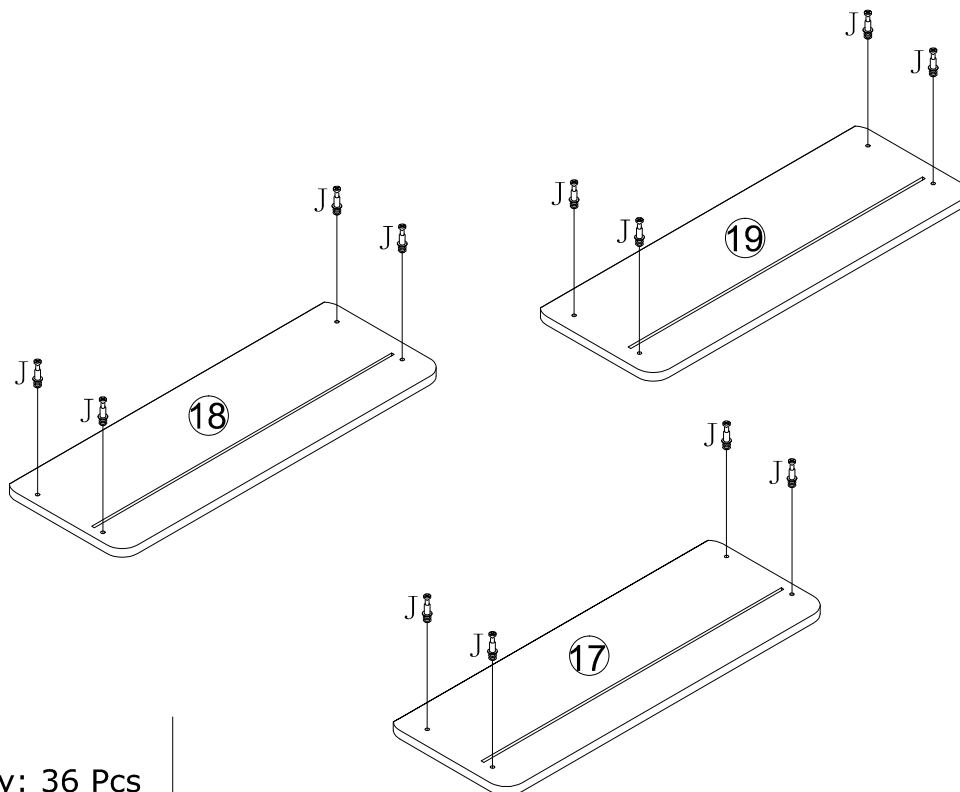



x3

STEP 23

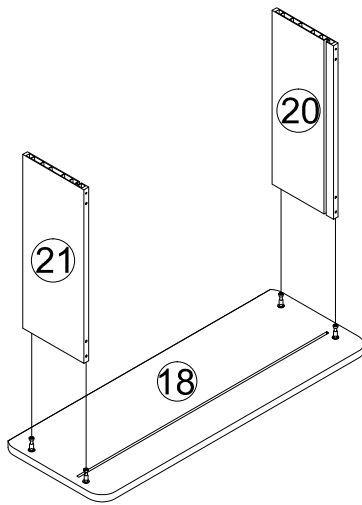

Please note that at the connection, both above and below, the glue beads need to be tapped into place.

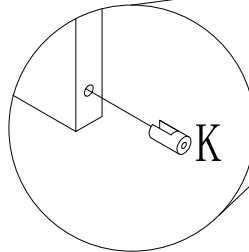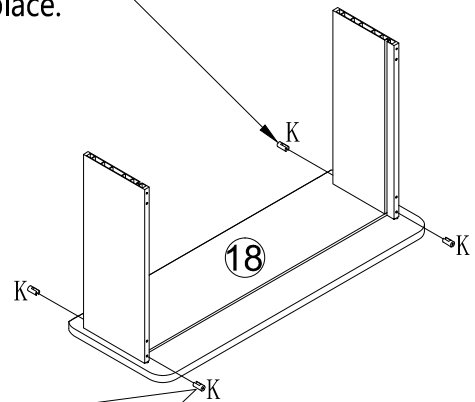


×3



No. K
Quantity: 12 Pcs
Ø6*12mm



STEP 24

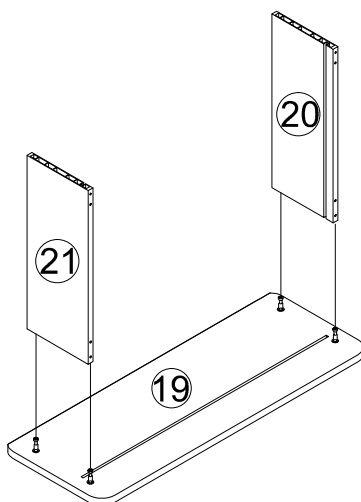

Please note that at the connection, both above and below, the glue beads need to be tapped into place.

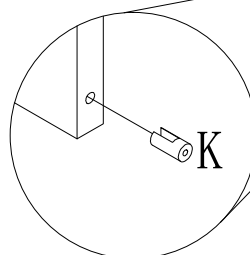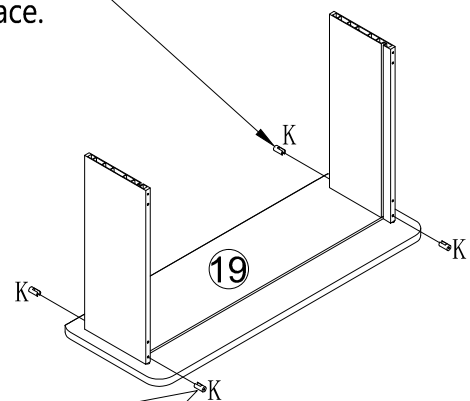


×3


No. K
Quantity: 12 Pcs
Ø6*12mm




STEP 25

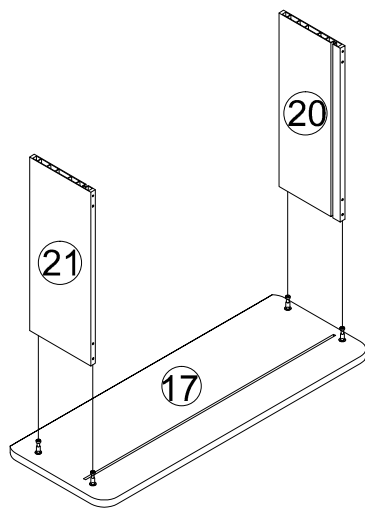

Please note that at the connection, both above and below, the glue beads need to be tapped into place.



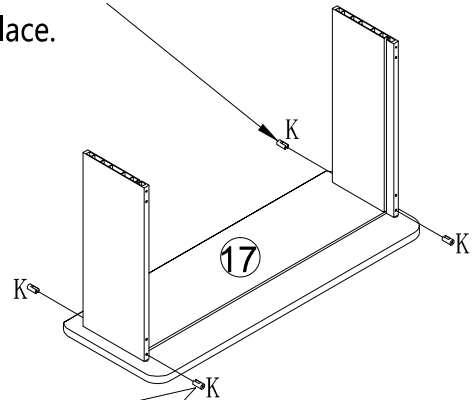


No. K
Quantity: 12 Pcs
Ø6*12mm

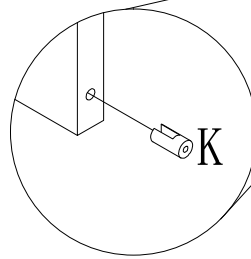

×3



STEP 26

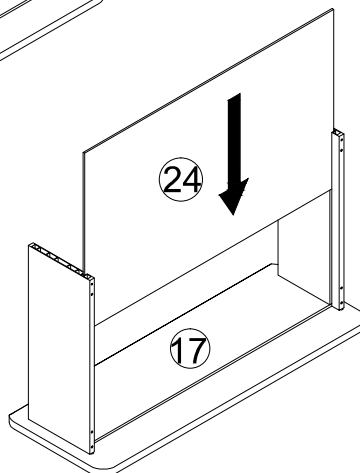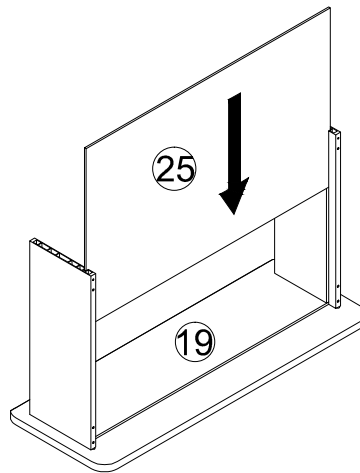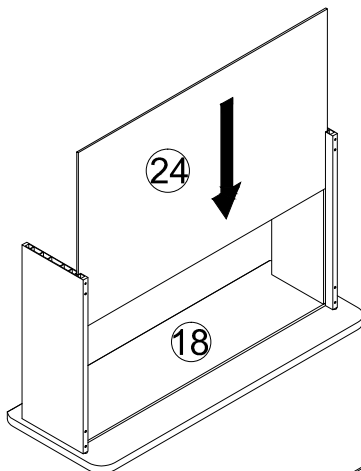

×3

STEP 27


Please note that at the connection, both above and below, the glue beads need to be tapped into place.

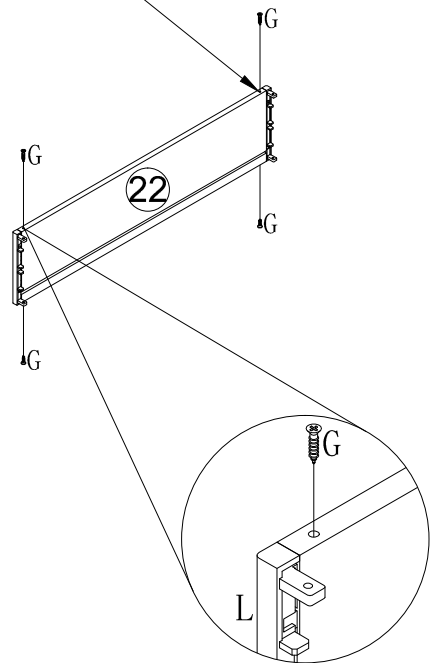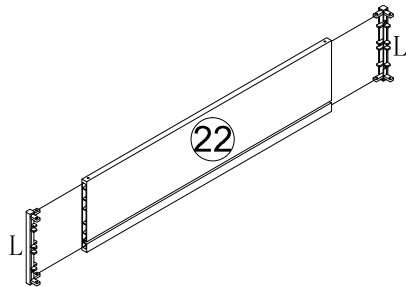

No. G
Quantity: 24 Pcs
M3*12mm





No. L
Quantity: 12 Pcs



× 6

STEP 28


Please note that at the connection, both above and below, the glue beads need to be tapped into place.

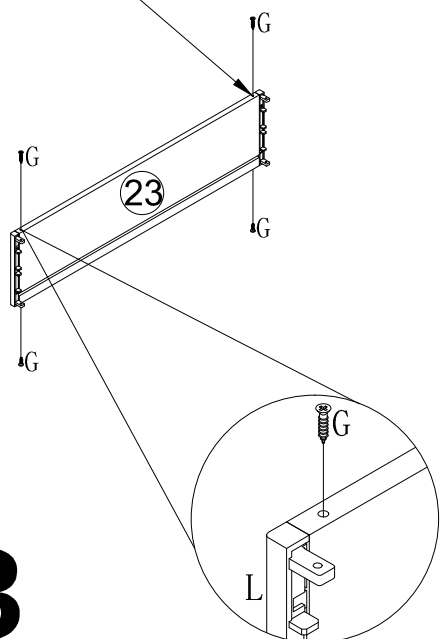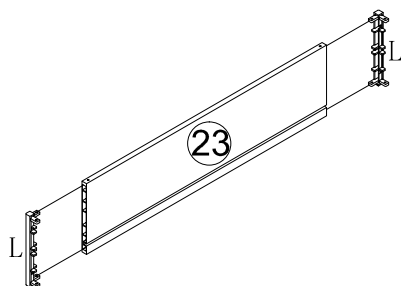

No. G
Quantity: 12 Pcs
M3*12mm




No. L
Quantity: 6 Pcs




× 3

STEP 29

Please note that at the connection, both above and below, the glue beads need to be tapped into place.

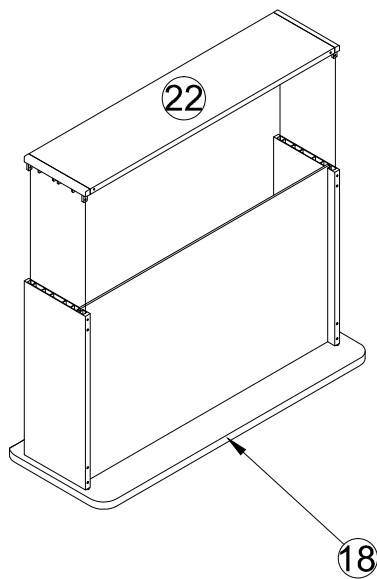


No. G
Quantity: 12 Pcs
M3*12mm

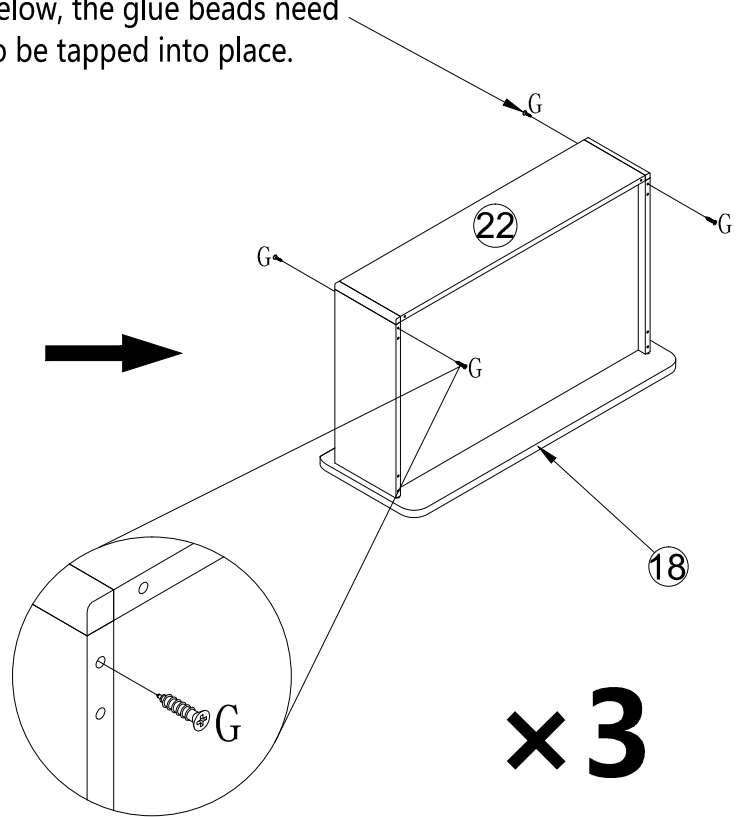


STEP 30

Please note that at the connection, both above and below, the glue beads need to be tapped into place.


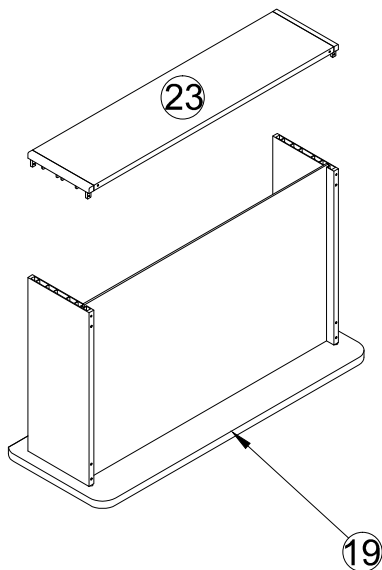


No. G
Quantity: 12 Pcs
M3*12mm

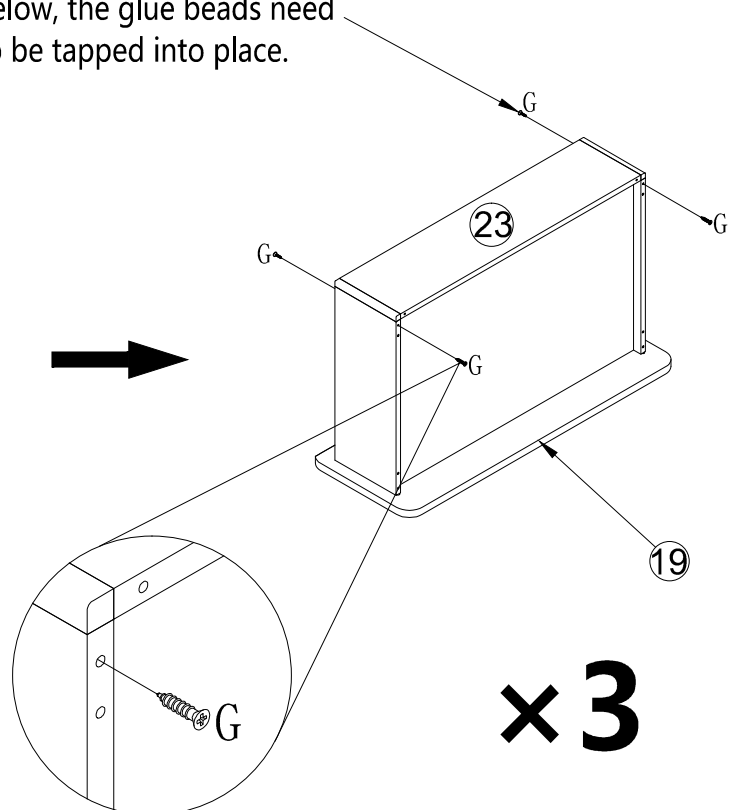


STEP 31

Please note that at the connection, both above and below, the glue beads need to be tapped into place.

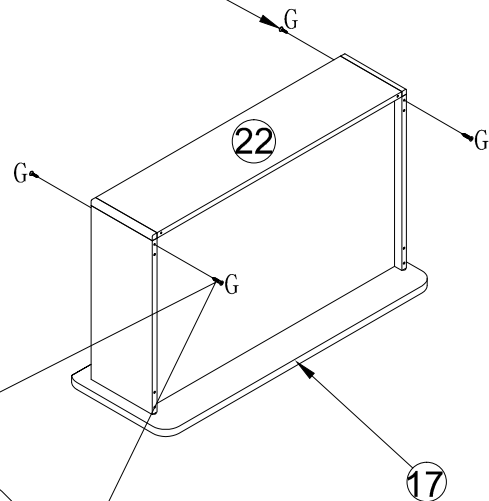
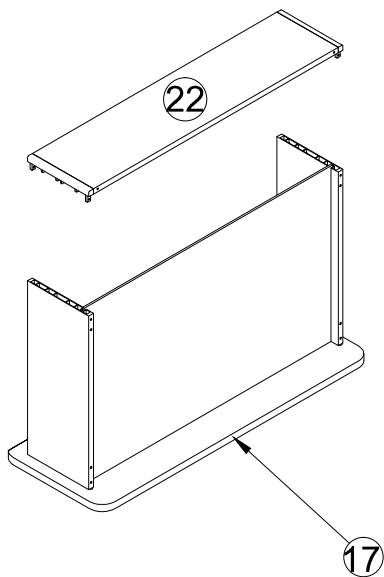


No. G
Quantity: 12 Pcs
M3*12mm

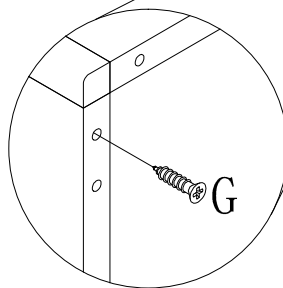


× 3

STEP 32

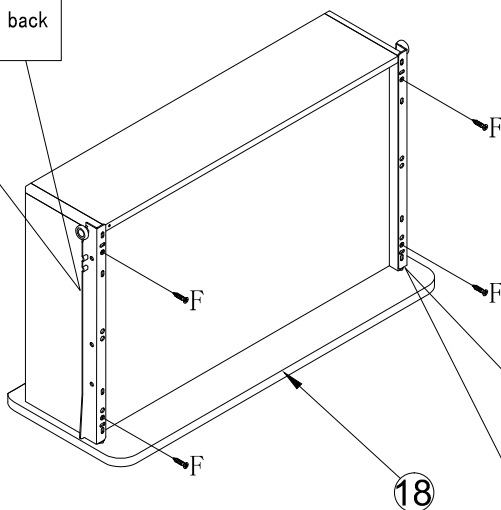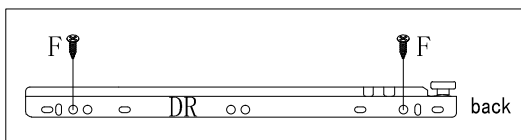


× 3


No. E
Quantity: 3 Sets
12"




No. F
Quantity: 12 Pcs
M3.5*12mm

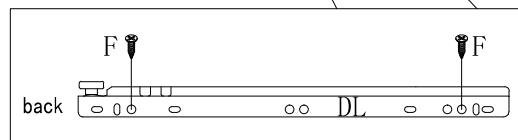

STEP 33

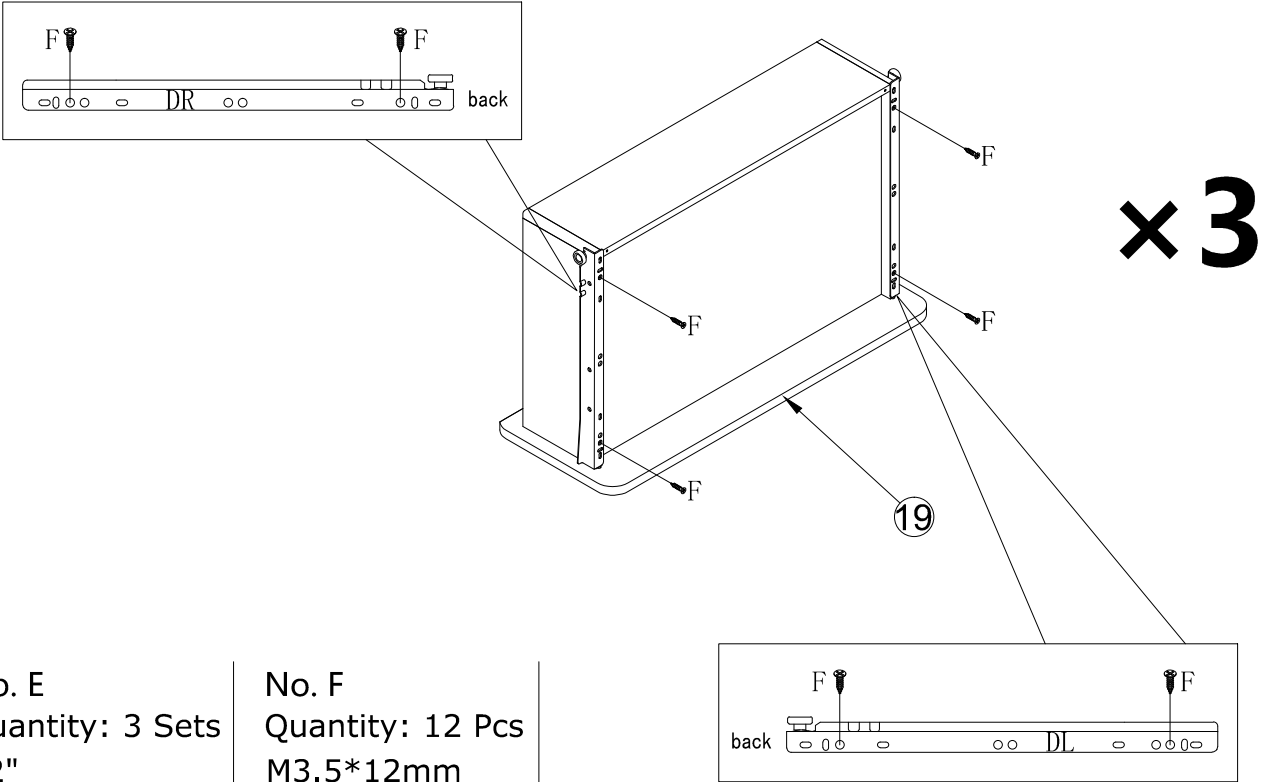


No. E
Quantity: 3 Sets
12"




No. F
Quantity: 12 Pcs
M3.5*12mm



STEP 34

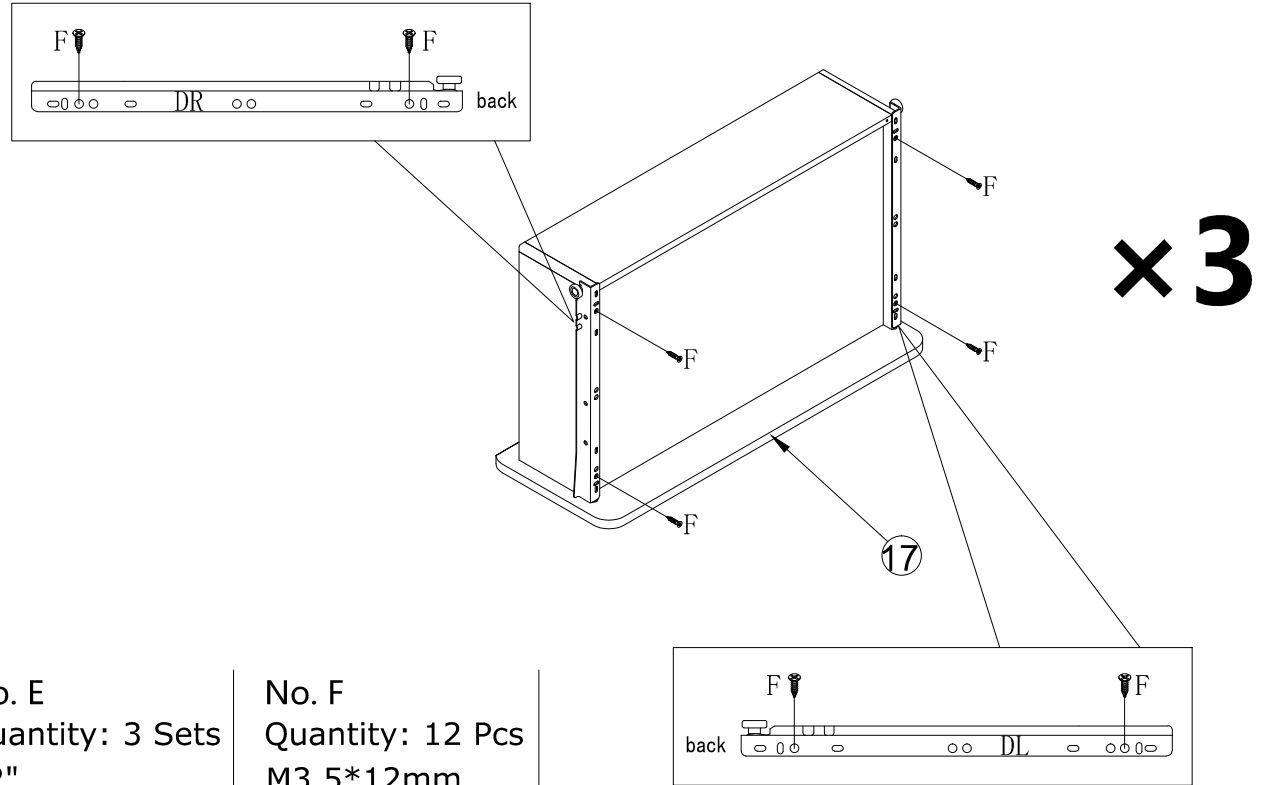


No. E
Quantity: 3 Sets
12"



No. F
Quantity: 12 Pcs
M3.5*12mm




STEP 35

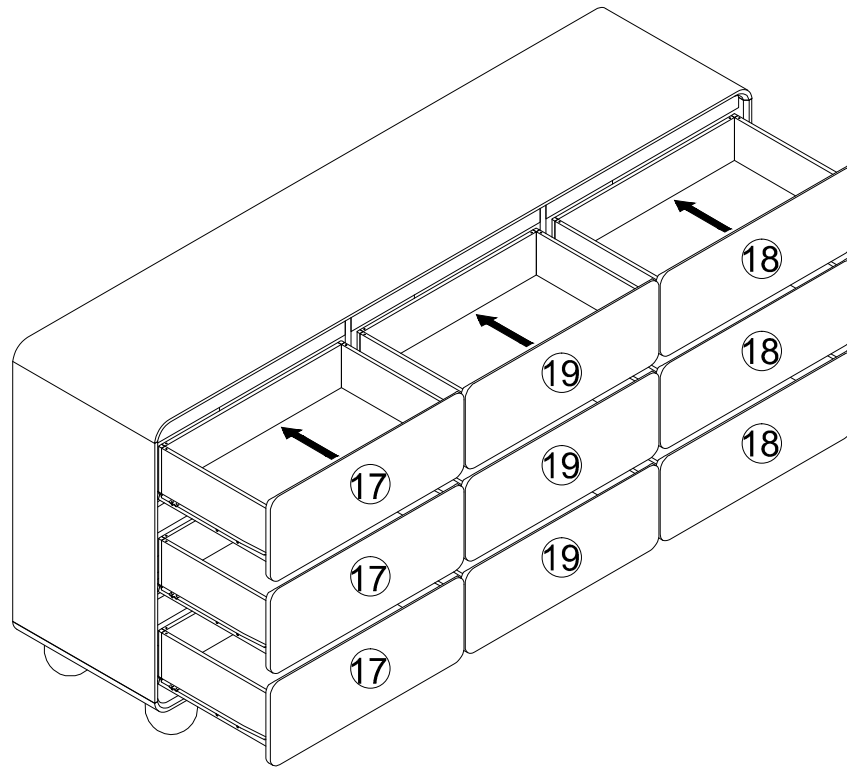

STEP 36



“DO NOT skip Step 36. The Plastic Wedges (M) are crucial for the stability of the cabinet.”

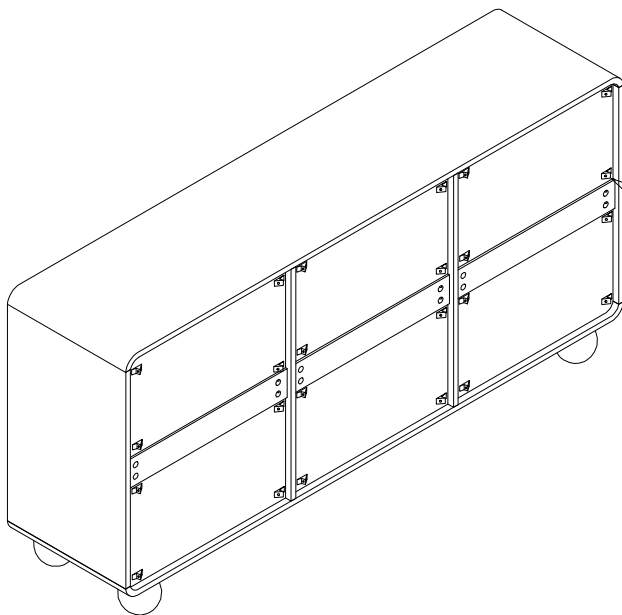

No. M
Quantity: 24 Sets









Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

STEP 37


Anti-tipping Kit



WARNING: ALWAYS LIFT the cabinet when moving it. NEVER DRAG it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

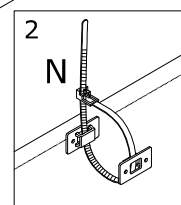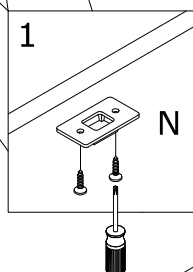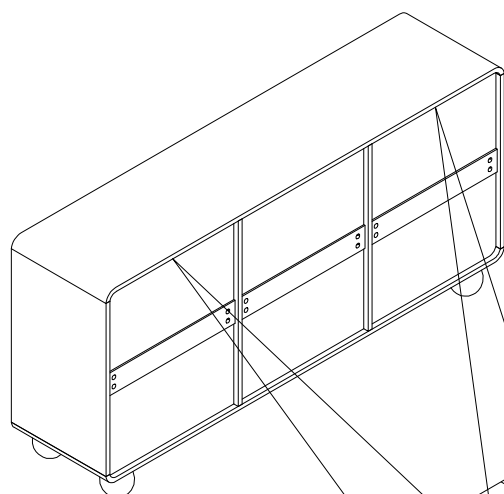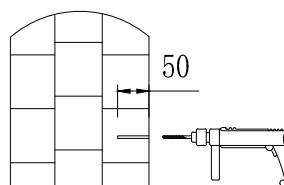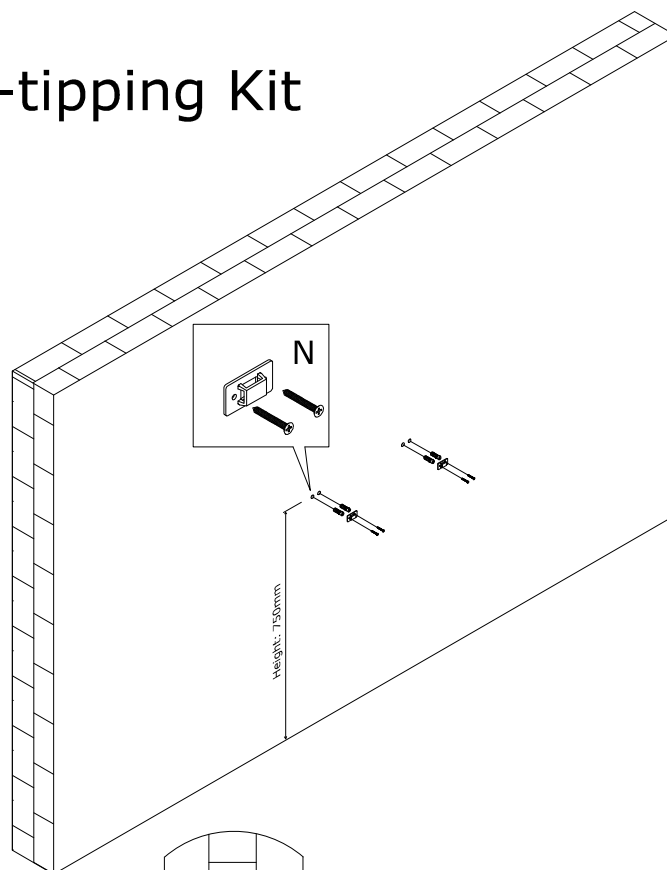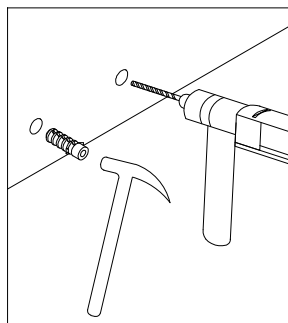

No. N
Quantity: 2 Sets



Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.