



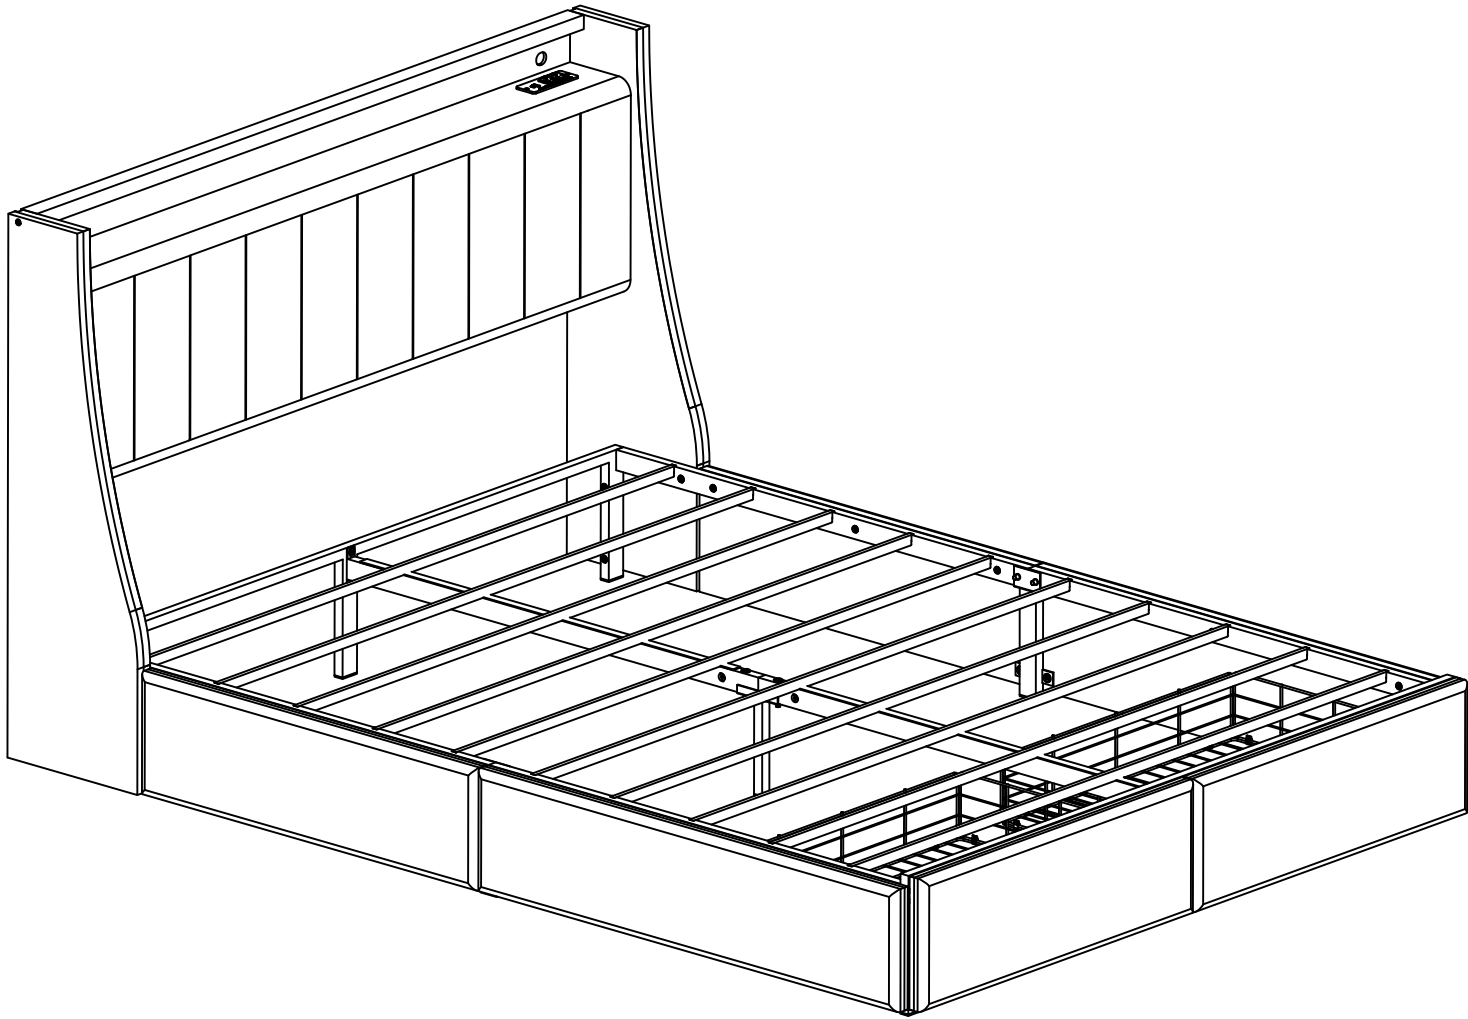


Model: C337-QD-FH

PRODUCT GUIDE AND INSTALLATION MANUAL



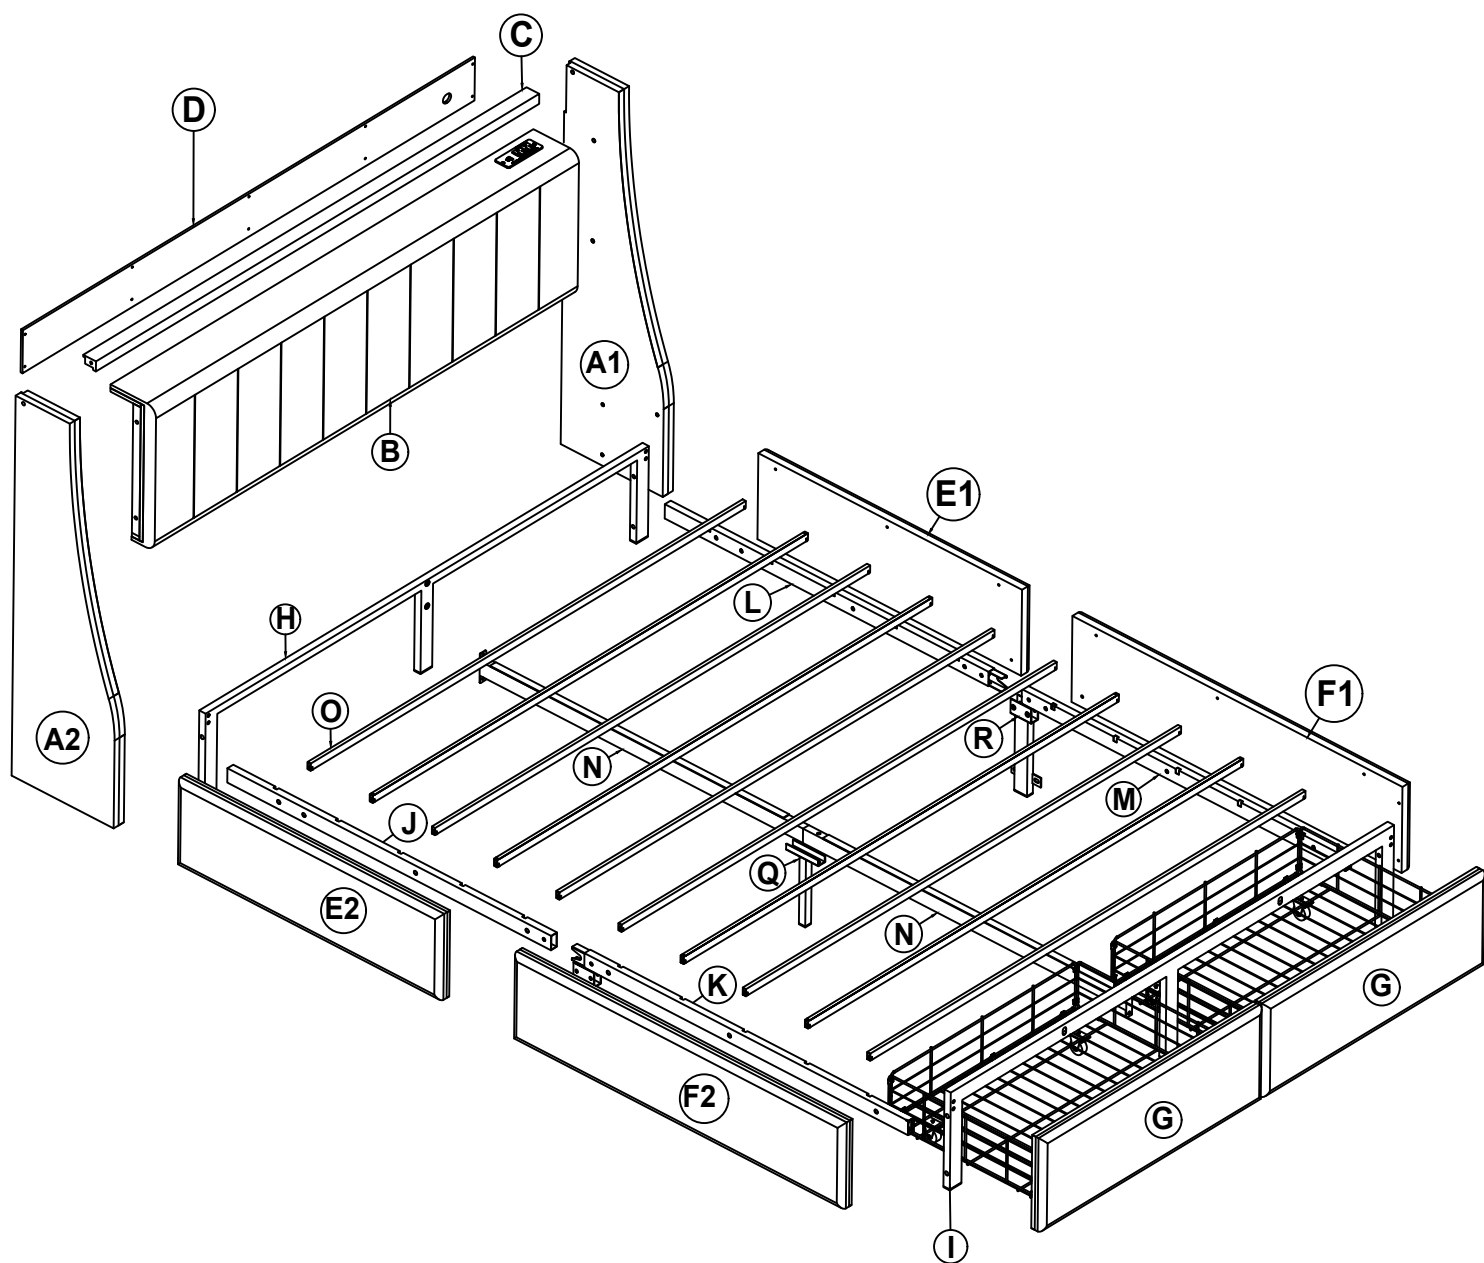


Parts List:

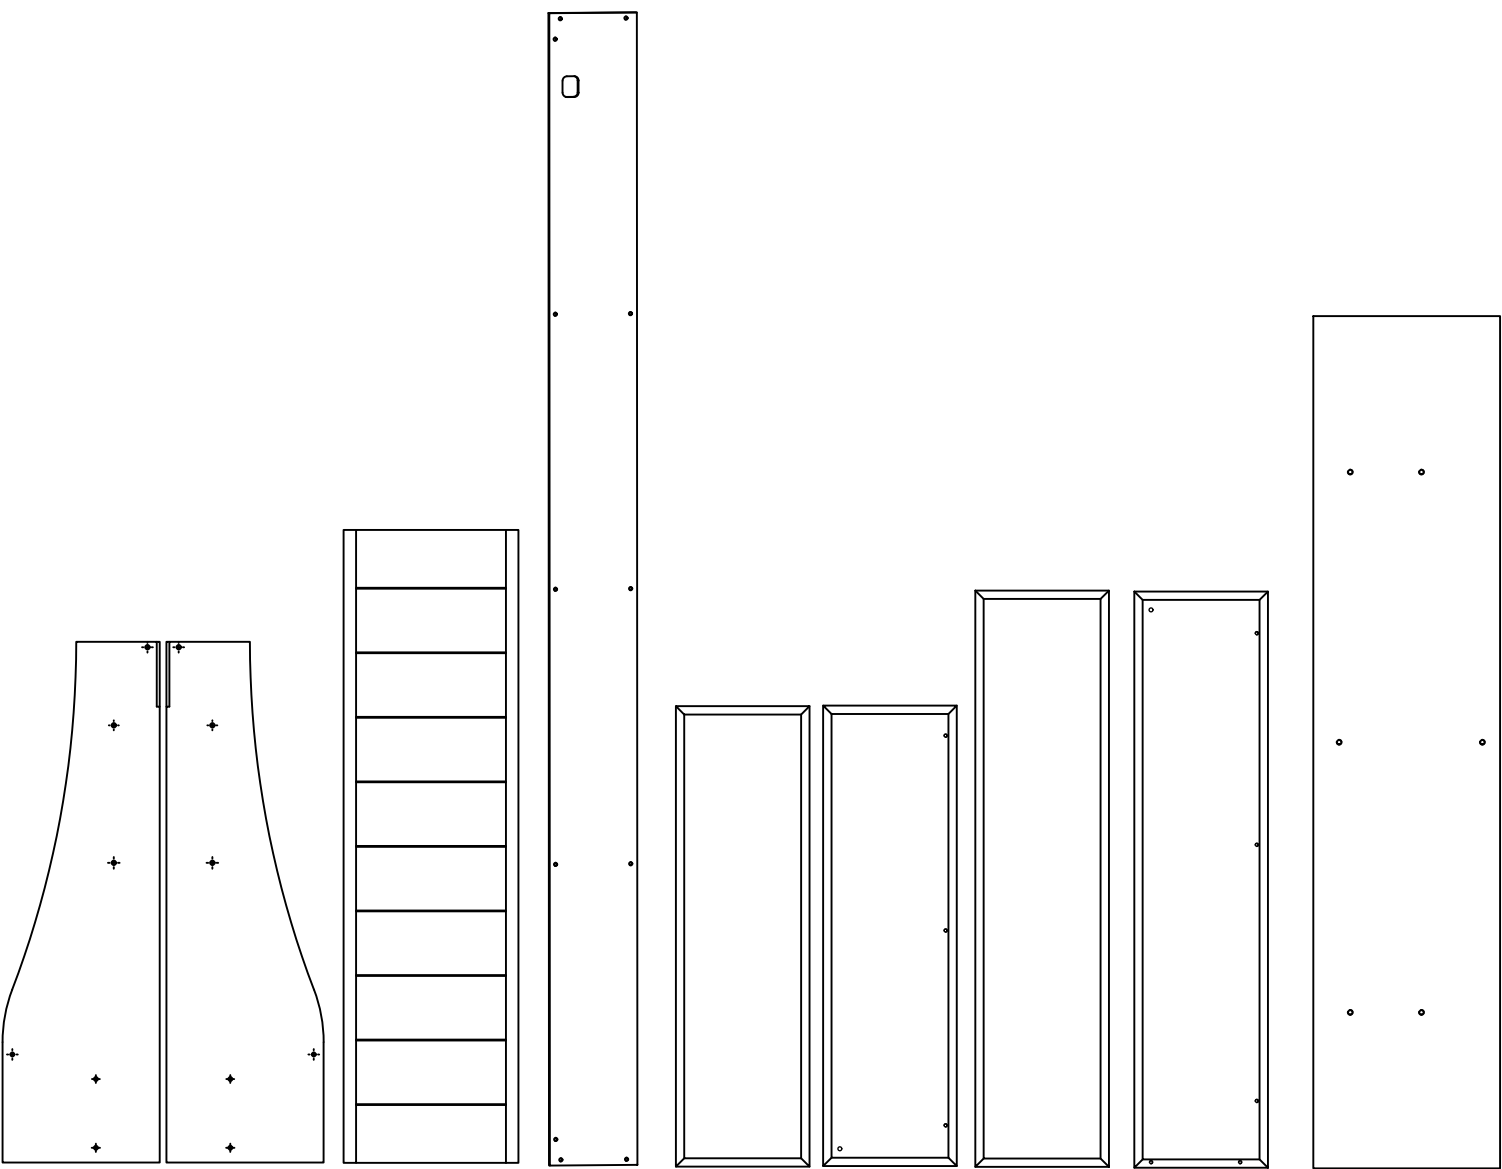


- A2**
1pcs
- A1**
1pcs
- B**
1pcs
- D**
1pcs
- E1**
1pcs
- E2**
1pcs
- F1**
1pcs
- F2**
1pcs
- G**
2pcs

Parts List:

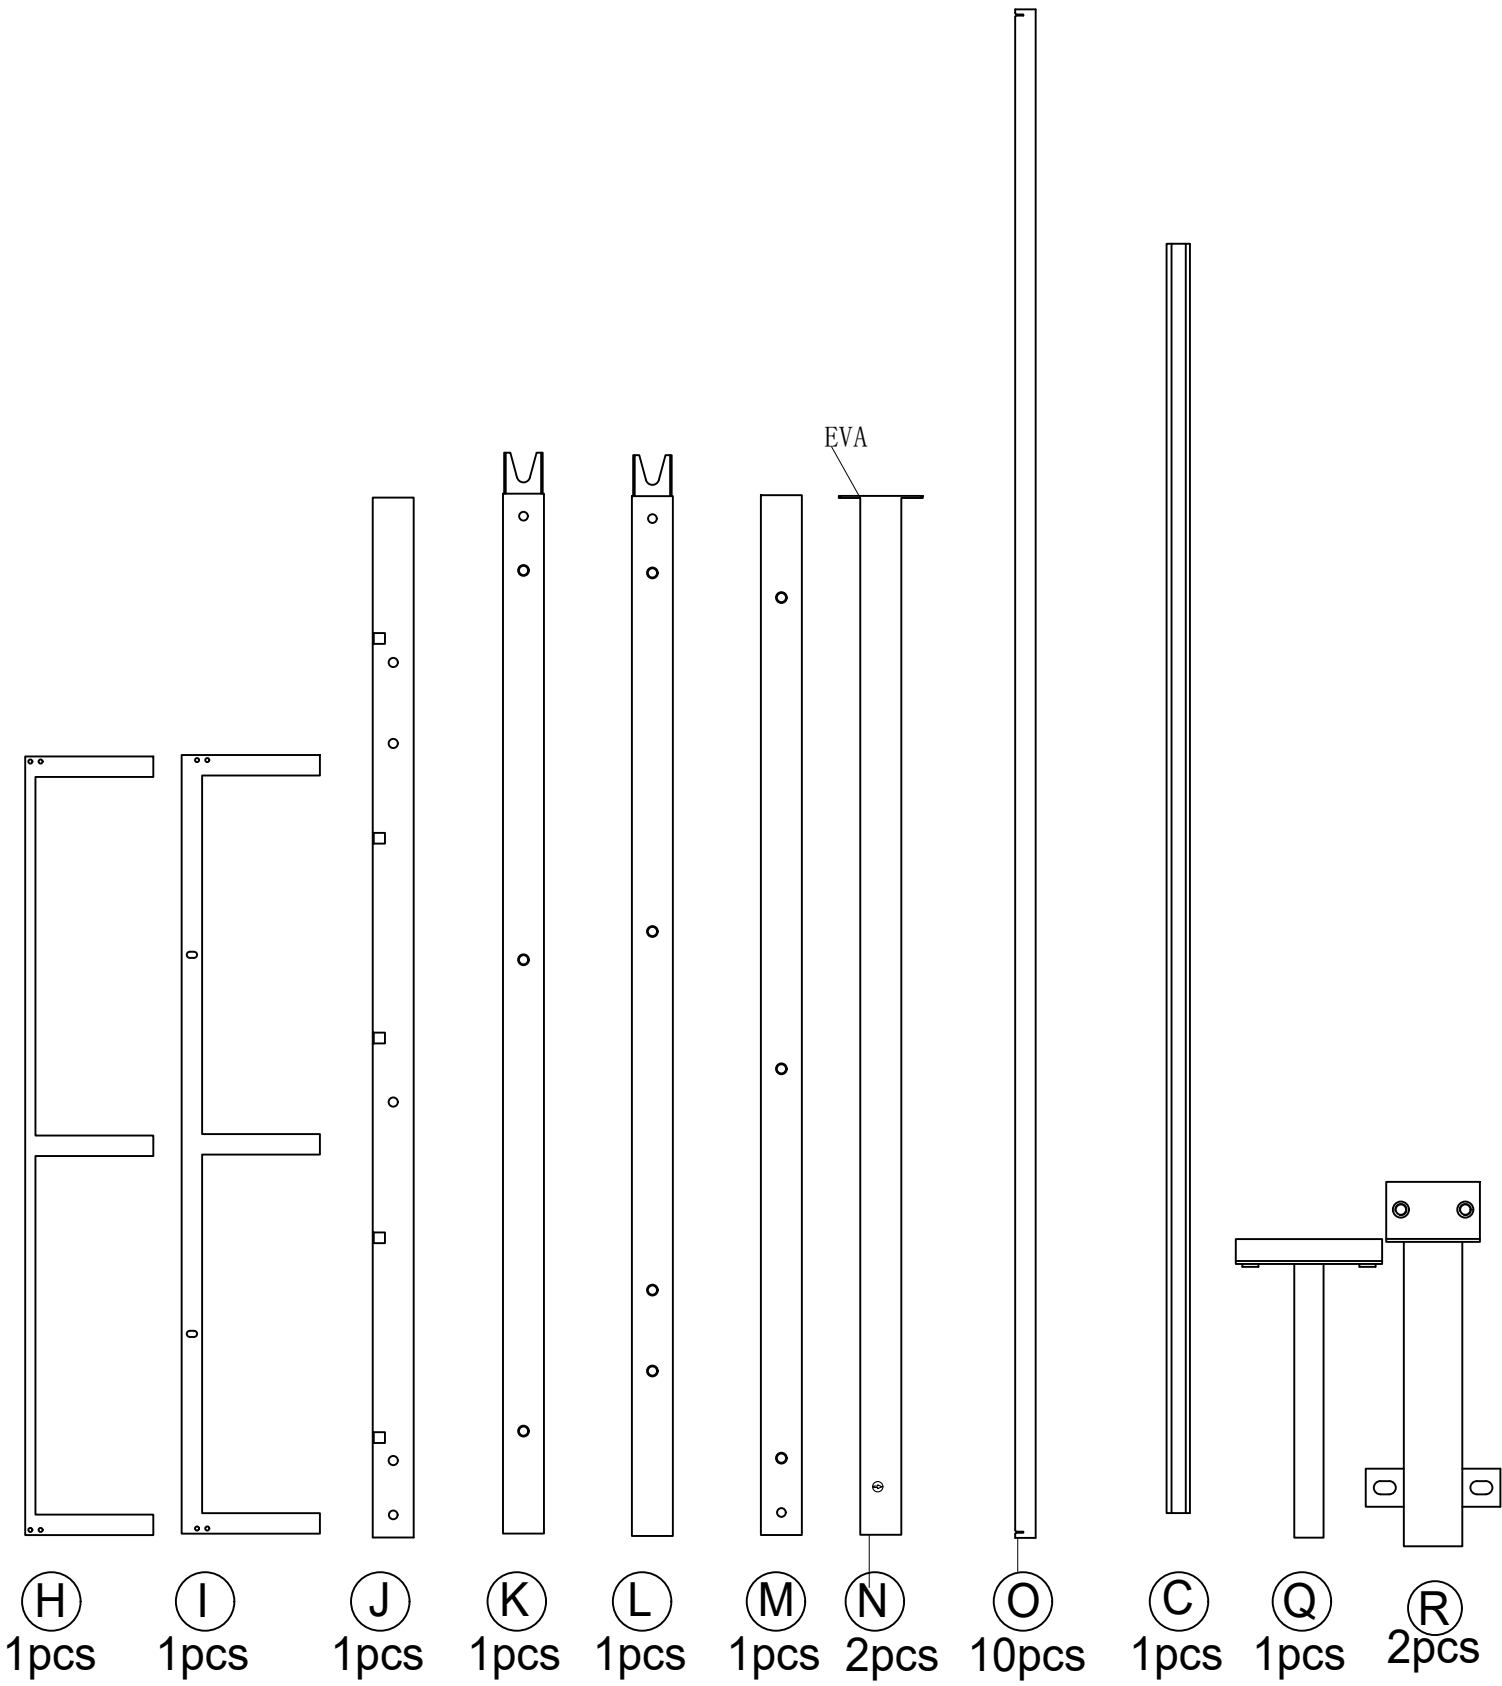


Parts List:

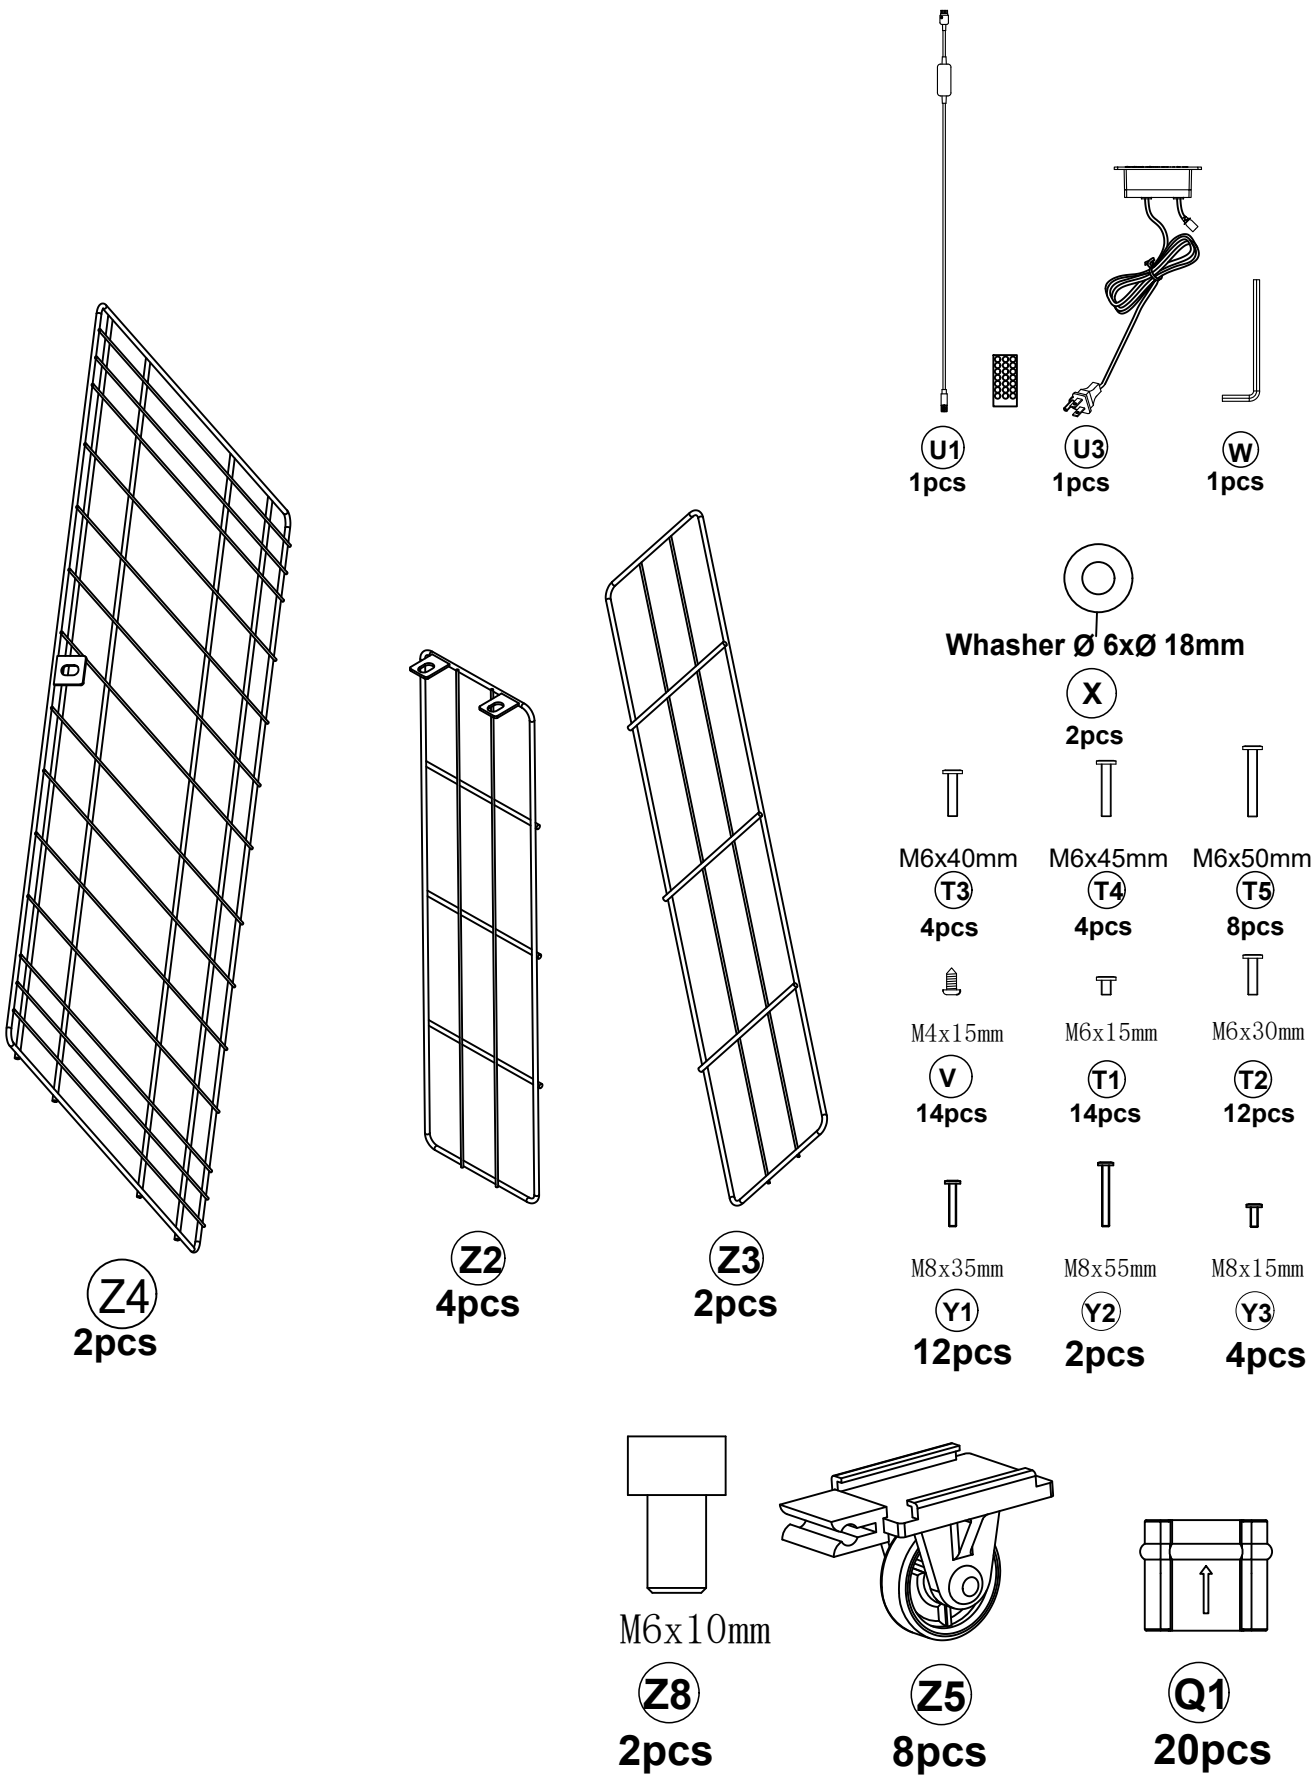


1.1


Step 1

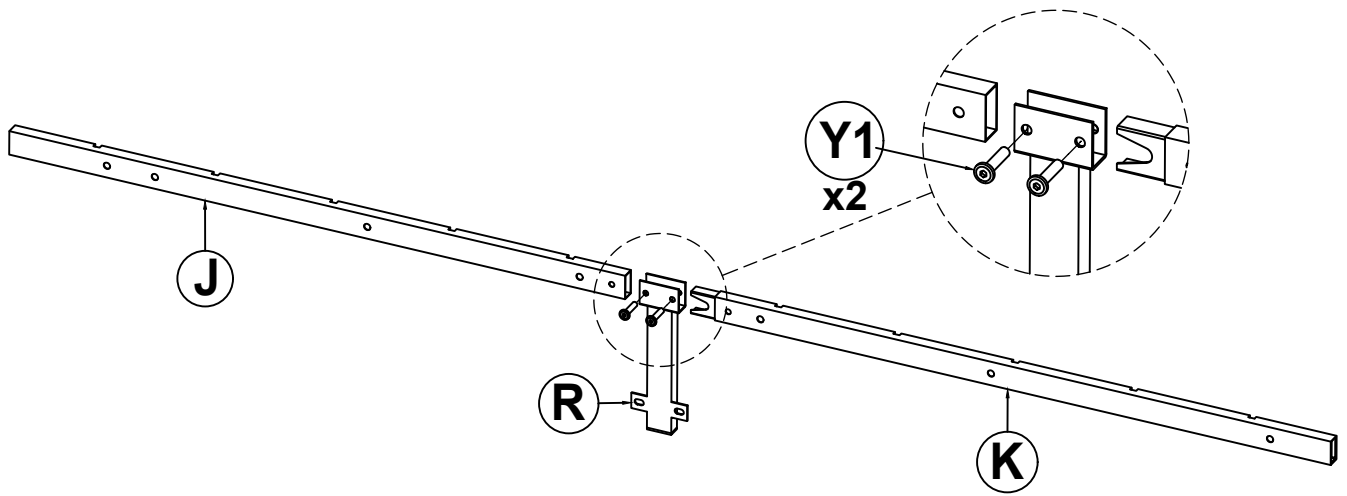

1.2

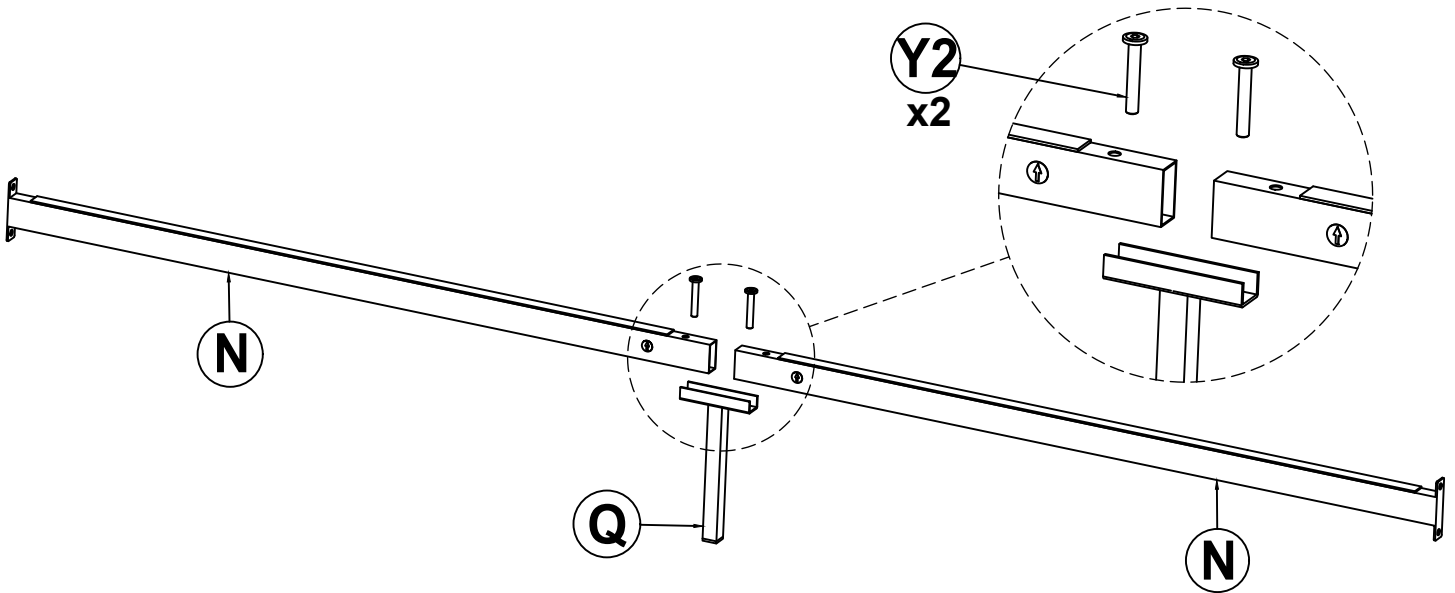


1.3

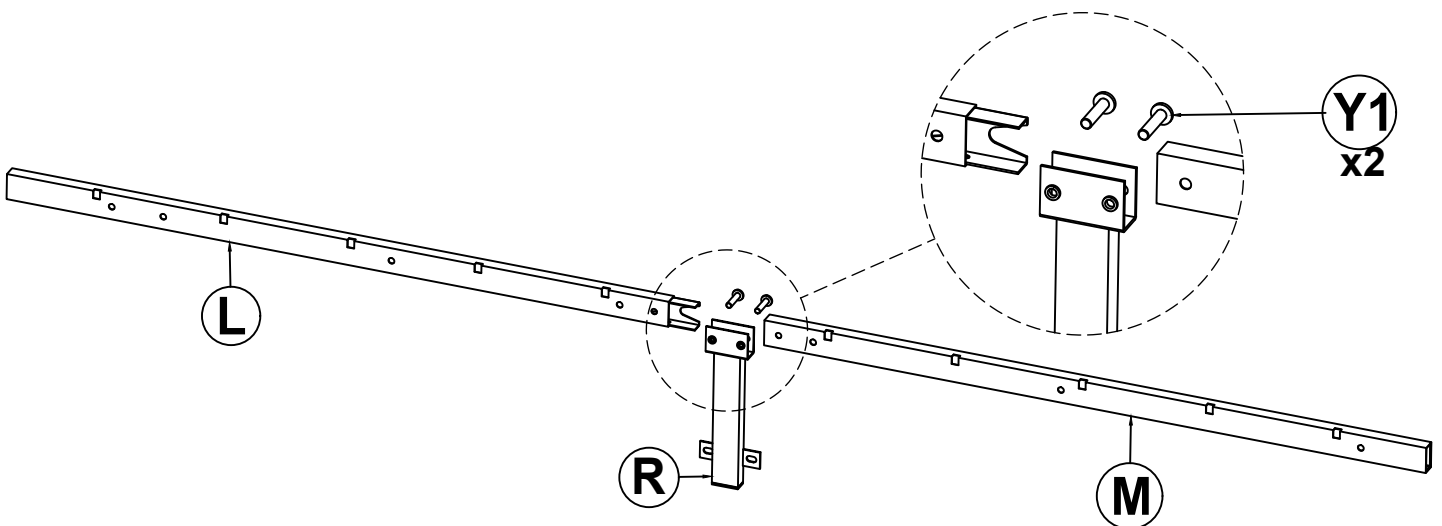


2.1

Step 2

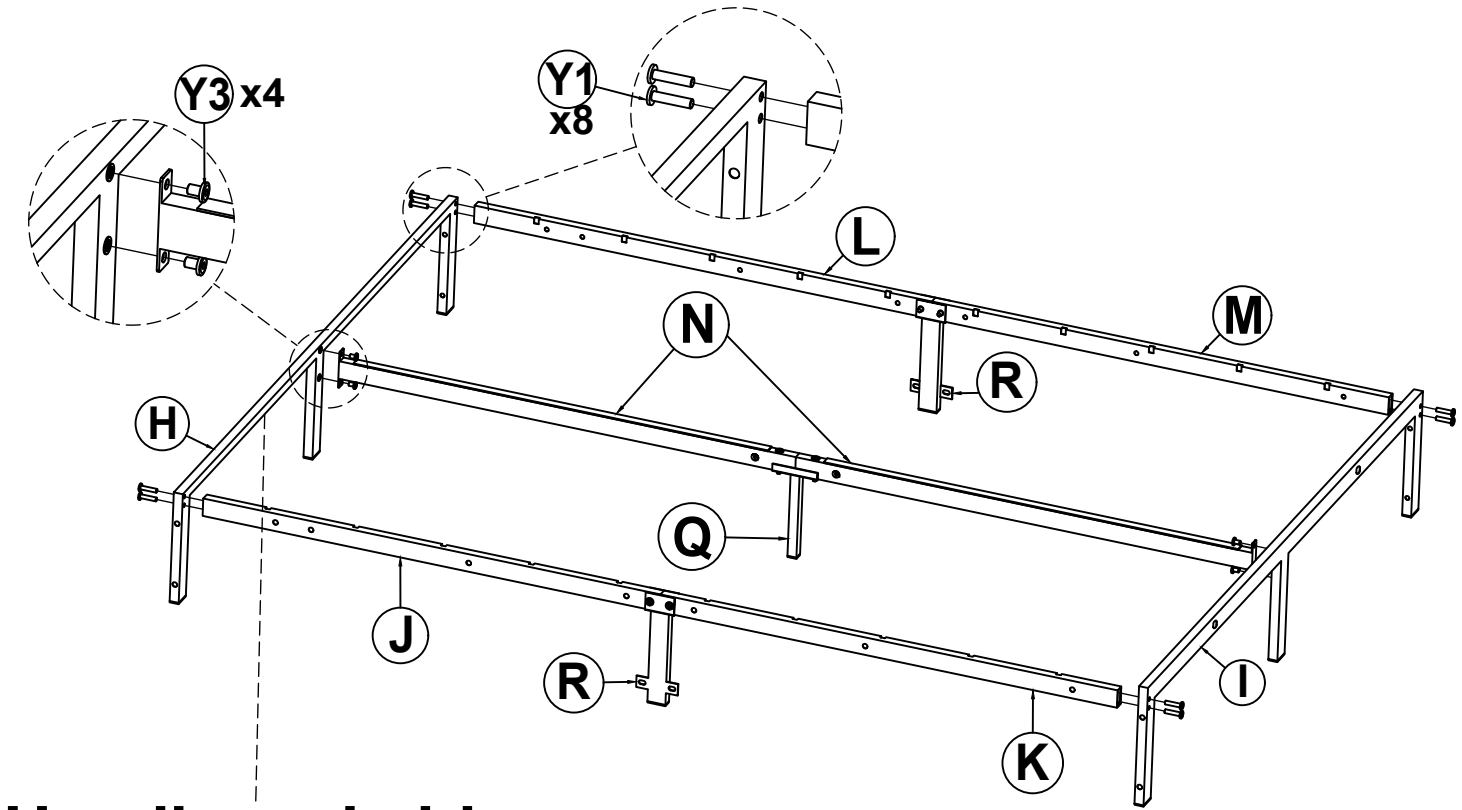


Headboard side

2.2

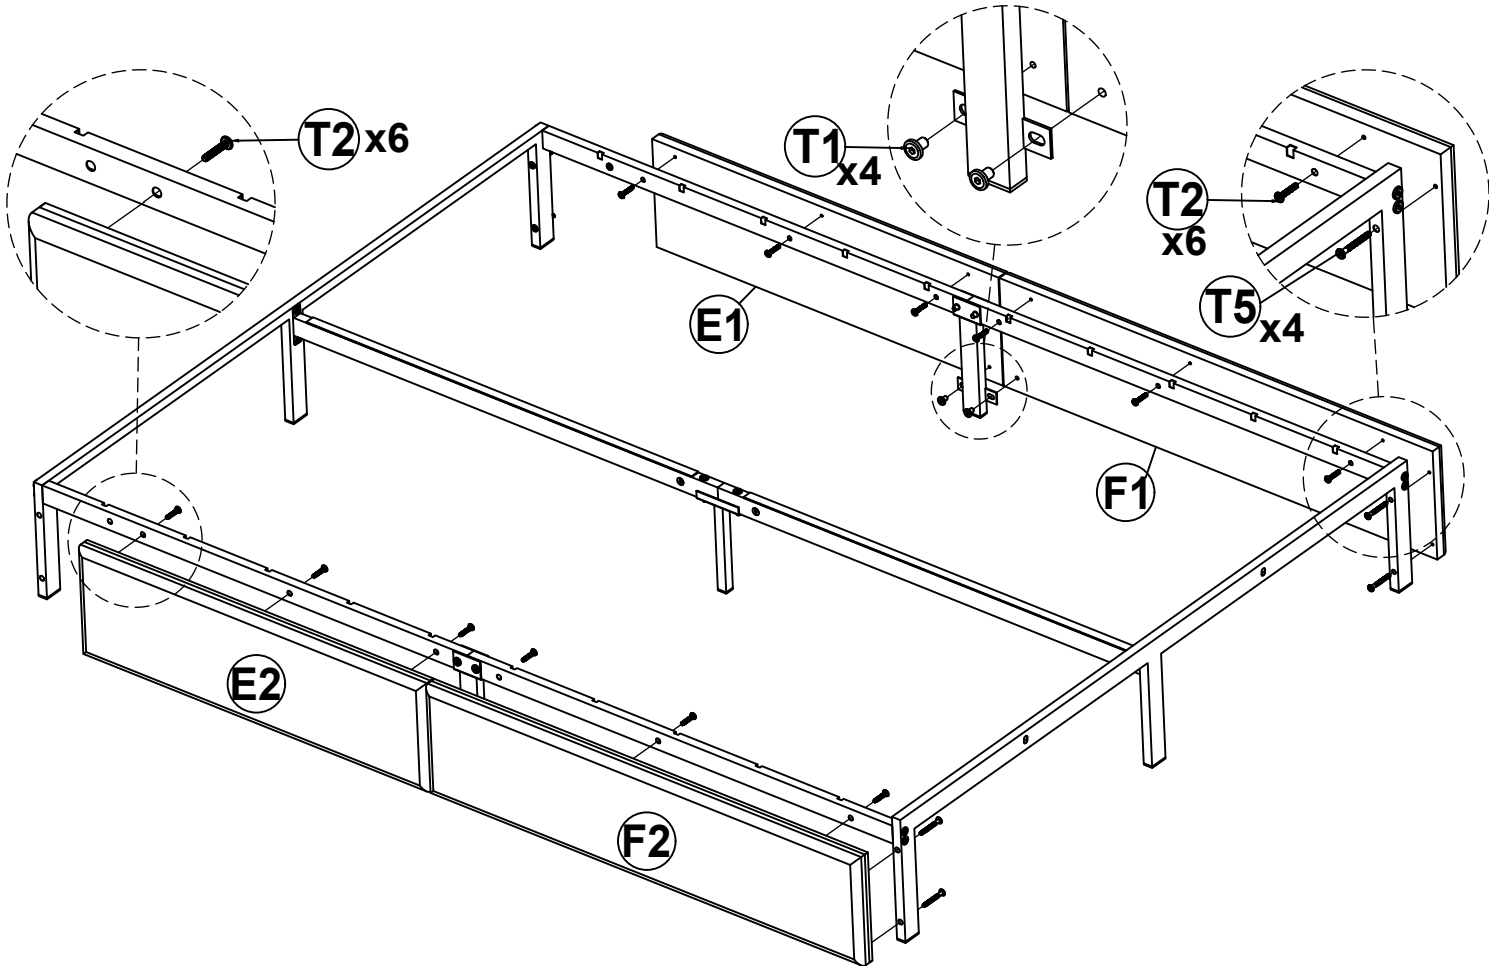


3.1

Step 3

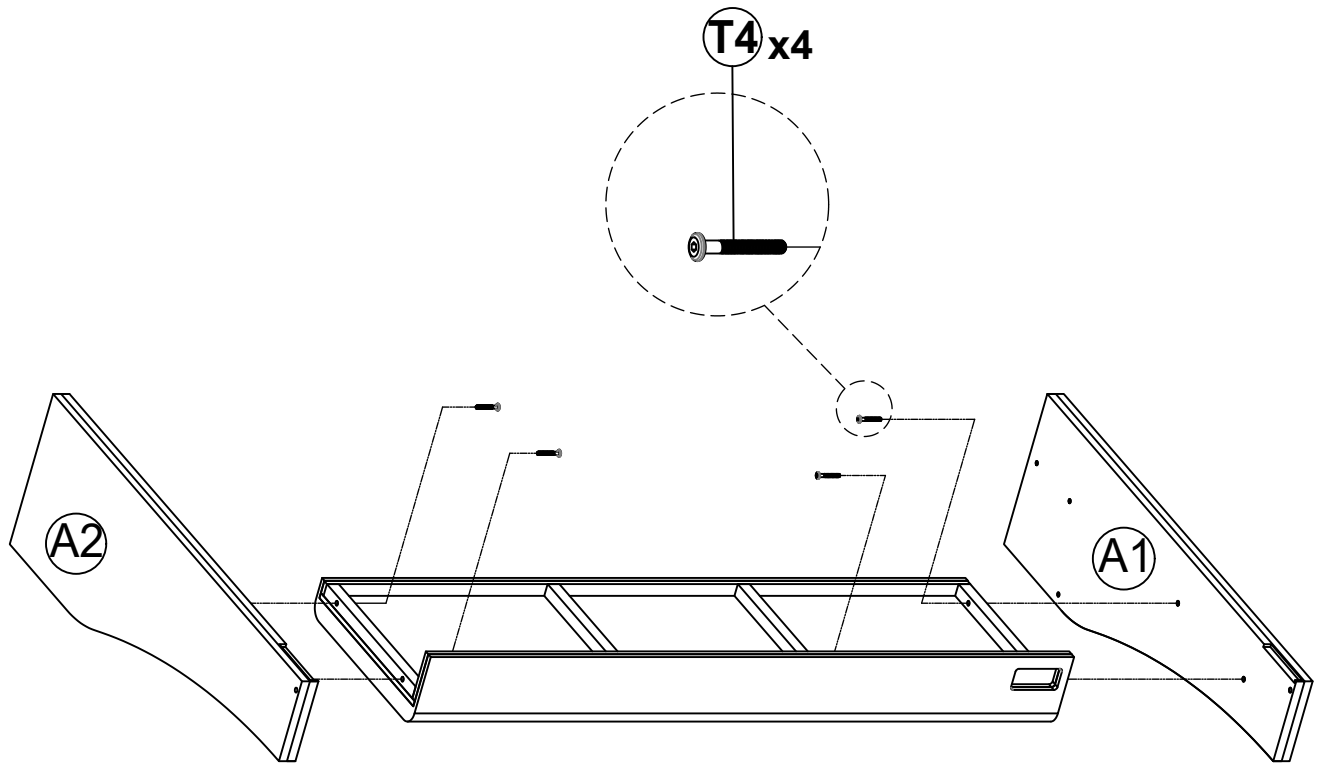


3.2

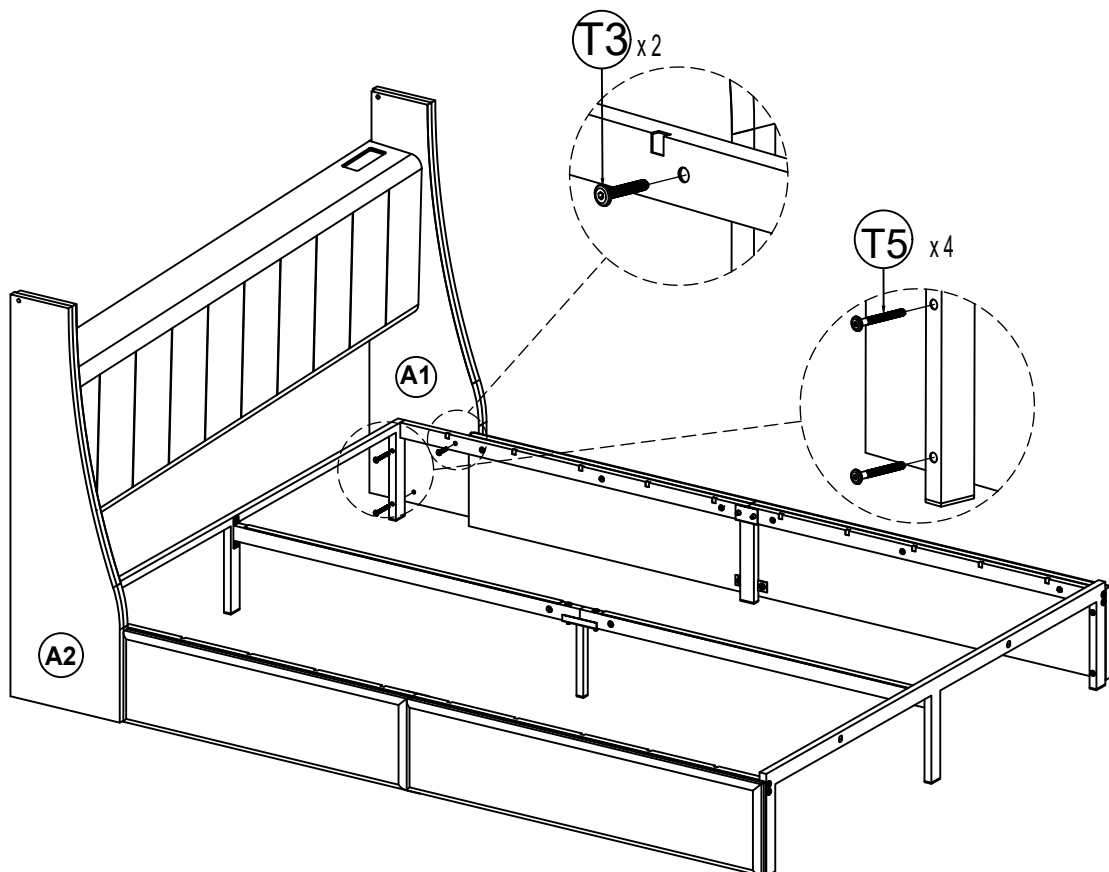


Step 4

4.1

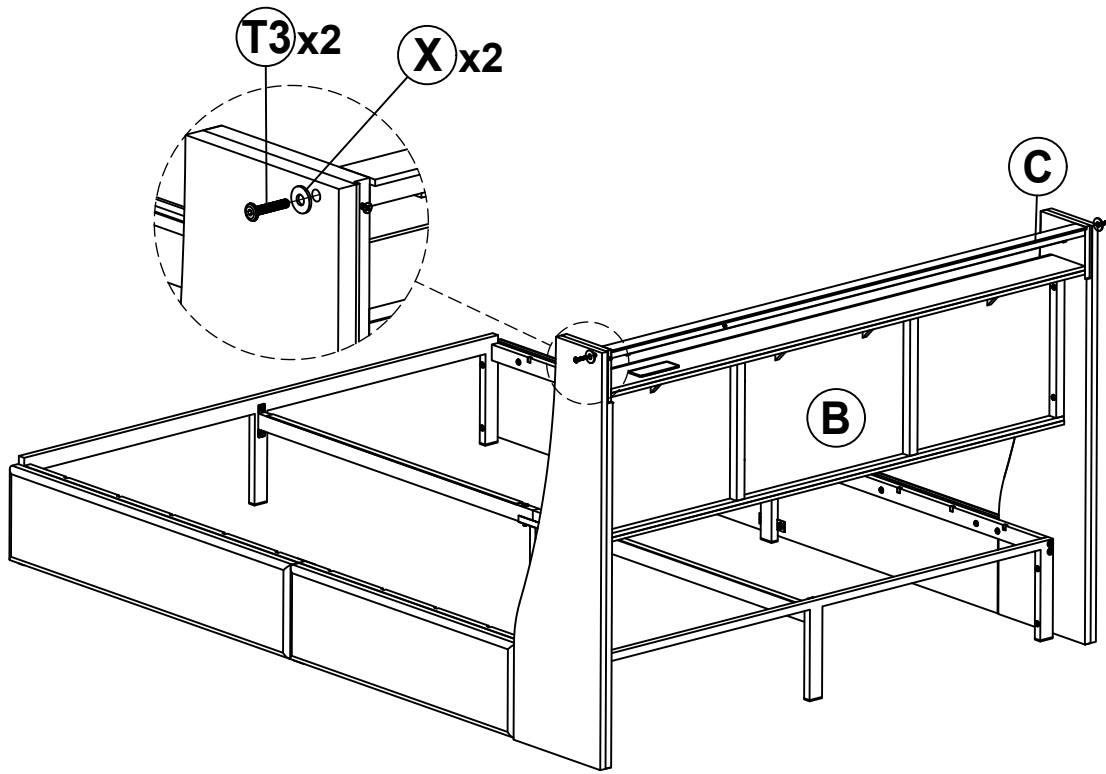


4.2

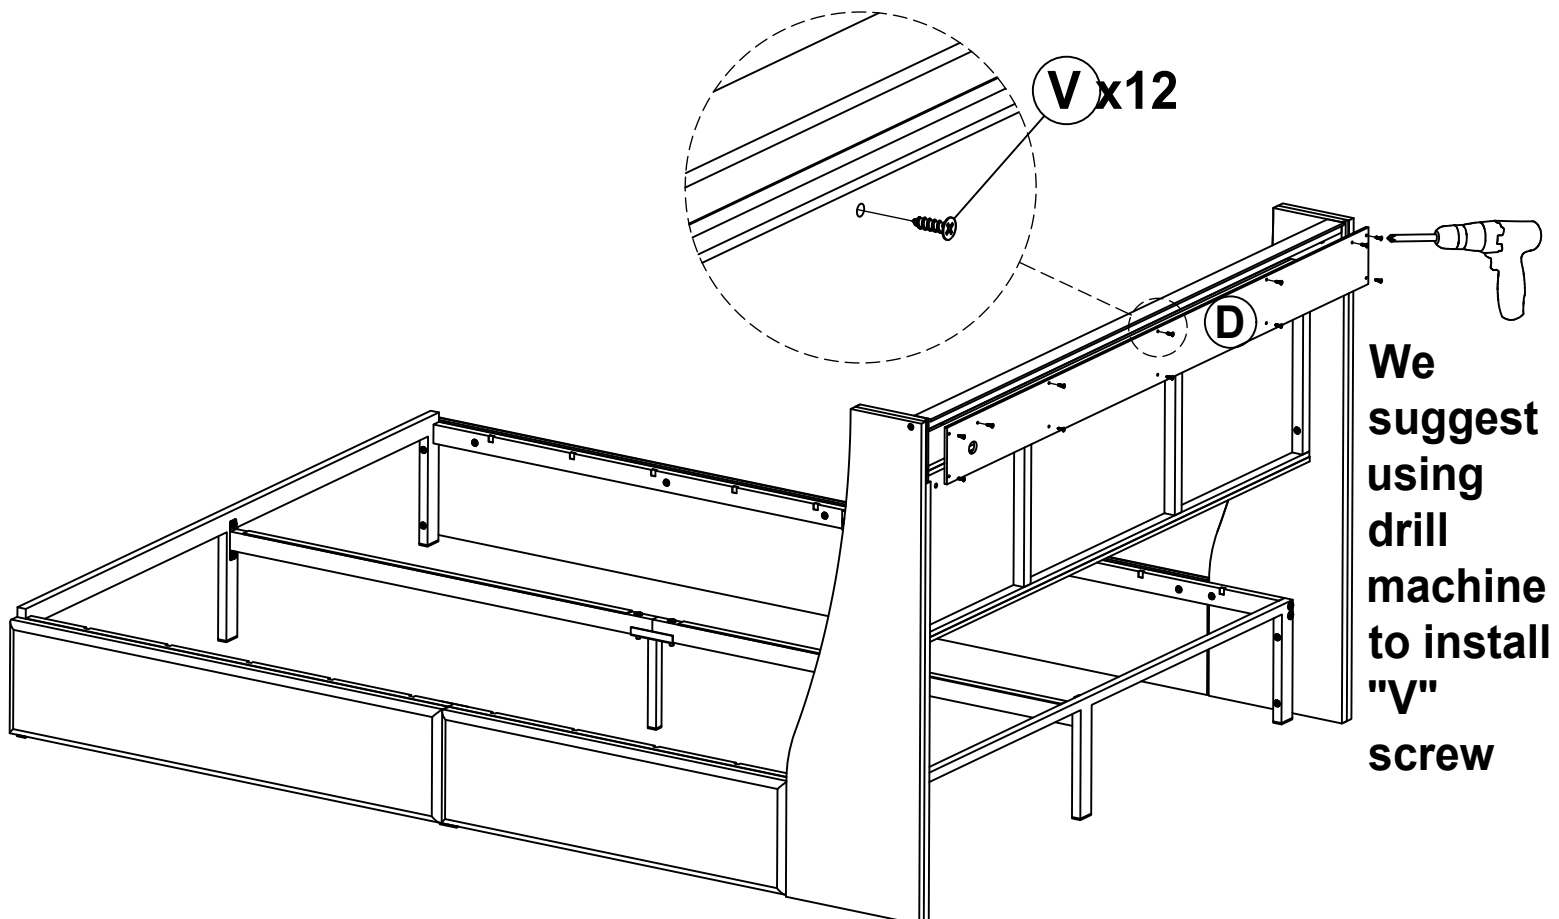


Step 5

Tear off the double-sided adhesive tape before place the mattress.


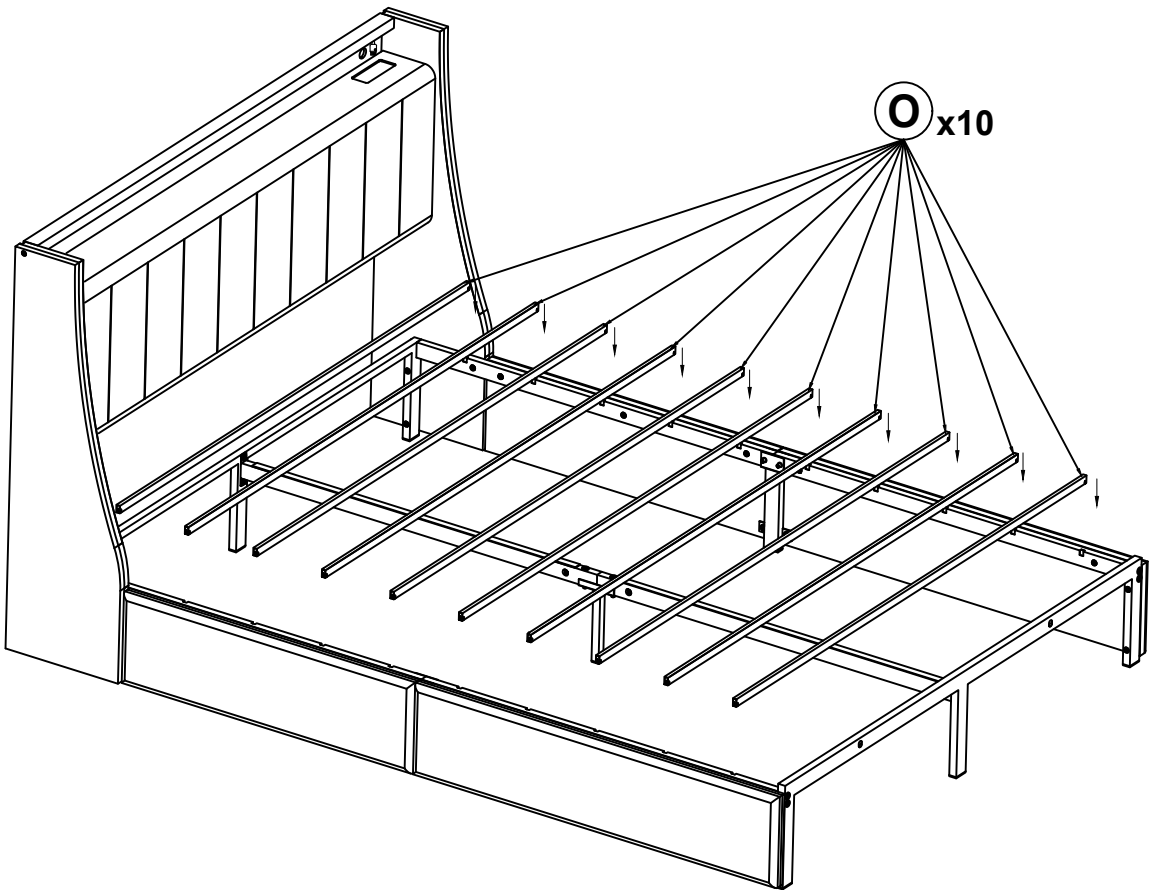



Step 6

Wheel mounting position

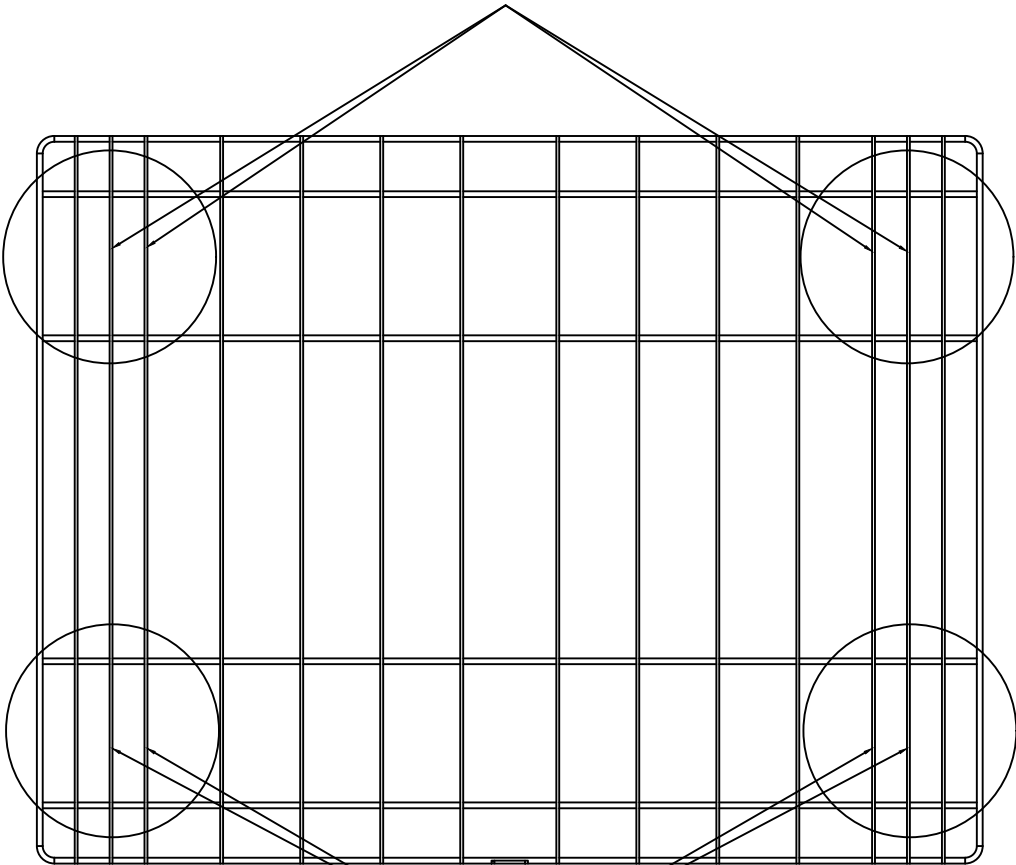





Wheel mounting position

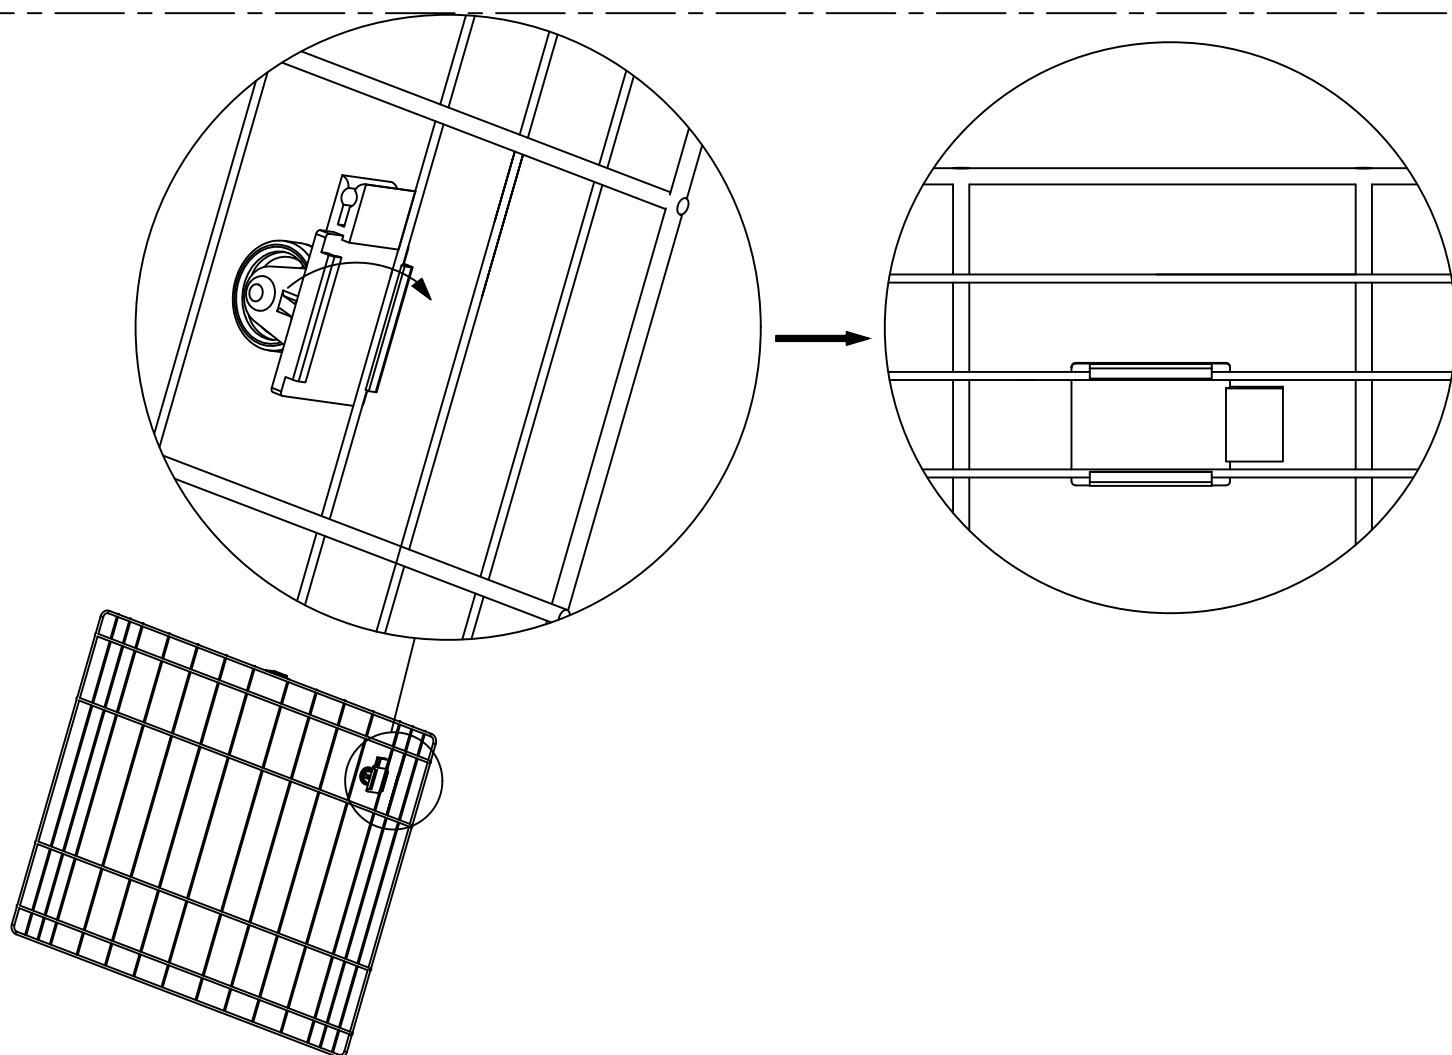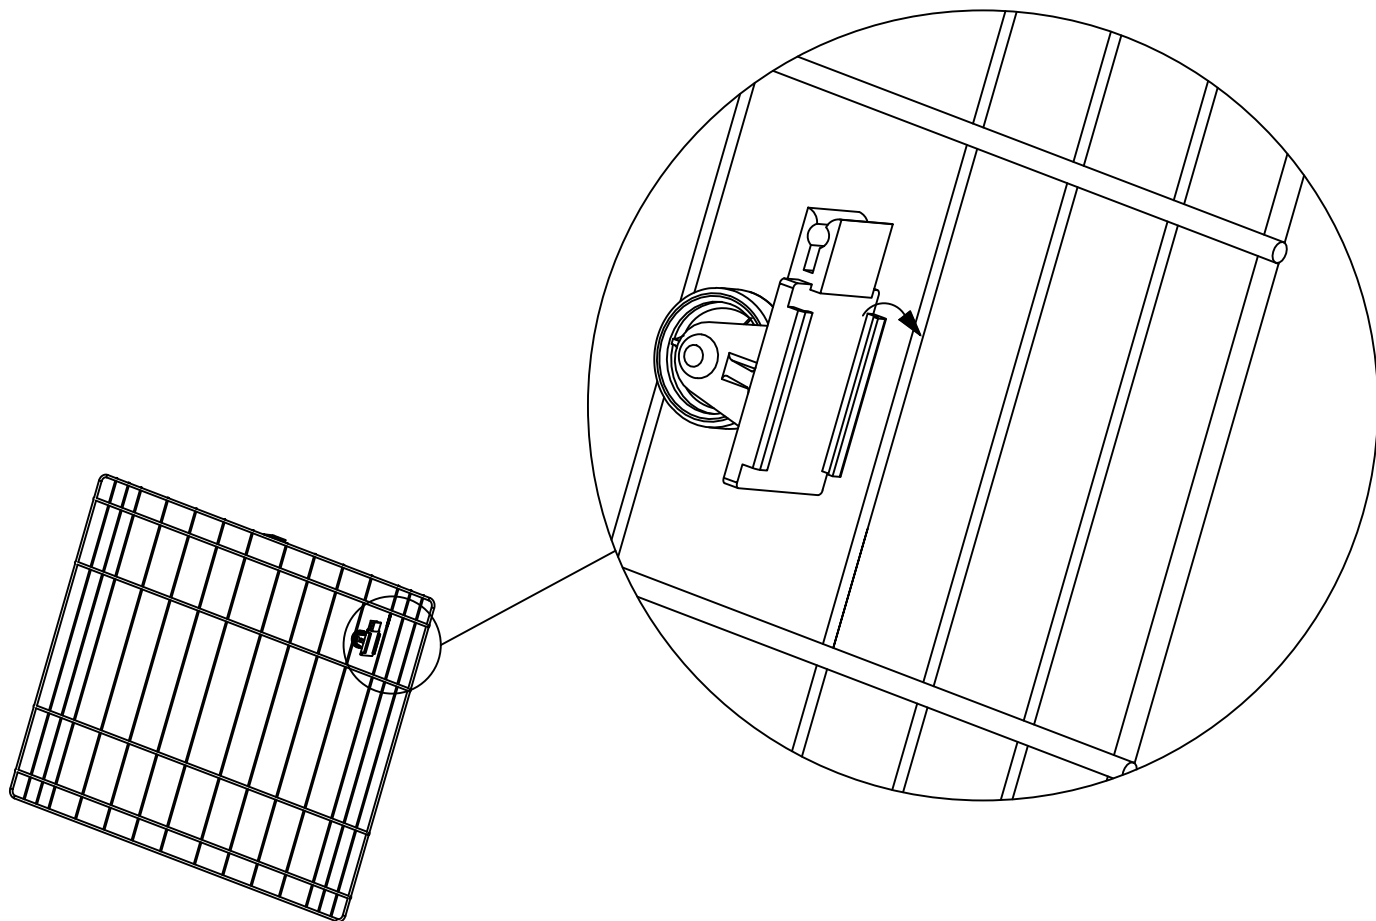

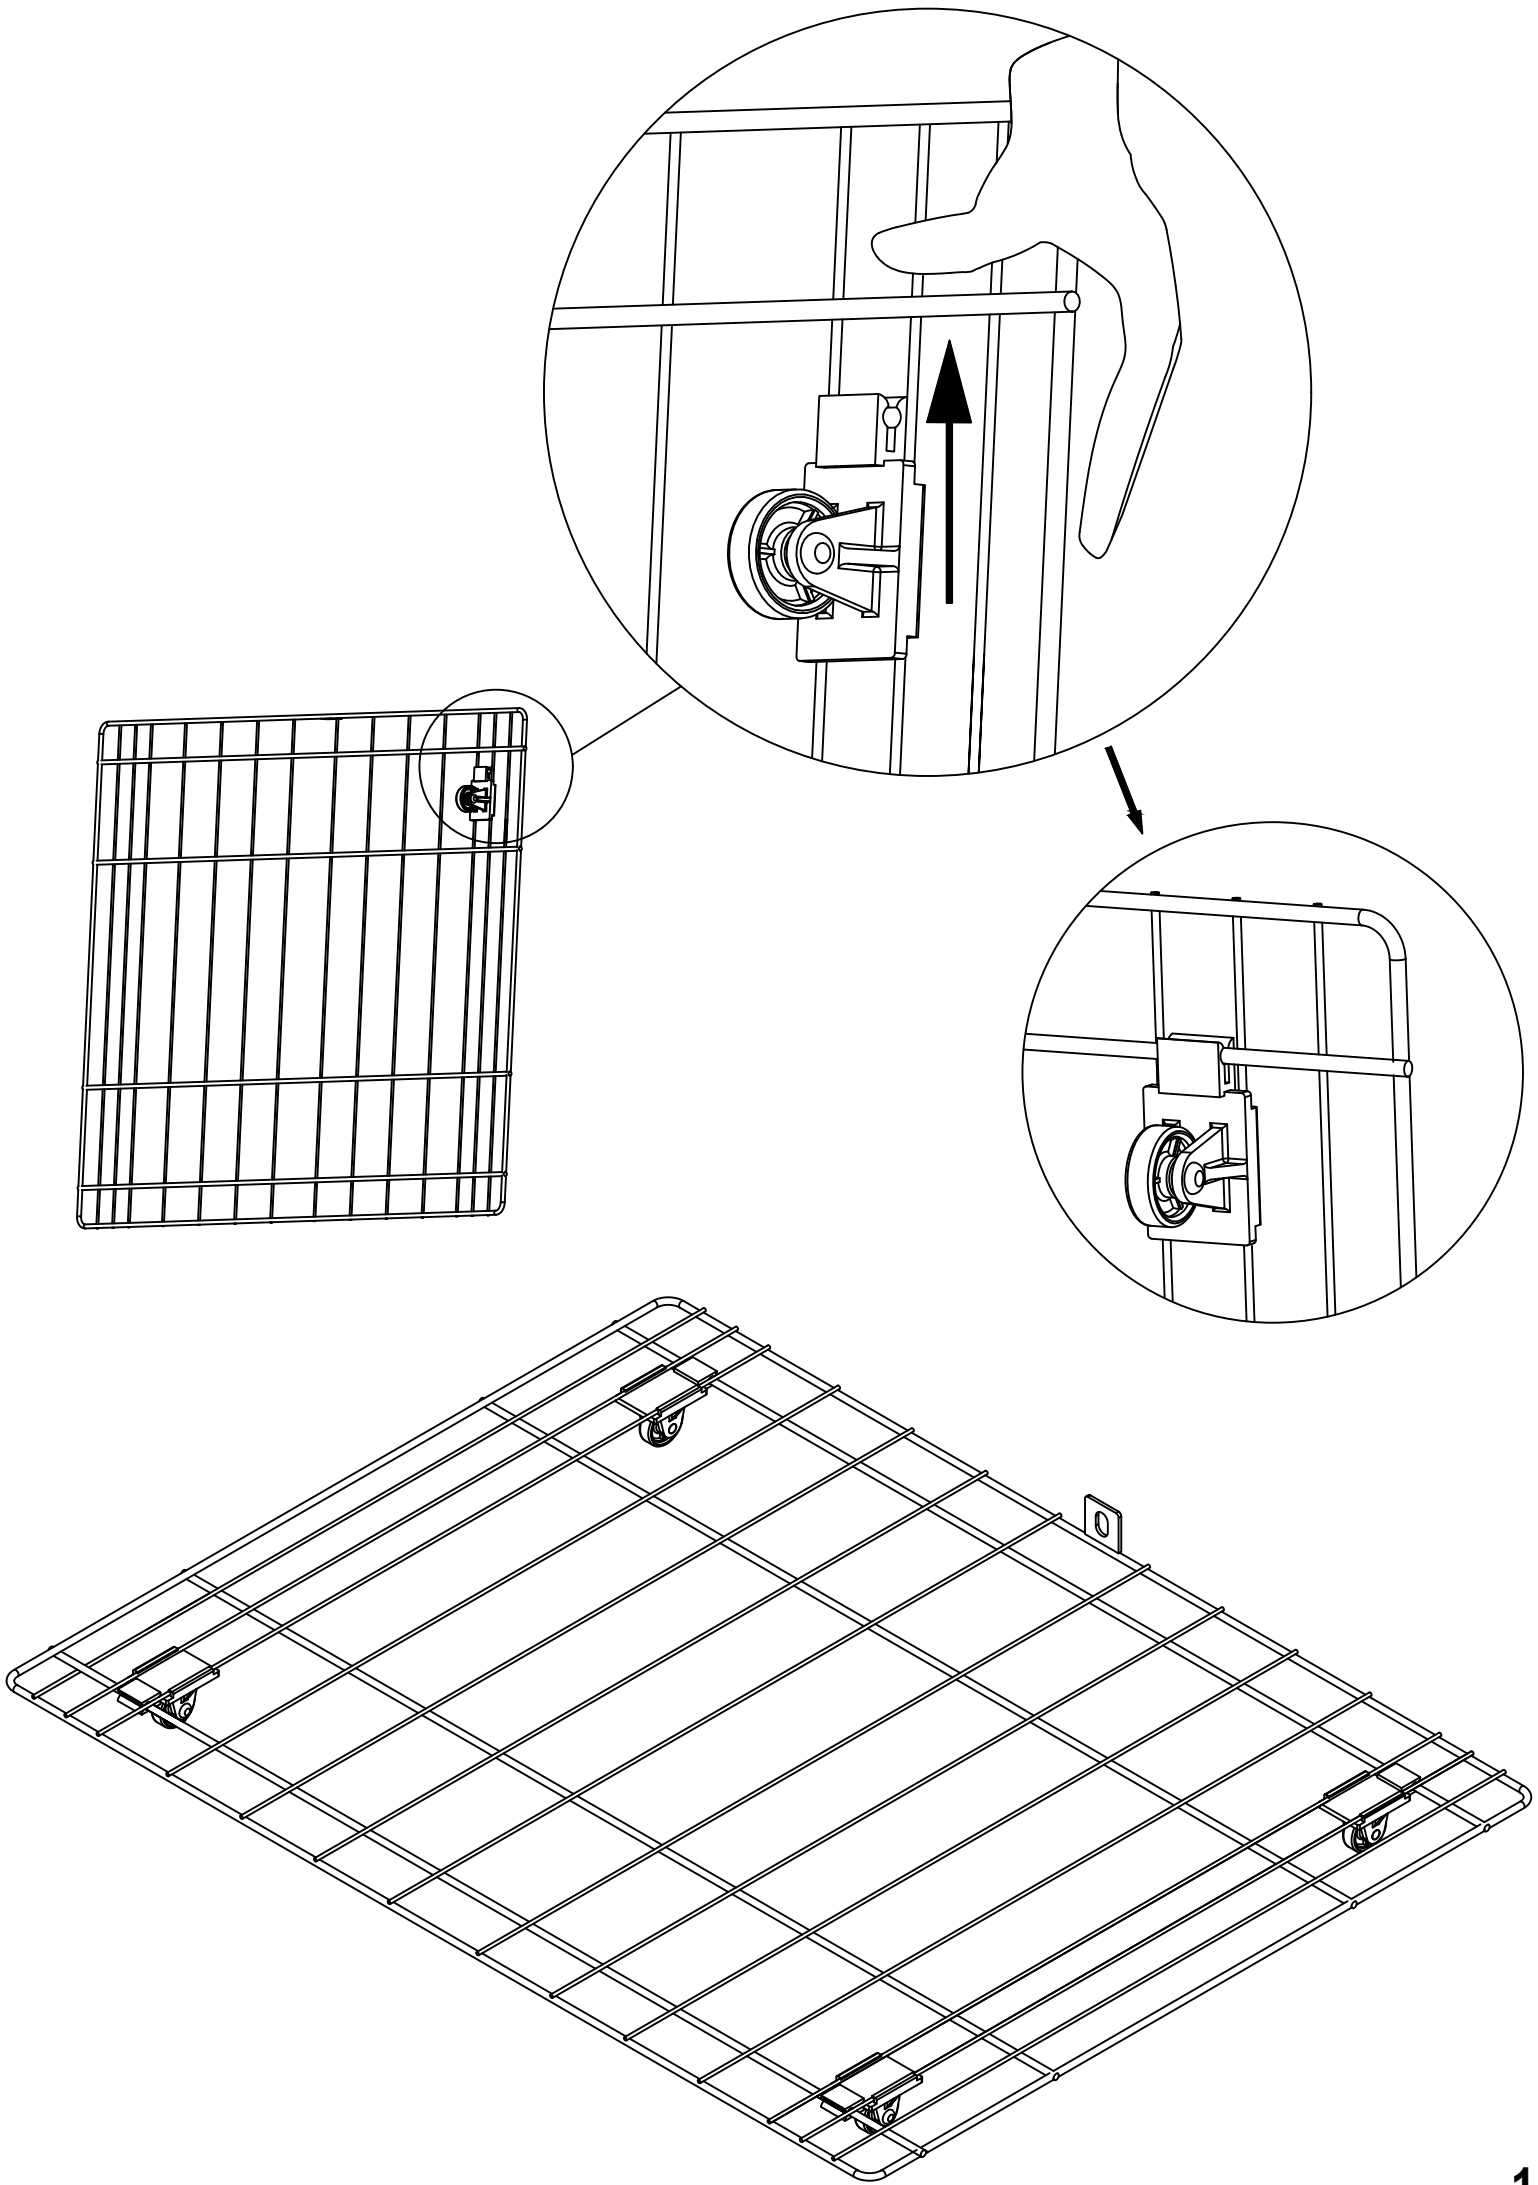


Detailed assembly instructions Q1

these two
lines on Q1.1
and Q1.2 need
to be matched

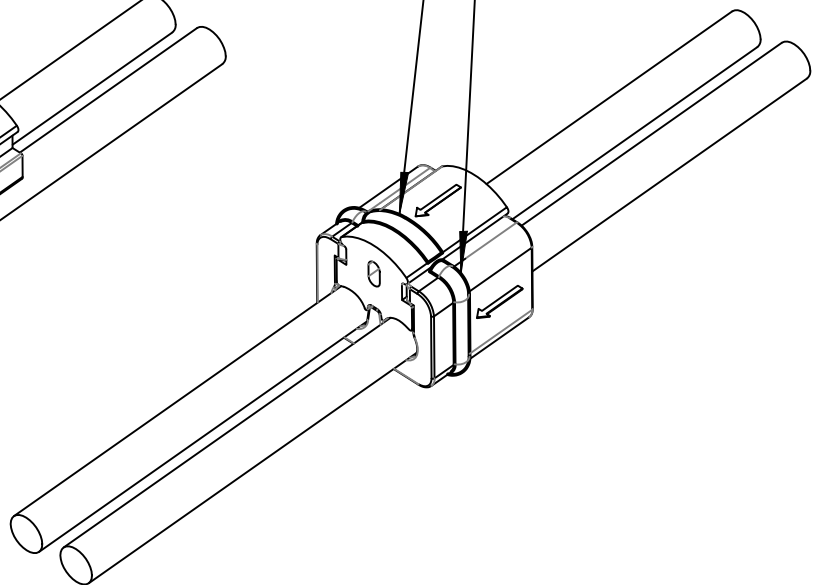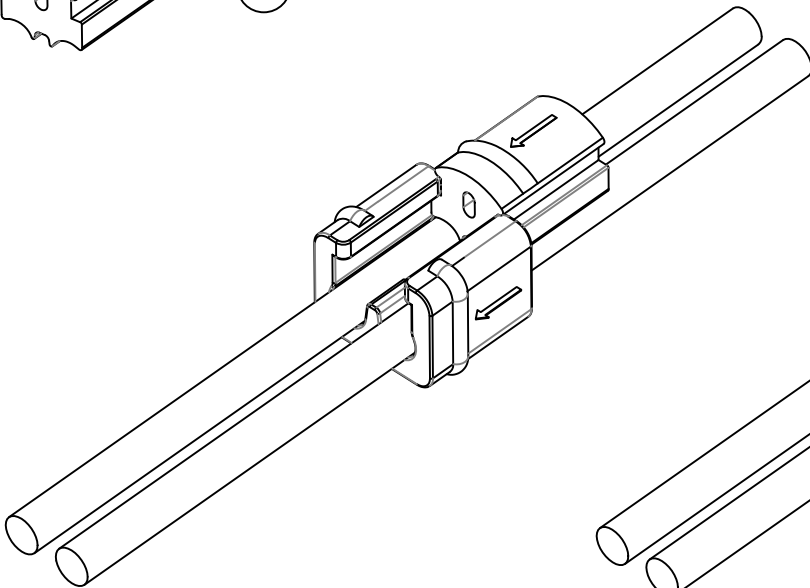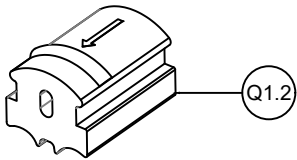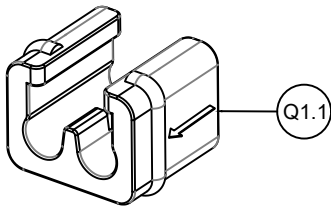


7.1

Step 7

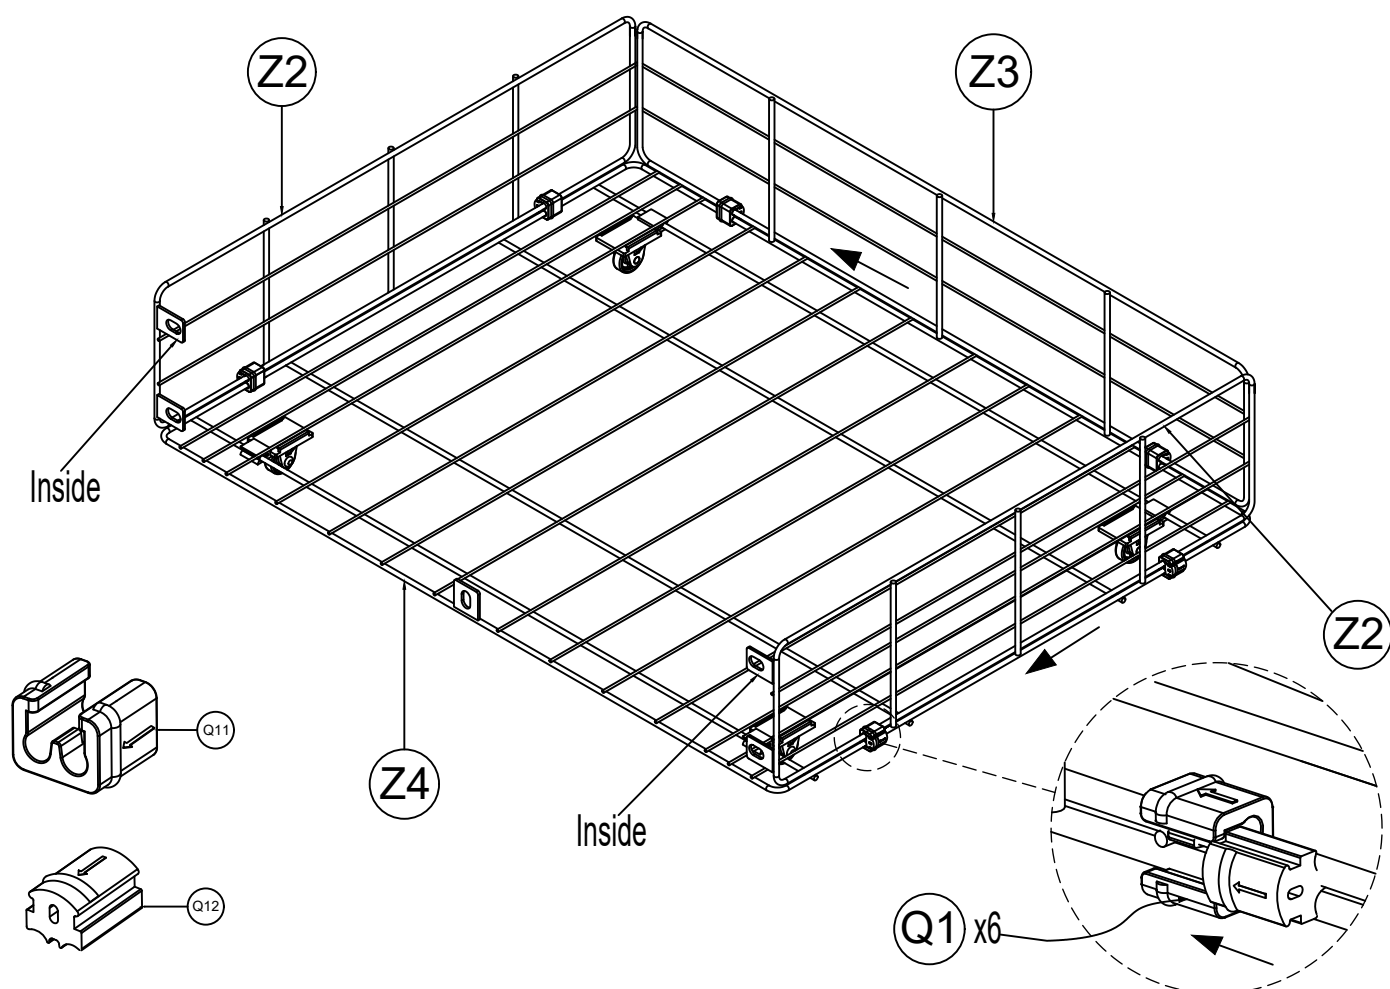


7.2

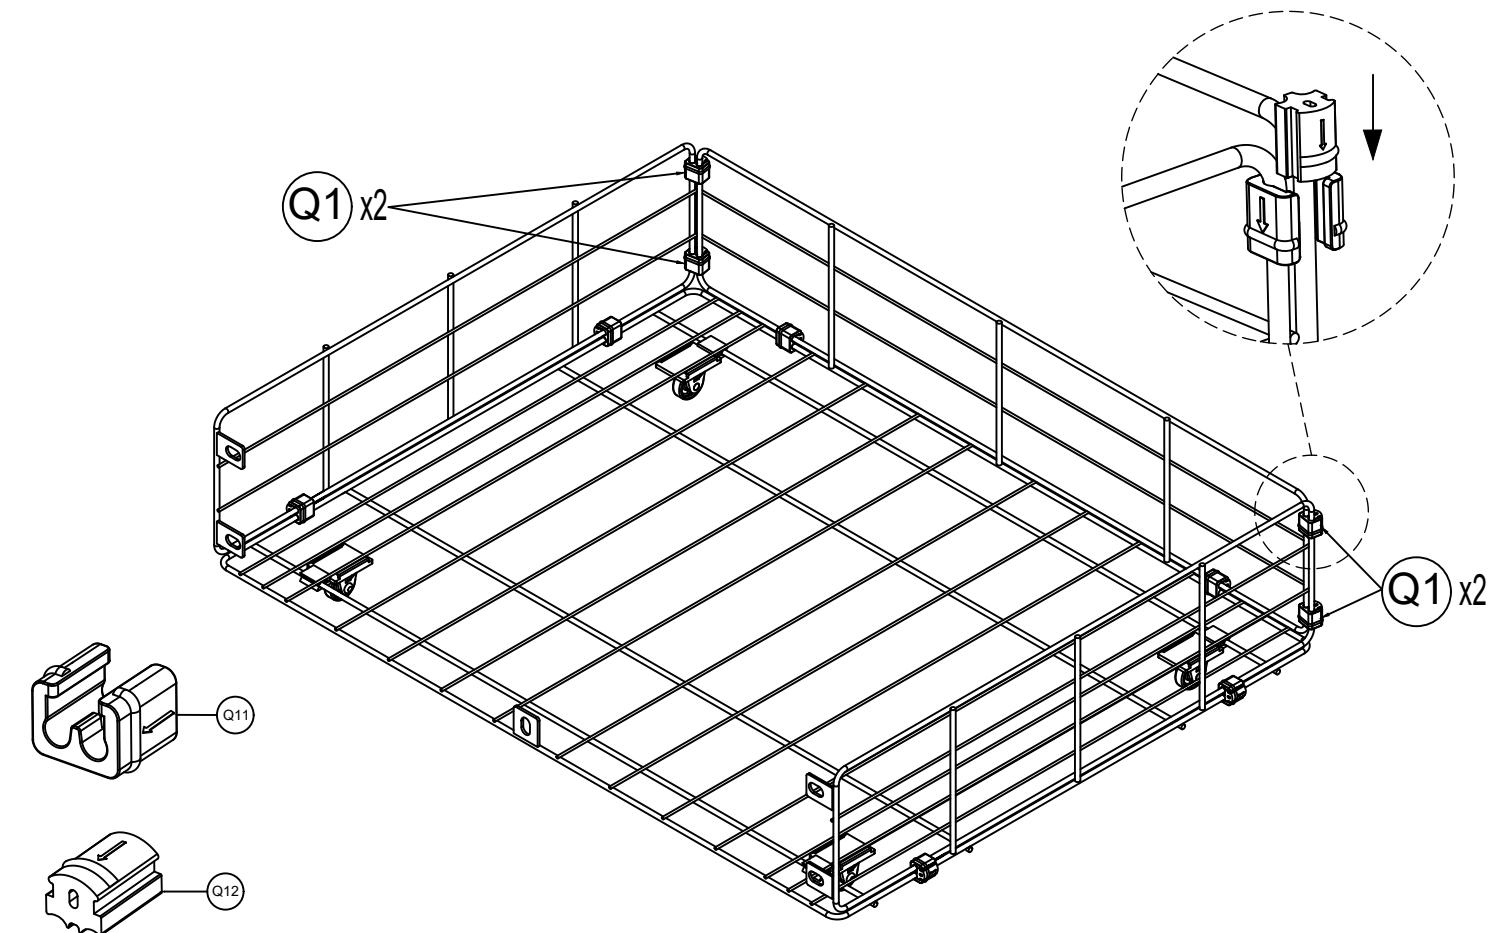


8.1

Step 8

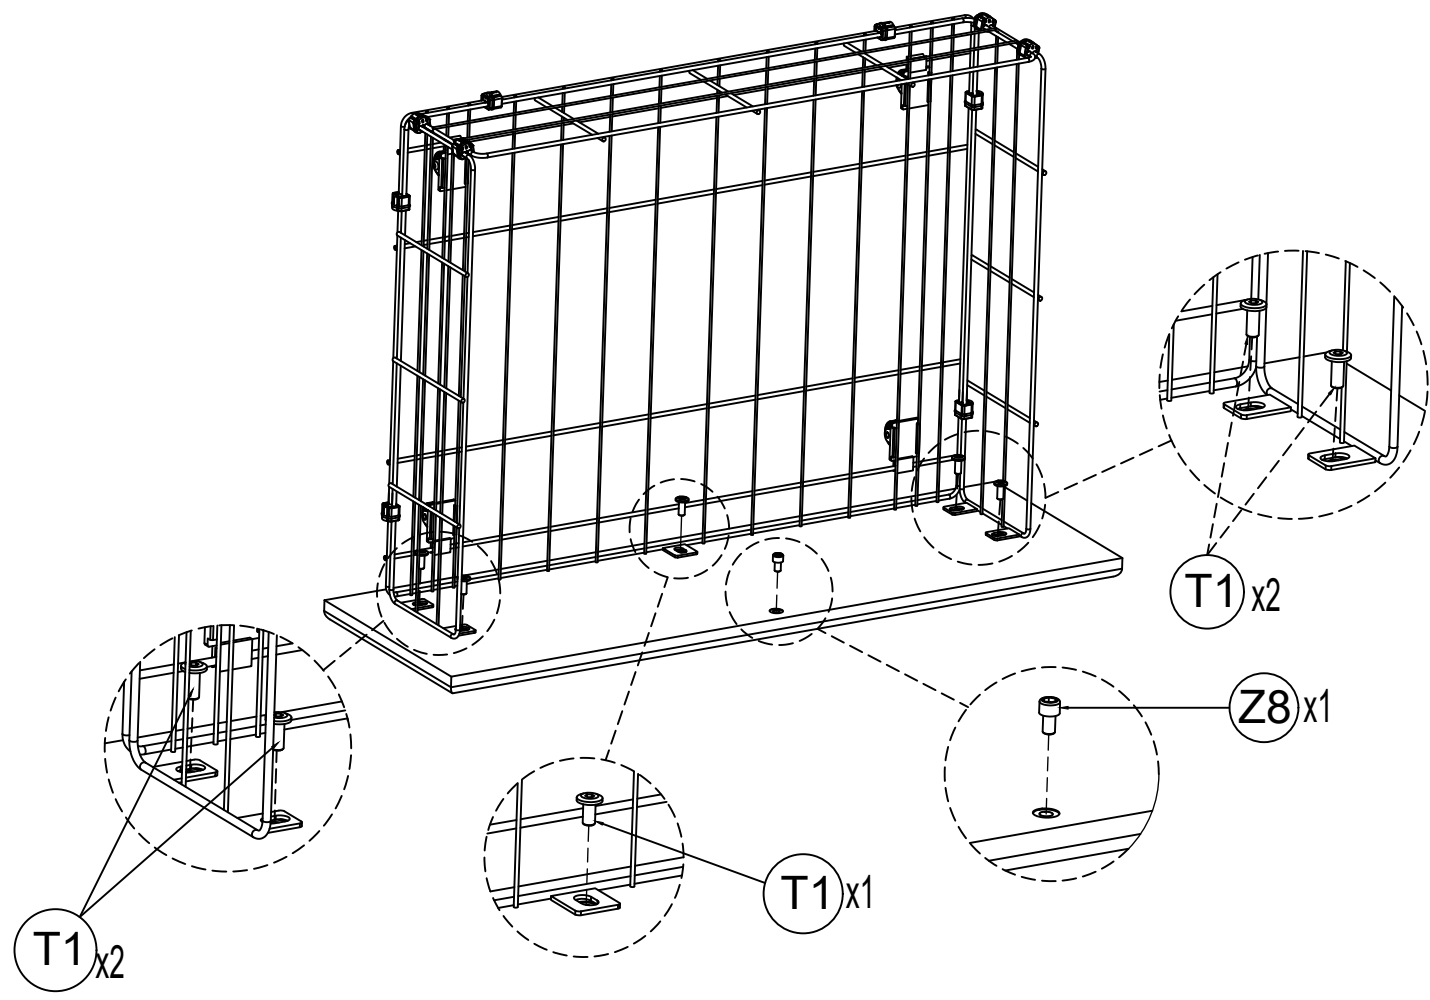


8.2

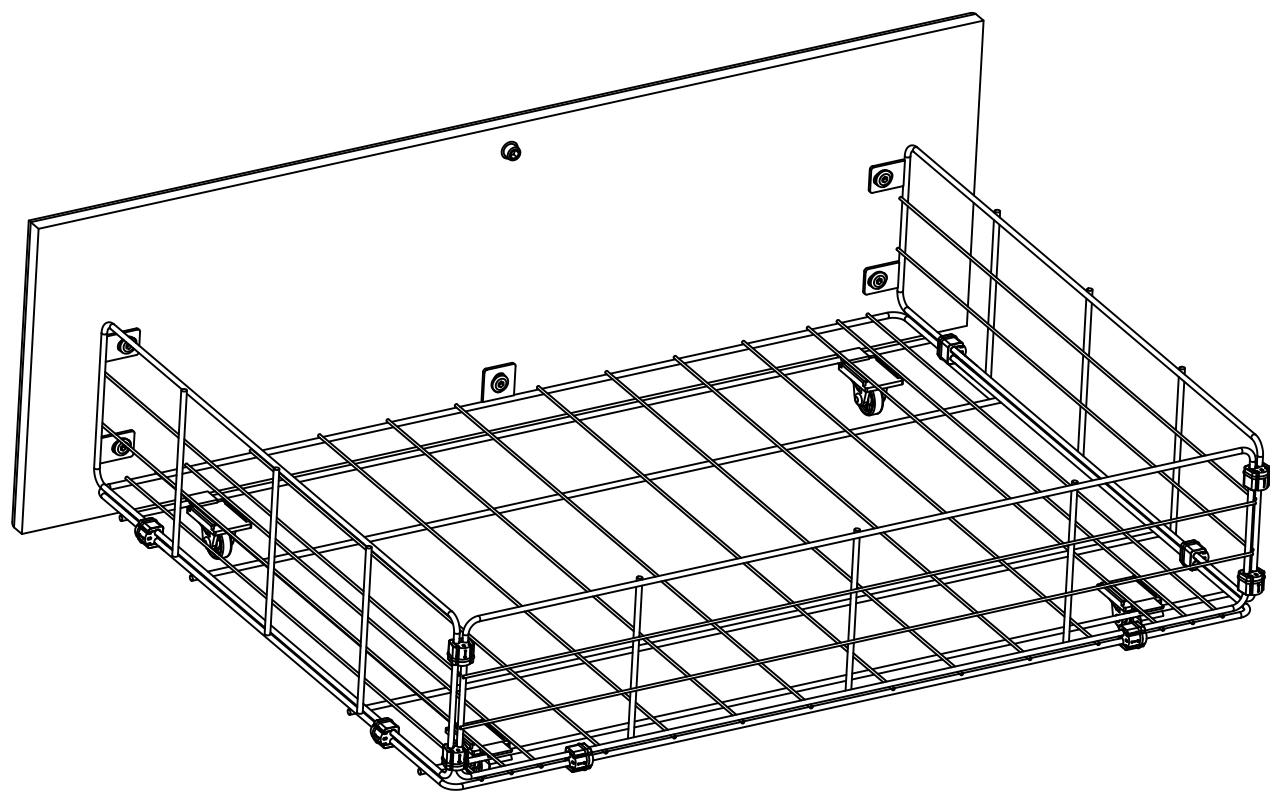

9.1


Step 9

2pcs

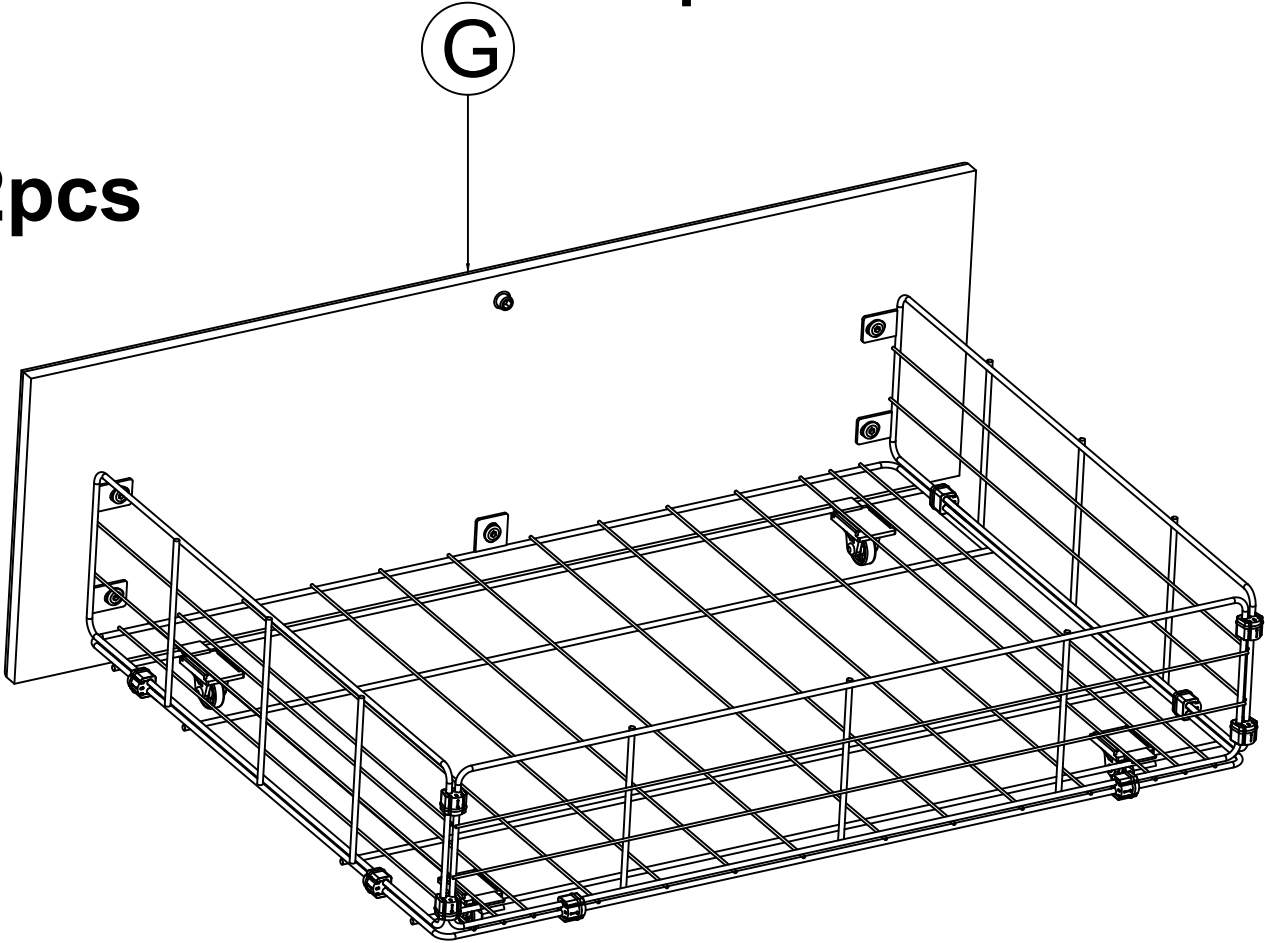

9.2

U1 X1

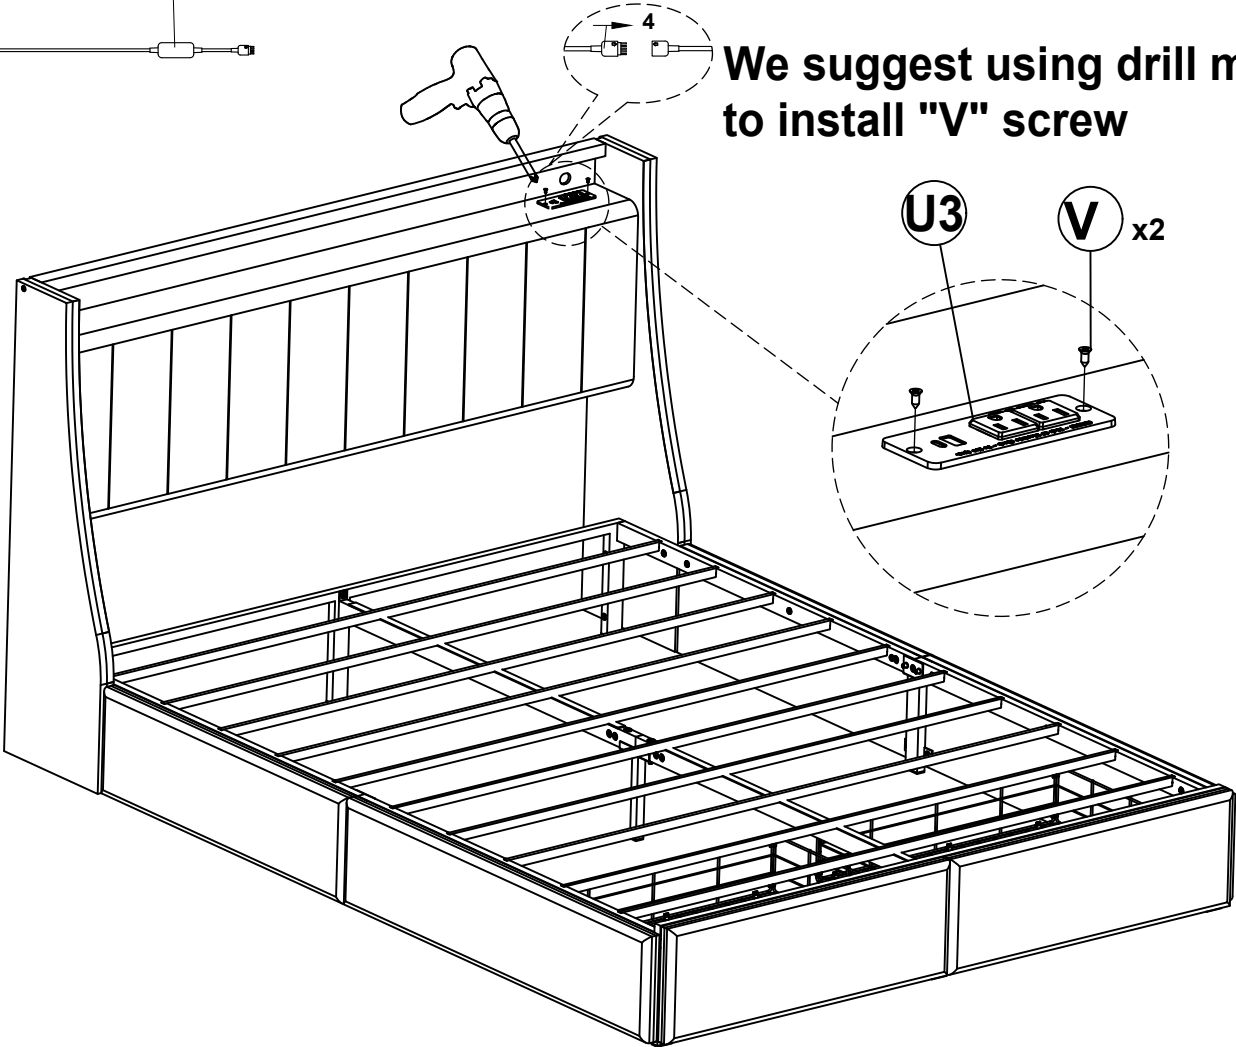


We suggest using drill machine to install "V" screw

U3

V

x2

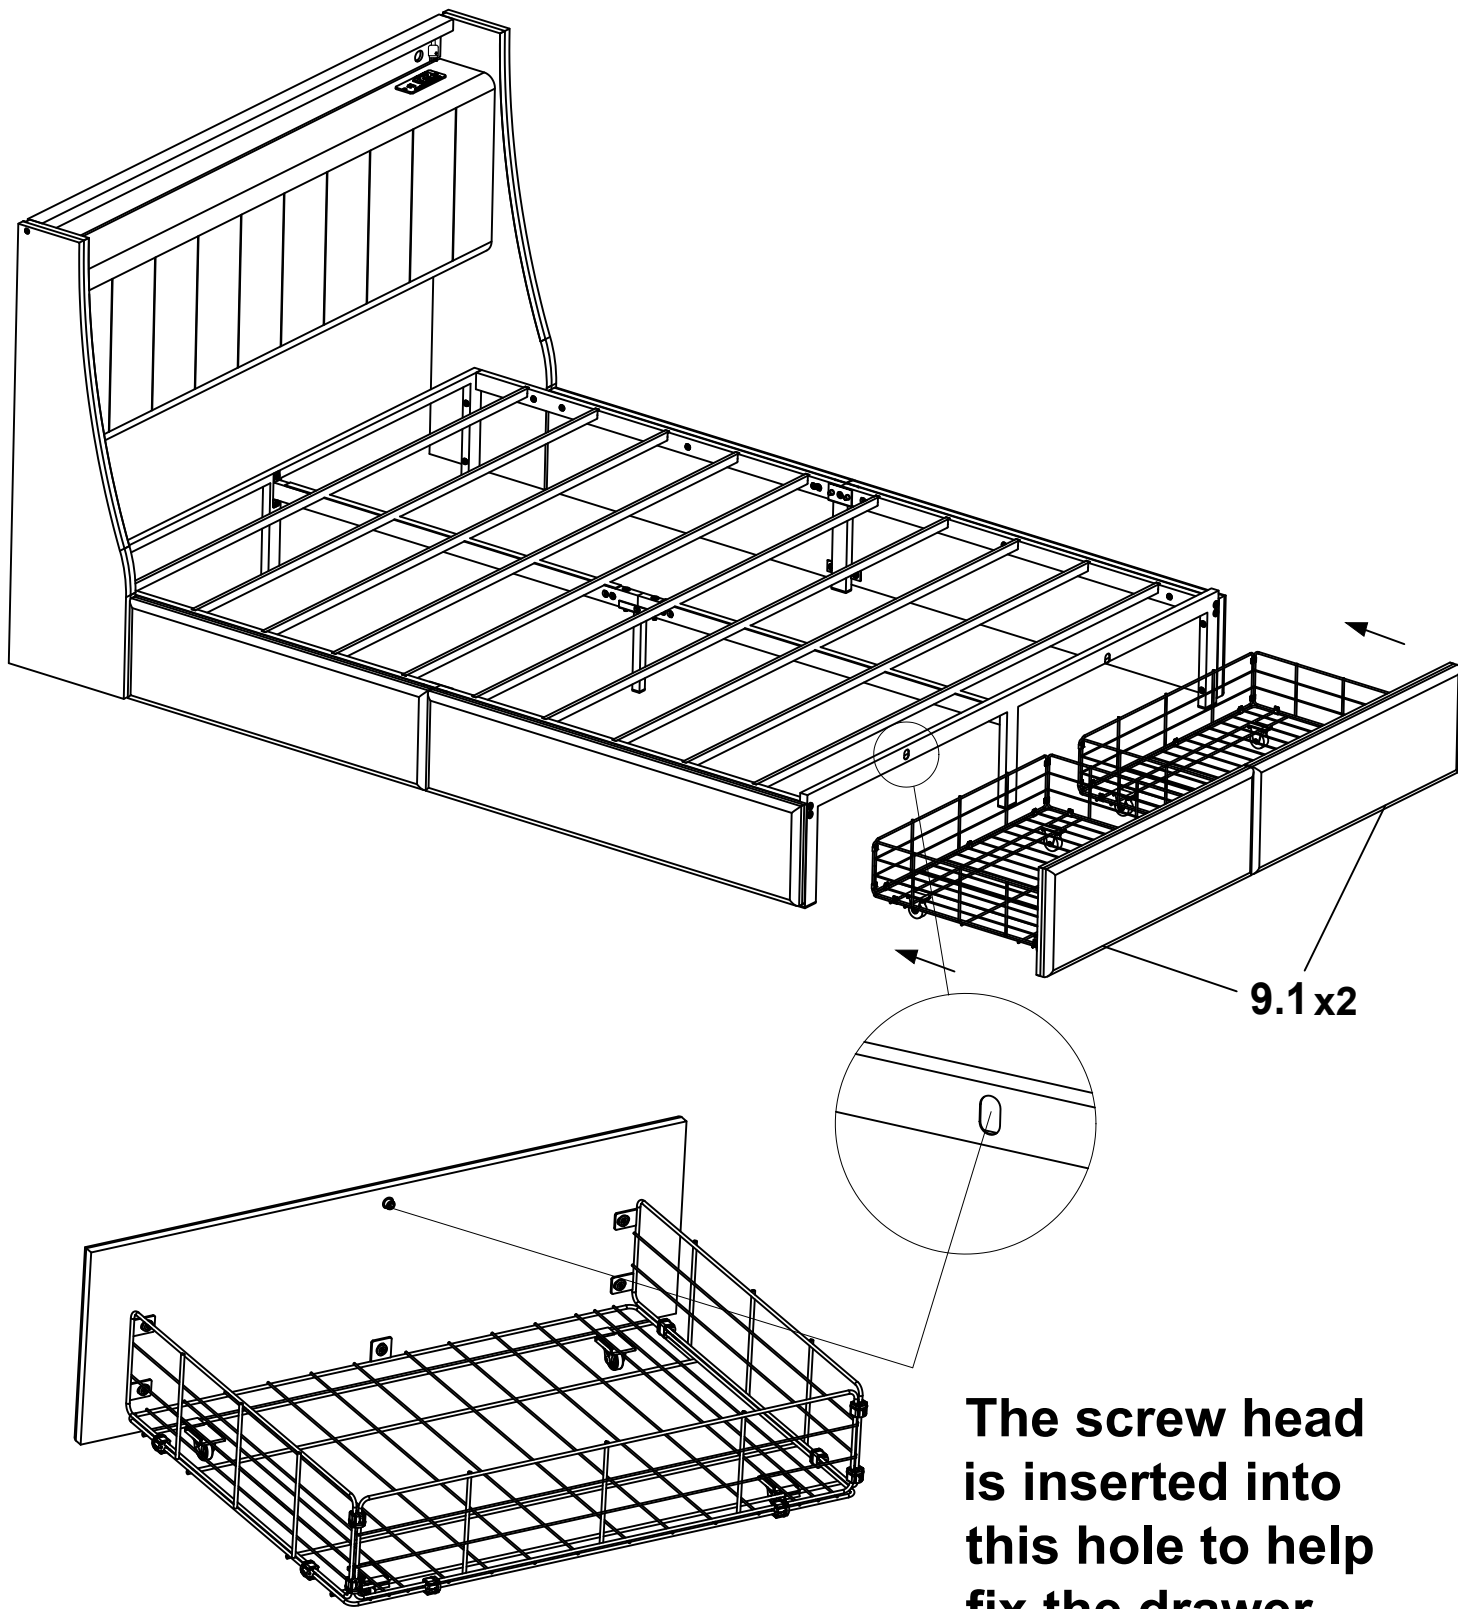

REMOTE CONTROL

