


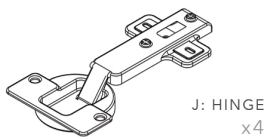
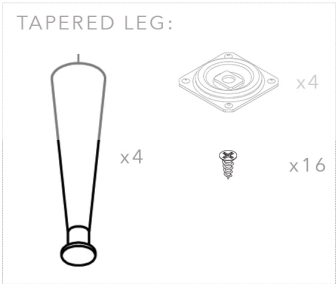


WHAT'S INCLUDED:

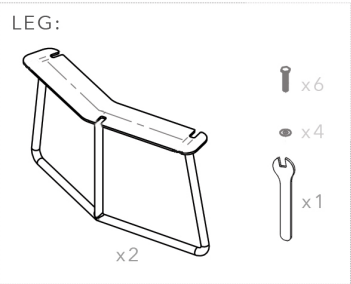

*NOTE: EXTRAS MAY BE INCLUDED

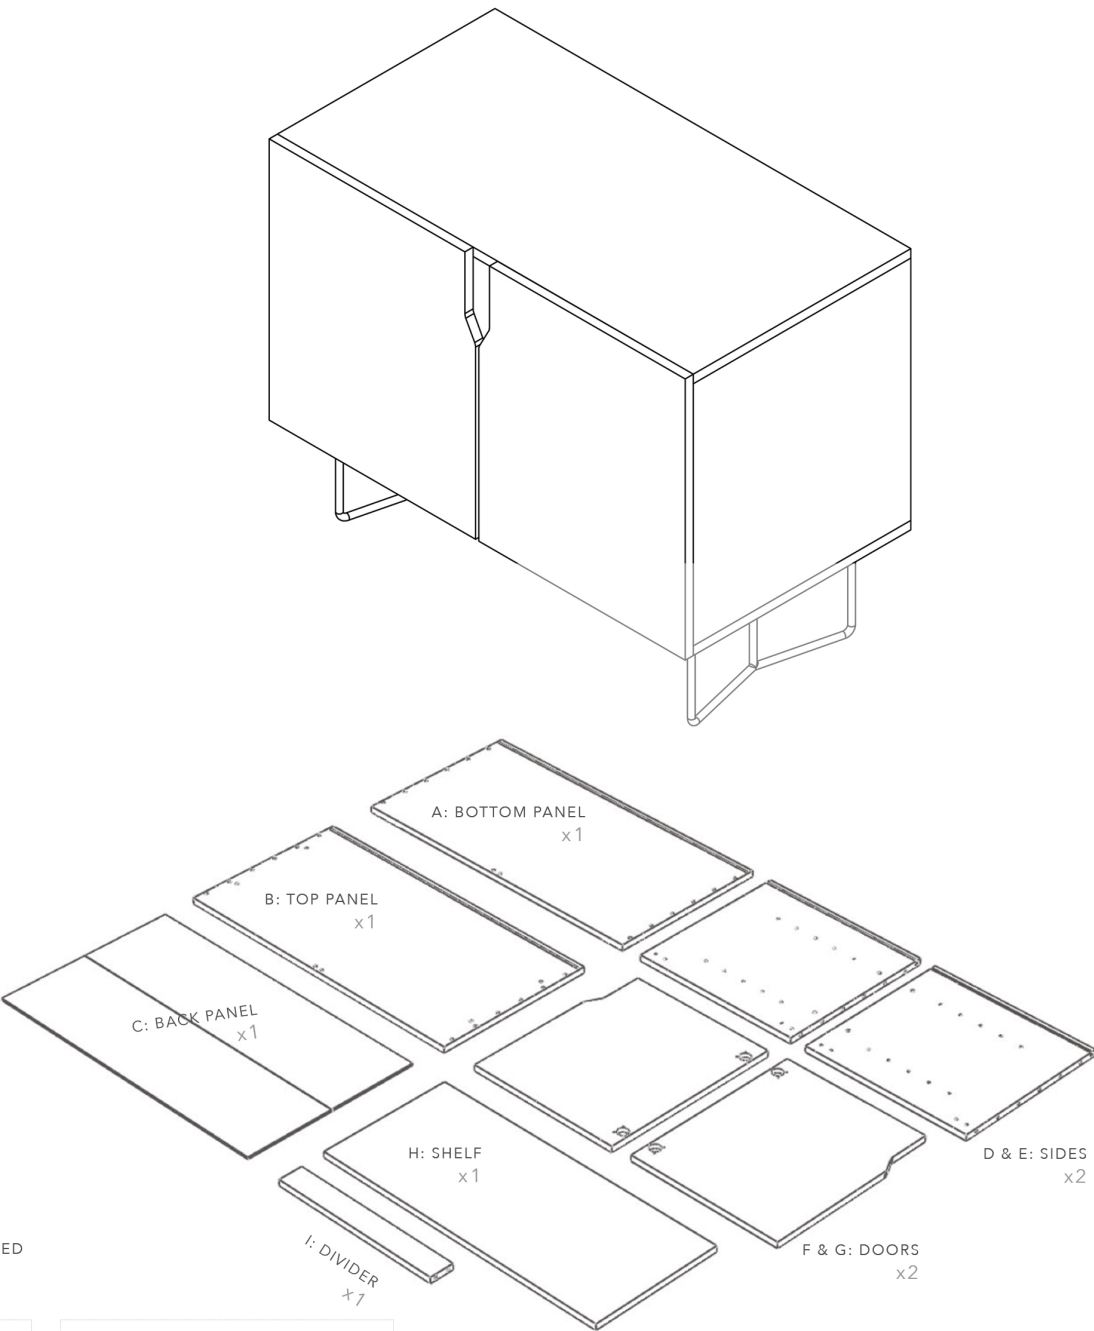

DO NOT USE AN
ELECTRIC
SCREWDRIVER

YOU WILL NEED:



PHILLIPS HEAD
SCREWDRIVER



YOU AND ANOTHER HELPER




1-800-973-6091

MON-FRI 9:30AM-4:30PM MST


SUPPORT@DENYDESIGNS.COM


PRO TIP: TO PROTECT THE WOOD, ASSEMBLE ON TOP OF THE CARDBOARD SHEETS INCLUDED IN YOUR PACKAGING.

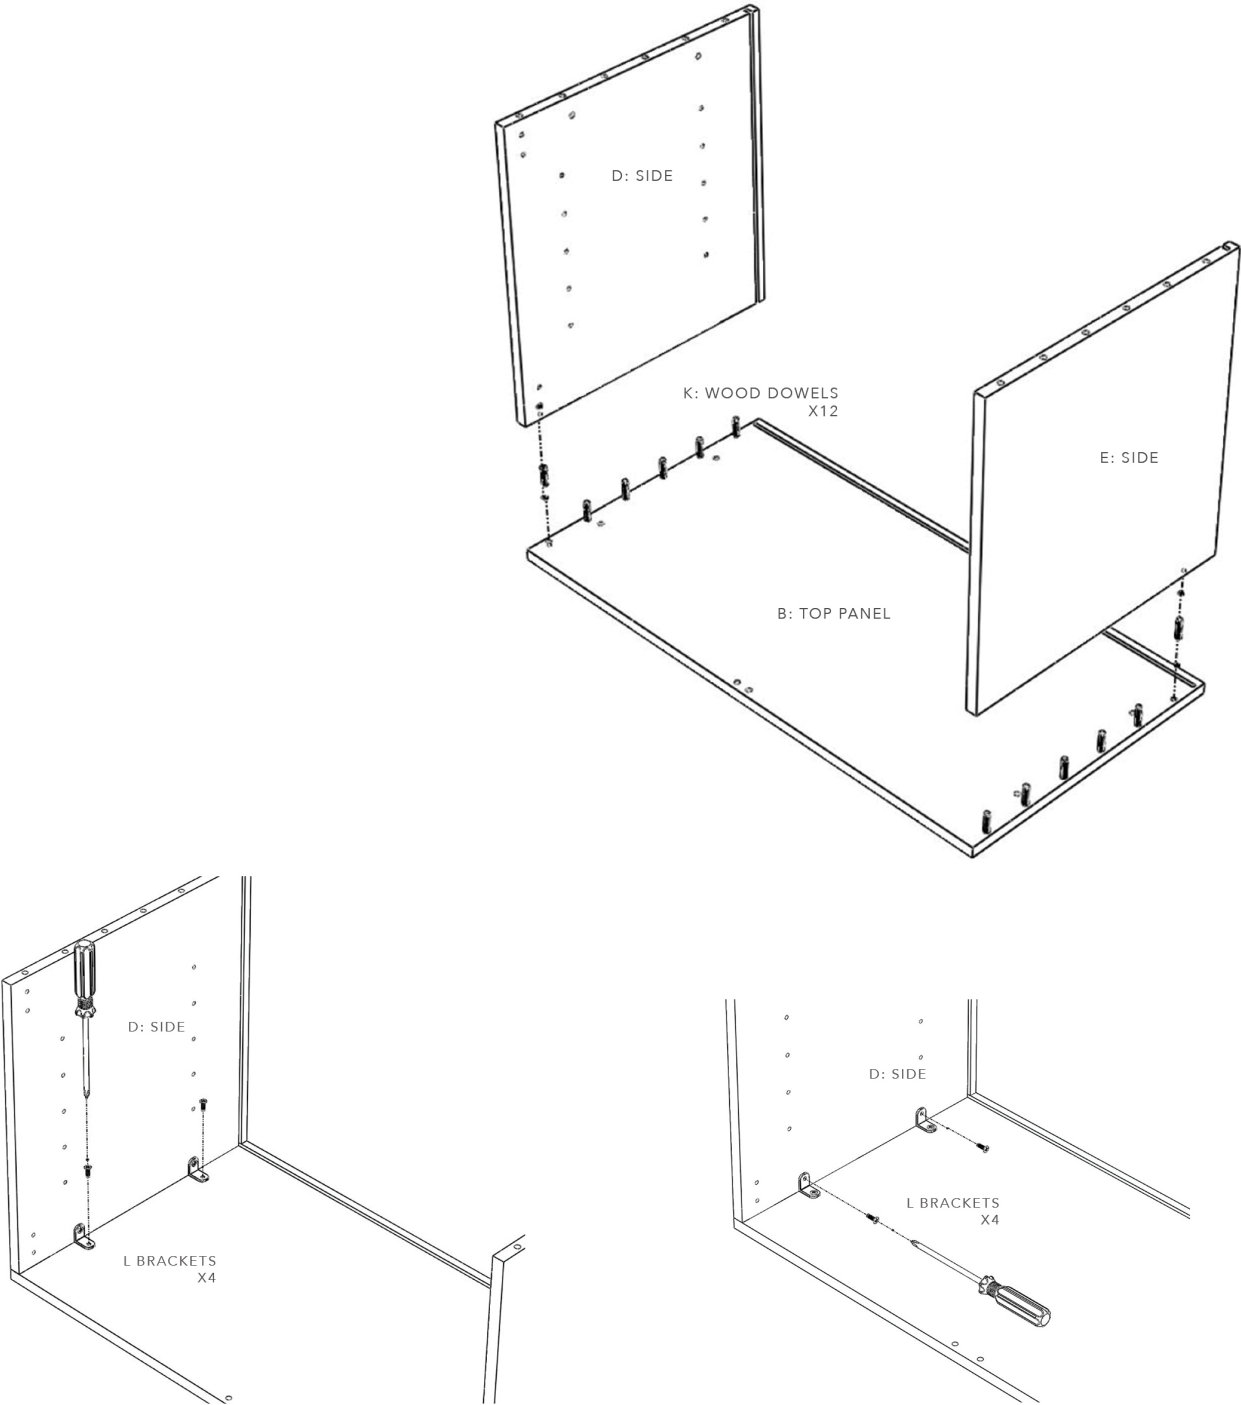


REPEAT AND ADD L BRACKETS ON SIDE E

PRO TIP: TO PROTECT THE WOOD, ASSEMBLE ON TOP OF THE CARDBOARD SHEETS INCLUDED IN YOUR PACKAGING.


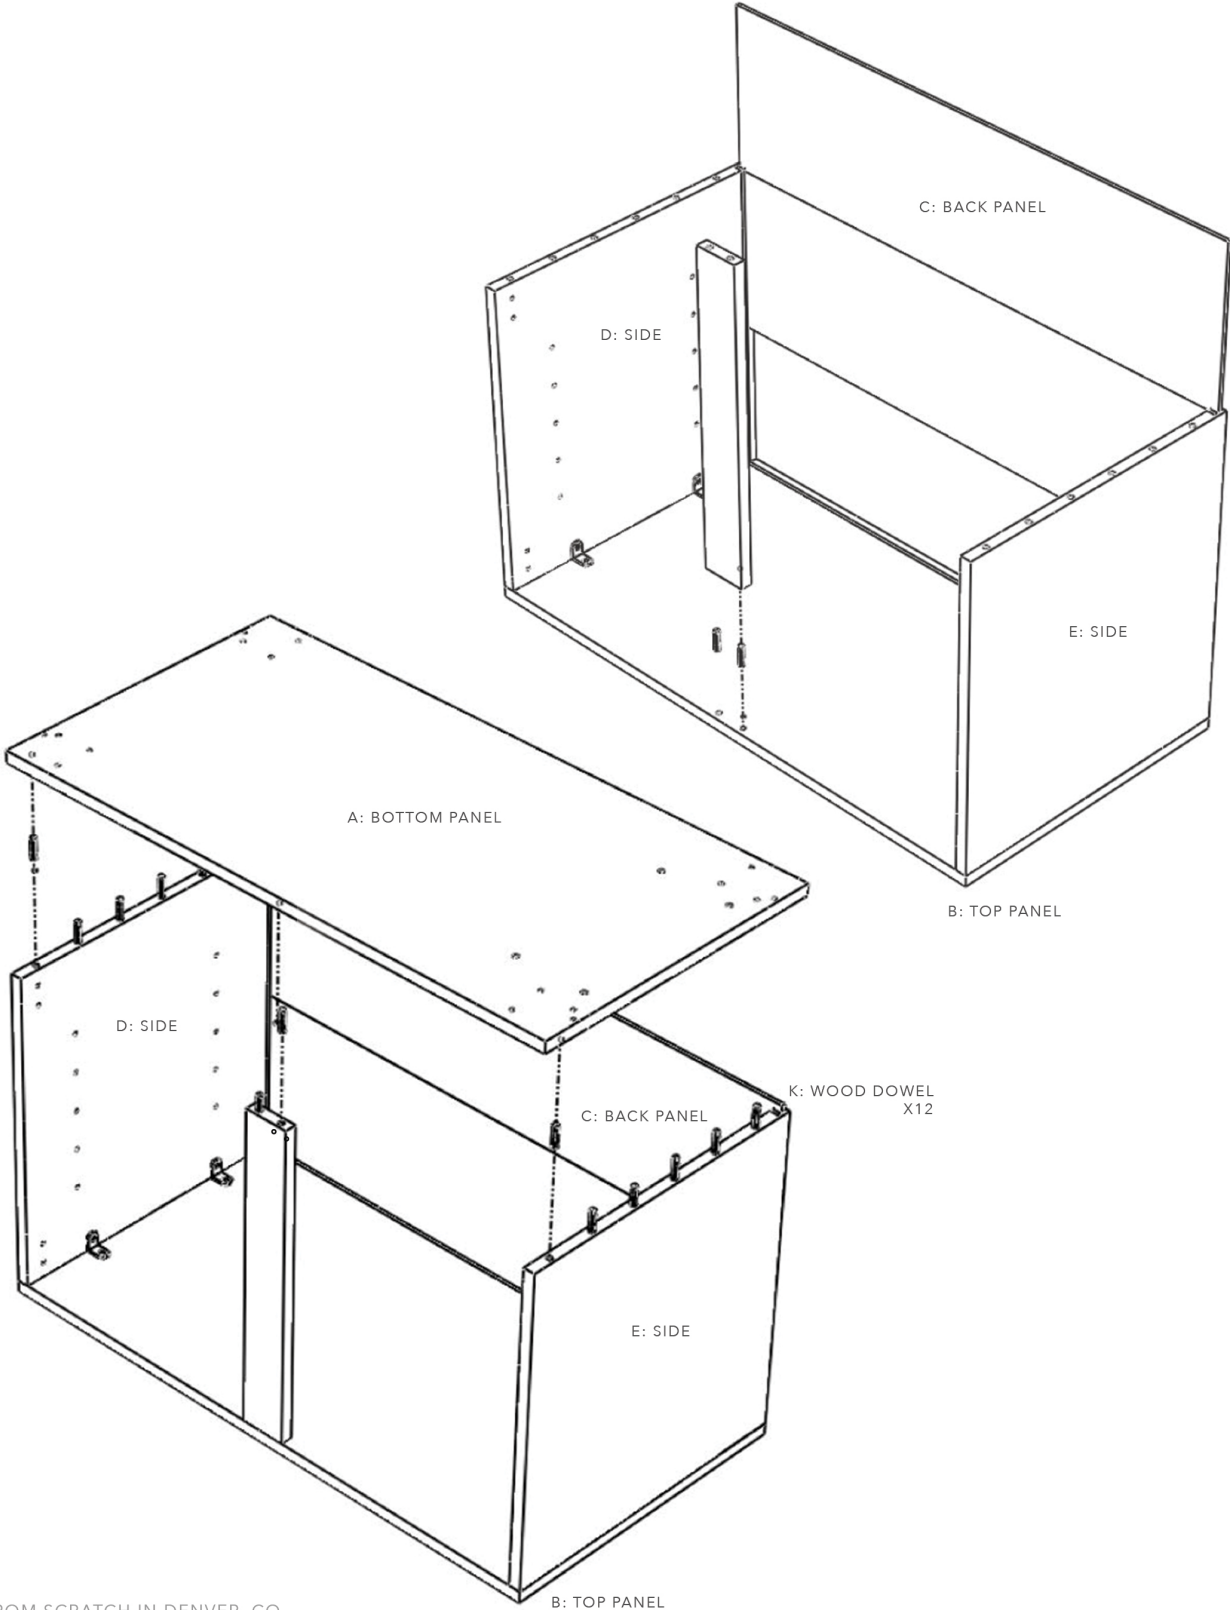



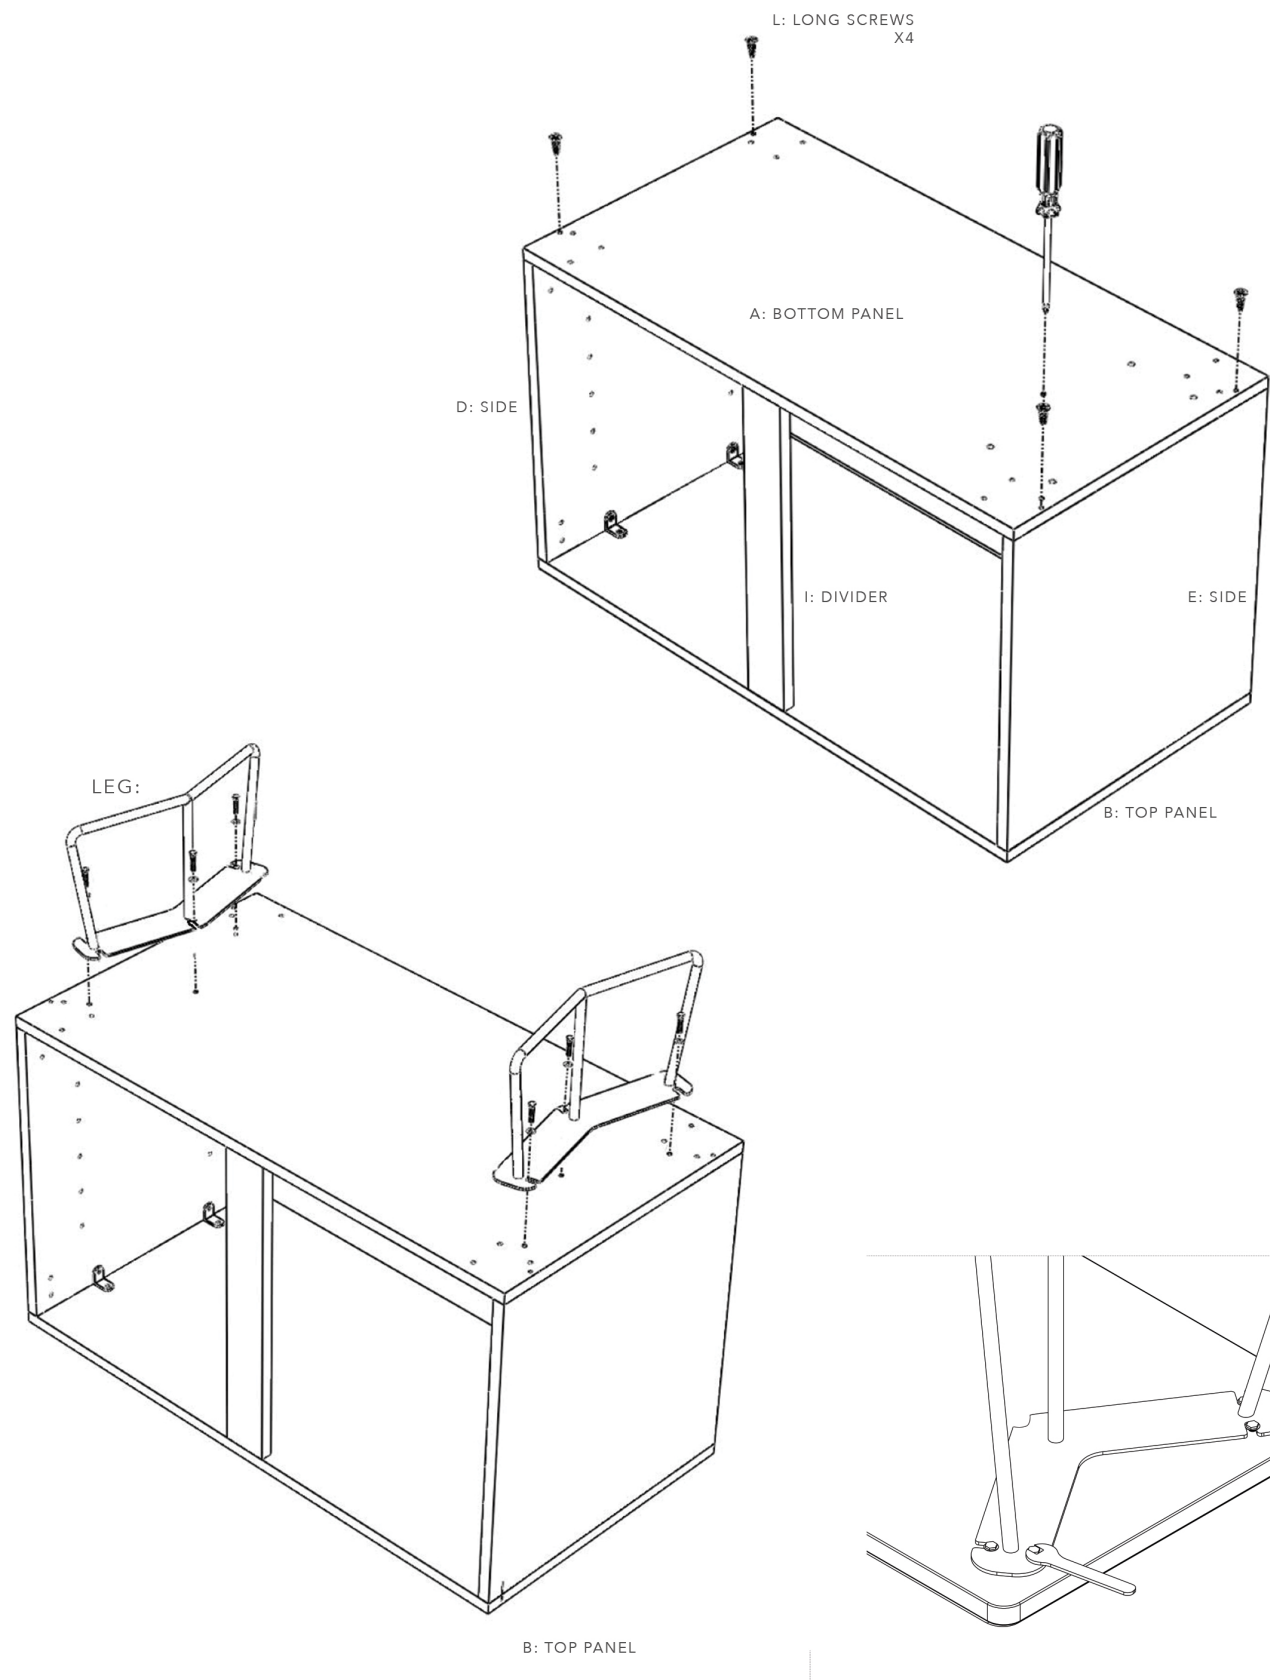


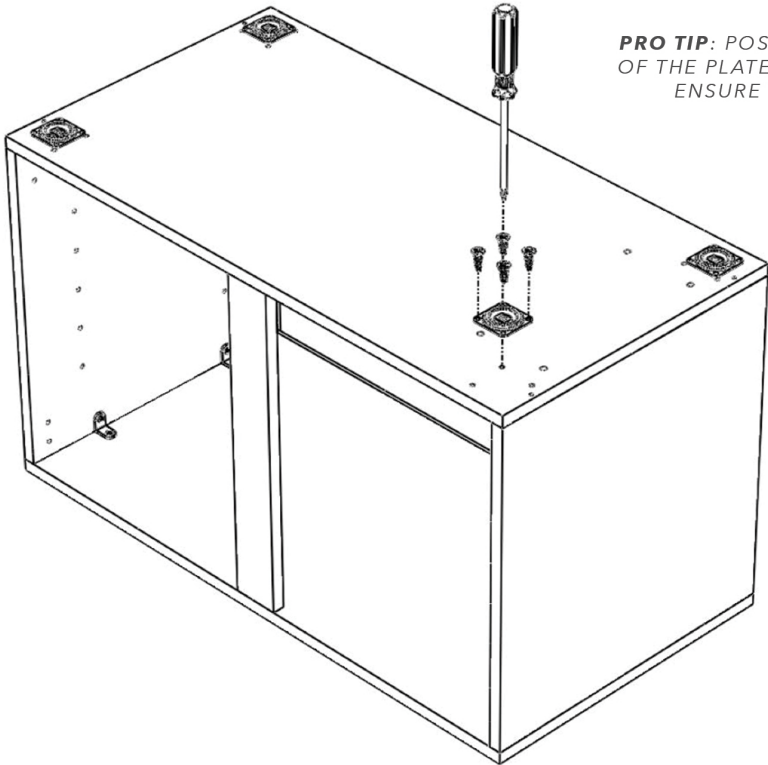


PRO TIP: POSITION THE LEG PLATES SO THAT THE ANGLED PART OF THE PLATE IS FACING INWARD FROM EACH CORNER. THIS WILL ENSURE YOUR WOODEN LEGS ARE ANGLED CORRECTLY.



TAPERED LEG:

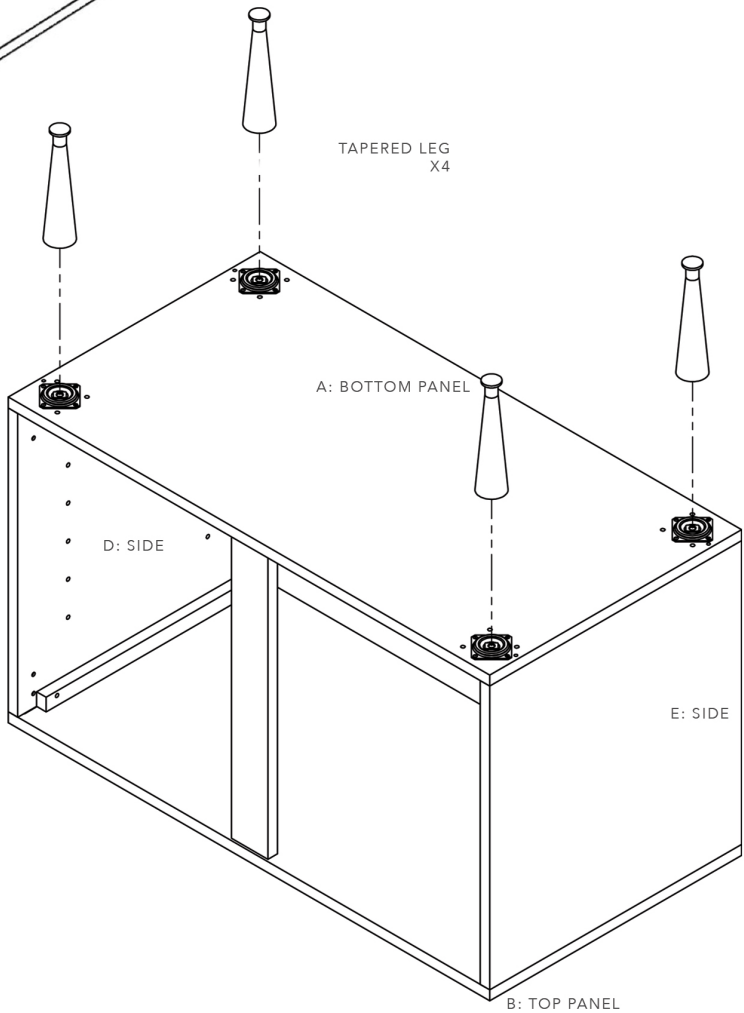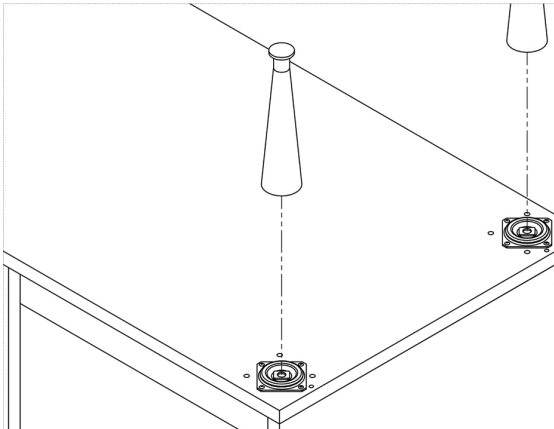

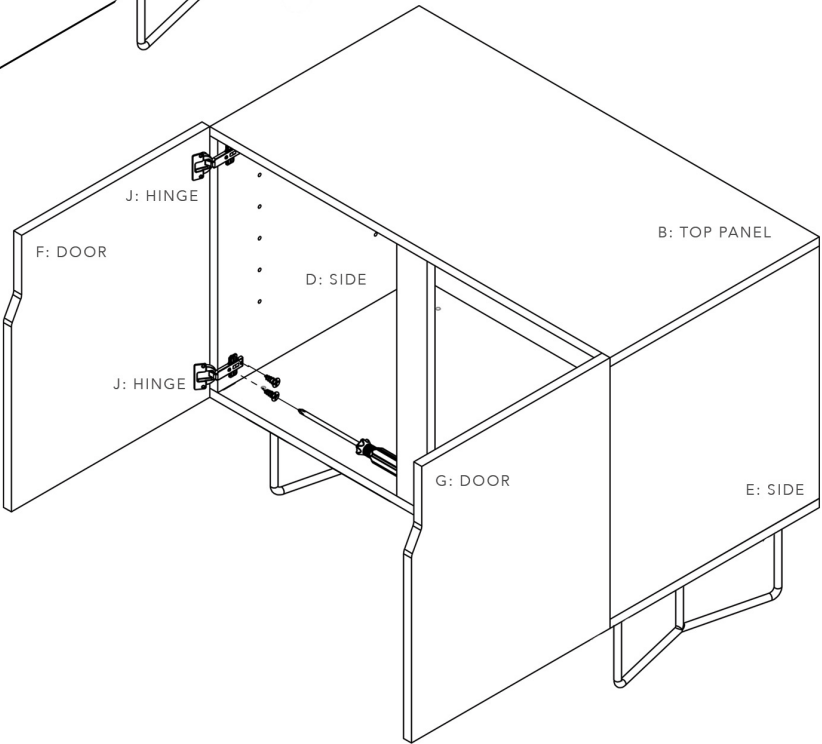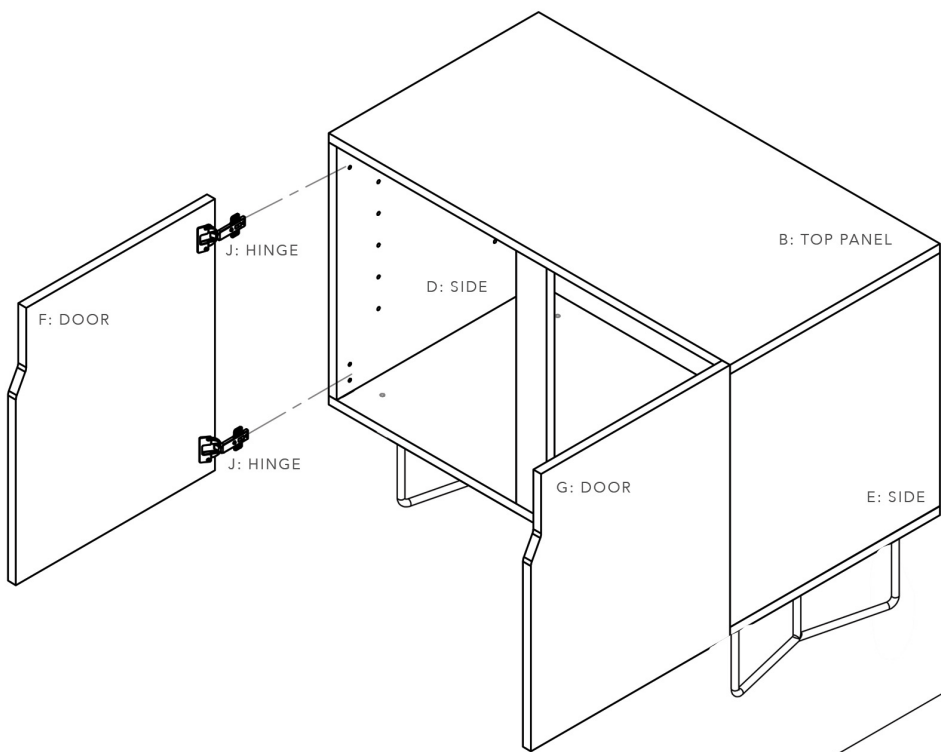

SOME ADJUSTMENTS ON DOOR
HINGES WILL BE NECESSARY.

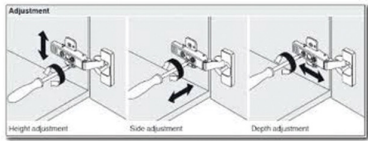

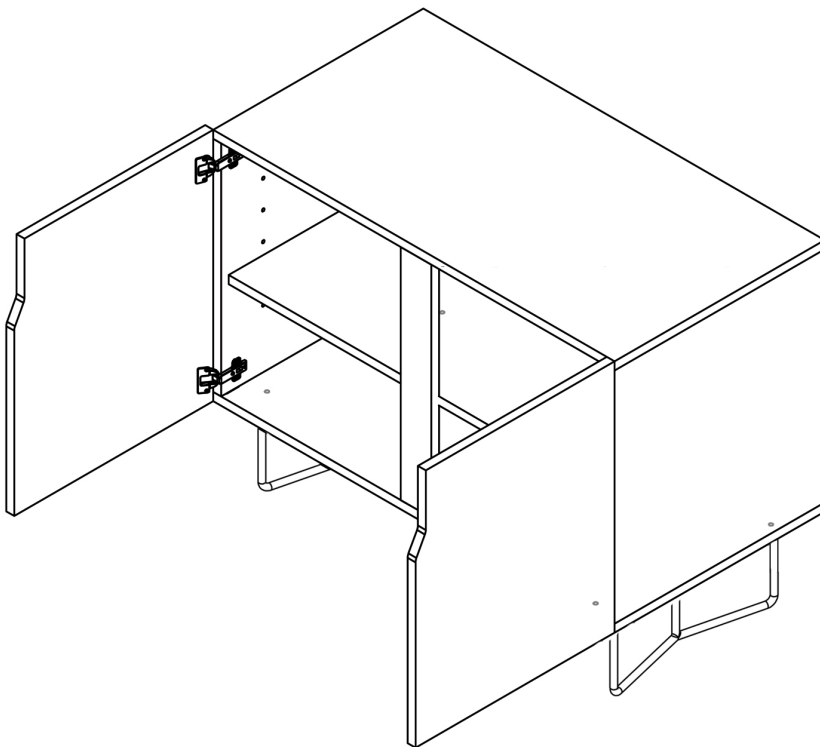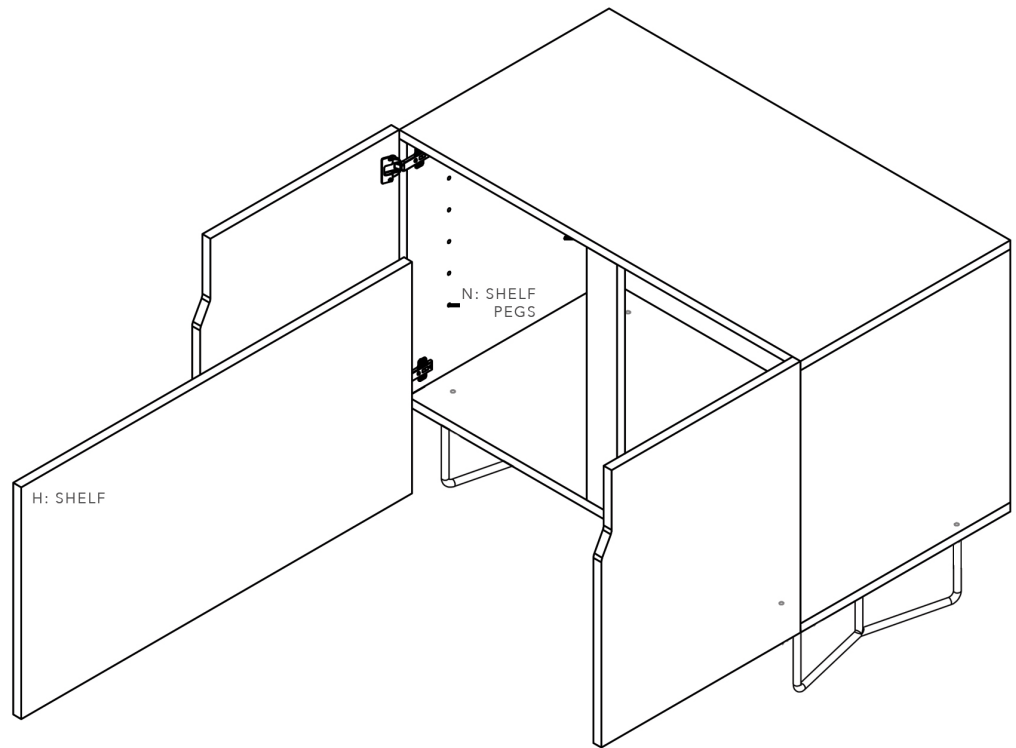

PRO TIP: TO PROTECT WOOD AND HARD FLOORS, USE INCLUDED FELT PROTECTORS UNDERNEATH THE CREDENZA LEGS.



1-800-973-6091

MON-FRI 9:30AM-4:30PM MST

SUPPORT@DENYDESIGNS.COM



SHOP THE FUN AT DENYDESIGNS.COM