









Installation & Assembly

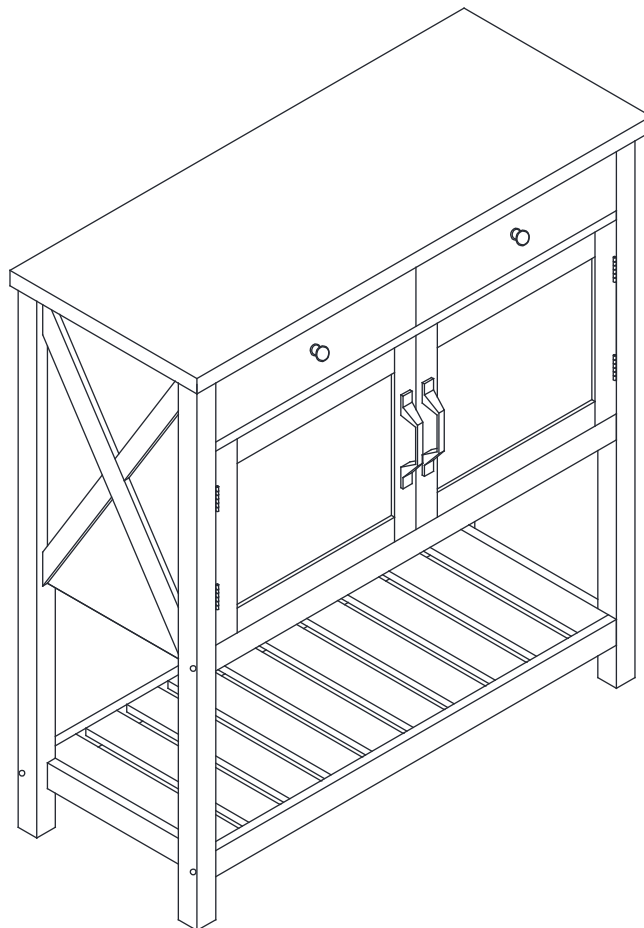




Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.


Assembly Instructions







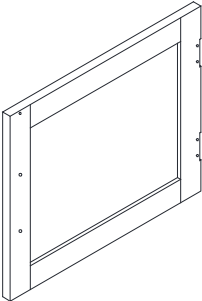
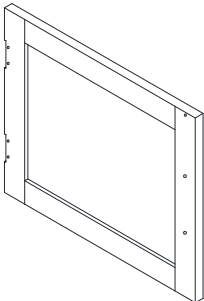
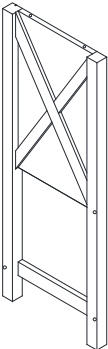
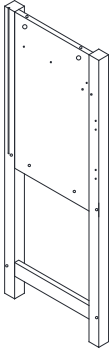
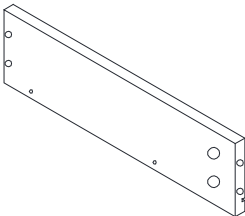
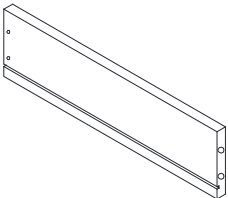
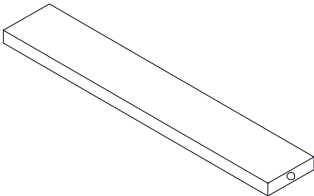
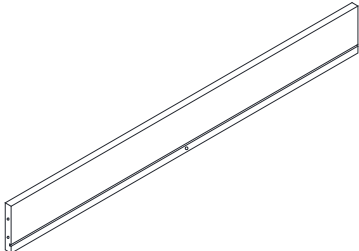
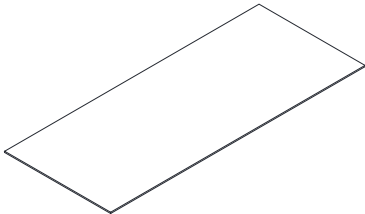
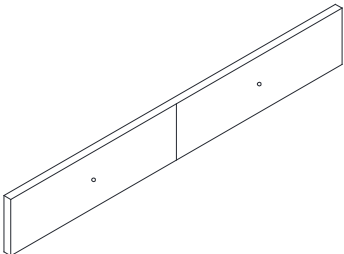
We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.



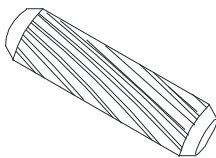
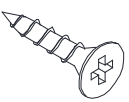

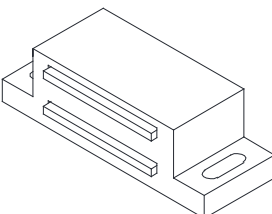
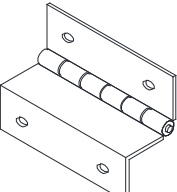
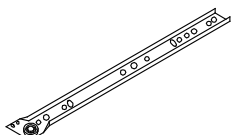
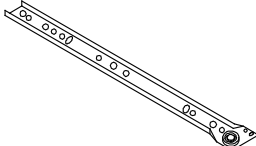
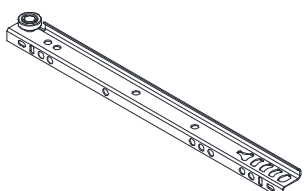
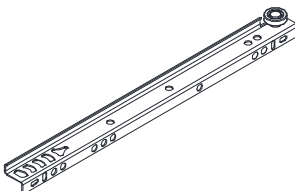
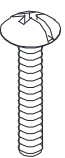
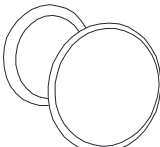
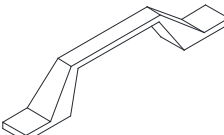
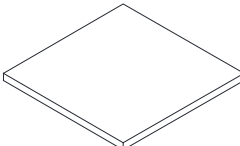
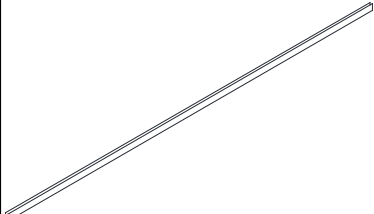



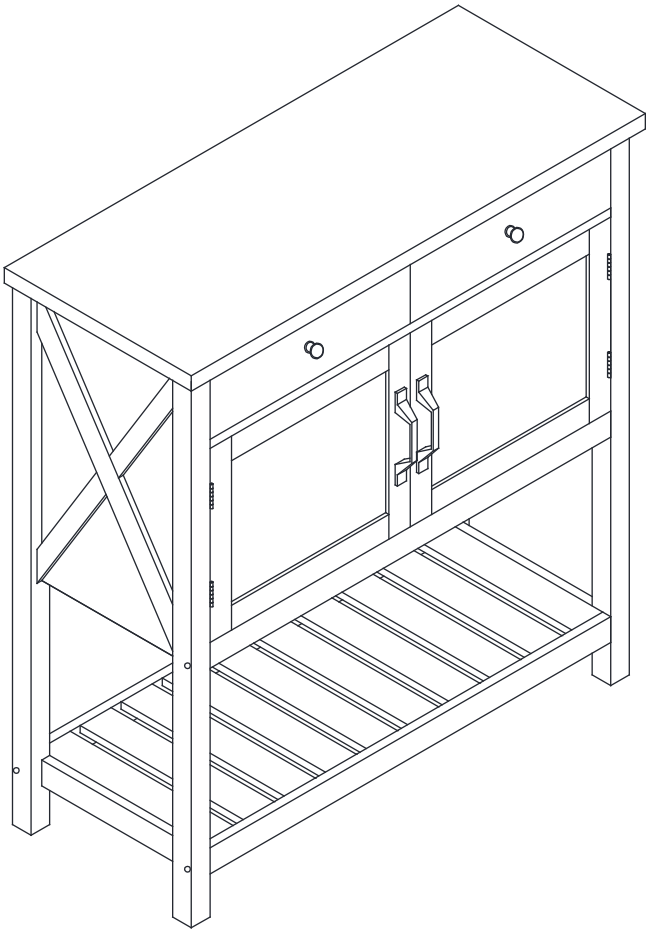
Completed Assembly

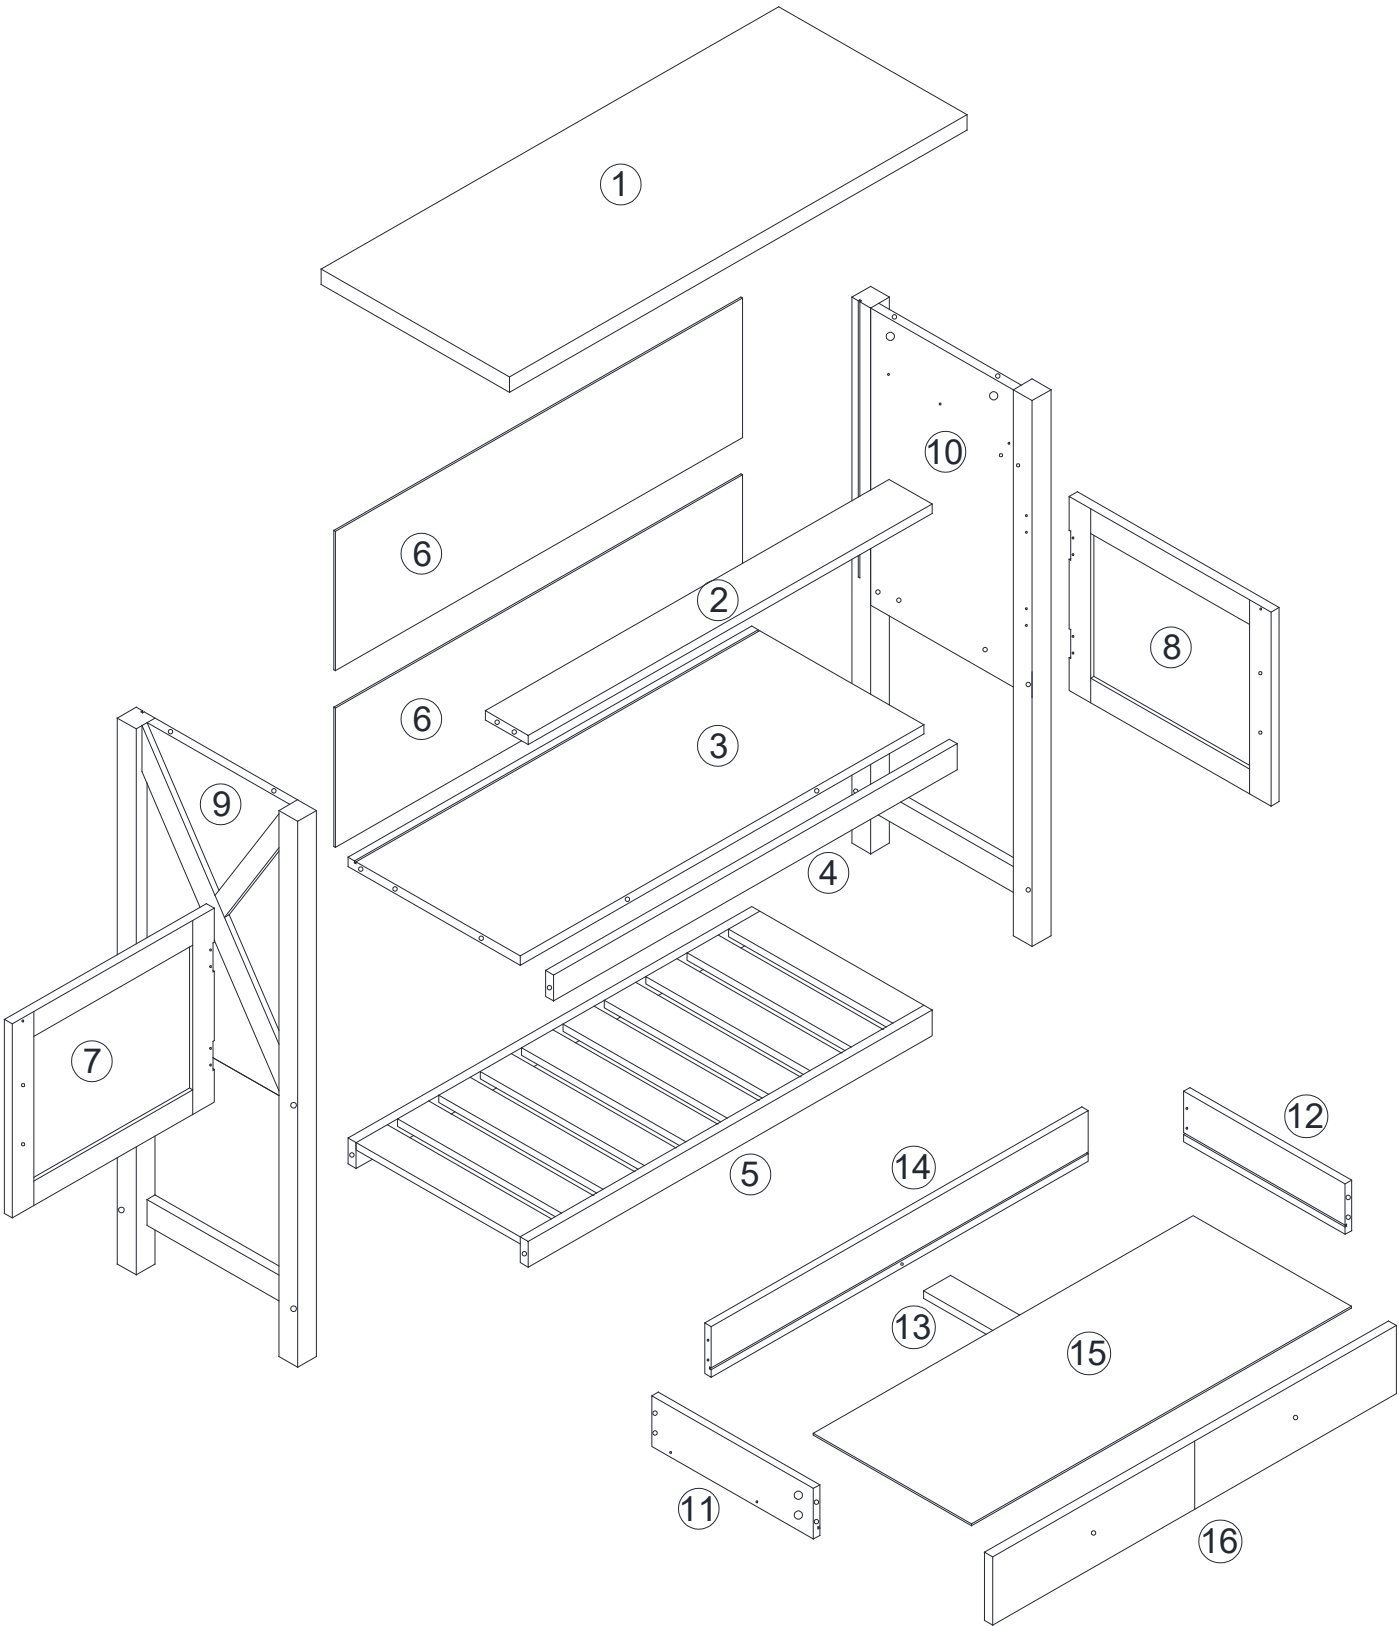


Parts Description

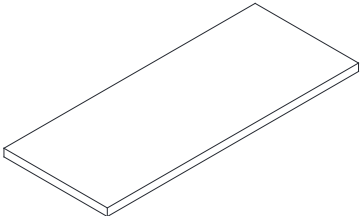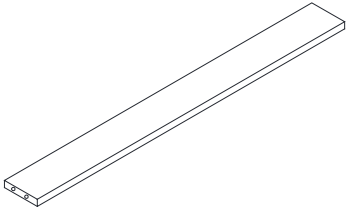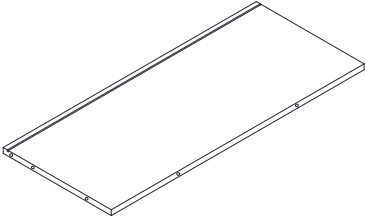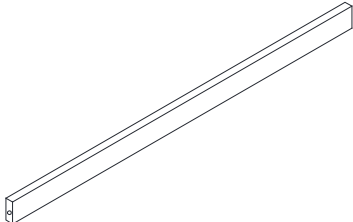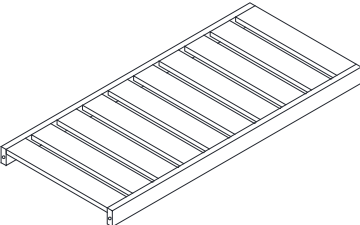

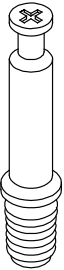
<div>1</div>  <div>①Top Panel1pc</div>	<div>2</div>  <div>②Support Bar1pc</div>	<div>3</div>  <div>③Shelf Panel1pc</div>	<div>4</div>  <div>④Front Bar1pc</div>
<div>5</div>  <div>⑤Bottom Panel1pc</div>	<div>6</div>  <div>⑥Back Panel2pcs</div>	<div>7</div>  <div>⑦Left Side Door1pc</div>	<div>8</div>  <div>⑧Right Side Door1pc</div>
<div>9</div>  <div>⑨Left Side Panel1pc</div>	<div>10</div>  <div>⑩Right Side Panel1pc</div>	<div>11</div>  <div>⑪Drawer Left Panel1pc</div>	<div>12</div>  <div>⑫Drawer Right Panel1pc</div>
<div>13</div>  <div>⑬Drawer Support Bar1pc</div>	<div>14</div>  <div>⑭Drawer Back Panel1pc</div>	<div>15</div>  <div>Drawer⑮Bottom Panel1pc</div>	<div>16</div>  <div>⑯Drawer Front Panel1pc</div>
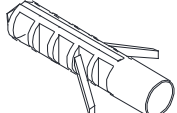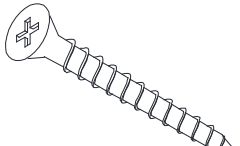
<div>A</div>  <div>Cam Bolt15pcs</div>	<div>B</div>  <div>Cam Lock15pcs</div>	<div>C</div>  <div>8mm*30mm Wood Dowel6pcs</div>	<div>D</div>  <div>3mm*12mm Screw 28pcs</div>
<div>E</div>  <div>3mm*14mm Screw 4pcs</div>	<div>F</div>  <div>Magnet1pc</div>	<div>G</div>  <div>Hinge4pcs</div>	<div>H</div>  <div>Left Glider1pc</div>
<div>I</div>  <div>Right Glider1pc</div>	<div>J</div>  <div>Left Slider1pc</div>	<div>K</div>  <div>Right Slider1pc</div>	<div>L</div>  <div>4mm*18mm Bolt 6pcs</div>
<div>M</div>  <div>Drawer Handle2pcs</div>	<div>N</div>  <div>Cabinet Door Handle 2pcs</div>	<div>O</div>  <div>Foot Pad4pcs</div>	<div>P</div>  <div>Connecting Strip 1pc</div>
<div>Q</div>  <div>Screw2pcs</div>	<div>R</div>  <div>Anti-tip Bracket 2pcs</div>	<div>S</div>  <div>Anchor2pcs</div>	<div>T</div>  <div>4mm*35mm Screw 7pcs</div>


U

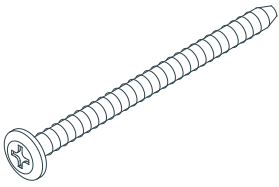


V



W

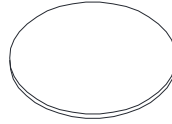

X

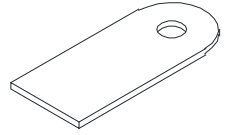

Bolt

6pcs

Lock Nut

6pcs


Hole Sticker

6pcs

Metal Plate

2pcs

Y









4pcs

Z



3mm*14mm Screw 2pcs

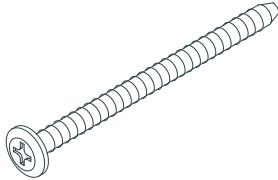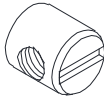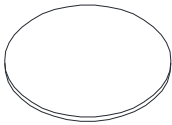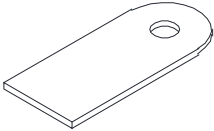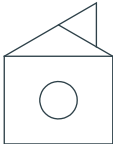U		V		W		X	
Bolt	6pcs	Lock Nut	6pcs	Hole Sticker	6pcs	Metal Plate	2pcs
Y		Z					
	4pcs	3mm*14mm Screw	2pcs				



Assembly Requirements:

1-Person
Assembly

0.5 Hours
Assembly Time
(Average)

Tools Required
(Wrench)

Phillips Screwdriver
Flat Screwdriver

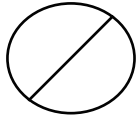

Note: Please do not use any power tools. Using of power tools may cause damage and void manufacture warranty.


Instructions For Fastening Cam Bolt and Cam Lock

CAM BOLT

CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

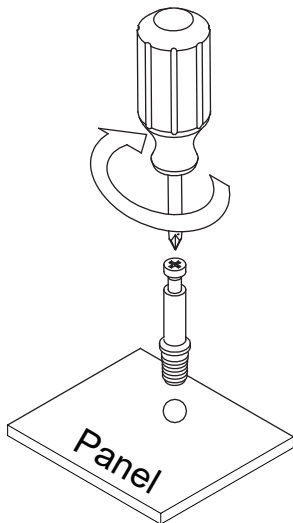


Shoulder is flushed
(on the same level)
with the panel.



SHOULDER


Shoulder is
above the panel.

CAM-LOCK
Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

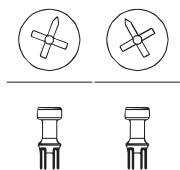


CORRECT

WRONG


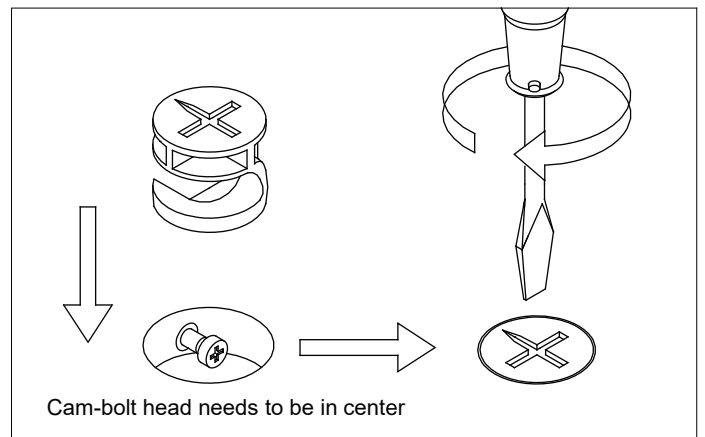


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

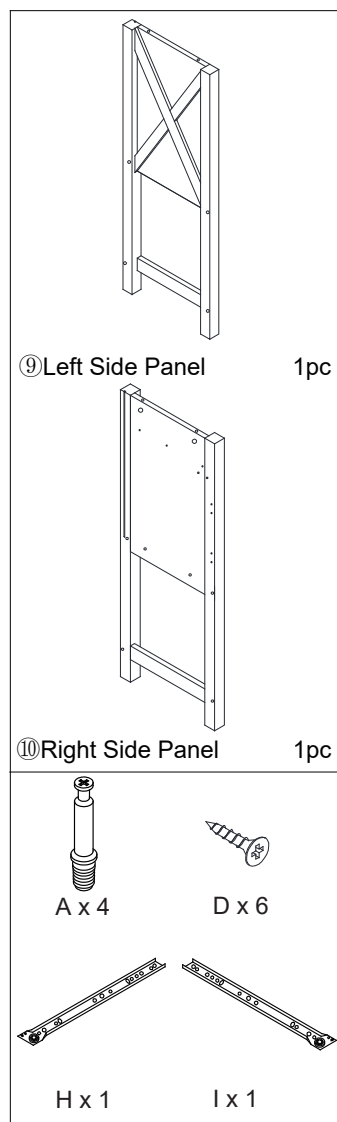



Step 1



- 1.Screw Cam Bolt(A) into Left Side Panel(9) and Right Side Panel(10).
- 2.Attach Left Glider(H) to Left Side Panel (9), using Screw(D).
- 3.Attach Right Glider (I) to Right Side Panel(10), using Screw(D).

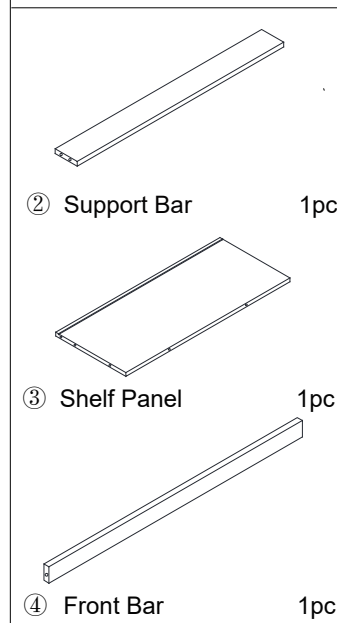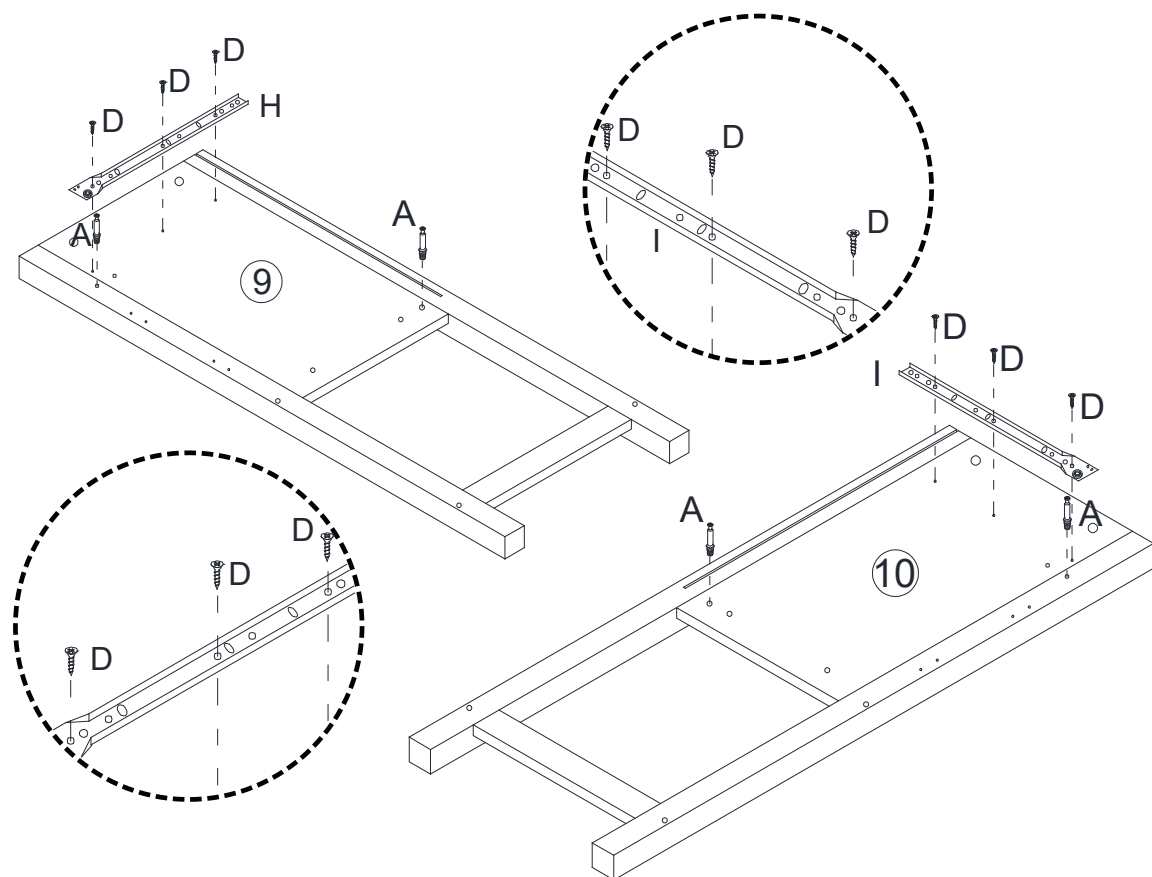

Step 2



- 1.Attach Front Bar (4) to Shelf Panel (3),by screwing Cam Bolt (A) and using Cam Lock (B) .
 - 2.Attach Magnet (F) to Support Bar (2),using Screw (Z).
- Tip:The magnetic side of the Magnet (F) faces the shorter side near the edge of Support Bar (2).

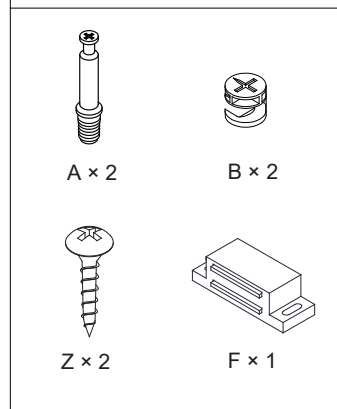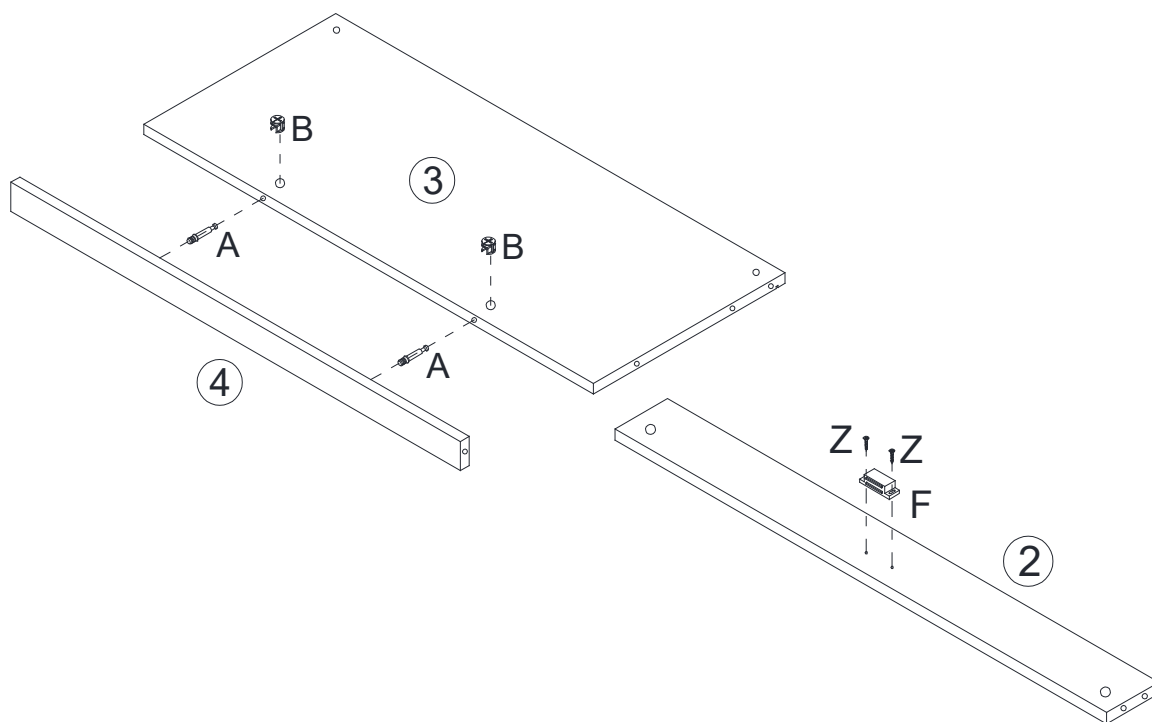

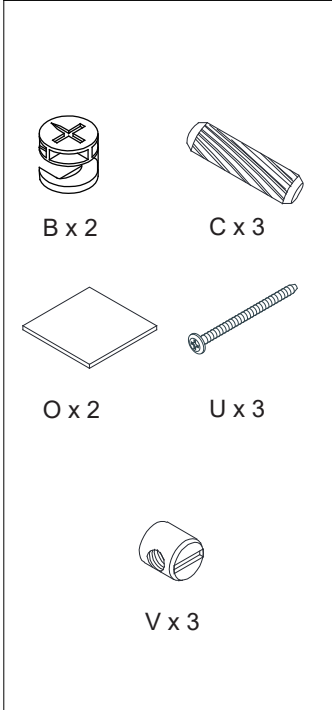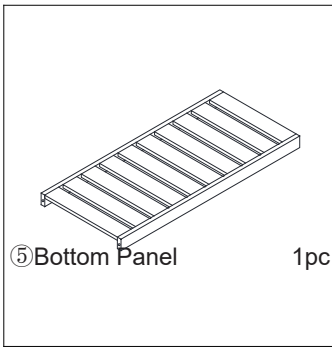


Step 3


1. Attach Support Bar (2) to Left Side Panel (9), using Cam Lock (B) and putting Wooden Dowel (C).
2. Attach Shelf Panel (3) and Front Bar (4) to Left Side Panel (9), using Cam Lock (B), Bolt (U), Lock Nut (V) and putting Wooden Dowel (C).
3. Attach Bottom Panel (5) to Left Side Panel (9), using Bolt (U) and Lock Nut (V).
4. Stick the Foot Pad (O) onto Left Side Panel (9).

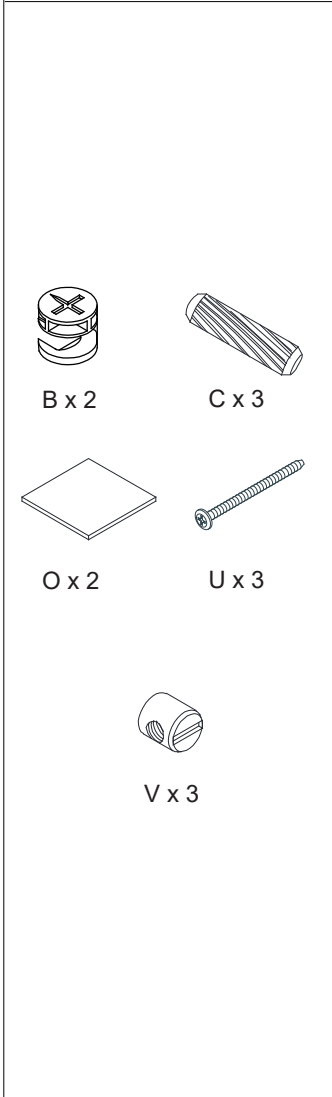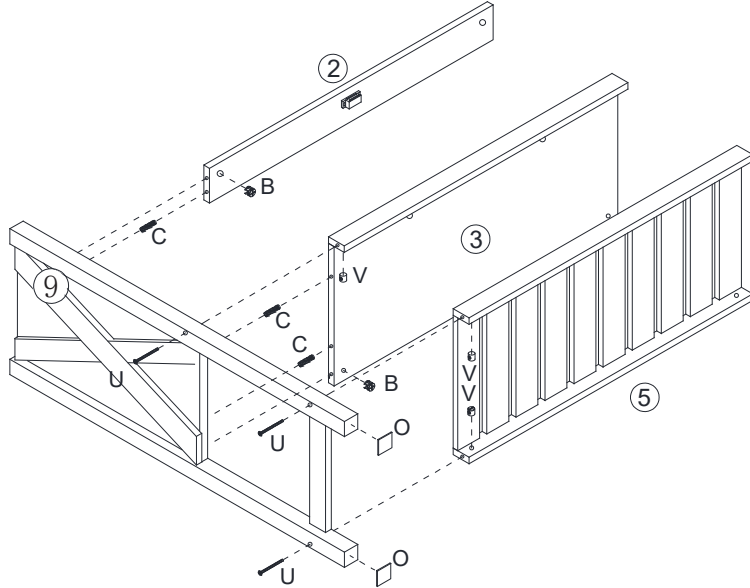

Step 4

1. Attach Right Side Panel (10) to Support Bar (2), Shelf Panel (3), Front Bar (4) and Bottom Panel (5), using Cam Lock (B), Bolt (U), Lock Nut (V) and putting Wooden Dowel (C).
2. Stick the Foot Pad (O) onto Right Side Panel (10).

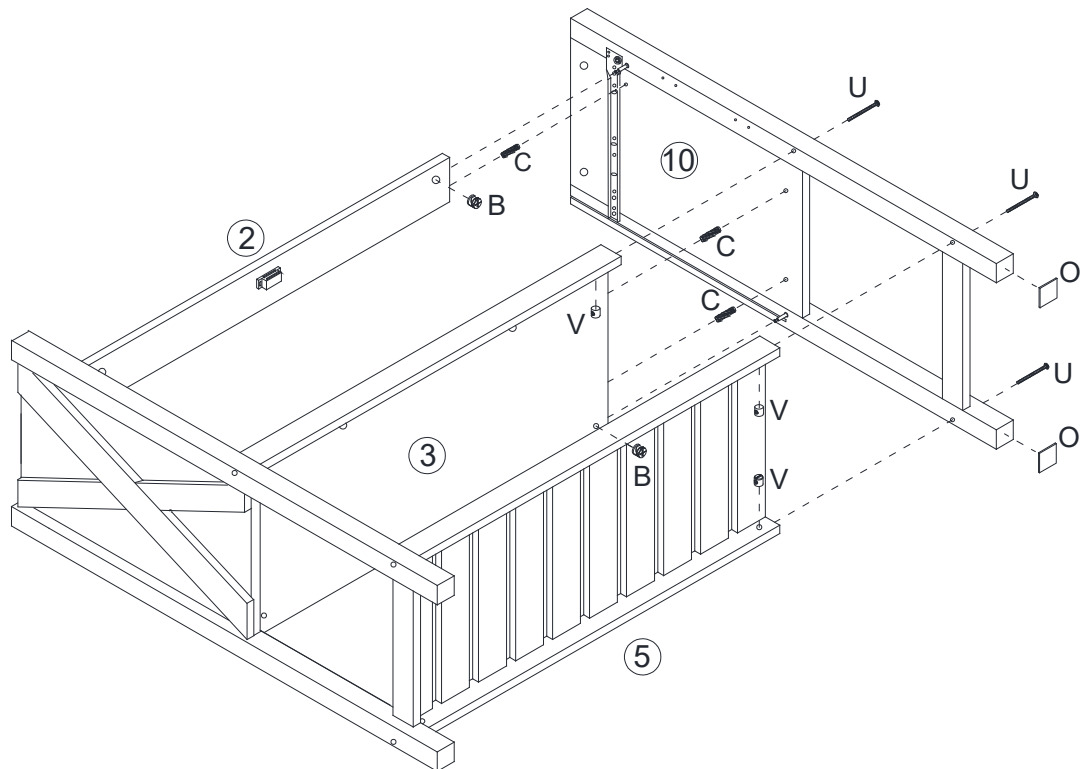


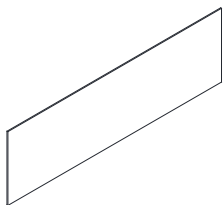


⑥ Back Panel

2pcs

Step 5


- 1.Insert Back Panel (6) into the groove of left side panel (9) and Right side panel (10).
- 2.Connect the Connecting Strip (P) and Back Panel (6) together.
- 3.Insert Back Panel (6) into the groove of left side panel (9) and Right side panel(10).

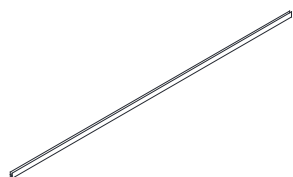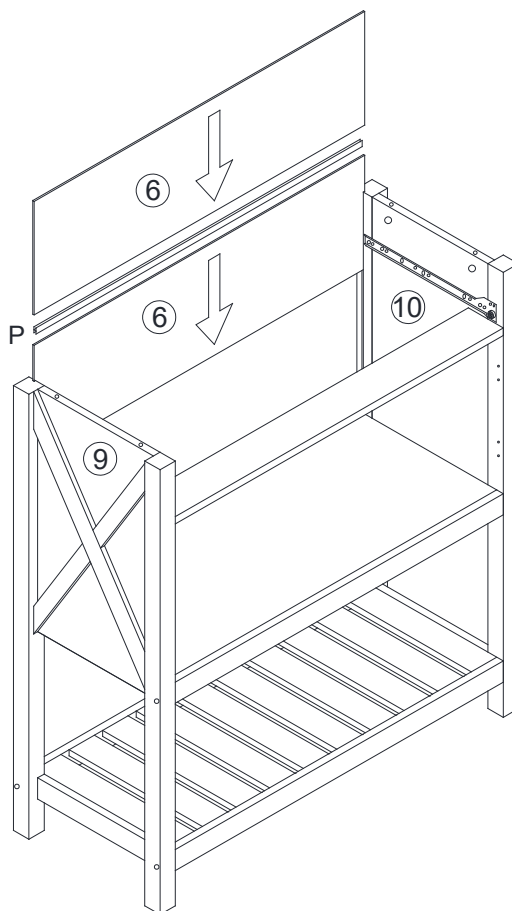

P x 1

Step 6

- 1.Screw Cam Bolt (A) into Top Panel (1).
- 2.Attach Top Panel (1) to left side panel (9) and Right side panel (10),using Cam Lock (B).

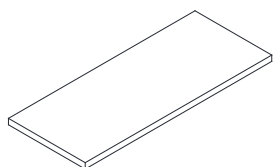

① Top Panel



1pc




A x 4




B x 4

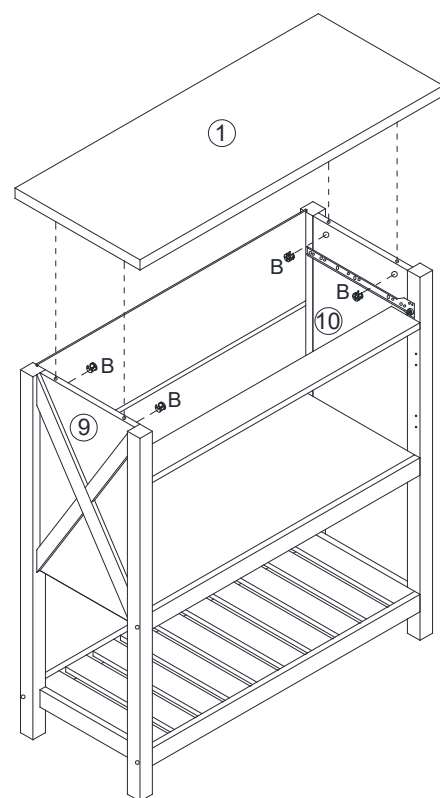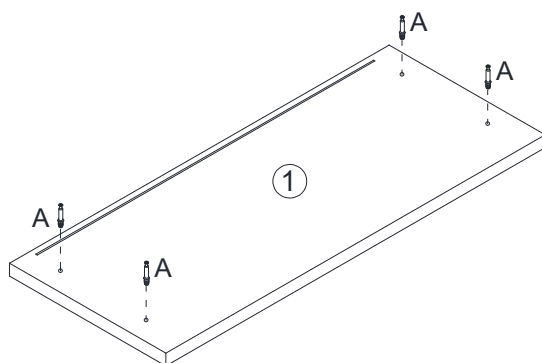

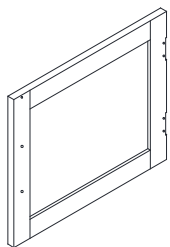


⑦ Left Side Door

1pc

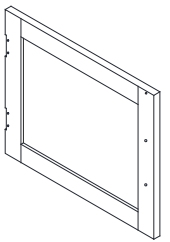



⑧ Right Side Door

1pc

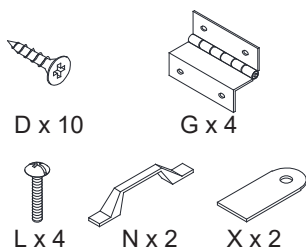

Step 7

1. Attach Hinge (G) to Left Side Door (7) and Right Side Door (8), using Screw (D).
2. Attach Metal Plate (X) to Left Side Door (7) and Right Side Door (8), using Screw (D).
3. Attach Cabinet Door Handle (N) to Left Side Door (7) and Right Side Door (8), using Bolt (L).

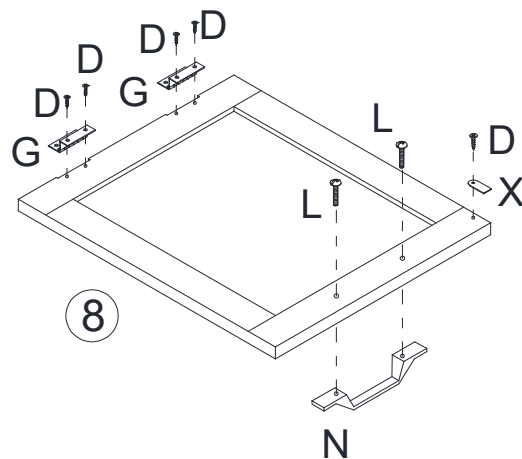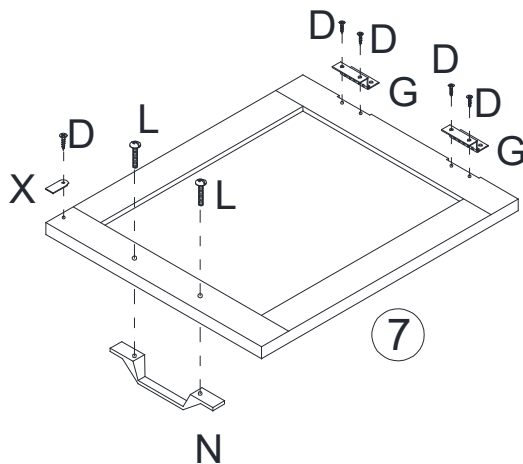

Step 8


1. Cover the holes on Left Side Panel (9) with Hole Sticker (W)
2. Attach Right Side Door (8) to Right Side Panel (10), using Screw (D).



D x 4



W x 3

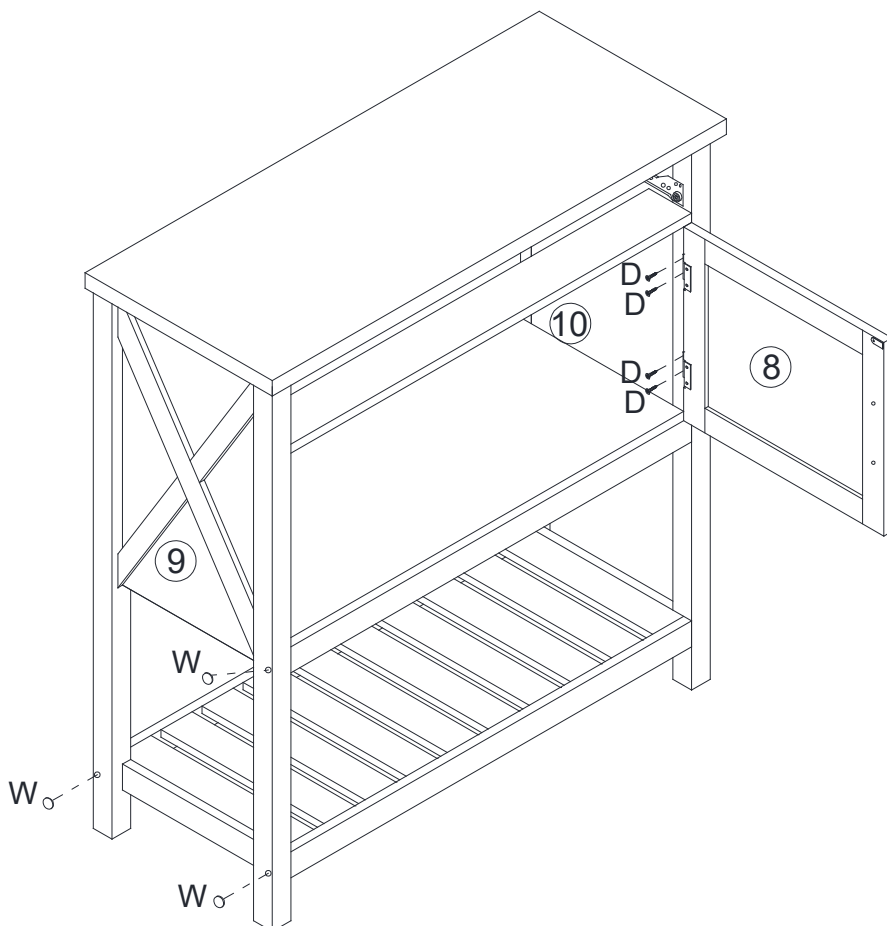

Step 9

1. Cover the holes on Right Side Panel (10) with Hole Sticker (W)
2. Attach Left Side Door (7) to Left Side Panel (9), using Screw (D).
3. Screw Rear Hooks (Y) to Left Side Panel (9) and Right Side Panel (10), using Screw (E).



D x 4






W x 3



E x 4



Y x 4

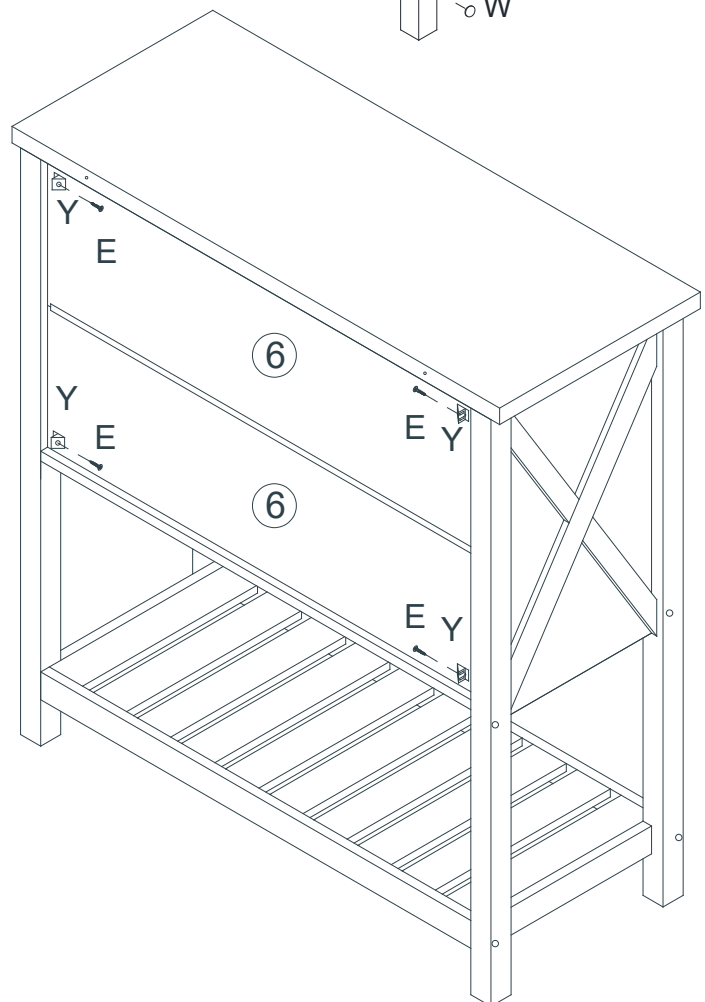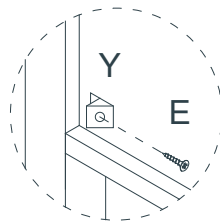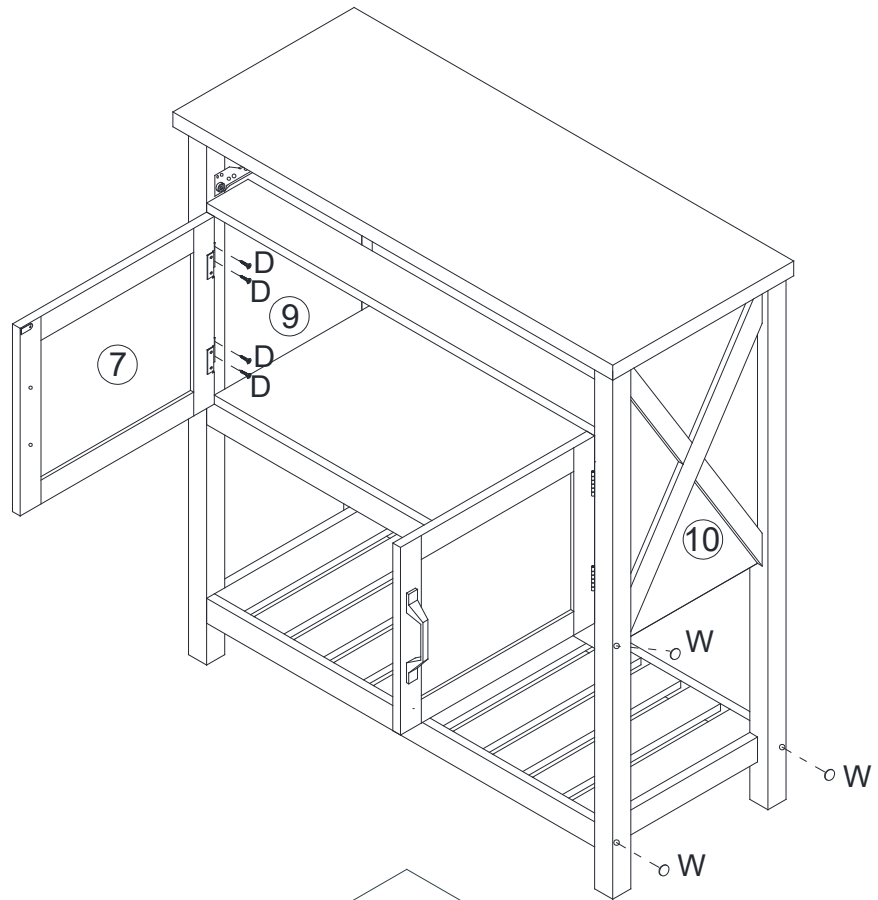

Step 10


1. Attach Left Slider (J) to Drawer Left Panel (11), using Screw (D).
2. Attach Right Slider (K) to Drawer Right Panel (12), using Screw (D).
3. Attach Drawer Left Panel (11), Drawer Right Panel (12) and Support Bar (13) to Drawer Back Panel (14), using Screw (T).

⑪ Drawer Left Panel 1pc

⑫ Drawer Right Panel 1pc

⑬ Drawer Support Bar 1pc

⑭ Drawer Back Panel 1pc

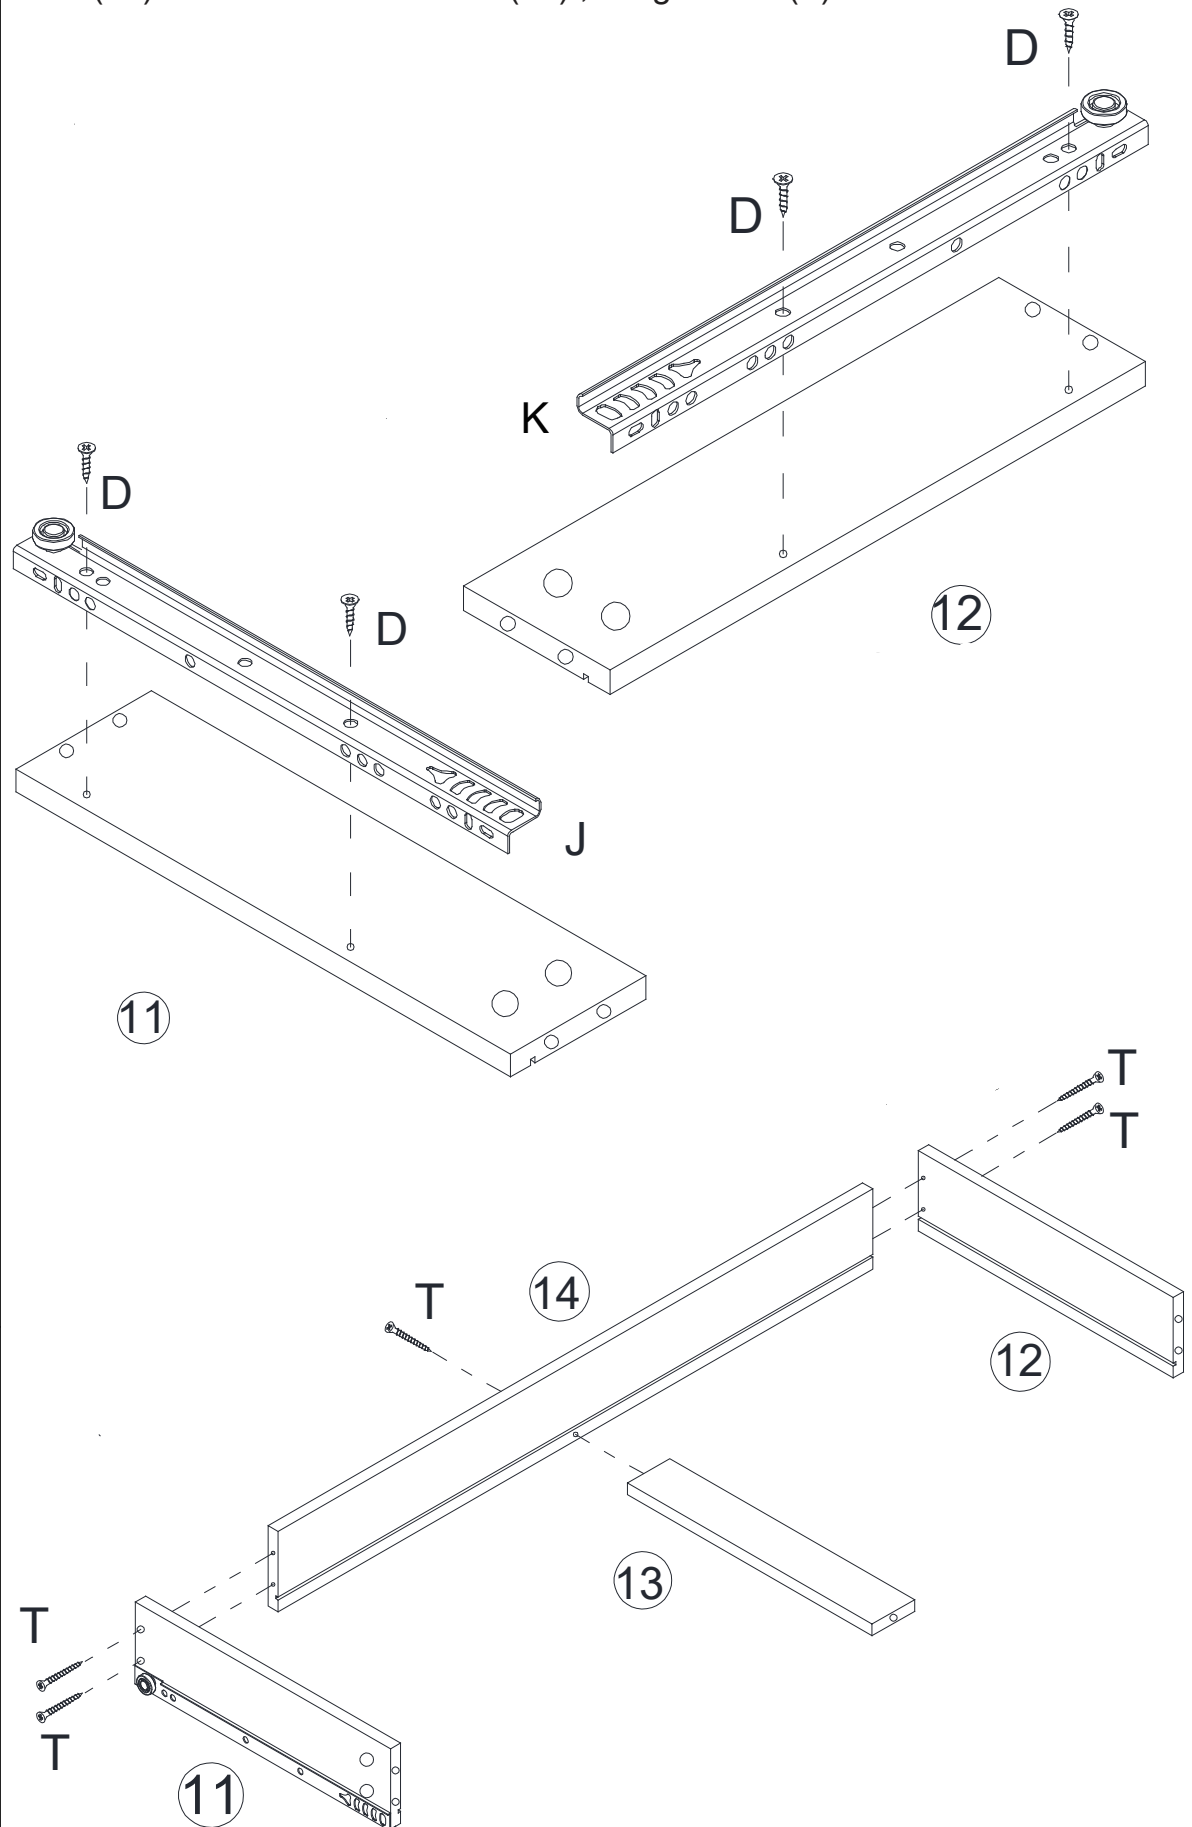

D x 4

T x 5




J x 1


K x 1

Step 11

- 1.Insert Drawer Bottom Panel(15) into the groove of Drawer Left Panel(11) and Drawer Right Panel(12).
- 2.Screw Cam Bolt(A) into Drawer Front Panel(16).
- 3.Attach Drawer Handle(M) to Drawer Front Panel(16),using Bolt(L).
- 4.Attach Drawer Front Panel(16) to Drawer Left Panel(11),Drawer Right Panel(12) and Support Bar(13),using Cam Lock(B).

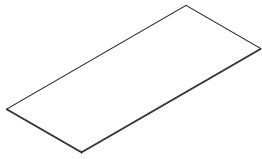

Drawer Bottom Panel 1pc

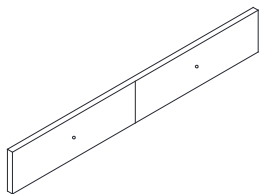

Drawer Front Panel 1pc



A x 5






B x 5



L x 2




M x 2

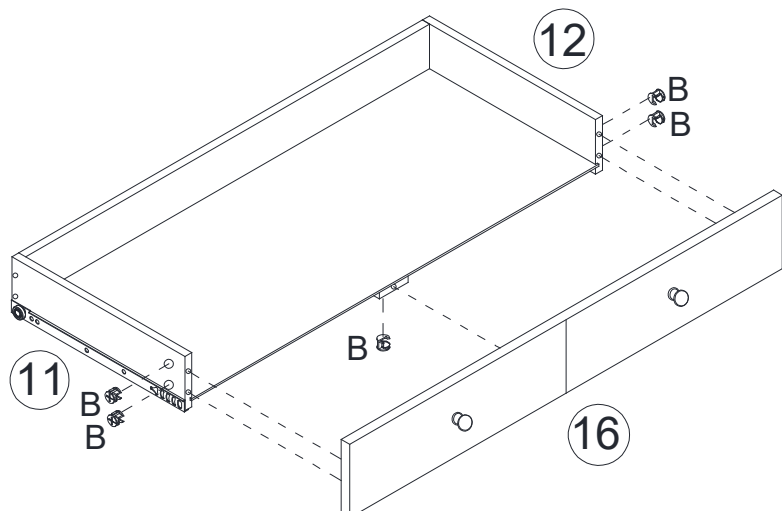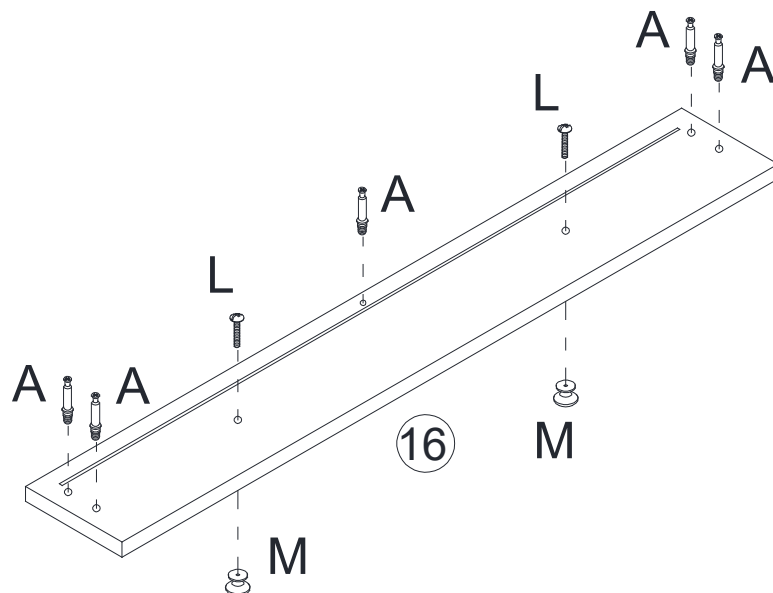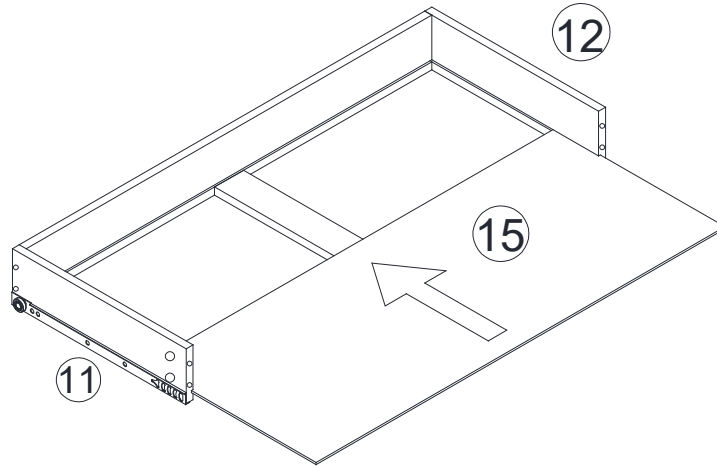

Step 12

Insert the drawer into the cabinet.

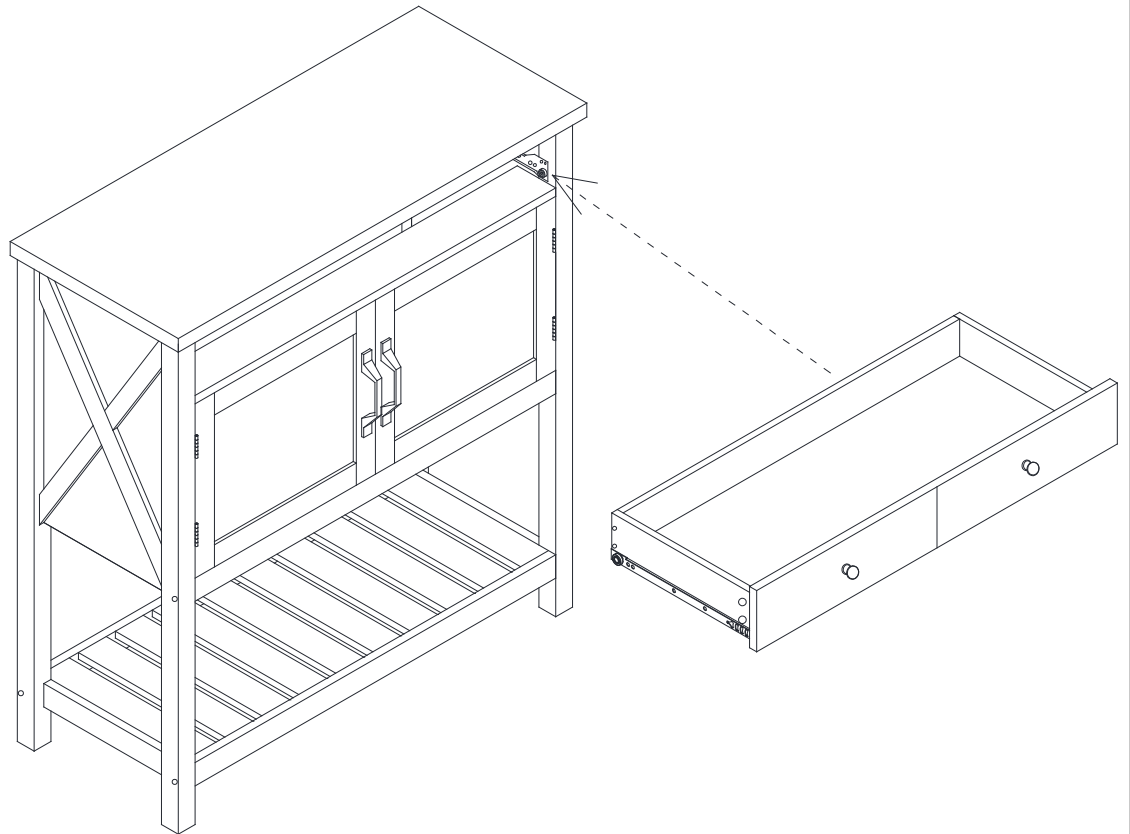

Step 13


1. Attach Tilting Prevention Device(R) to Top Panel (1), using Screw(Q).
2. According to position of the holes in the Tilting Prevention Device(R), drill two holes smaller than Anchor(S).
3. Insert Anchor(S) in hole you'd drilled, then secure the cabinet by Screw(T).




Q x 2



R x 2



S x 2

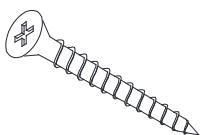

T x 2

