



# **Use and Care Guide**

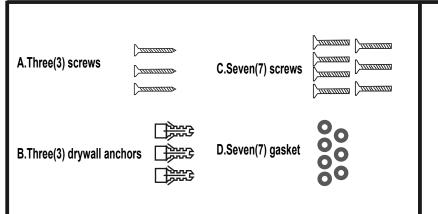

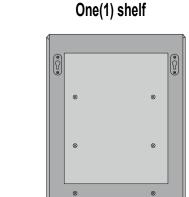




Three(3) mounting braket



#### **TOOLS REQUIRED**


### 1.INSTALLING THE BRACKET

1st Step, Using a power drill with phillops tip or phillops screw driver, use C and D screws to install the shelf and bracket together.

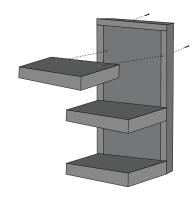

# 2.DRILL SCREW INTO WALL

2nd Step, place the backboard against the wall In the ideal location. Use a level at the top The bracket to ensure that the Bach hole is Used to install buckets. Using an electric drill, Drill hole in the wall where the pencil mark is, Install drywall anchors and Screw B into the hole.

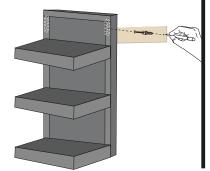

## 3.HANGING THE ENVELOPE RACK

3rd Step, Align the hanging holes on the back of the bracket with the A screws on the wall and hang it.

