
Assembly Instructions

BED199AQ

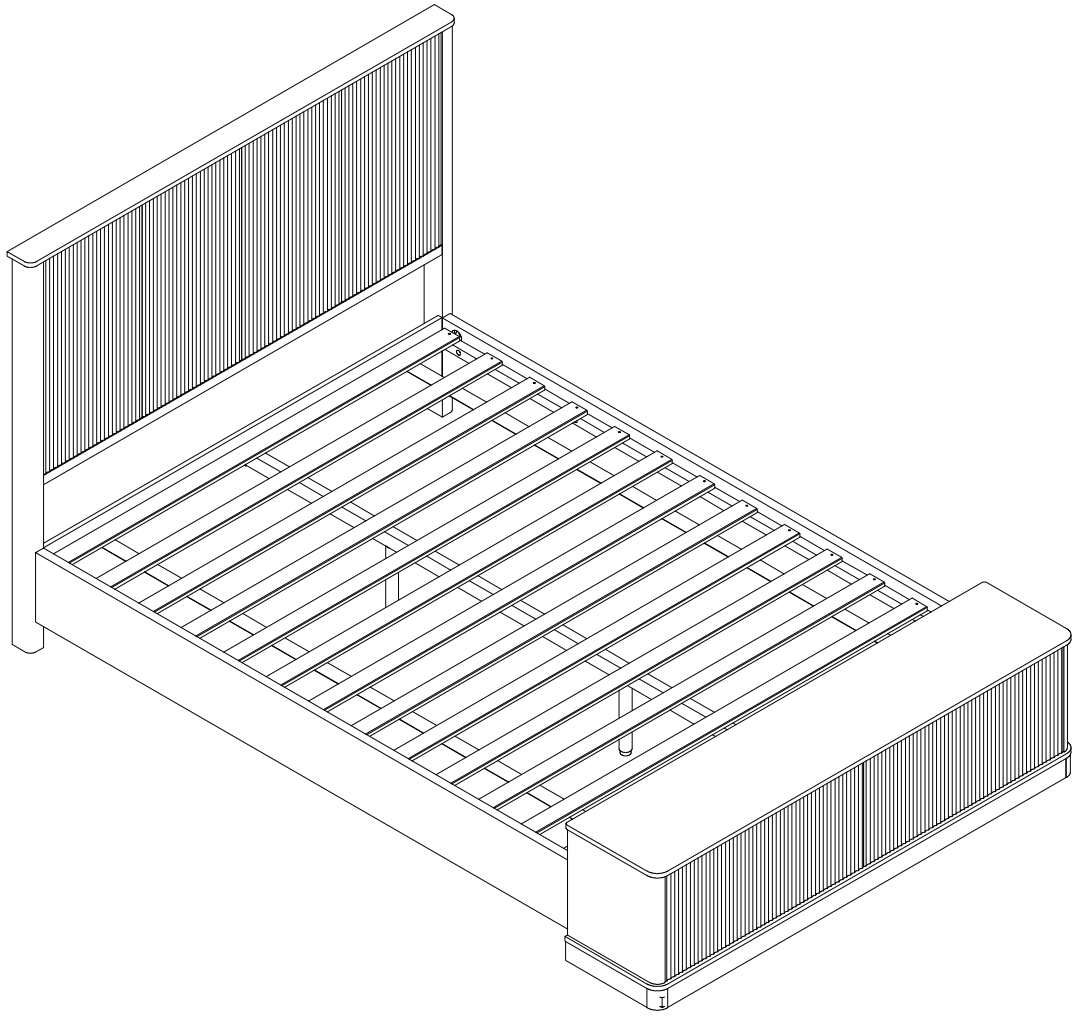

The product is packed in 2 boxes. If only a box was received, please wait for several business days or contact us for further help.

EN

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.


Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.


Warnings

- During assembly, keep all small parts out of the reach of children. It may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.


Parts List(EN)

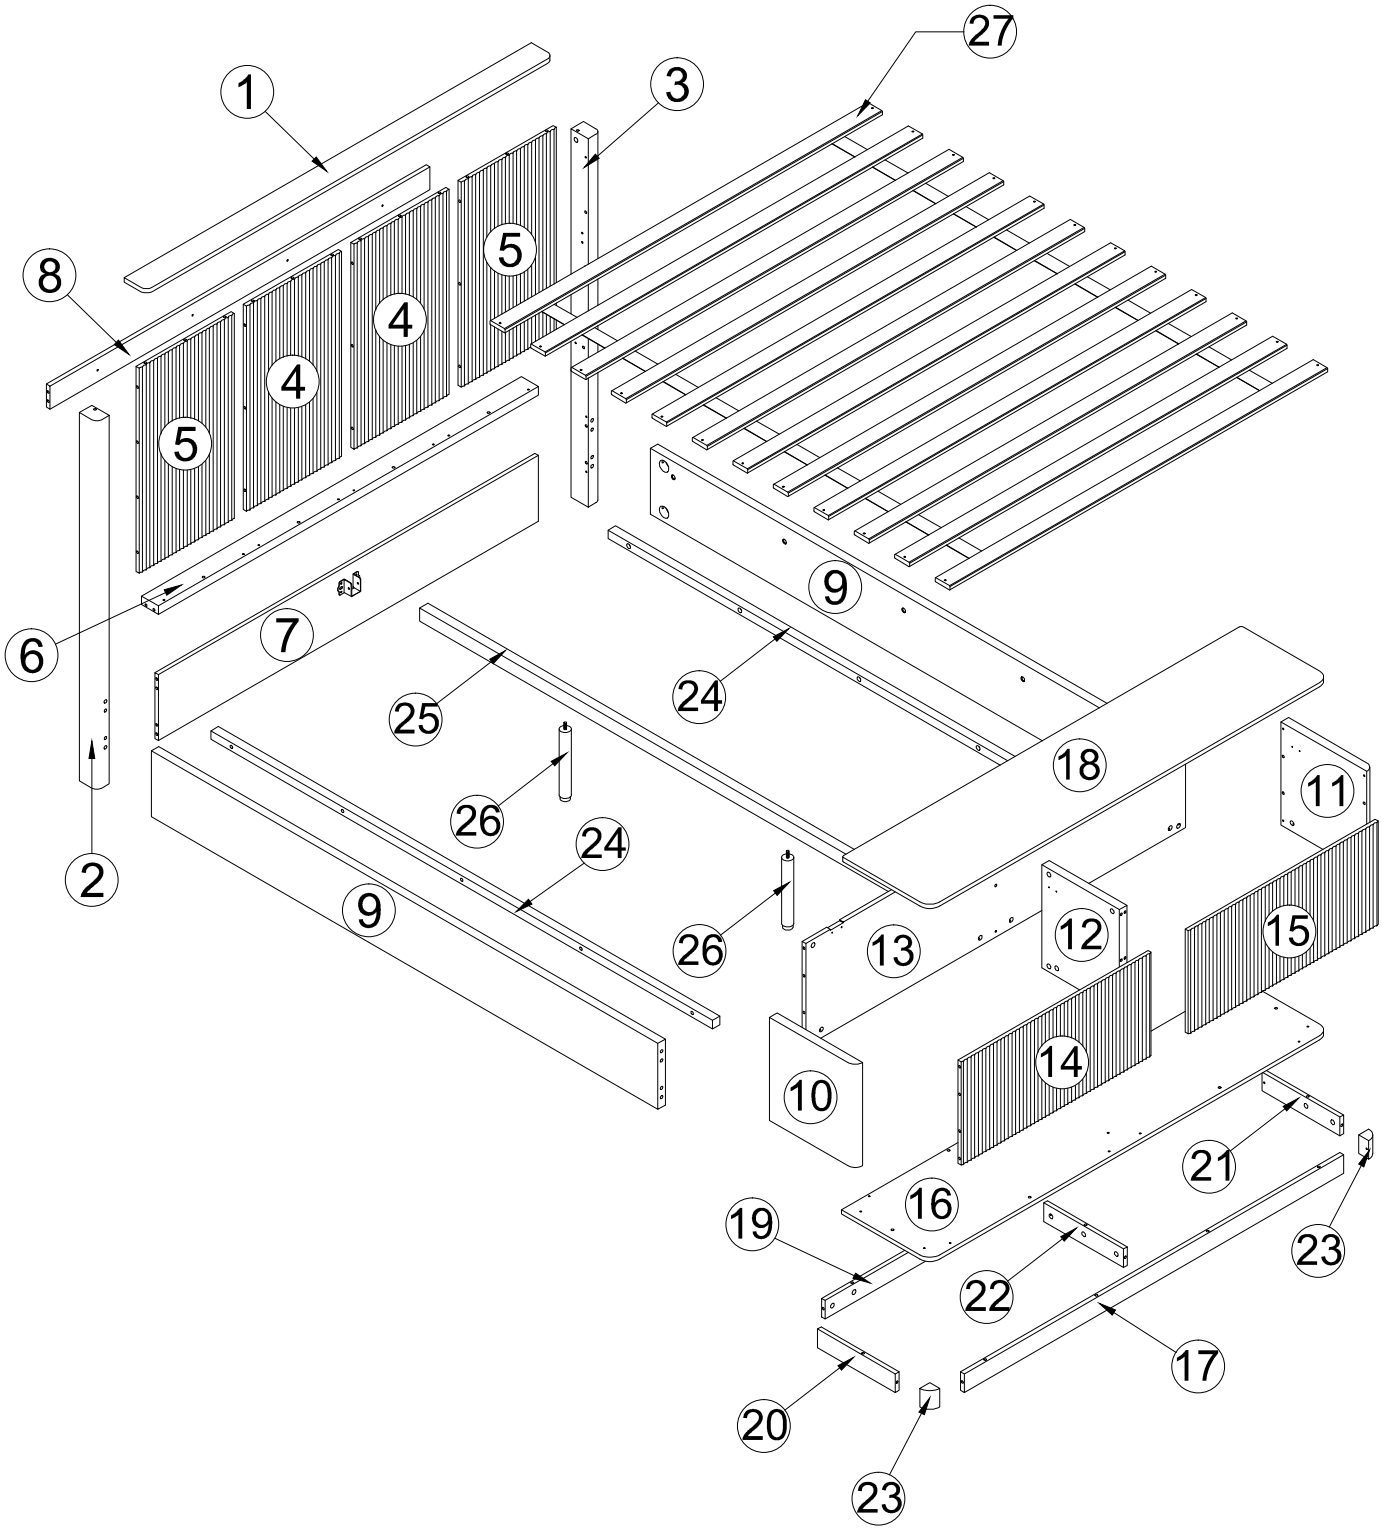


Parts List(EN)

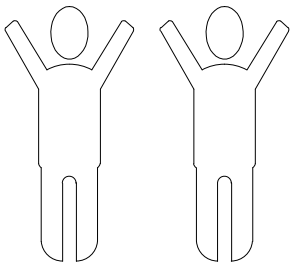


It takes two people to work together to assemble the product.

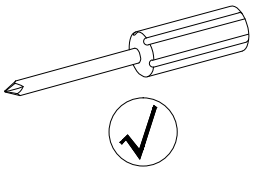


Recommended to use a screwdriver to assemble the product

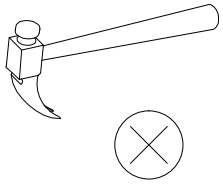



Do not use a hammer, it might damage the board.

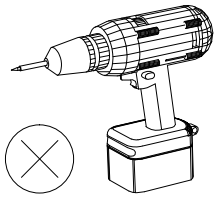














The use of an electric wrench is not recommended.If used, please set the torque to the minimum.

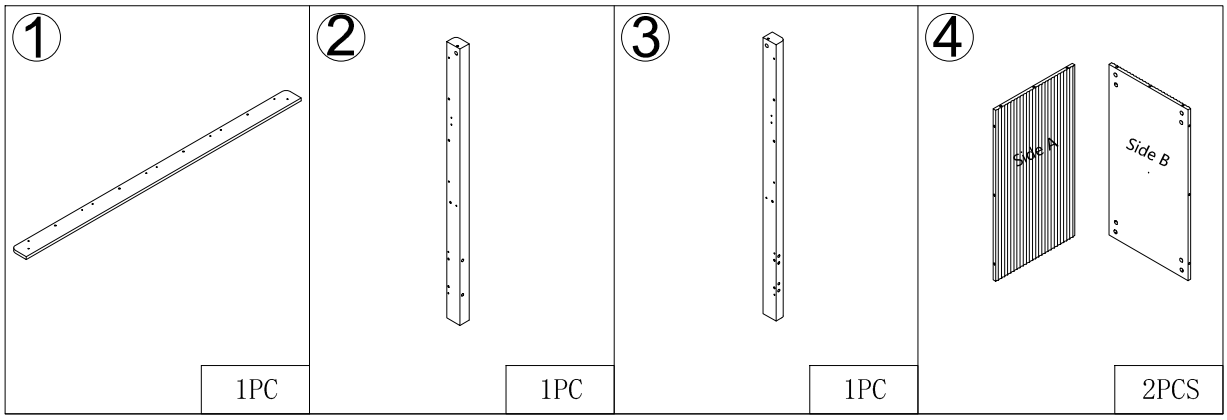












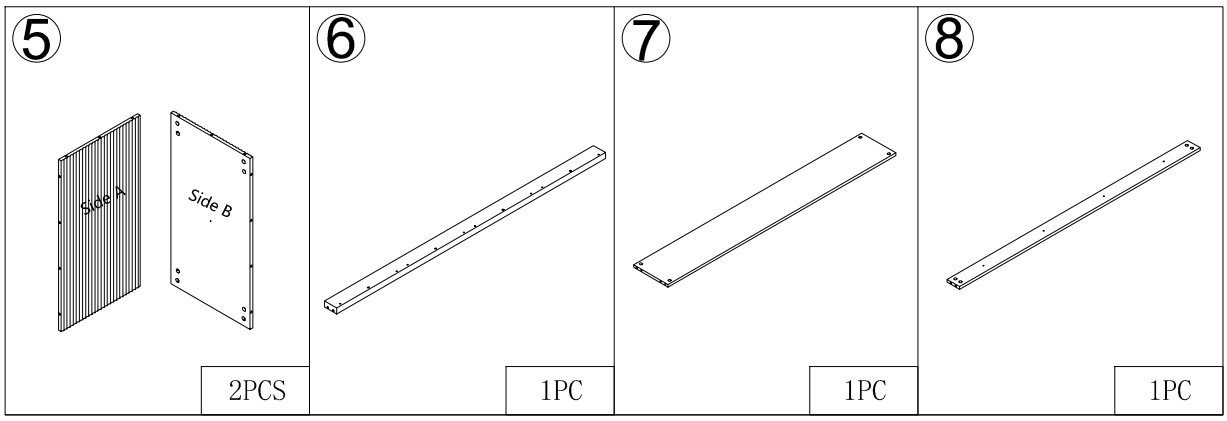


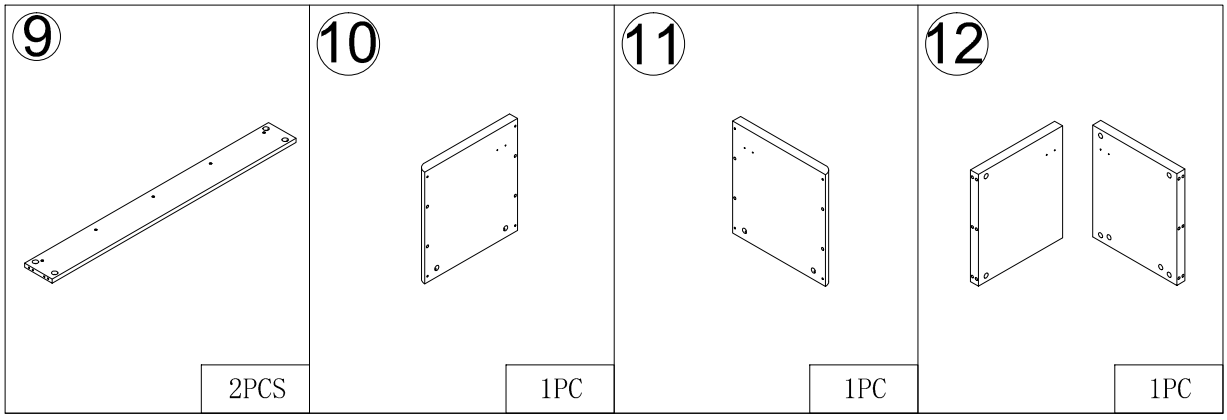







Parts List(EN)

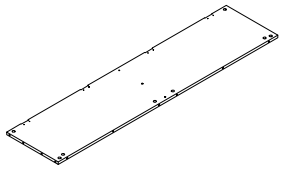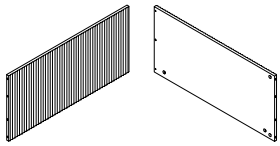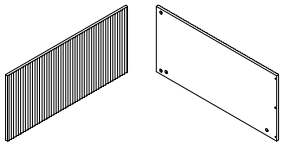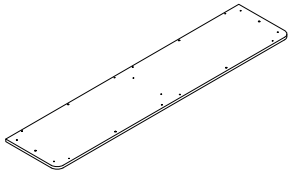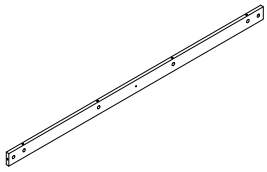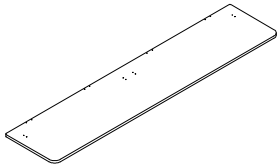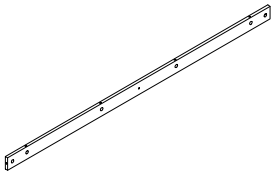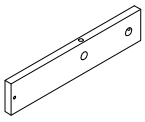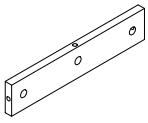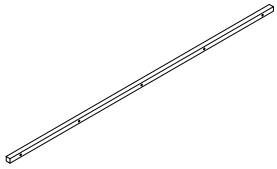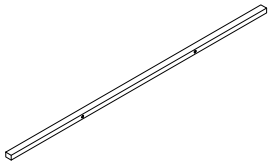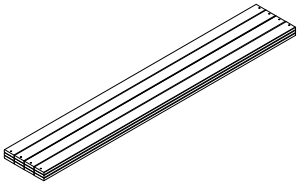13  1PC	14  1PC	15  1PC	16  1PC
17  1PC	18  1PC	19  1PC	20  1PC
21  1PC	22  1PC	23  2PCS	24  2PCS
25  1PC	26  2PCS	27  1PC	


Parts List(EN)

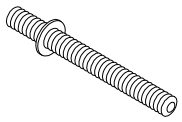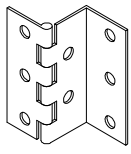No. A Quantity:79+4 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:91+5 Pcs Cam φ15 	No. C Quantity:14+4 Pcs Sticker Ø20 	No. D Quantity:38+2 Pcs Dowel 8*30mm 
No. E Quantity:6+1 Pcs Double-ended rod 6*64mm 	No. F Quantity:32+4 Pcs Screw M3.5*14mm 	No. G Quantity:6+1 Pcs Screw M3.5*25mm 	No. H Quantity:26+2 Pcs Screw M4*30mm 
No. I Quantity:8+1 Pcs Foot Pad Ø20 	No. J Quantity:2 Pcs Adjust The Foot 	No. K Quantity:8 Pcs Dowel 10*40mm 	No. L Quantity:8+1 Pcs Full tooth screw M8*80mm 
No. M Quantity:8 Pcs Gasket 29*15*7 	No. N Quantity:8 Pcs Hex nut M8 	No. O Quantity:1 Pc Wrench 	No. P Quantity:4 Pcs Hinge 

Parts List(EN)

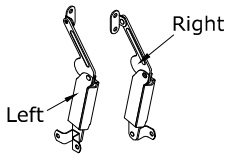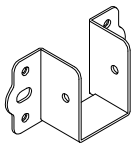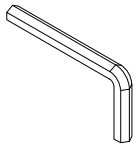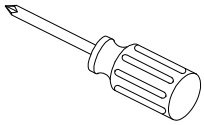No. Q Quantity:1 Sets Support rod 	No. R Quantity:2 Pcs U-shaped hardware 86*45*30 	No. S Quantity:10+1 Pcs Screw M8*35mm 	No. T Quantity:1 Pc Allen Key 5# 
No. U Quantity:1 Pc Screwdriver 	No. V Quantity:2+3 Pcs Rubber particles Ø10 	No. W Quantity:4 Pcs Glove 	

Instructions For Fastening
CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

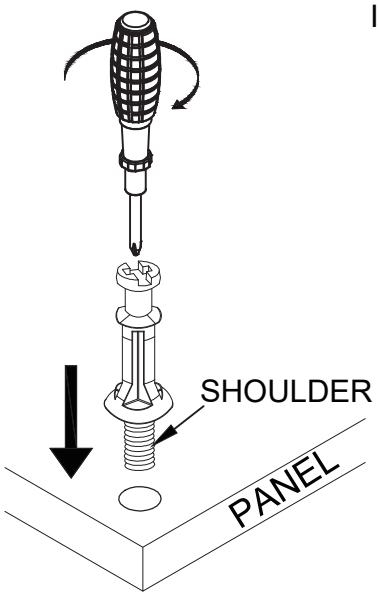

Place Cam-bolt on pre-drilled hole and screw in vertically

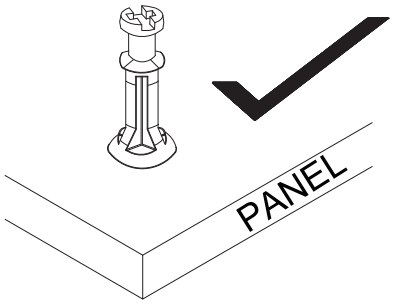


Shoulder is flushed (on the same level) with the panel.

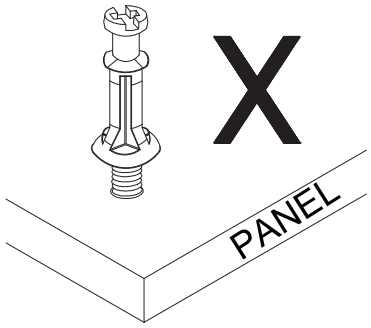

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

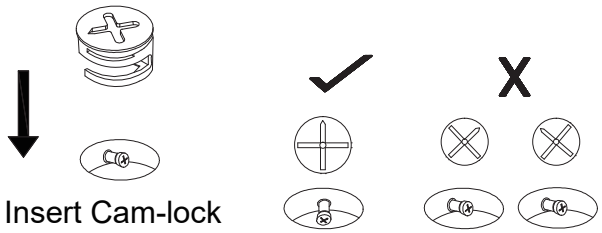


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

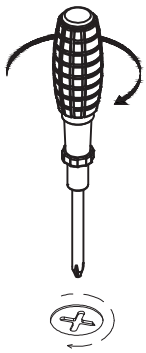



Use a Flat-head Screwdriver to turn Cam-lock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4 of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.

STEP 1

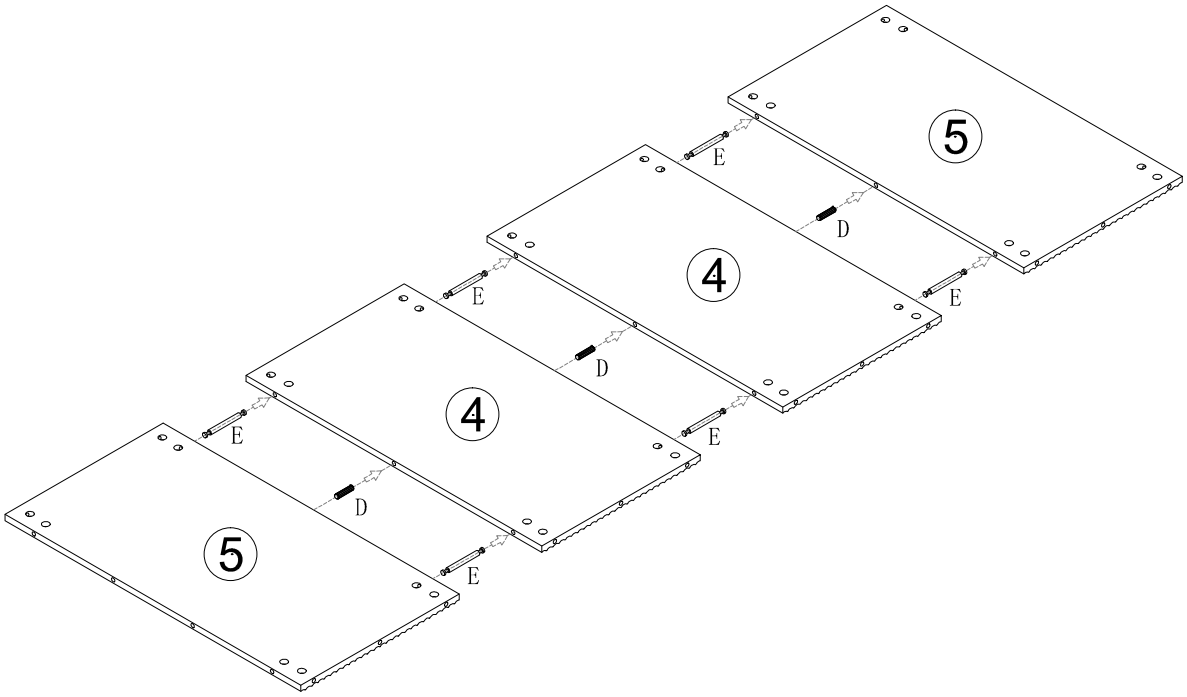


	Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

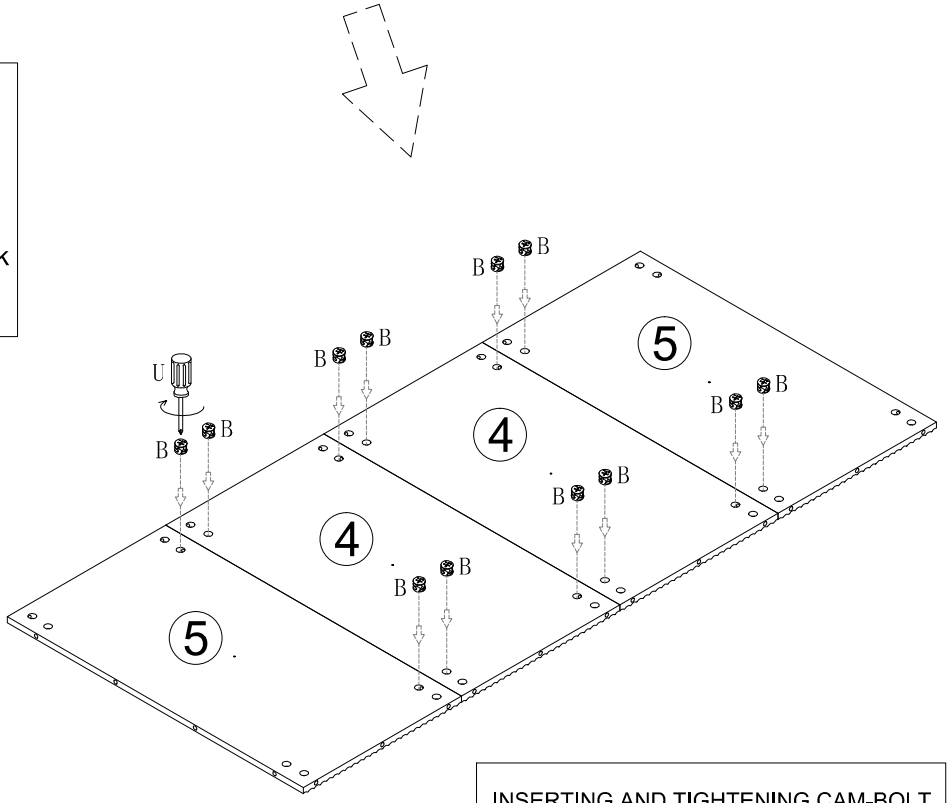


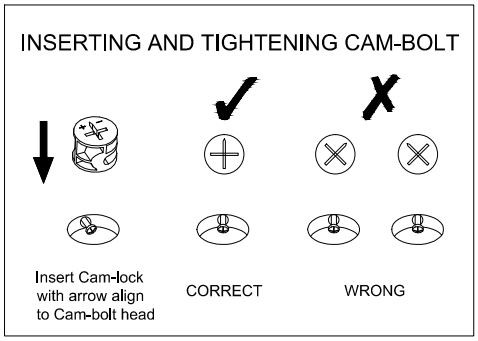


	B×12PCS
	D×3PCS
	E×6PCS


STEP 2

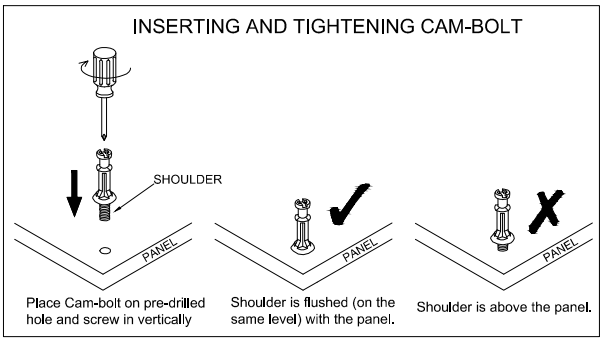

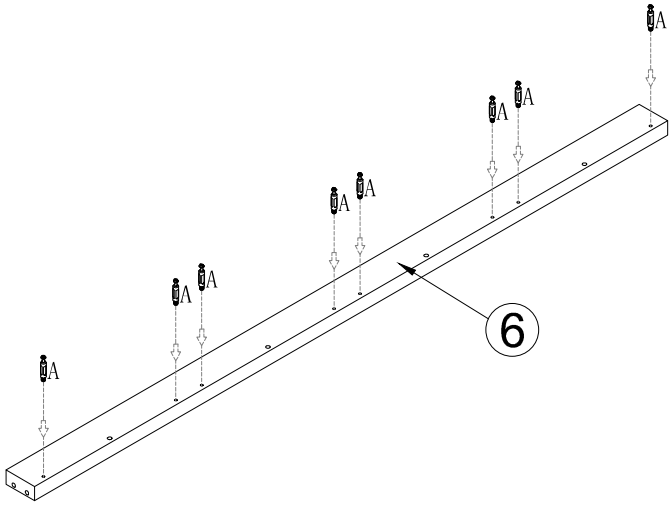

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

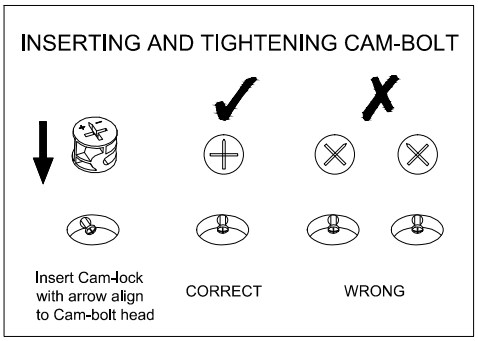


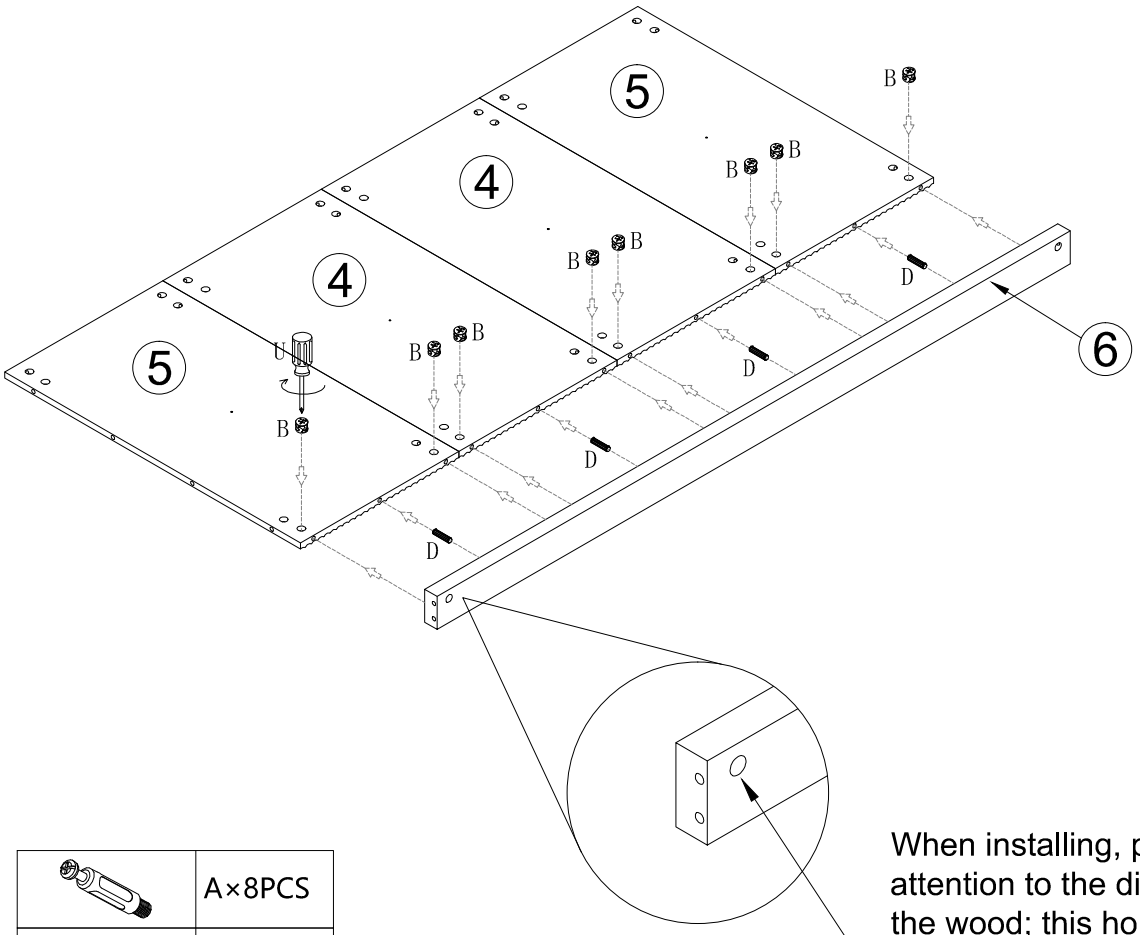


When installing, please pay attention to the direction of the wood; this hole should be facing upwards.


	A×8PCS
	B×8PCS
	D×4PCS

STEP 3

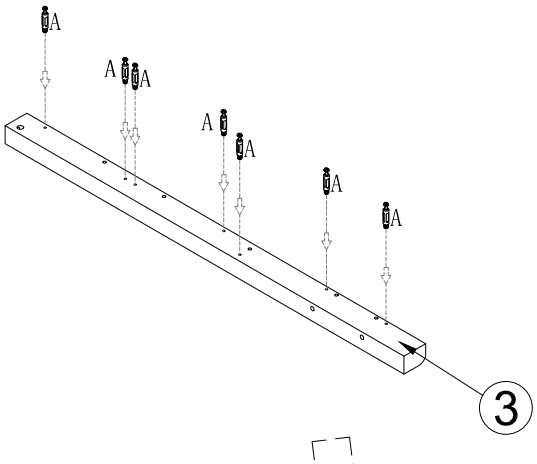

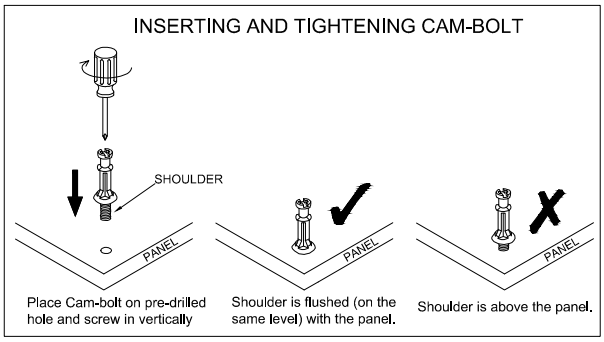



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

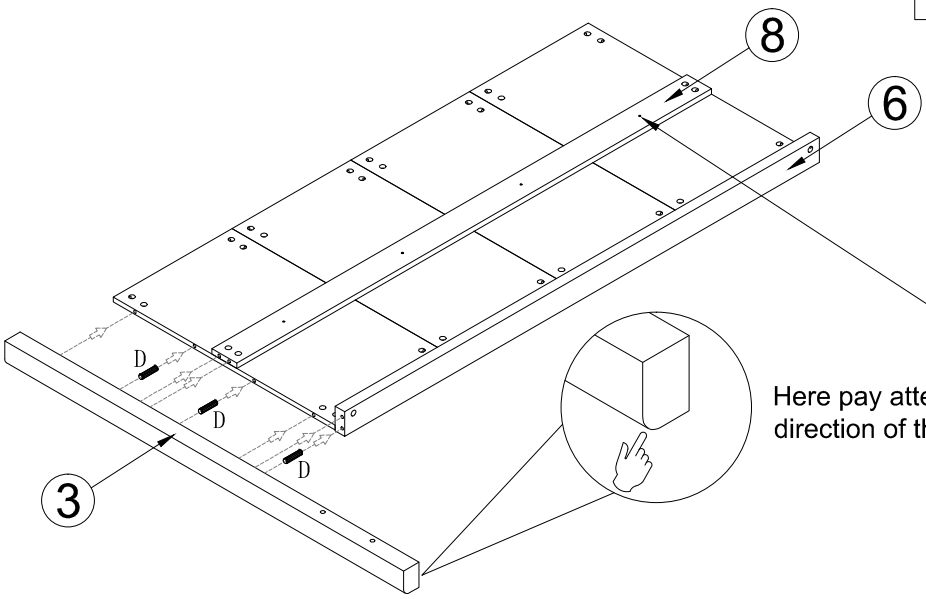

Do not secure this hole at this stage; afterinstallation, secure it in a later step.

Here pay attention to the direction of the round corner.

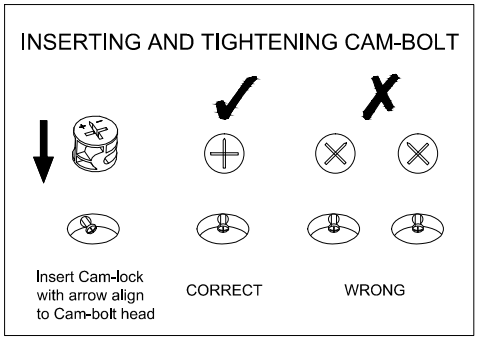


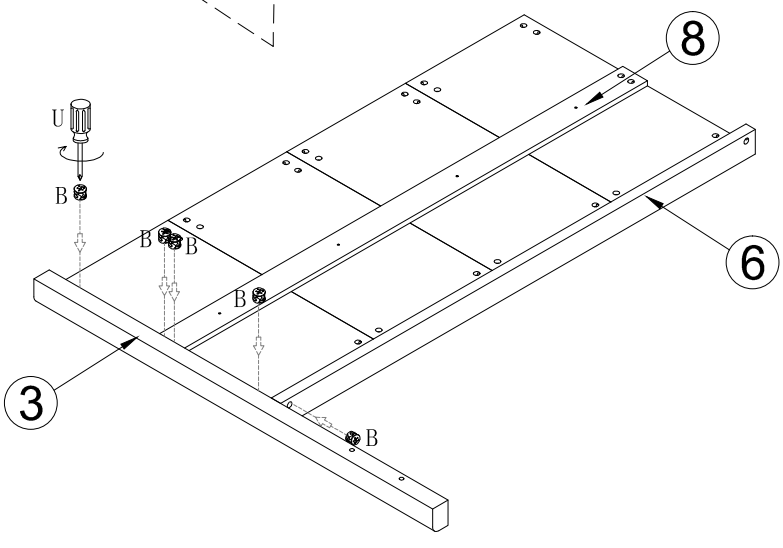


	A×7PCS
	B×5PCS
	D×3PCS


STEP 4


Note: After installation, the narrow edge of the hole margin should face upwards.

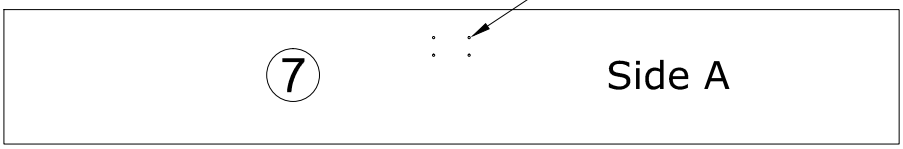

Note that when assembling the No.7 plate, the middle locating hole is facing down.

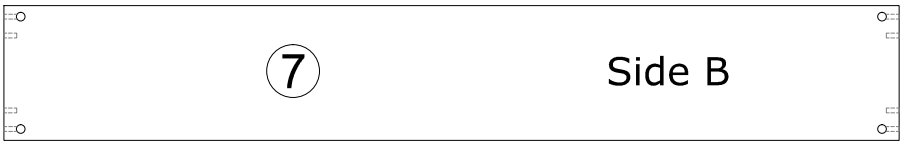


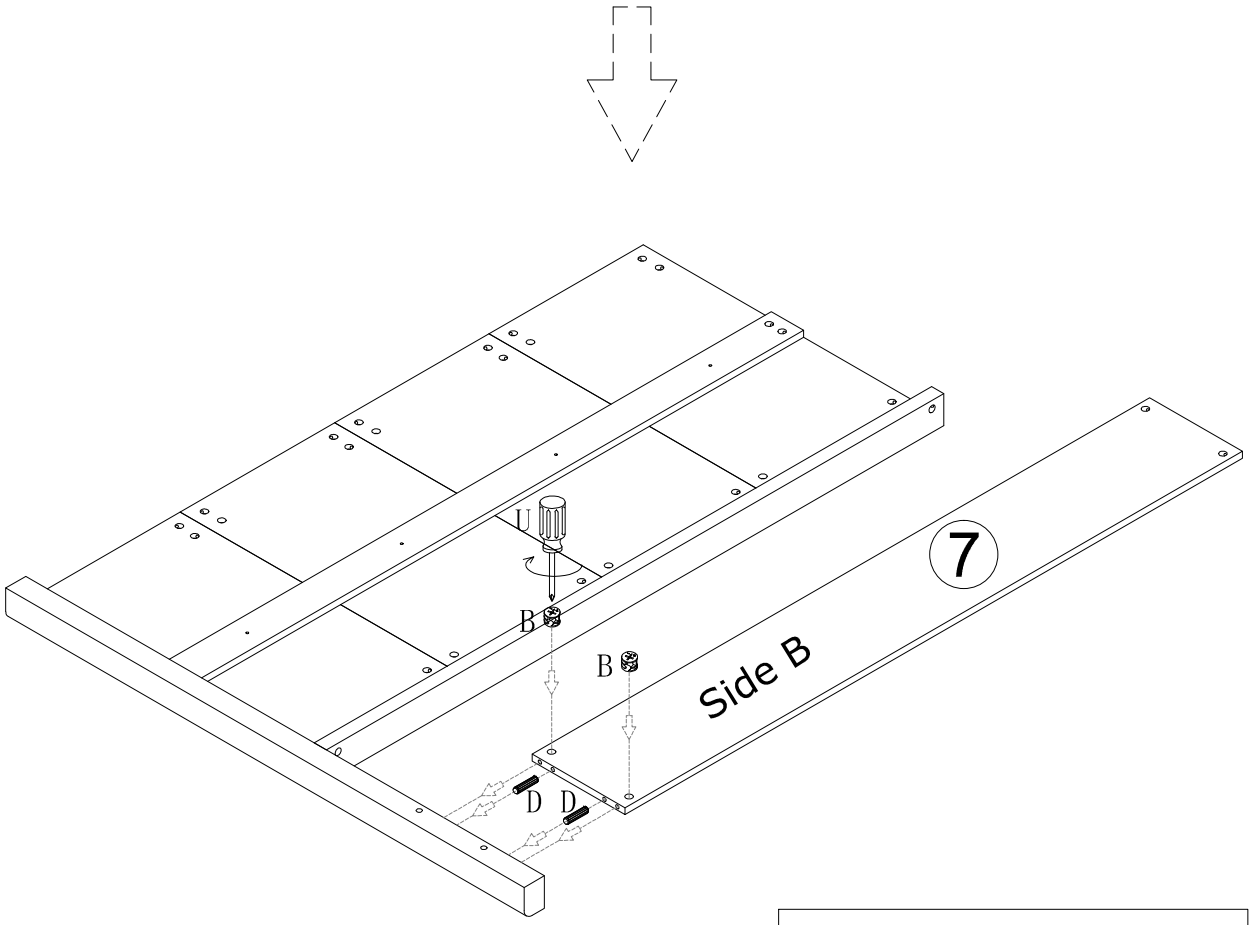


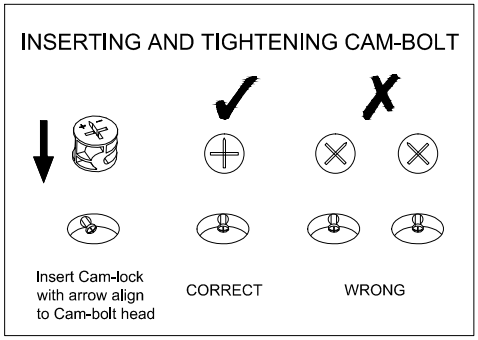


	B×2PCS
	D×2PCS

STEP 5

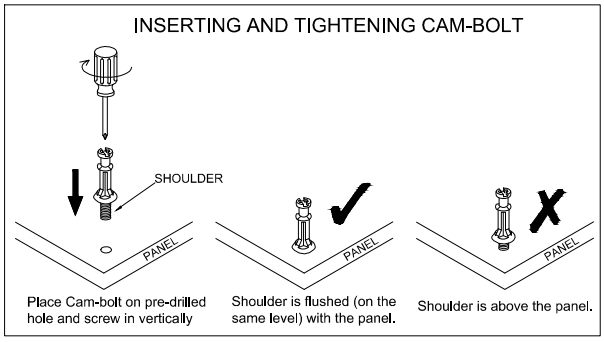


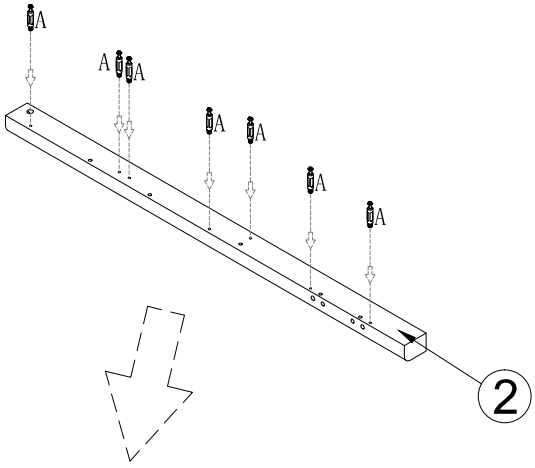



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

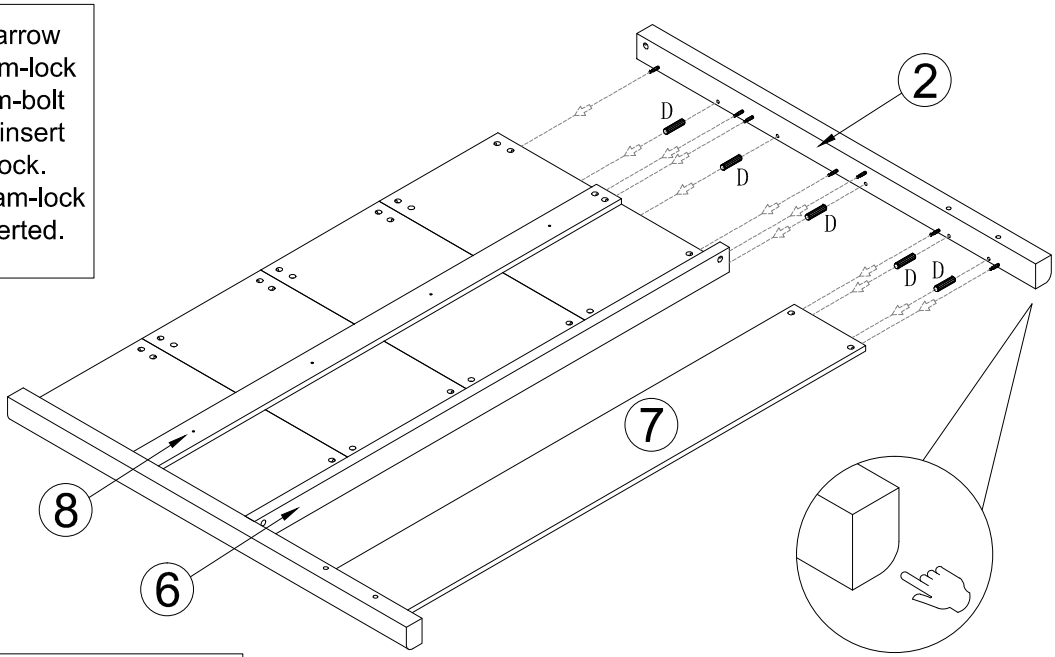


Here pay attention to the direction of the rounded corner.

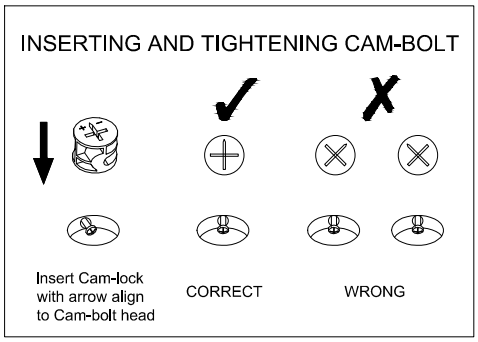


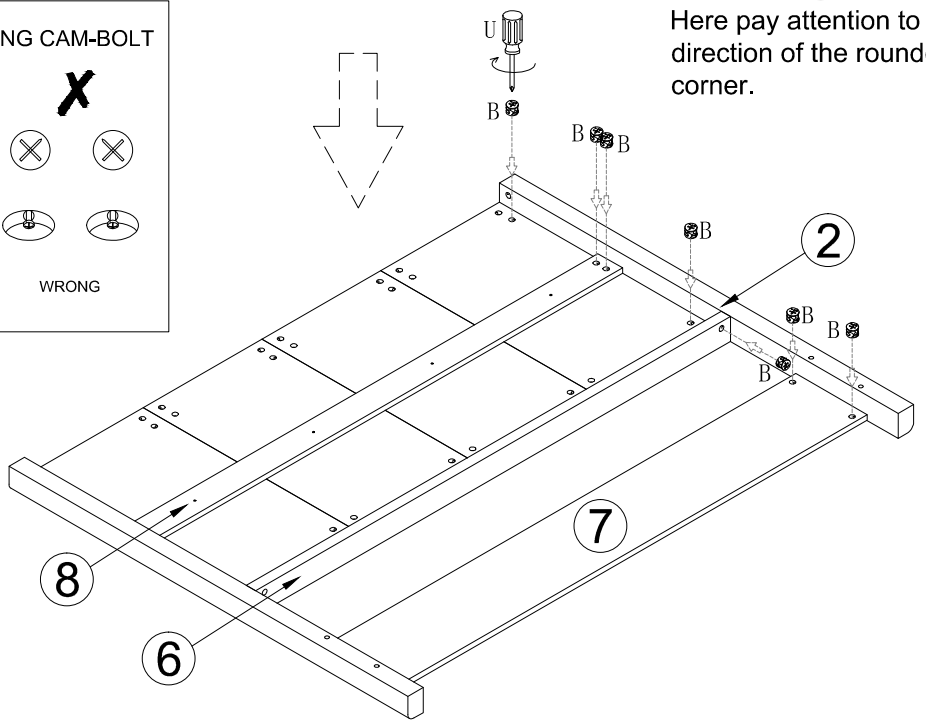



	A×7PCS
	B×7PCS
	D×5PCS


STEP 6

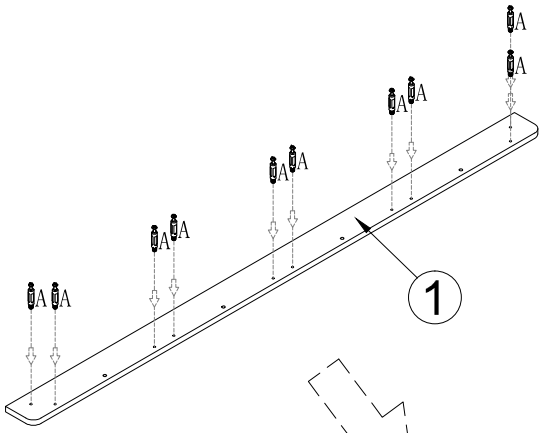


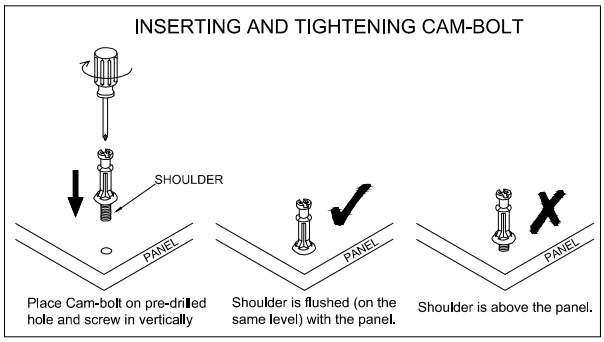

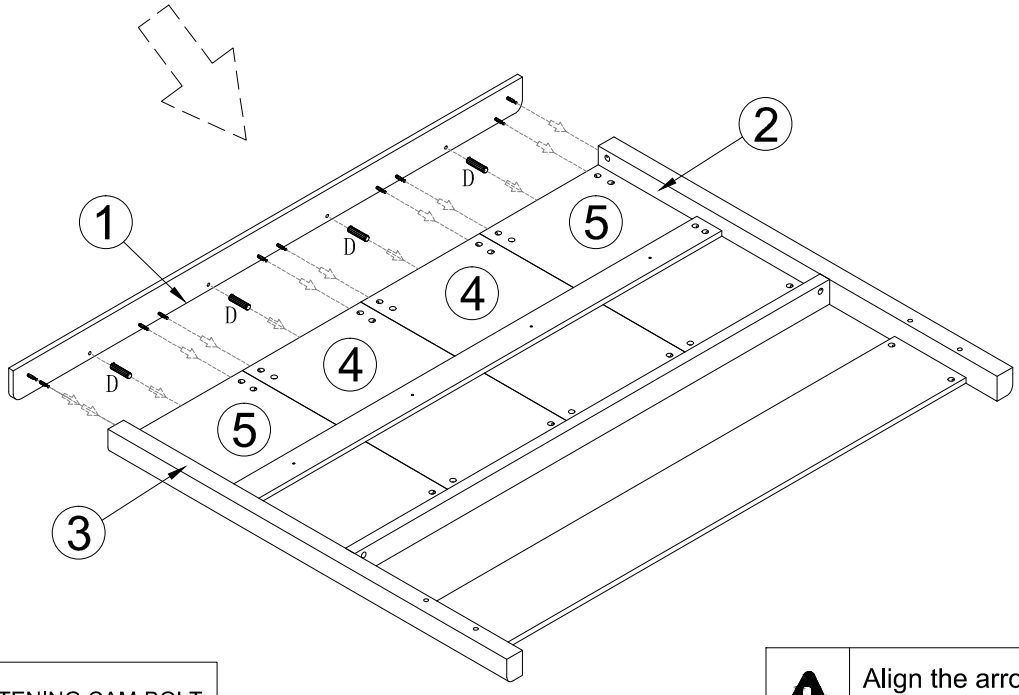


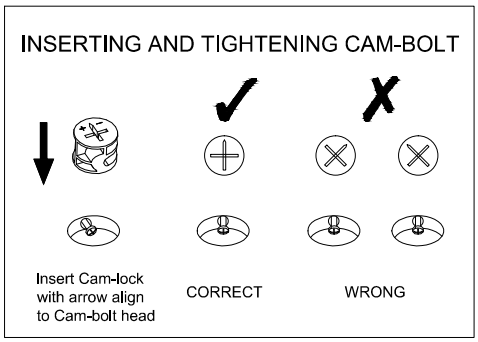

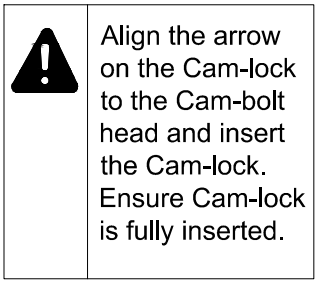


	A×10PCS
	B×10PCS
	D×4PCS


STEP 7

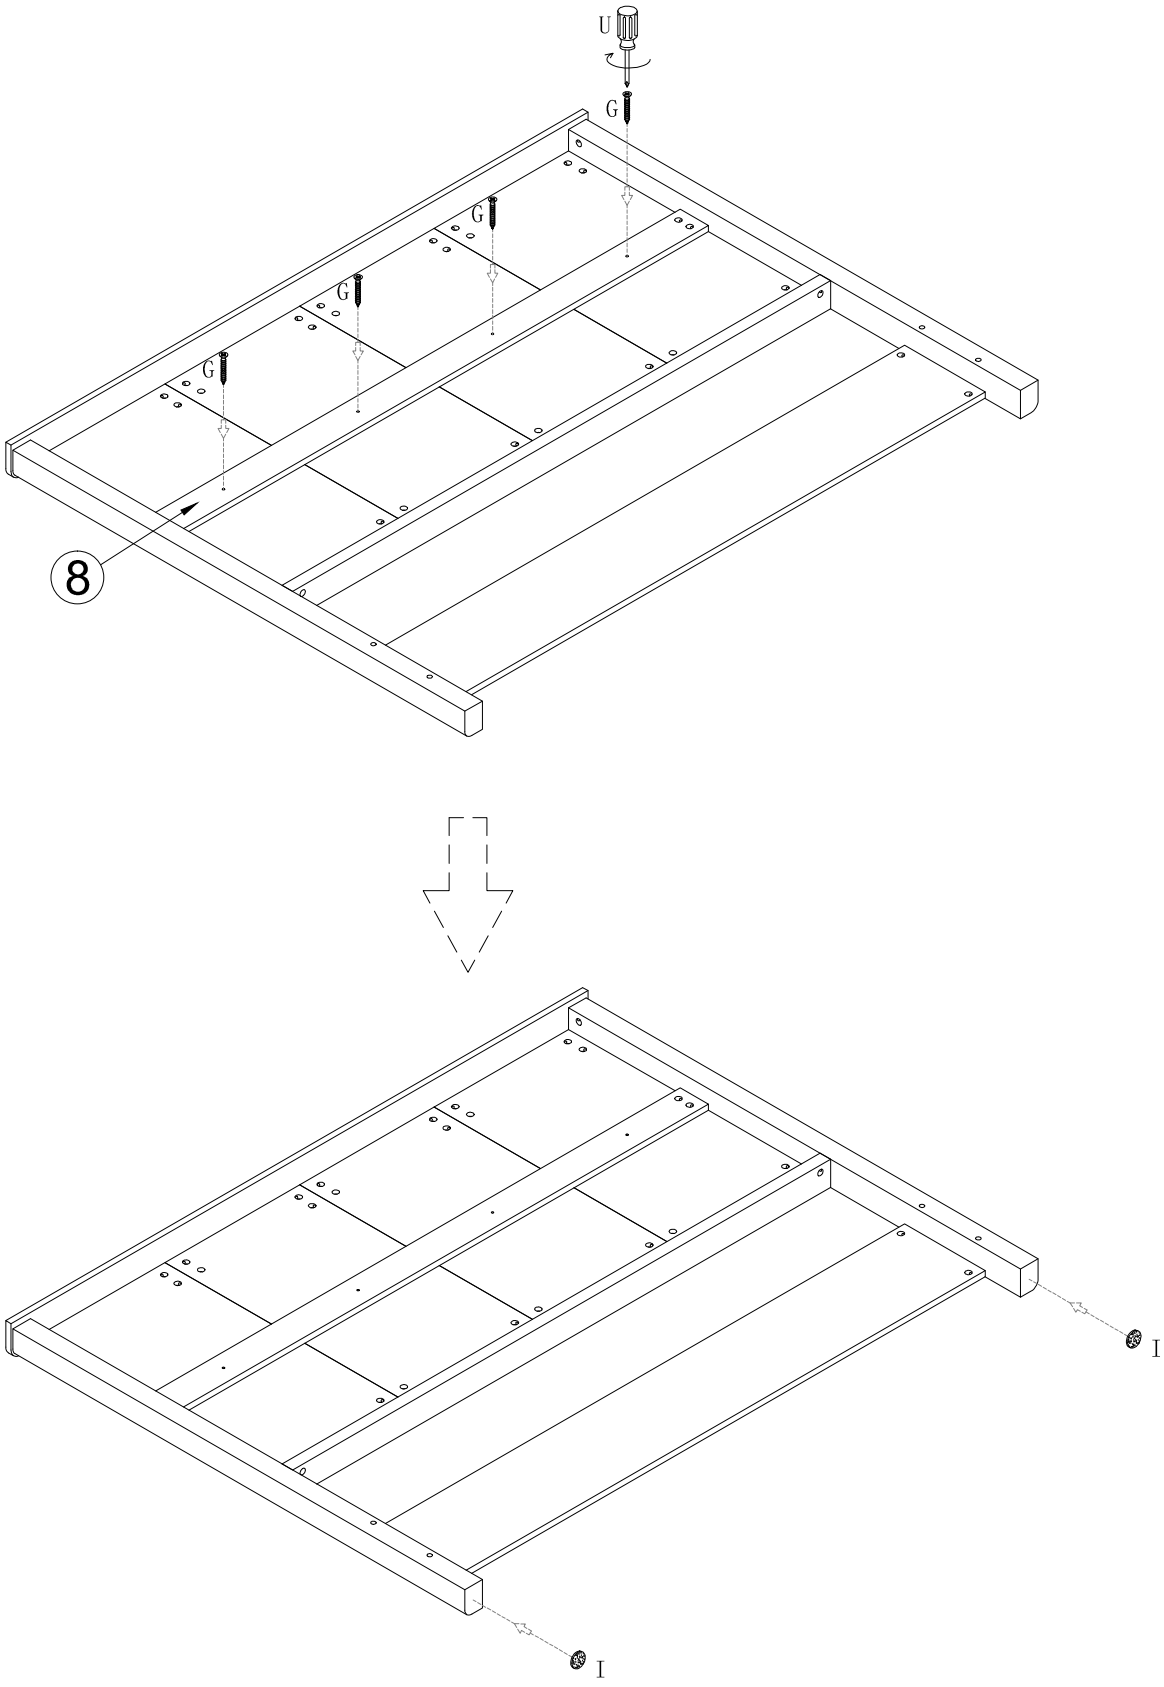


	G×4PCS
	I×2PCS

STEP 8

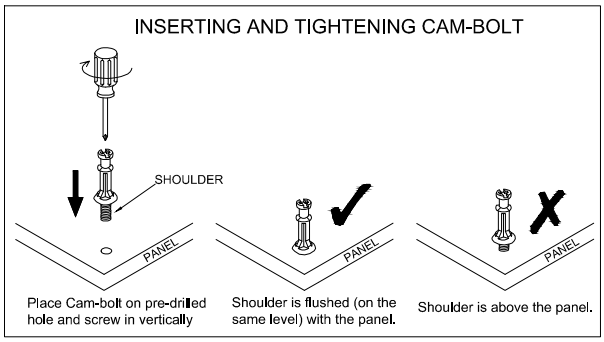


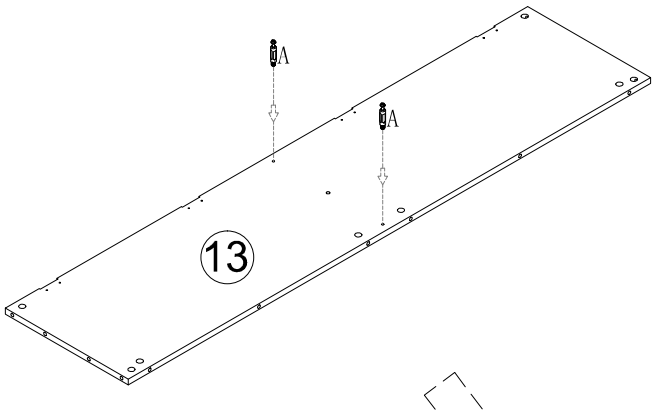





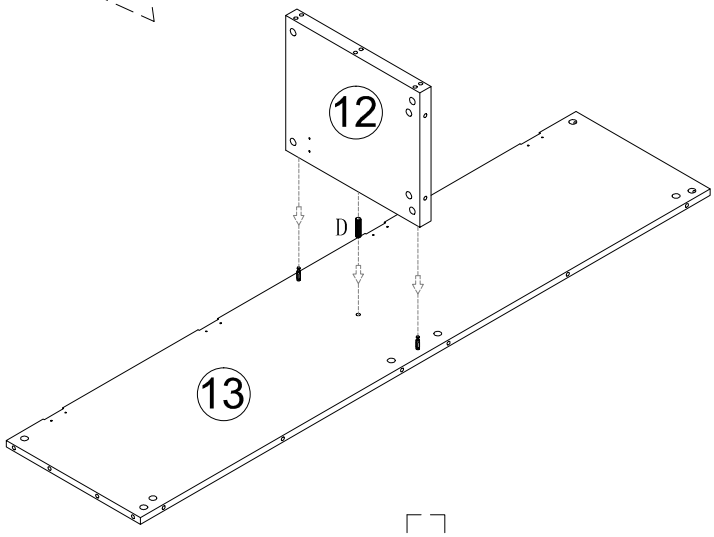

Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.




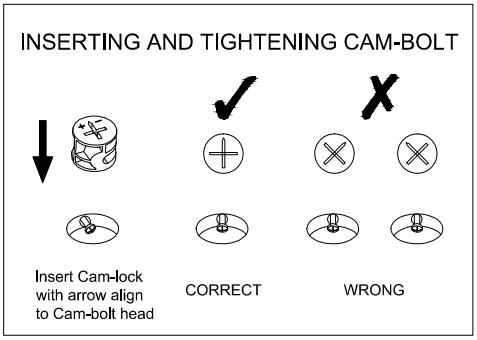


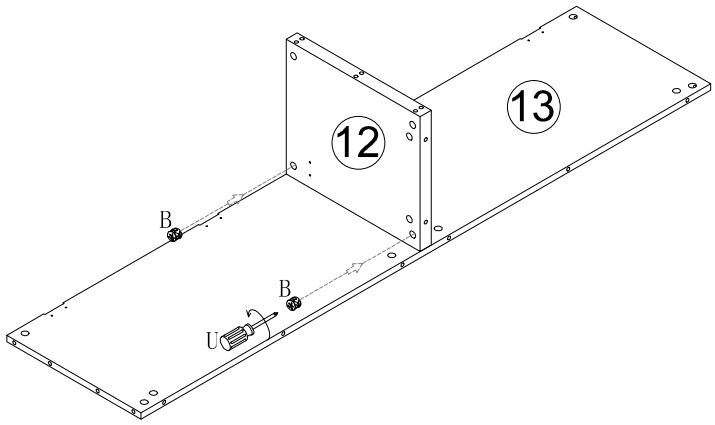


	A×2PCS
	B×2PCS
	D×1PCS


STEP 9

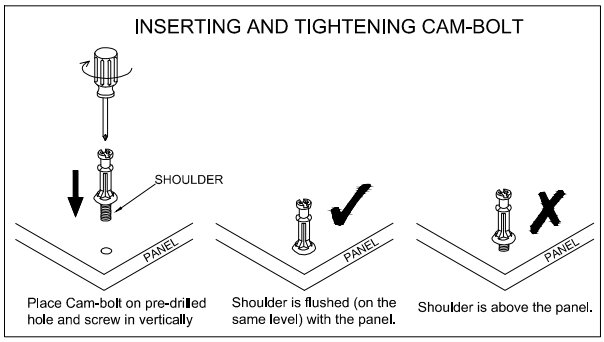

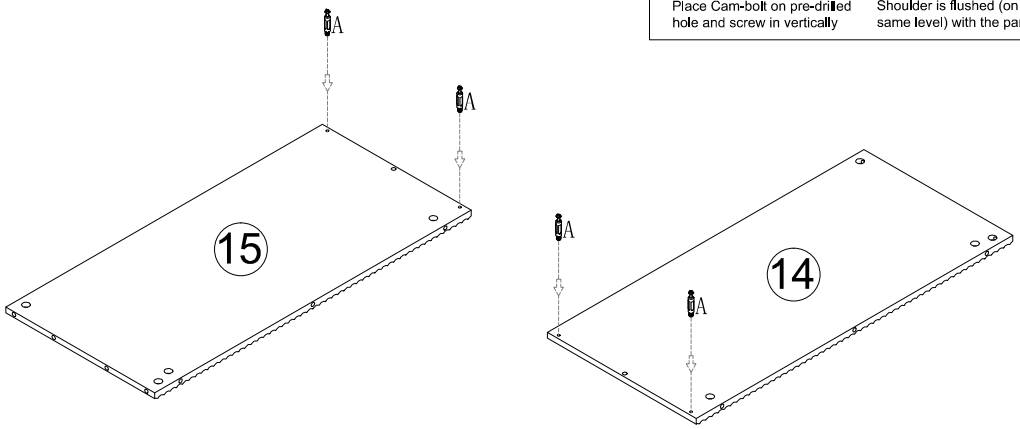


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

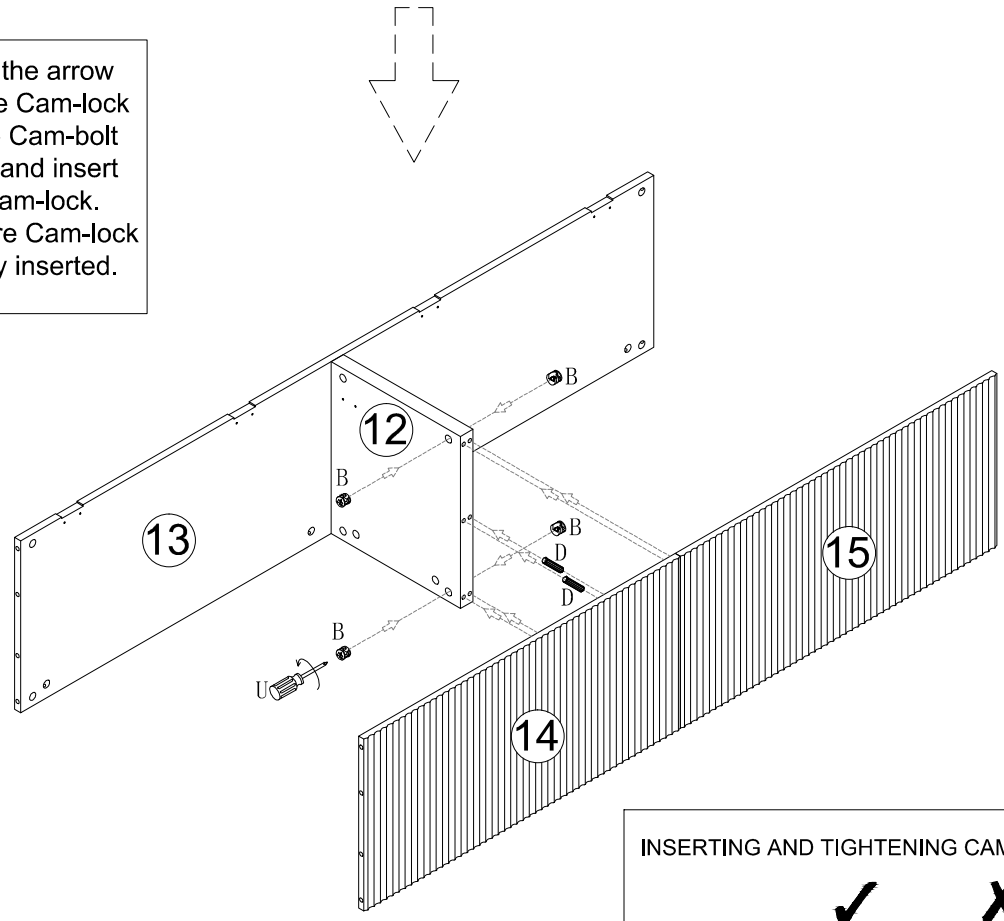


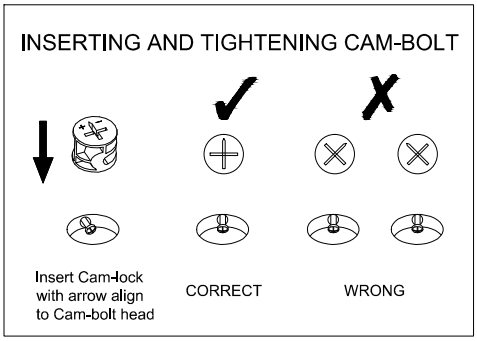


	A×4PCS
	B×4PCS
	D×2PCS


STEP 10

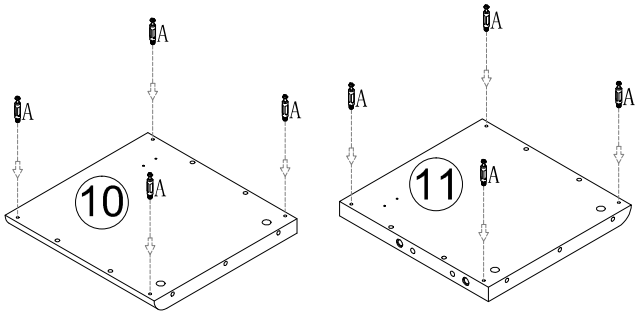


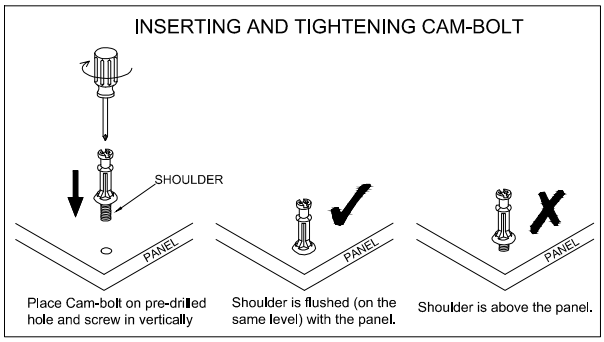


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

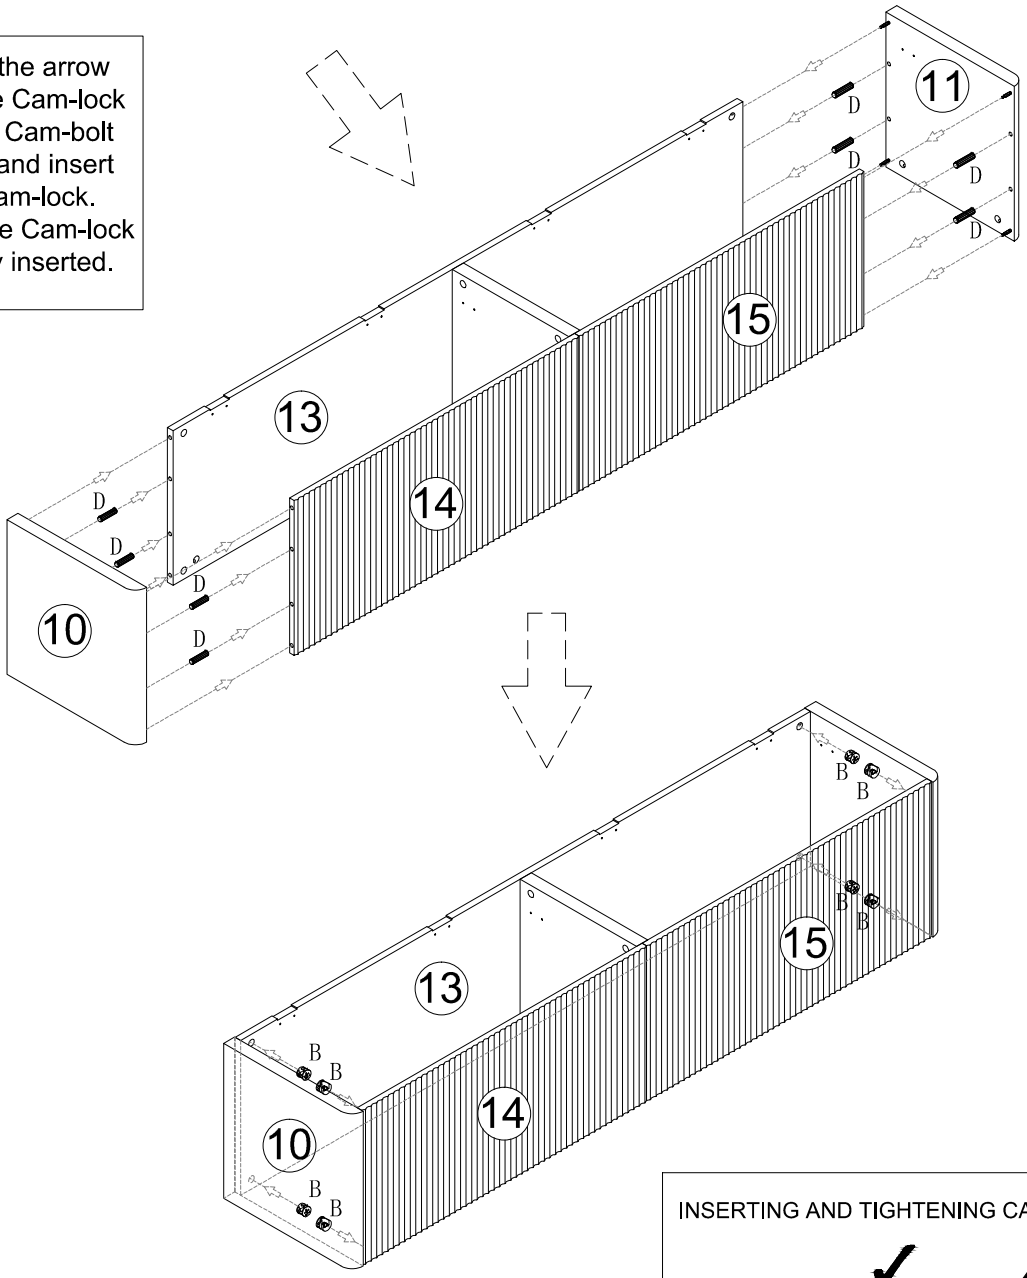


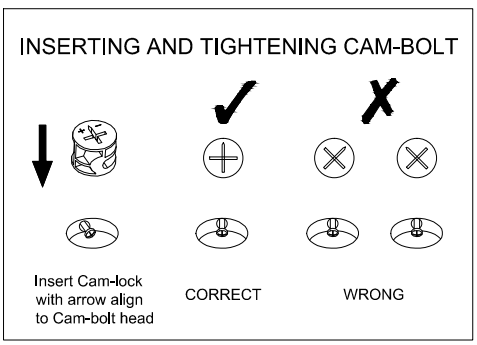



	A×8PCS
	B×8PCS
	D×8PCS

STEP 11

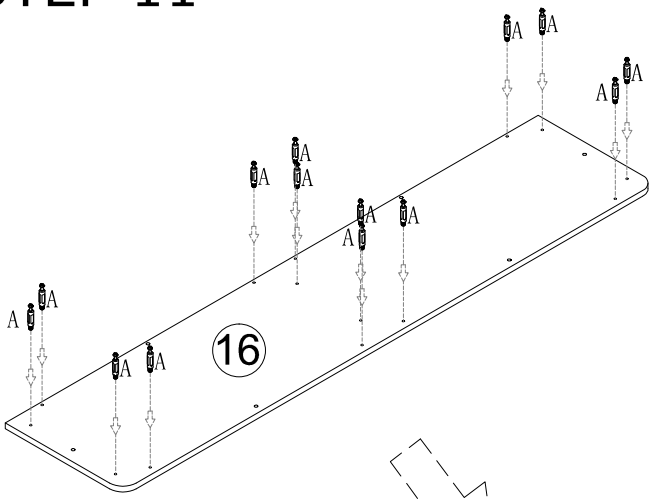


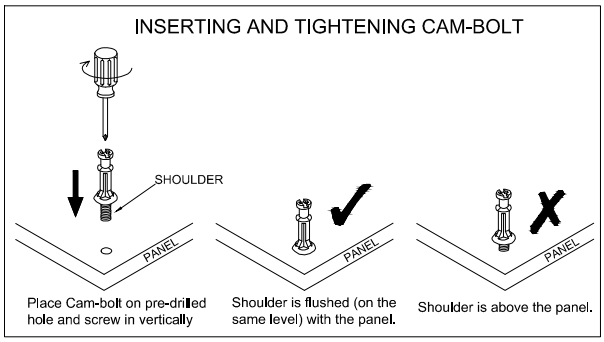

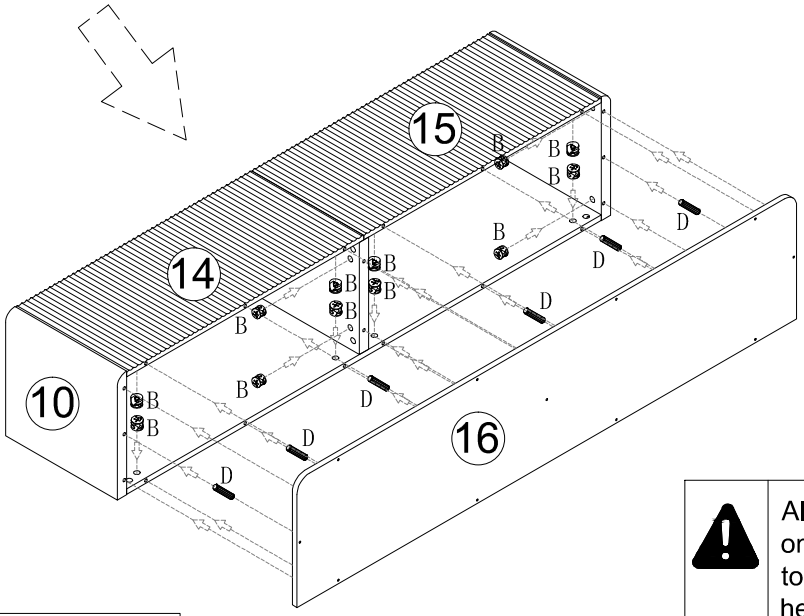

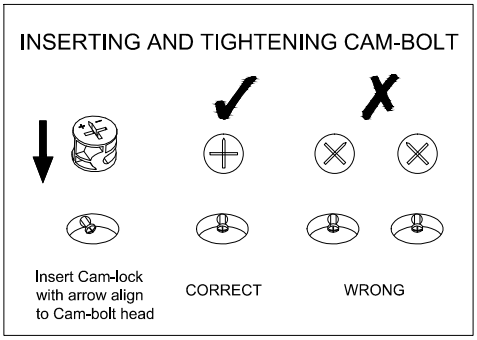



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

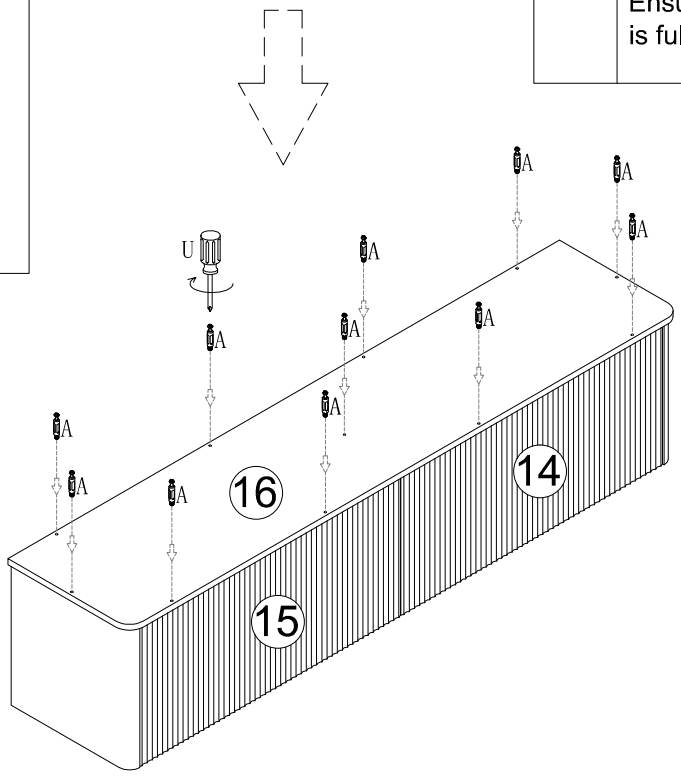


	A×25PCS
	B×14PCS
	D×6PCS


STEP 12

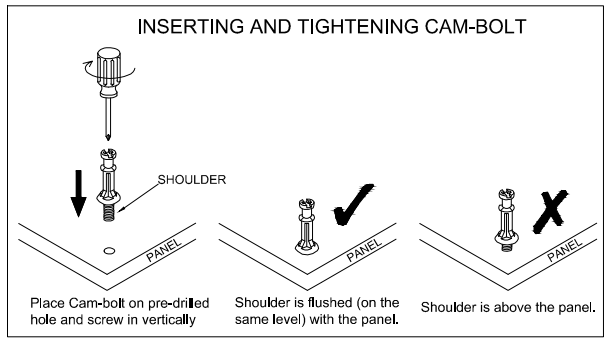


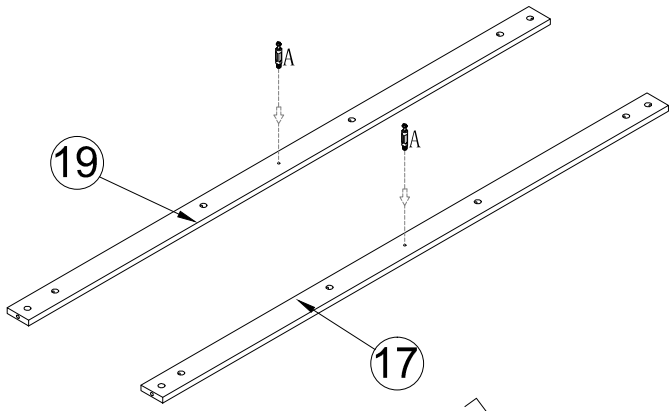


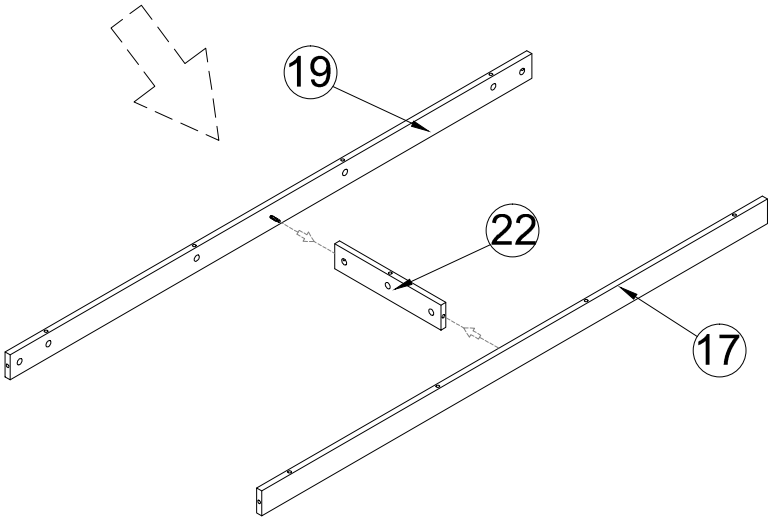


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

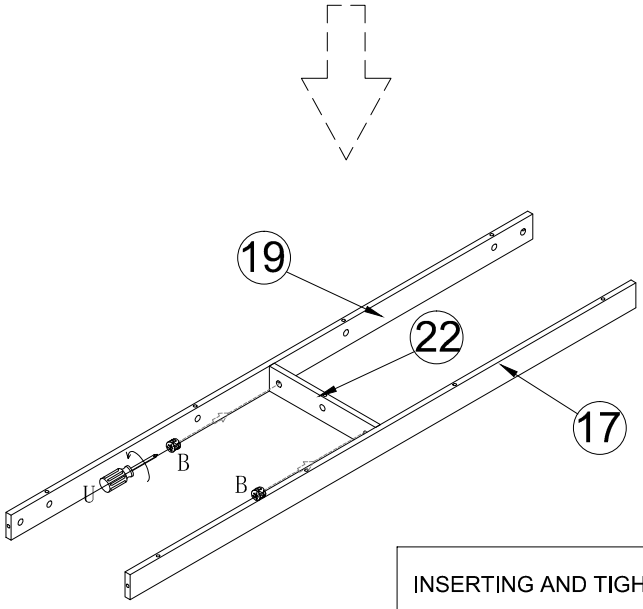


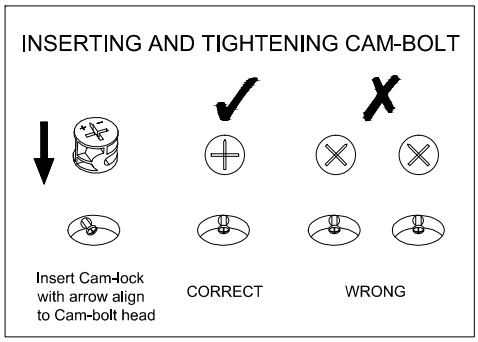



	A×2PCS
	B×2PCS

STEP 13

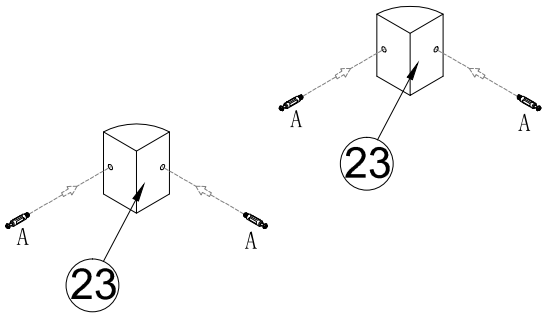


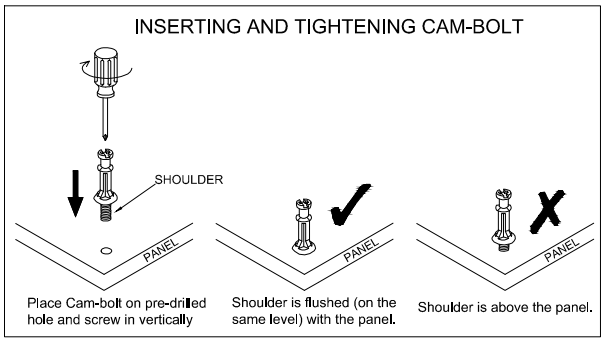


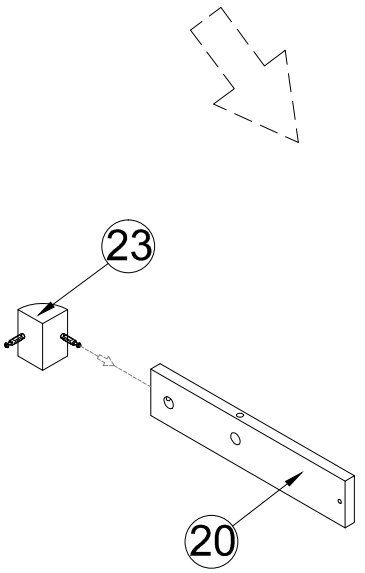


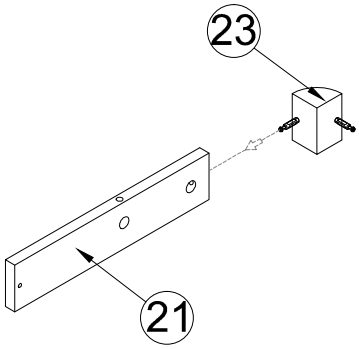


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

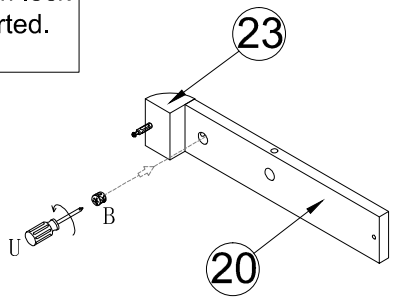


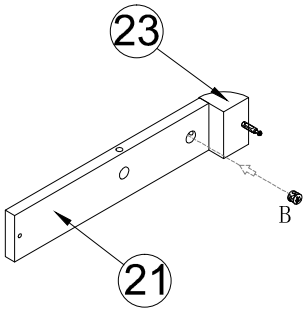


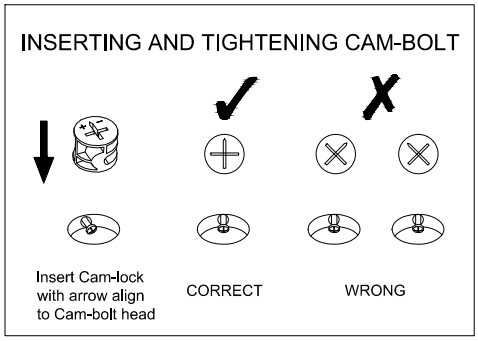


	A×4PCS
	B×2PCS


STEP 14

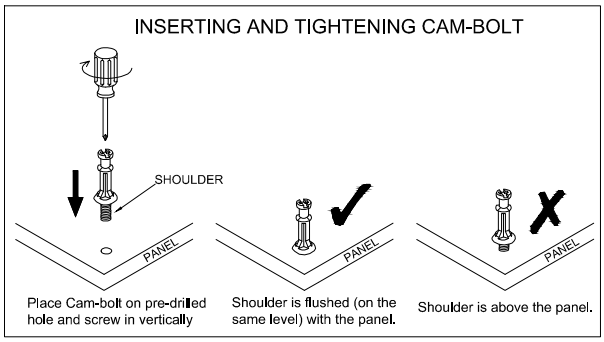


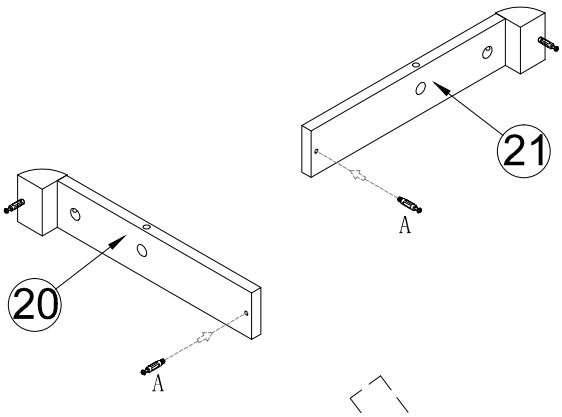

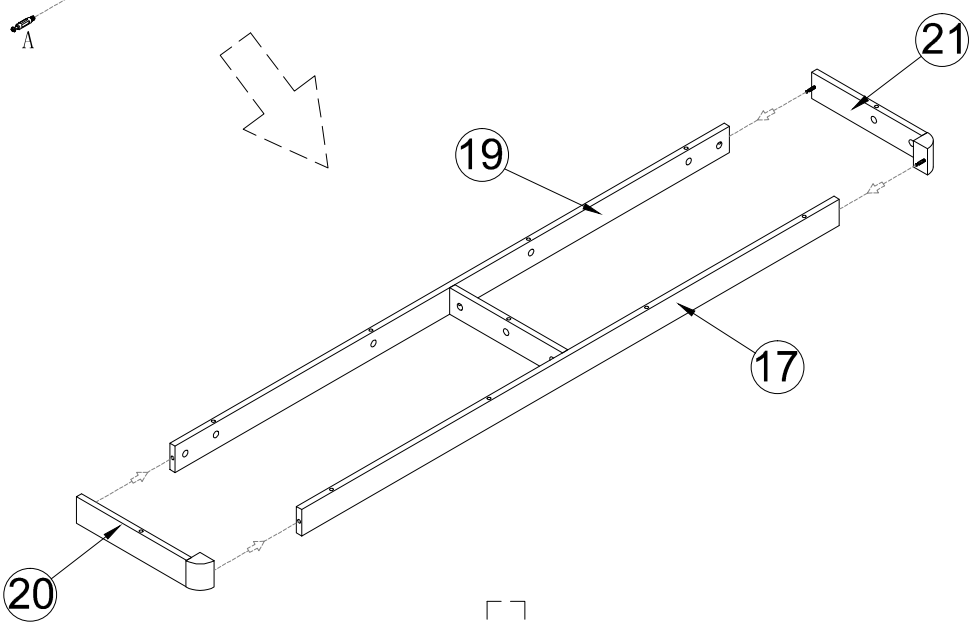


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

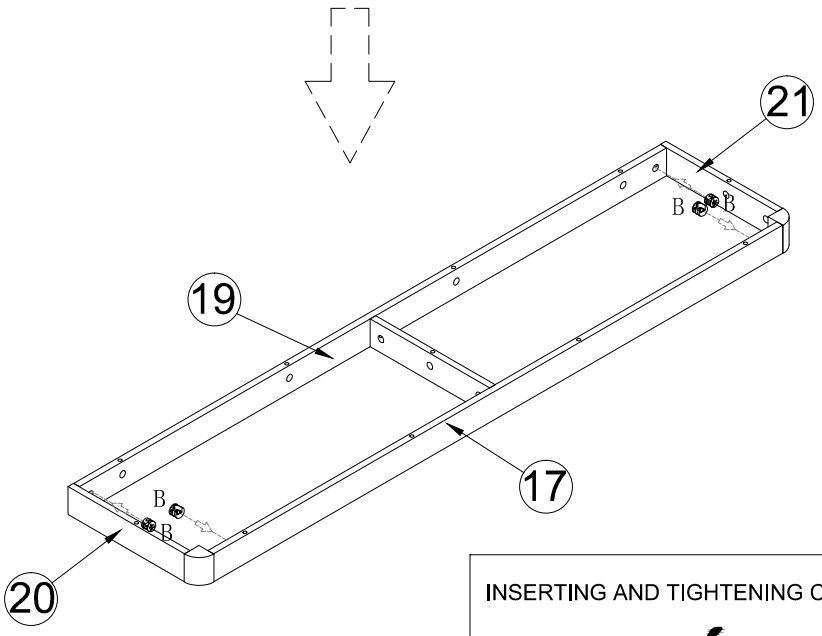

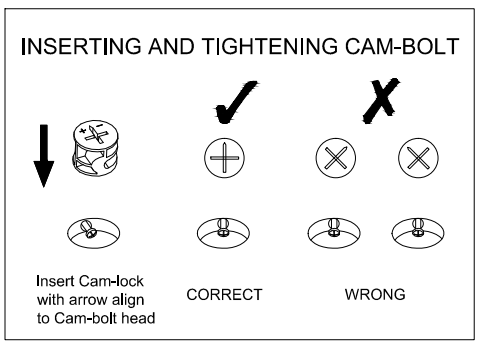

	A×2PCS
	B×4PCS


STEP 15

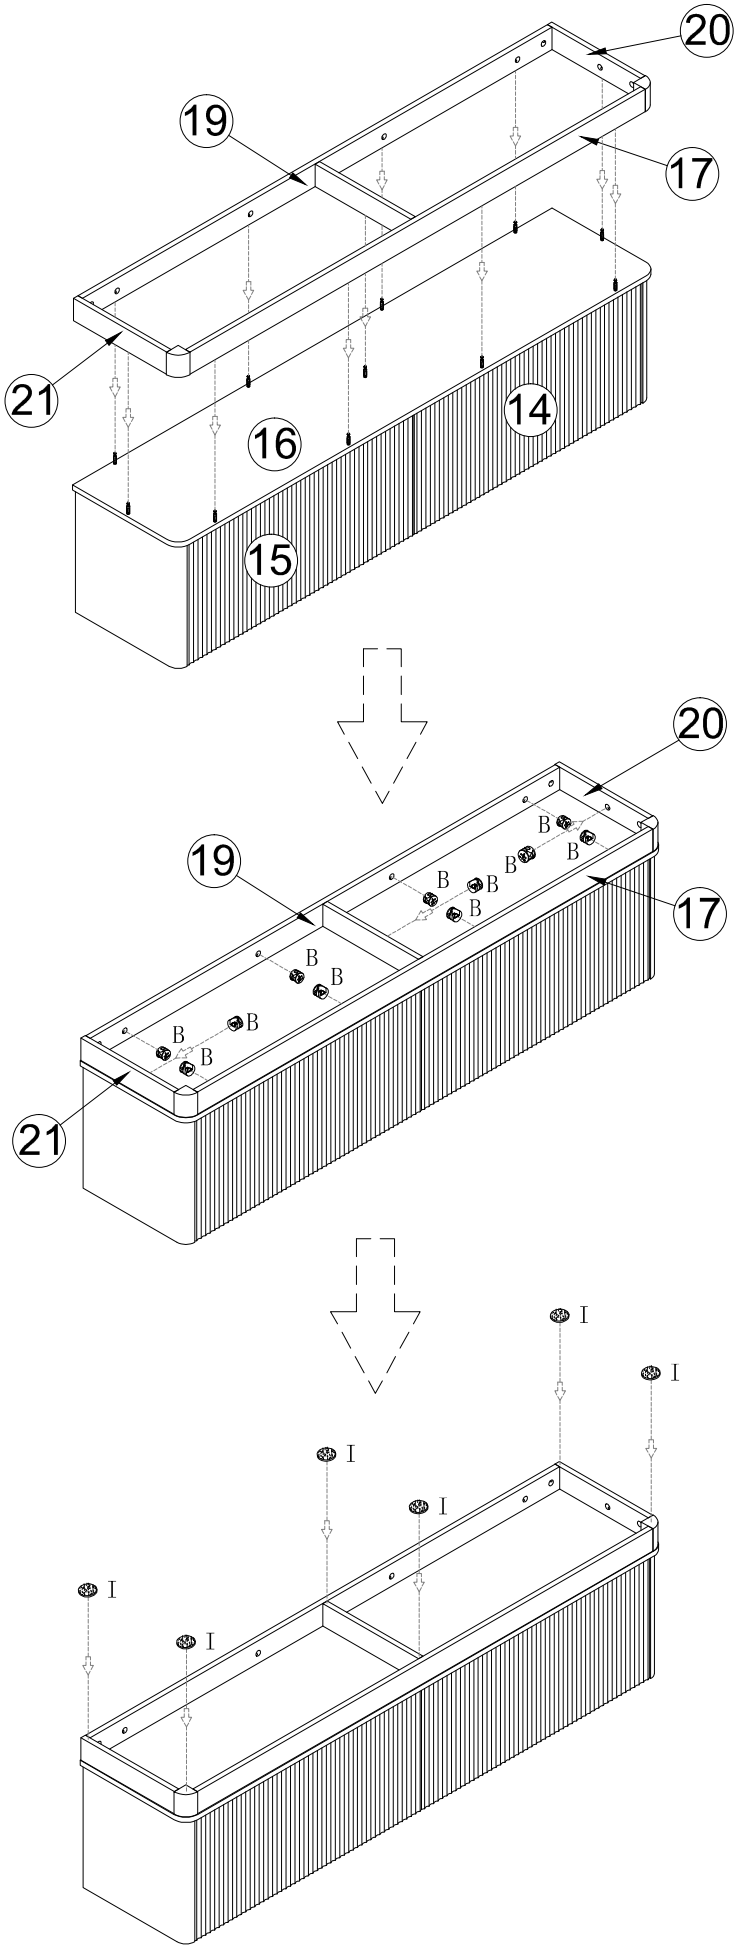


	B×11PCS
	I×6PCS


STEP 16

Note: When you get to this step, you will need to flip the cabinet over.

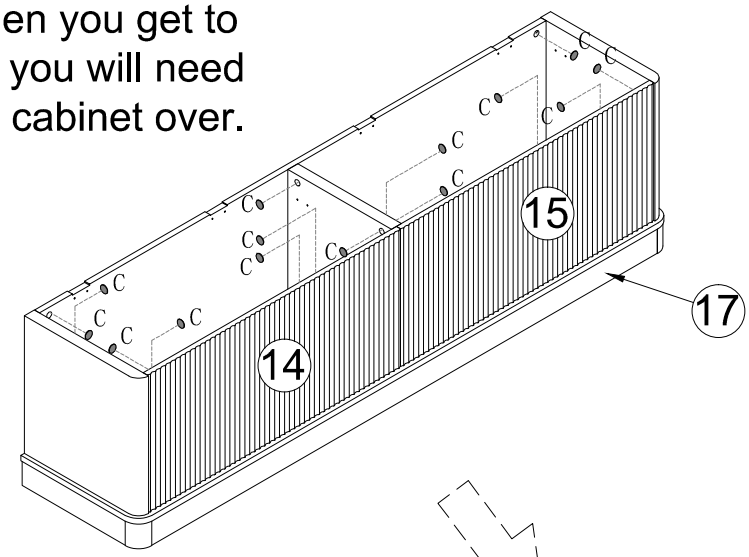

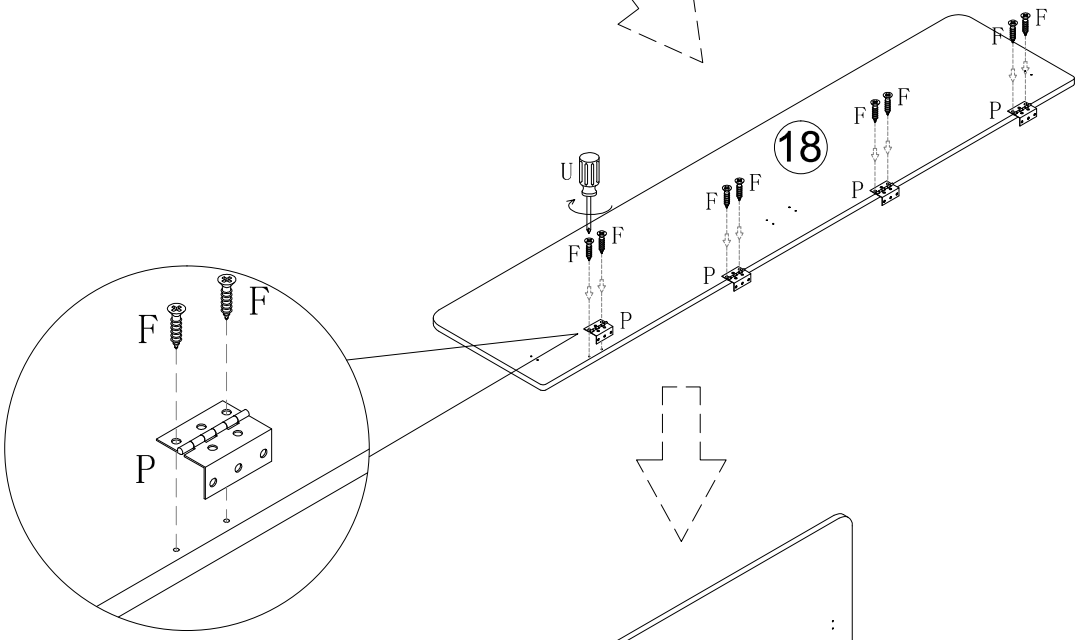


This is fixed on the short side of the hinge.

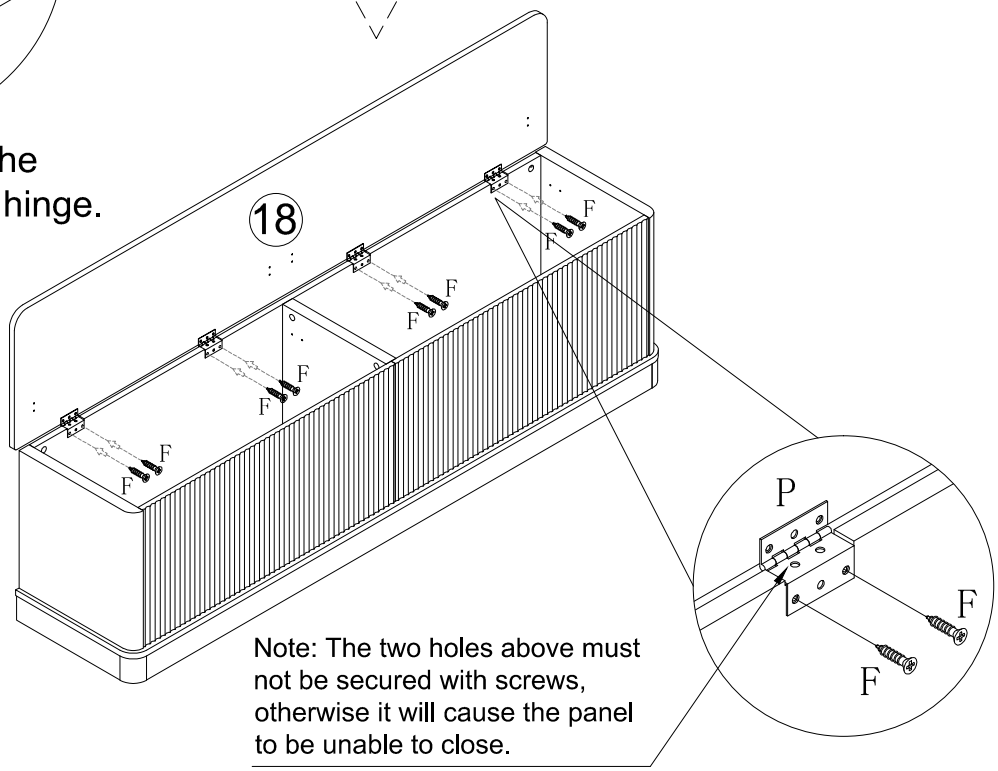


Note: The two holes above must not be secured with screws, otherwise it will cause the panel to be unable to close.


	C×14PCS
	F×16PCS
	P×4PCS

STEP 17

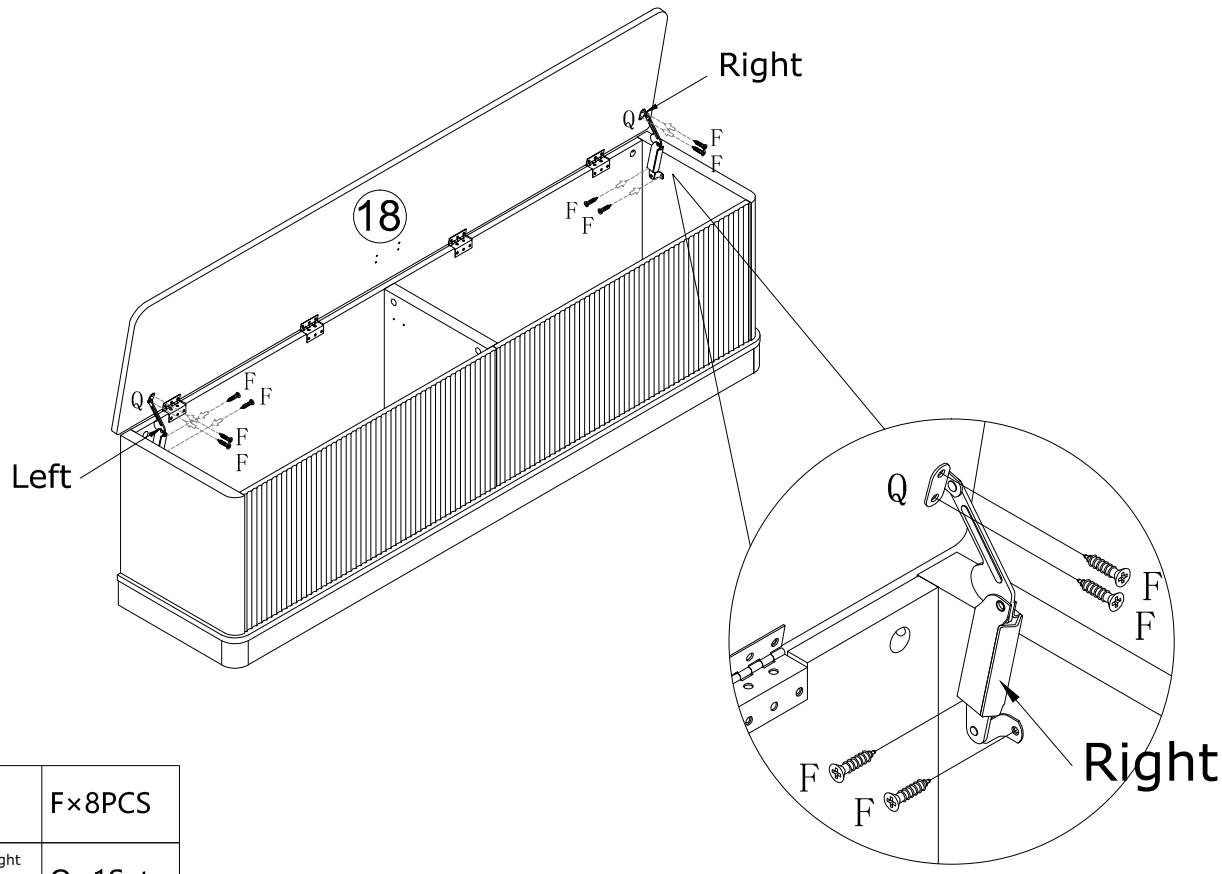

	F×8PCS
	Q×1Sets


STEP 18

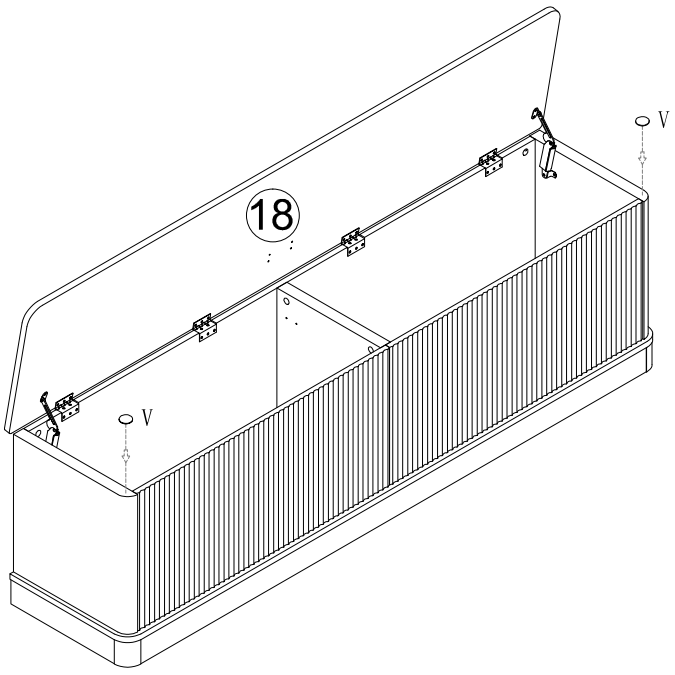

	V×2PCS


STEP 19

⚠	Reminder: The bed frame is heavy. From this step on, please place the accessories in the area where the bed will eventually be placed, and then proceed with subsequent assembly operations.

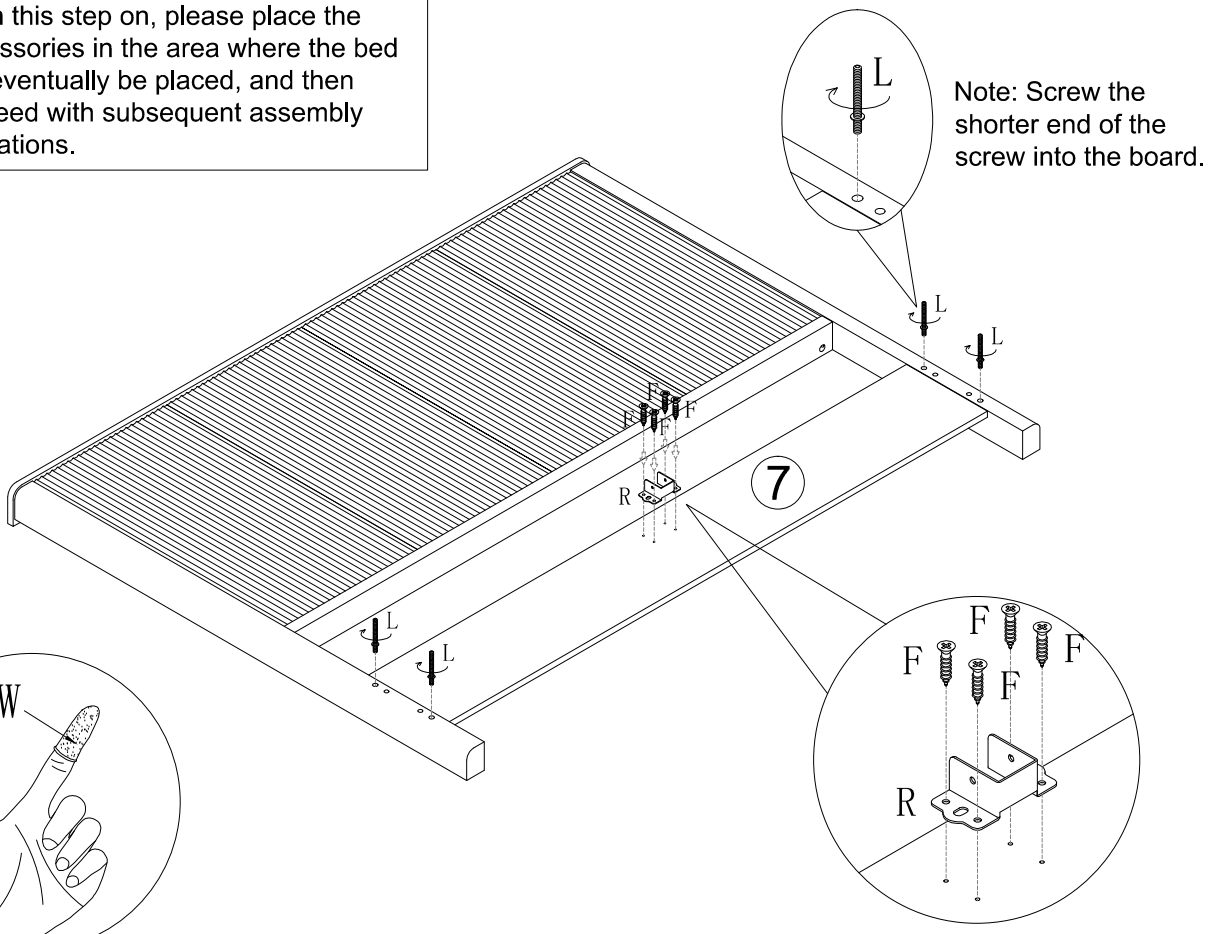

Note: Screw the shorter end of the screw into the board.


When installing the screw L, please wear finger cots for better grip and finger protection.

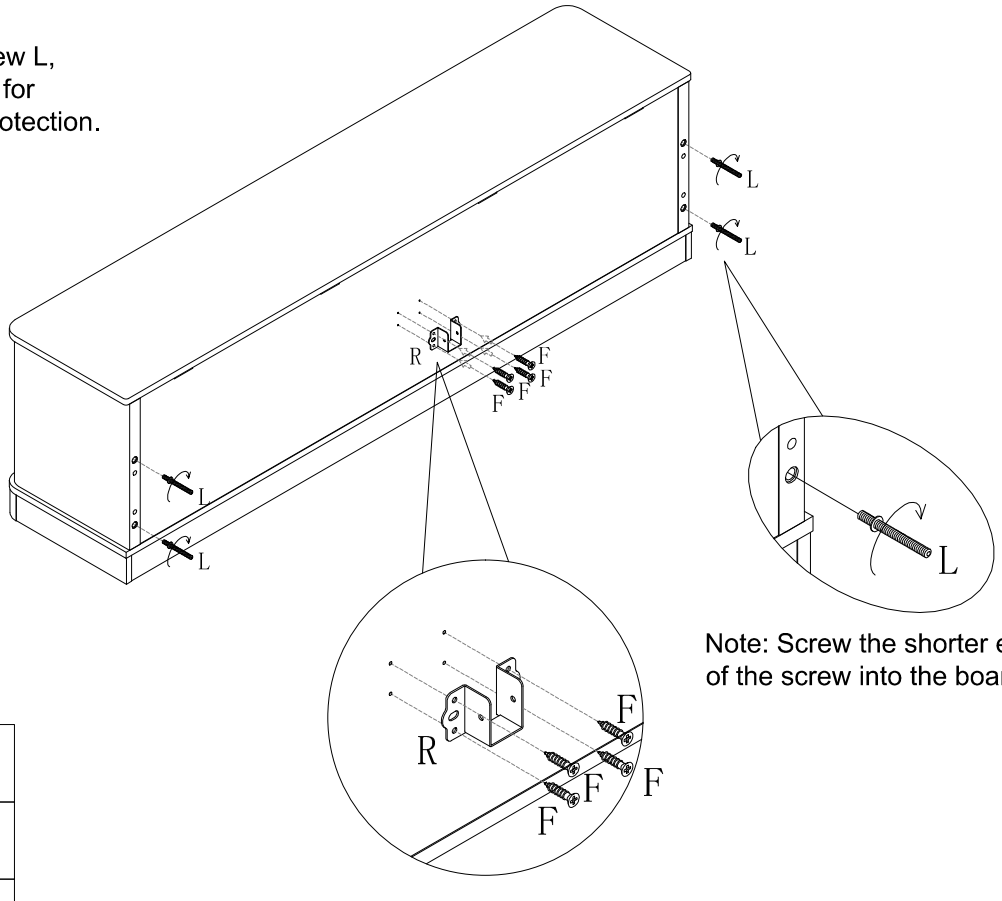


Note: Screw the shorter end of the screw into the board.

	F×8PCS
	L×8PCS
	R×2PCS


STEP 20

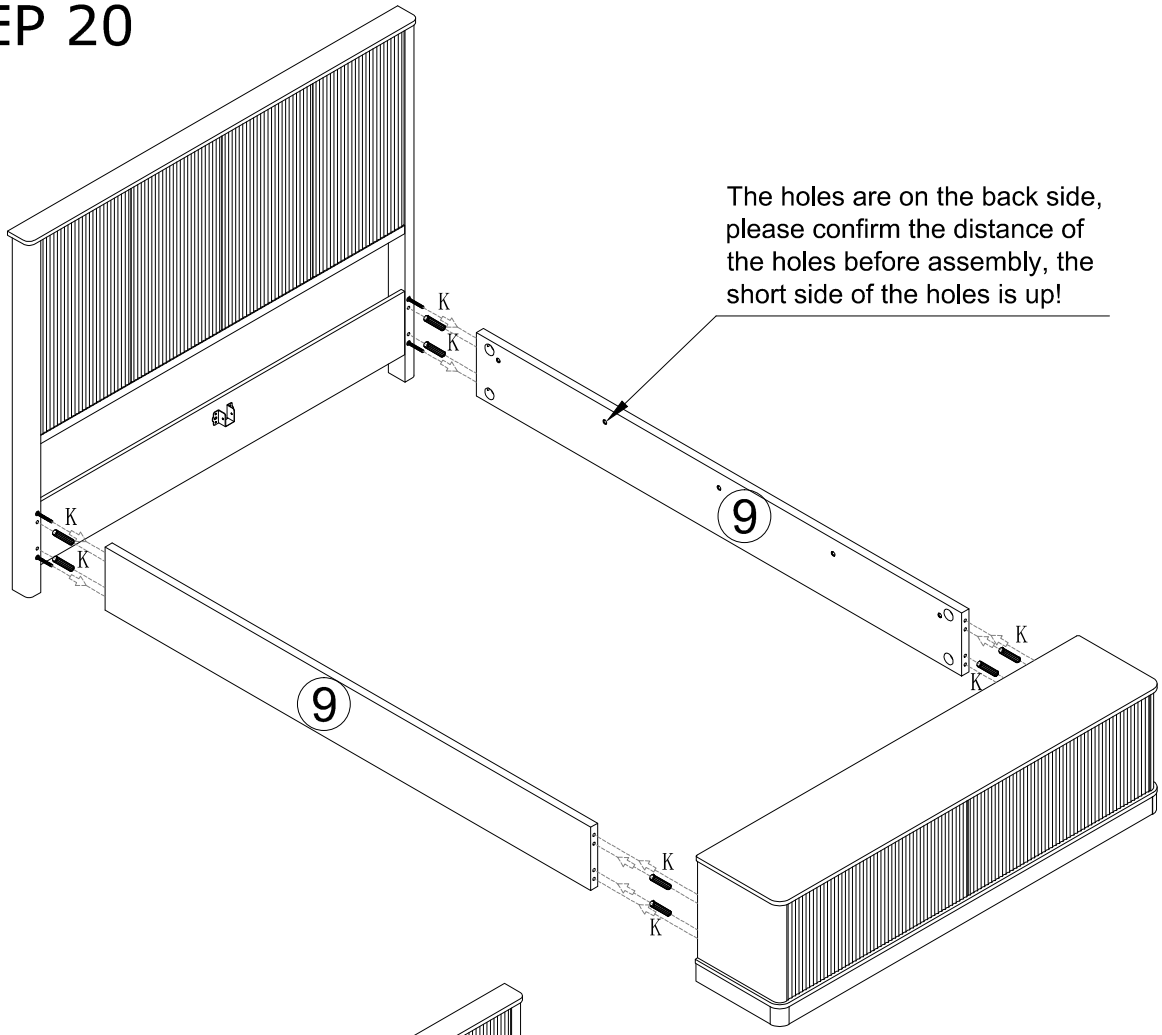

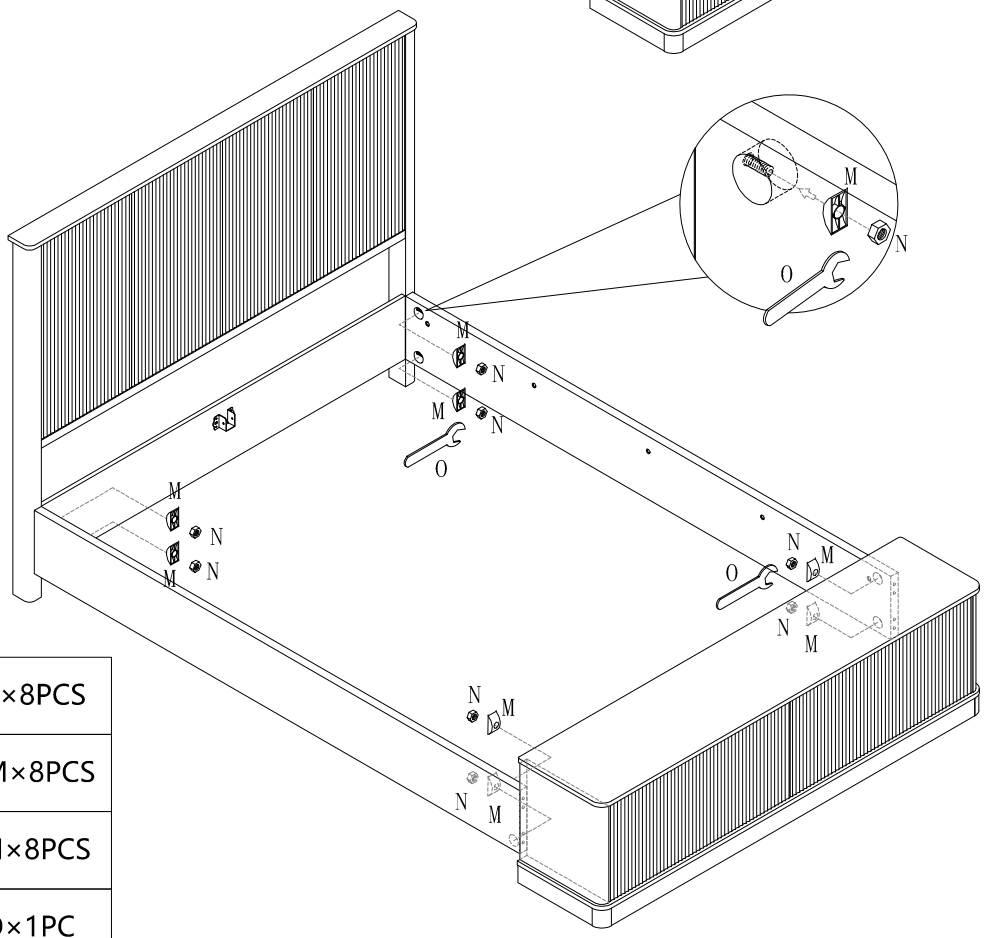

	K×8PCS
	M×8PCS
	N×8PCS
	O×1PC
	W×4PCS


STEP 21

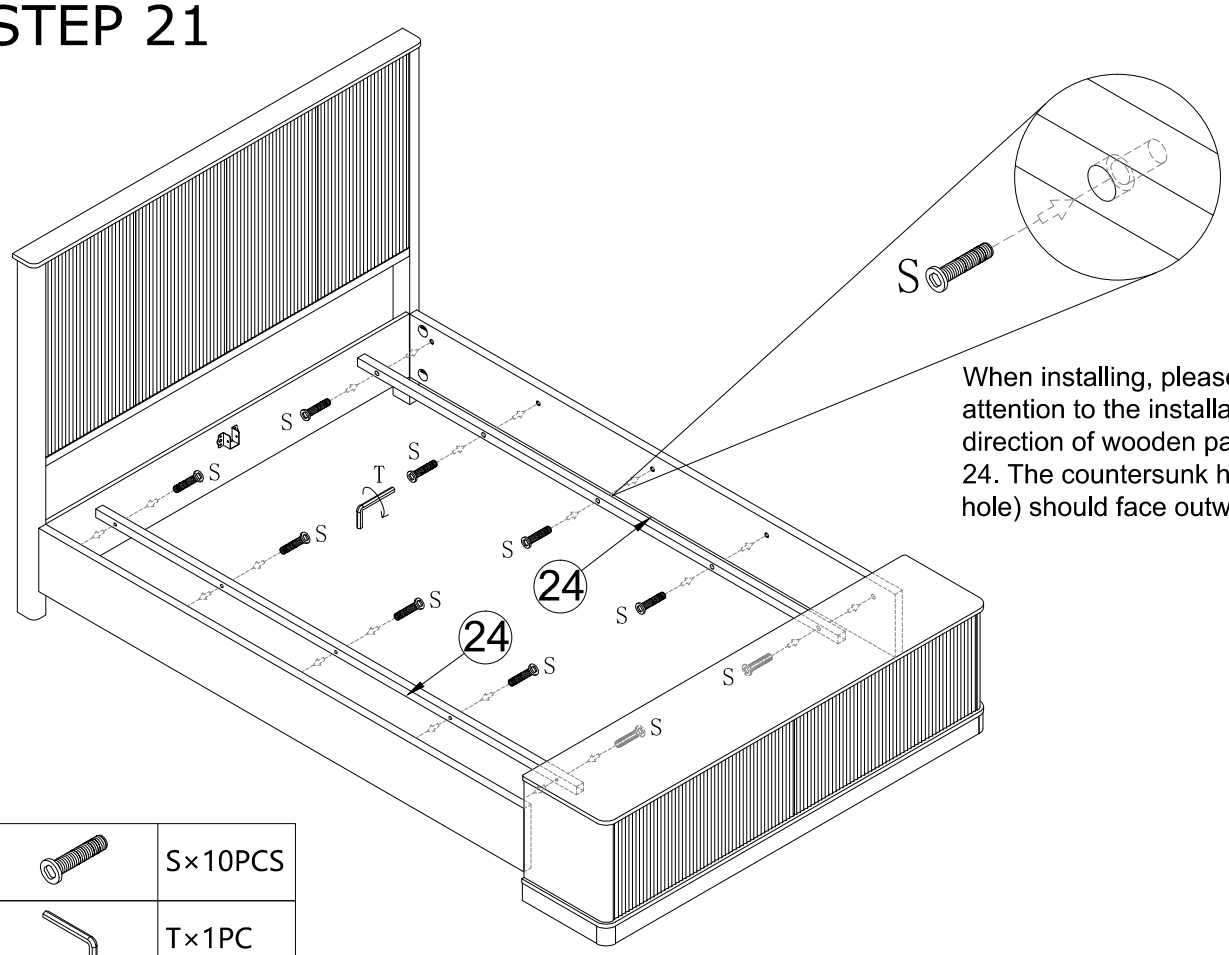

When installing, please pay attention to the installation direction of wooden part number 24. The countersunk hole (large hole) should face outward.


	S×10PCS
	T×1PC


STEP 22

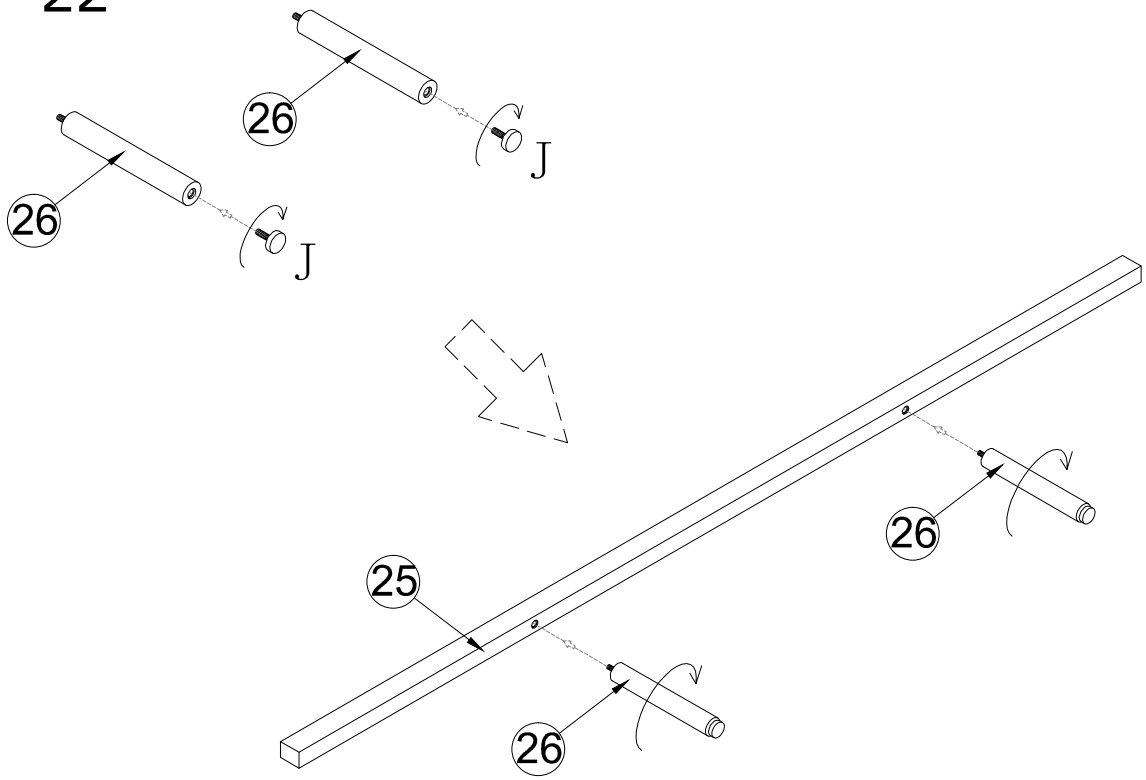

	J×2PCS

STEP 23

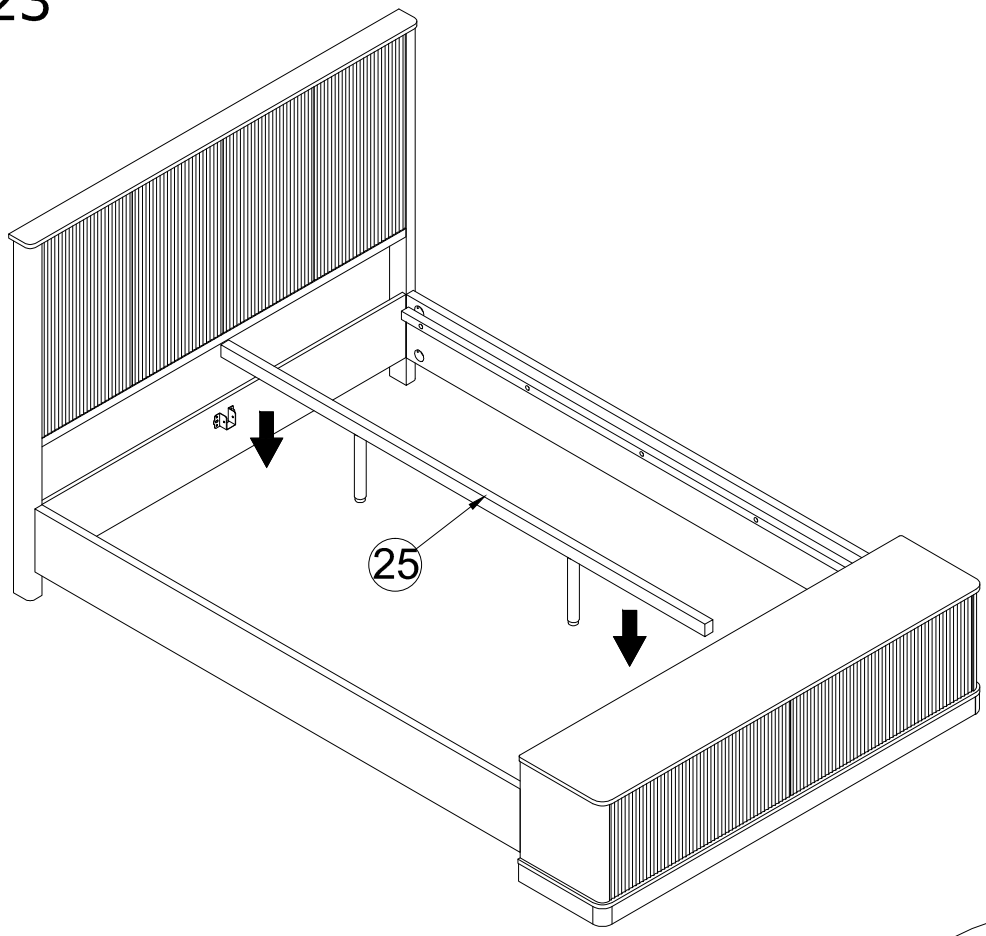

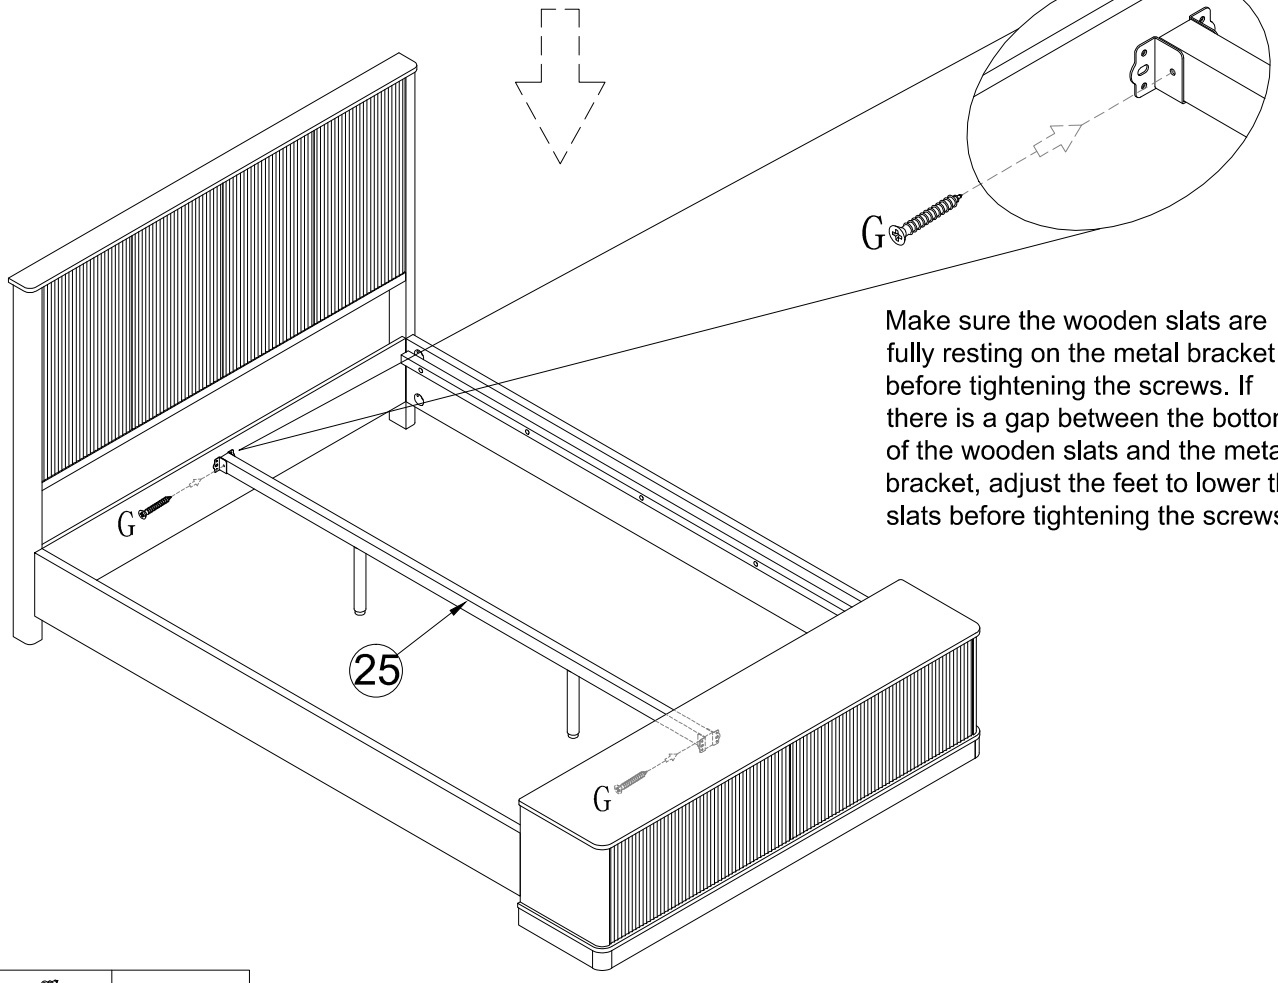


Make sure the wooden slats are fully resting on the metal bracket before tightening the screws. If there is a gap between the bottom of the wooden slats and the metal bracket, adjust the feet to lower the slats before tightening the screws.


	G×2PCS

STEP 24

First, make sure the bed frame is properly positioned and that the side frames are perpendicular to the headboard and footboard before installing the slats.

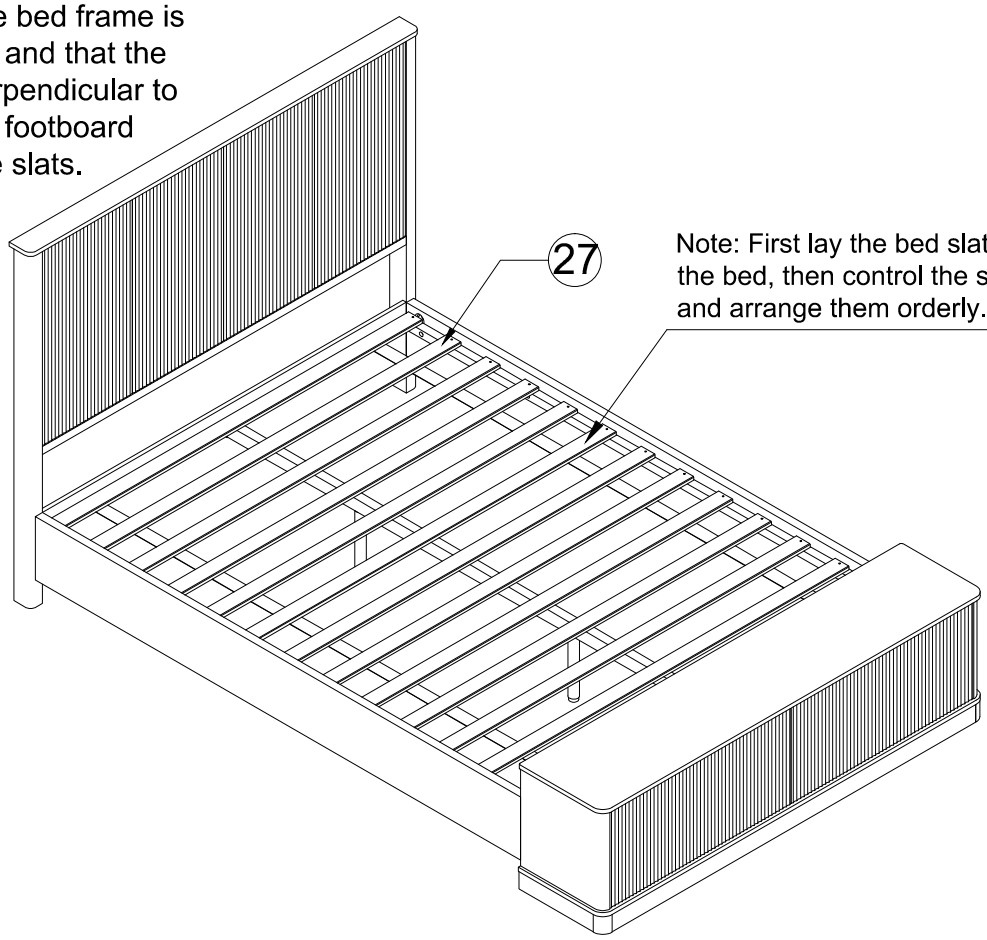


Note: First lay the bed slats flat on the bed, then control the spacing and arrange them orderly.

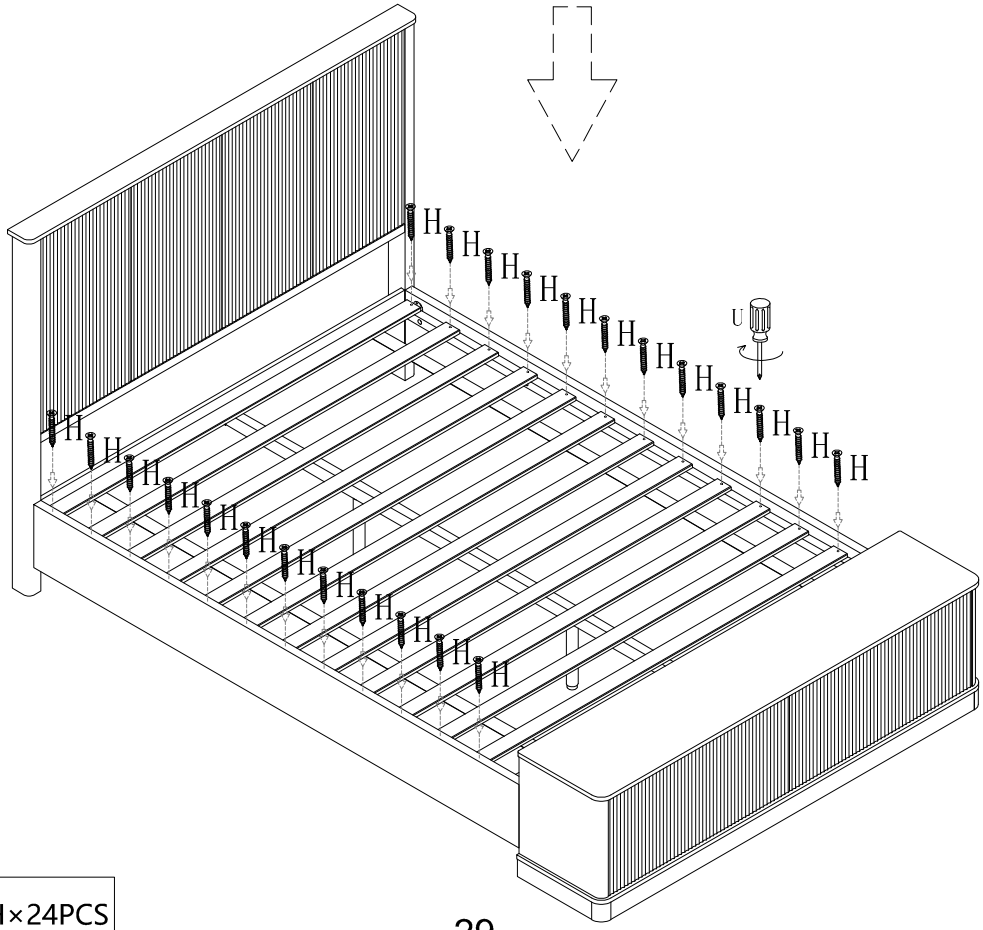

	H×24PCS

STEP 25

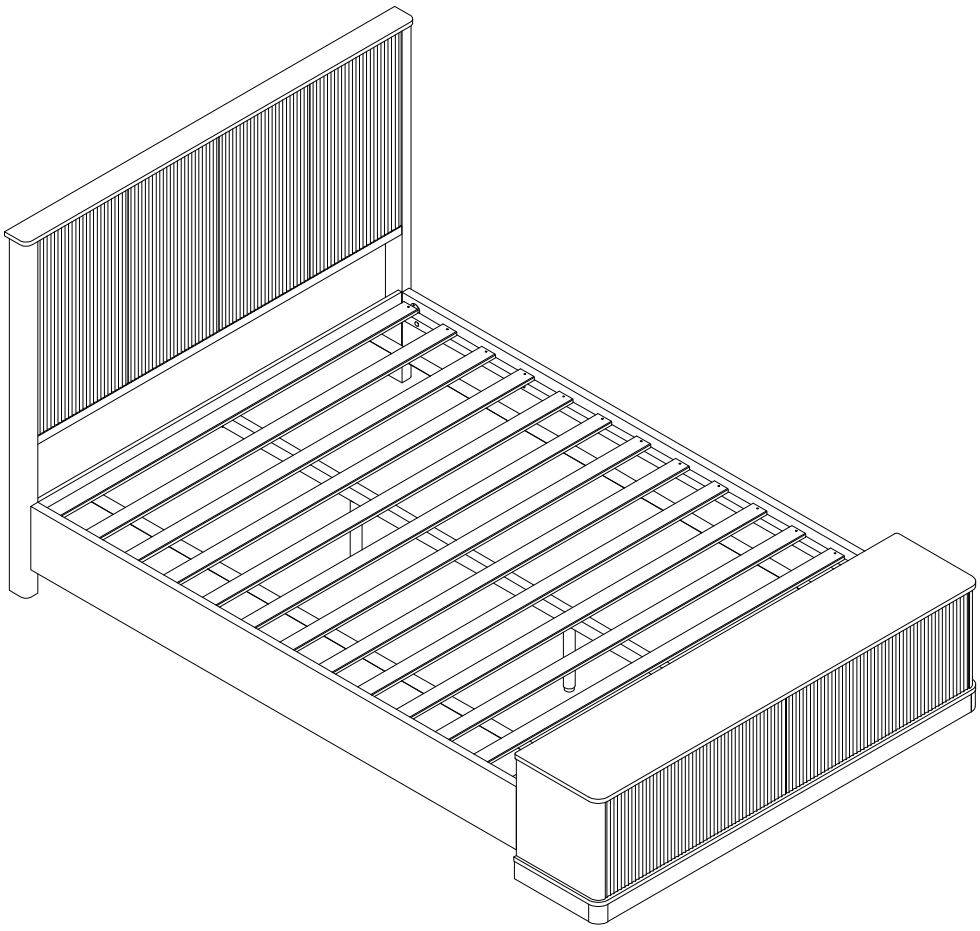

Assembly complete