



ASSEMBLY INSTRUCTIONS








BEDHOUSE WITH TRUNDLE

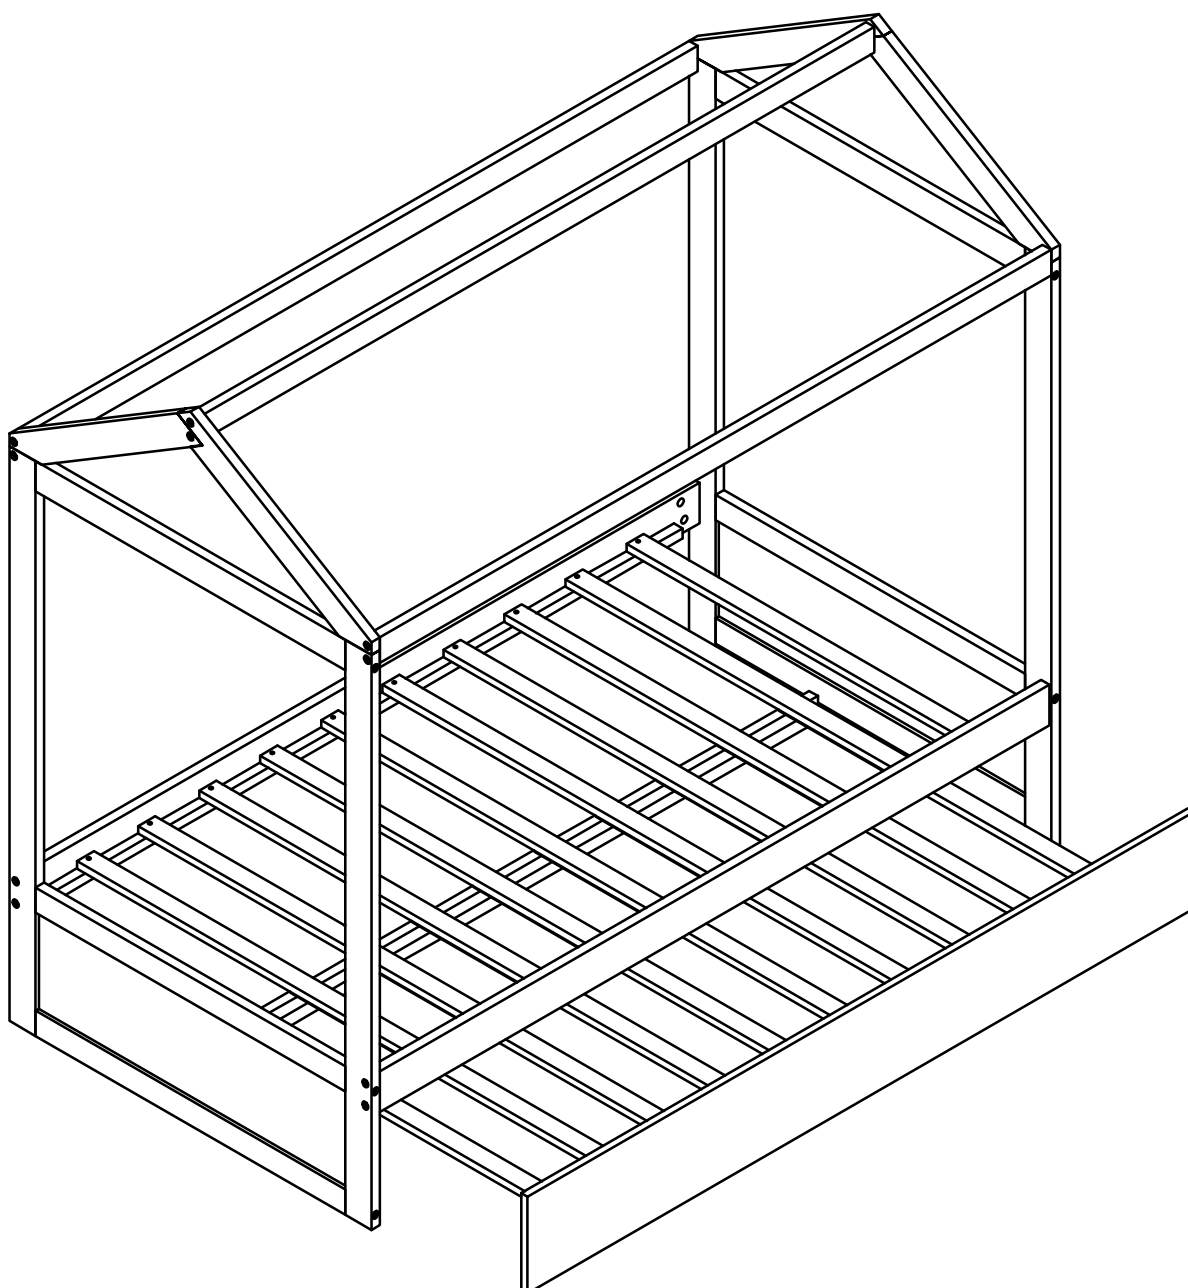



DETAIL VIEW

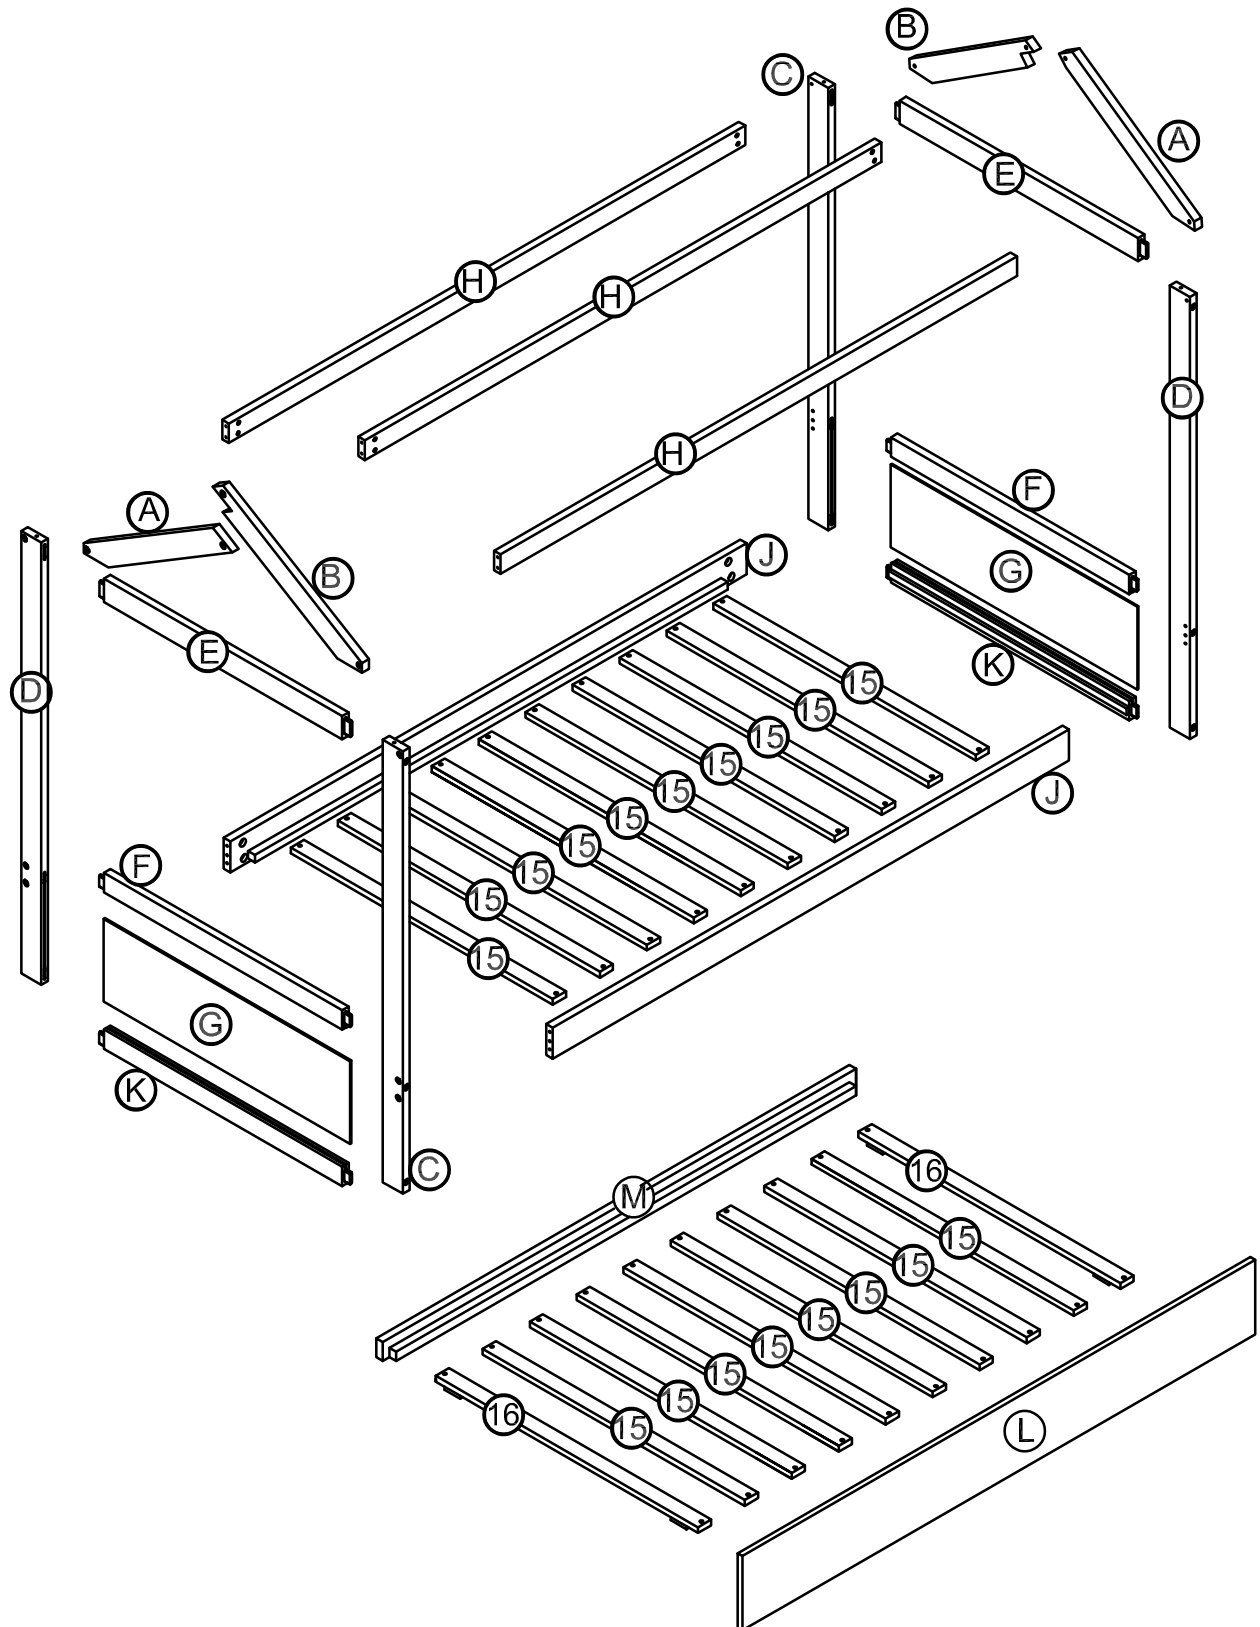


PART LISTS

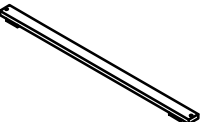G		H		J	
Side panel - 2pcs		Guard rail top 3pcs		Side rail upper -2pcs	
15		L		M	
Upper slat - 18pcs		Drawer front - 1pc		Drawer back - 1pc	
A		B		C	
Cap for lower HB&FB-2pcs		Cap for upper HB&FB-2pcs		Upper leg HB&FB -2pcs	
D		E		F	
Upper leg HB&FB -2pcs		Horizontal bar HB&FB-2pcs		Horizontal bar HB&FB-2pcs	
K		16			
Horizontal bar HB&FB-2pcs		Upper slat - 2pcs			

HARDWARE LISTS


1  Ø10 x 40 mm Wood dowel (8pcs)	2  Ø1/4" x 80 mm Hex-Head bolts (20pcs)	3  Ø6" x 80 mm Wood Screws (12pcs)
5  Ø9.5x13mm Horizontal-Hole bolts (20pcs)	6  # 4 x 30mm Wood Screws (44pcs)	7  # 4 x 15mm Wood Screws (24pcs)
8  Wheels Ø32 (4pcs)	9  (1/4")4.5*58mm Allen Key (1pc)	10  Pass L: Ø1/4" - (3pcs)
11  Angle Metal (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

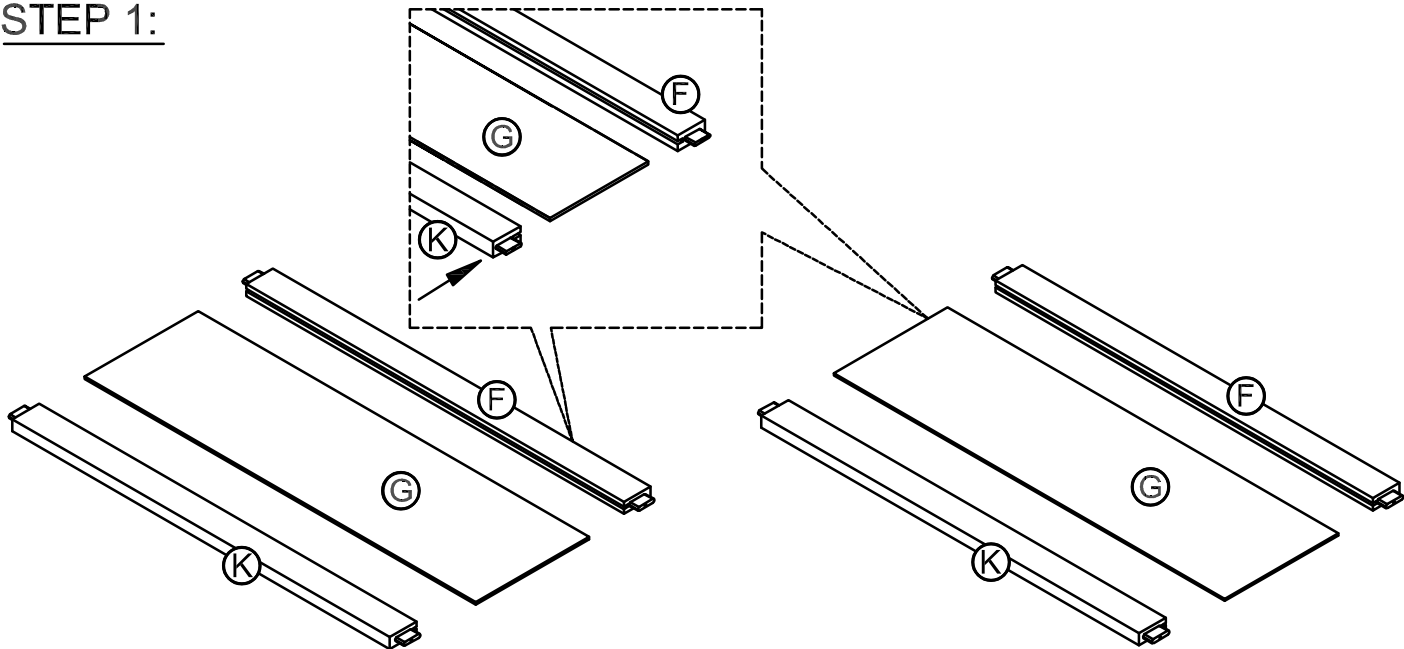


STEP 2:

03
12PCS

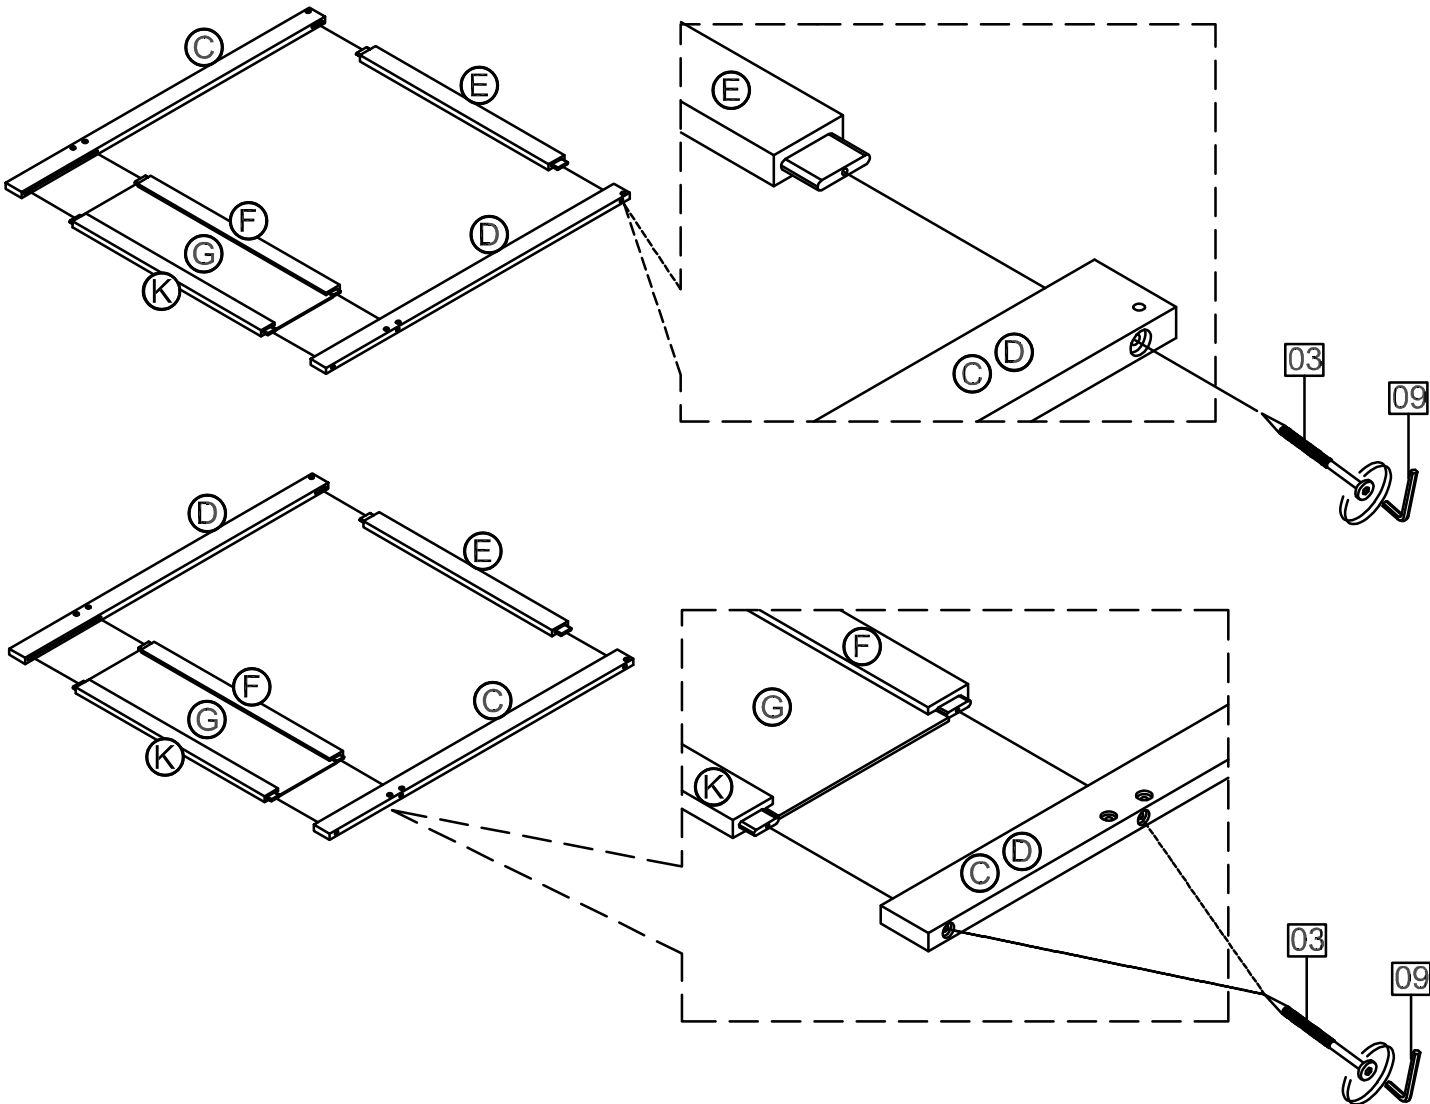


STEP 3:

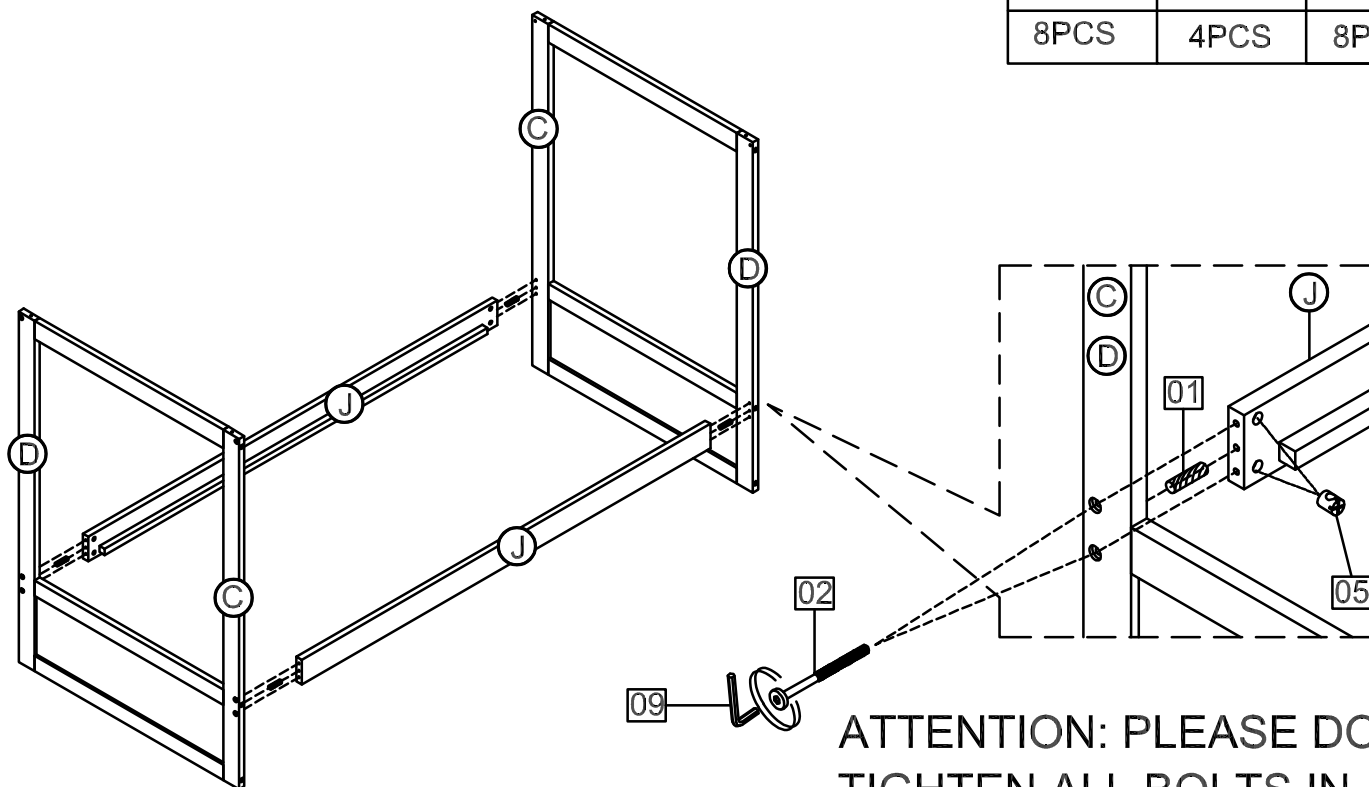

05	01	02
8PCS	4PCS	8PCS


ATTENTION: PLEASE DON'T
TIGHTEN ALL BOLTS IN
THIS STEP, JUST TIGHTEN
80%




STEP 4:

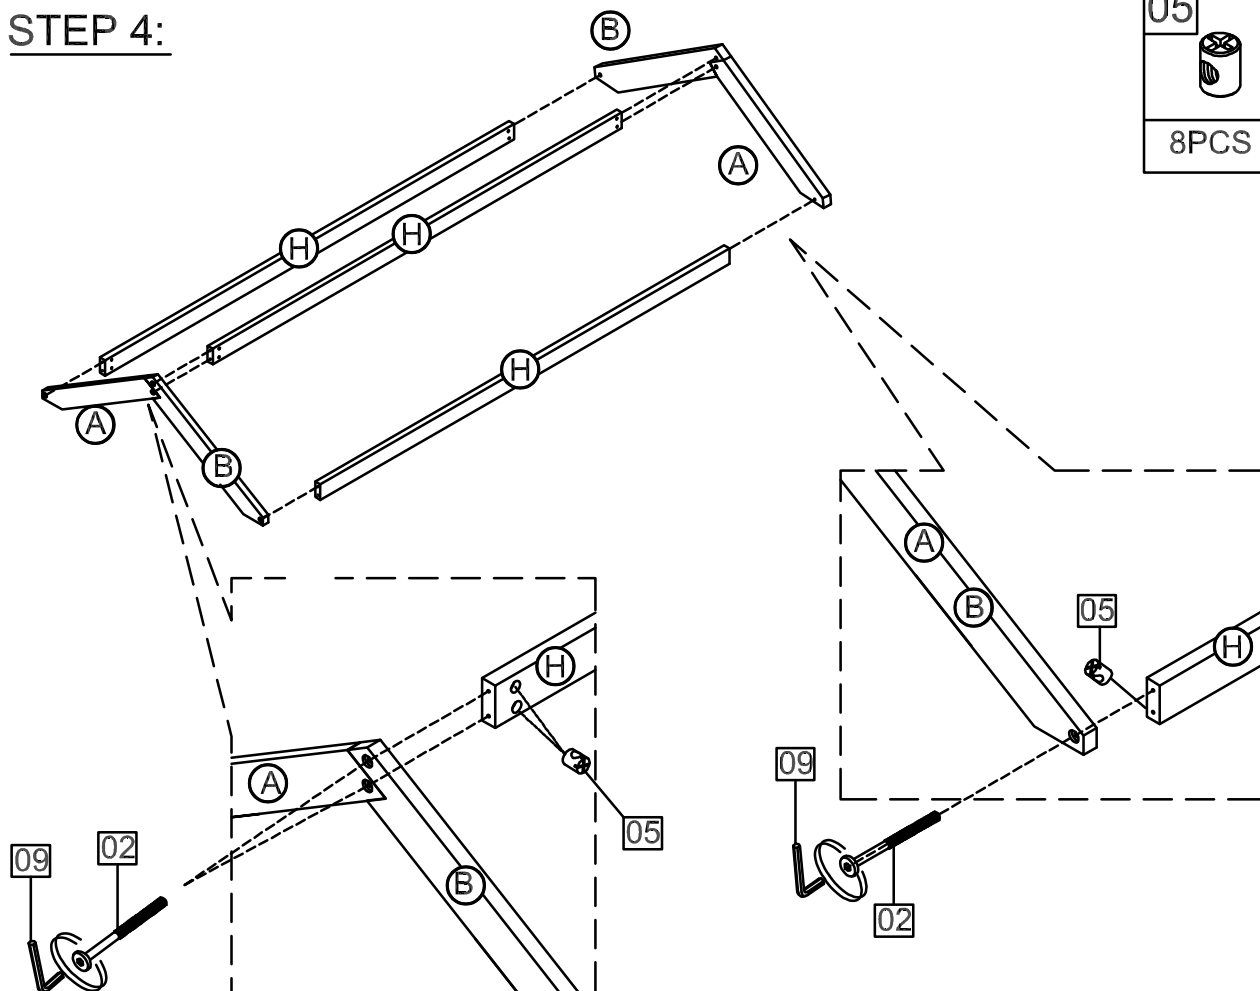

05	02
8PCS	8PCS




STEP 5:

07		11		01	
4 PCS		2 PCS		4PCS	

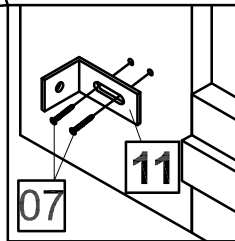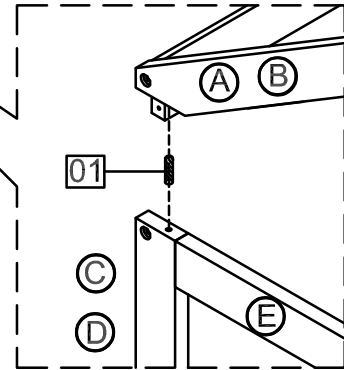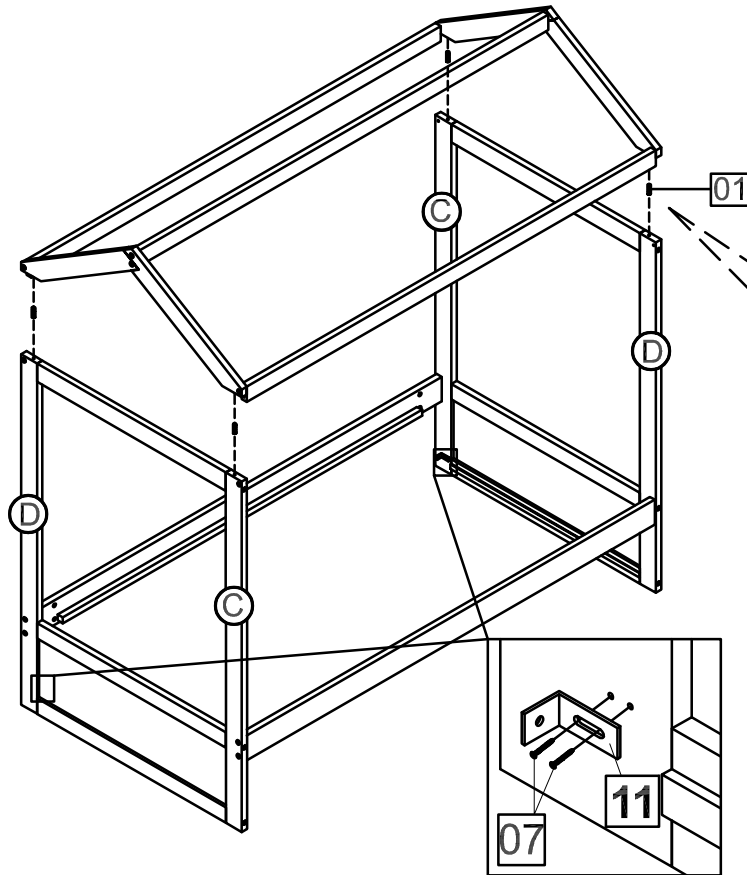


STEP 6:

05		02	
4PCS		4PCS	

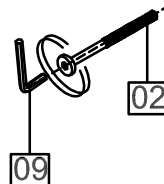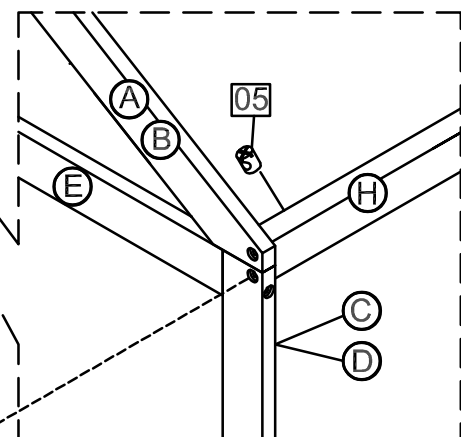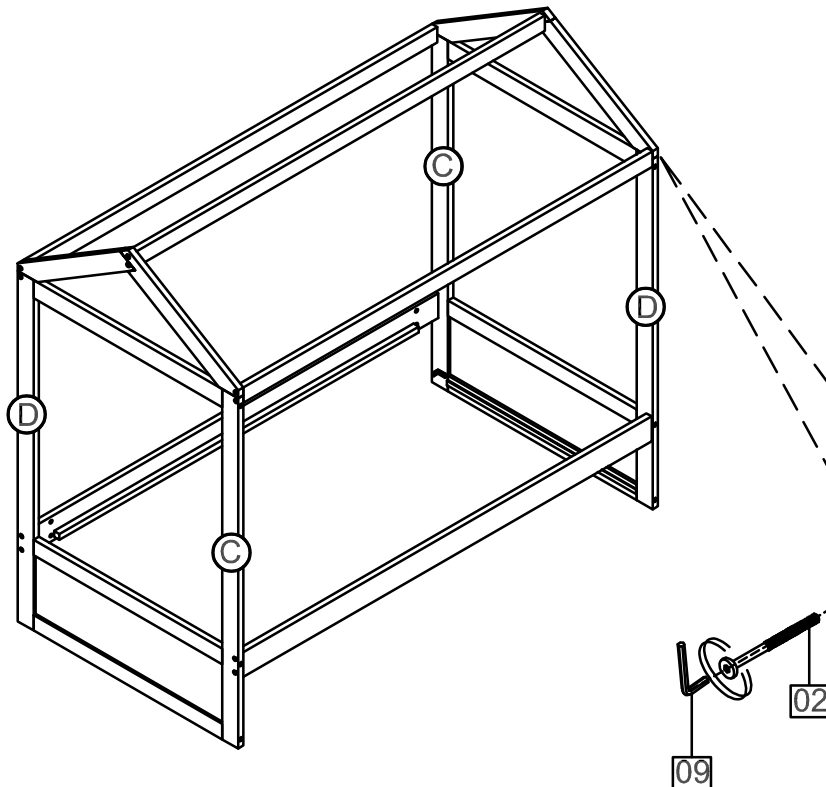


STEP 7:

06	
20PCS	

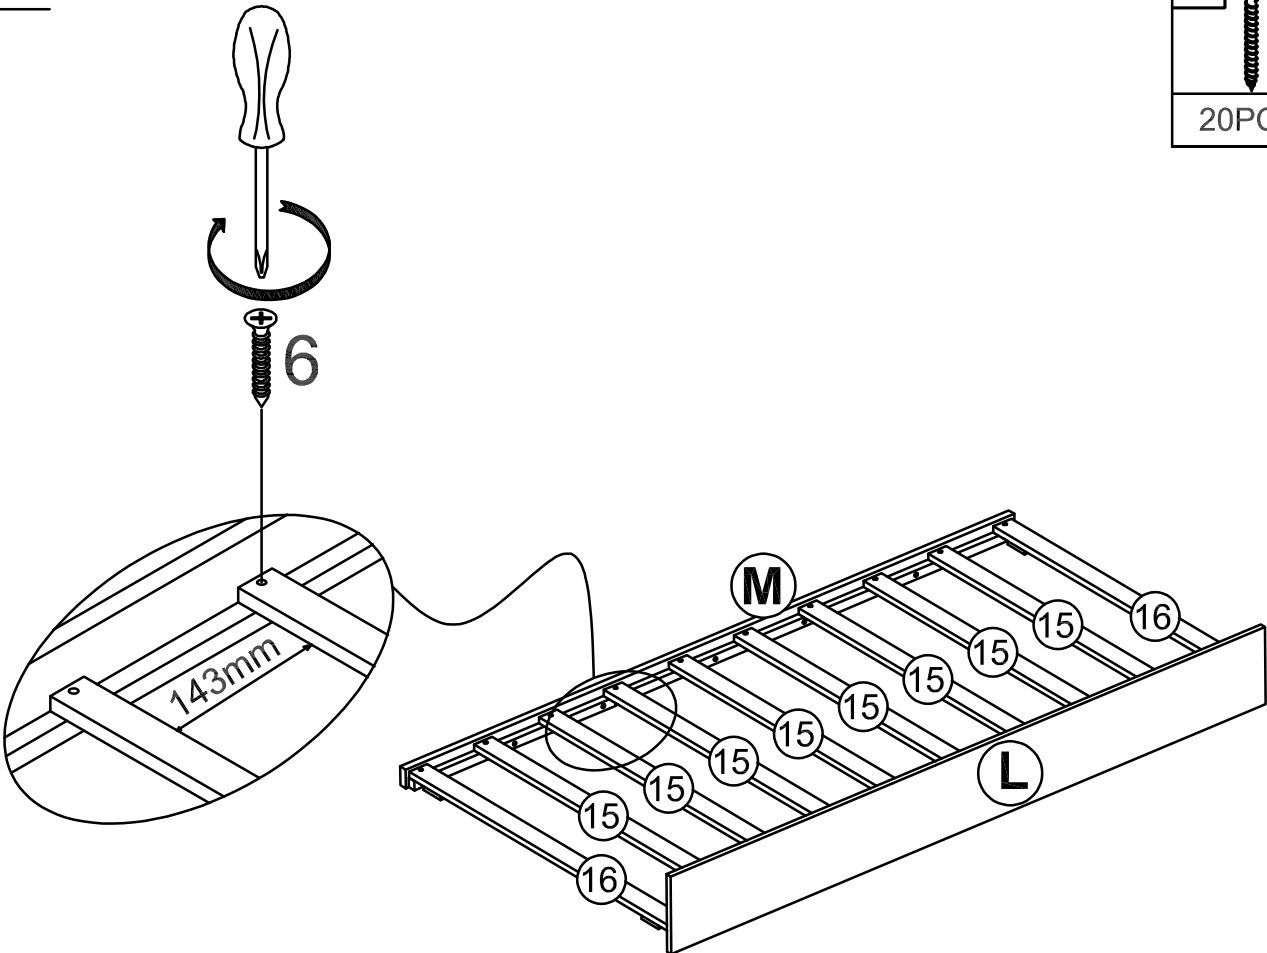

STEP 8:

07		10		08	
20PCS		3PCS		4PCS	

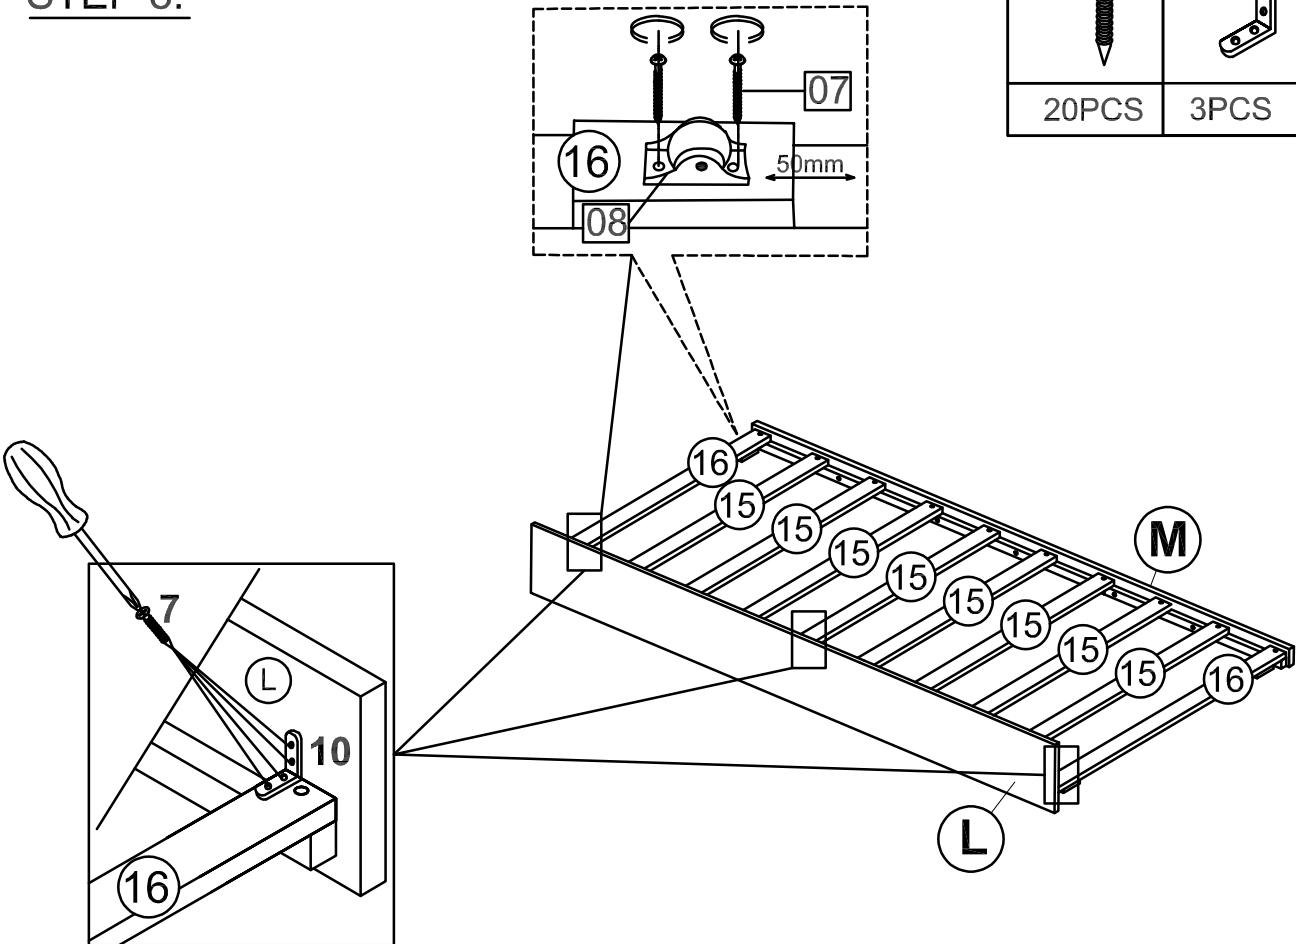

STEP 9:



STEP 2: SCREW
ALL SLATS

06



24 PCS


06

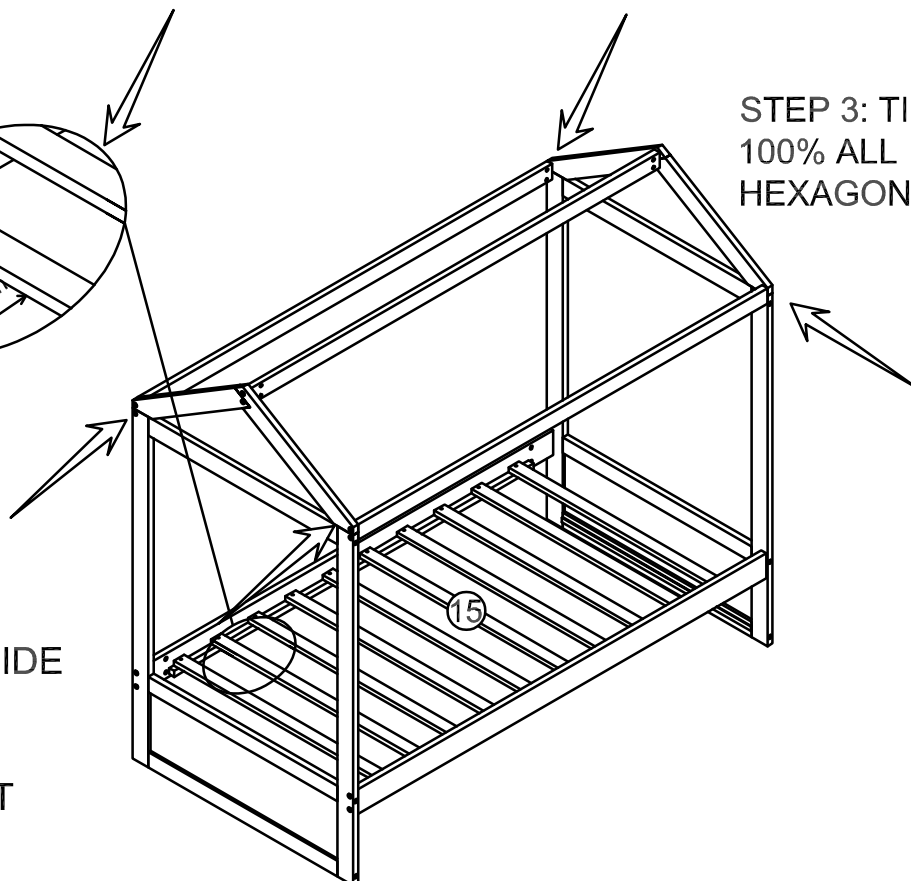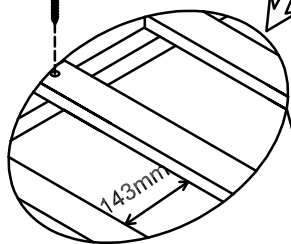

STEP 3: TIGHTEN
100% ALL
HEXAGON BOLTS

STEP 1: PULL SIDE
RAIL CLOSE
TOGETHER
ENOUGH TO FIT
THE SLATS

STEP 10:

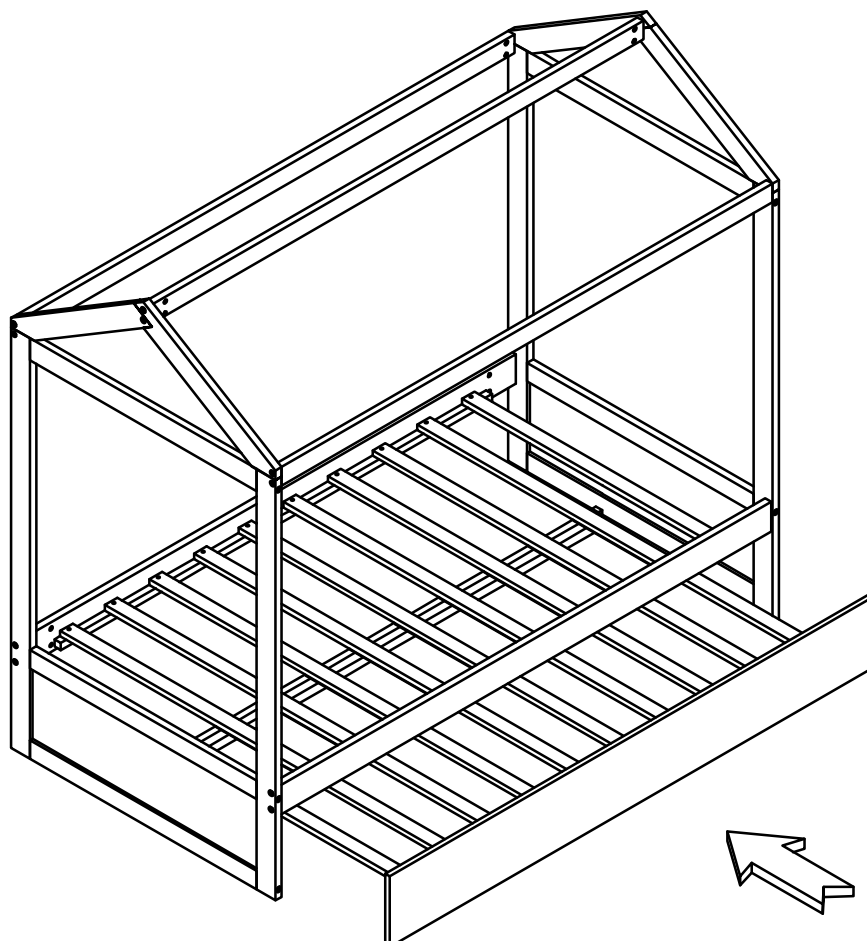

Completed

