


MELBOURNE METAL FRAME K/D SINGLE
LEFT ARM SOFA

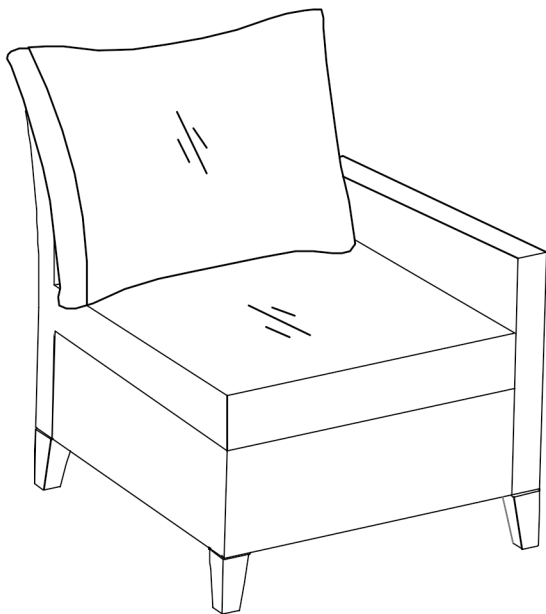


READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY

- 1.PLEASE SEPARATE AND IDENTIFY ALL PARTS,MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
- 2.TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ON A SOFT MAT OR SIMILAR.
- 3.PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
- 4.WASHERS MUST BE USED.
- 5.WHILE EACH SCREW AND NUT IS PROPERLY FASTENED, DO NOT OVER FASTEN IT.
- 6.DO NOT COMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FIXED.


SPARE PARTS		
CODE	PARTS	QTY.
A		1
B		1
C		1
D		4
E		1
F		1

HARDWARE		
CODE	PART	QTY.
G	M6x45	2
H	M6x35	5
I		7
J		7
K		4
L		4
M		4
N		1
O		1
P		1


1

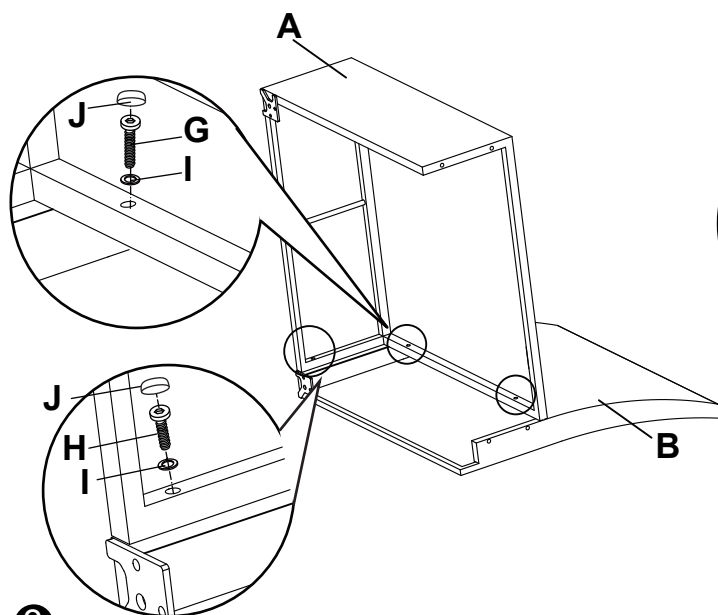


2

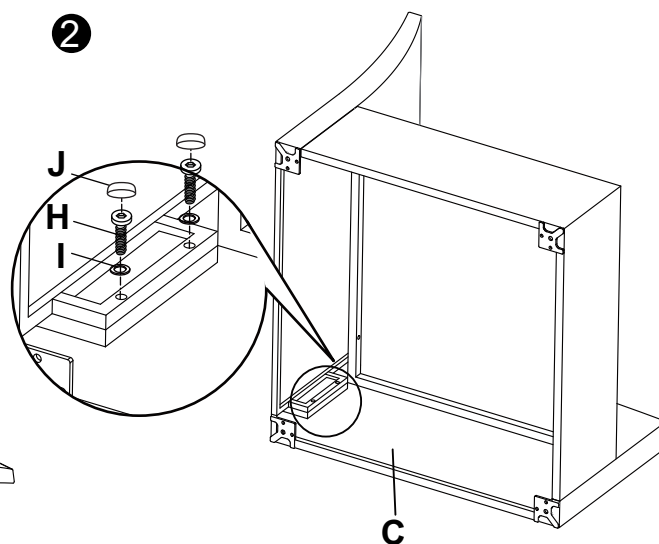


3

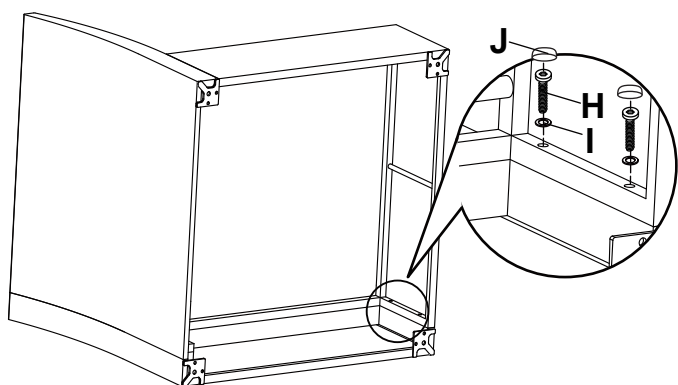

4

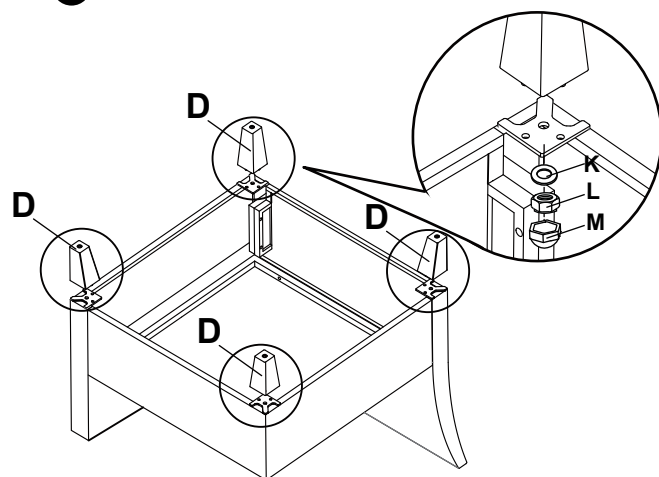

5

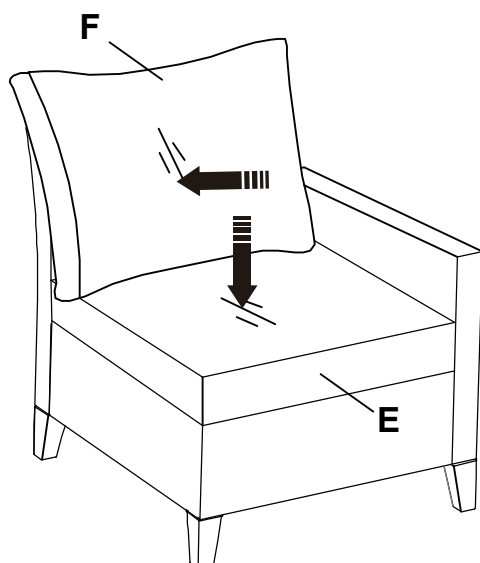

6

