


ASSEMBLY INSTRUCTION

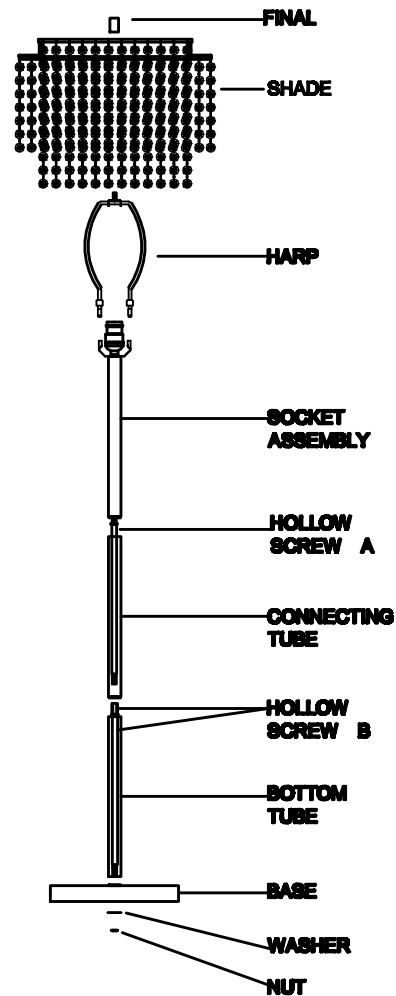

1. TWIST THE HOLLOW SCREW (A) INTO THE SOCKET ASSEMBLY.
2. PLACE THE CONNECTING TUBE ONTO THE HOLLOW SCREW(A) AND TIGHTEN WITH THE HOLLOW SCREW (B).
3. PLACE THE BOTTOM TUBE AND BASE ONTO HOLLOW SCREW (B), THEN TIGHTEN THEM WITH THE WASHER & NUT.
4. PLACE THE HARP ONTO THE SOCKET ASSEMBLY.
4. PLACE THE SHADE ONTO THE HARP AND TIGHTEN IT WITH FINAL.