


BED FRAME

Thank you for purchasing the **KING BED FRAME**


Before you start, here is some helpful advice:

- 1.We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- 2.Owing to the size and weight of the bed frame, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 45 minutes.
- 3.Please do not use any tools other than those provided or recommended in these instructions.
- 4.Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe and environmentally friendly way.
- 5.Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
- 6.Please keep all fitting out of reach of children.

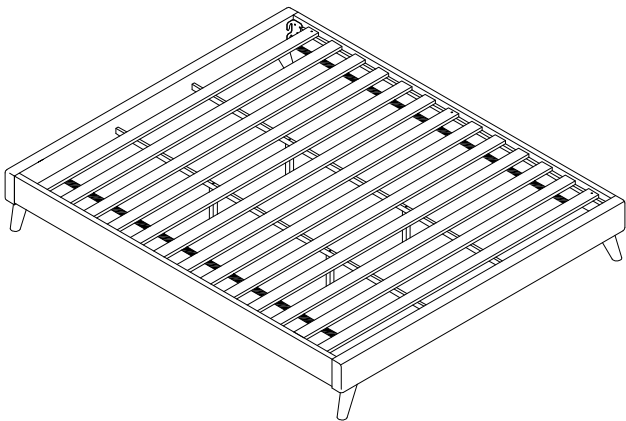

Hardware list:			
A		Bolt M8 x 20mm	x8
B		Bolt M6 x 35mm	x4
C		Bolt M6 x 50mm	x8
D		Spring Washer M6	x8
E		Flat Washer M6	x8
F		Screw M4 x 32mm	x20
G		M4 Allen Key	x1
H		M5 Allen Key	x1
		PHILLIPS HEAD SCREW DRIVER NOT PROVIDED	

Component:

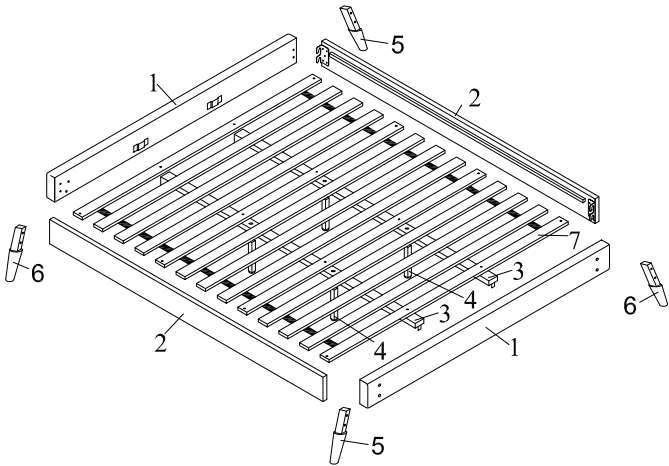


1	Short Board	x2	2	Long Board	x2	3	Center Rail	x2	4	Support Leg	x4
5	Leg I	x2	6	Leg II	x2	7	Roll Slats	x1			

BED FRAME

STEP 1

Put 1 piece of **Short Board (1)** upside down on a carpeted or padded area by two adults.
Insert 1 piece of **Leg II (6)** and 1 piece of **Leg I (5)** into the **Short Board (1)** as shown. Please note numbers shown on legs and short board must match.

Secure them by using 4 pieces of **Bolt (C)**, 4 pieces **Spring Washer (D)** and 4 pieces of **Flat Washer (E)**.
Use **Allen Wrench (G)** to tighten the **Bolts (C)** clockwise until secure.
Repeat the same steps for the remaining 1 piece of **Short Board (1)**,
1 piece of **Leg I (5)** and 1 piece of **Leg II (6)**.

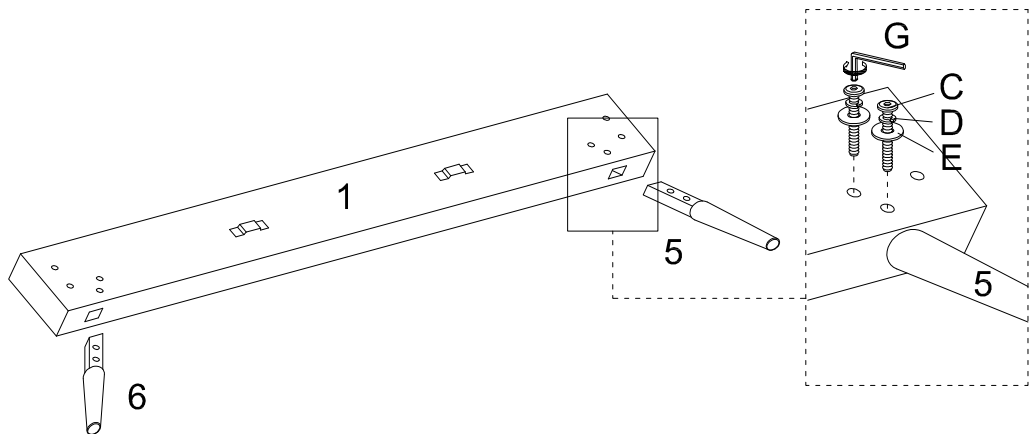


C x 8	D x 8	E x 8	G x 1

Hardware & Tool required

STEP 2

Place 1 piece of **Long Board (2)** to 2 pieces of assembled **Short Board (1)** by two adults.
Attach them by using 4 pieces of **Bolt (A)** as shown.
Use **Allen Wrench (H)** to tighten the **Bolts (A)** clockwise until secure.
Repeat the same steps for the remaining 1 piece of **Long Board (1)**.

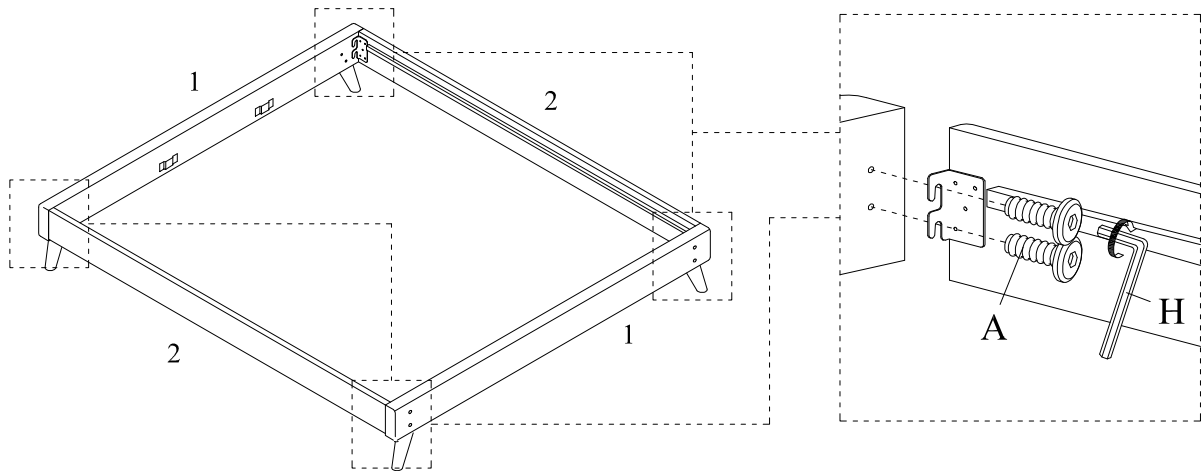


A x 8	H x 1

Hardware & Tool required

BED FRAME

STEP 3

Attach 2 pieces of **Support Leg (4)** to the **Center Rail (3)** using 2 pieces of **Bolt (B)** as shown. Use **Allen Wrench (G)** to tighten the **bolt (B)** clockwise until secure. Repeat the same steps for the remaining 1 piece of **Center Rail (3)** and 2 pieces of **Support Leg (4)**.

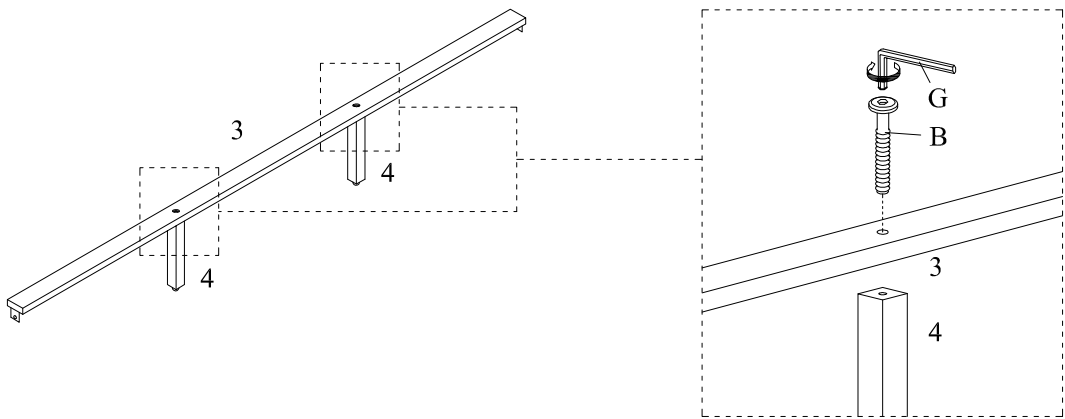



	
B x 4	G x 1

Hardware & Tool required

STEP 4

Insert **Center Rail (3)** to the bracket (provided) on **Short Board (1)** and then secure with 1 **Screw (F)** per each end. Tighten the **Screws (F)** with Phillips Head Screw Driver (not provided).

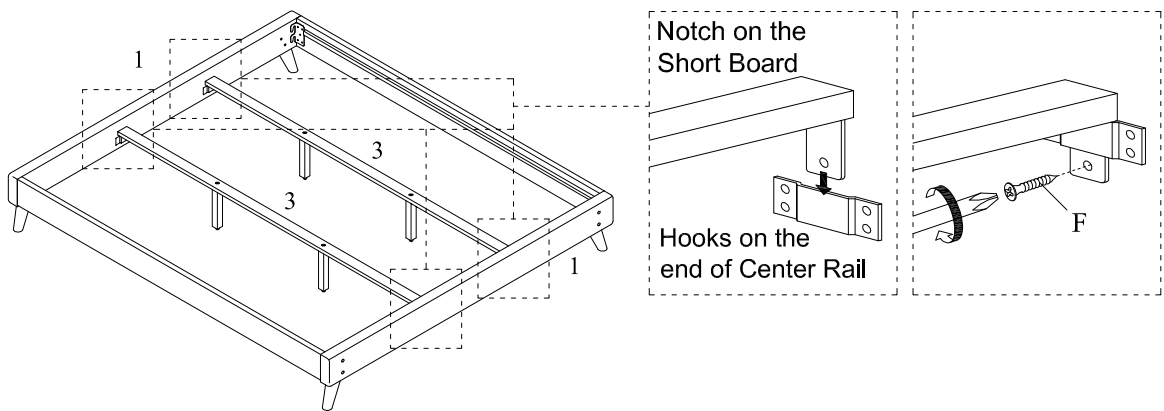

	
F x 4	Phillips Head Screw Driver (not provided)

Hardware & Tool required


BED FRAME

STEP 5

Place the **Roll Slats (7)** to the **Long Board (2)** as shown.

Secure 4 pieces of **Roll Slat (7)** which have countersink holes on each end into the **Long Board (2)** by using 8 pieces of **Screw (F)** as shown.

Tighten the **Screws (F)** with Phillips Head Screw Driver (not provided).

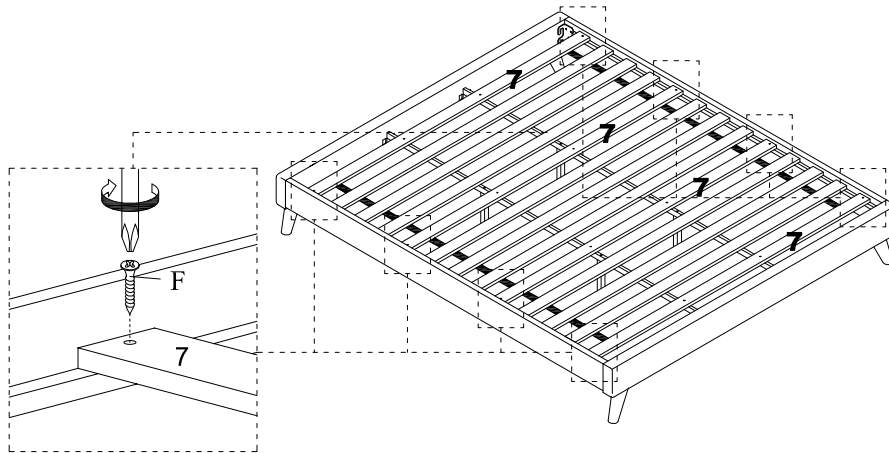

	
F x 8	Phillips Head Screw Driver (not provided)


Hardware & Tool required


STEP 6

Secure 4 pieces of **Screw (F)** into the **Roll Slat (7)** on the top of **Center Rail(3)** as shown.

Tighten the **Screws (F)** with Phillips Head Screw Driver (not provided).

Attention: Please adjust the adjustable glide on the **Support Leg (4)** once the bed is unlevel.

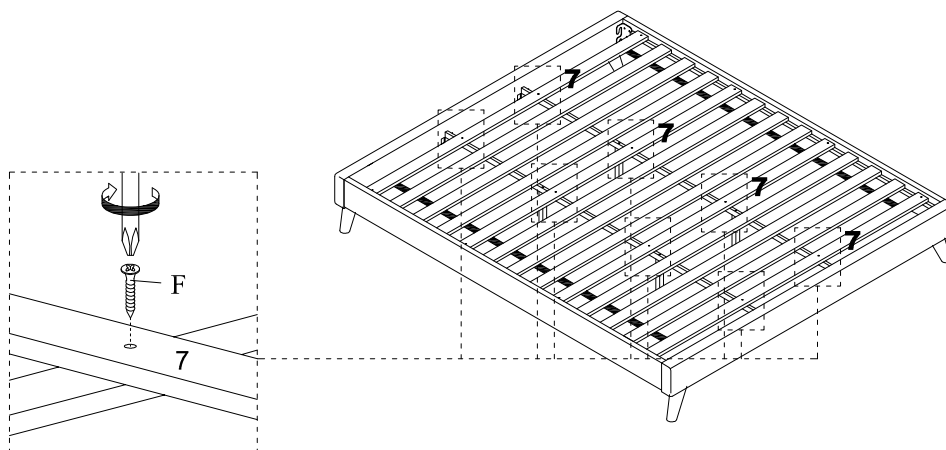

	
F x 8	Phillips Head Screw Driver (not provided)

Hardware & Tool required

Assembly is completed. The bed frame is ready to use now!

NOTE: Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS

Note: This is assembly instruction for Full/Twin/Queen/King Bed Frame to connect Headboard




Hardware list:

A		Bolt M6 x 45mm	x4
B		Flat Washer M6	x4
C		Spring Washer	x4
D		M4 Allen Key	x1

Importants: All the hardware packed with the headboard you are buying. Please only use the above hardware from Headboard Hardware Package to assembly the Bed Frame and Headboard

Component:

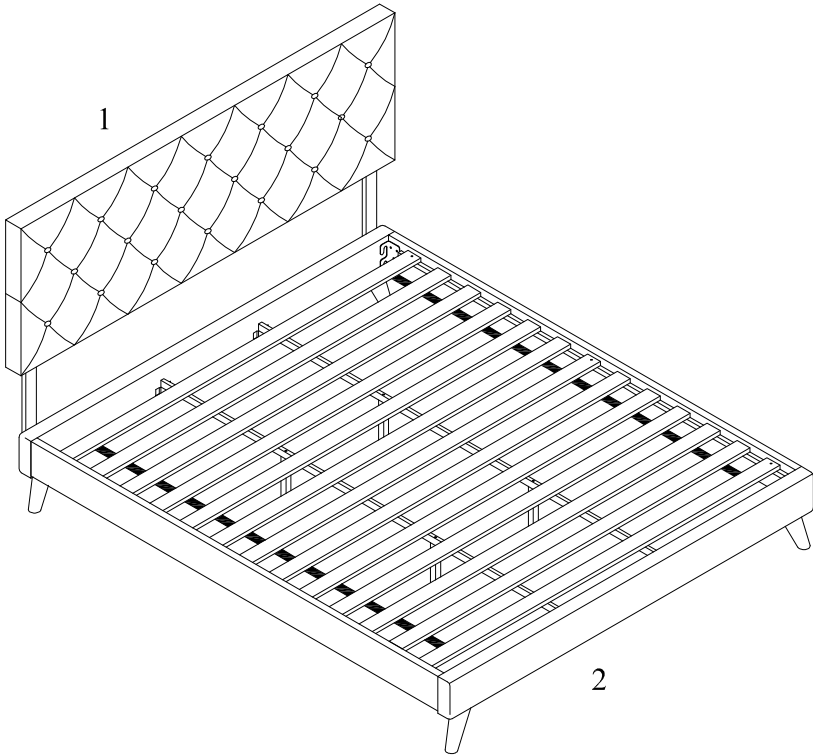


1) Headboard x1


2) Bed Frame x1

(Style may vary)

STEP 1

Attach leg of the **Headboard (1)** to the **Bed Frame (2)**. Secure each **Headboard (1)** leg by using 2x **Bolt (A)**, 2x **Spring Washer (C)** and 2x **Flat Washer (B)**, tighten with supplied **Allen Key (D)** from the back side of the **Headboard**, repeat the same procedure to secure the other side. Note: do not fully tighten nuts and bolts until all nuts and bolts are partially tightened.

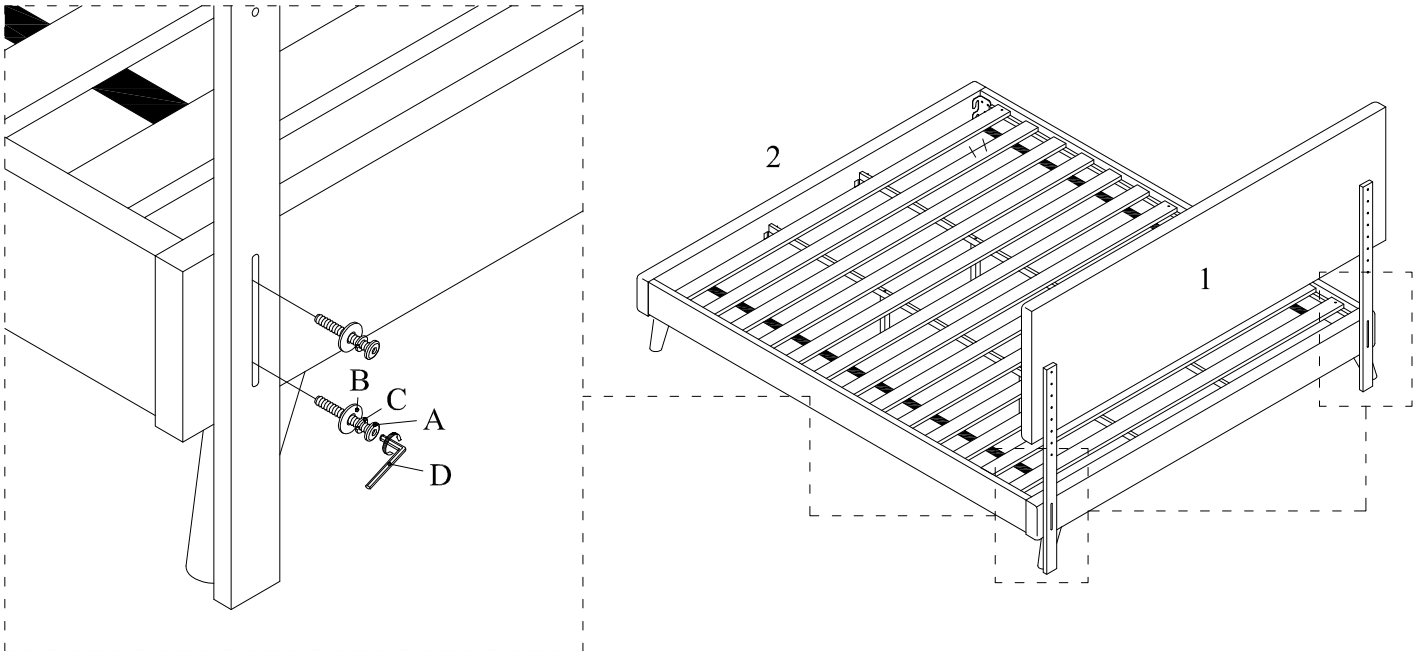

			
A x 4	B x 4	C x 4	D x 1

Hardware & Tool required

STEP 2:

Carefully position the assembled bed to the desired location by four adults.



Assembly is completed. The headboard is ready to use now!

NOTE: Hardware may loosen over time. Periodically check that all connections are tight.