

ASSEMBLY INSTRUCTION

- Read the assembly instructions carefully before beginning assembly.
- Ensure the safety of the glass during assembly.
- Do not over tighten the screws and bolts as this may damage the threads.
- Insert the screw into the hole as shown in the figure, follow the arrow in the picture, and then rotate 90° or 180° clockwise.
- Keep the small accessories in the accessory bag away from children.
- The remaining parts are spare parts.
- Kind tips: when installing the white backboard, install the white side inward.
- The operating instruction of RGB light is included in the package. Read it carefully when assembling .

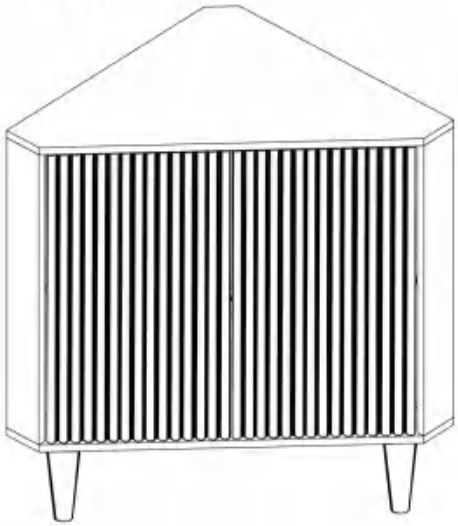


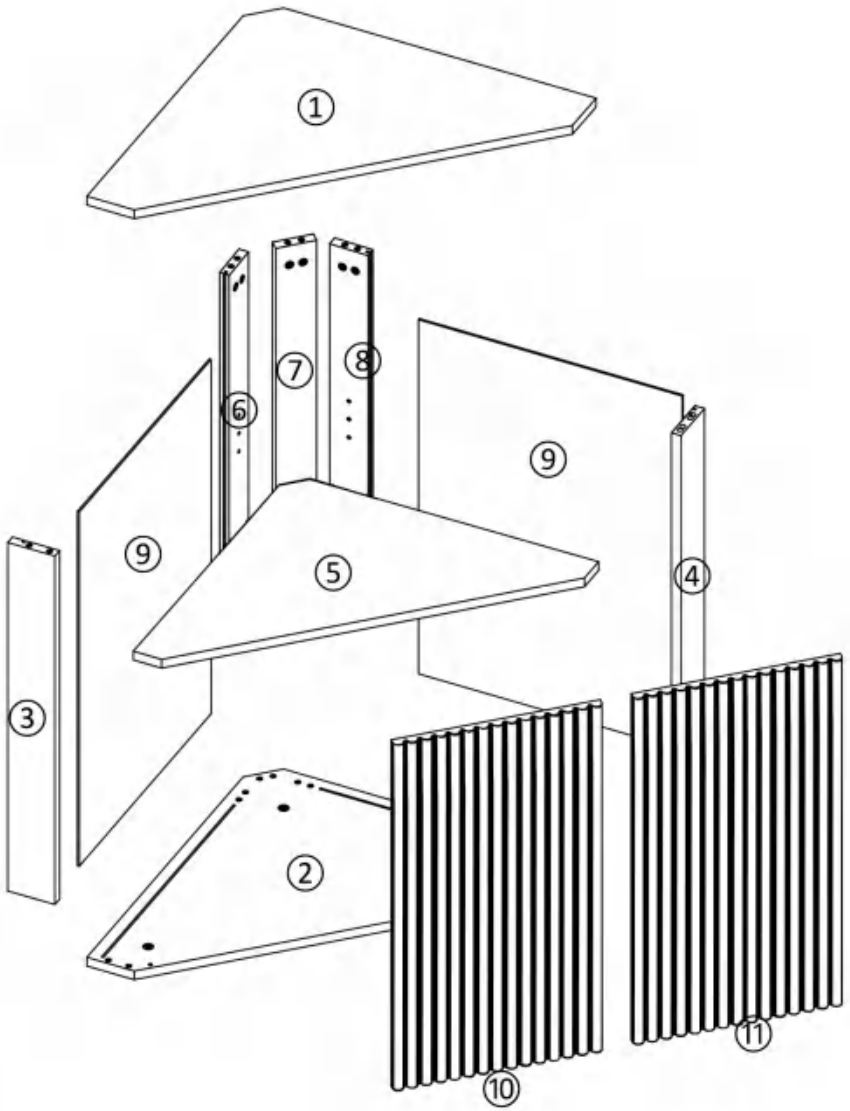


A	B	C	C8	G2	H	I4	X	Y	Z4
20pcs	20pcs	3.5*14 16pcs	3.5*12 8pcs	4pcs	2pcs	2pcs	1pcs	8pcs	8*30 3pcs
AE	AG	AM	AP						
3pcs	1pcs	Decorative paper 20pcs	Anti-slip sticker 3pcs						

Hardware installation demonstration


- Please make sure "A" hardware tightened and can't be pulled out

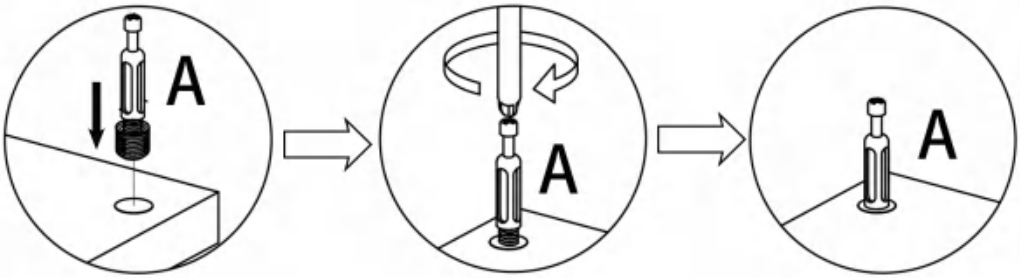

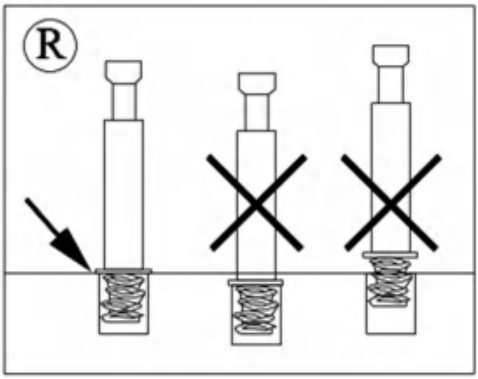


Hardware installation demonstration

- When inserting cam ensure arrowhead on cam points toward the hole on the panel edge

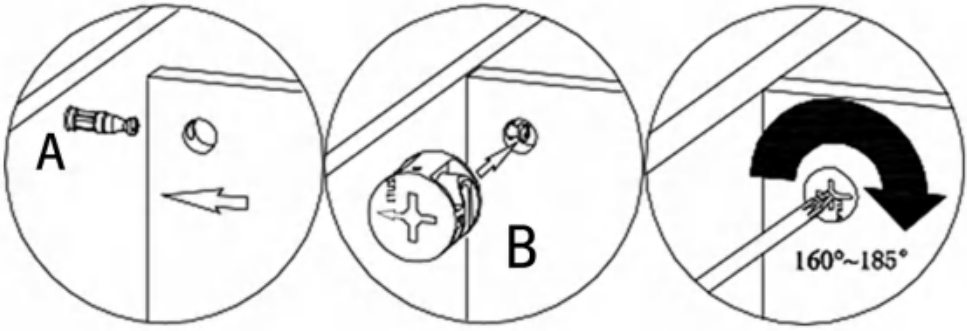

STEP 1

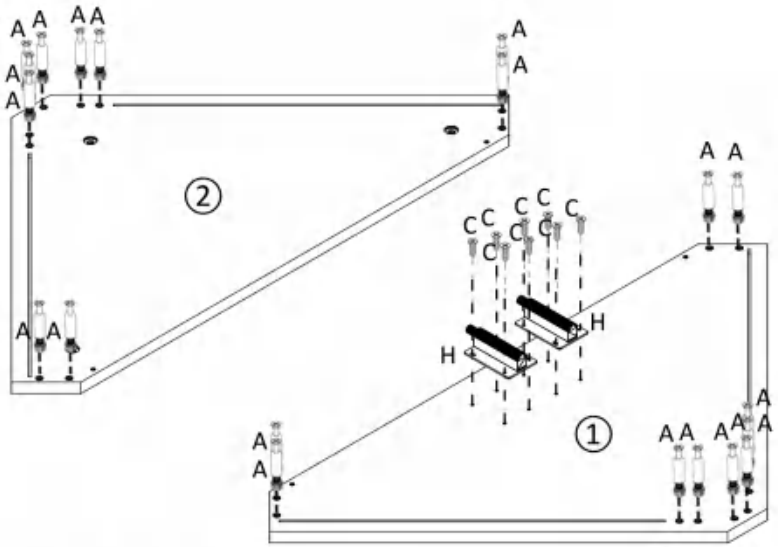



! Please use screws according to the specific size, do not confuse them.



 3.5*14	C*8
	H*2
	A*20


STEP 2

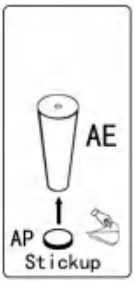


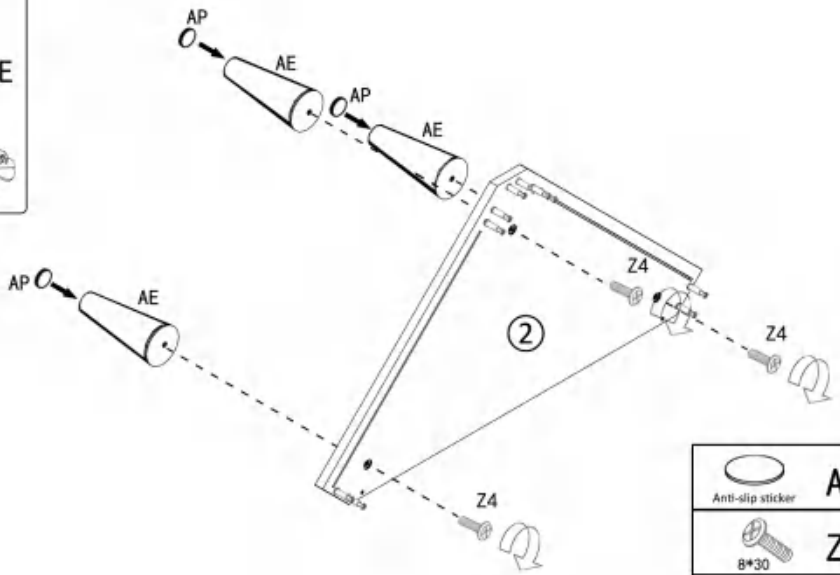

Anti-slip sticker	AP*3
8*30	Z4*3
	AE*3


STEP 3

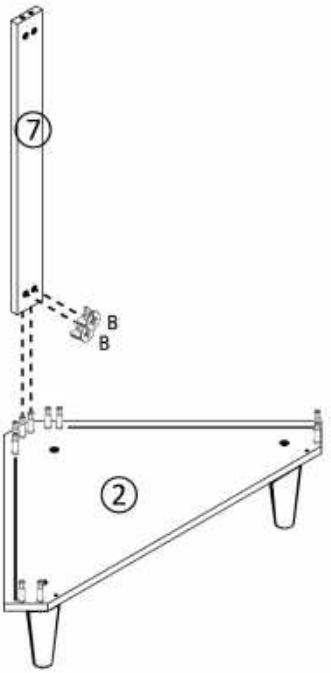




B*2


STEP 4

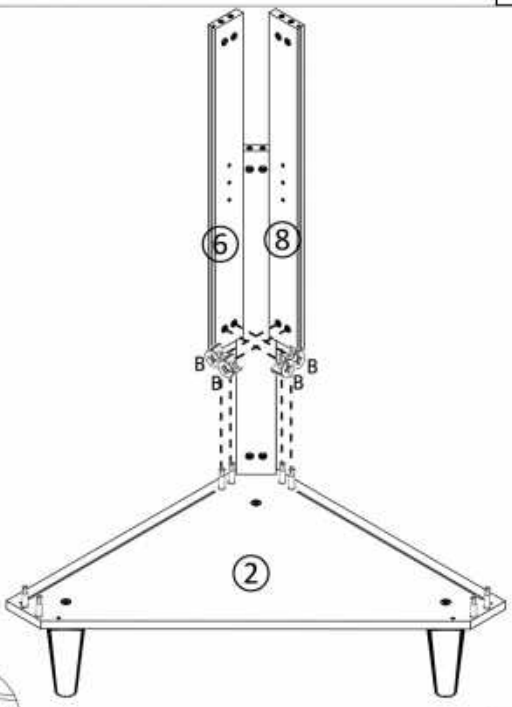




B*4


STEP 5

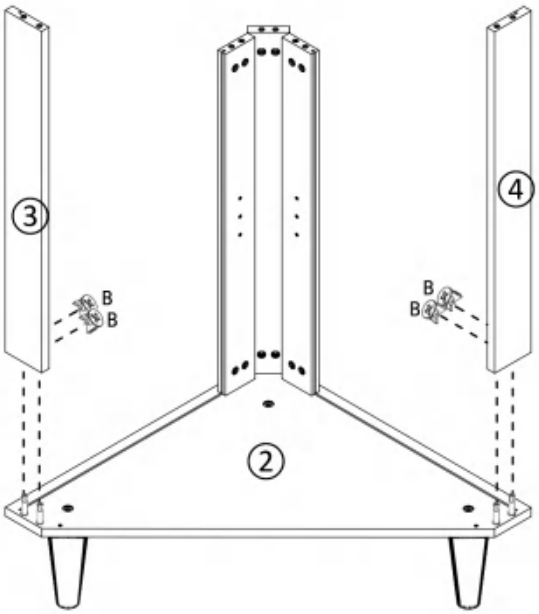





B*4

STEP 6

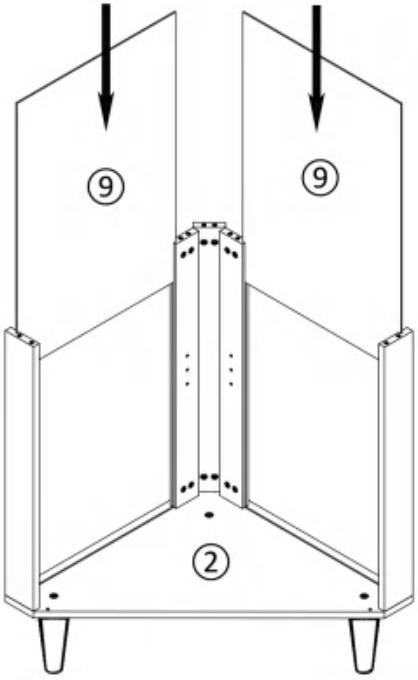


STEP 7

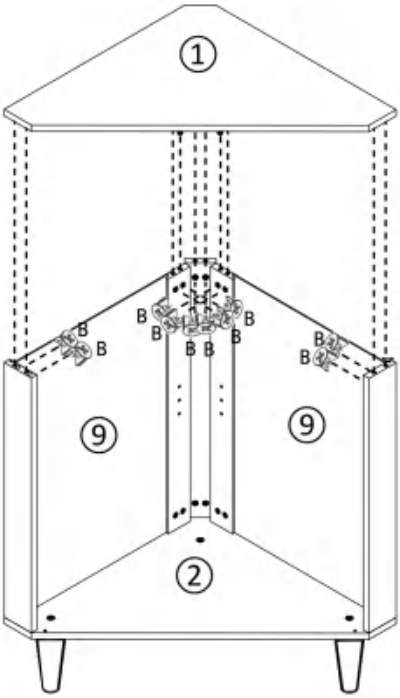




B*10


STEP 8

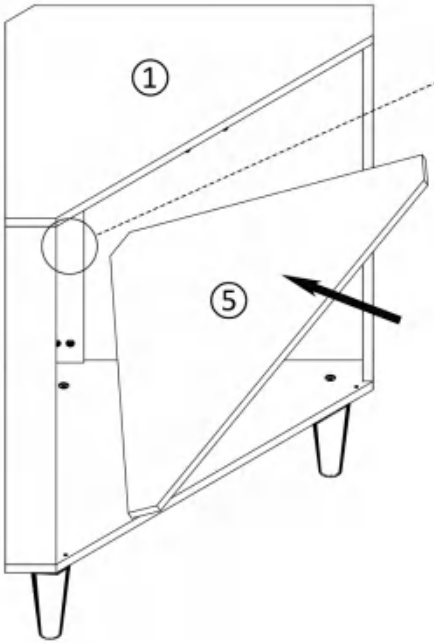


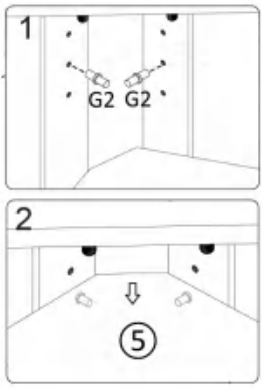



G2*4

STEP 9

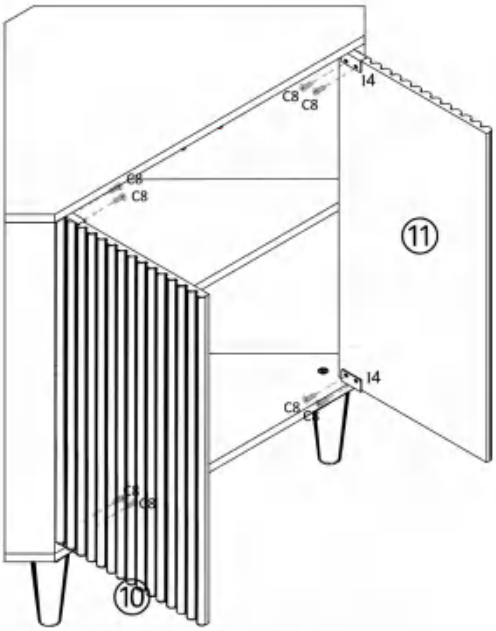

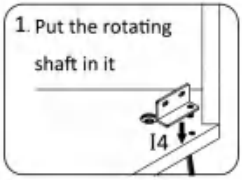


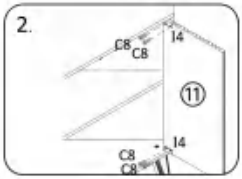

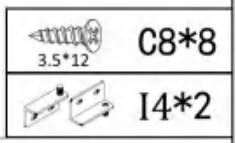

! Please use screws according to the specific size, do not confuse them.


STEP 10

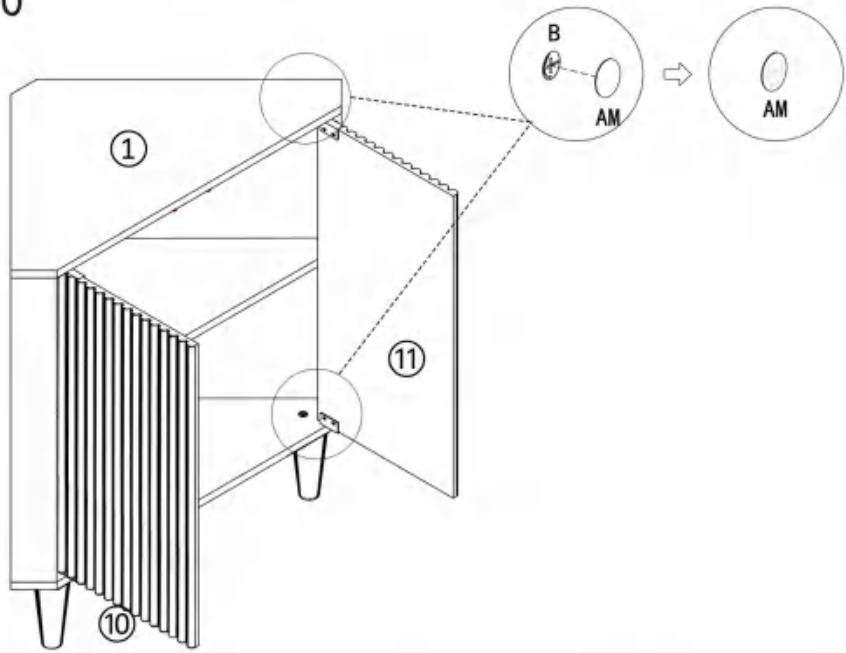


Please stick the decorative paper on the hole



STEP 11

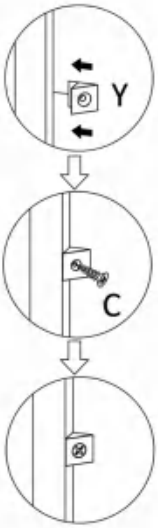


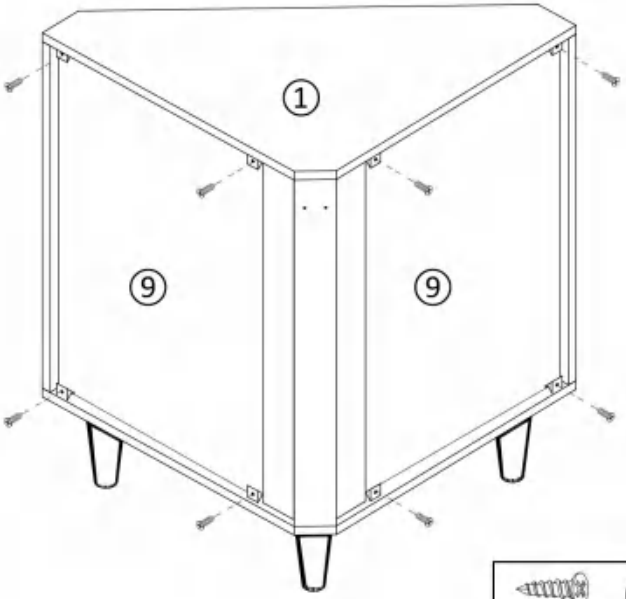


3.5*14	C*8
	Y*8

Use tools to install if necessary

STEP 12

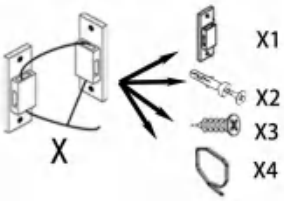

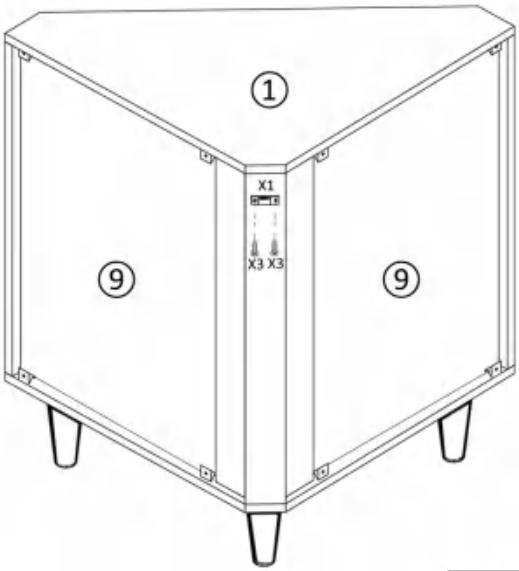



	X3*2
	X1*1

Please separate the parts in bag No.X according to the picture and mark them as X1, X2, X3, and X4.


STEP 13

1. One side of the anti-toppling safety belt is installed on the cabinet body
2. The other side of the anti-toppling safety belt is mounted on the wall
3. The seat belt is fastened through both safety buckles and then tightened

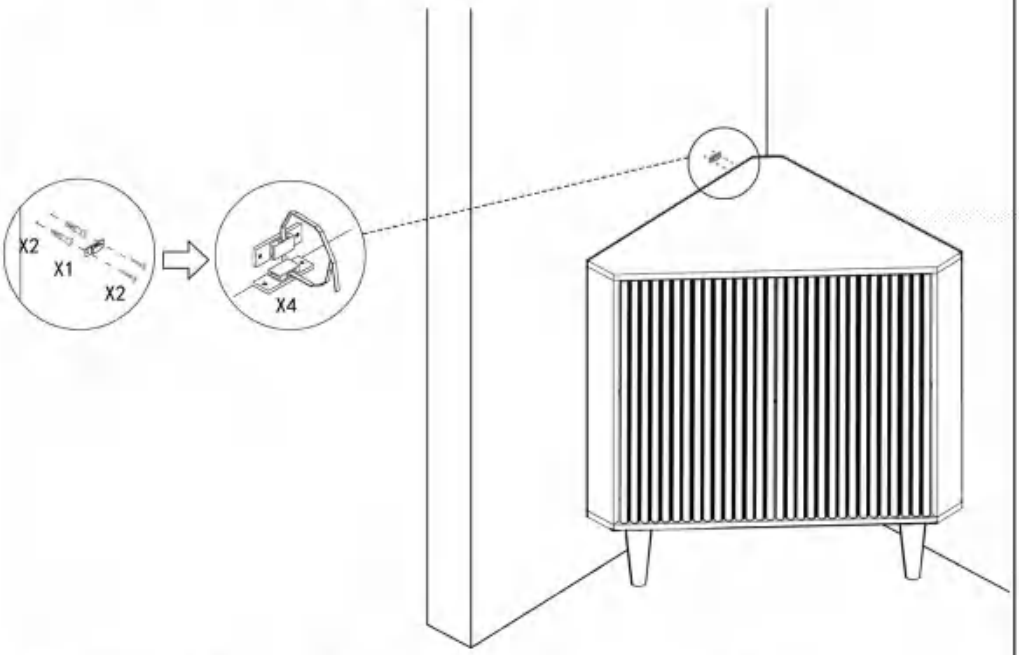


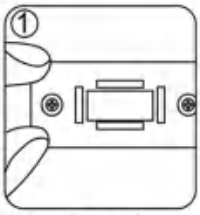

1.make mark on the wall

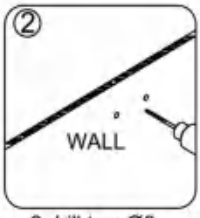


2.drill two Ø6 holes on the wall

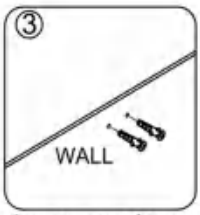

3.put two anchors in the holes



4.fix the device(X1) on the wall by the long screws(X2)

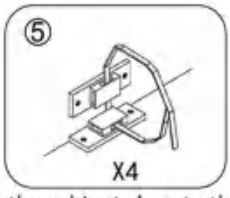

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on belt (X4) to tighten it.

	X1*1
	X4*1
	X2*2