

CROSSBACK CHAIR





IMPORTANT NOTE:


Please read and follow the Assembly Instructions carefully.

- Identify and separate all parts before discarding packaging.
- Place wooden parts on clean soft surface to avoid scratching.
- Do not completely tighten screws until, after final assembly.
- Do not use a power tool for assembly.
- As with all assembled furniture, occasionally check to insure hardware is tight.

TOOL REQUIRED (NOT PROVIDED) PHILIPS SCREWDRIVER

| NO | PART LIST | QTY |
|----|-----------------|------|
| 1 | CHAIR BACK | 1PC |
| 2 | FRONT LEG | 1PC |
| 3 | WOODEN SEAT | 1PC |
| 4 | SIDE RAIL (L/R) | 2PCS |
| 5 | STRETCHER (L/R) | 2PCS |

| NO | HARDWARE LIST | QTY |
|----|--|------|
| A | JCBC BOLT M6 x 50mm  | 8PCS |
| B | SPRING WASHER  | 8PCS |
| C | FLAT WASHER  | 8PCS |
| D | CSK SCREW M4 x 38mm  | 4PCS |
| E | CSK SCREW M4 x 32mm  | 3PCS |
| F | ALLEN KEY  | 1PC |

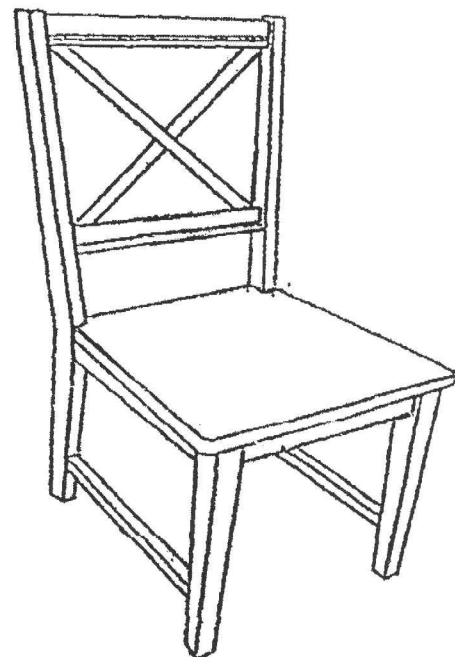


Thank you for purchasing our product!

Give us a chance to make it right.

Do not return this item. Contact our friendly customer service department with any problems or comments. Replacements for missing or damaged parts or hardware are normally shipped


EP 1

LOOSELY ATTACH (L/R) SIDE RAIL TO FRONT LEG USING BOLT (A), SPRING WASHER (B) AND FLAT WASHER (C).

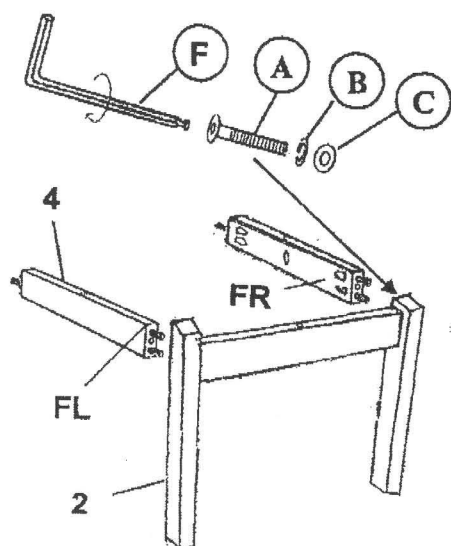


STEP 2

LAY CHAIR BACK OF FLAT SURFACE AND LOOSELY ATTACH (L/R) SIDE RAIL TO CHAIR BACK USING BOLT (A), SPRING WASHER (B) AND FLAT WASHER (C).

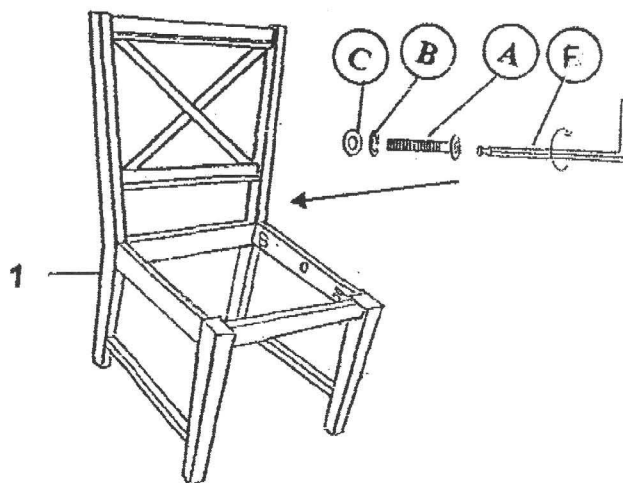

EP 3

PLACE TWO STRETCHER (L/R) IN THE HOLES OF CHAIR BACK AND ALIGN AND FRAME UP CHAIR USING HAND PRESSURE TO GET STRETCHER (L/R) IN PLACE. COMPLETELY TIGHTEN ALL SCREWS.

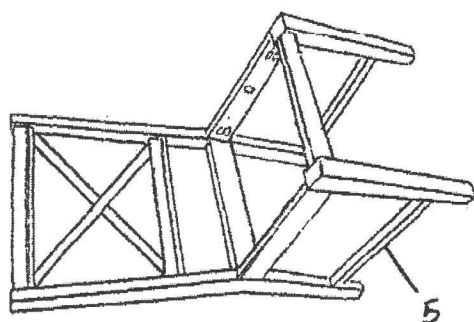

STEP 4

TURN STRETCHER (L/R) SO THE PREDRILLED HOLES FACE DOWNWARD AND SECURE USING 38mm SCREWS (D). ATTACH WOODEN SEAT USING 32mm SCREW (E).

