


Assembly Instructions

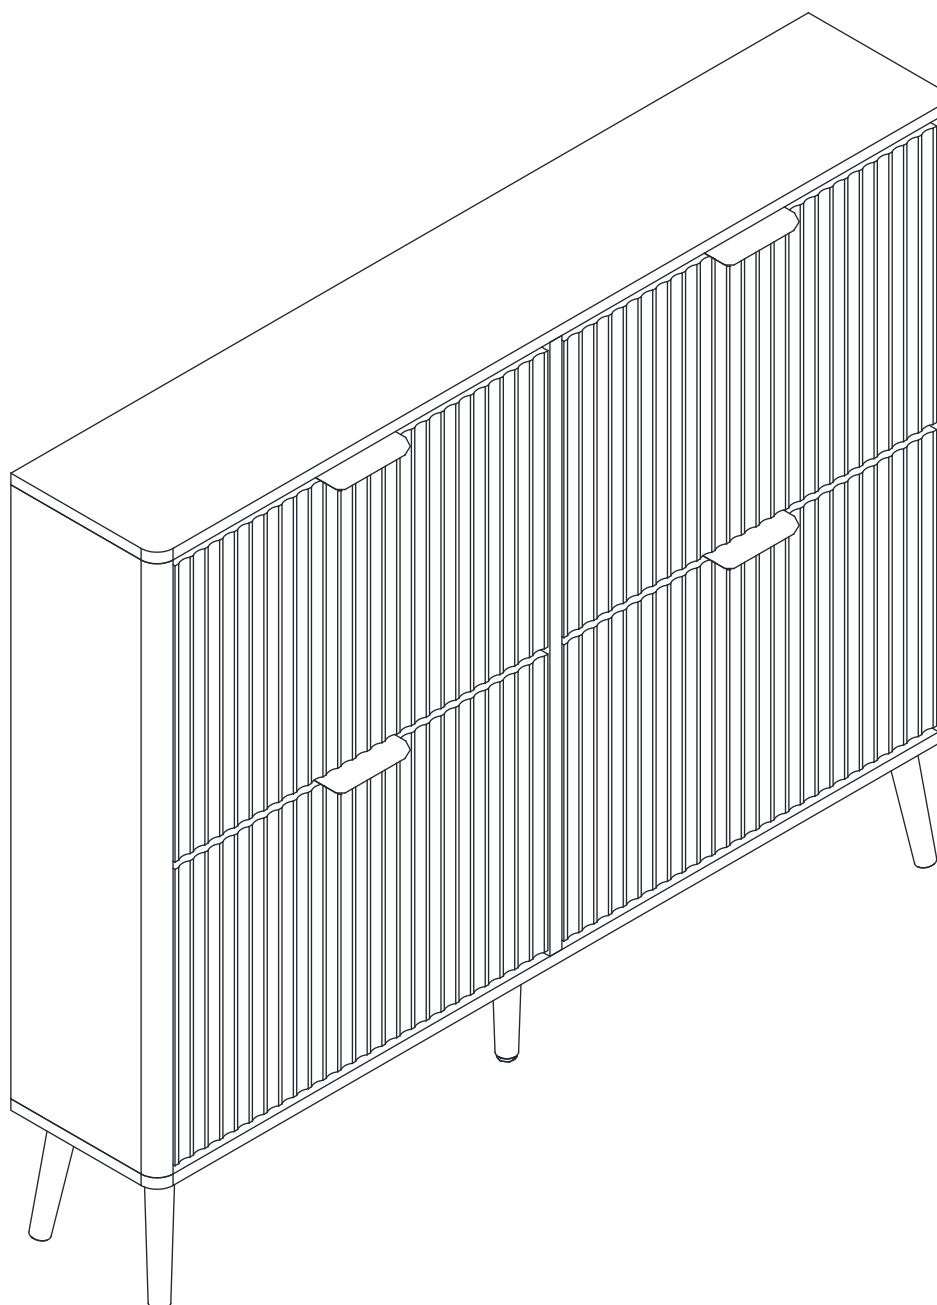

warning notice



- Open your item in the area you plan to keep it for less heavy lifting.



- Identify, sort, and count the parts before attempting assembly.



- Lay all parts on smooth flat surface.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- Do NOT use harsh chemicals or abrasive cleaners on this item.



- Never push, pull, or drag your furniture.



Teamwork

Failure to use 2 people for assembly could result in unit damage or personal injury.

Before You Start


Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process




Have the following tools: Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

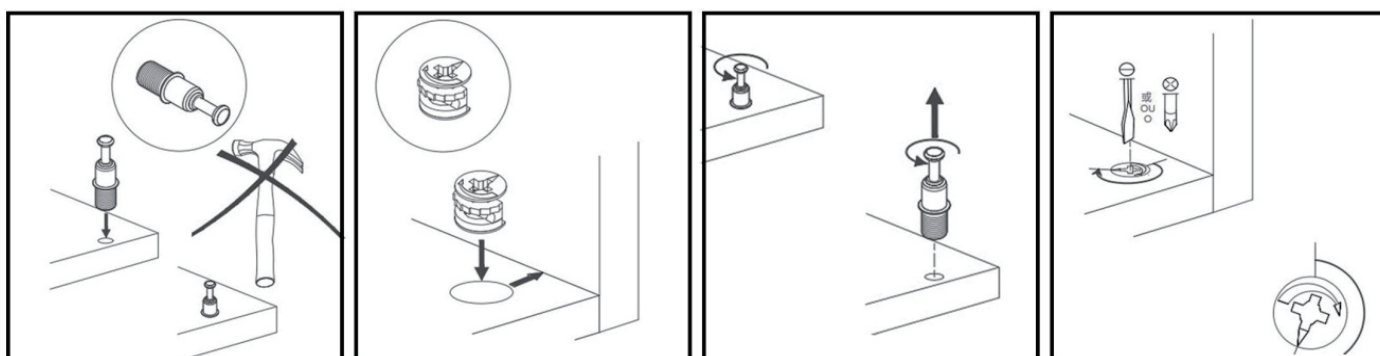


If the door panel is not sitting at a right position or angle, follow the steps below to improve.








- (1) Loosen the hinge, adjust the door panel position (up and down) then fasten the screws to secure the hinge (Step 1), or,
- (2) Loosen the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to secure the hinge (Step 2), or
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.

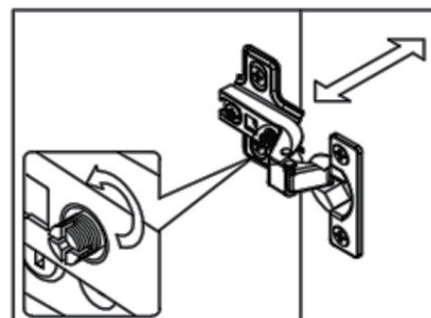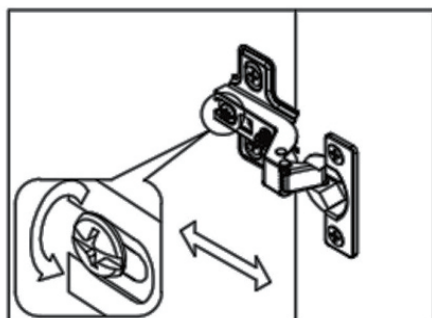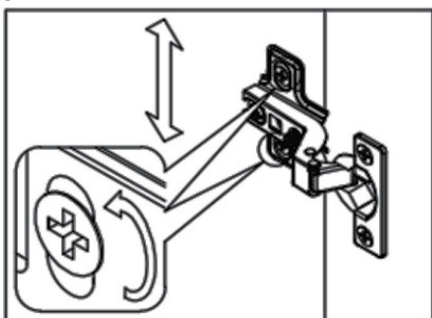















Components

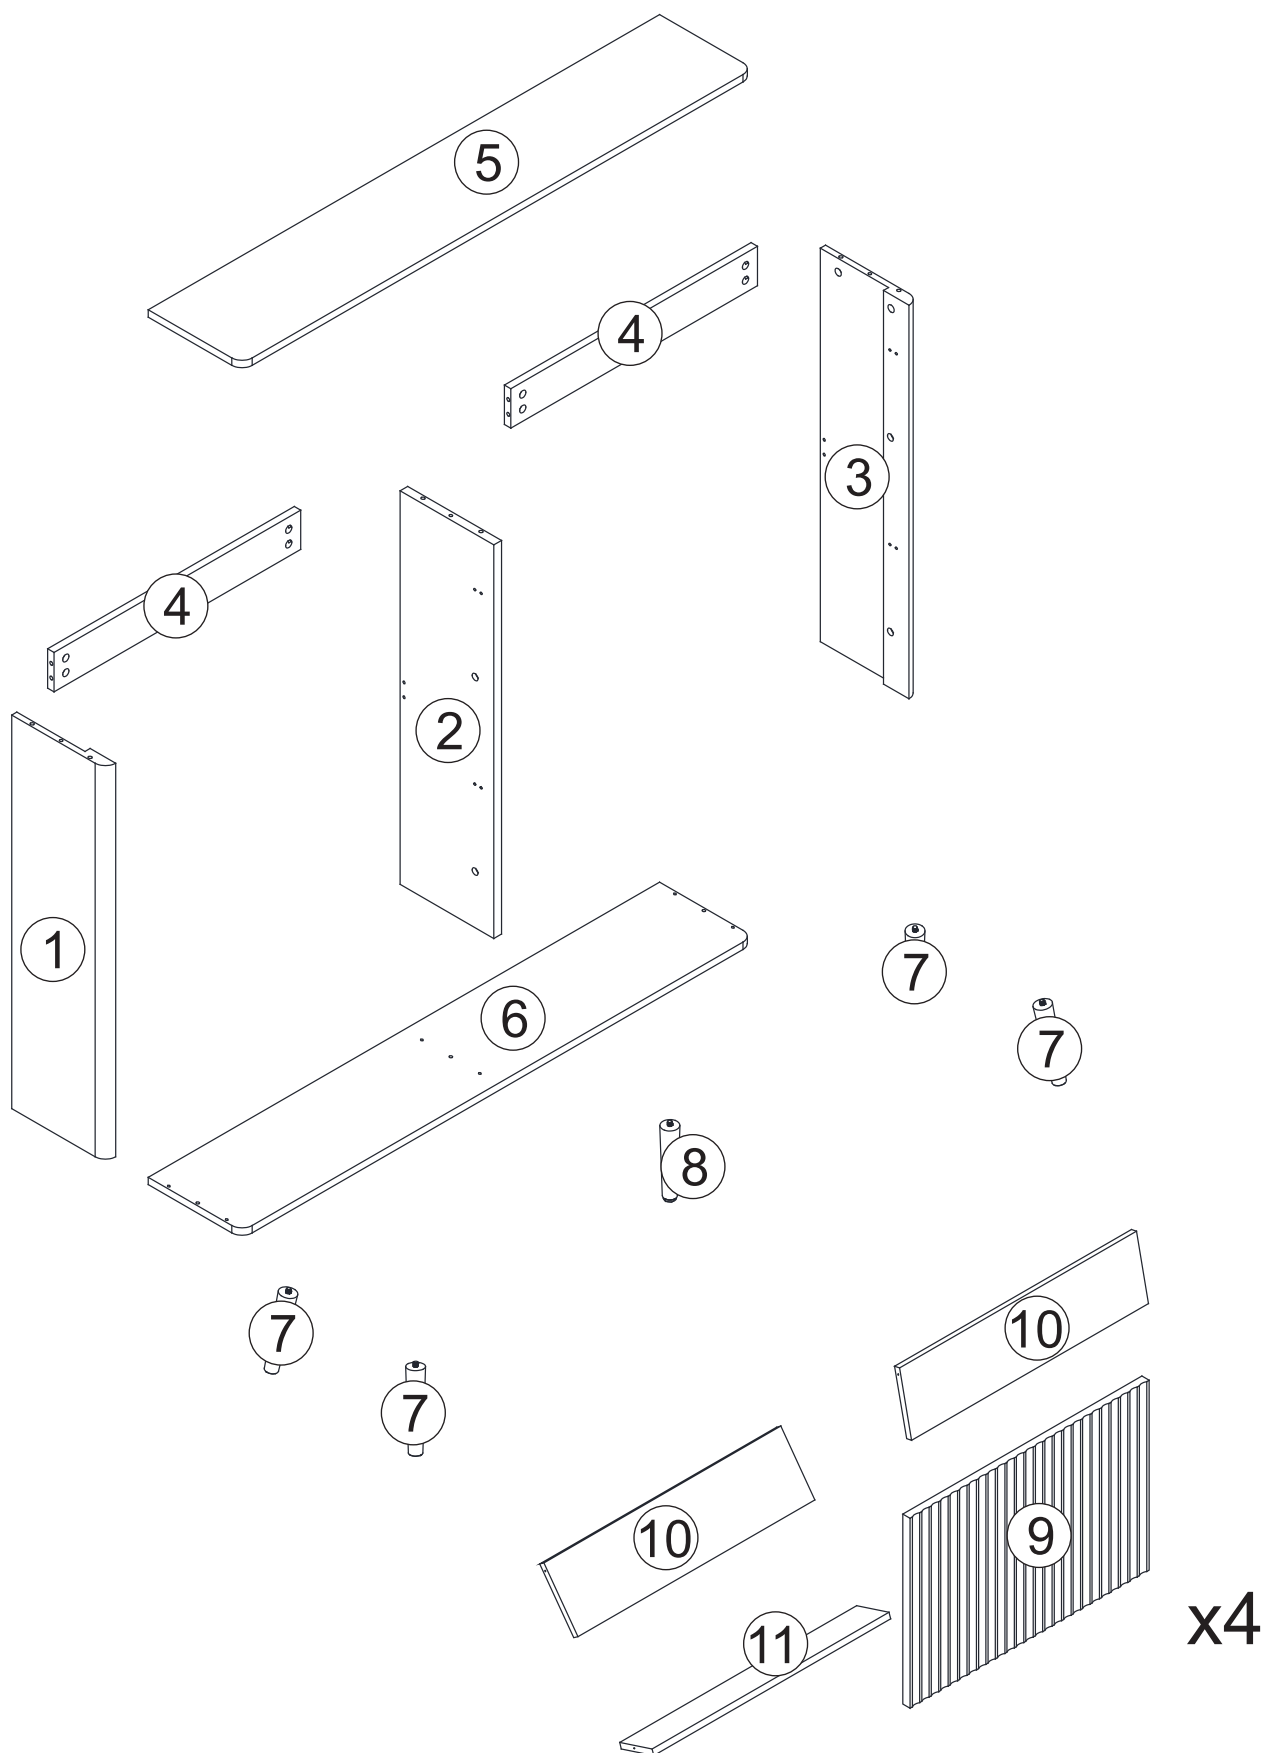

Components

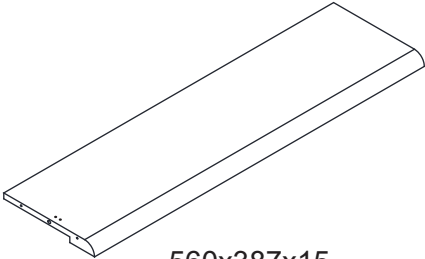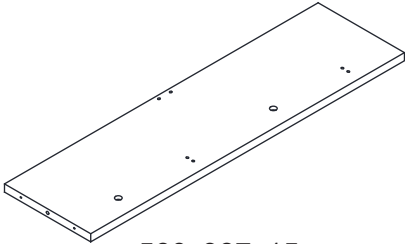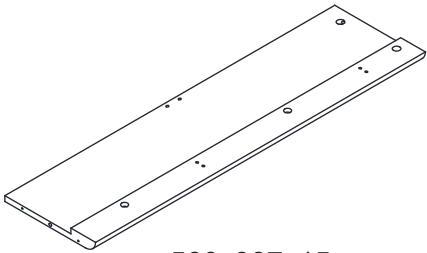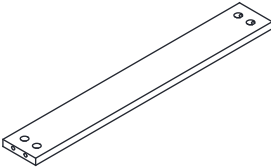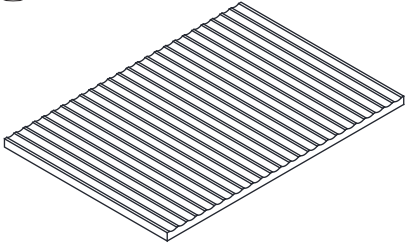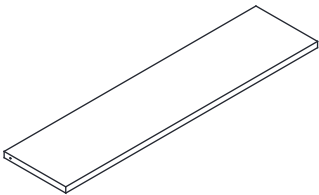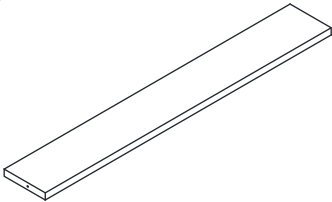
① 1PC  560x387x15	② 1PC  560x387x15	③ 1PC  560x387x15
④ 2PC  578x80x15	⑤ 1PC  1200x220x15	⑥ 1PC  1200x220x15
⑦ 4PC 	⑧ 1PCS 	⑨ 4PCS  560x387x15
⑩ 8PC  555x138x12	⑪ 4PC  555x85x12	

Components

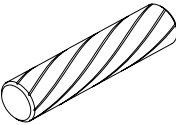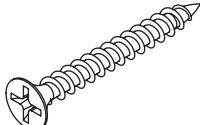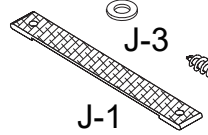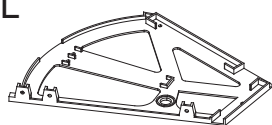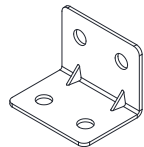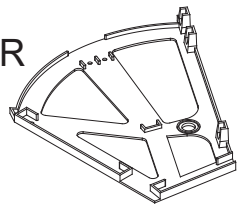A  14 PCS +1(spare)	B  14 PCS +1(spare)	C  6 PCS	D M4x35  8 PCS
E M3.5x12  64 PCS +5(spare)	F  4 PCS	G  4 PCS	H  1 PCS
I M4x12  24+2 PCS	J  J-1 J-2 J-3 J-4 2 PCS	K  K-1 K-2 K-3 8 PCS	L  4 PCS
M  4 PCS	N  1 PCS	O  2 PCS	P M4*10  8 PCS
R  4 PCS			

Assembly Instructions



STEP 1

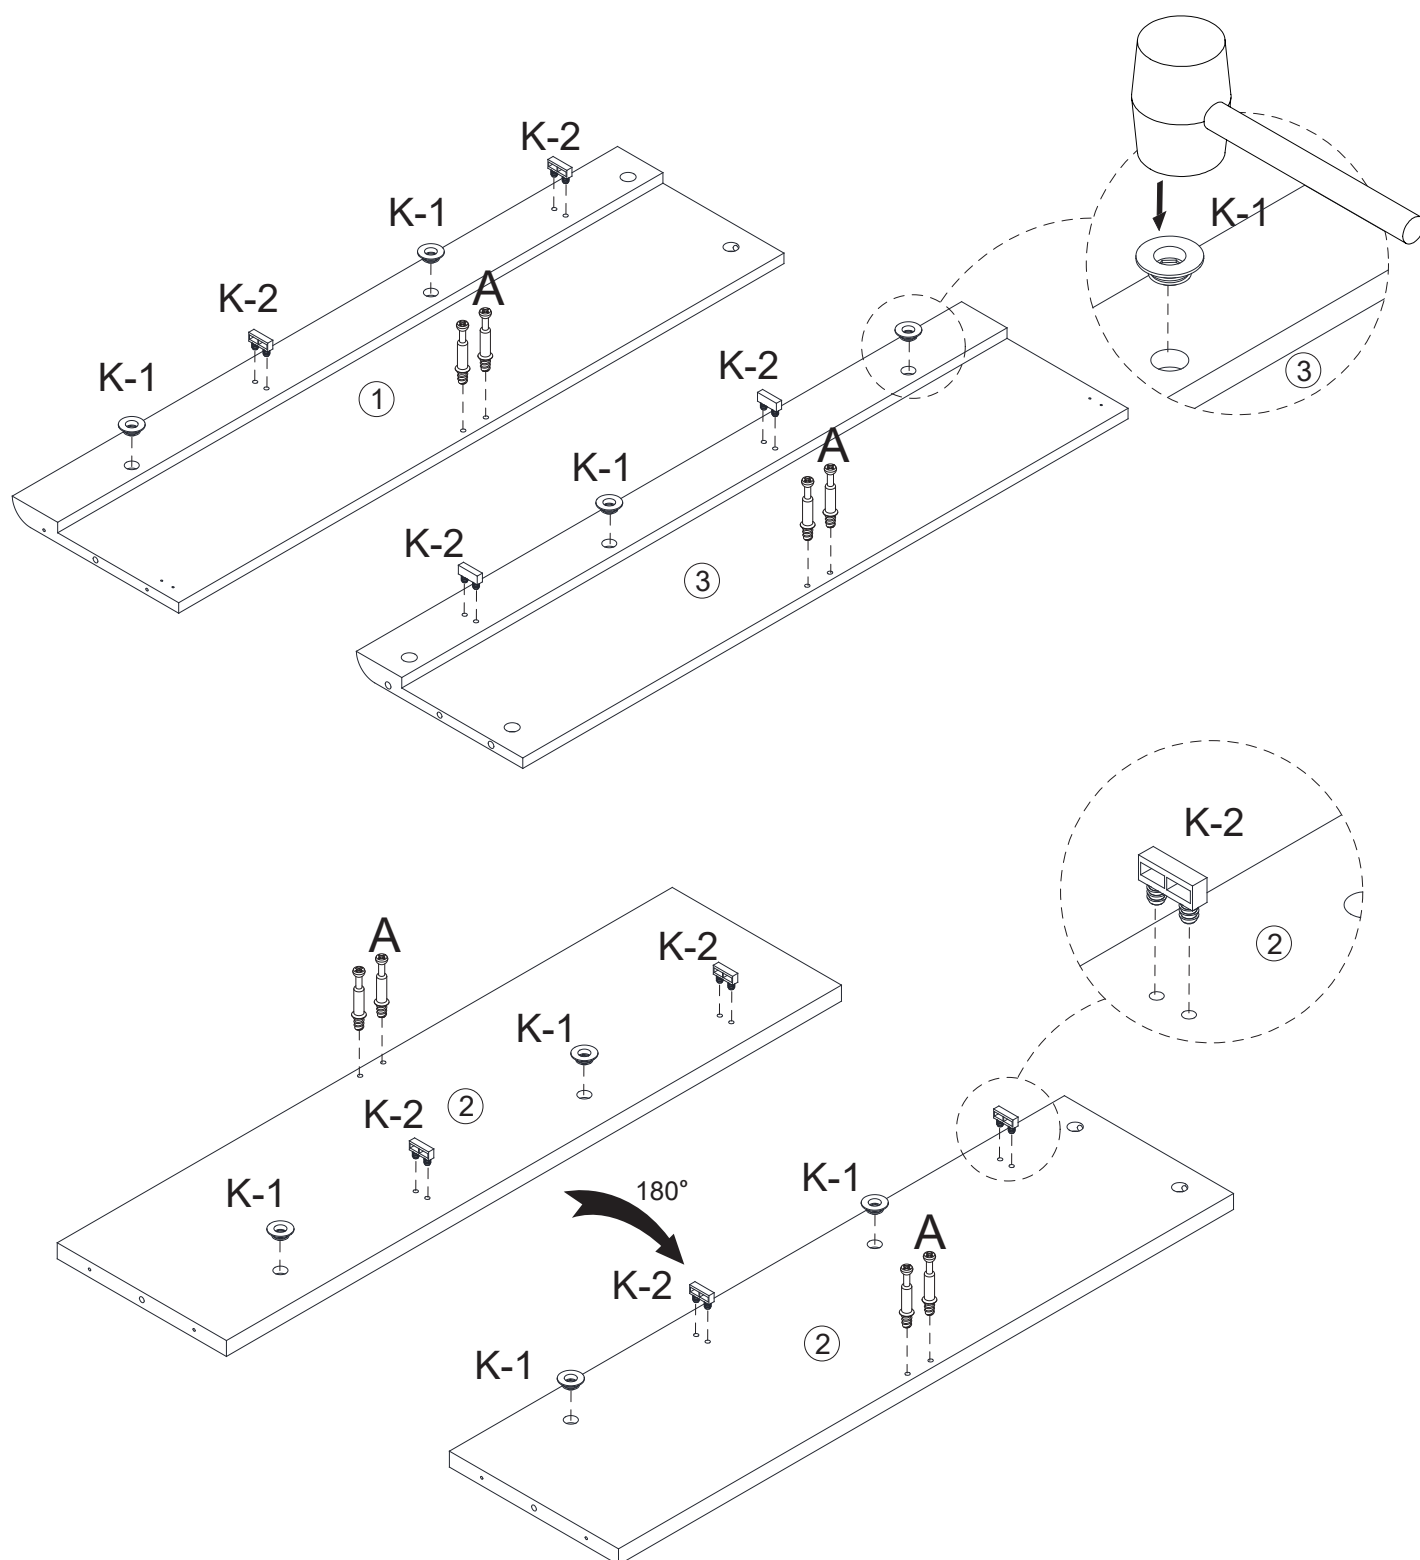



	K-1 K-2  
A	x8
K	x8

Assembly Instructions

STEP 2

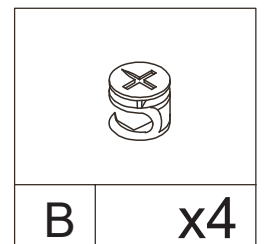
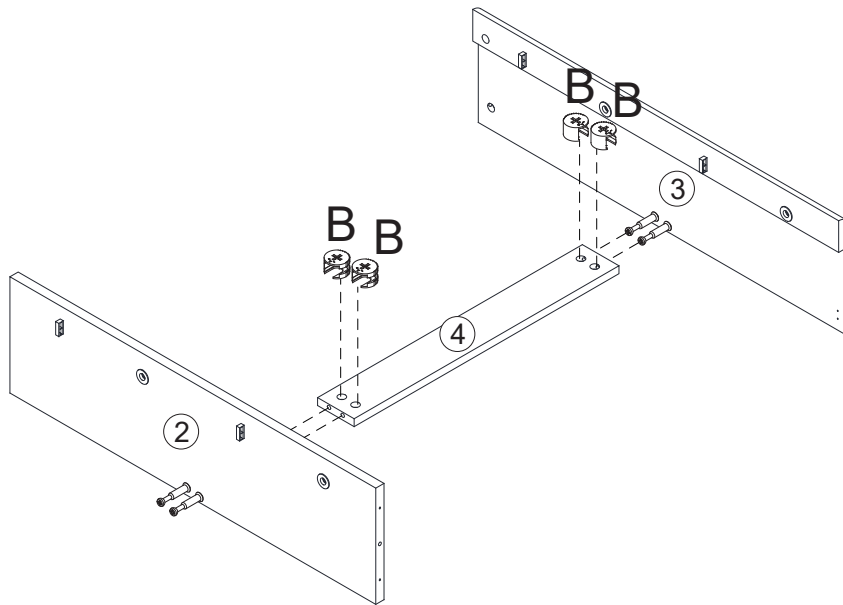


STEP 3

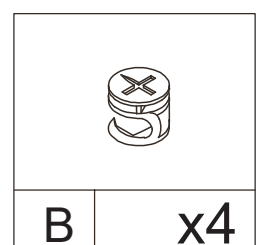
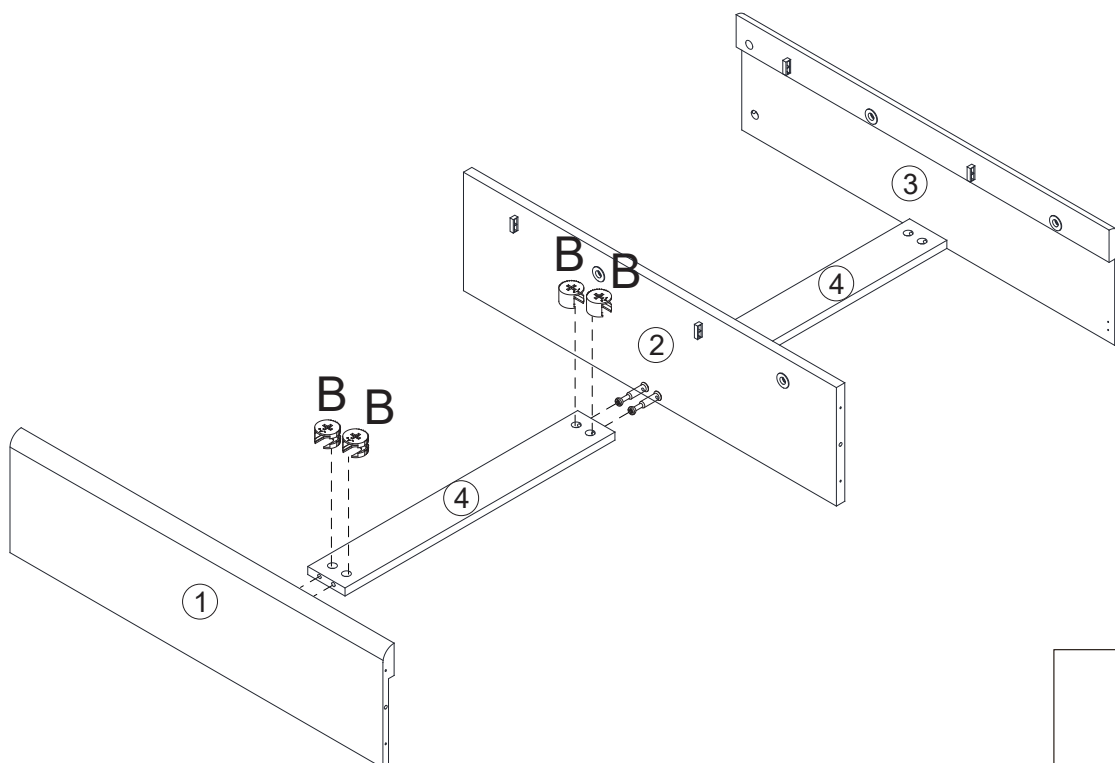


Assembly Instructions

STEP 4

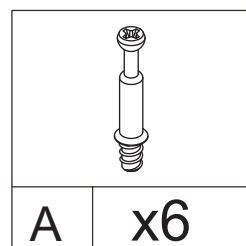
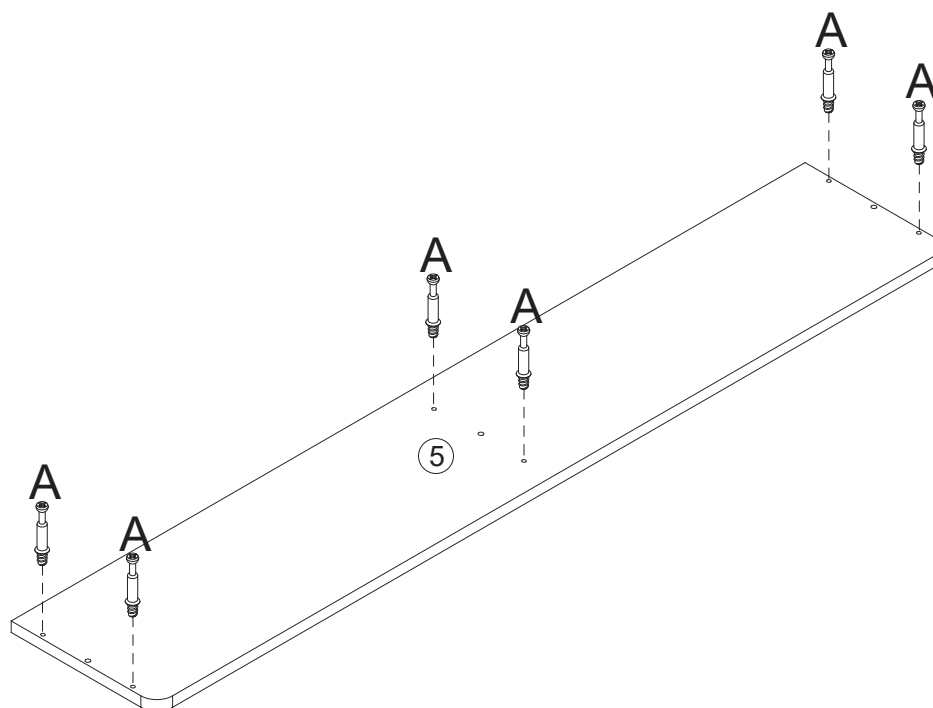


STEP 5

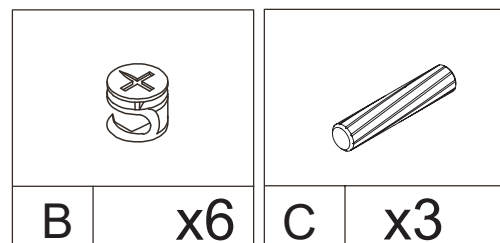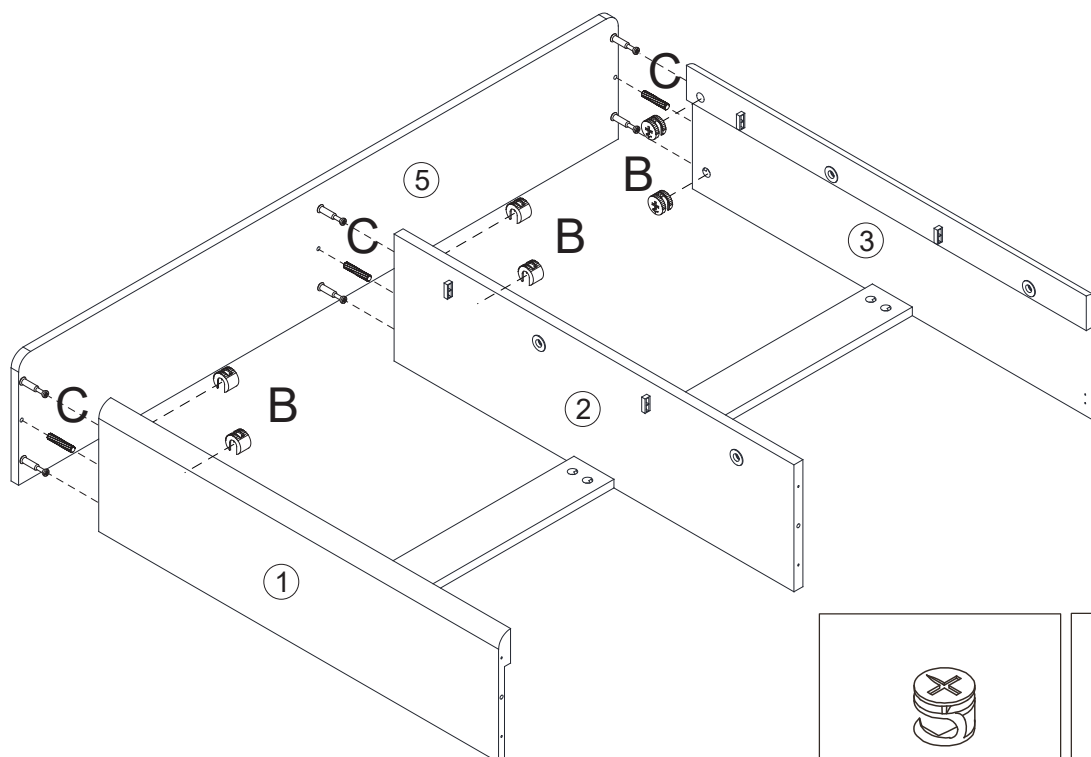


Assembly Instructions

STEP 6

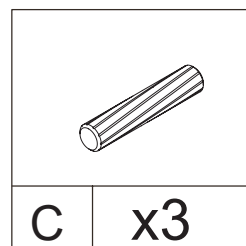
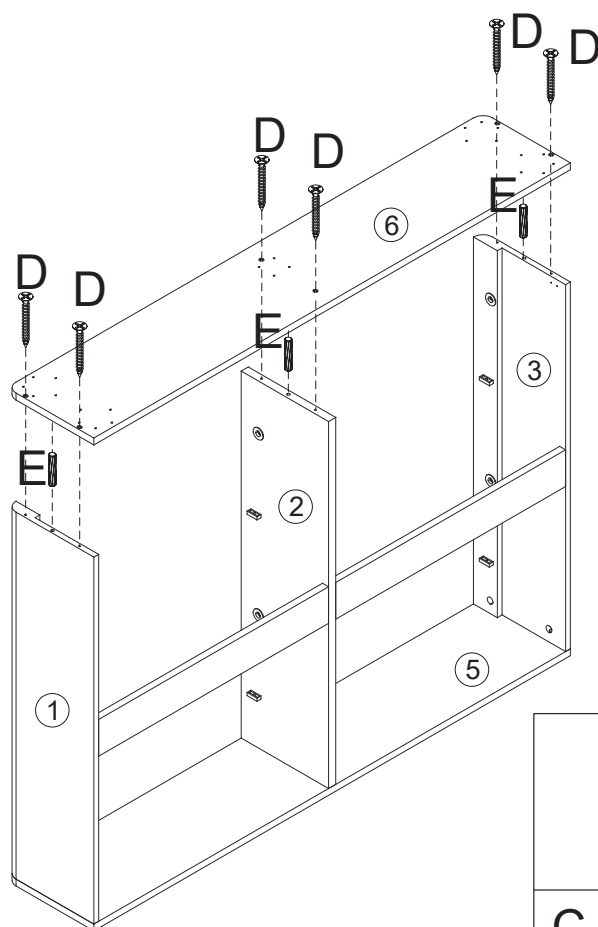


C x3

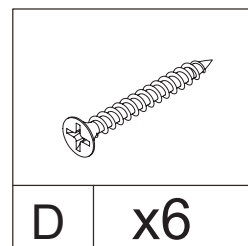


D x6


STEP 7

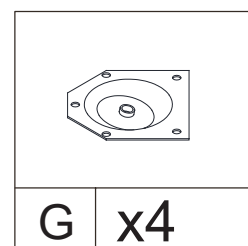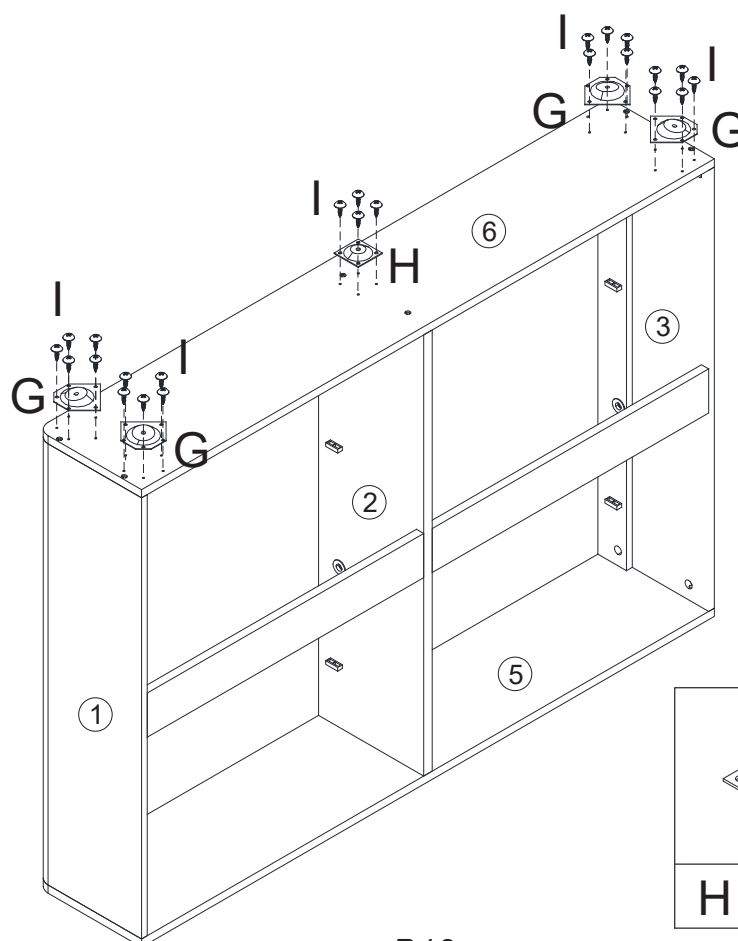

G x4

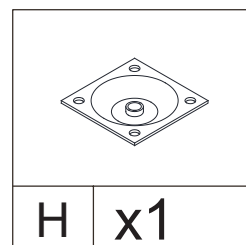


H x1

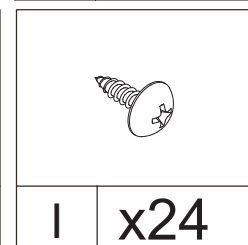




I x24

Assembly Instructions

STEP 8

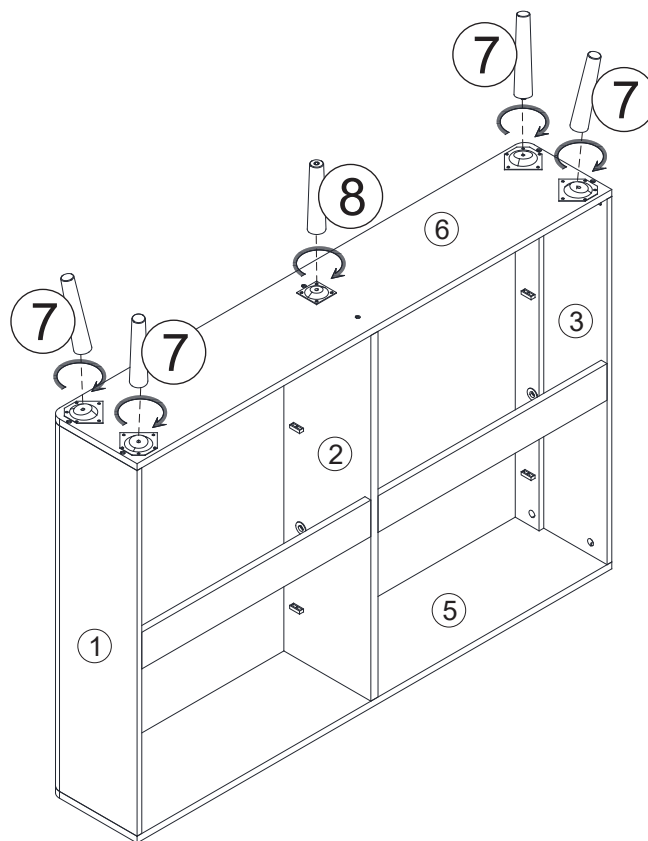


STEP 9

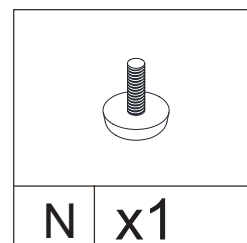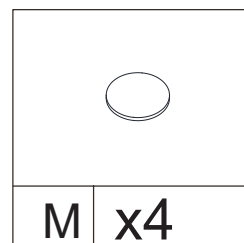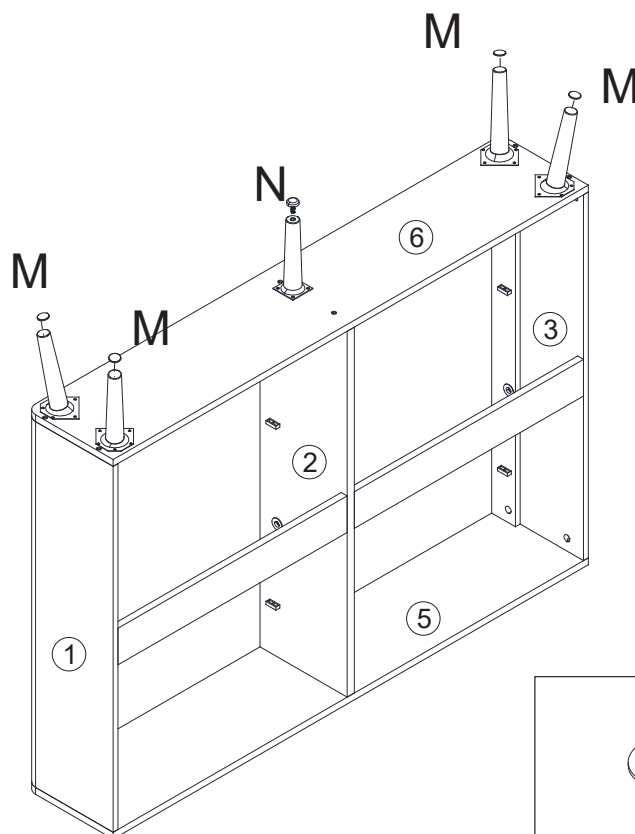


Assembly Instructions




STEP 10

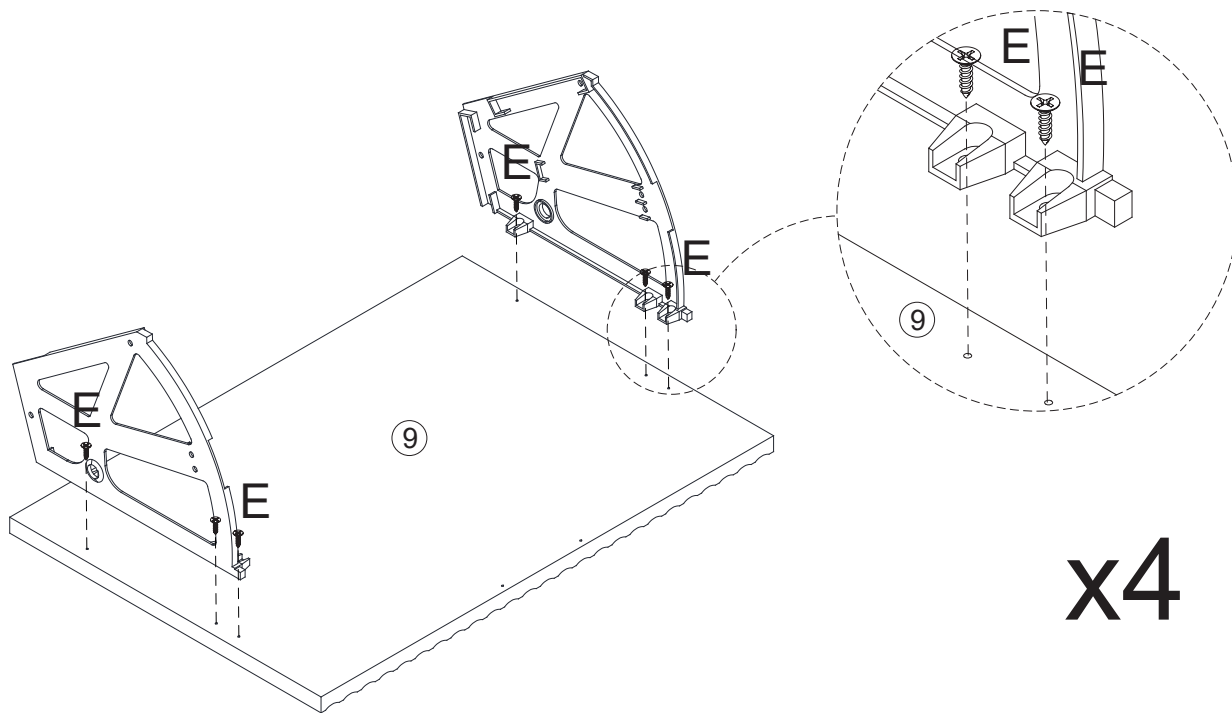

x4

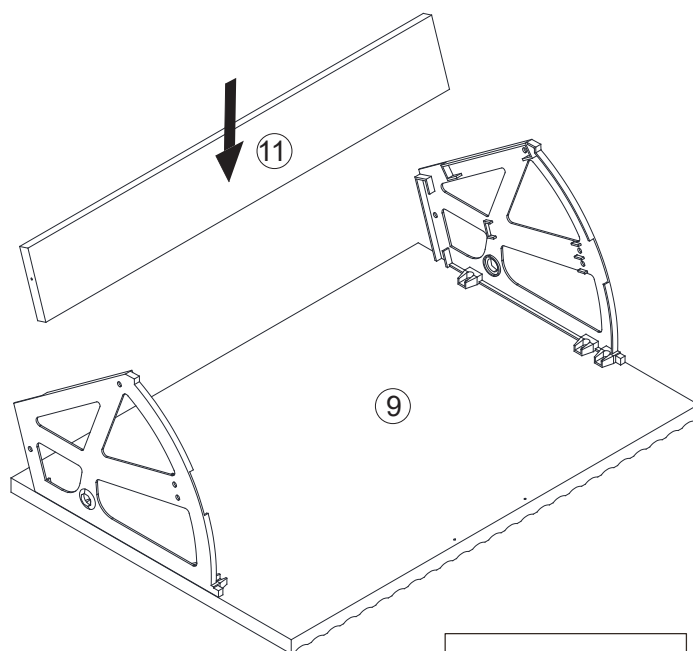


x4

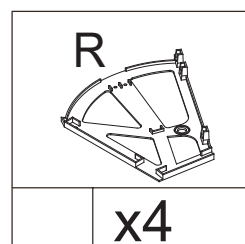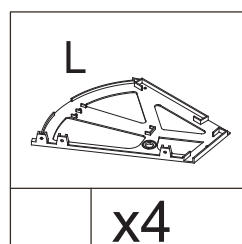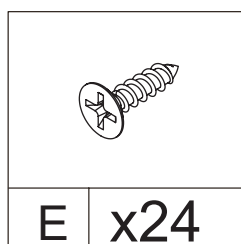


Assembly Instructions



STEP 11

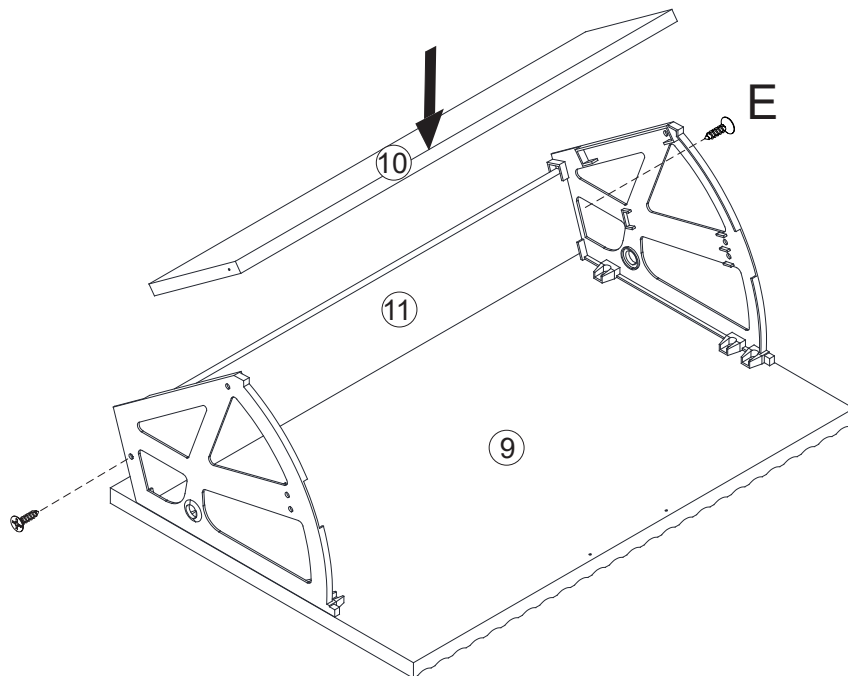

x4


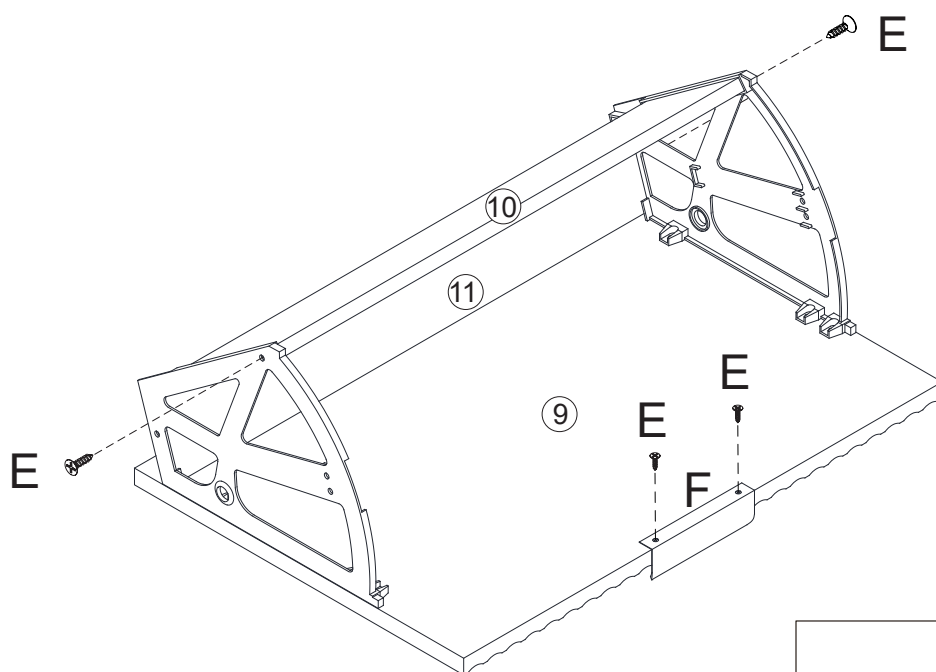


x4

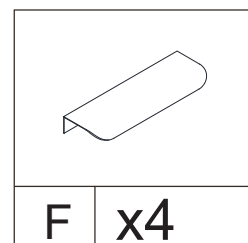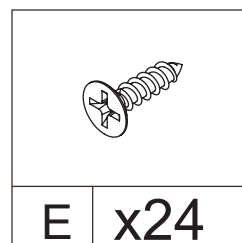


Assembly Instructions

STEP 12

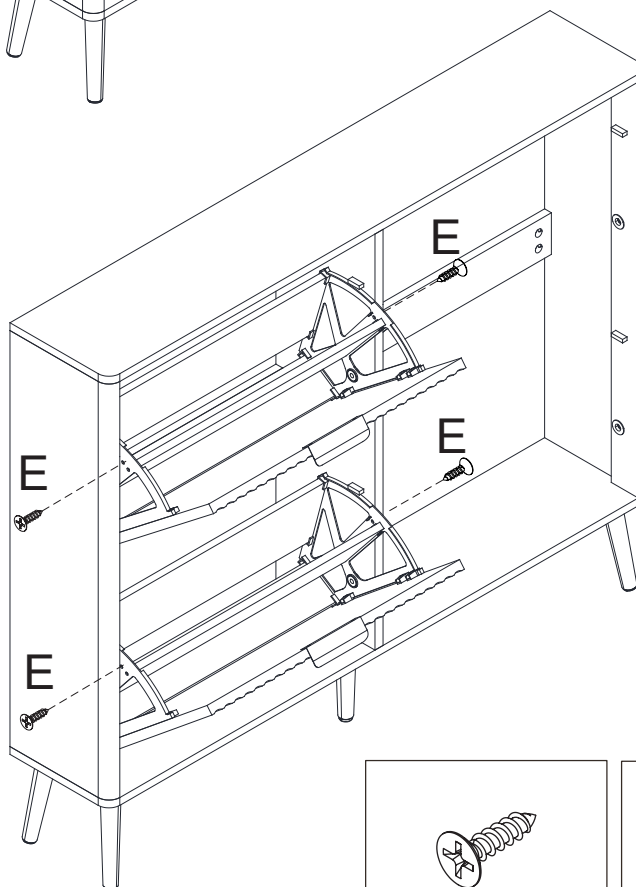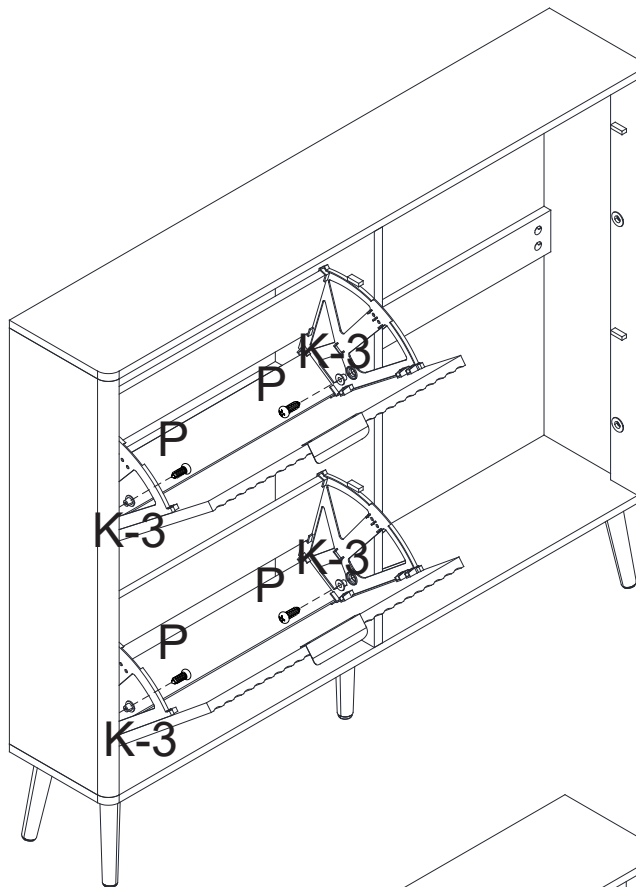

E x4







P x4



K x4





Assembly Instructions

STEP 13

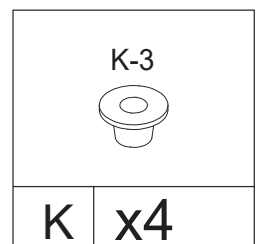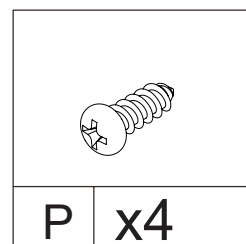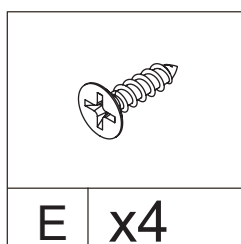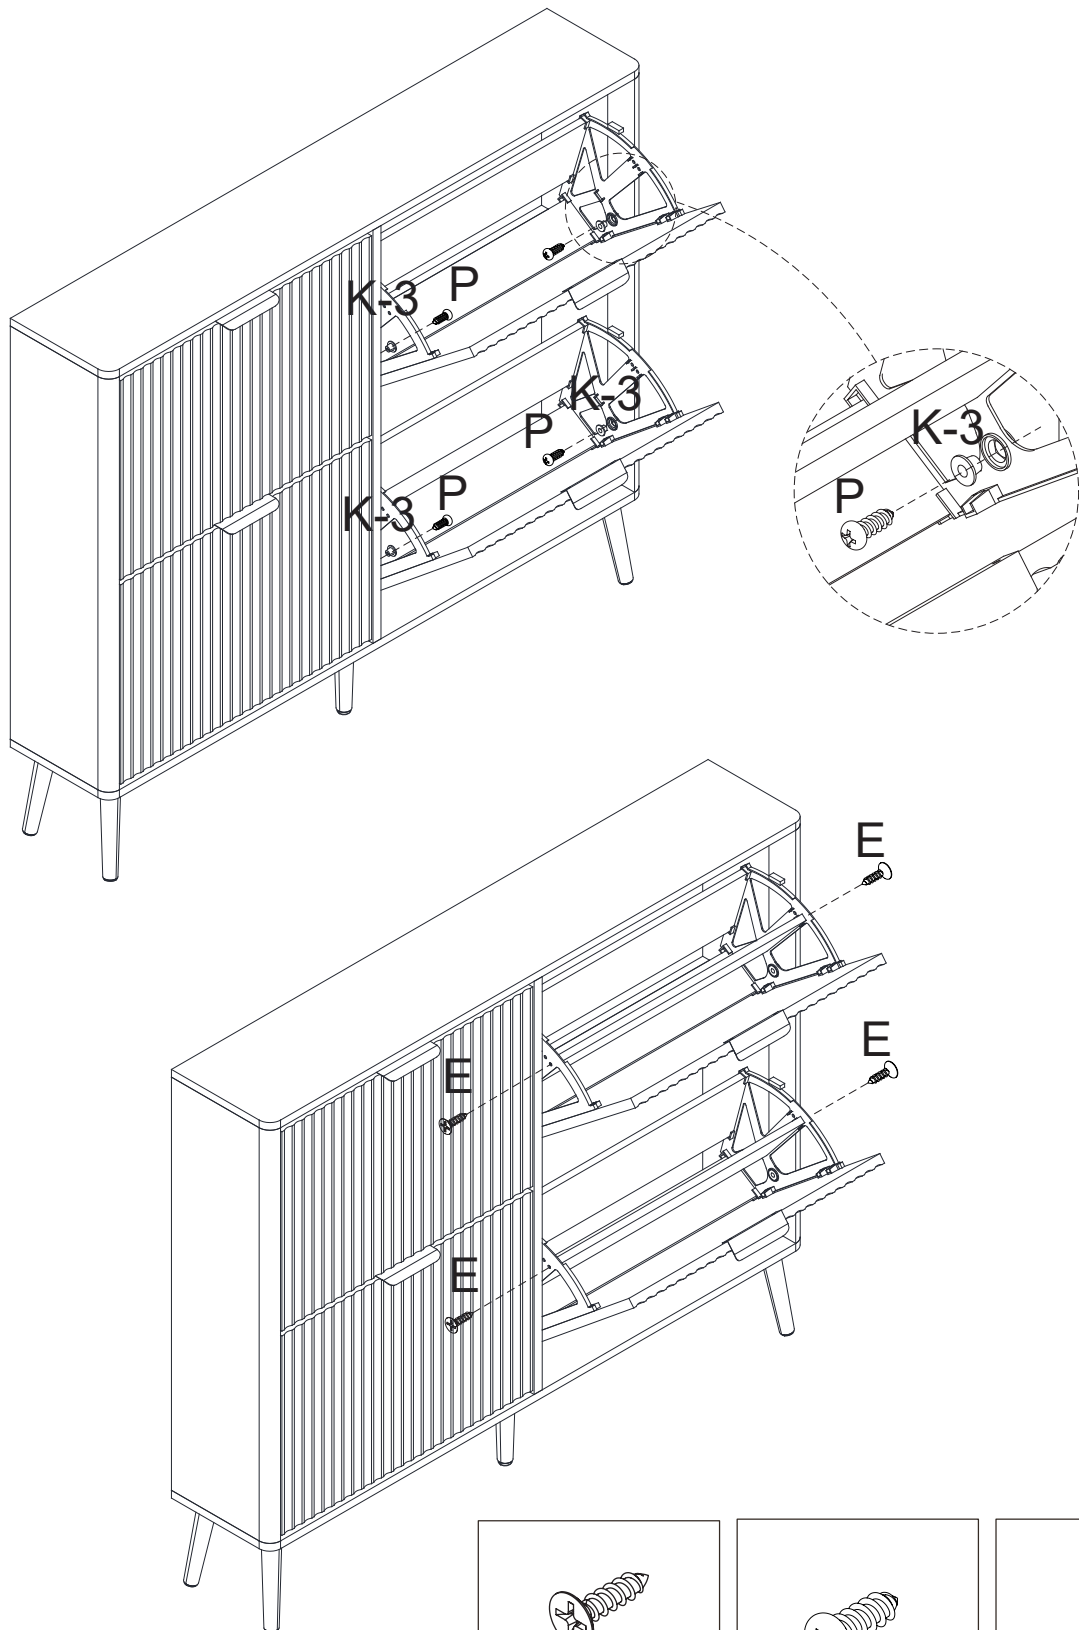

Assembly Instructions

STEP 14

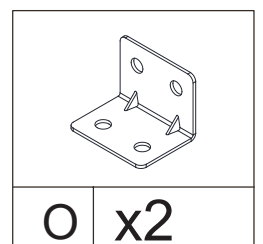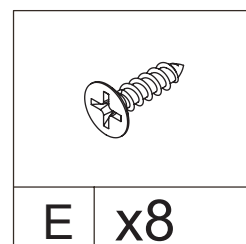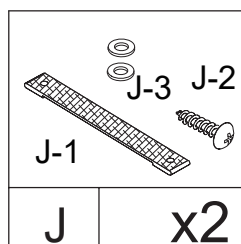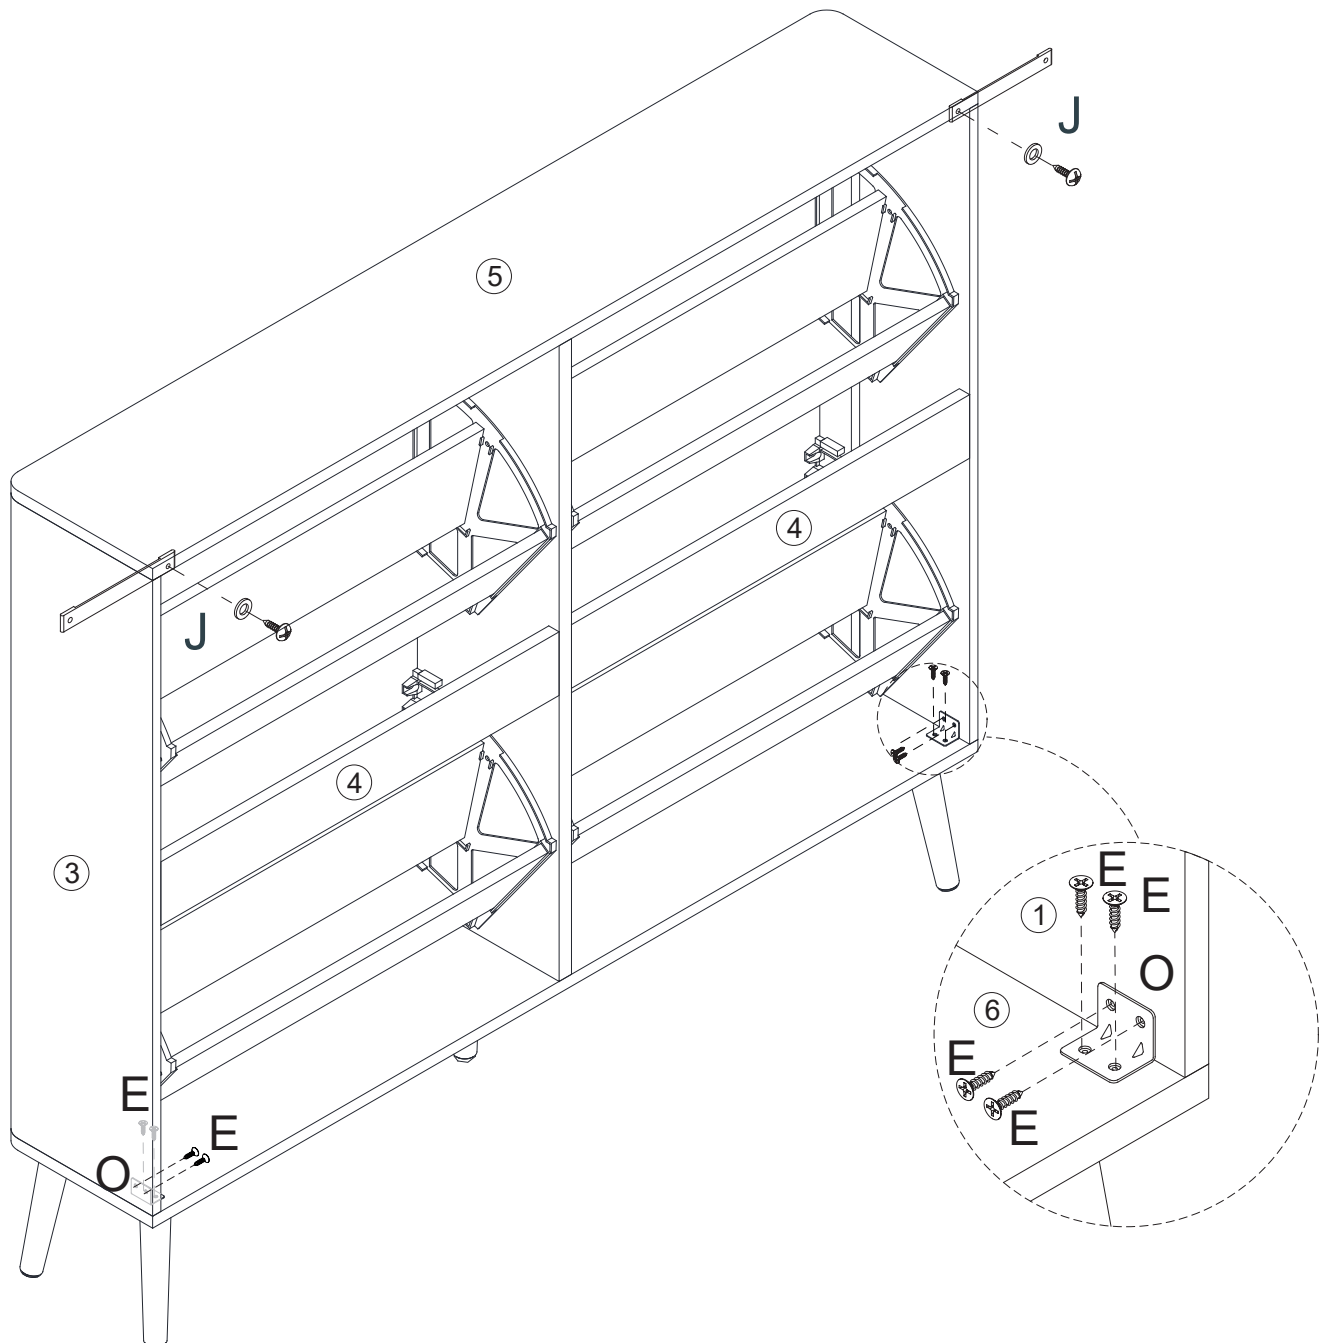

Assembly Instructions

STEP 15

