

Platform Bed

Congratulations on the purchase of your Platform Bed. This bed has been crafted to the highest standards of quality and safety and will give you many years of enjoyment and practical use.

On this insert you will find a list of the hardware and platform bed parts included as well as detailed assembly instructions. Assembly is quite simple and requires only a flat head screwdriver and a Phillips head screwdriver. The use of a power drill with Phillips head attachment is helpful but not necessary. Assembly will be most easily accomplished if you take the time to carefully sort the hardware and familiarize yourself with the function of each piece.

If you need assistance with assembly, part replacement or any other matter, please contact the toll-free Customer Service Team. You may also email your request or comments to our email and a customer service representative will respond.

Thank you and Enjoy

HARDWARE LIST



70mm bolts
Used to connect drop supports to center supports
TWIN (0) QUEEN (1)
FULL (1) KING (4)



30mm slat screws
Used to secure slats to rails
TWIN (24) QUEEN (39)
FULL (36) KING (52)



Barrel nuts
Used to secure bolts
TWIN (0) QUEEN (1)
FULL (1) KING (4)




20mm wood screws
Used to secure center support
TWIN (0) QUEEN (4)
FULL (4) KING (8)




Hex key
Used to tighten bolt hardware

BED PARTS

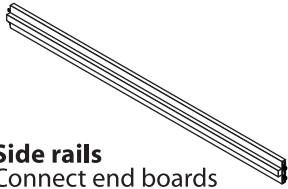

2 **Side rails**
Connect end boards




1 **Slat bundle**
Rest on side rails and supports mattress (**strap side down**)




Drop supports
Used to attach center support
0 **TWIN** 1 **QUEEN**
1 **FULL** 4 **KING**

TWIN

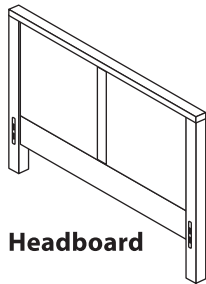


1 **Headboard**

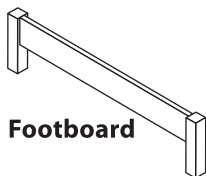


1 **Footboard**


FULL / QUEEN

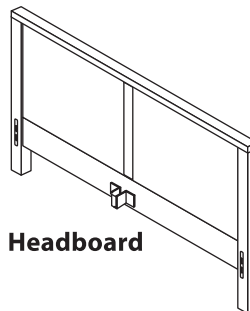

1 **Headboard**

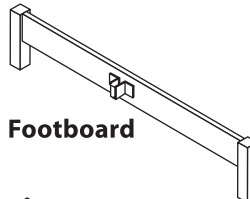


1 **Footboard**

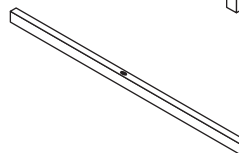


1 **Center support**
Used to attach drop support


KING

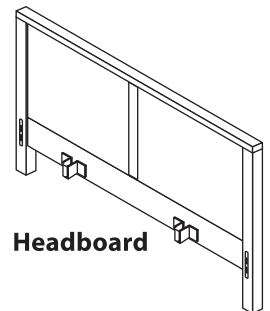

1 **Headboard**

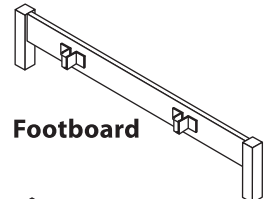

1 **Footboard**

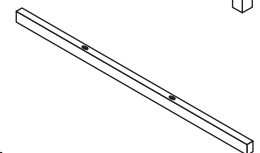

2 **Center supports**
Used to attach drop support

1) Slide one rail into the grooves of the headboard (A). Make sure the slat rail is facing the inside of the bed. Repeat this process with the other side rail. Next do the same with the other end of the rails into the footboard (B). Then tap the top of the rail ends gently with a rubber mallet to make sure the connections are secure. If you have the TWIN size bed, skip Step (2) & (3) and go to Step (4).

