


INSTALLATION MANUAL

2 Tier Individual Pull-Out Cabinet Organizer (LY003)

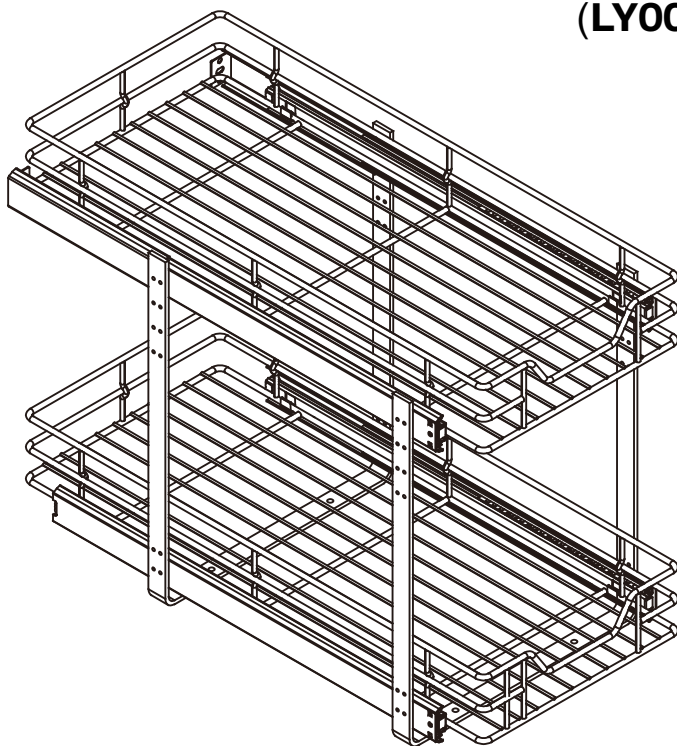

Installation guide video



<https://youtu.be/UehnFrHXU9A>

Customer Support

Phone: +1(986)-888-1726

Email: help@unified-support.com


CARE & MAINTENANCE

- For daily cleaning, use a dry cloth and a soft liquid cleaner.
- Never use abrasive cleaners containing acetone, chlorine or strong bleach. Also, do not use tools as scrapers, metallic brushes, and other products which can scratch or tarnish surfaces.


PRIOR TO INSTALLATION

- Carefully remove all the items from the carton and place them individually on a soft cloth to prevent scratches or other damage.
- Check the included items. If any items are missing or have been damaged during shipment, please contact our service team to obtain any missing or damaged item.
- Carefully and strictly follow these installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until the product is properly installed.
- Have the necessary tools ready.

Tools Required



Tapemeasure



Electrical Drill



Screwdriver



Pencil /Marker




Tape

PARTS LIST

Your pull-out cabinet organizer should include the following parts, please inspect your box contents to ensure you have received all components.

Parts Included


A

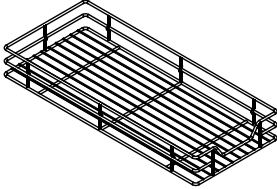

**2
PCS**

Upper Basket


B

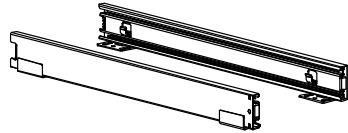

**2
Pair**

Slide Rails


C



**10
PCS**

*ST4*18 Tapping Screw*

D



**16
PCS**

*M4*6 Screw*


E



**2
PCS**

Flat Iron Mounting Bracket


F

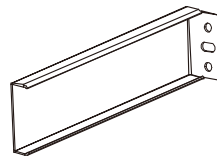

**2
PCS**

Back Panel Mounting Bracket

G

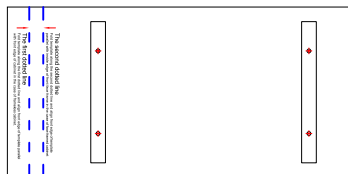

**1
PC**



Back panel Mounting Braclet

For more installation details, please follow the installation video on youtube by searching: "Pull-Out Cabinet Organizer Installation".

If any part is missing, contact Customer Support before installation.

Measure Your Cabinet Opening(MCO)

Measure **INSIDE** the cabinet opening

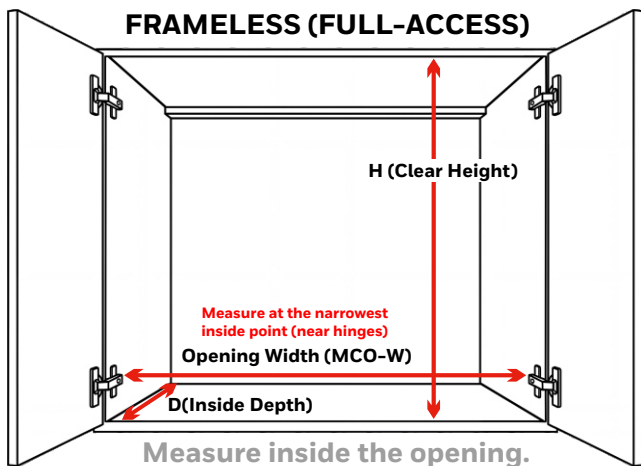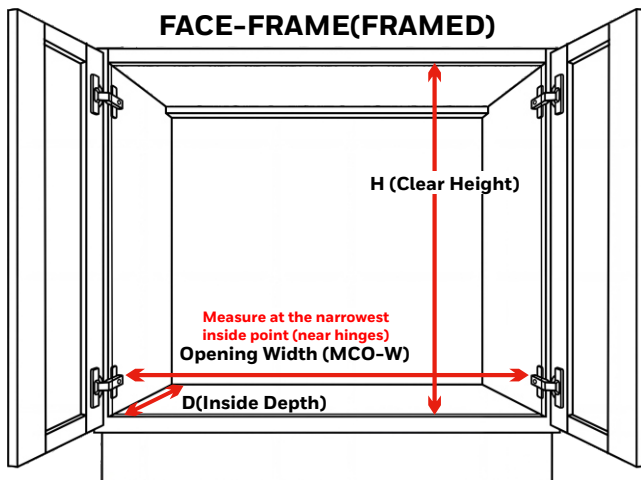

How to Measure

1. Measure MCO-W at the narrowest inside point.
2. Measure D and H inside the cabinet.
3. Write down your numbers, then choose the correct size.


✓ Measure inside the opening ✗ Do NOT measure the outside cabinet width

Your opening width (MCO-W) must meet the minimum requirement for your selected model.

INSTALLATION INSTRUCTIONS

STEP 1


Using the measuring tape, first measure the cabinet empty size, select the appropriate size, and then prepare for installation.

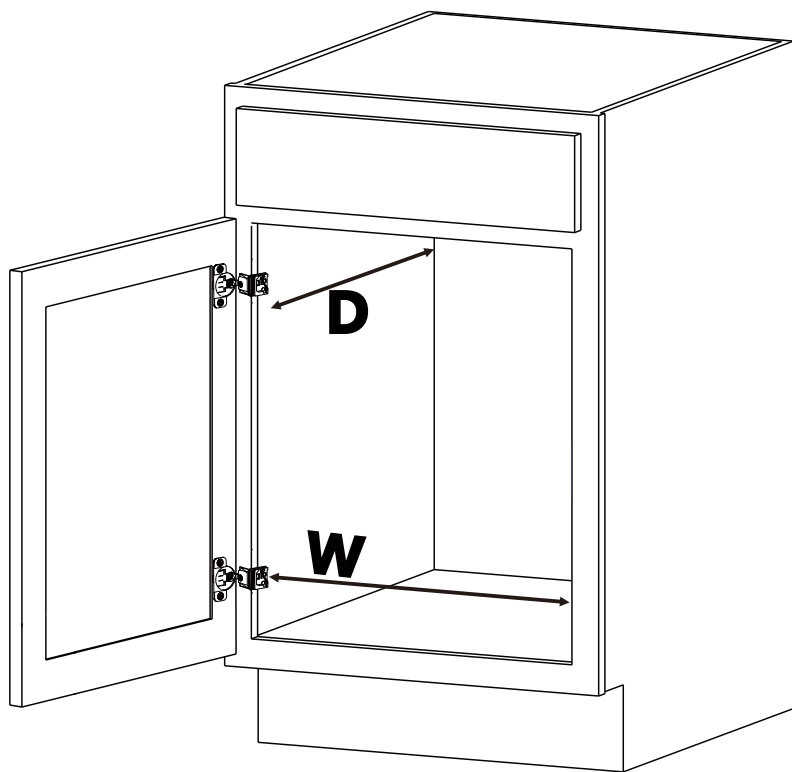

INSTALLATION INSTRUCTIONS

STEP 2

Use 16 pieces M4 *6 Screws (D) to connect Slide Rail(B) and Flat Iron Mounting Bracket(E) together, and the upper assembly position can be selected according to the actual height of the cabinet. When installing, please let Flat Iron Mounting Bracket(E) lie on its side for easy and safe installation.

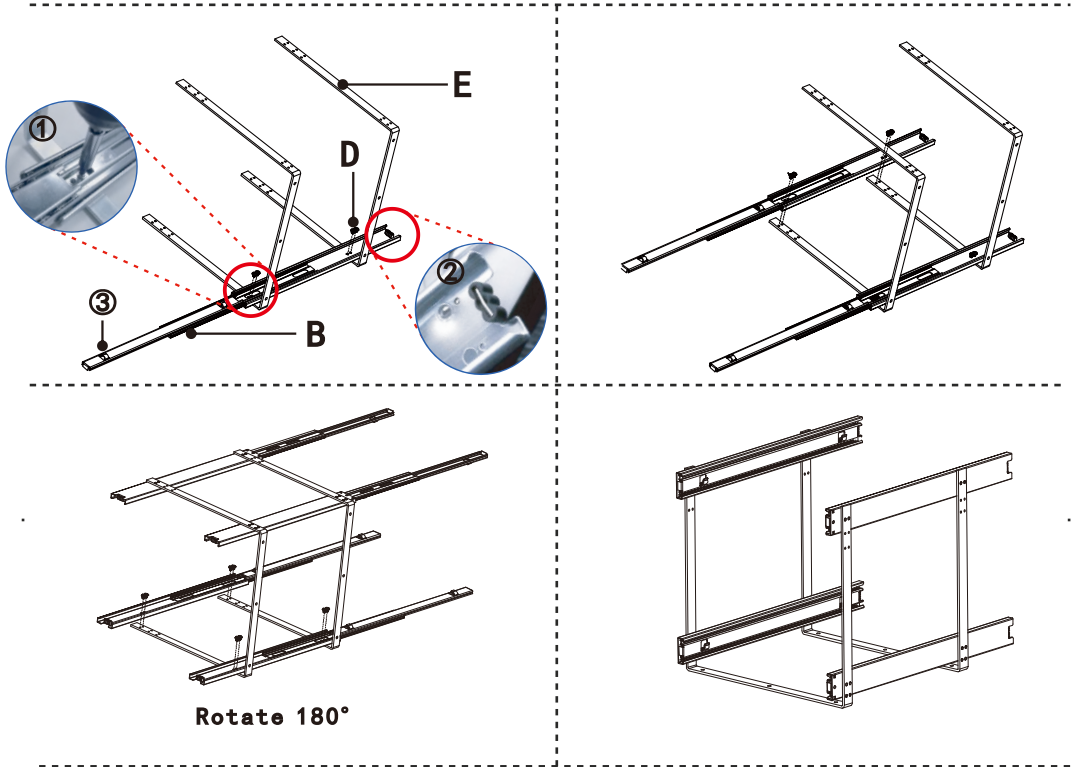

NOTE:



- ① Pull out the slide rails for clear visual of the two slots Align the slide rail (B) with the slots of the support bracket before installation.
- ② Identify the front end and back end of the slide rails. The back end of each slide rail (B) has a black rubber and the front end does not, which should face inward.
- ③ All the hooks of the buckle are facing upwards.

Installation Suggestion:

During installation do not let the support bracket (E) stand upright to avoid injury.

STEP 3

Insert the Back Panel Mounting Bracket(G) onto the desired slide rail (B).
Reference shown figure.

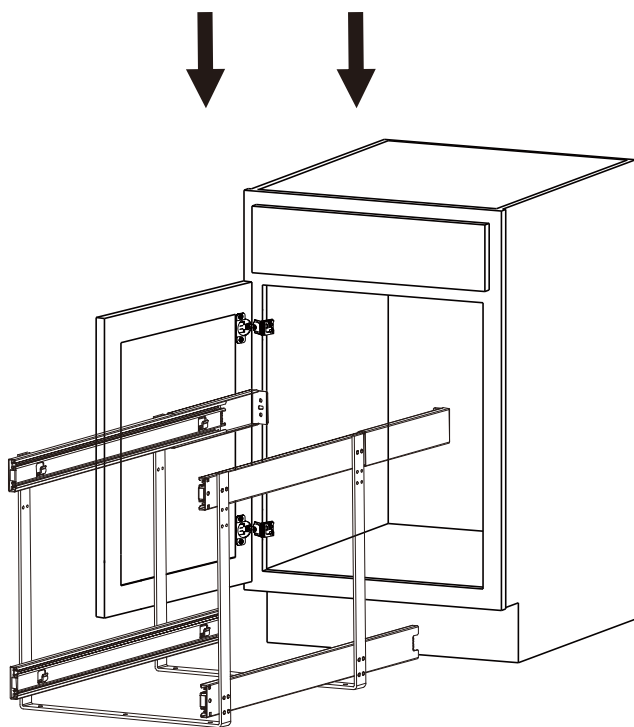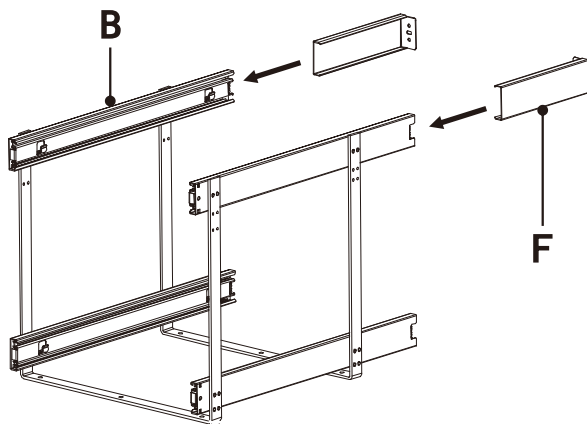

INSTALLATION INSTRUCTIONS

STEP4- Mark Centerline & Position Template

Mark the cabinet centerline (Figure1).

- Measure the inside opening width and mark the center point.
- Draw a straight centerline from the front edge to the back.


Place and align the drilling template(G)

- Fold template (D) along the dotted line.
- Align the template FRONT EDGE with the inside front edge of the cabinet opening.
- Align the template CENTER LINE with the cabinet centerline.

Secure and mark holes.

- Tape the template so it cannot move.
- Mark all hole locations with a pencil.





NOTE: Hole locations on template(D) match the slide rail mounting points.

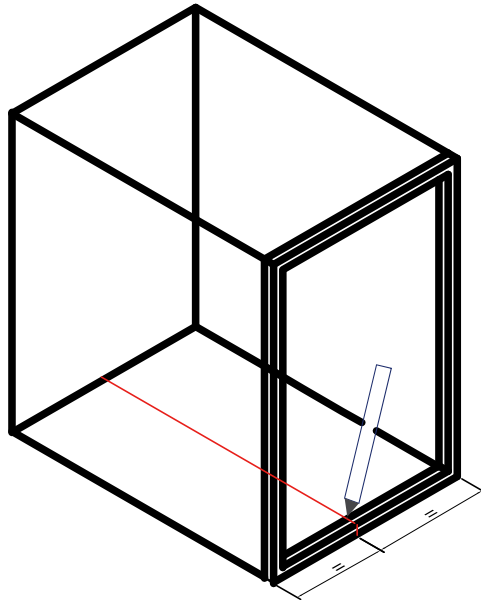

(Figure 1)

Frameless Cabinet

Fold, Align & Drill

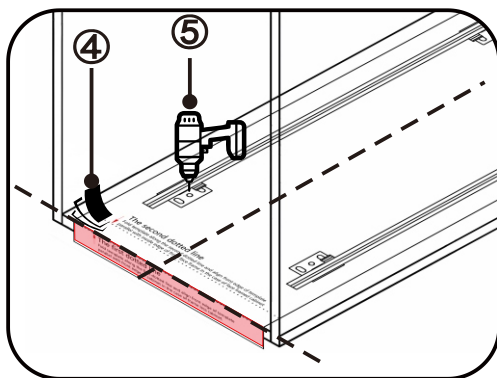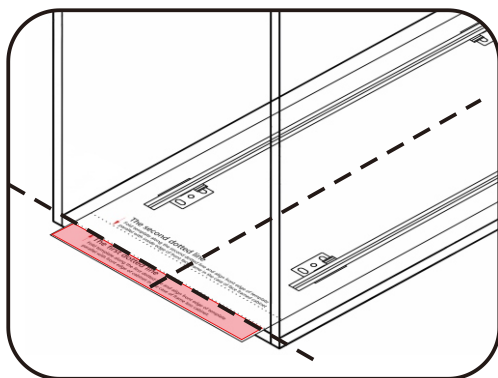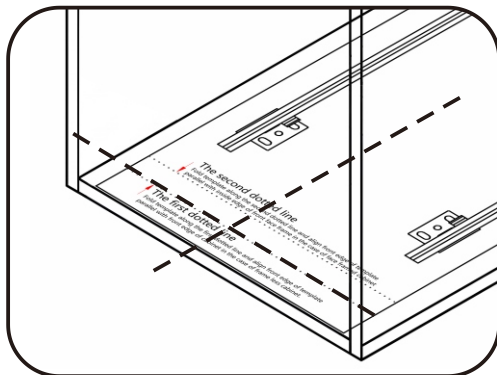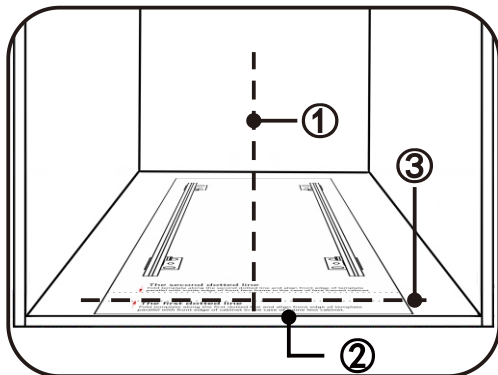

① **CENTER LINE:** Align the template centerline with the cabinet centerline.

② **FRONT EDGE:** Place the folded edge flush with the inside front edge of the cabinet opening.

③ **First dotted line:** Fold along the first dotted line.





④ **Tape:** Tape the folded edge so the template cannot move.

⑤ **Drill**

- Pre-drill pilot holes (Ø 0.1 in / 2.5 mm) through the marked hole locations while the template is in place.
- Remove the template after drilling.
- Do not drill through the cabinet bottom.

Face-Frame Cabinet

Fold, Align & Drill

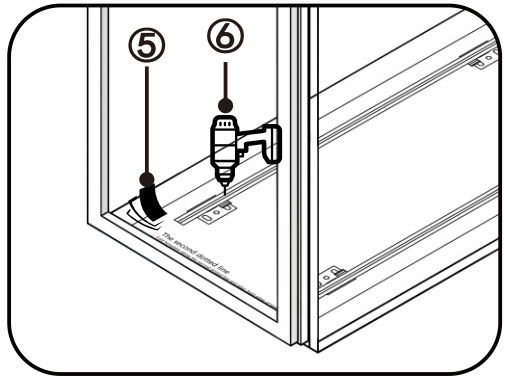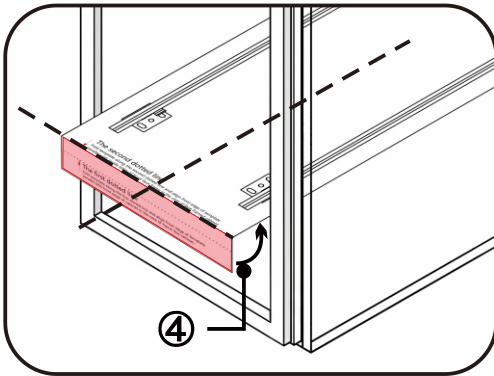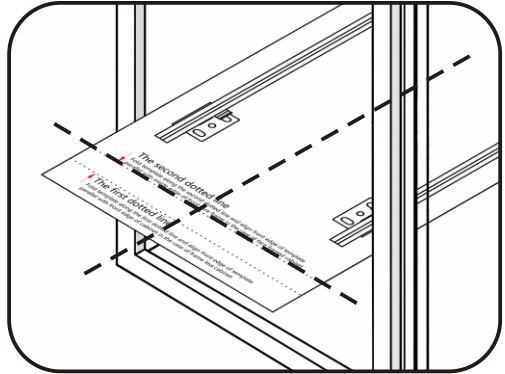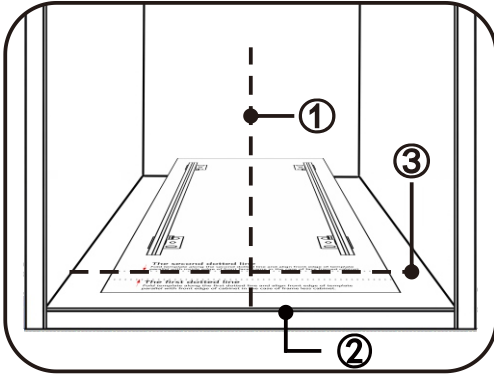

① **CENTER LINE:** Align the template centerline with the cabinet centerline.

② **FRONT EDGE:** Place the folded edge flush with the inside front edge of the cabinet opening.

③ **Second dotted line:** Fold along the second dotted line.

④ **Flip :** Fold the paper and flip it backwards


⑤ **Tape :** Tape the folded edge so the template cannot move.

⑥ **Drill**

- Pre-drill pilot holes (Ø 0.1 in / 2.5 mm) through the marked hole locations while the template is in place.
- Remove the template after drilling.
- Do not drill through the cabinet bottom.


STEP 5

Place the assembled bracket to the floor of the cabinet. Use six ST4*18 tapping screws (C) to secure placement. Reference figure shown.

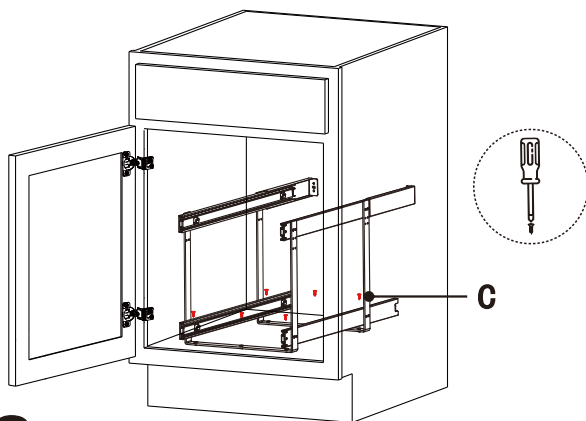

STEP 6



Use two ST4*18 tapping screws (C) to secure the assembled bracket on the back panel of the cabinet. Reference figure shown.

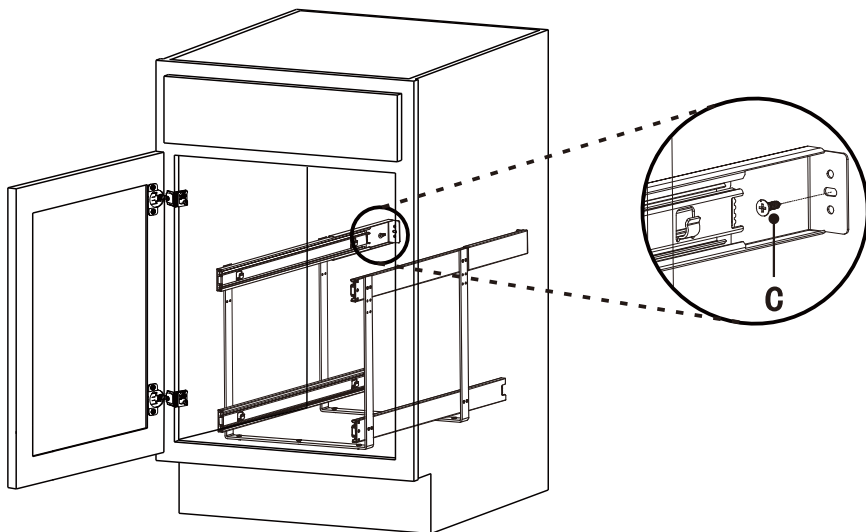


STEP 7

Install the basket onto the brackets.


- Install the assembled basket onto the brackets on the slide rails.

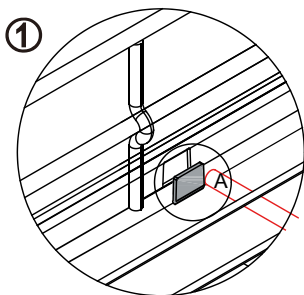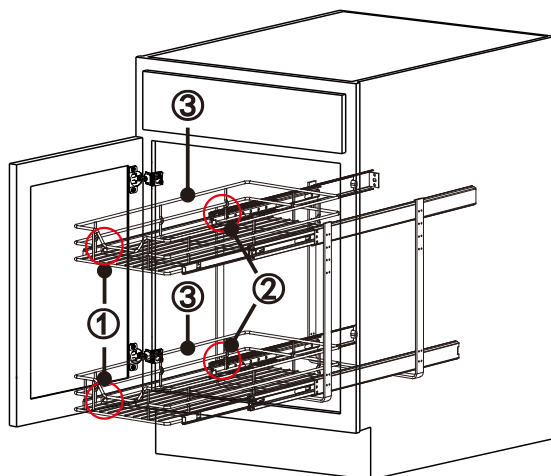


The installation buckle at the front end is located in front of the crossbar

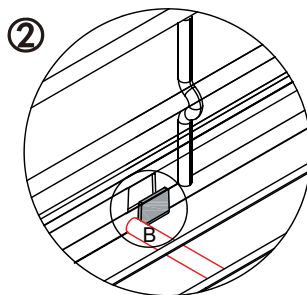

The rear-end mounting buckle is located behind the crossbar

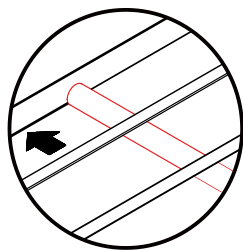

A

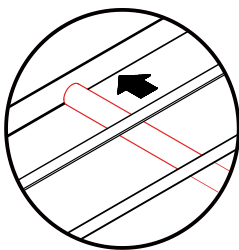

B

NOTE: Fully extend the lower basket slides. Place basket on the slides and push basket into hooks on the left-hand slide and right-hand slide.(you will hear a click sound) Slide the baskets in and out several times and make sure the baskets are firmly installed.

- ③ **Installation Suggestion:** During the installation process, make sure to hold the baskets (③) to avoid injury.

AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please clean with a damp cloth and wipe dry.
- Please avoid harsh, corrosive and abrasive cleaners.

If you have any questions or concerns please feel free to contact us. We're committed to providing our customers with the quality service.

Installation guide video



<https://youtu.be/UehnFrHXU9A>

Customer Support

Phone: +1(986)-888-1726

Email: help@unified-support.com

Hours: Mon-Fri, 9:00 AM - 6:00 PM ET