



BED FRAME

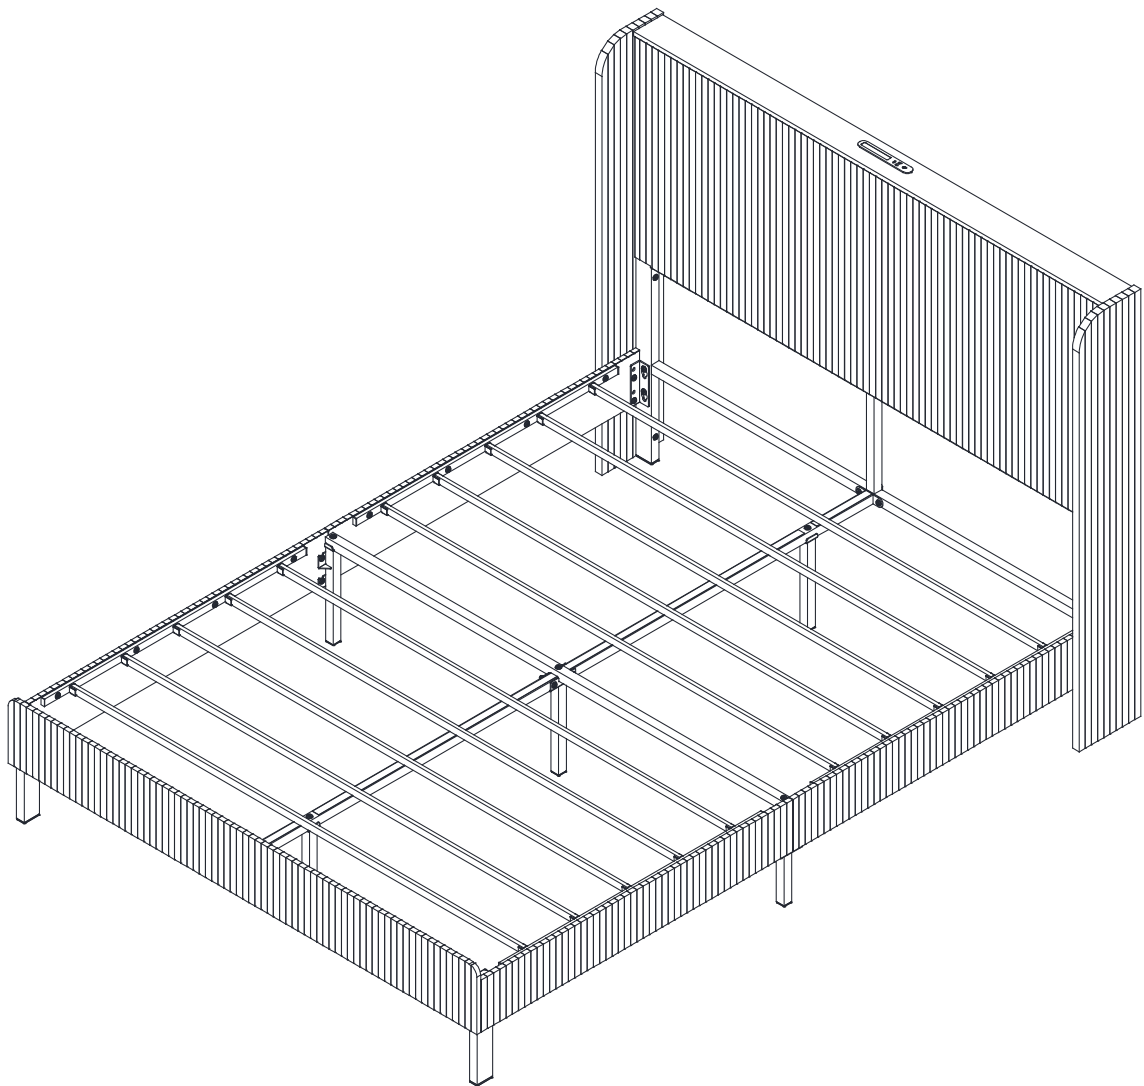

Thank you for choosing our products, please assemble and use it following the instructions.

Assembly Instruction

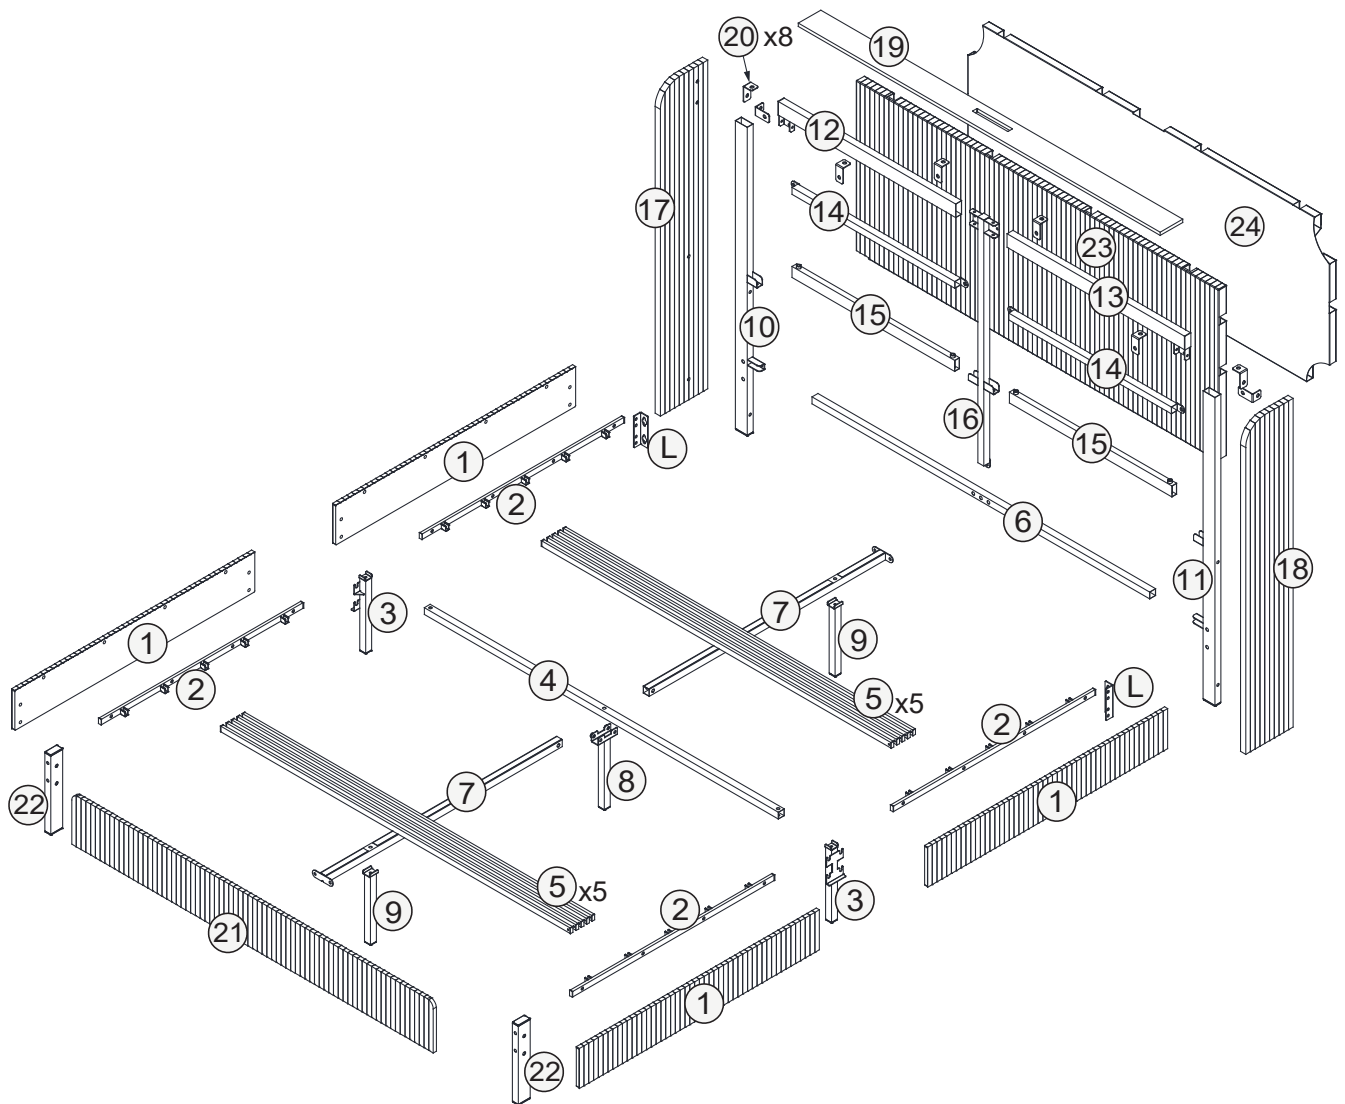


Important Note

HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

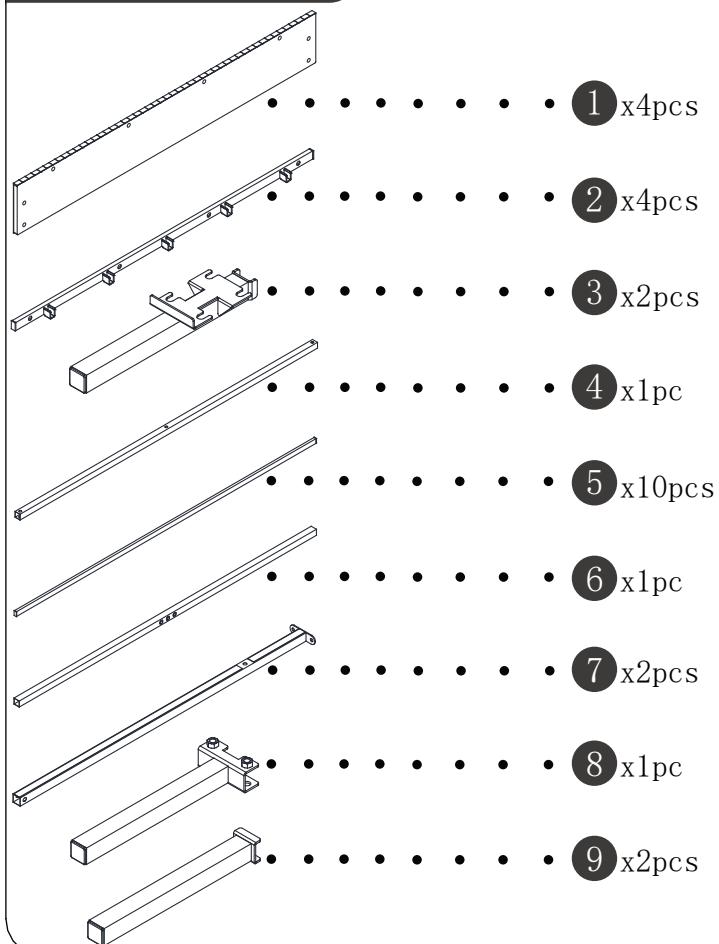

1 x4pcs

2 x4pcs

3 x2pcs

4 x1pc


5 x10pcs

6 x1pc

7 x2pcs

8 x1pc

9 x2pcs

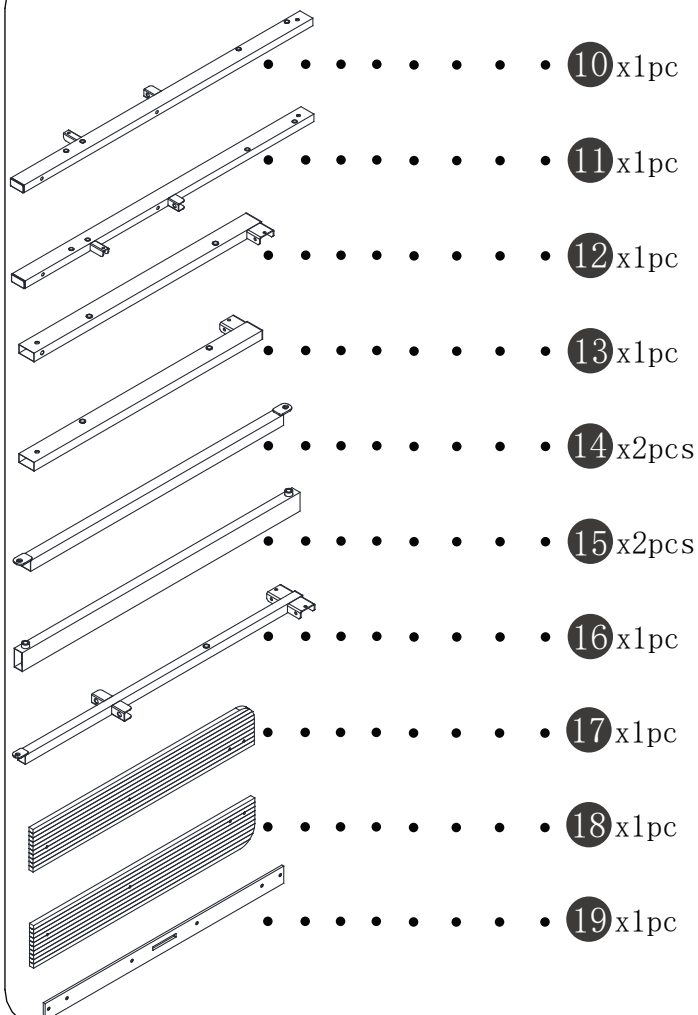

10 x1pc

11 x1pc

12 x1pc

13 x1pc

14 x2pcs


15 x2pcs

16 x1pc

17 x1pc

18 x1pc

19 x1pc

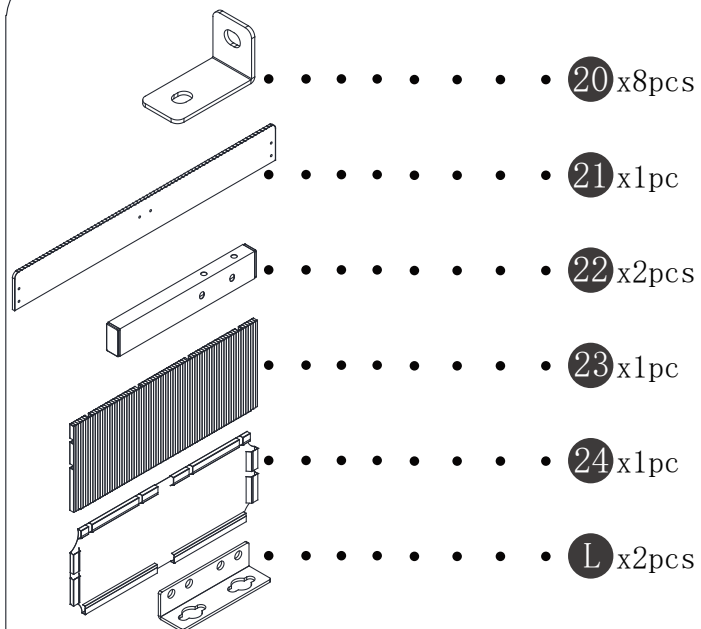

20 x8pcs


21 x1pc

22 x2pcs

23 x1pc

24 x1pc

L x2pcs

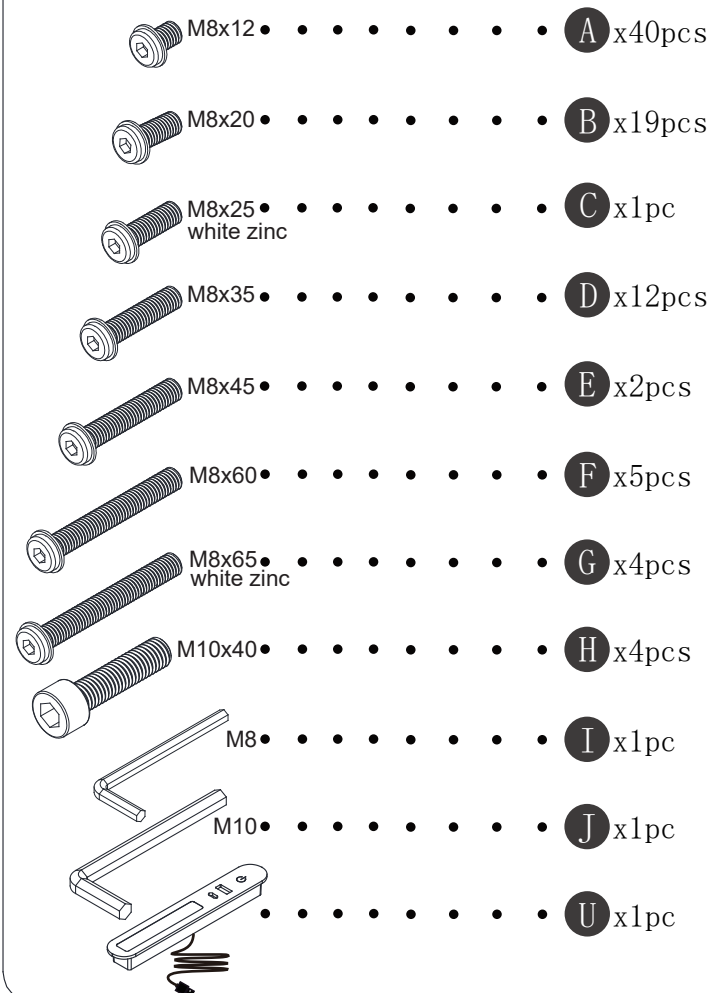

A x40pcs

B x19pcs

C x1pc

D x12pcs

E x2pcs

F x5pcs





G x4pcs

H x4pcs


I x1pc

J x1pc

U x1pc

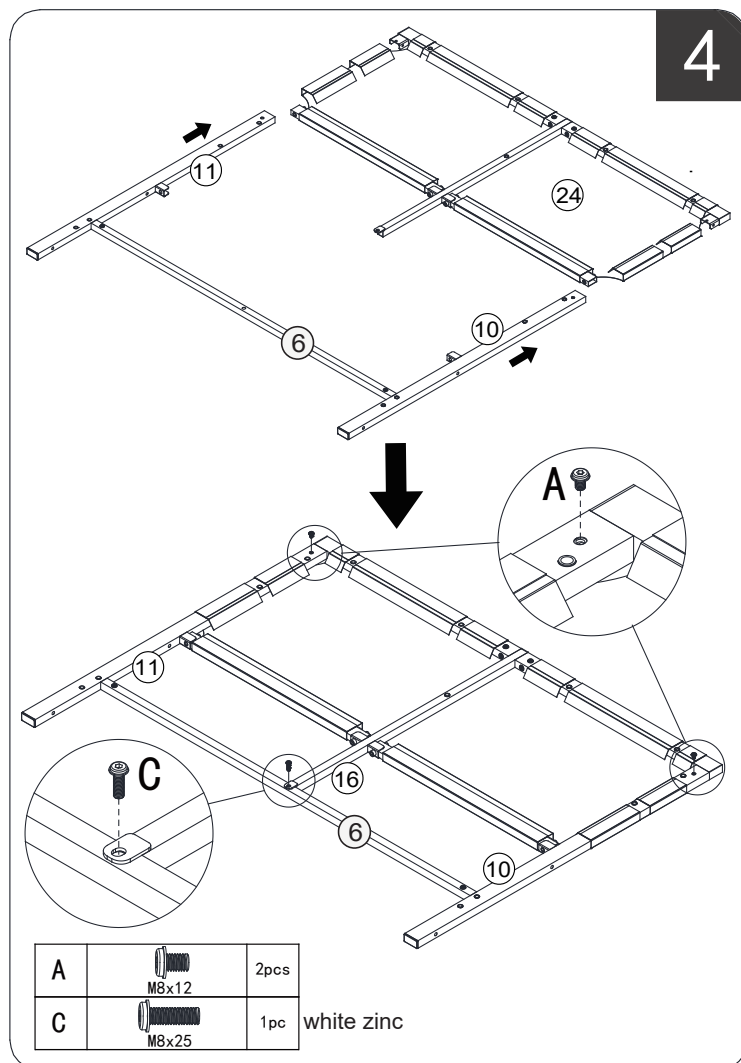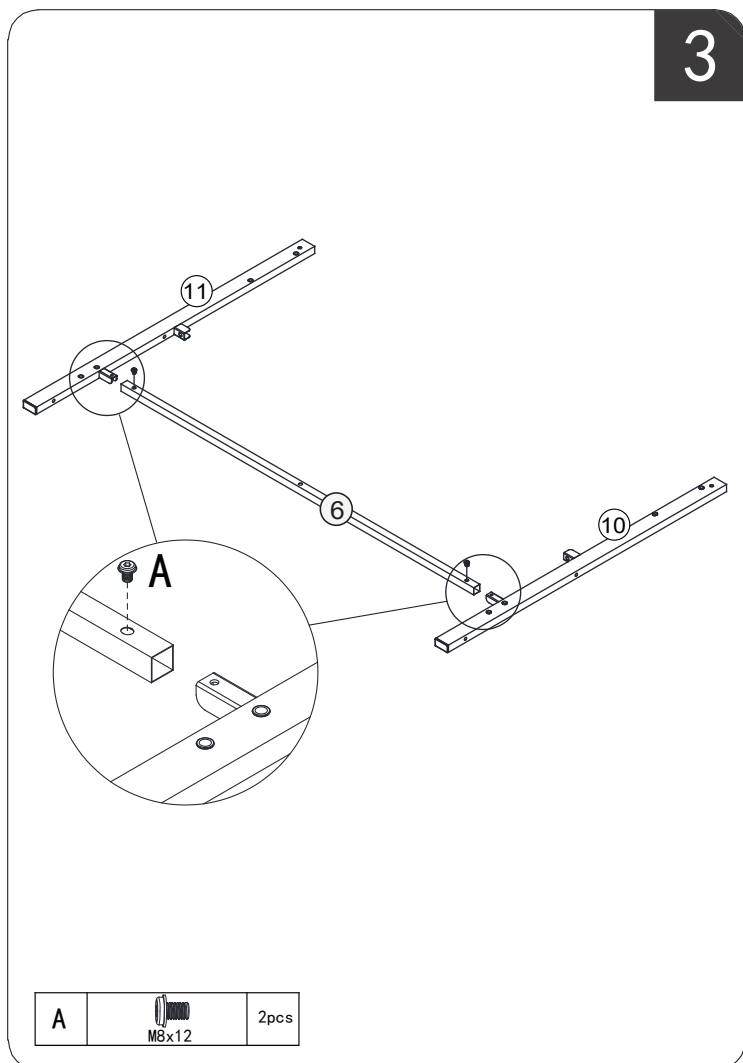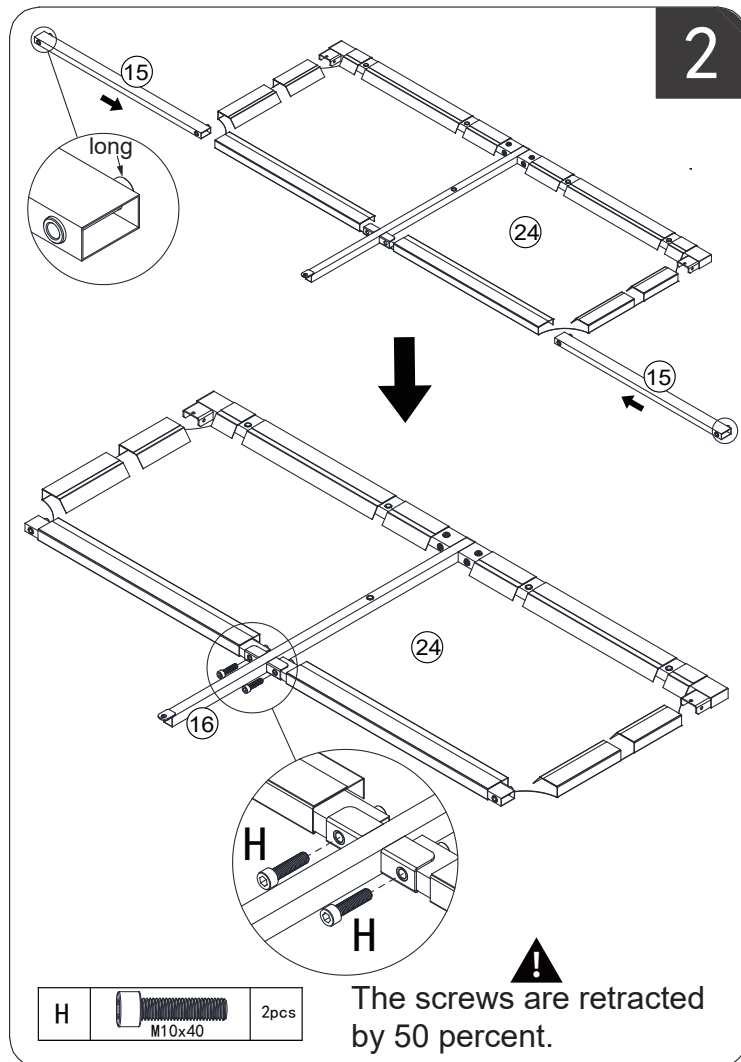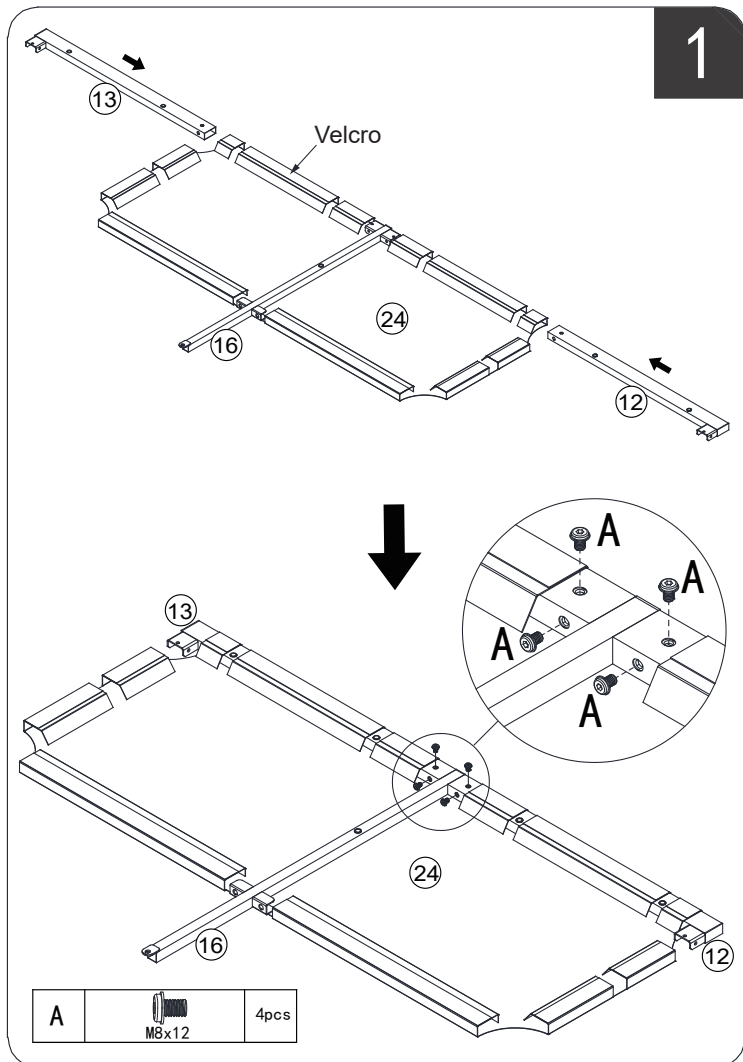


5

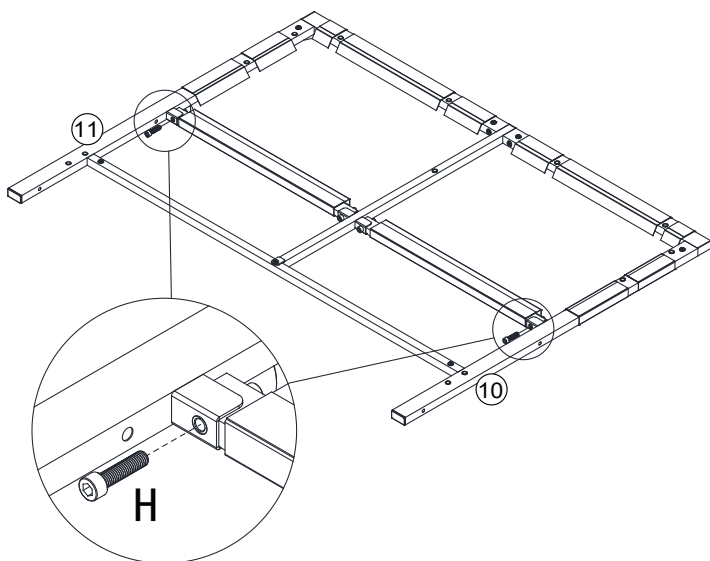

! Fully tighten all the screws.


H		2pcs
M10x40		

6

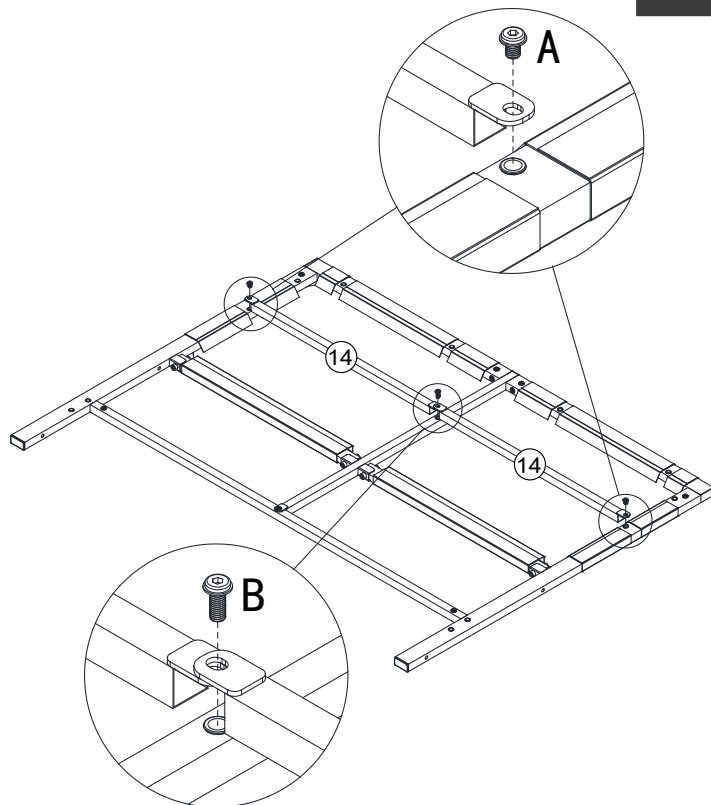


A		2pcs
M8x12		
B		1pc
M8x20		

7

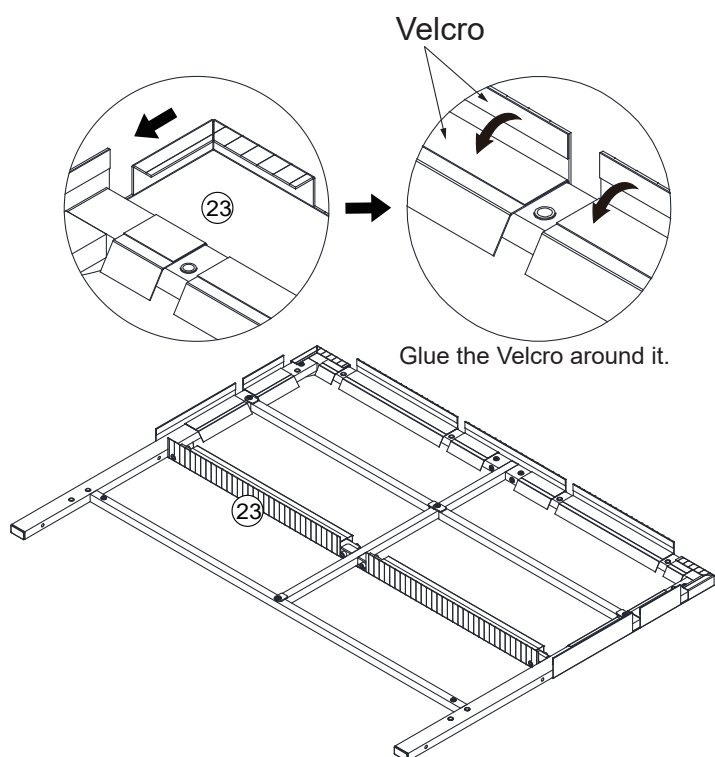


8

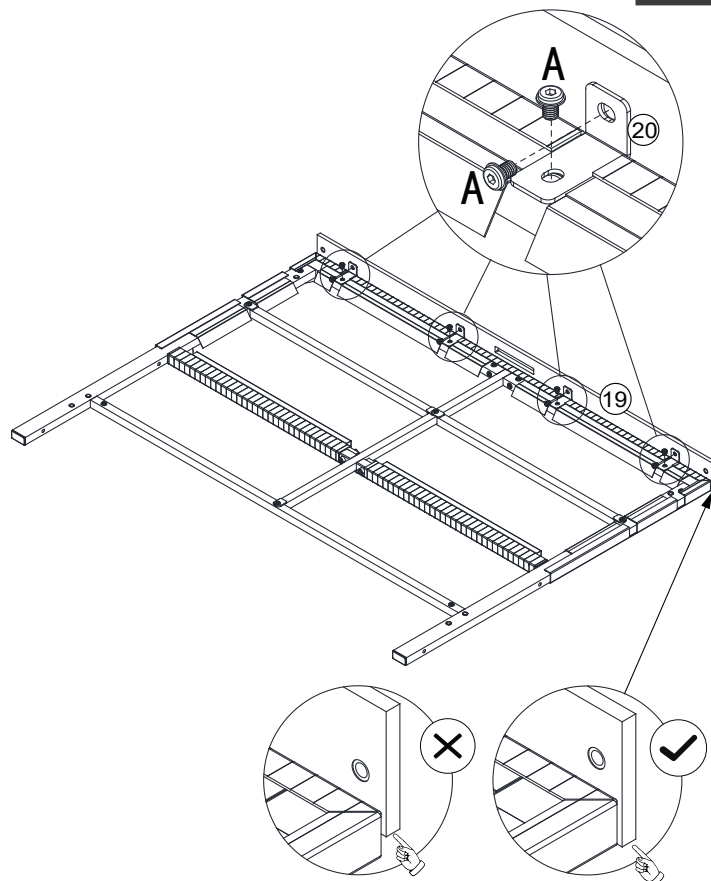

A		8pcs
M8x12		


9

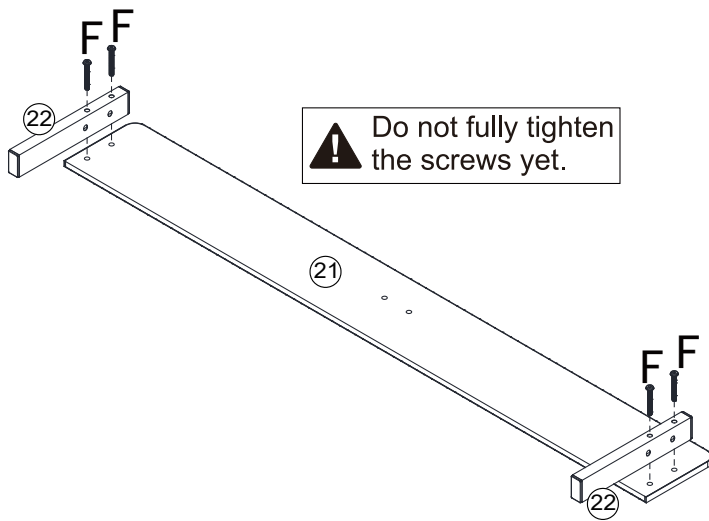

F		4pcs
	M8x60	


10

x4

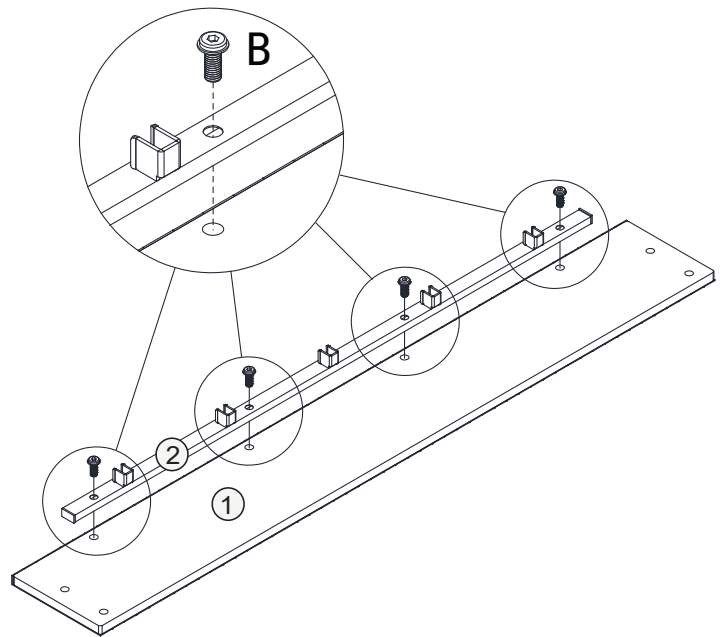


B		16pcs
	M8x20	

11

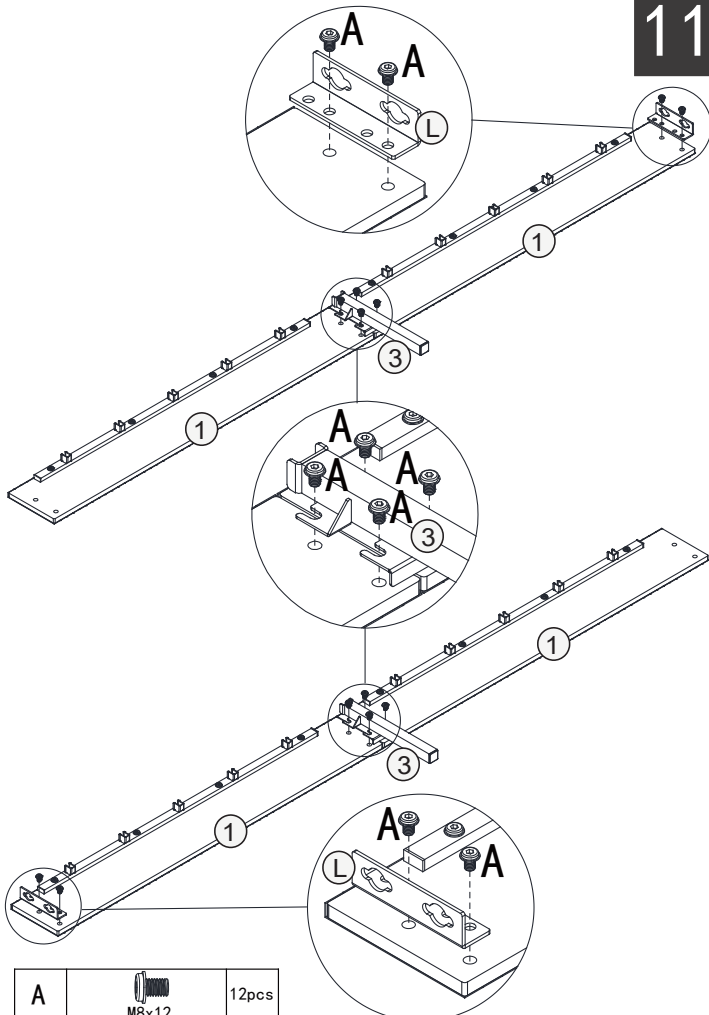


A		12pcs
	M8x12	

12

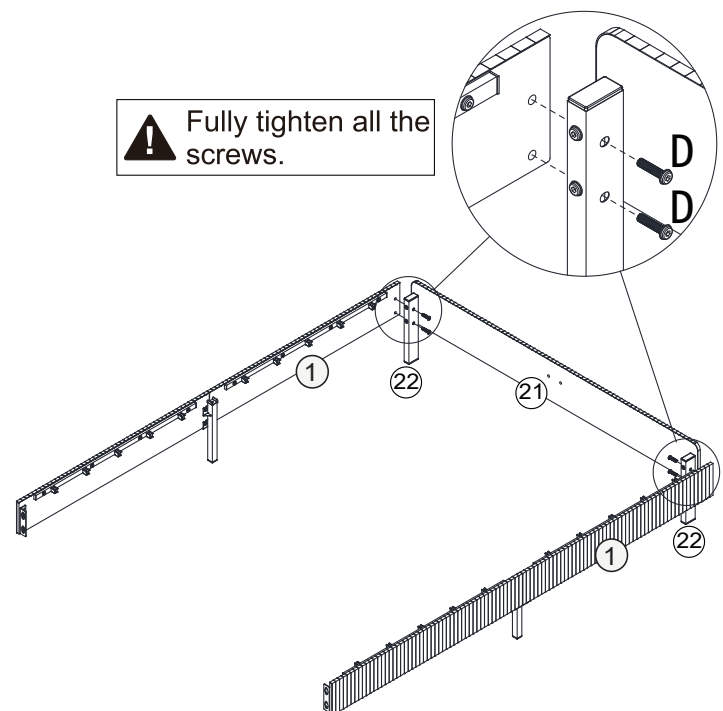


D		4pcs
	M8x35	

13

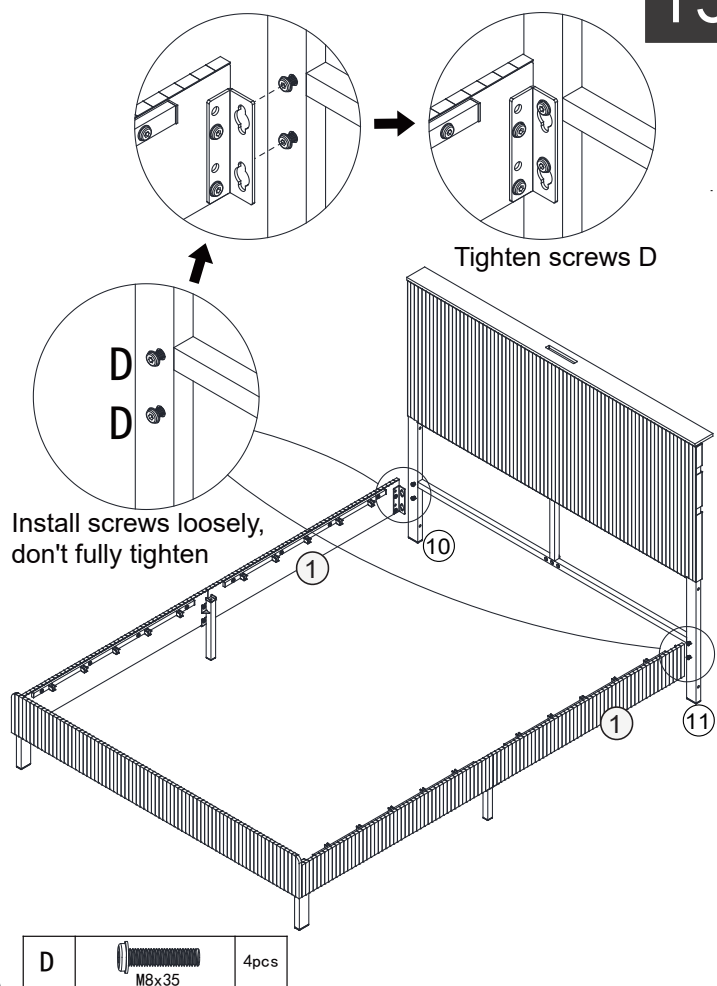


14

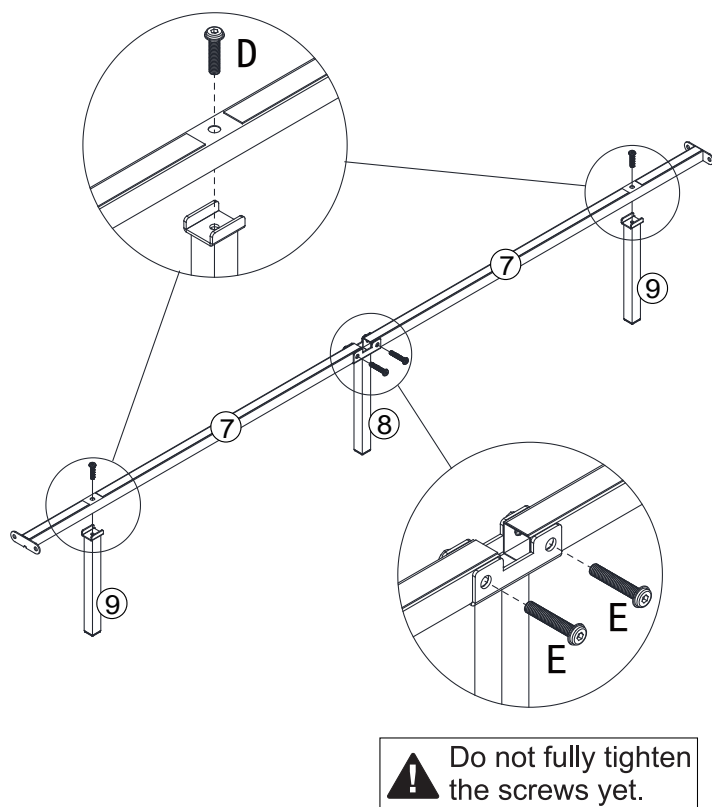


D		2pcs
	M8x35	
E		2pcs
	M8x45	


15

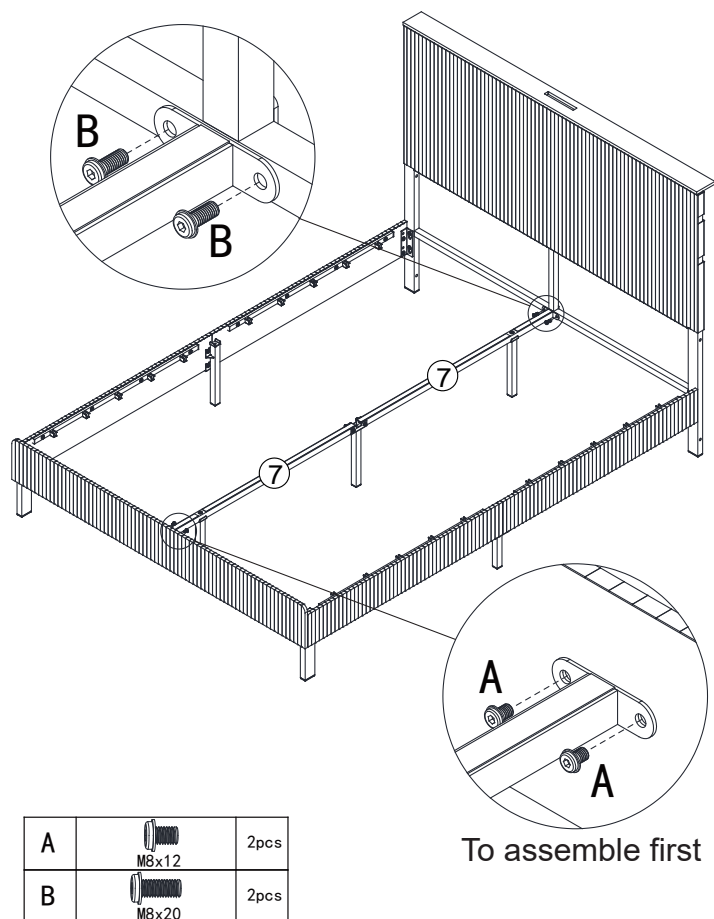


16

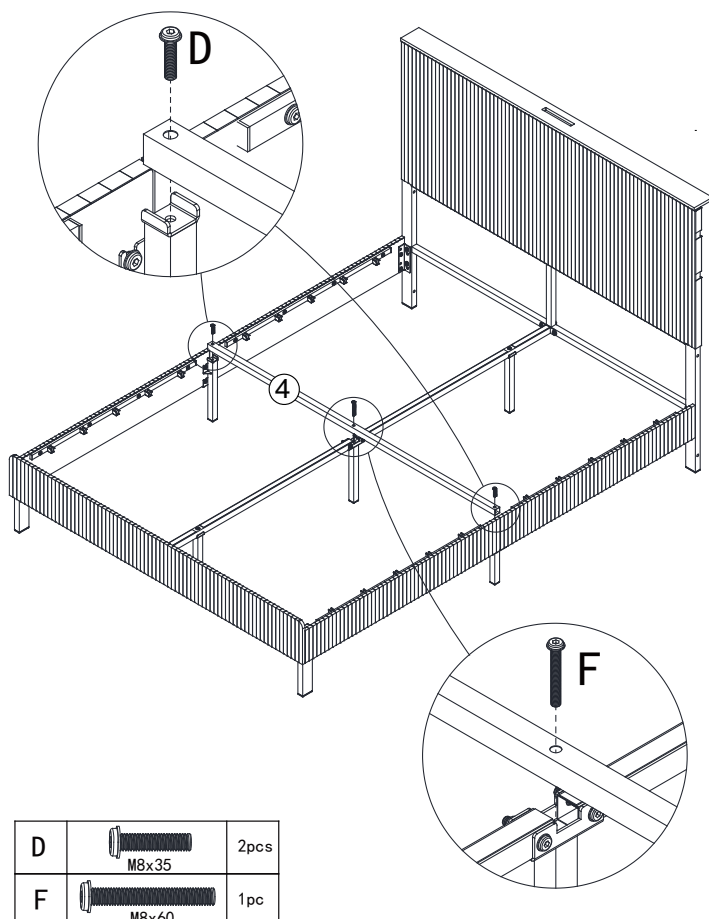

17

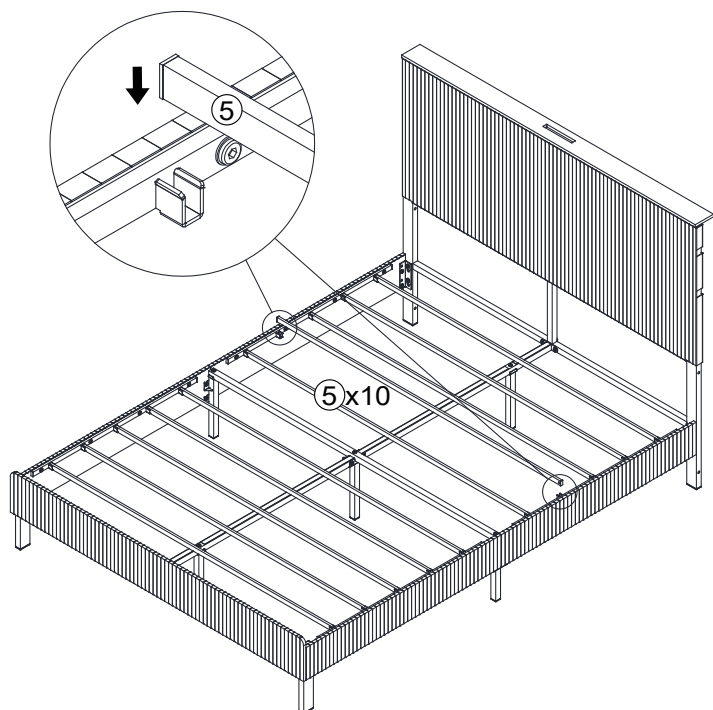


18

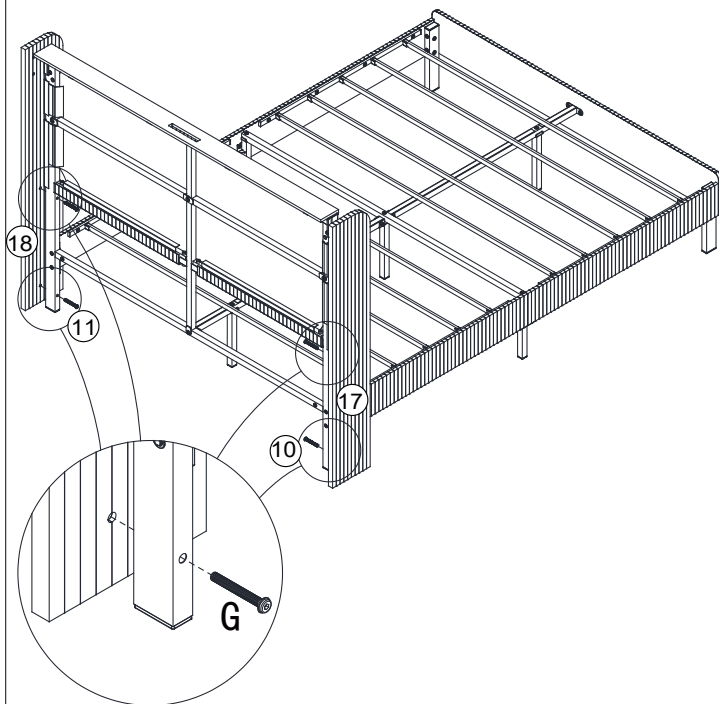


G		4pcs white zinc
M8x65		


19

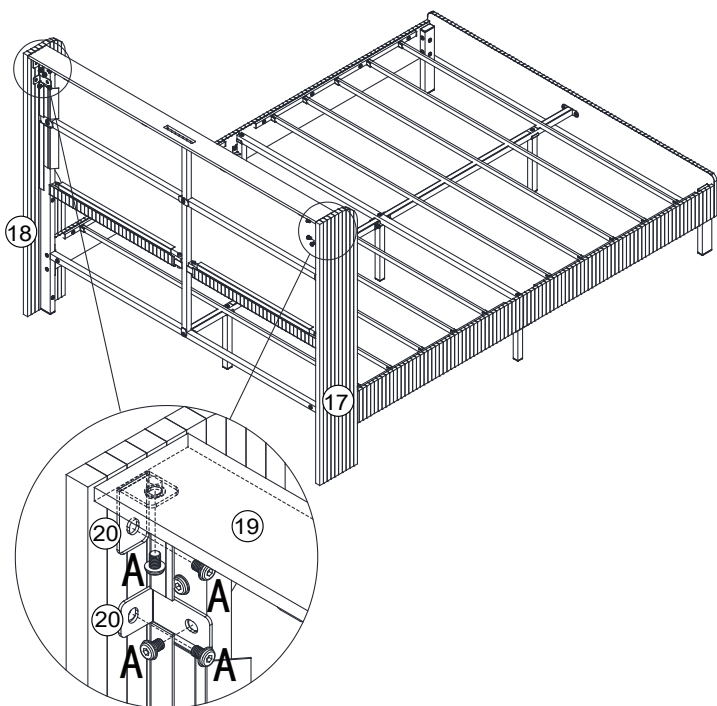

A		8pcs
M8x12		

20

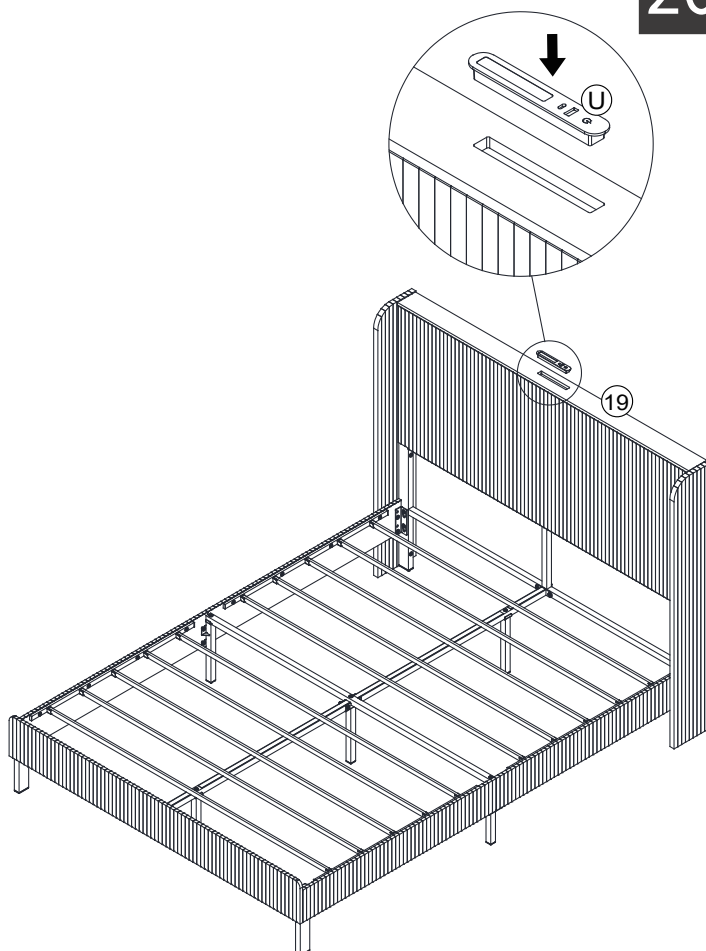

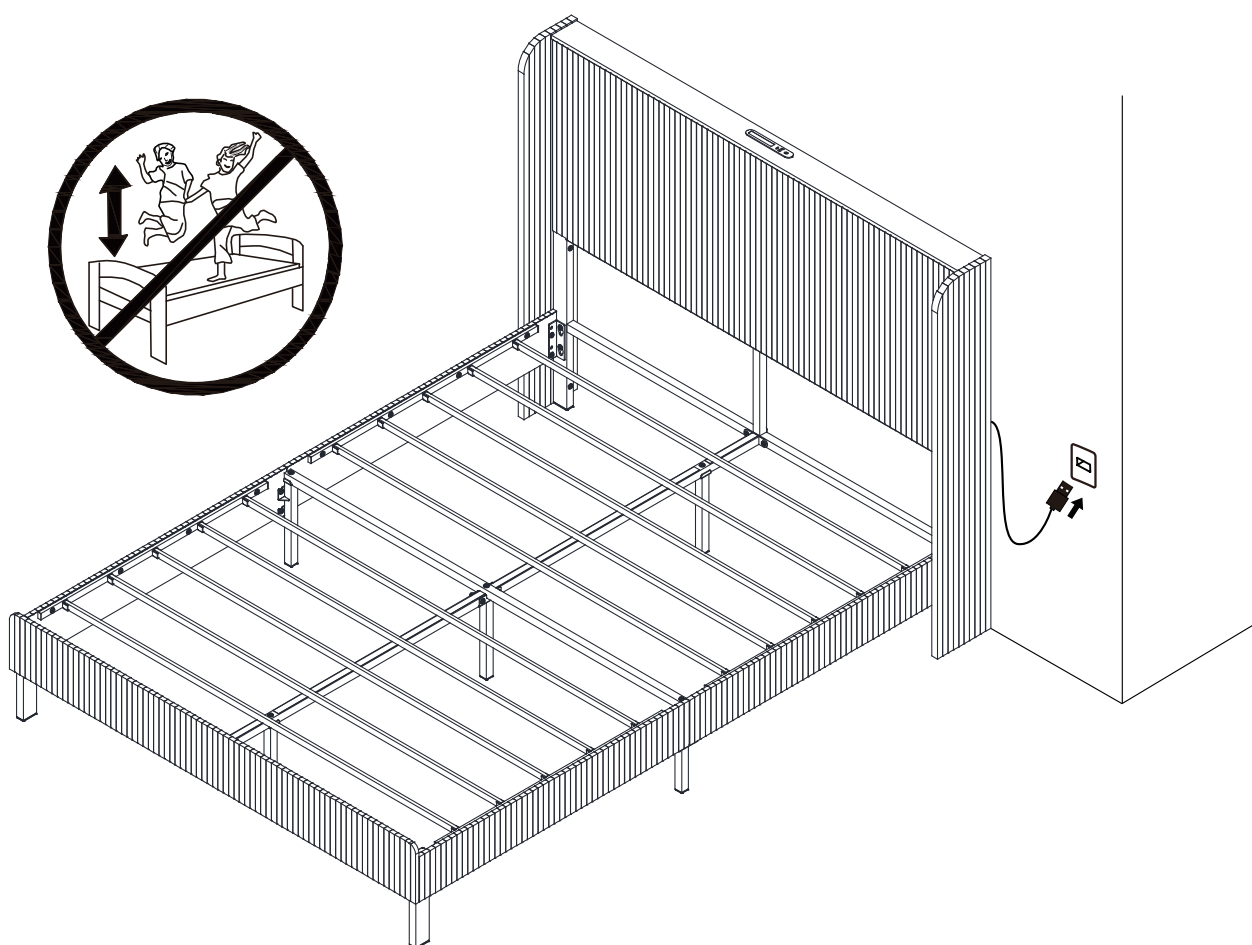

Finish