



ASSEMBLY INSTRUCTIONS

TEAKWOOD ROCKING BENCH (ATF15, ATF16)


STEP 1

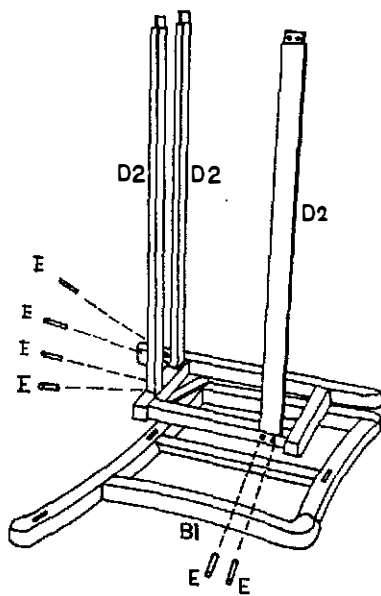


STEP 2

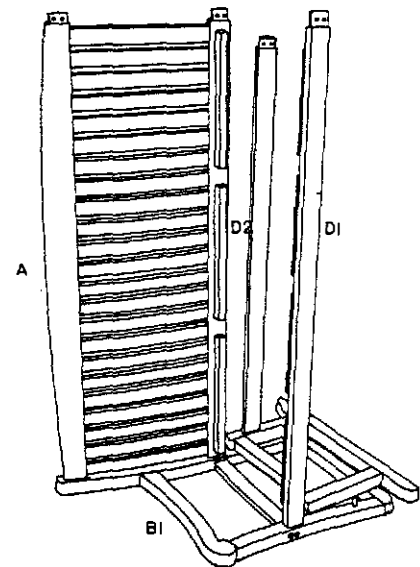


STEP 3

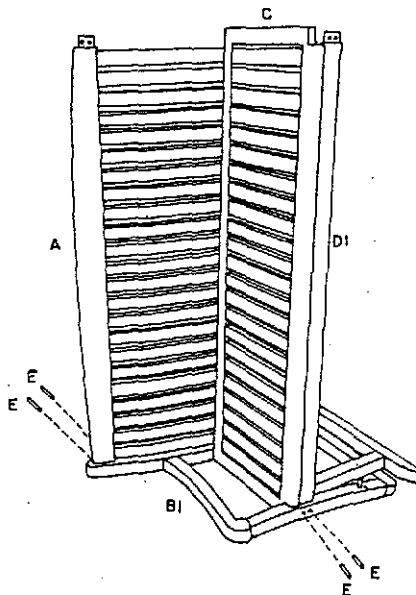


STEP 4

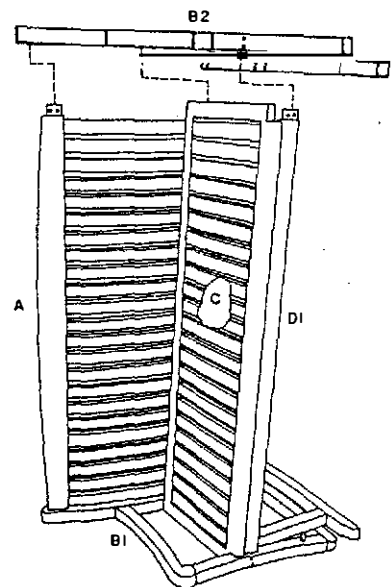






STEP 5

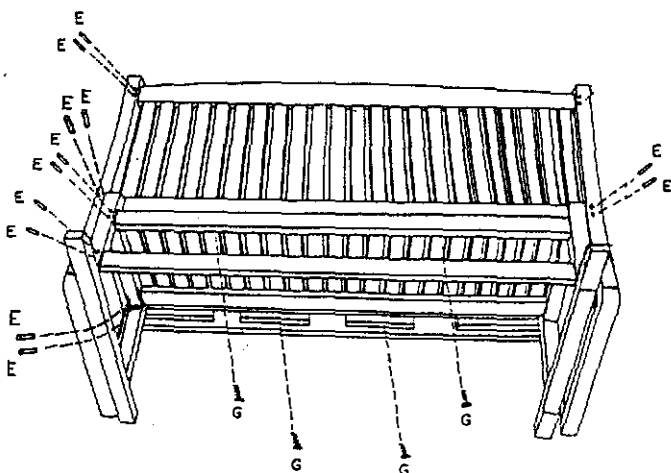

STEP 6


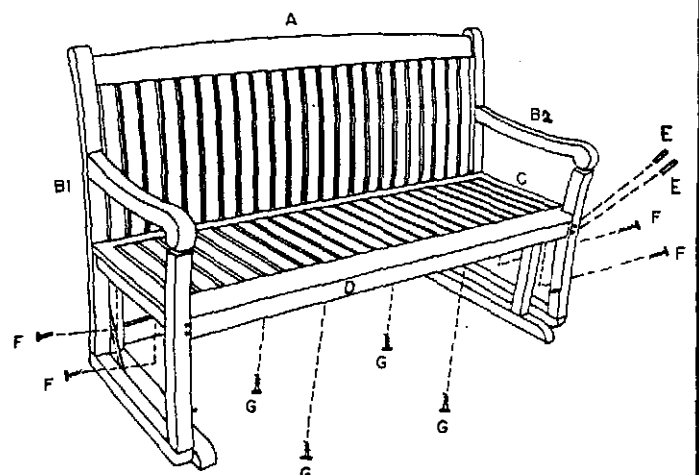


ASSEMBLY INSTRUCTIONS
TEAKWOOD ROCKING BENCH (ATF15, ATF16)

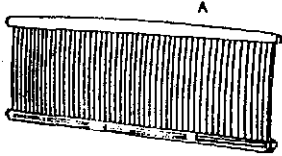NO.	PARTS	QTY.
A	BACKREST 	1
B1, B2	ARM LEGS 	2
C	SEAT SLATS 	1
D1	FRONT STRETCHER 	1
D2	BACK STRETCHER 	3
E	LONG DOWEL 	24 (4 EXTRAS)
F	LONG SCREW 	4+1
G	SHORT SCREW 	4+1
H	SANDPAPER 	1
I	GLUE 	1

ASSEMBLY INSTRUCTIONS

TEAKWOOD ROCKING BENCH (ATF15, ATF16)

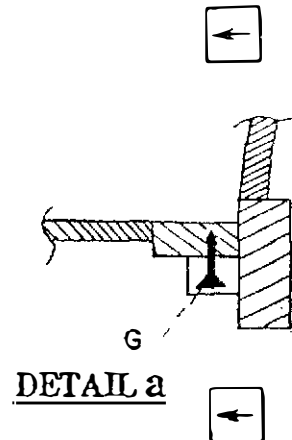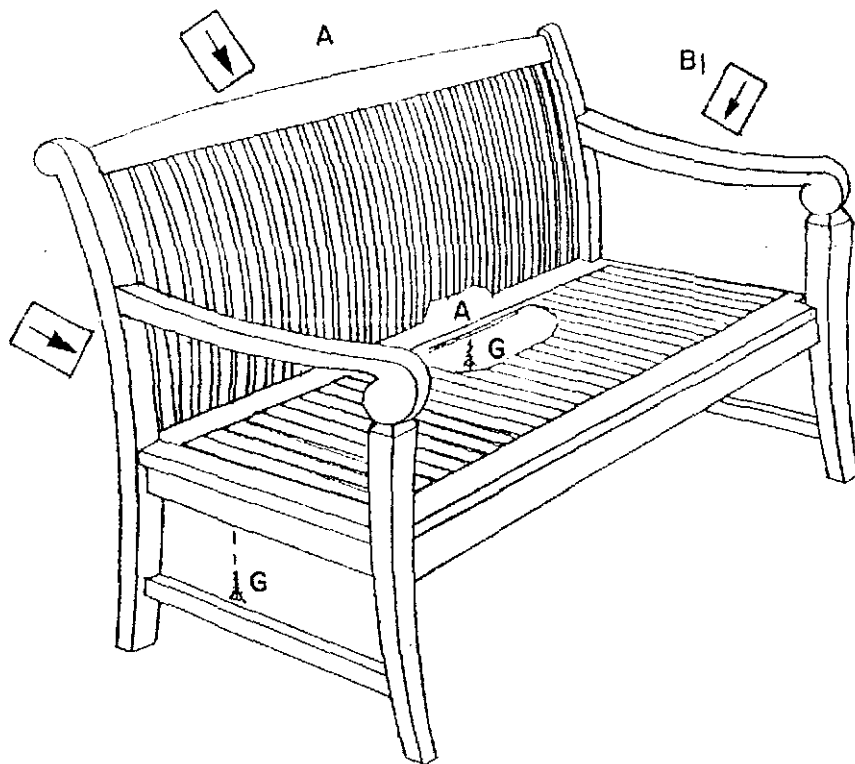

PRESS BACKREST FIRMLY TO THE BACKSEAT WHILE TIGHTENING THE SCREW (G)

BE CAREFUL!!! Keep pressing the back of backrest close to the back seat while tightening up the screws.

Assembly instructions :

- Step 1 Lay the side frame (B1) on the clean floor. Put 3 of back stretcher (D2) into each slot hole as step 1 picture.
Put dowel (E) into the holes as photo by facing the bevel side in.
- Step 2 Put backrest (A) and front stretcher (D1) into the slot hole as picture step 2.
- Step 3 Put seat (C) into the space between front leg and back leg of side frame (B1). Put dowel (E) to the hole of side frame (B1).
- Step 4 Put side frame (B2) onto the assemble parts as in picture step4. Don't force!
Try to push each tenon into the mortise at the same time by using rubber hammer.
- Step 5 Put dowel (E) into each round hole by facing the bevel side to the hole as picture step5.
- Step 6 Press the seat down while using screw (G) to screw into the front stretcher and backrest back bar.
Press the seat down while using screw (F) to screw into the side bar as picture step6. Put dowel (E) into the rest of the holes.