


Notice:


- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, refer to two solutions: Follow the installation video tutorial on the Amazon product page or contact our customer service.

Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
A	M6*10mm	X16+1	D		X4+1
B		X52+3	-		X1
	M6*15mm				
C		X14+1			
	M6*45mm		A.		
Tips: The number after "+" represents the spare screws.			Tips: The number after "+" represents the spare screws.		

Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
1		X1	8		X12
2		X1	9		X1
3		X1	10		X4
4		X1	1		X2
5		X1	12		X4
6		X1	13		X1
7		X1			

Explosion Diagram

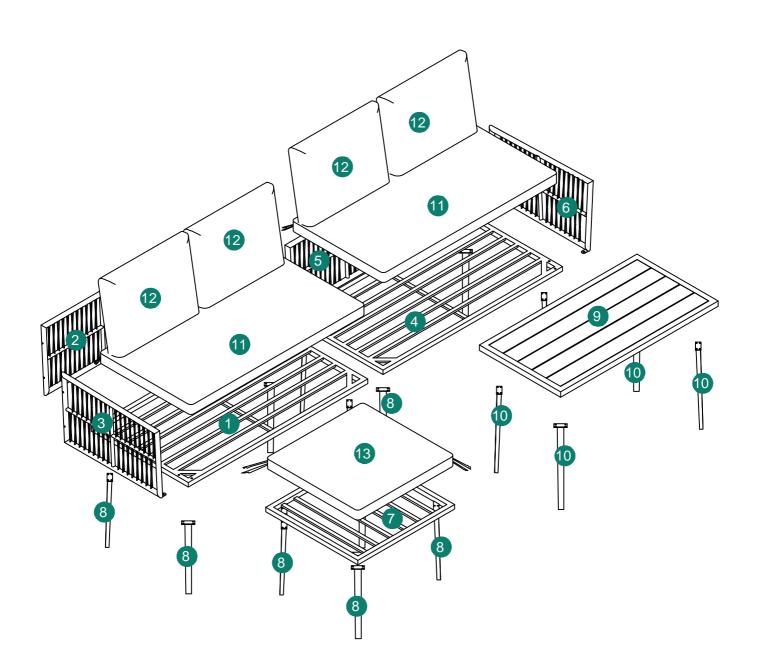

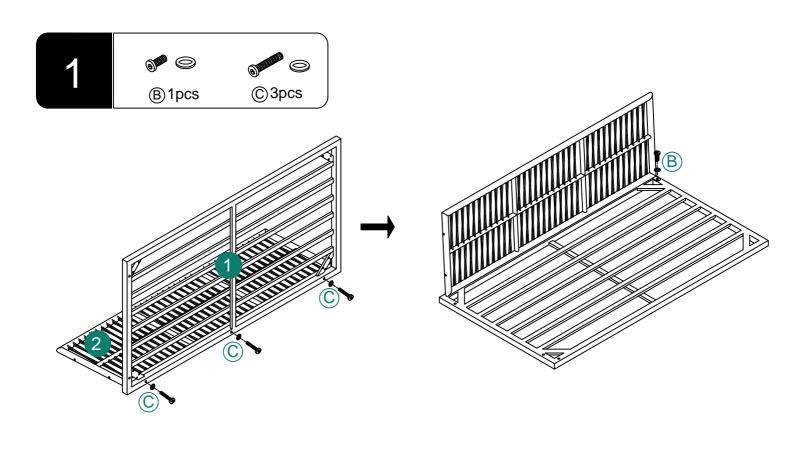

2 © Gapes

Barrier Carrier Car

