

Display cabinet

Assembly Instructions - Please keep for future reference

Type A

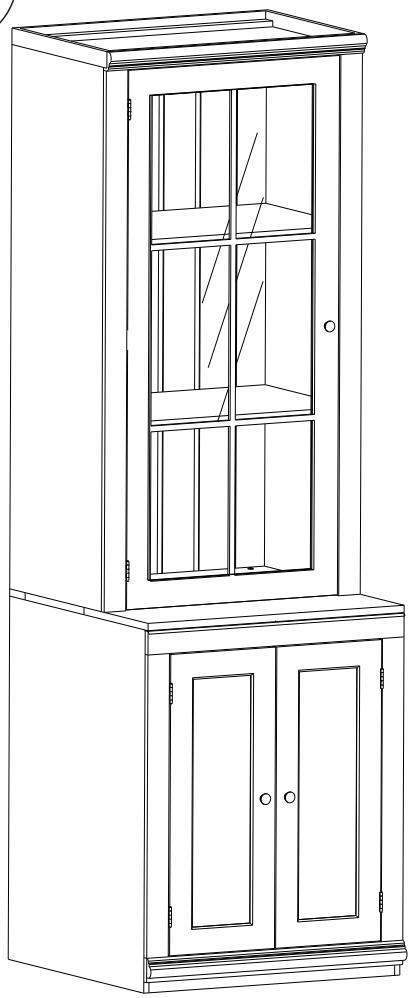

Type B

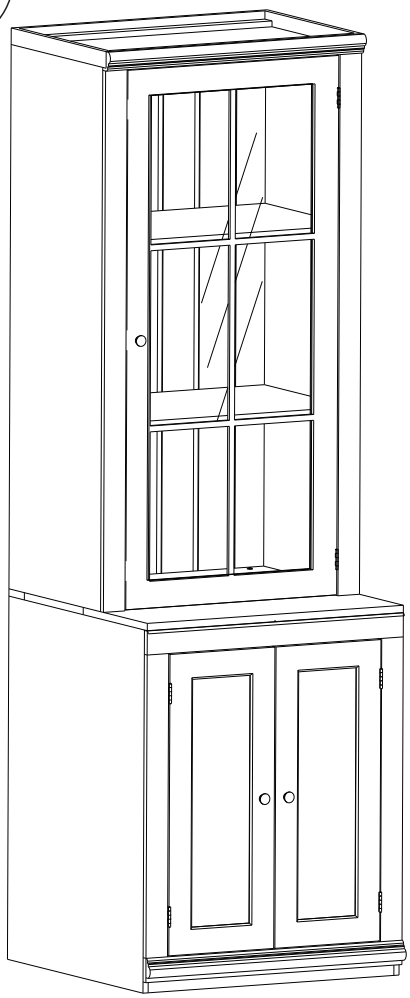

Improtant - Please read these instructions fully before starting assembly

Issue 1 - 14/09/24

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-






Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

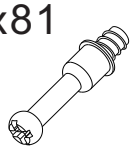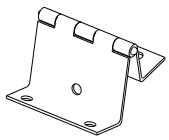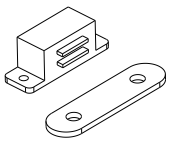A x81 	B x81 	C x2 	D x6 
E x3 	F x12 	G x3 	H x3  M4x18
I x48  M3x12	J x4  M6x25	K x1  M4	L x4 

Ruler - Use this ruler to help correctly identify the screws

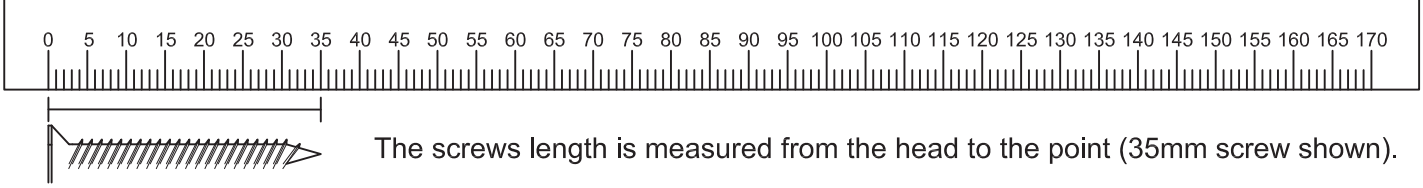


The screws length is measured from the head to the point (35mm screw shown).

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

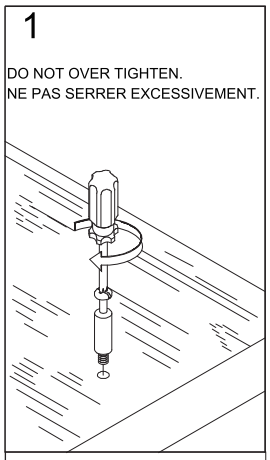

Step 2


Push the male camlock into the entry hole.

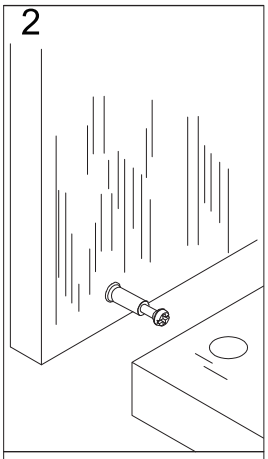

Step 3

Insert the female camlock as shown in the instruction.

Note： ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

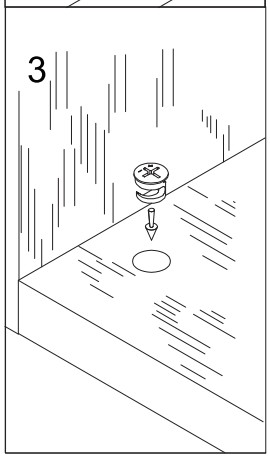


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

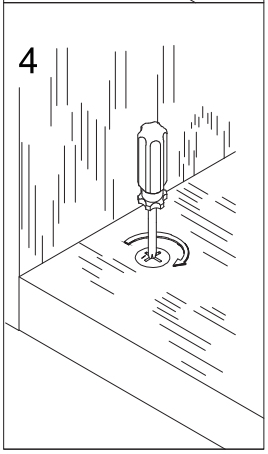


Tools required














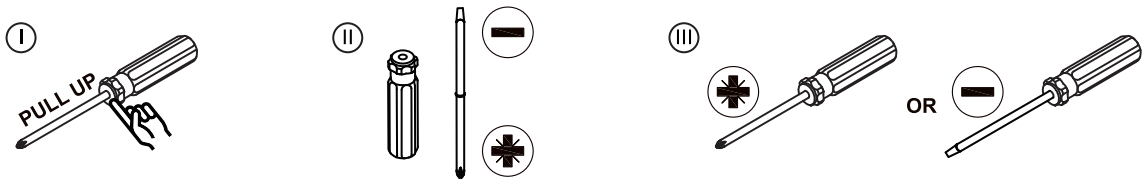


Screwdrivers can be converted to Phillips and Slotted.











Assembly Instructions

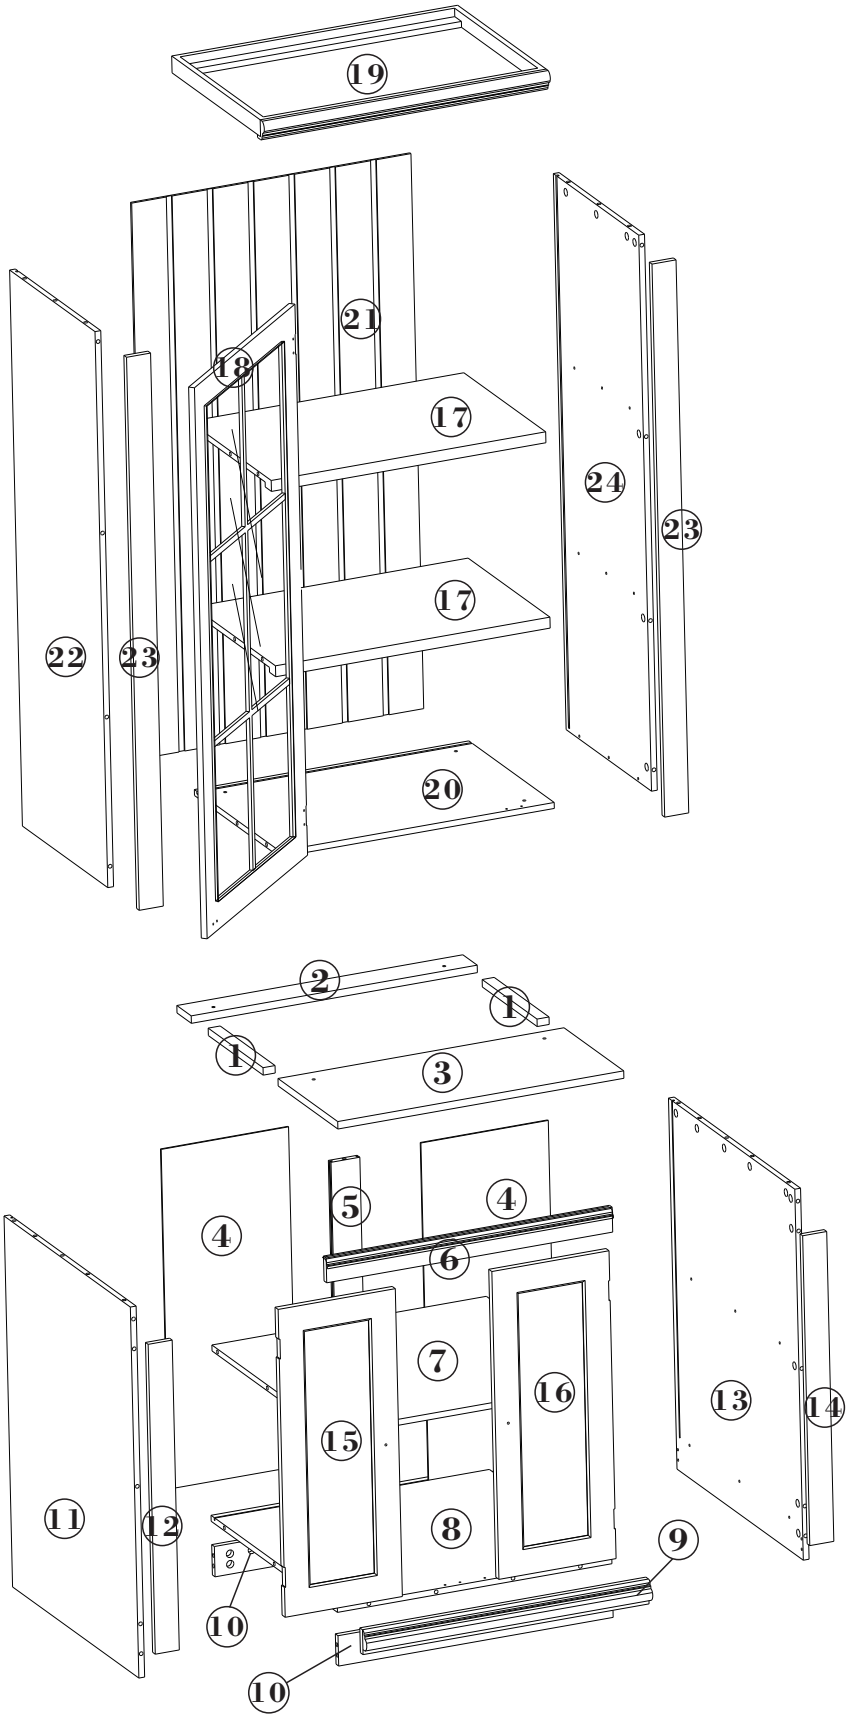

Assembly Instructions

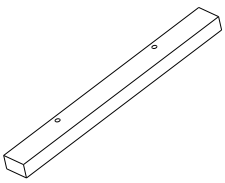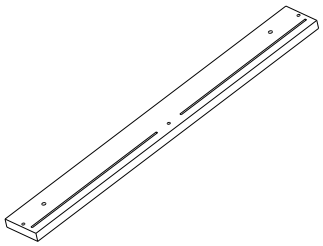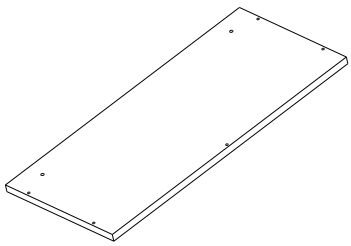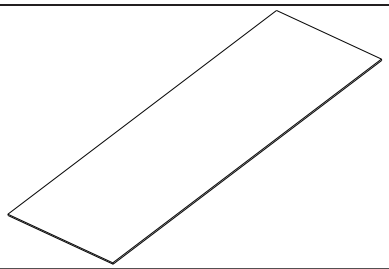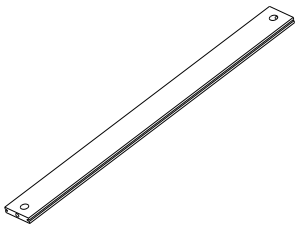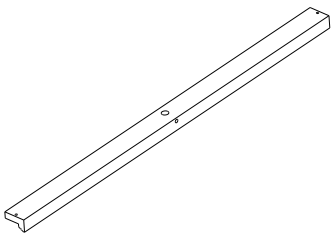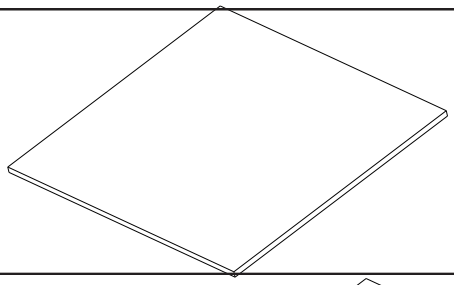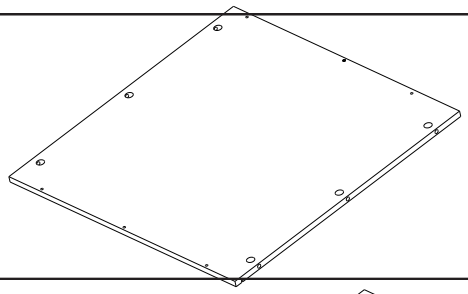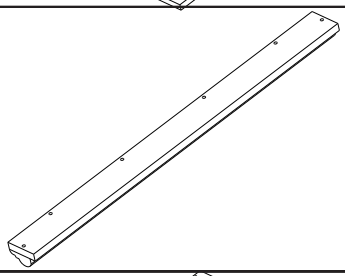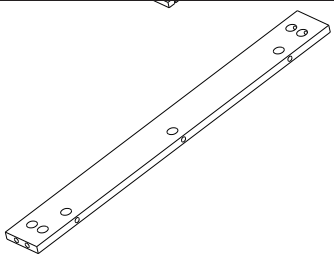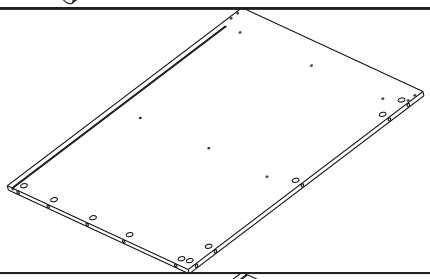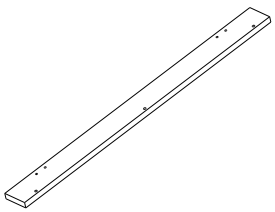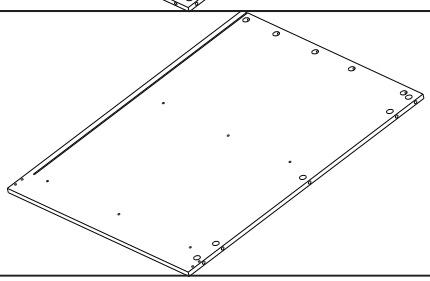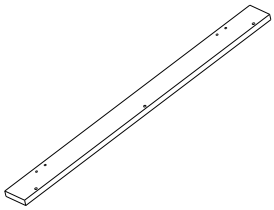
①  2	②  1
③  1	④  2
⑤  1	⑥  1
⑦  1	⑧  1
⑨  1	⑩  2
⑪  1	⑫  1
⑬  1	⑭  1

Assembly Instructions

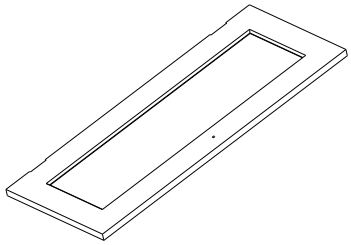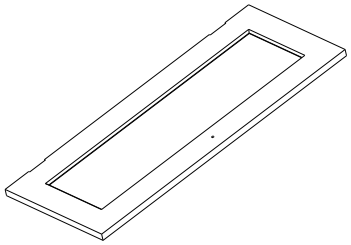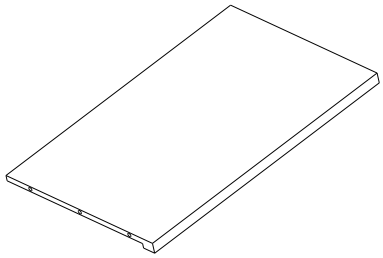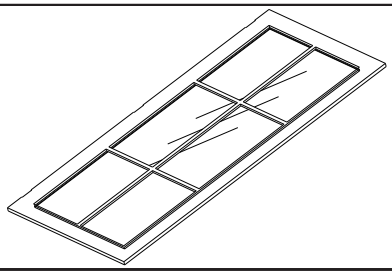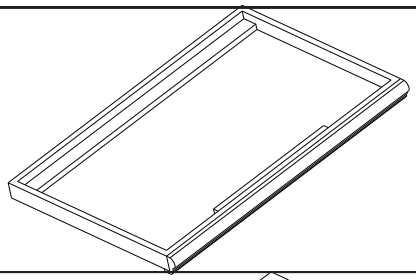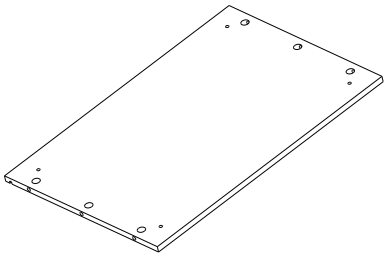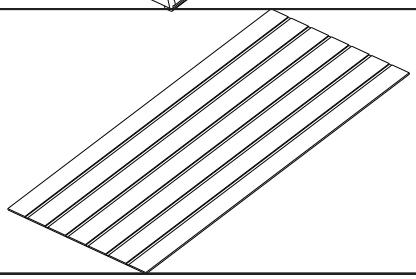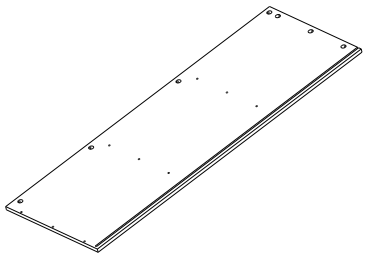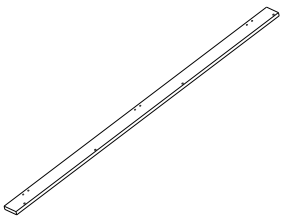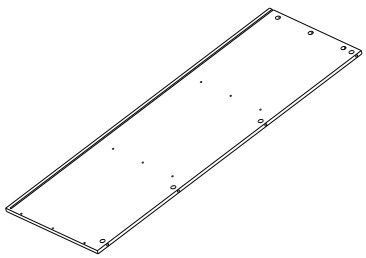15  1	16  1
17  2	18  1
19  1	20  1
21  1	22  1
23  2	24  1

Assembly Instructions


Step 1

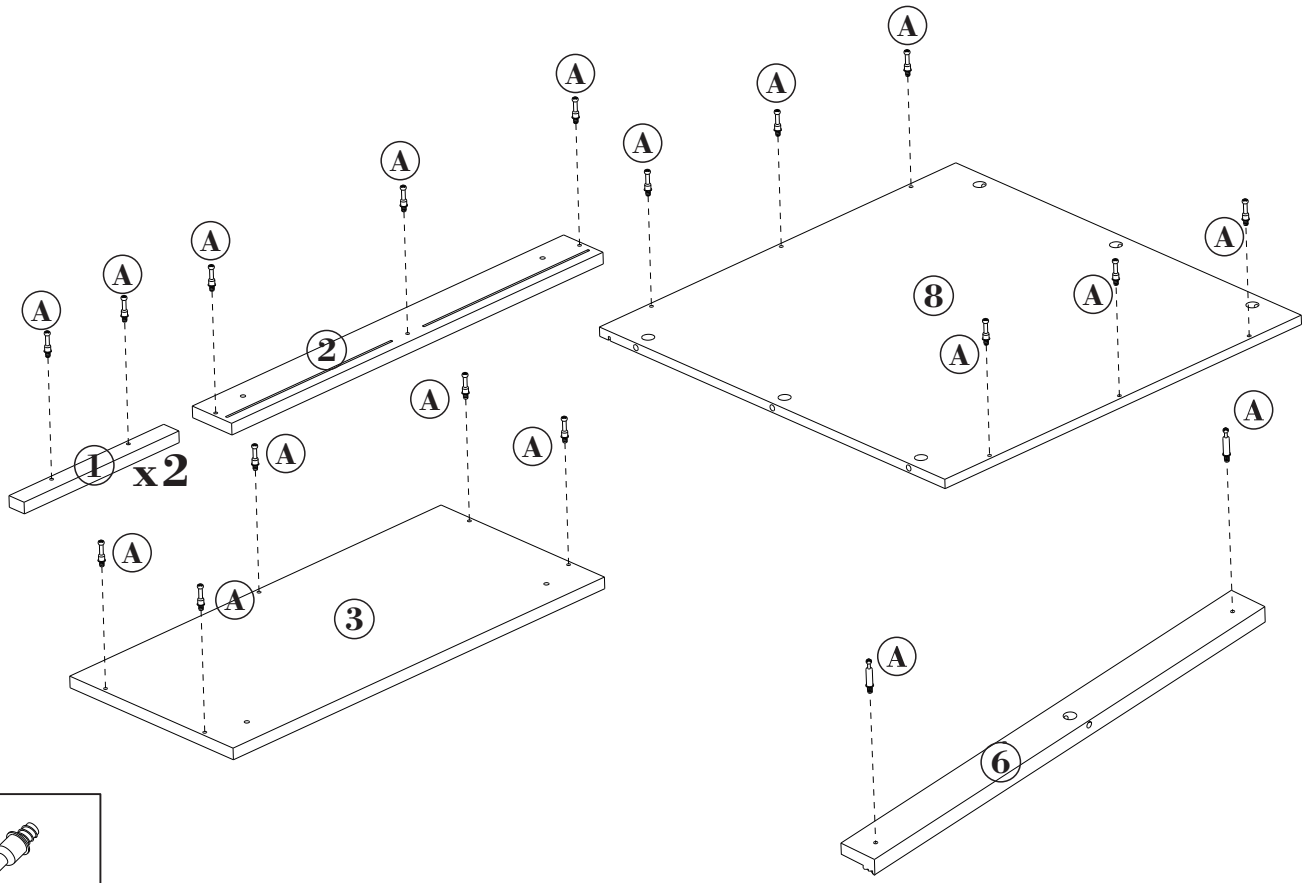

A x20



Step 2

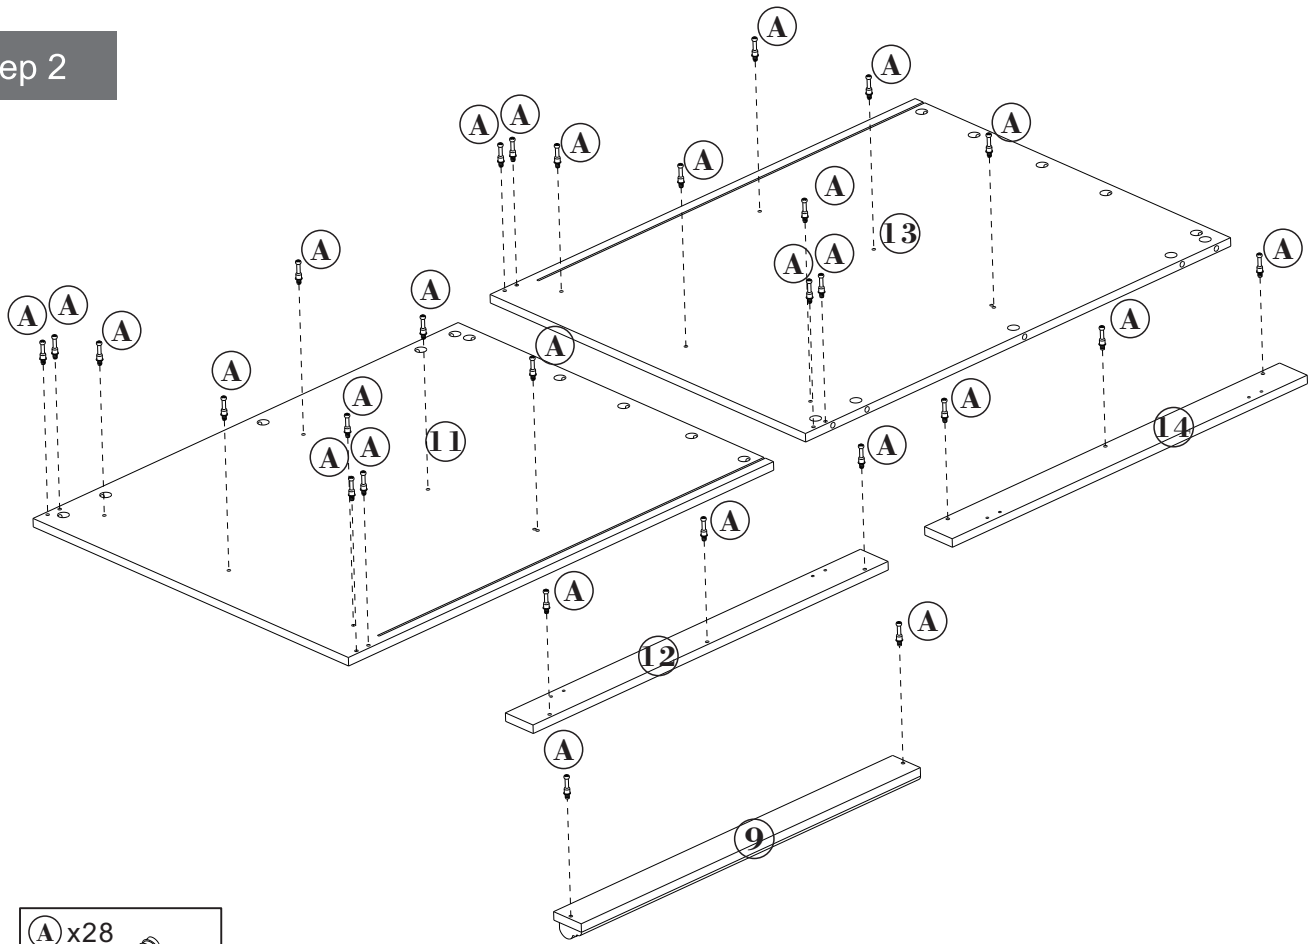



A x28



Assembly Instructions

Step 3

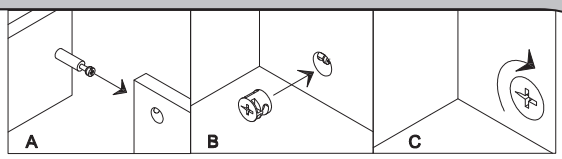


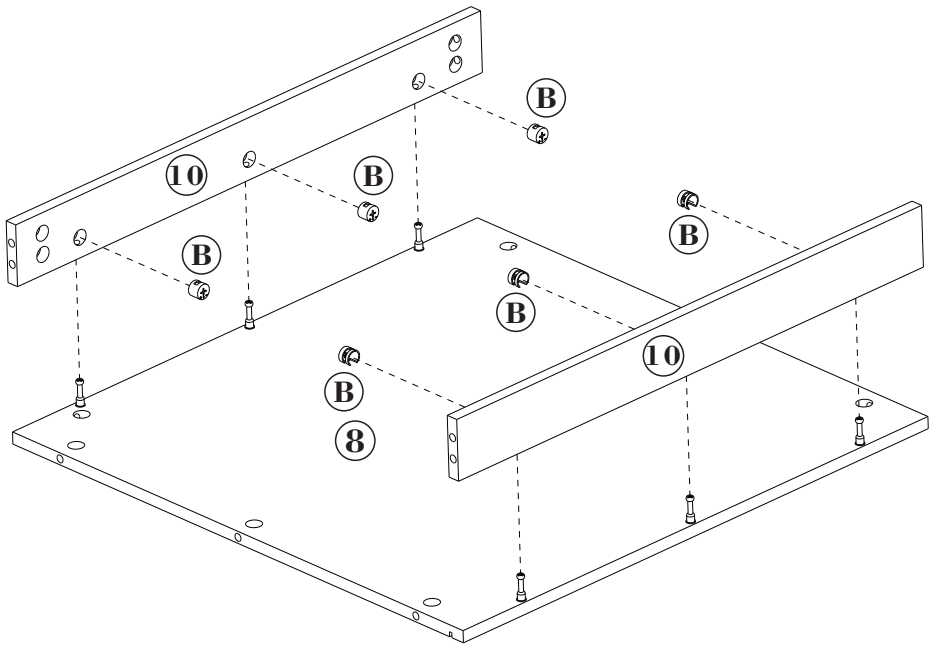


Ⓑ x6



Step 4

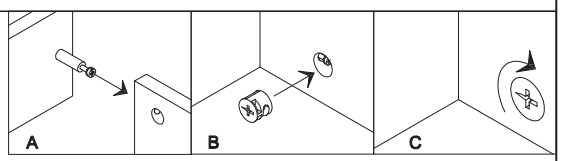

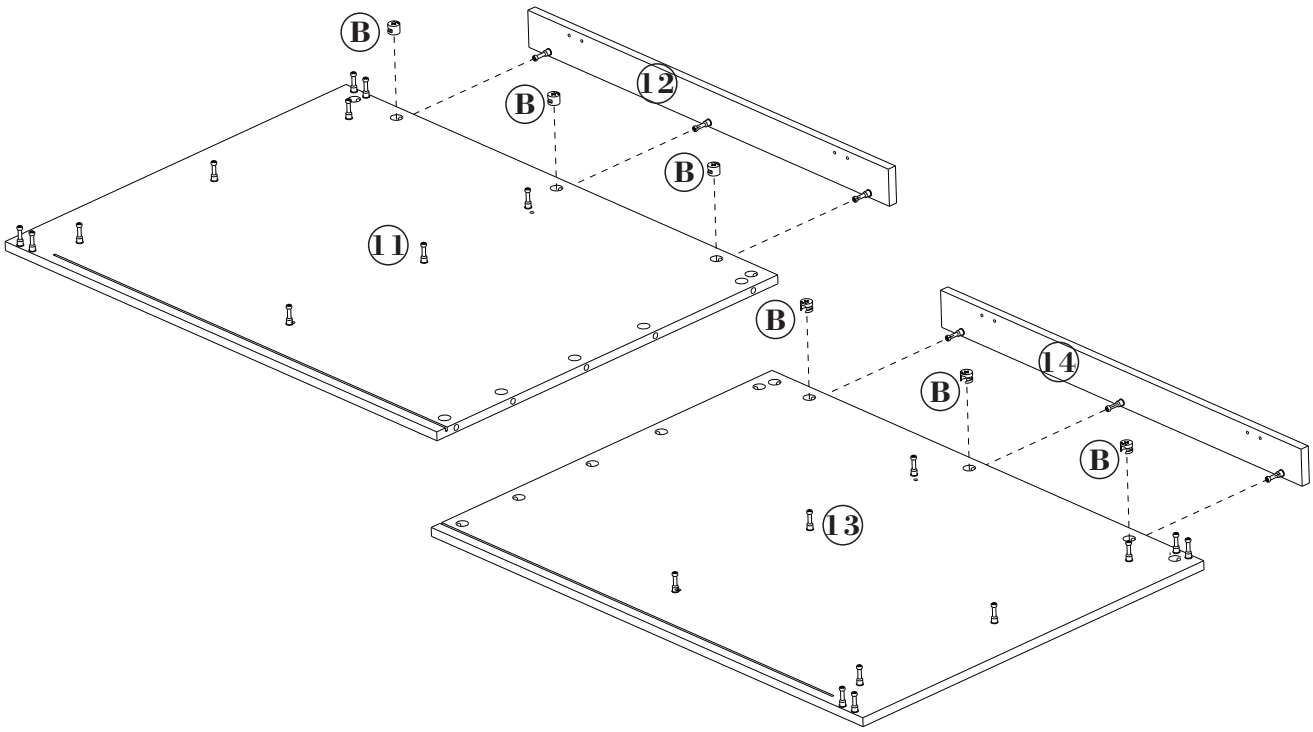


Ⓑ x6




Assembly Instructions

Step 5

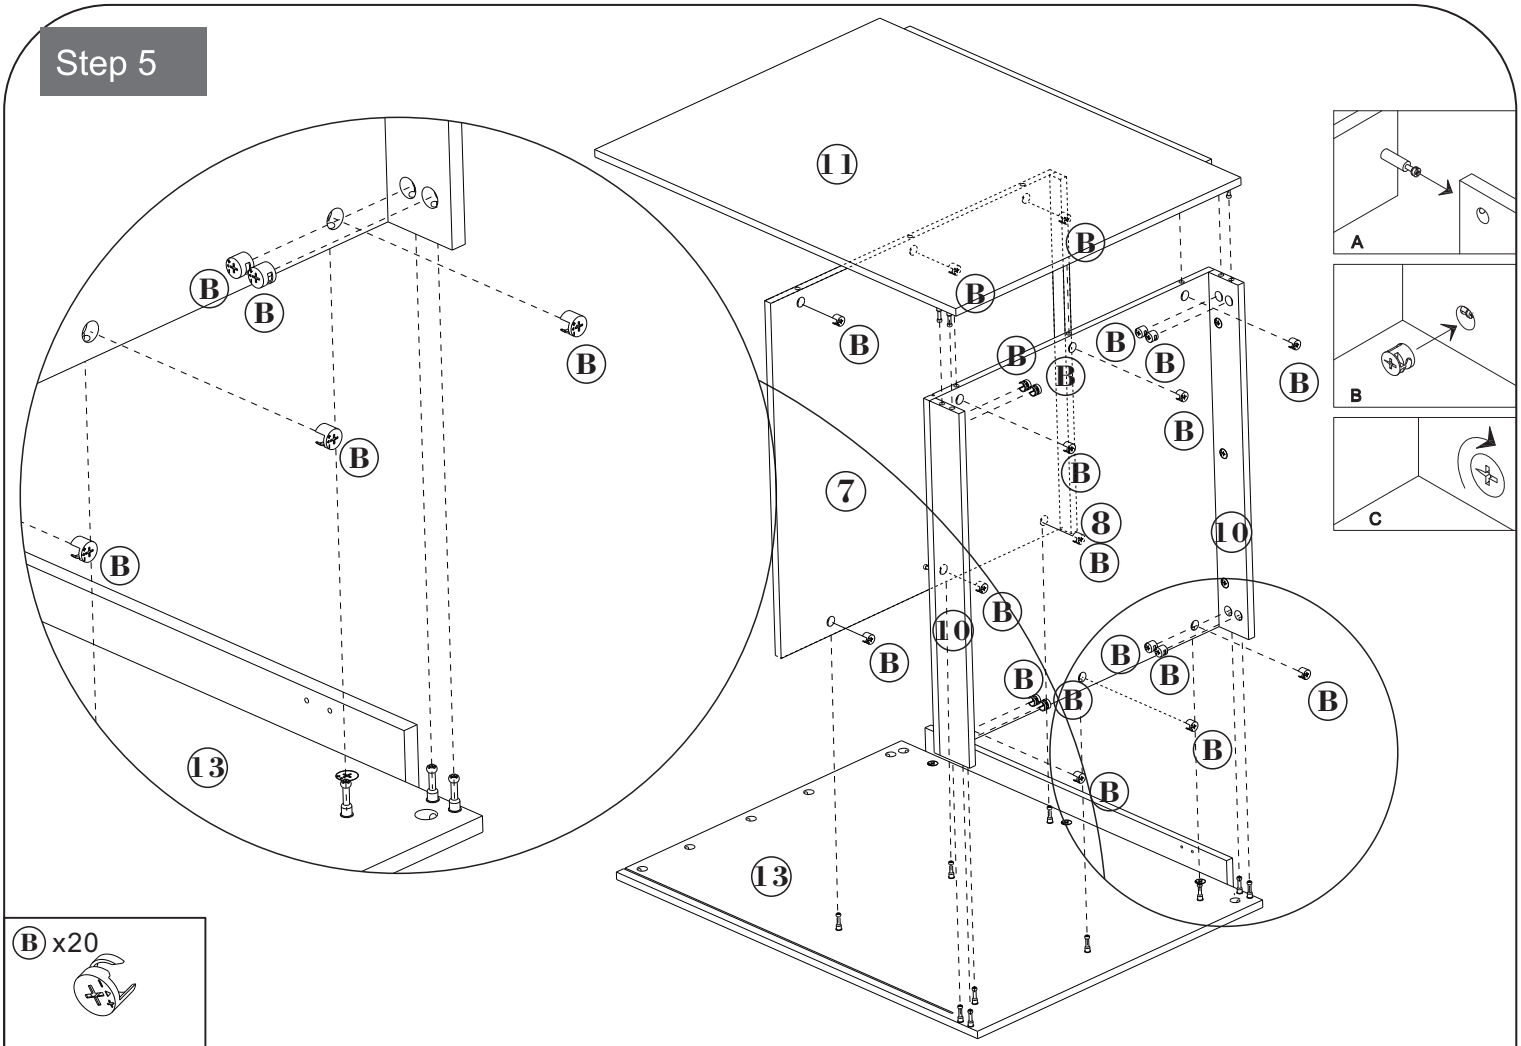

B x20

Step 6

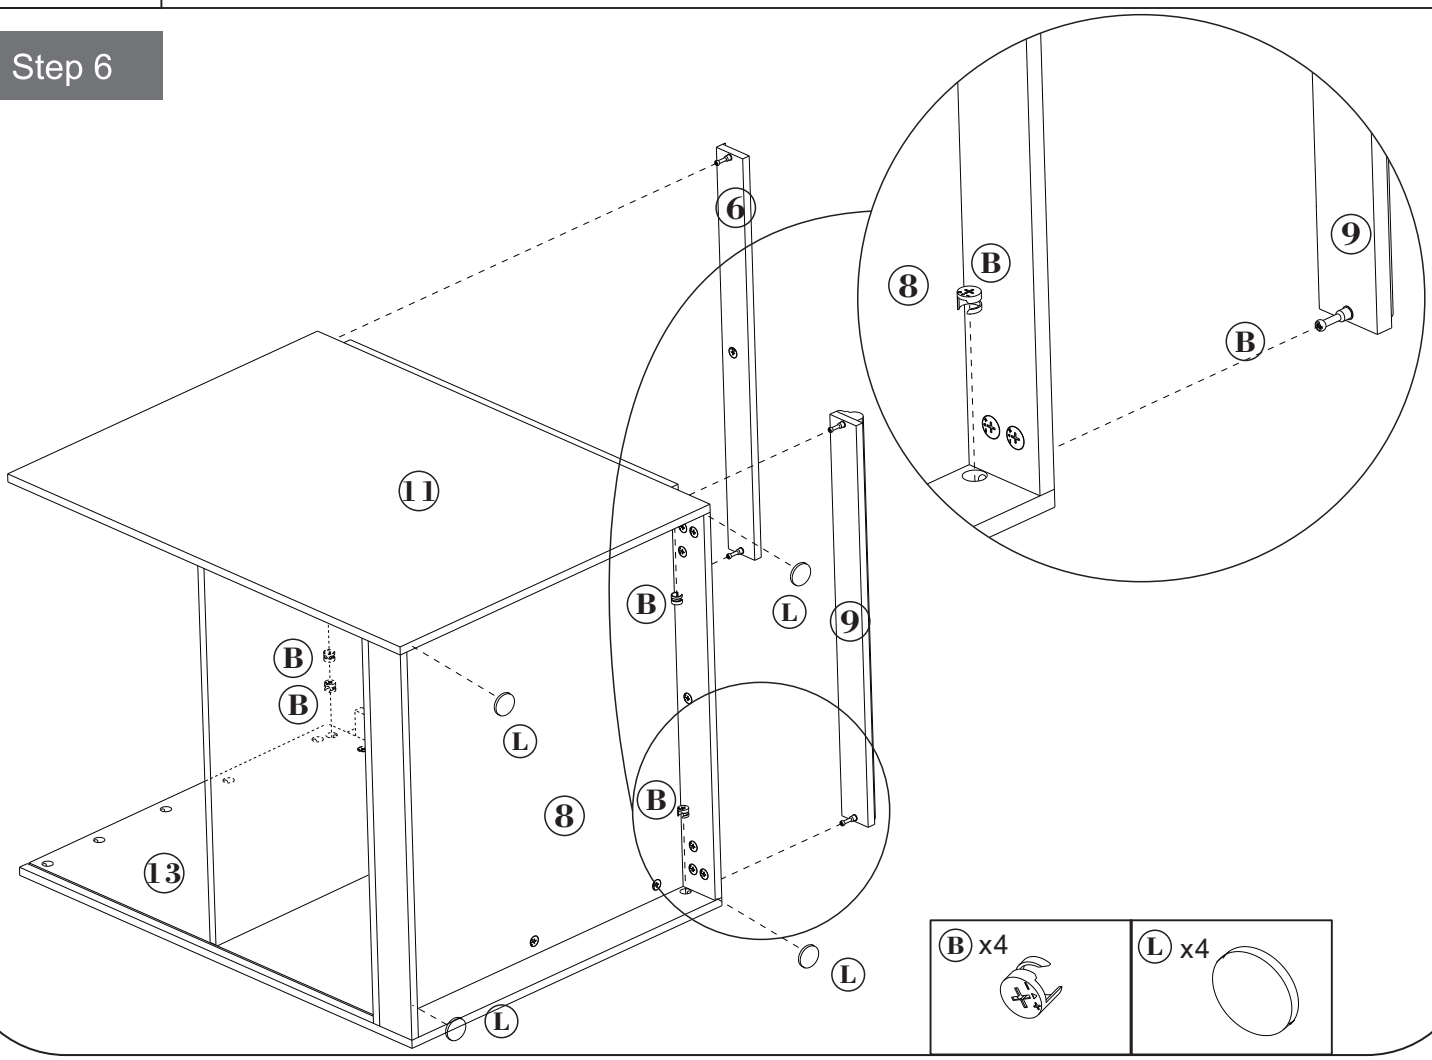



B x4

L x4


Assembly Instructions

Step 7

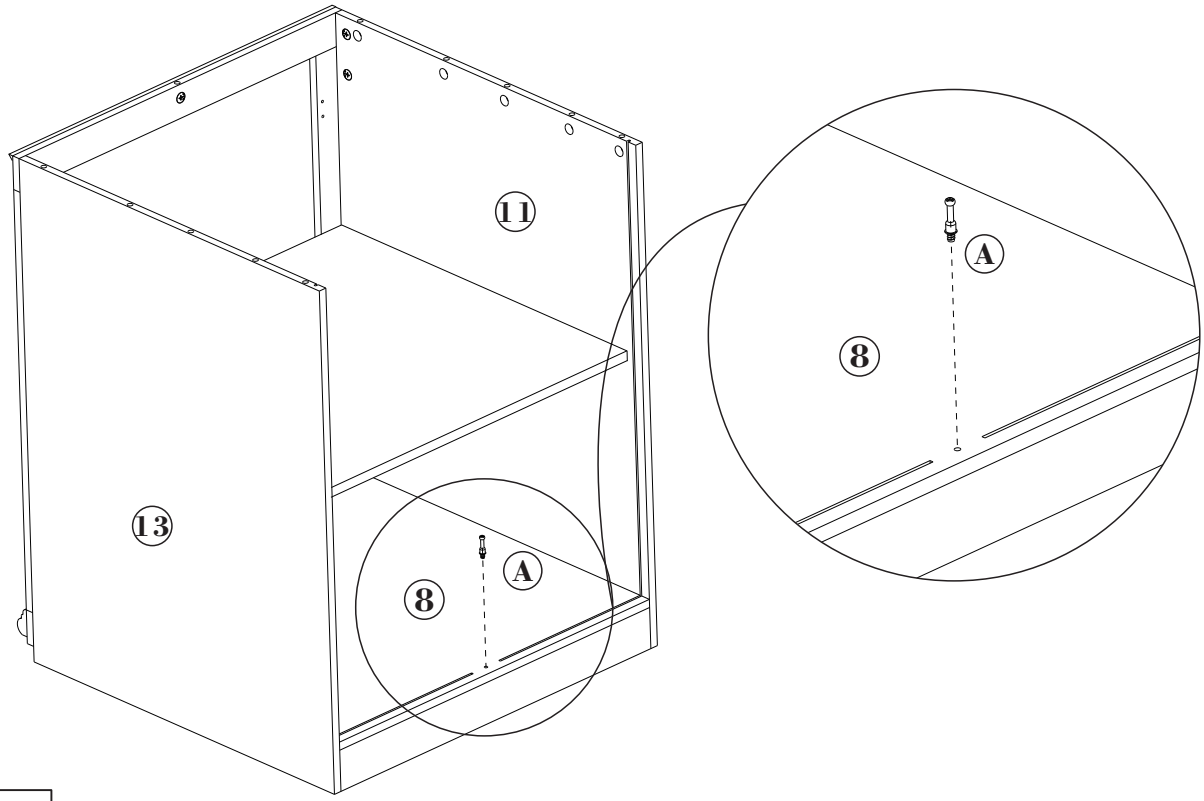

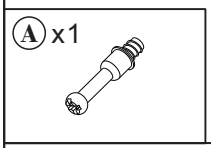


Step 8

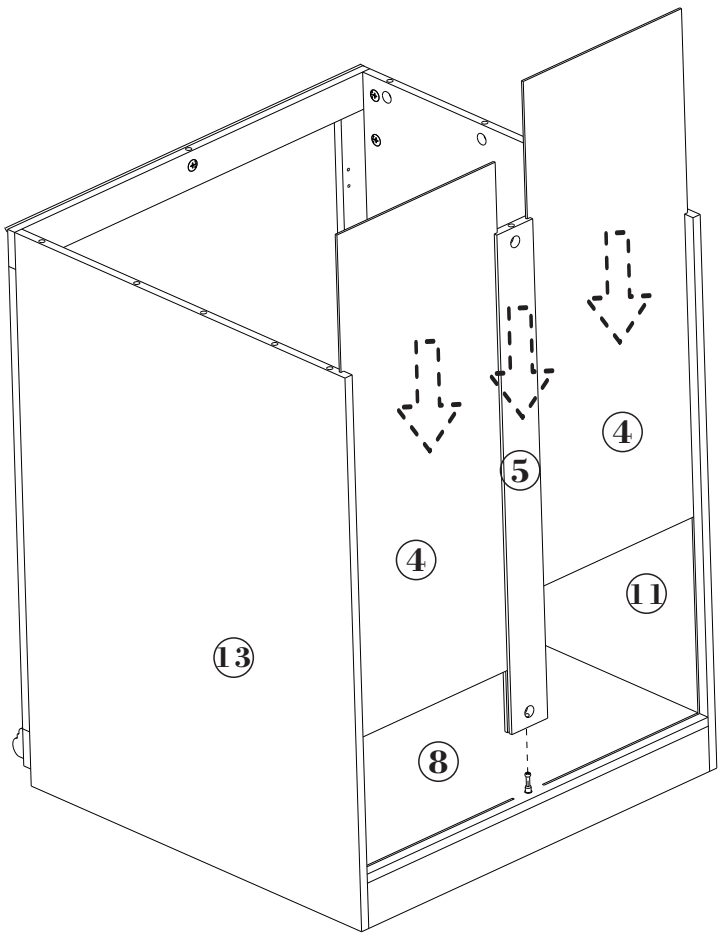

Assembly Instructions


Step 9

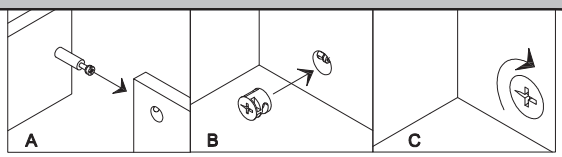


B x13



Step 10

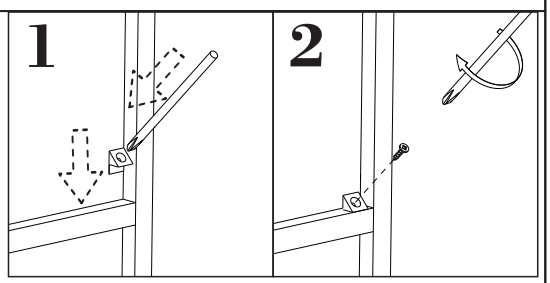

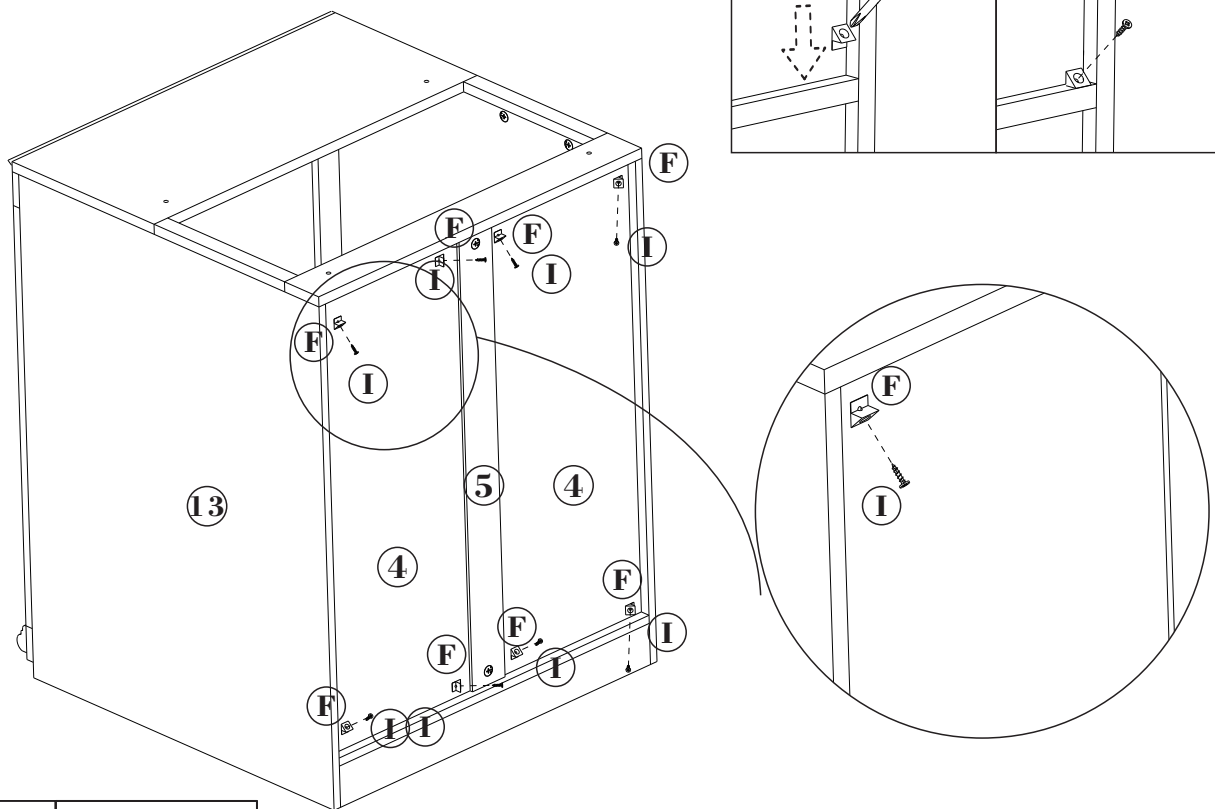

F x8




I x8



M3x12


Assembly Instructions


Step 11

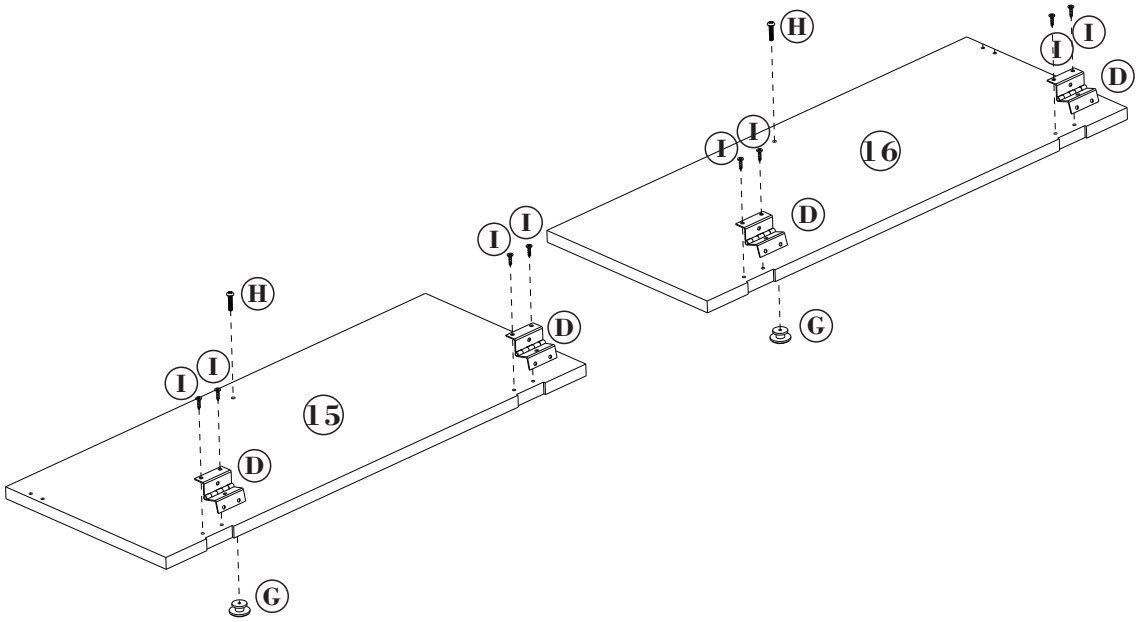

D x4	G x2	H x2	I x8
		 M4x18	 M3x12


Step 12

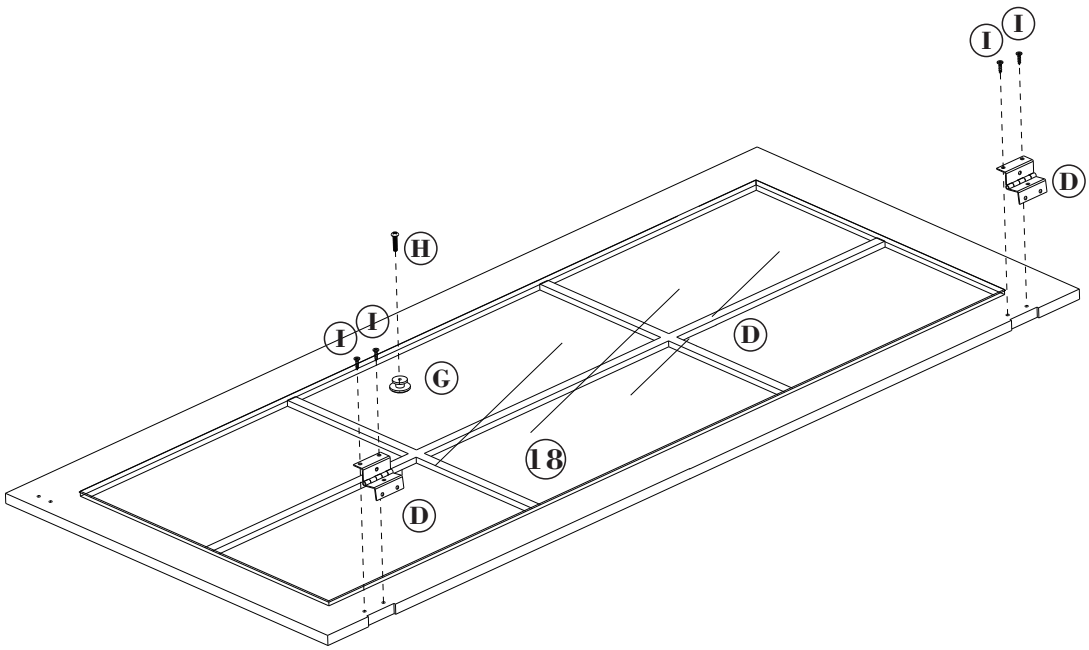


D x2	G x1	H x1	I x4
		 M4x18	 M3x12


Assembly Instructions


Step 13

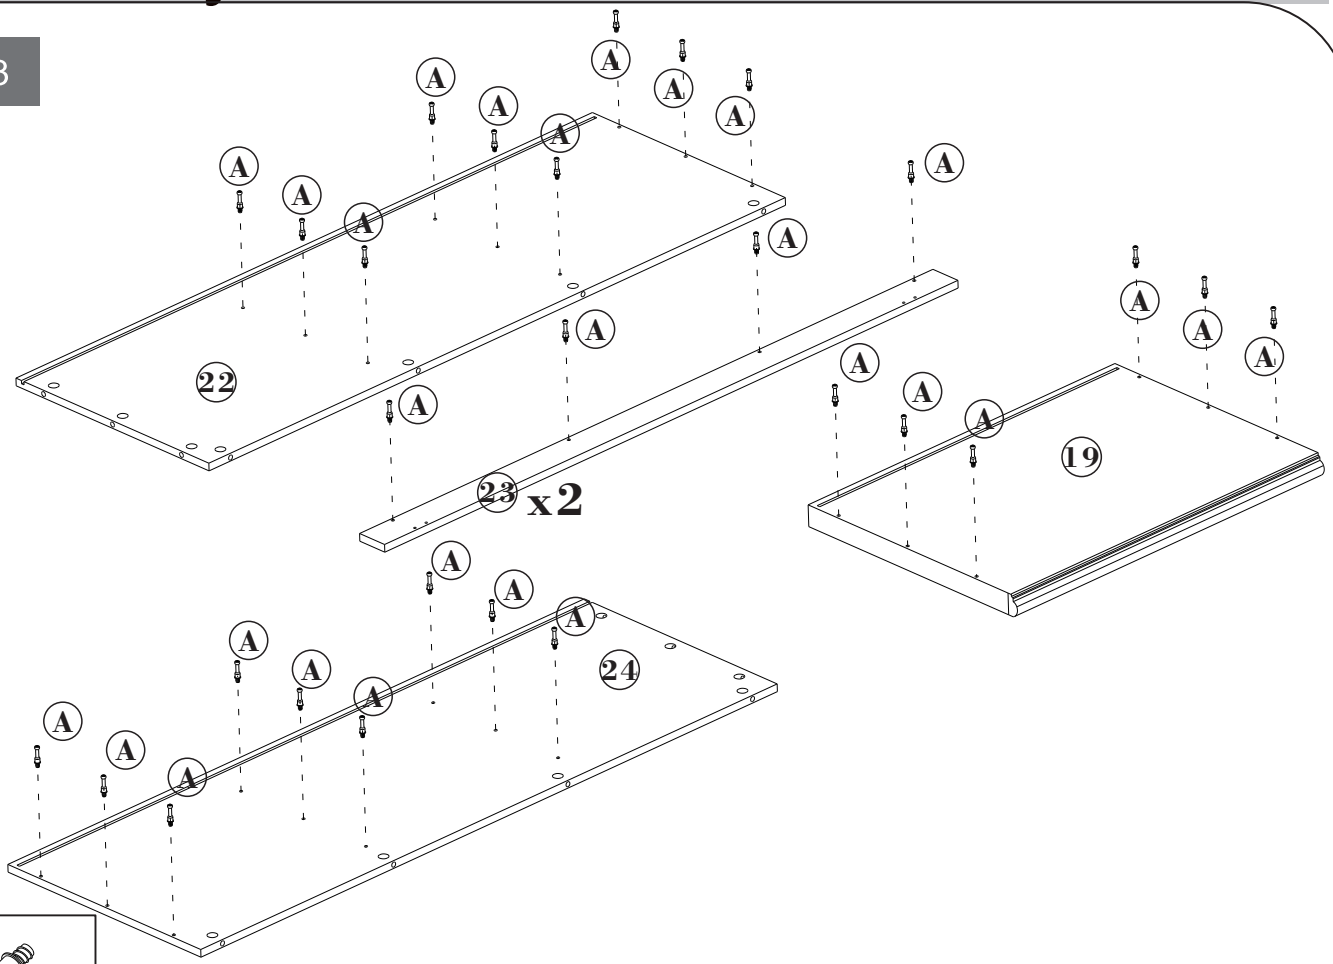


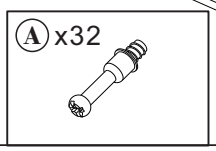

Step 14

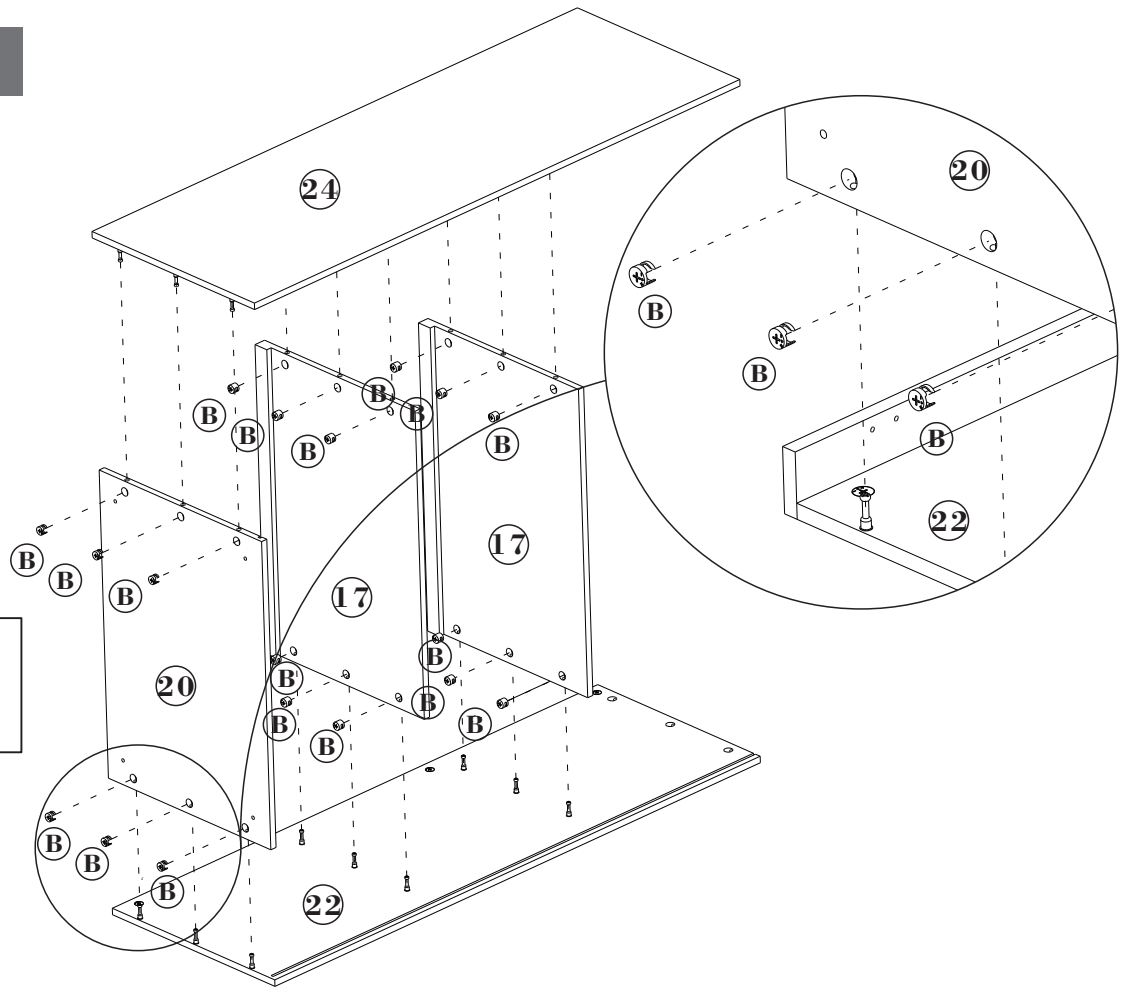


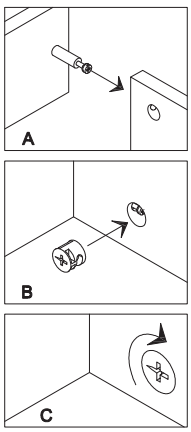

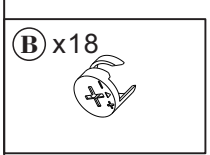



Assembly Instructions


Step 15

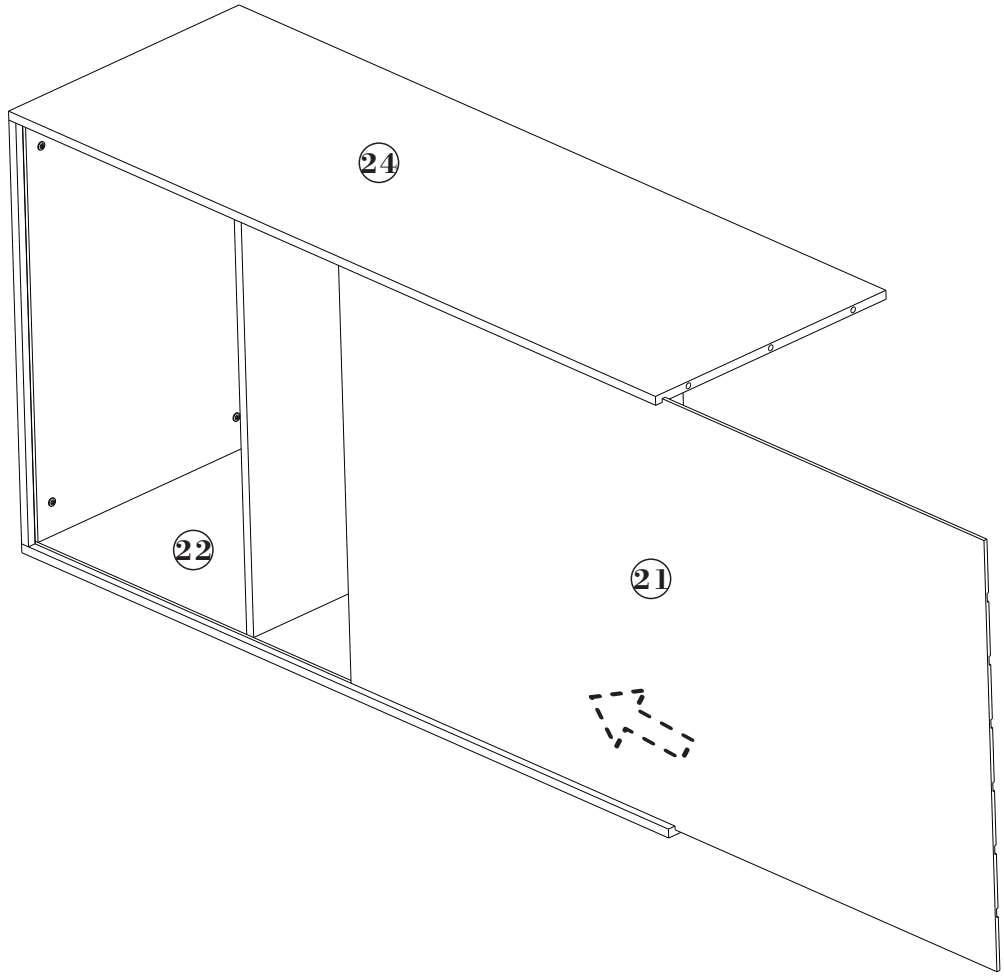

Step 16

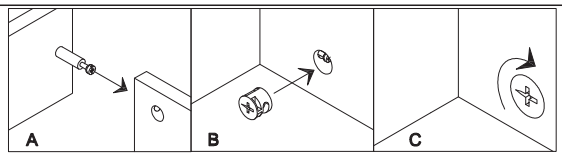


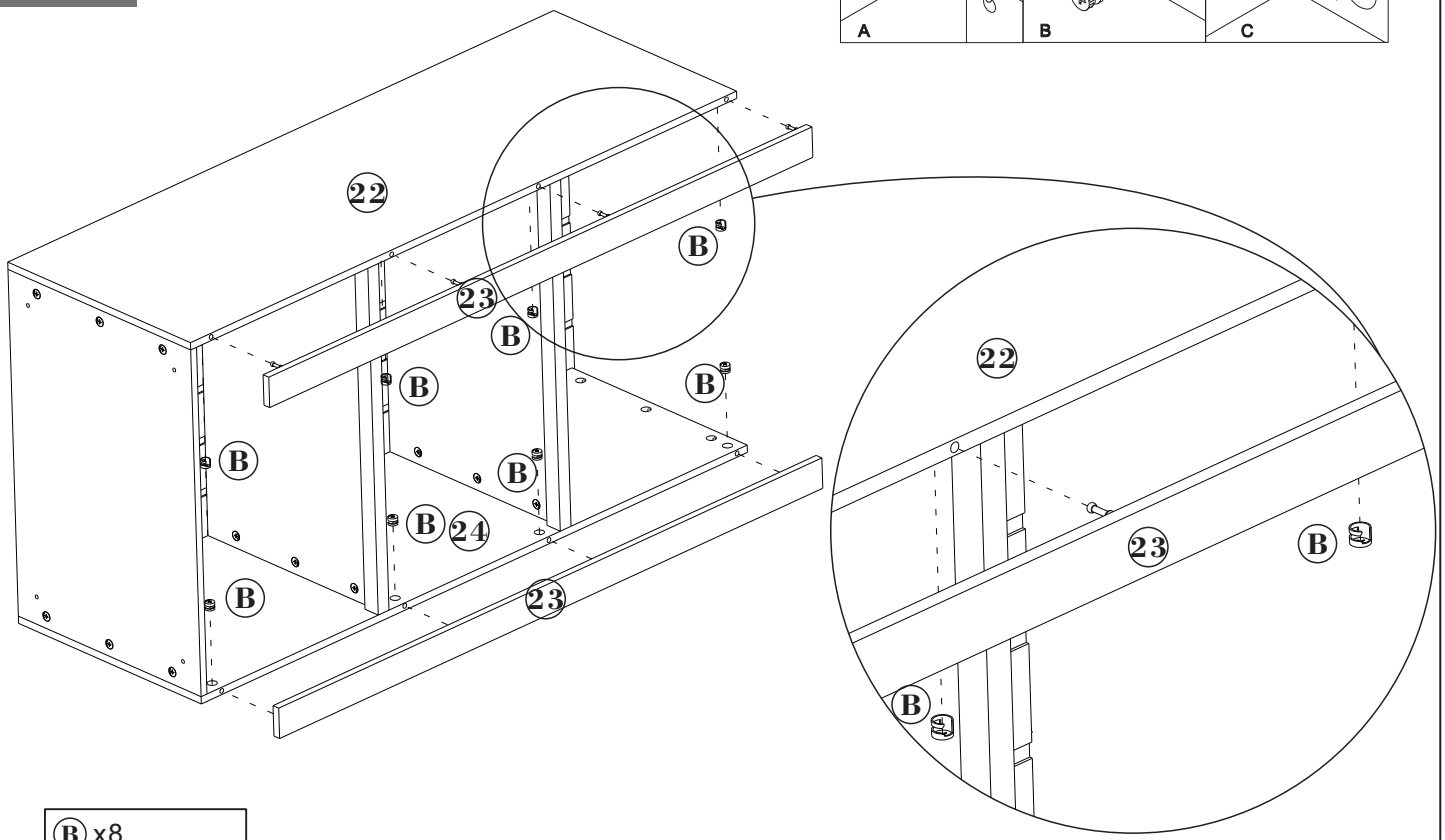

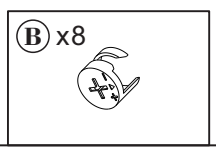


Assembly Instructions


Step 17

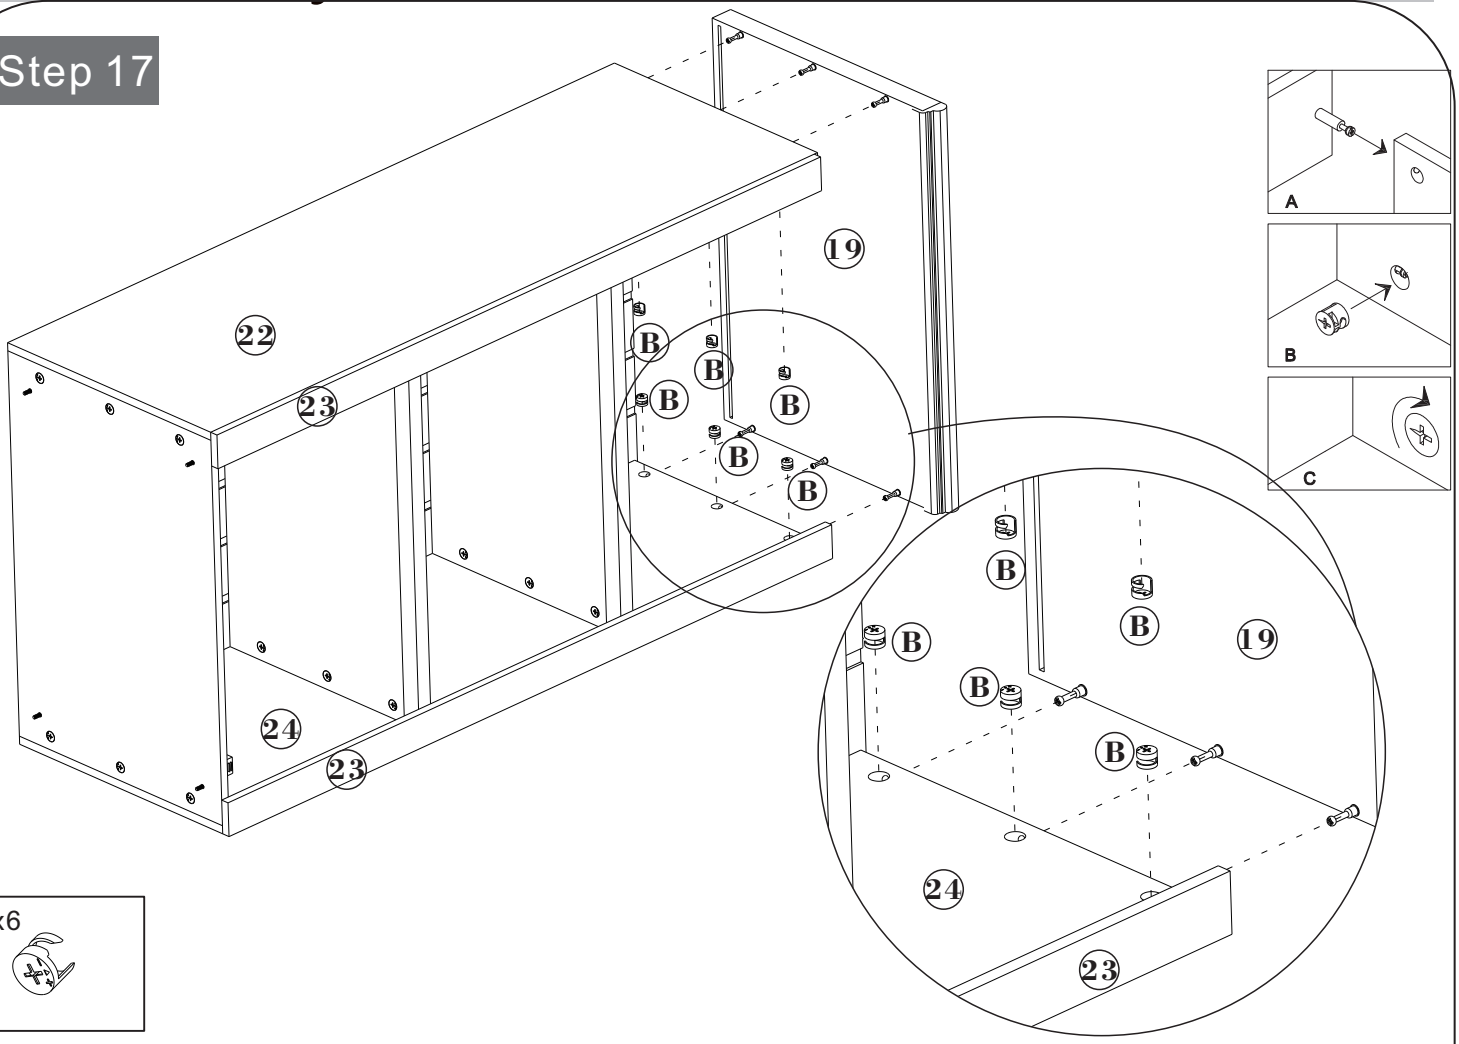

B x6

Step 18

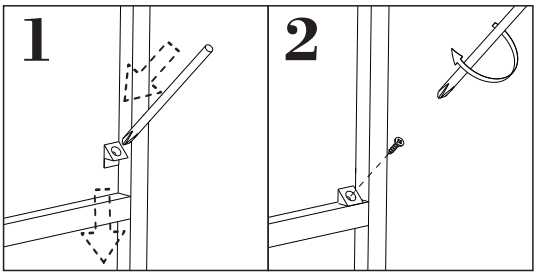

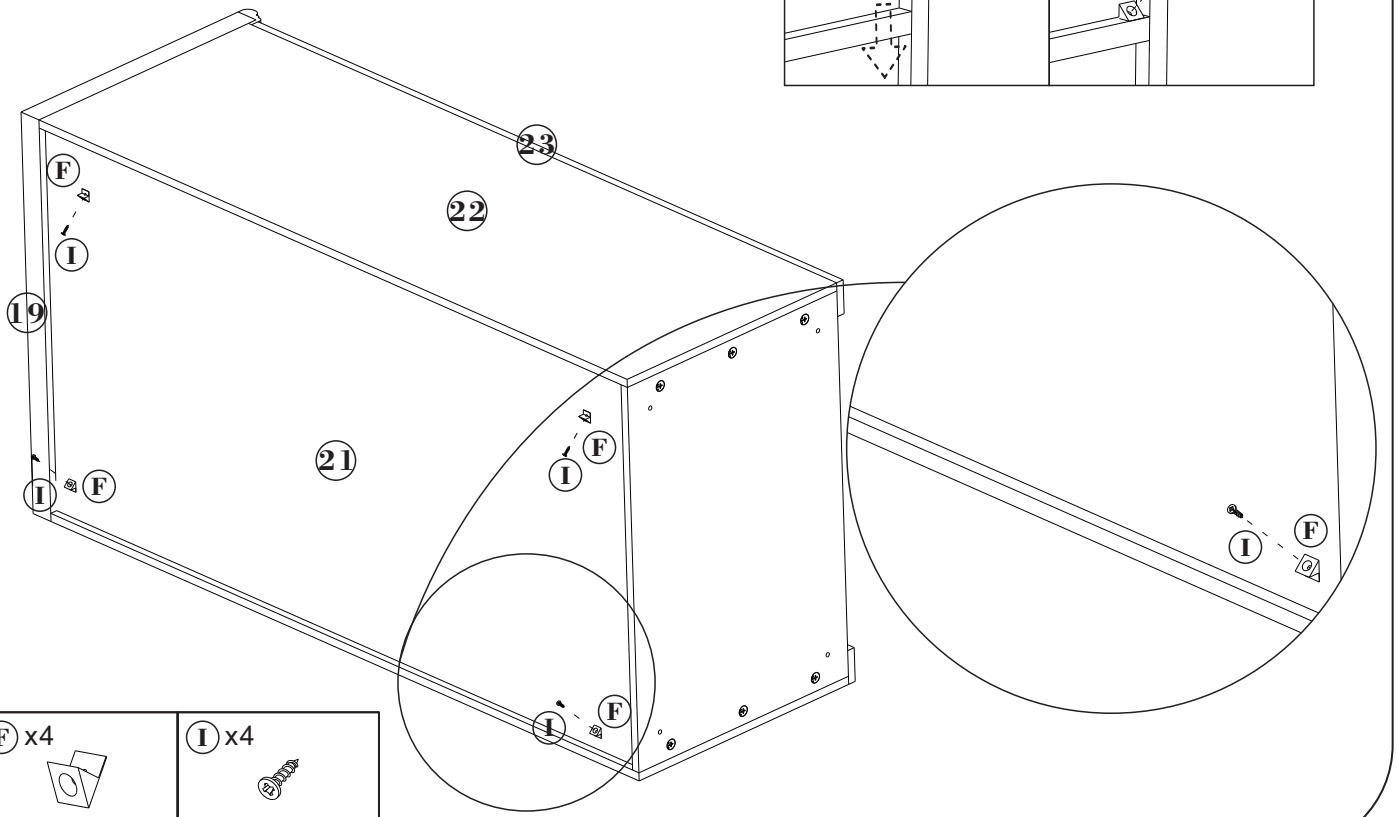


F x4


I x4

M3x12

Assembly Instructions

Step 19

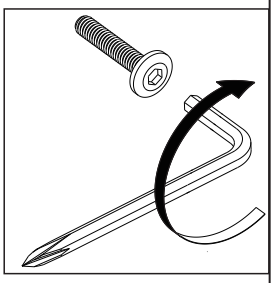

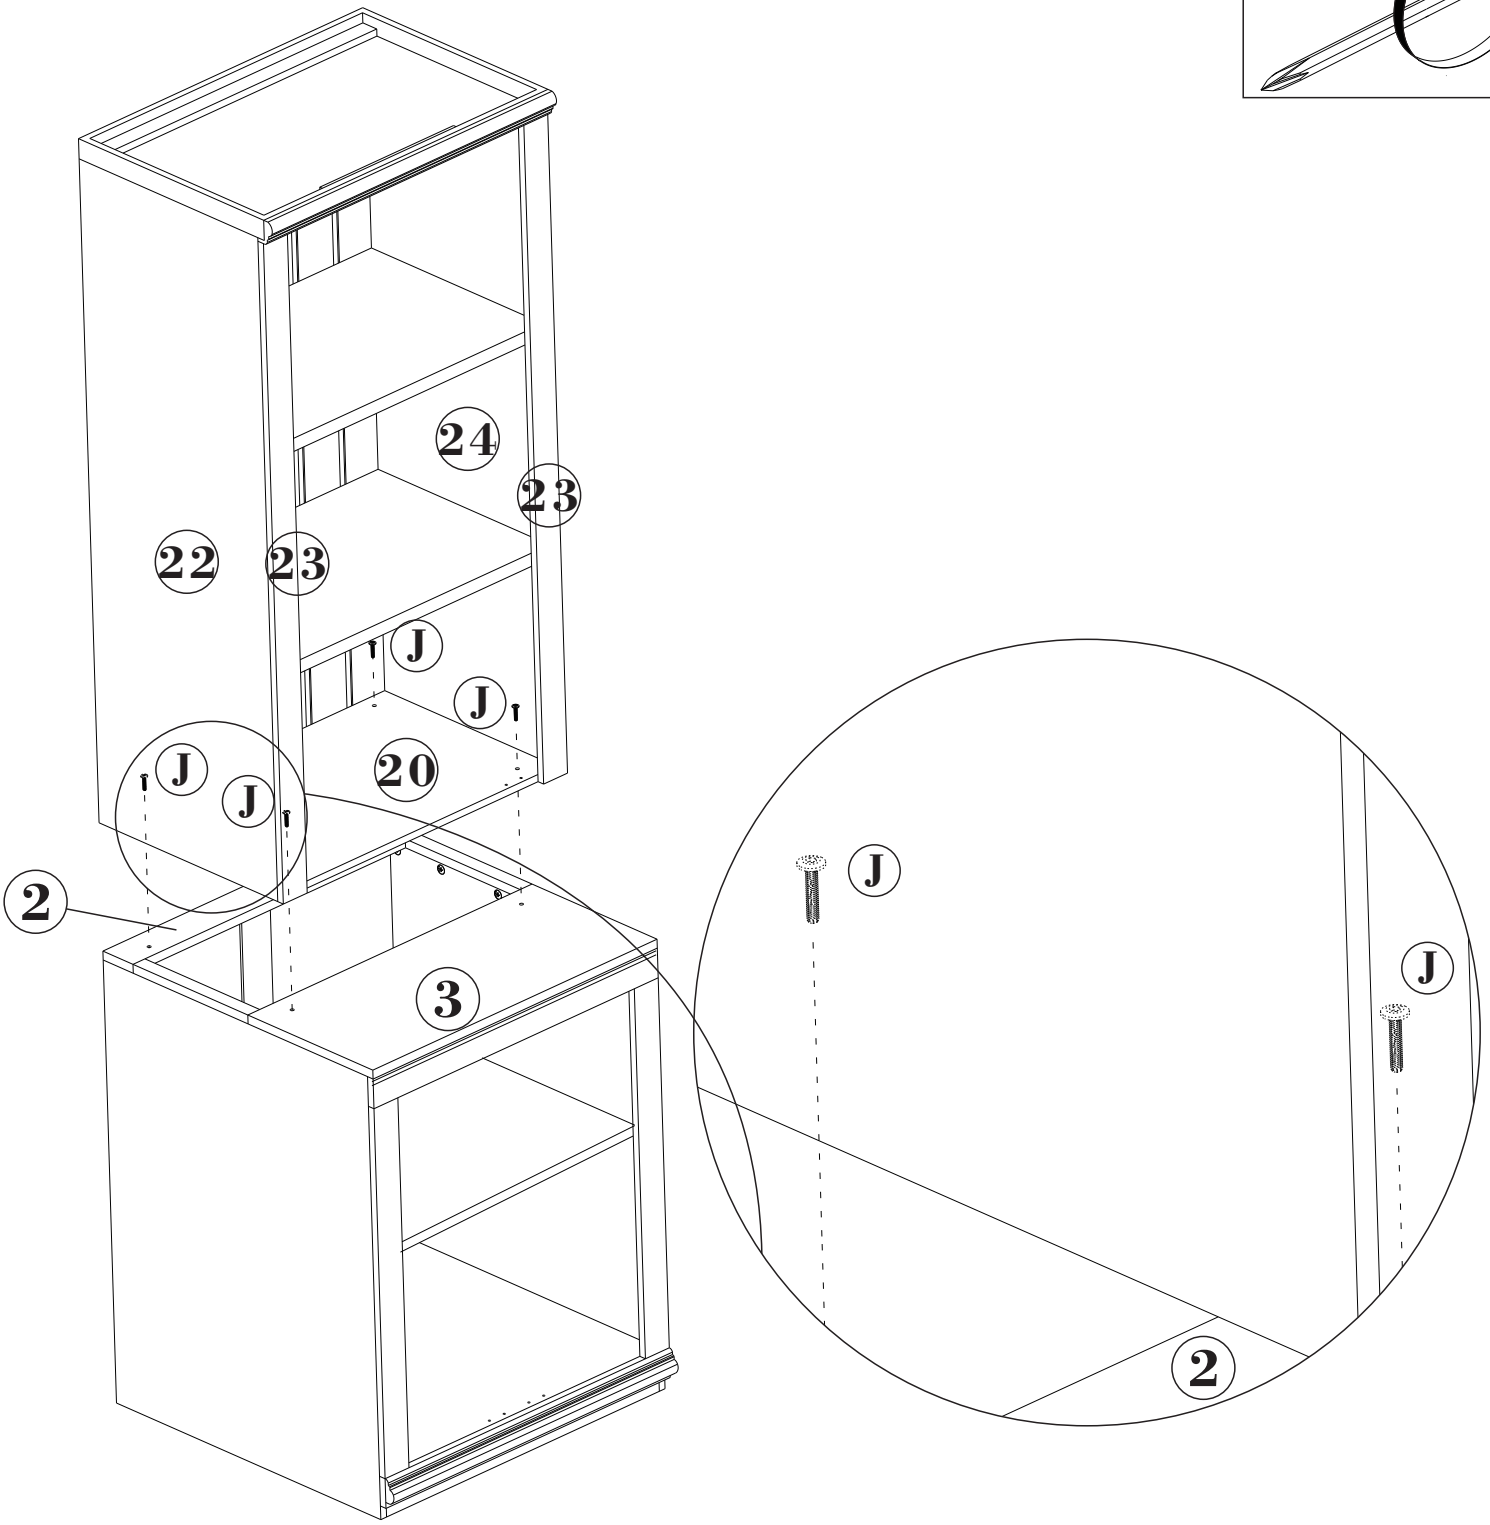



J x4	K x1
 M6x25	 M4

Assembly Instructions

Step 20

Type A

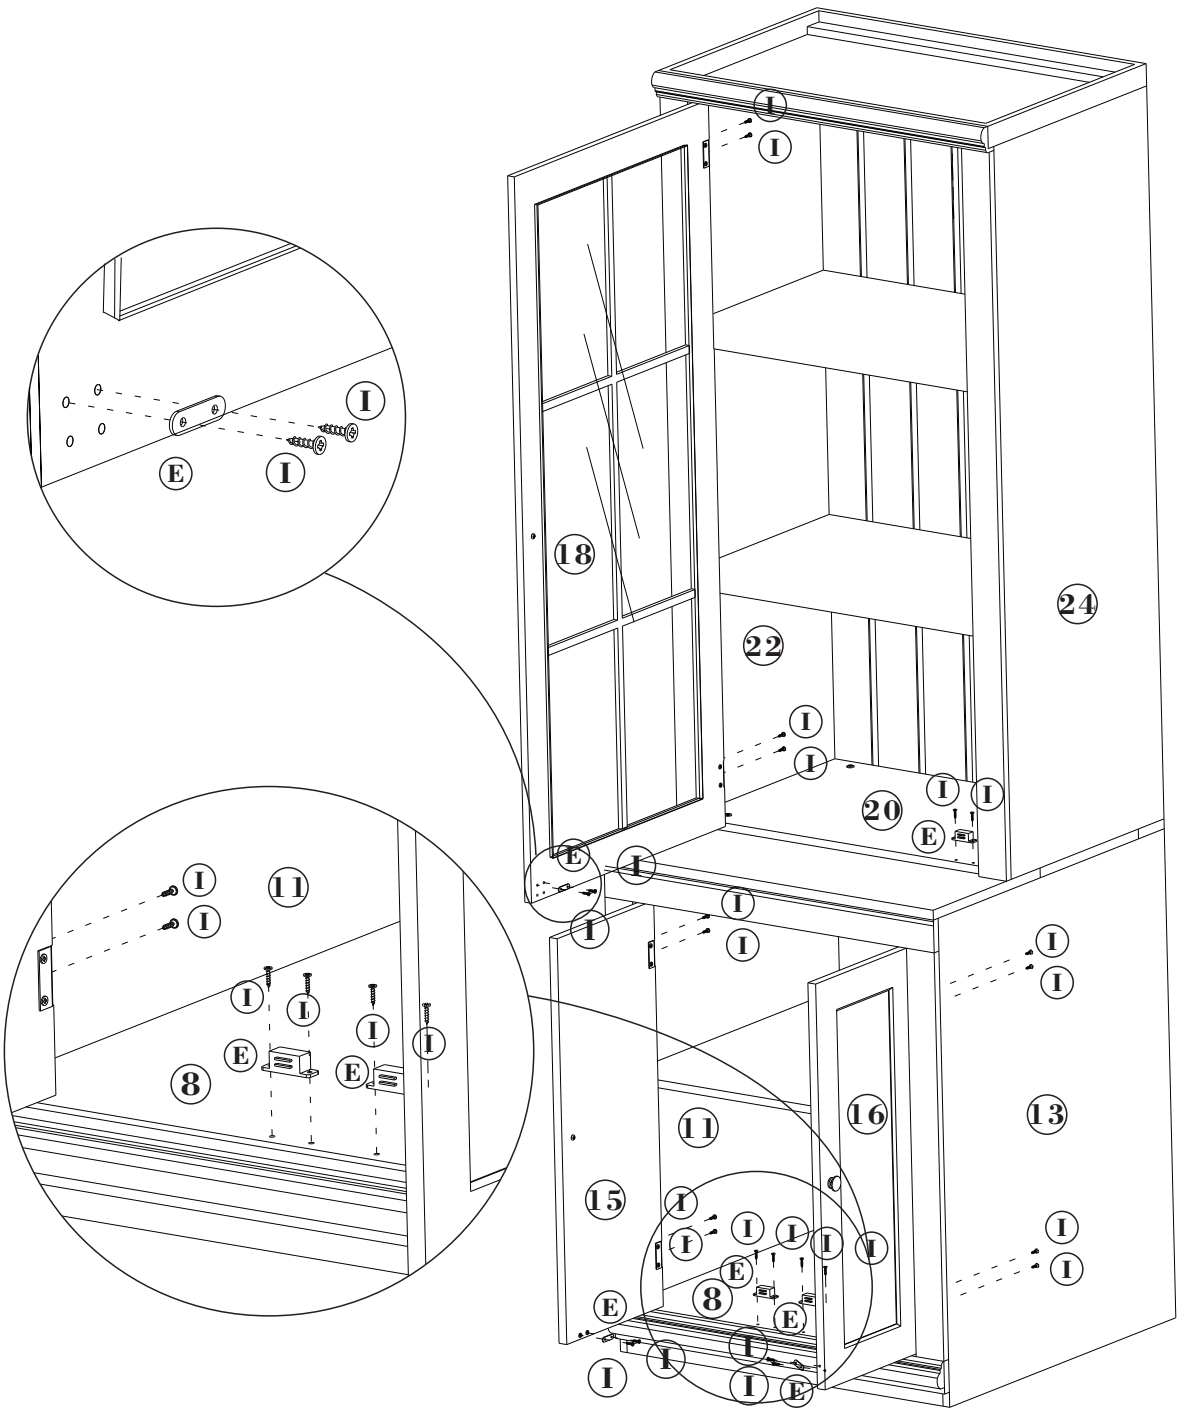


E x3	I x24
	 M3x12

Assembly Instructions

Step 20

Type B

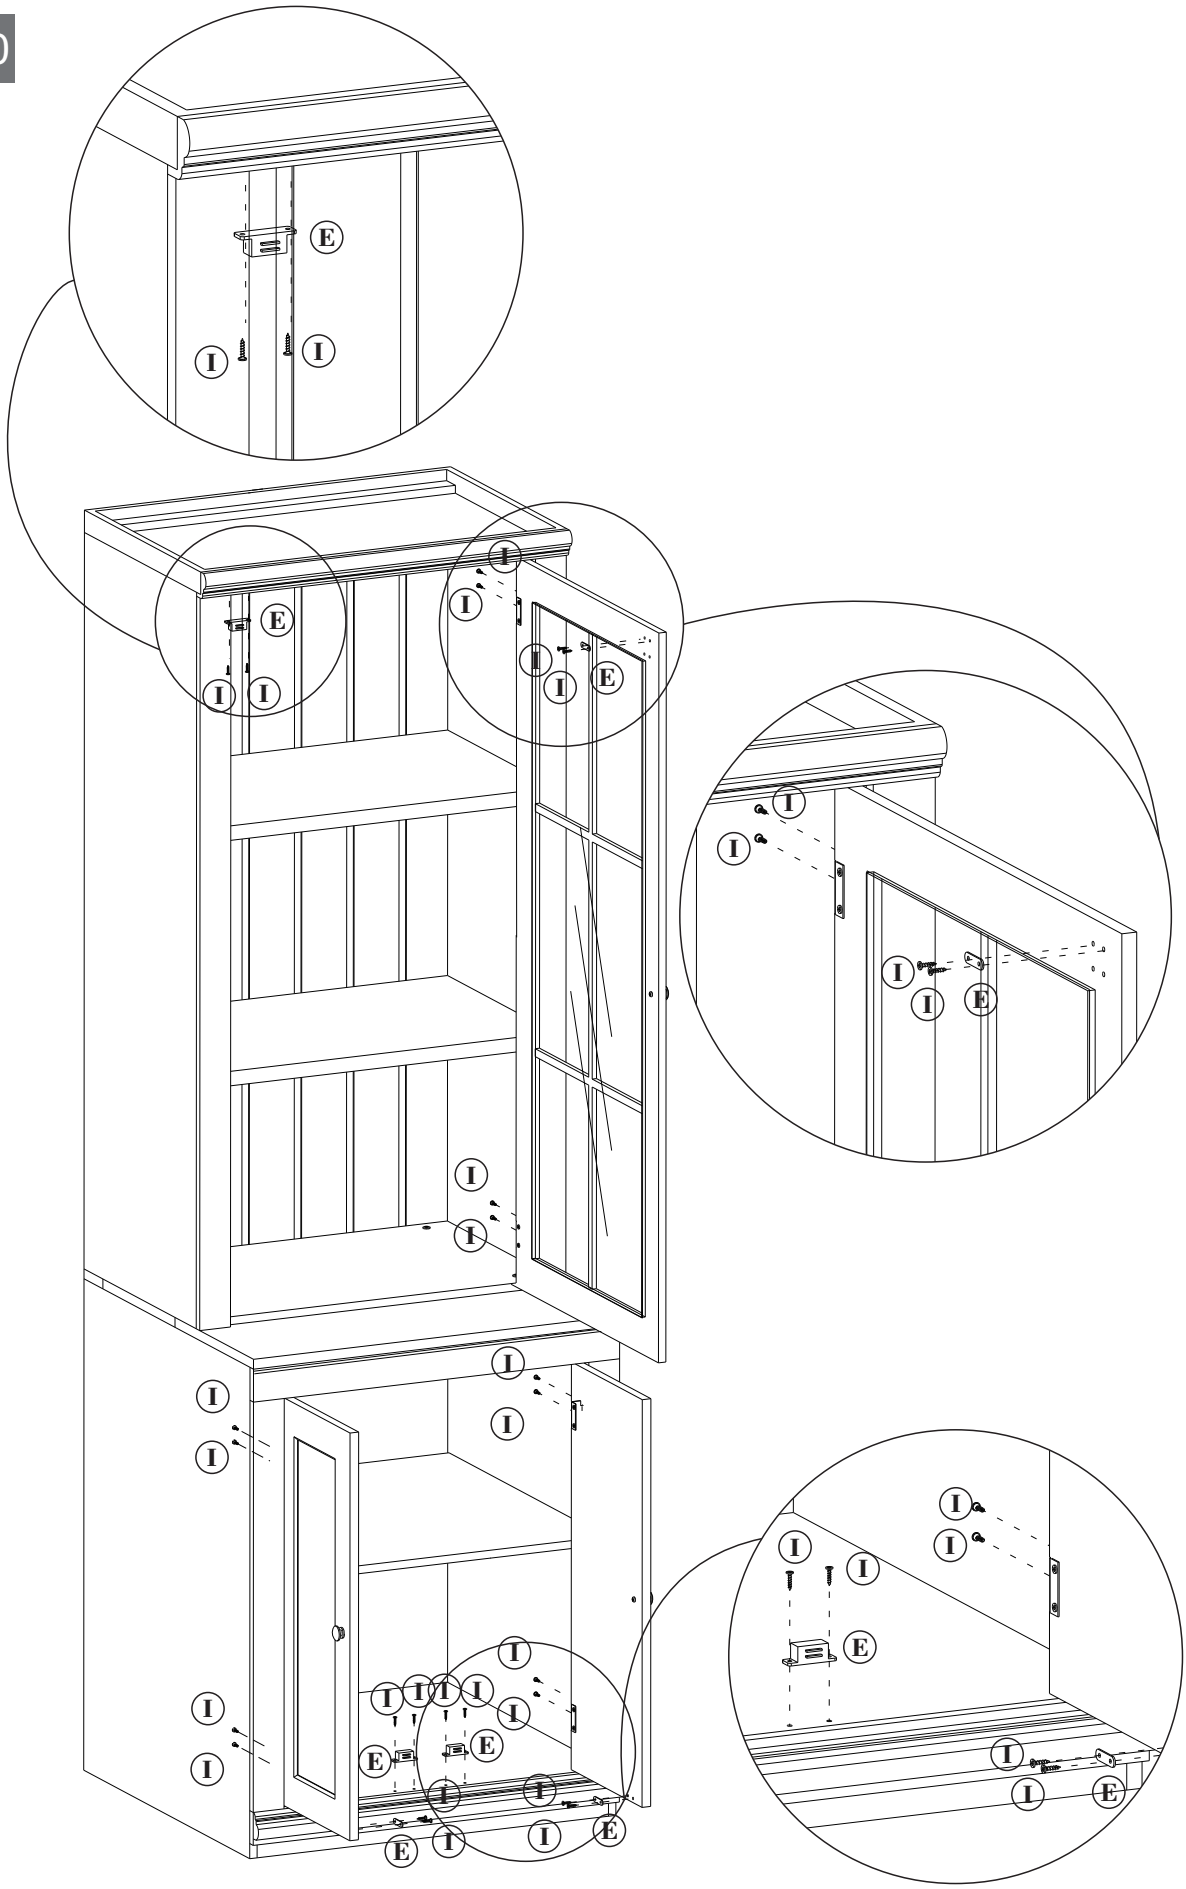
E
I
I
E
I
I
I
I
E
I
I
I
I

Assembly Instructions

