


Six-layer large shelf installation diagram

				
Spiral with bias	Bias bolt	3.5CM self-tapping screws	Foot mat	Metal pin
A*12	B*12	C*50	D*4	E*3


Caution: When installing, tighten the screws to a moderate degree. Finish the installation process and then fully tighten them!

Principle of eccentric component installation:

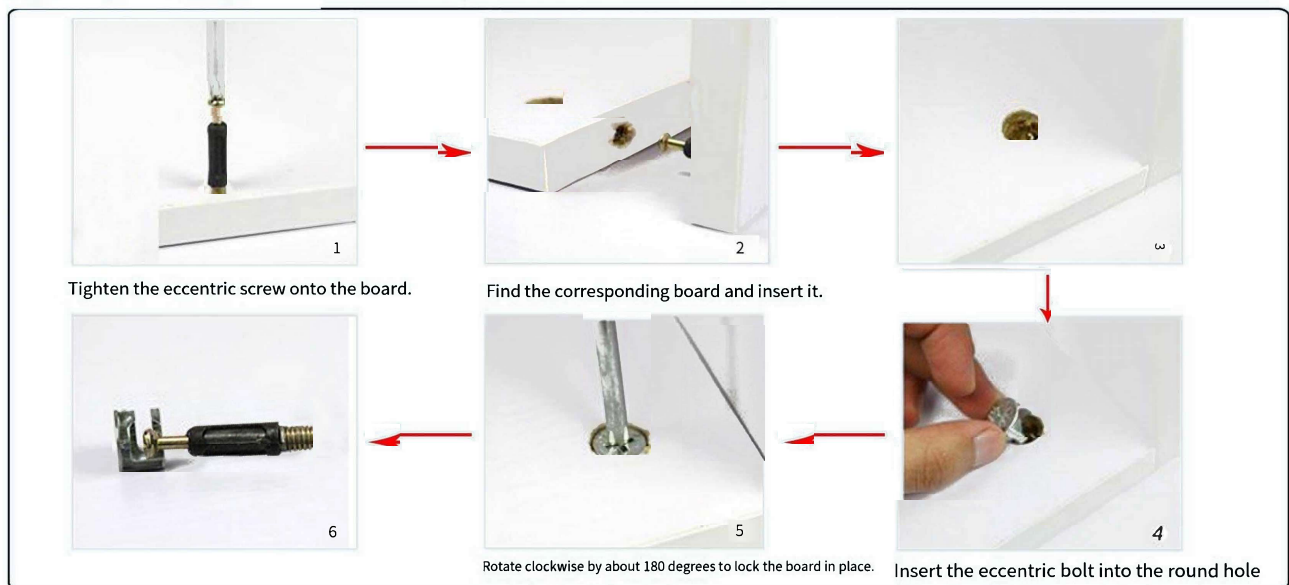




Board name and serial number:



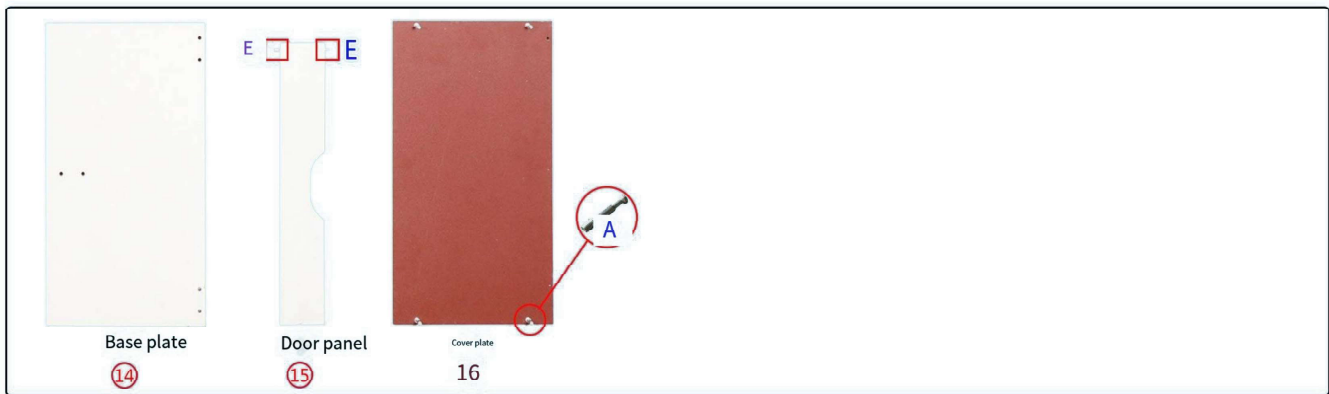


Step 1: Installation of the overall part


Note: Please read all the steps carefully to avoid rework!!!

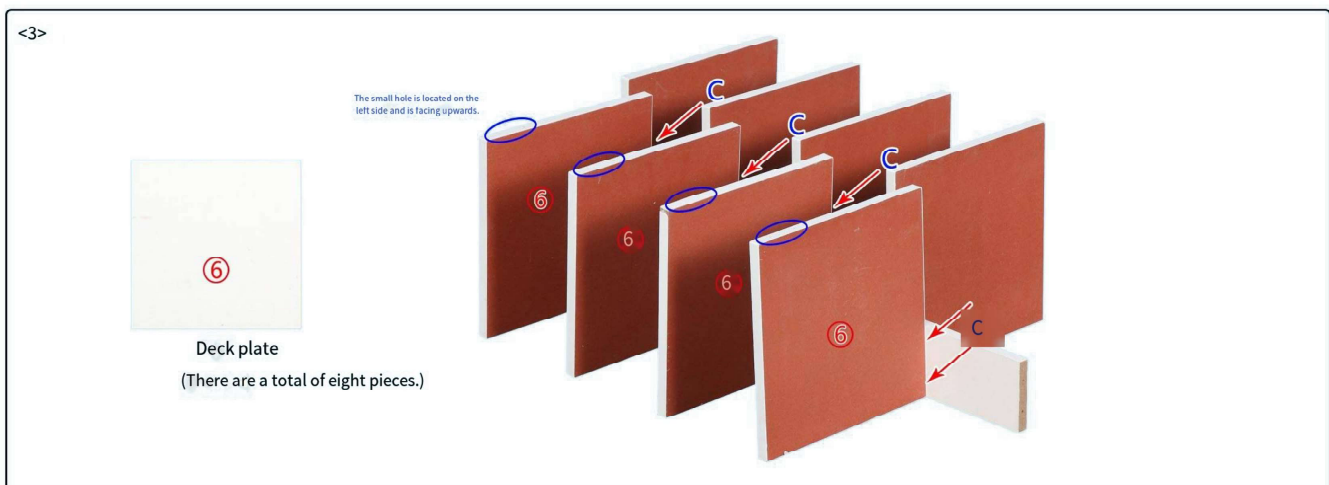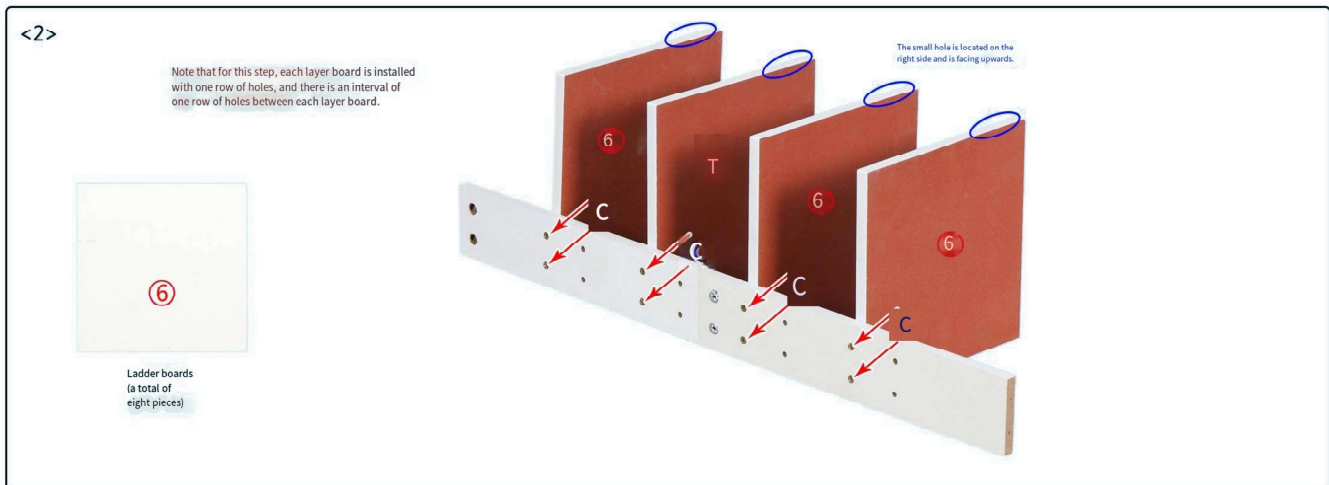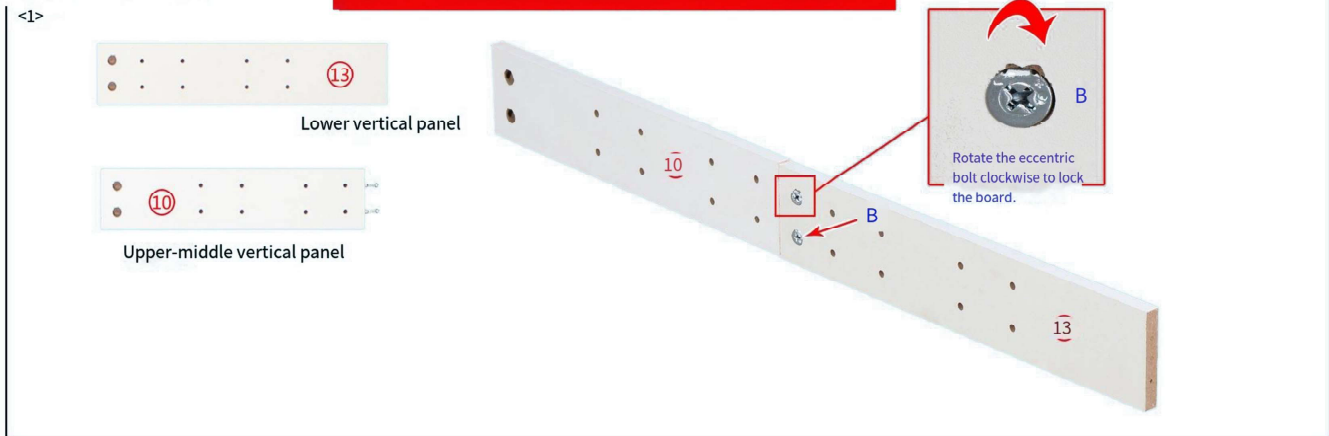


<4>

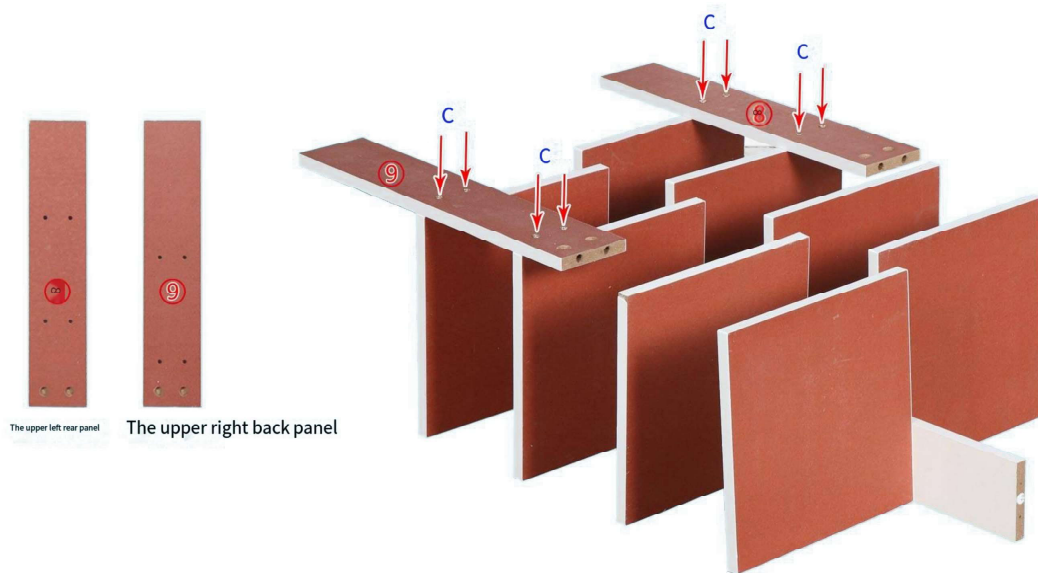


<5>

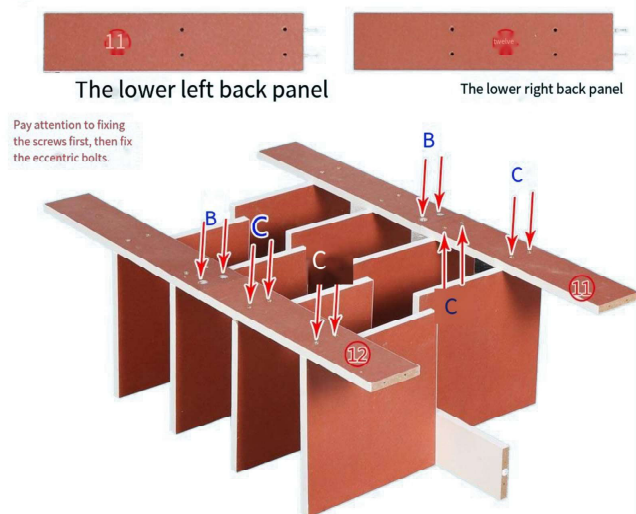


<6>

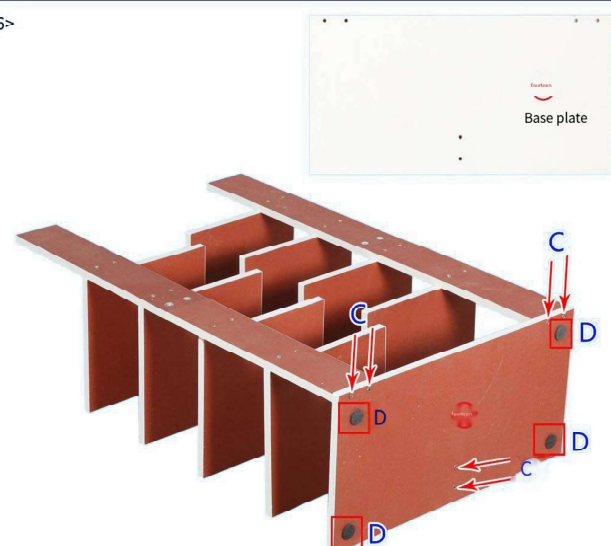


<7>

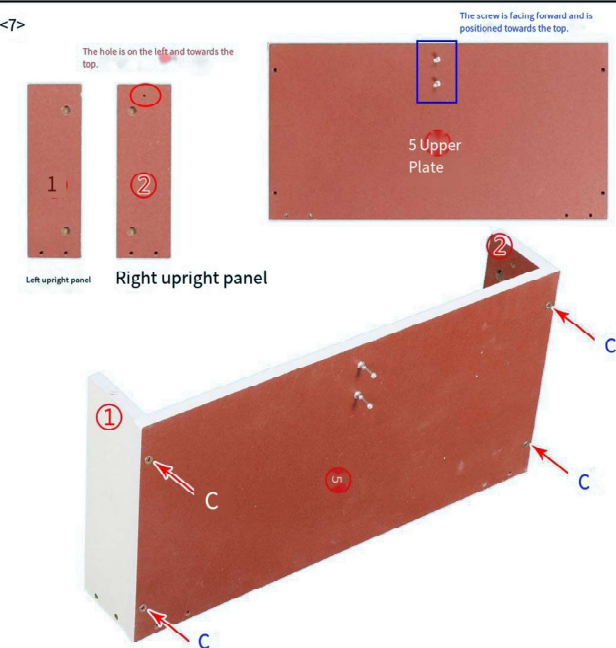


<8> Align the whole structure properly, with the front facing forward.

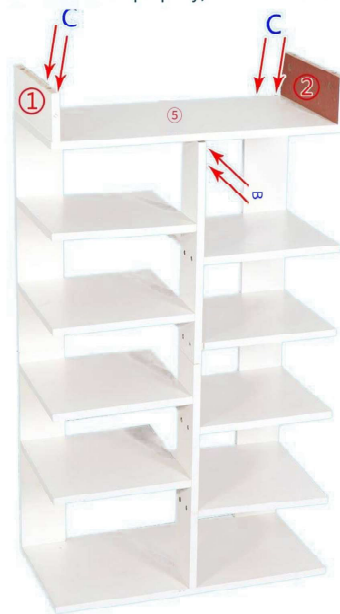


<9>

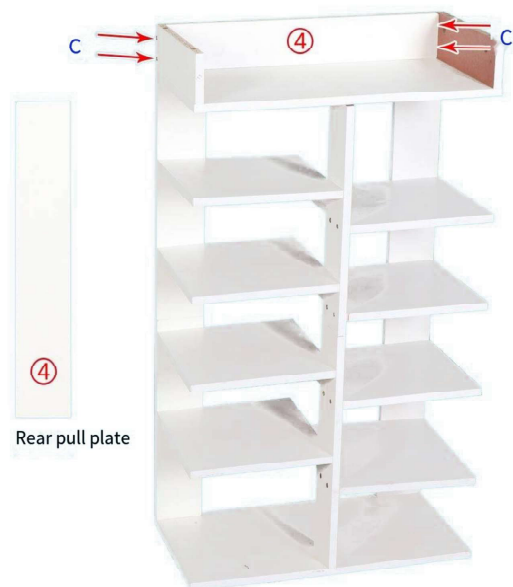

<10>

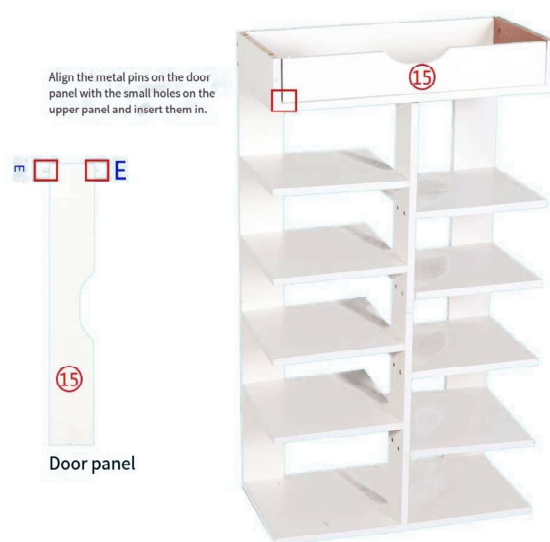

<11>

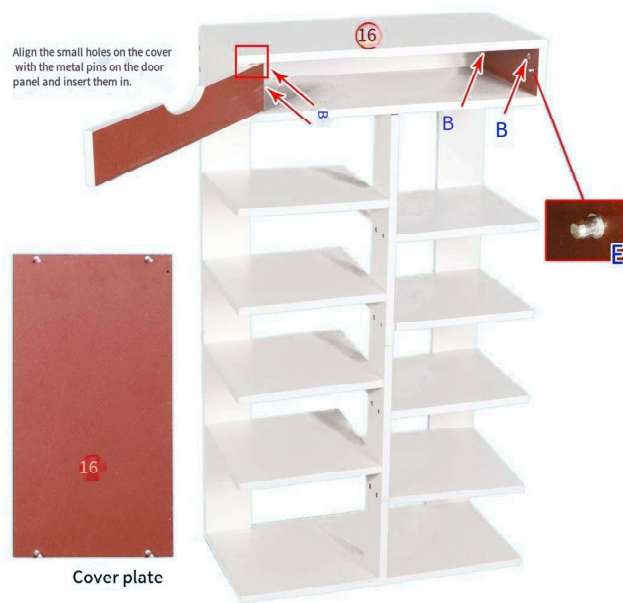

<12> Installation completed

