

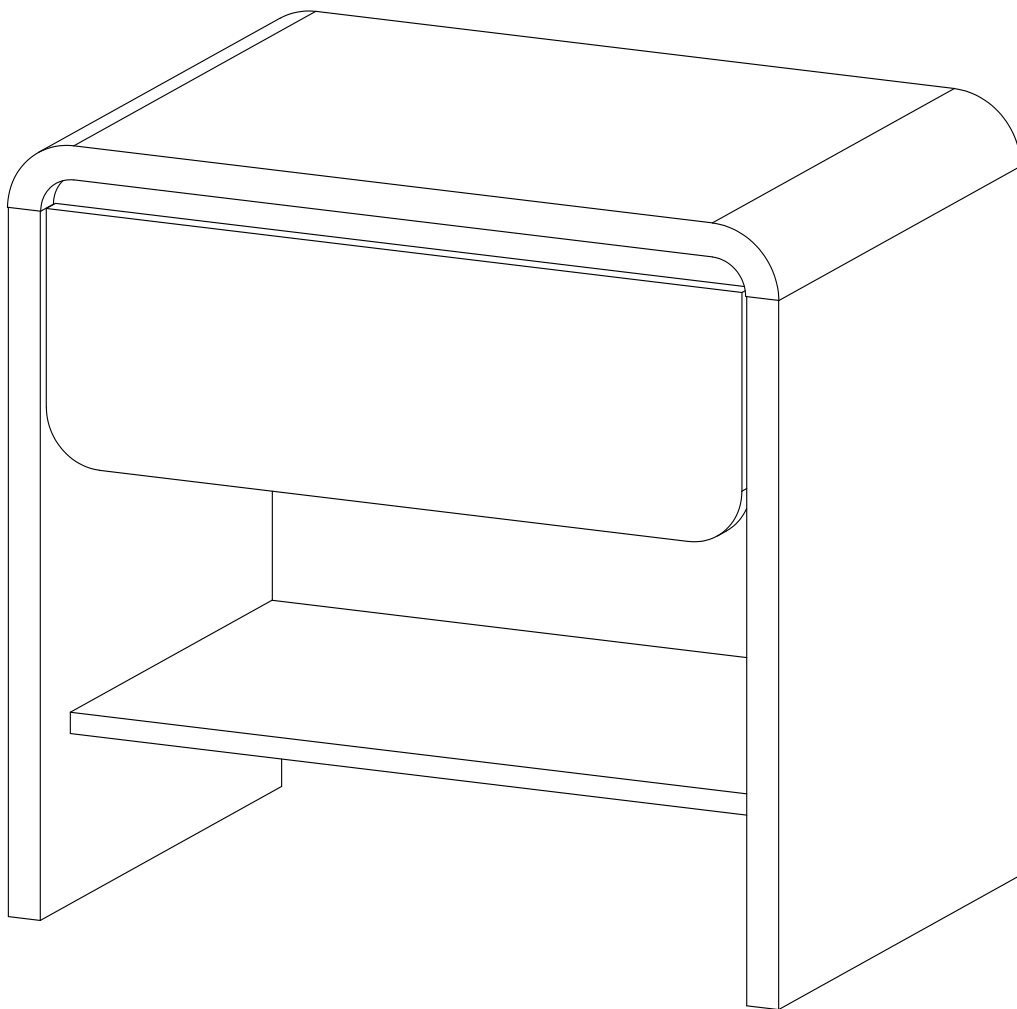
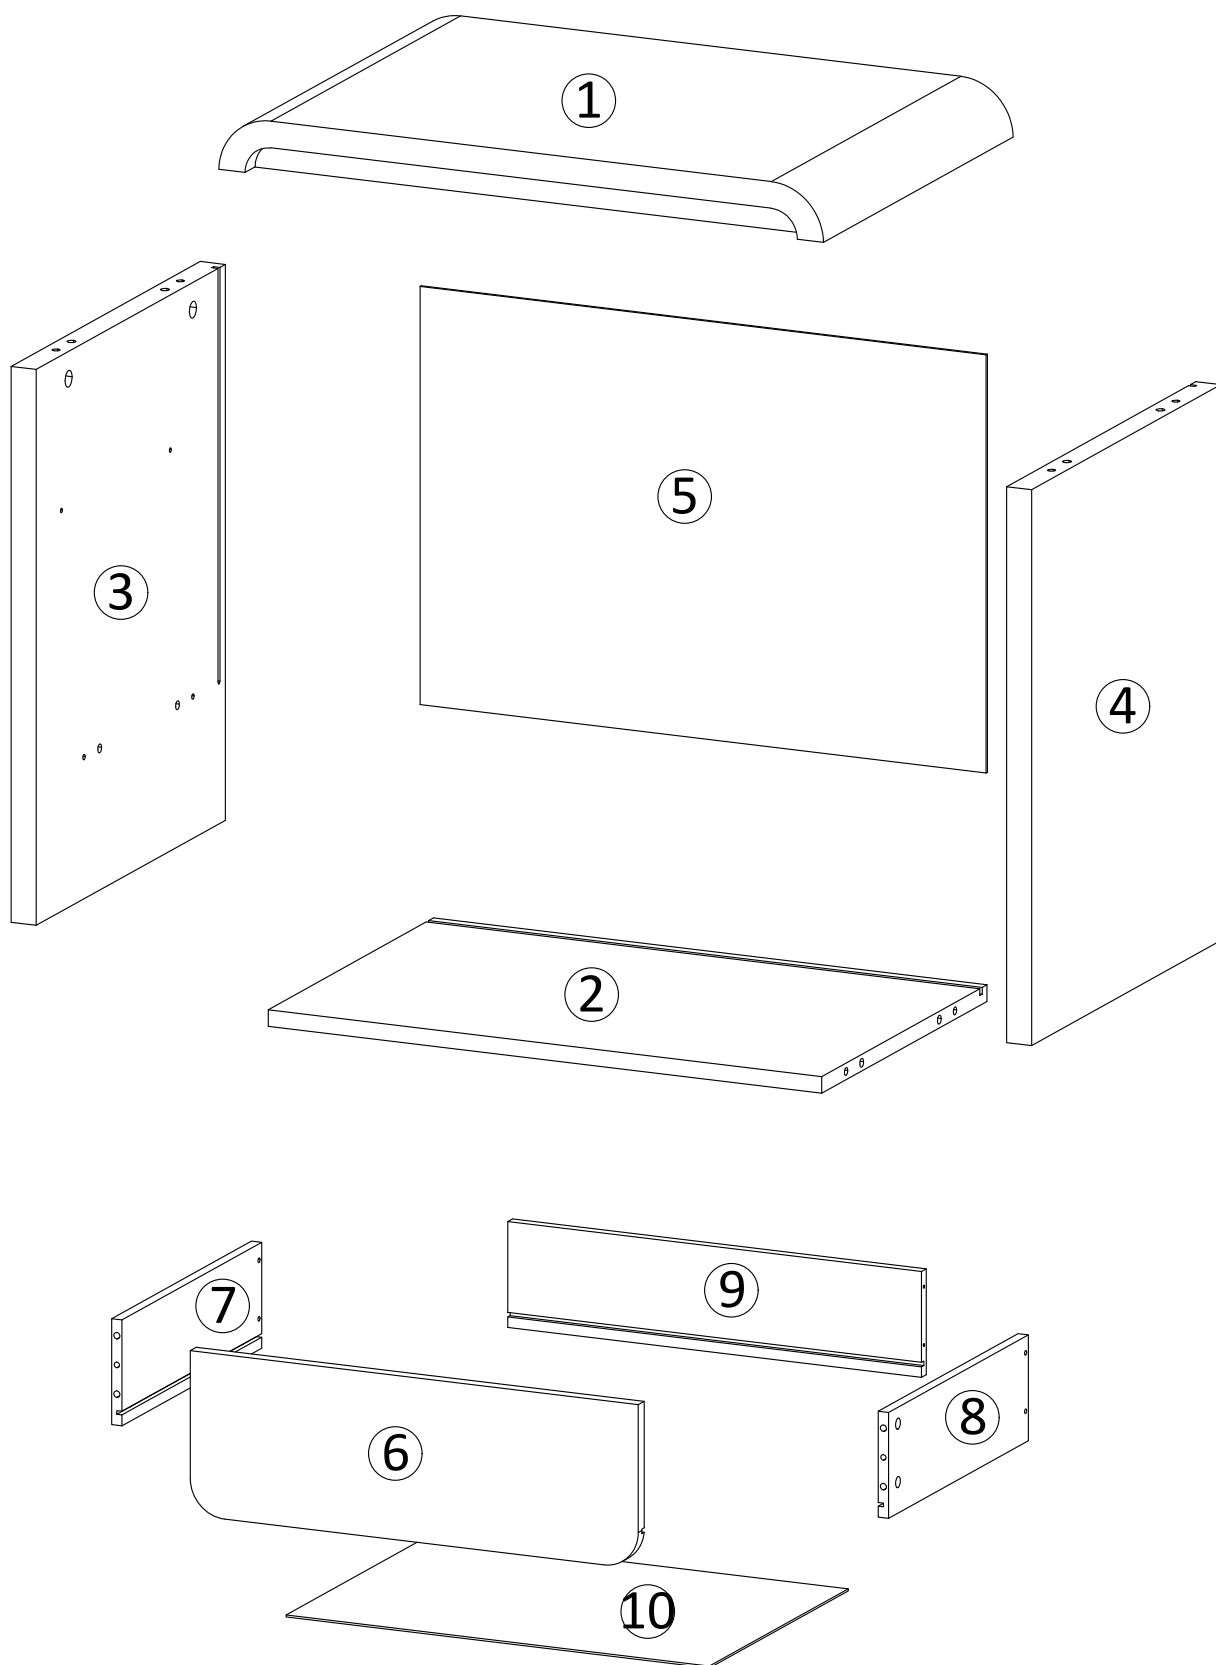




ASSEMBLY INSTRUCTION








Hardware




A  Ø 6 x 35 mm	B  Ø 15 mm	C  Ø 12 mm	D  Ø 8 x 30 mm
E  Ø 6 x 30 mm	F  M 3.5 x 15.5 mm	G 	H  M 8 x 39 mm
I  M 3.5 x 13 mm	J  M 6 x 10.5 mm	K 	RM35A  350 mm

 SET-UP TIME : 45 MINUTES	 NUMBER OF PERSONS : 01	 TOOLS : 
--	---	--


1

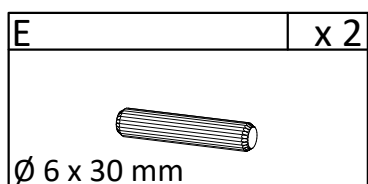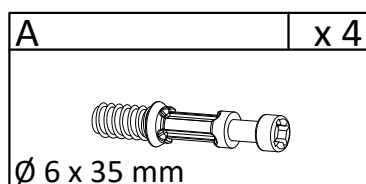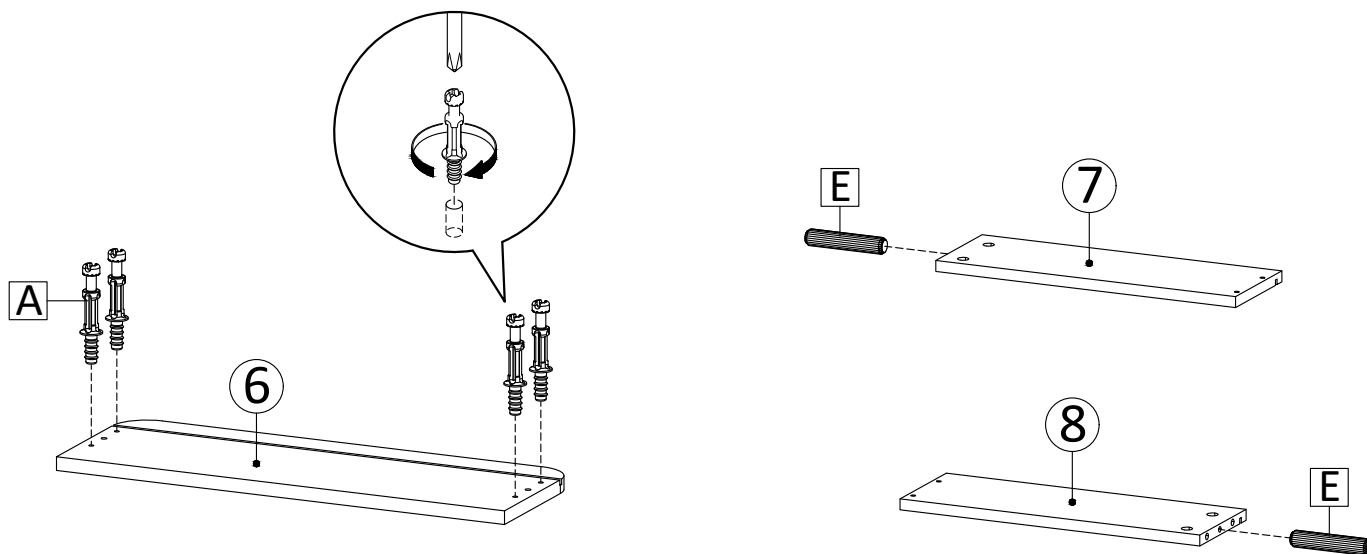


2

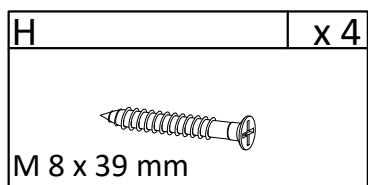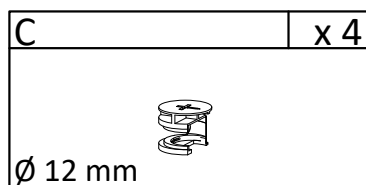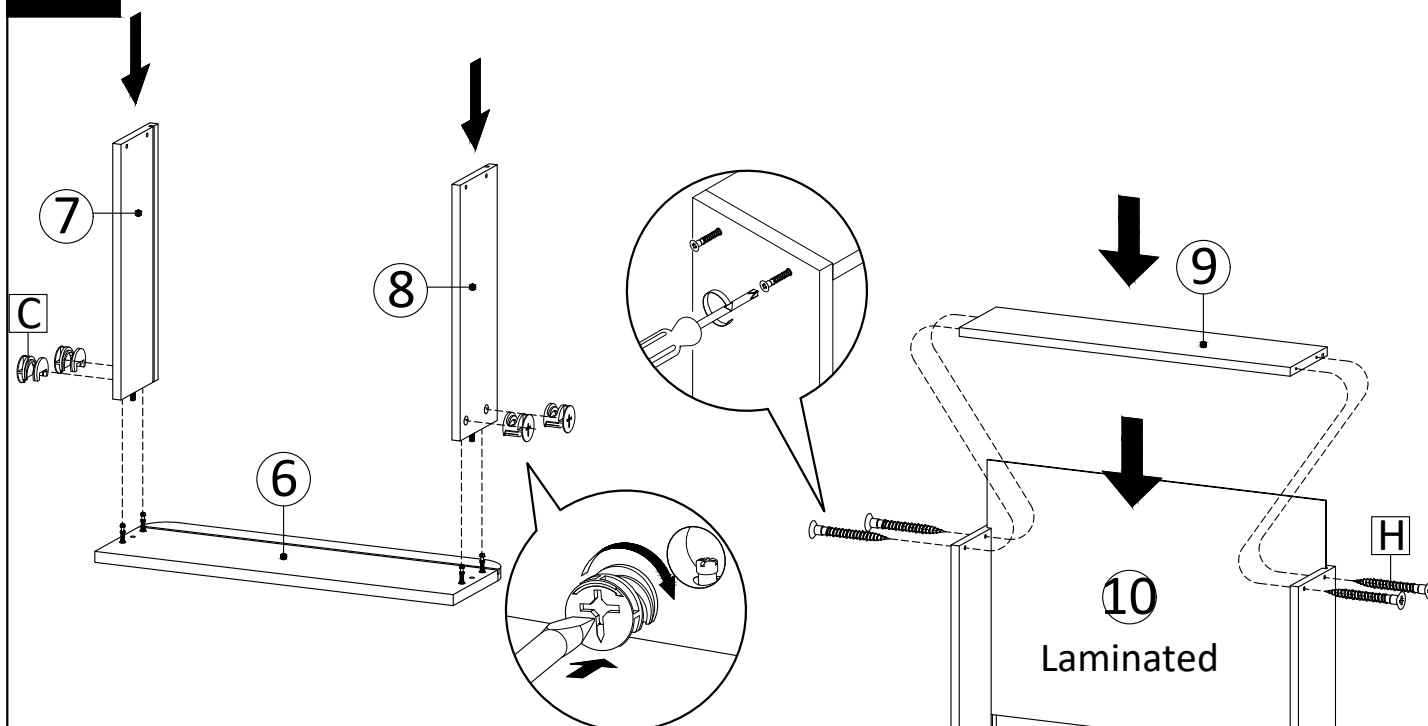


3

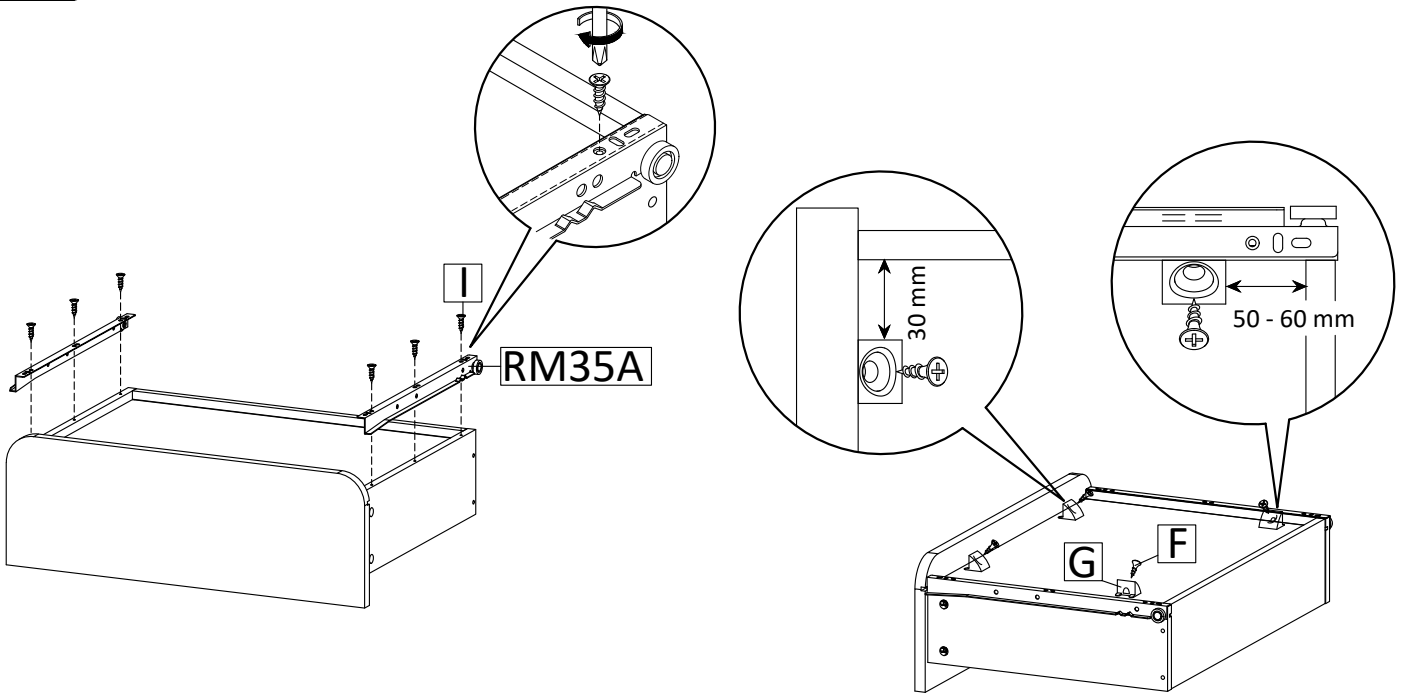



I	x 6	F	x 4	G	x 4	RM35A	x 1
 M 3.5 x 13 mm		 M 3.5 x 15.5 mm				 350 mm	

4


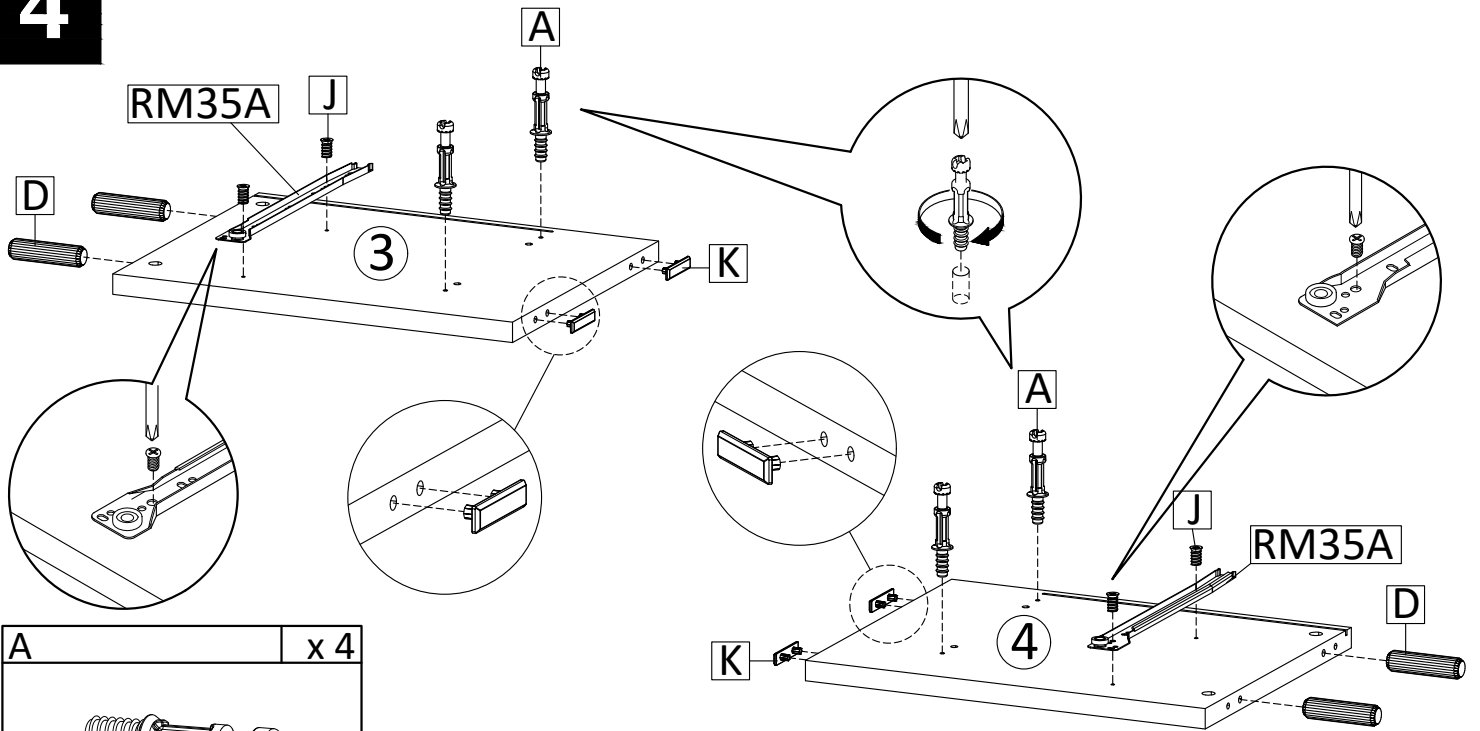


A	x 4				
---	-----	--	--	--	--



5

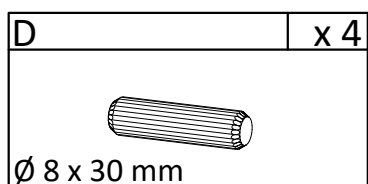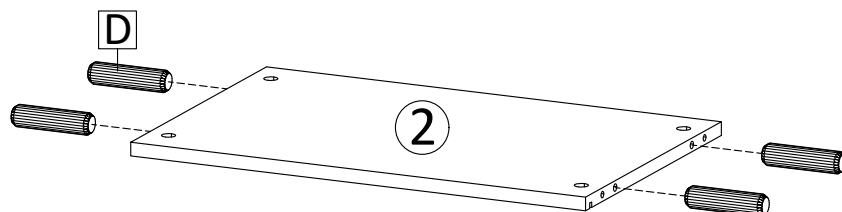



6

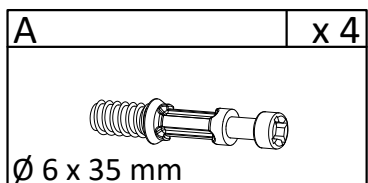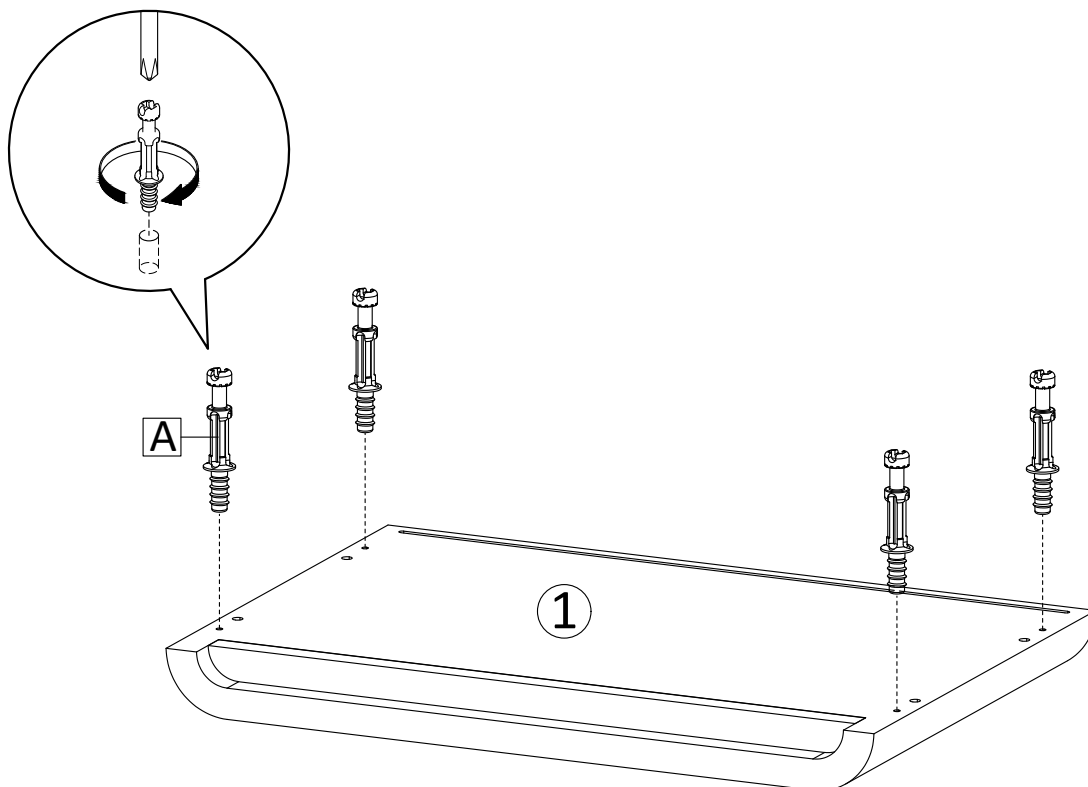



7

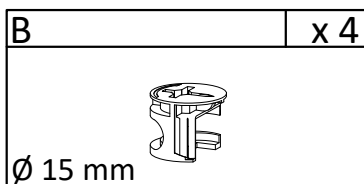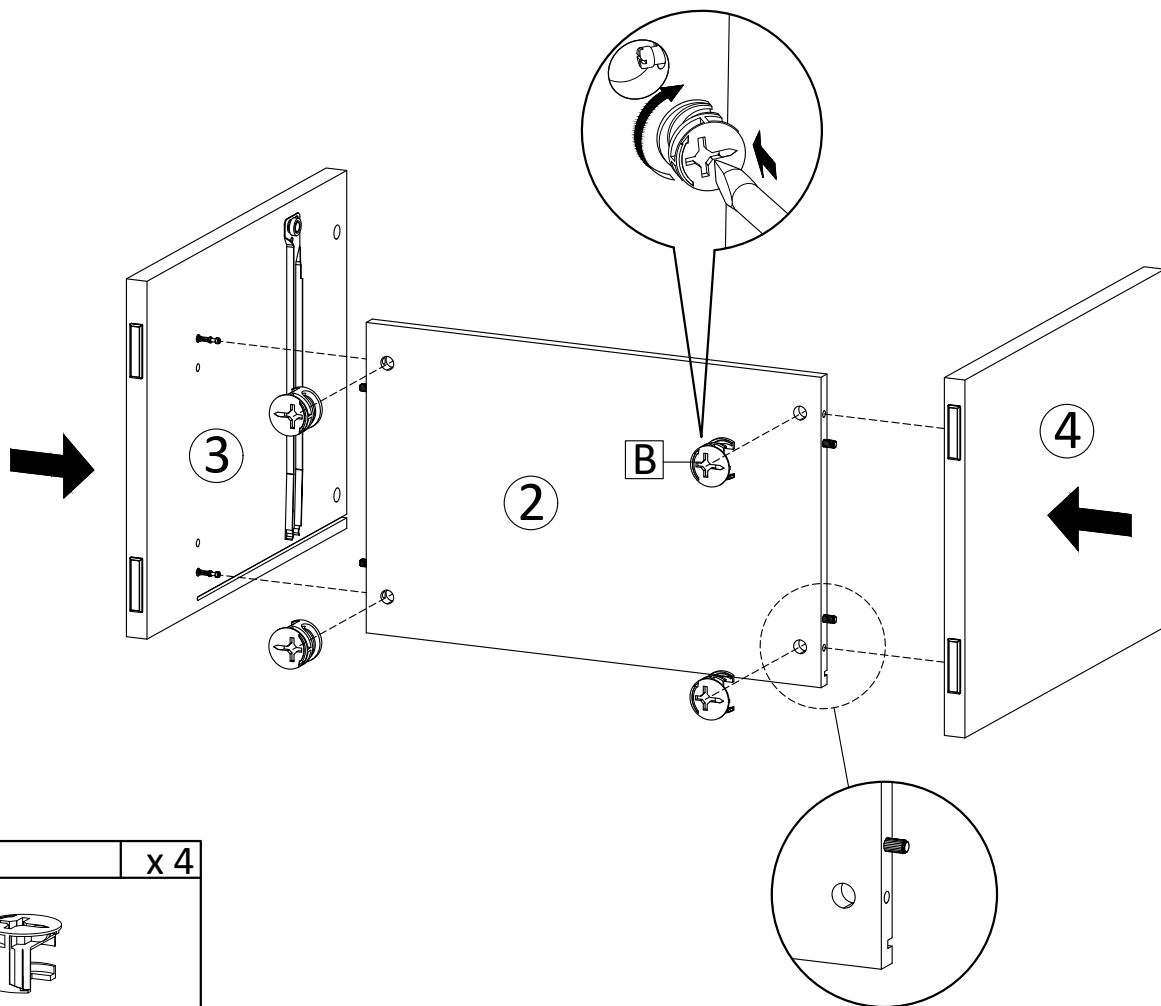



8

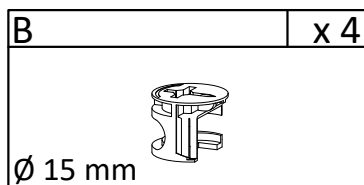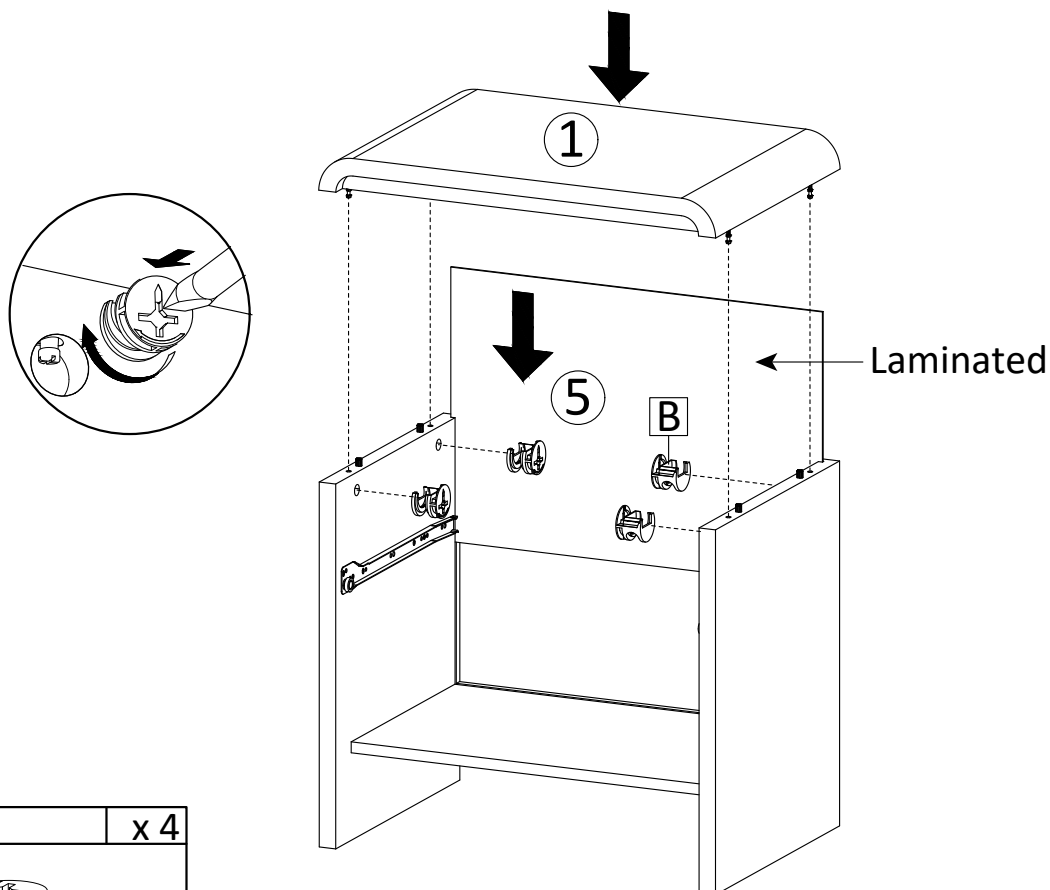

9

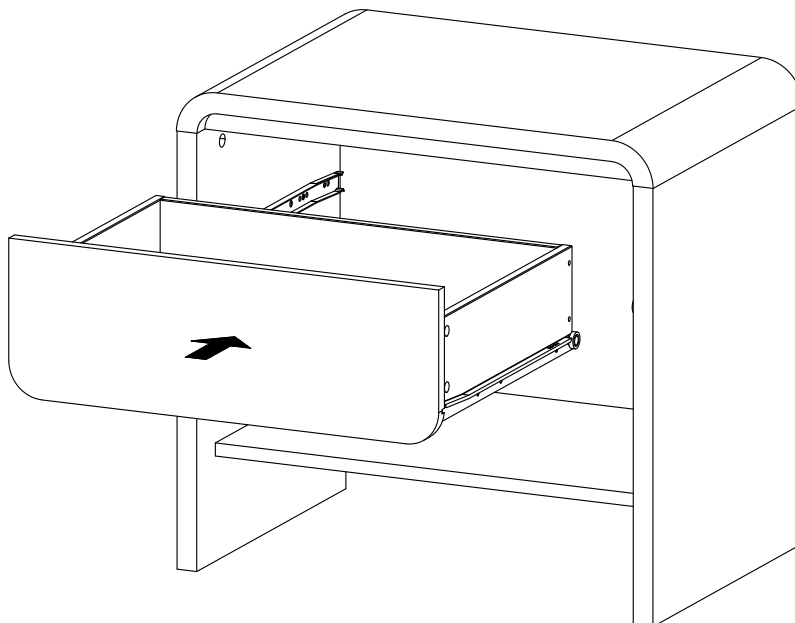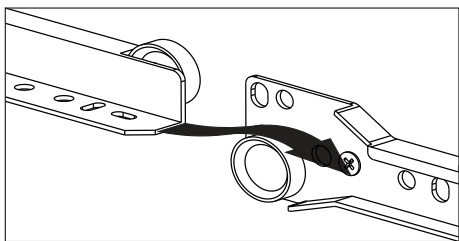

10

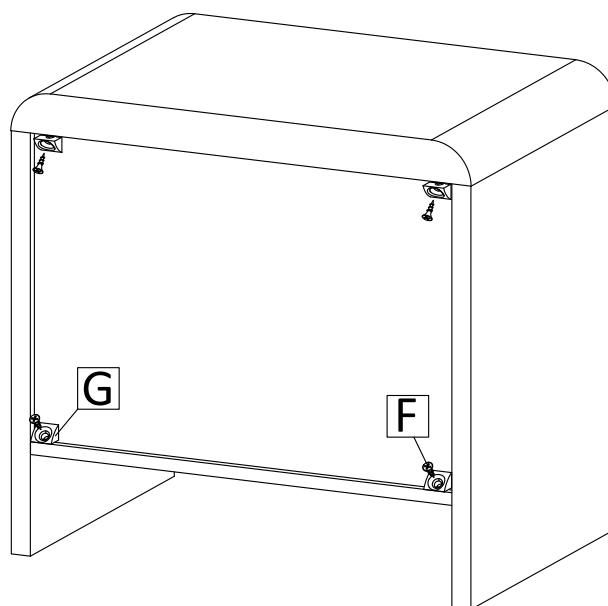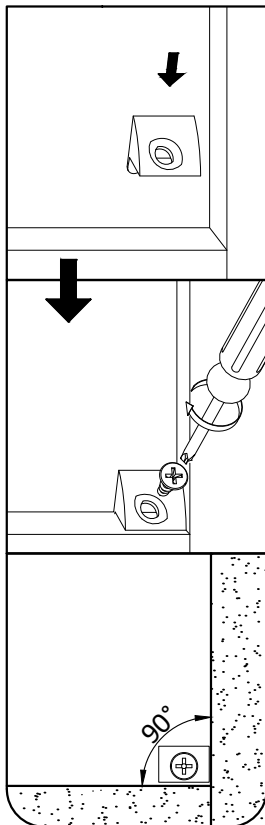

F	x 4	G	x 4
 M 3.5 x 15.5 mm			

