


Assembly Instructions

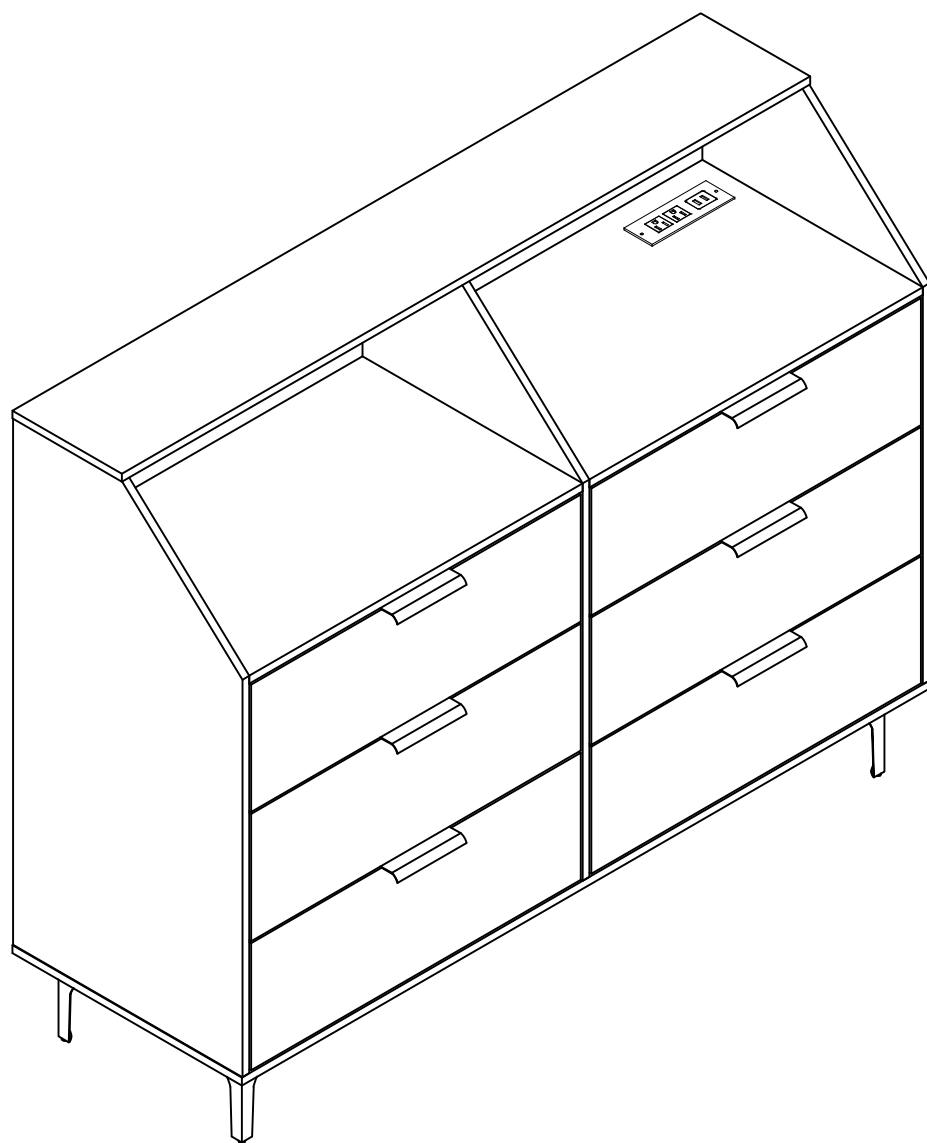

warning notice



- Open your item in the area you plan to keep it for less heavy lifting.



- Identify, sort, and count the parts before attempting assembly.



- Lay all parts on smooth flat surface.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- Do NOT use harsh chemicals or abrasive cleaners on this item.



- Never push, pull, or drag your furniture.

Teamwork



Failure to use 2 people for assembly could result in unit damage or personal injury.

Before You Start


Read through each step carefully and follow the proper order

Separate and count all your parts and hardware

Give yourself enough room for the assembly process




Have the following tools: Phillips Head Screwdriver and Hammer

Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

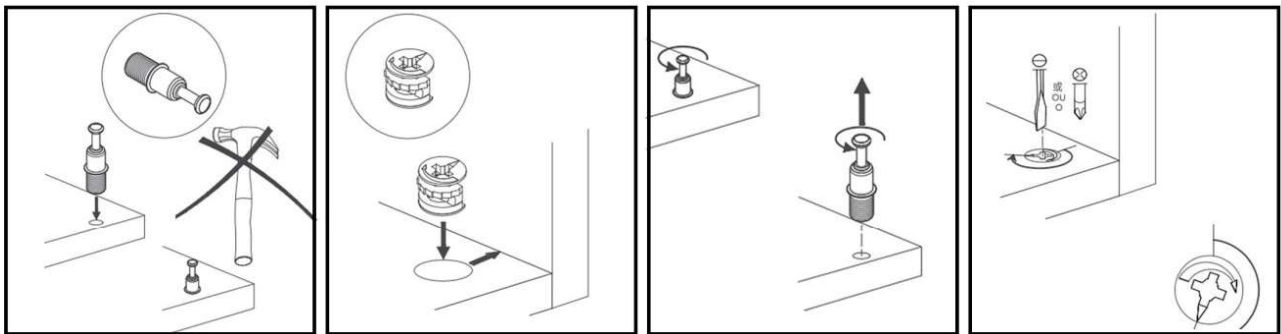


If the door panel is not sitting at a right position or angle, follow the steps below to improve.


- (1) Loosen the hinge, adjust the door panel position (up and down) then fasten the screws to secure the hinge (Step 1), or,
- (2) Loosen the middle screw of the hinge and adjust the door panel in and out, to desired position, then fasten the screws to secure the hinge (Step 2), or
- (3) Adjust the nut at the centre of the hinge to fine tune the tilting angle of the door panel (left or right) to make the door panel to be vertical.

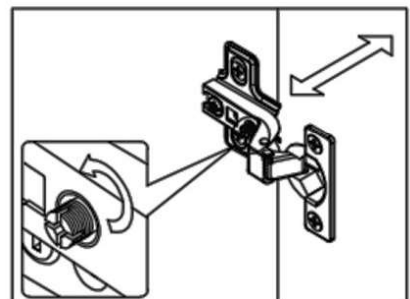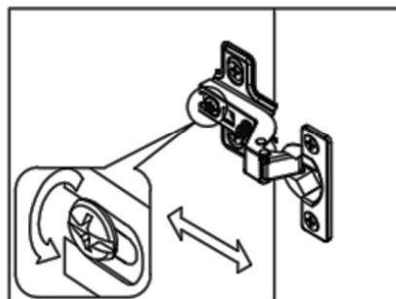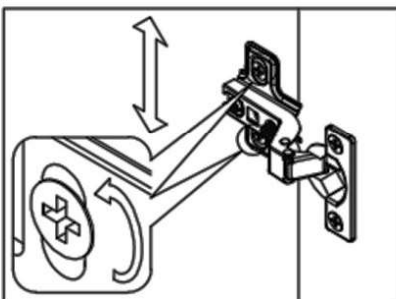

















Components

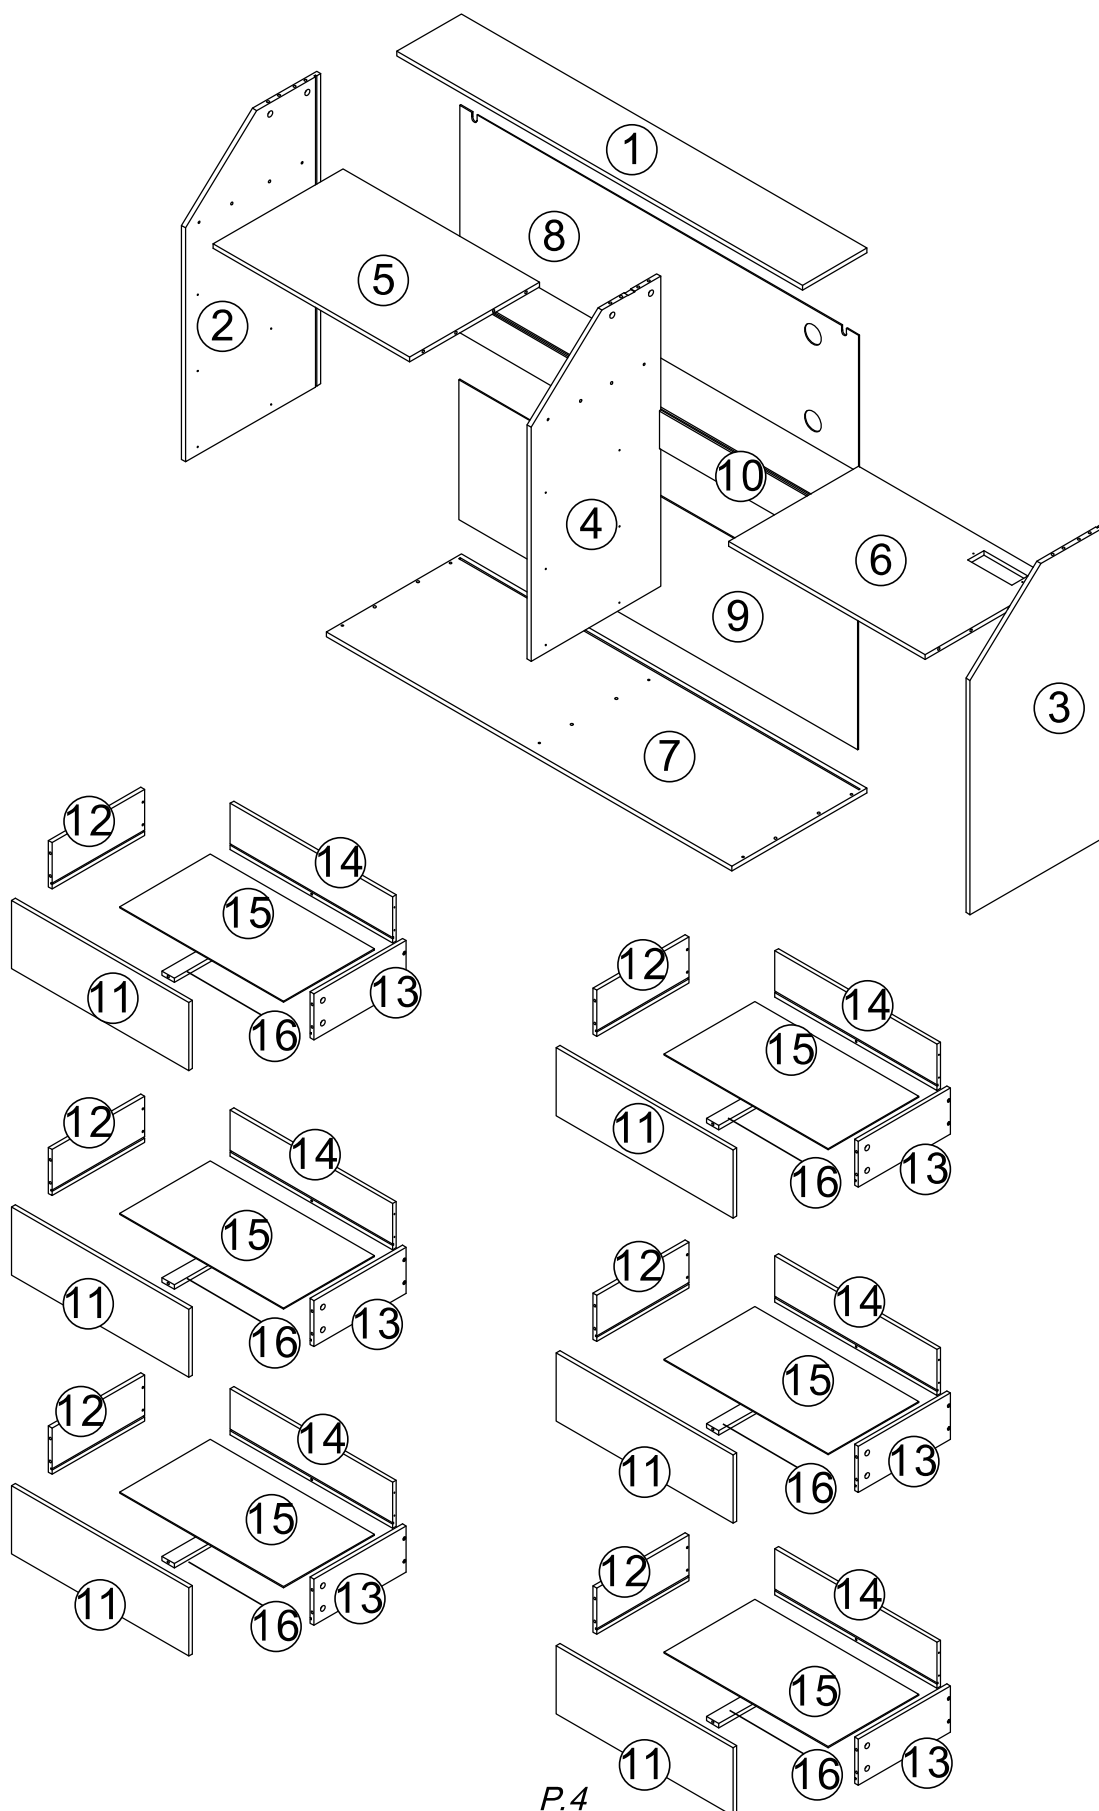

Components

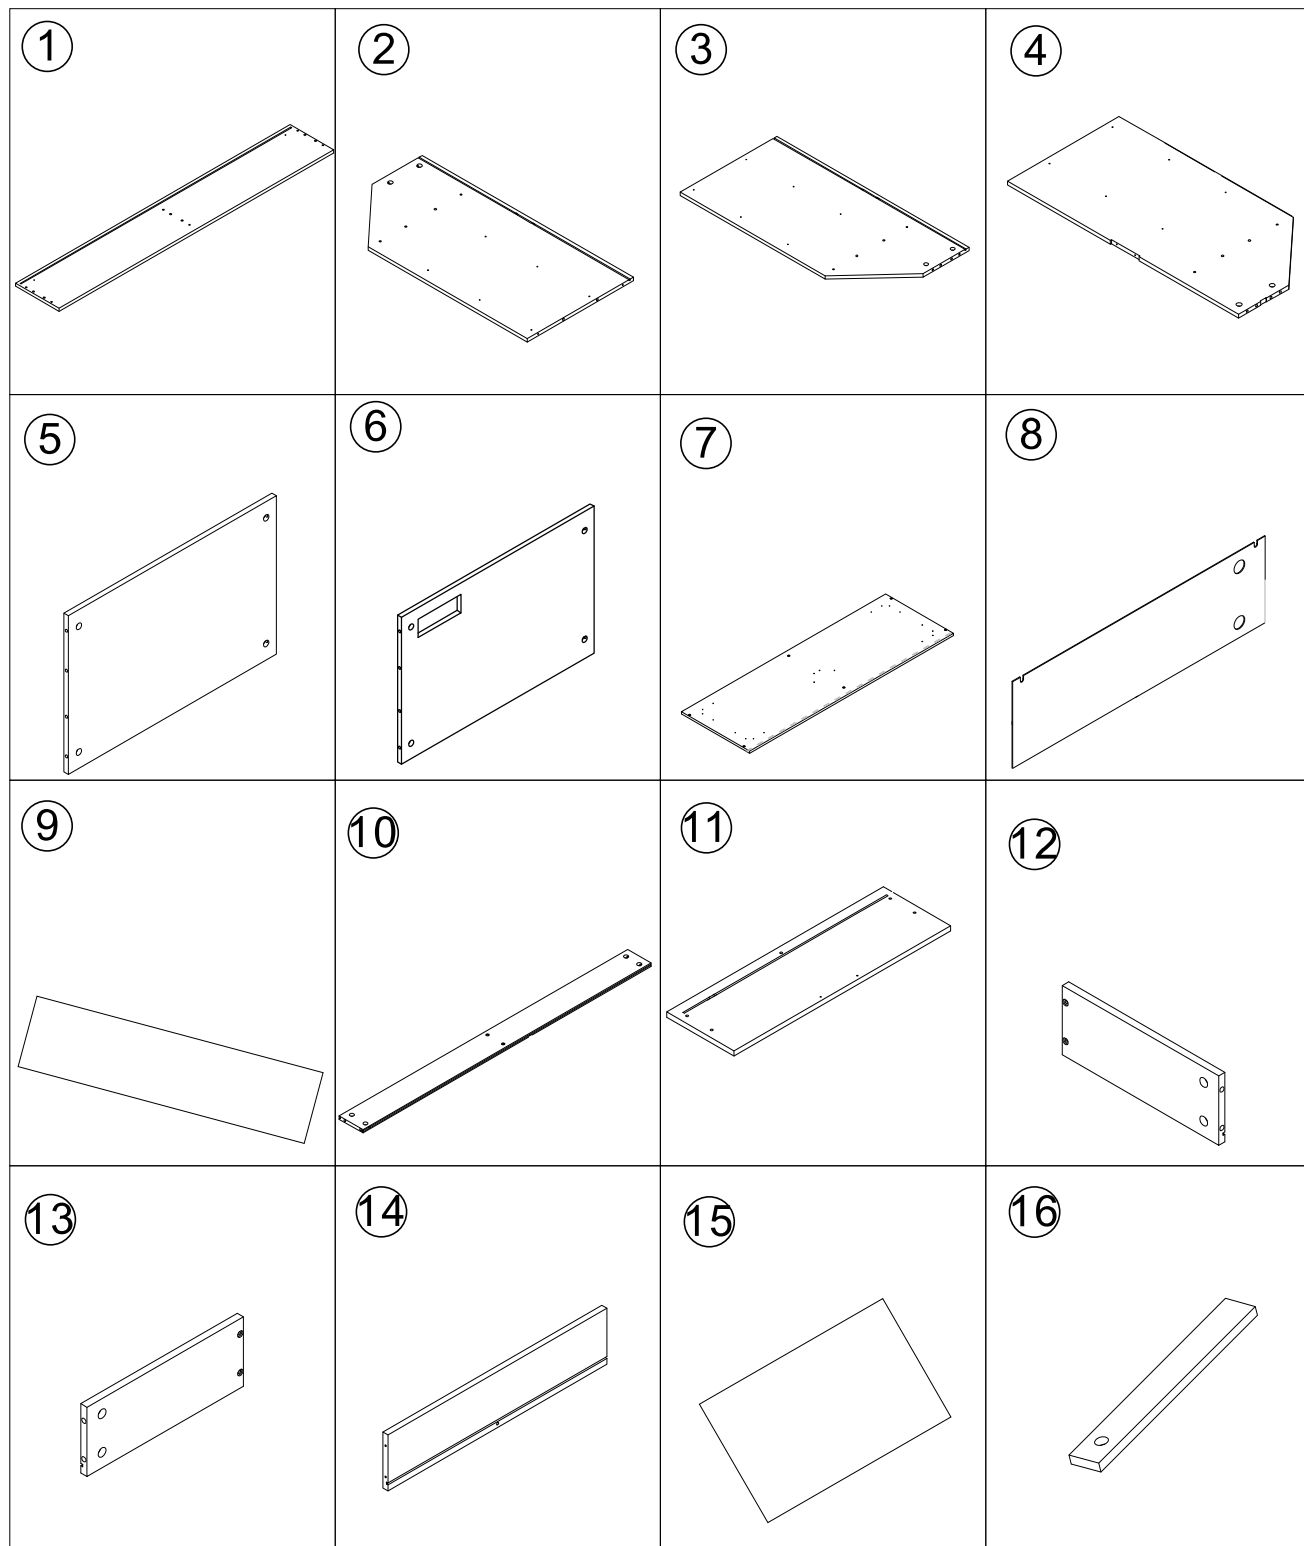


Components

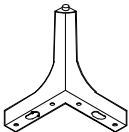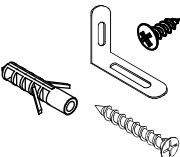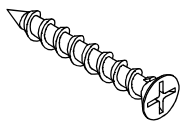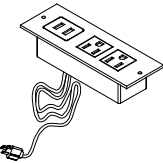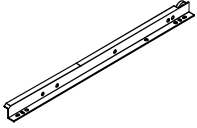 A x 48 + 2	 B x 48 + 2	 C x 20 + 2	 M3. 5x12mm D x 48 + 2
 M4x30mm E x 30 + 2	 F x 5	 M3x12mm G x 14 + 1	 H x 8
 I x 6	 J x 2	 M4x12mm K x 20 + 2	 M4x35mm L x 8 + 1
 M x 1	 N x 1	 P x 4	 CR x 6
 CL x 6	 DL x 6	 DR x 6	

Assembly Instructions


STEP 1

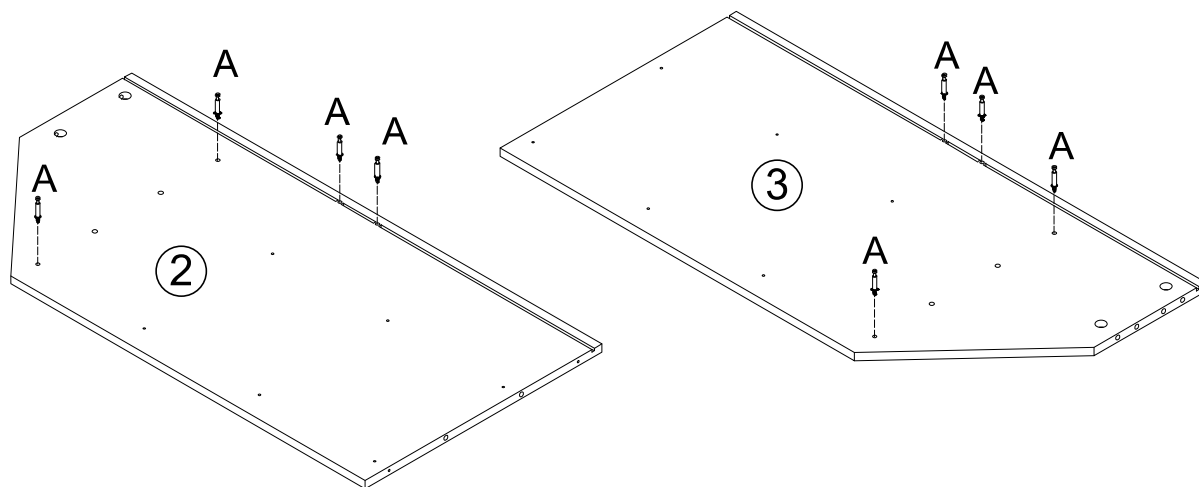



A x 8

STEP 2

Please refer to this picture for the screw-in position

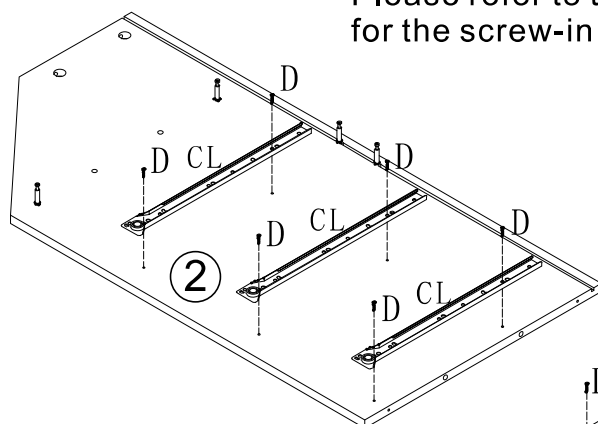

REMARK:

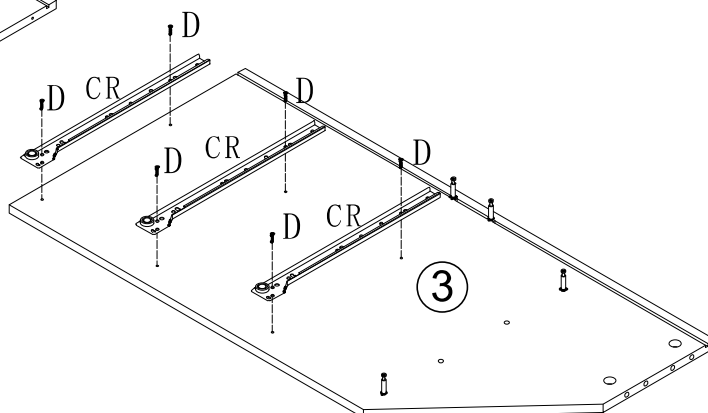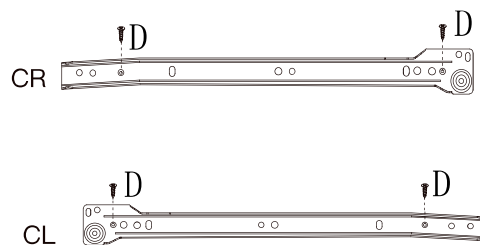

CR x 3



CL x 3



M3. 5x12mm



D x 12


Assembly Instructions

STEP 3


Please refer to this picture for the screw-in position

REMARK:

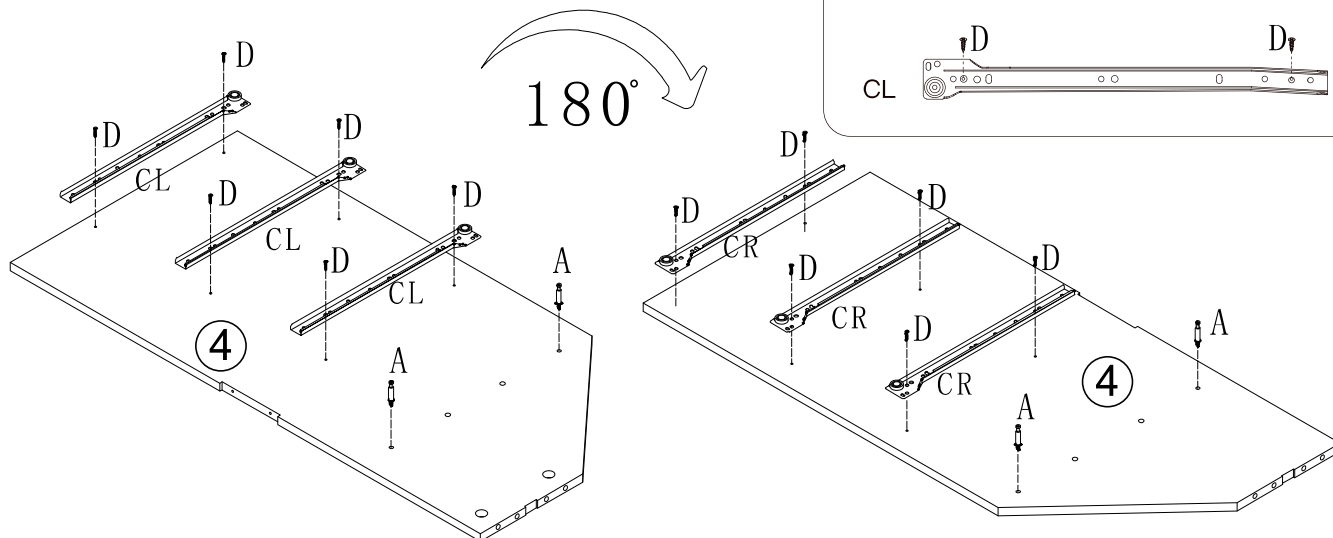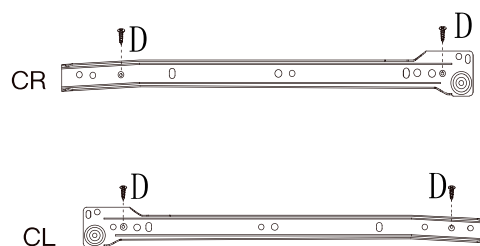

			
A x 4	CR x 3	CL x 3	D x 12


STEP 4

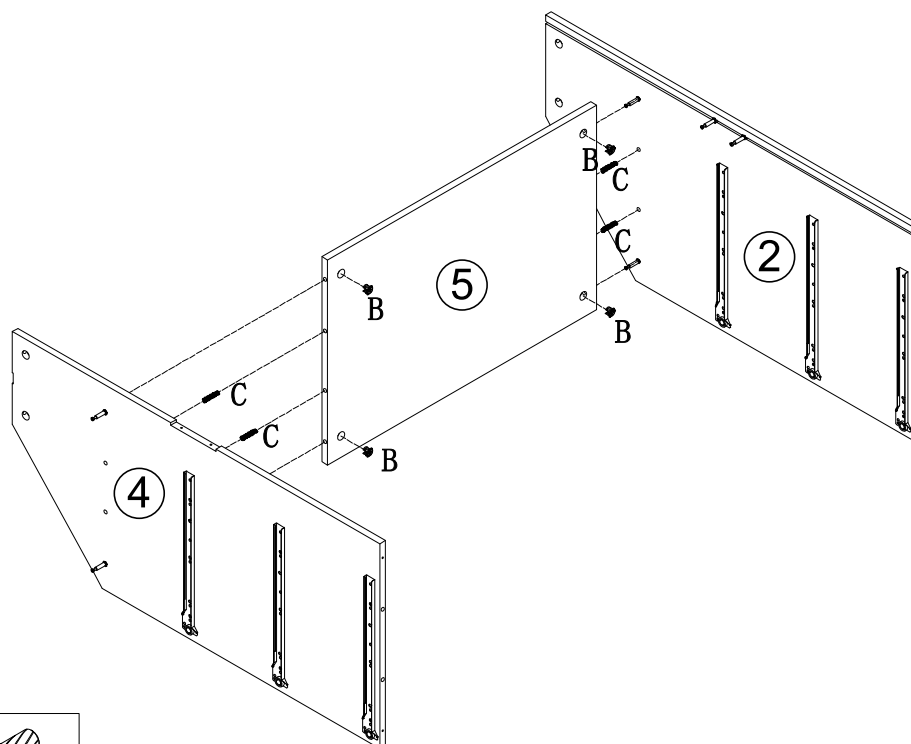

	
B x 4	C x 4

Assembly Instructions

STEP 5

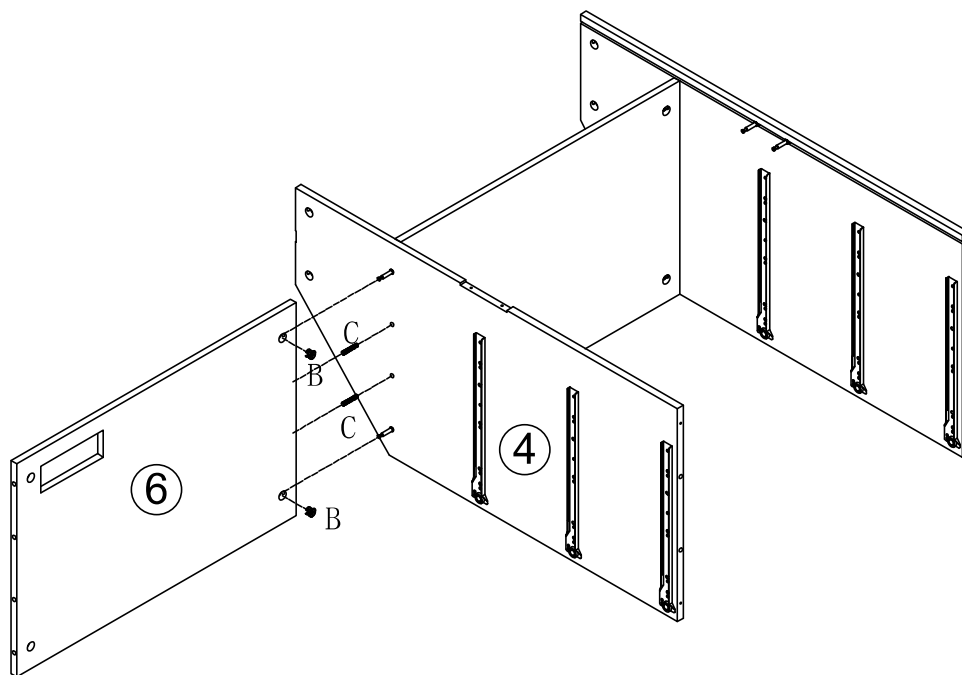


Bx2



Cx2


STEP 6

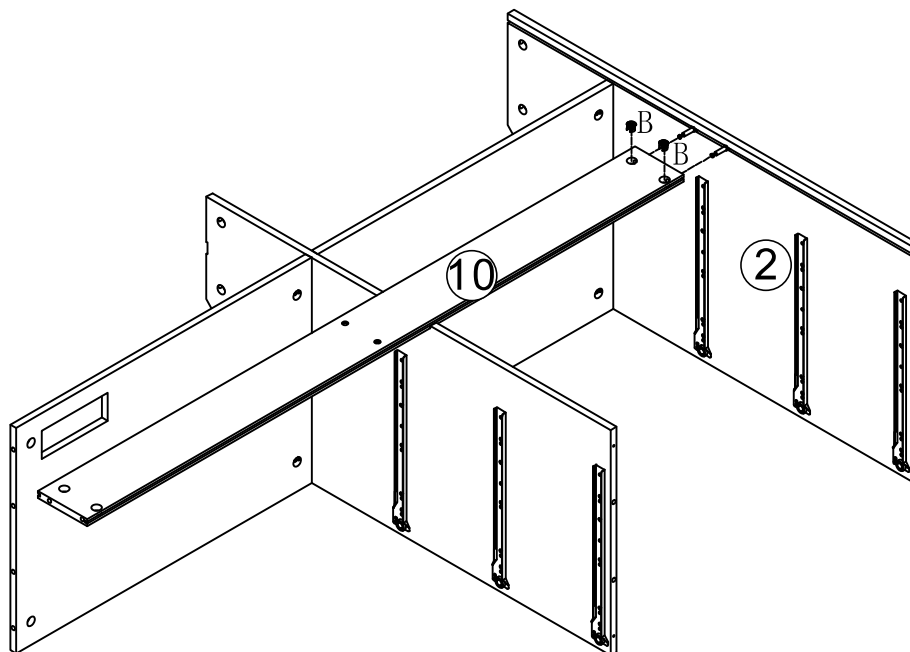

Bx2

Assembly Instructions


STEP 7

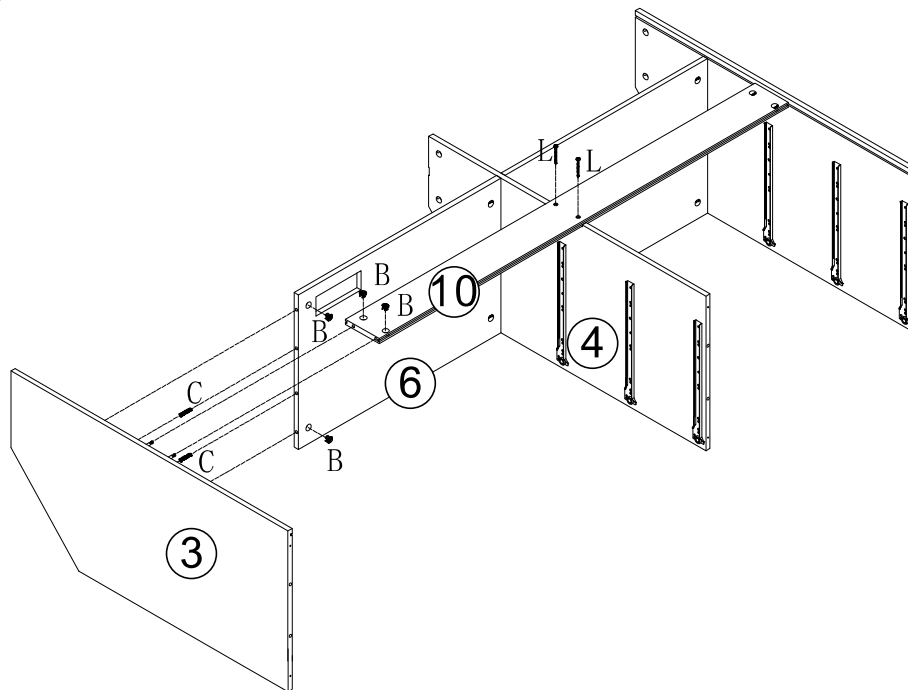

Bx4




Cx2



M4x35mm


Lx2

STEP 8

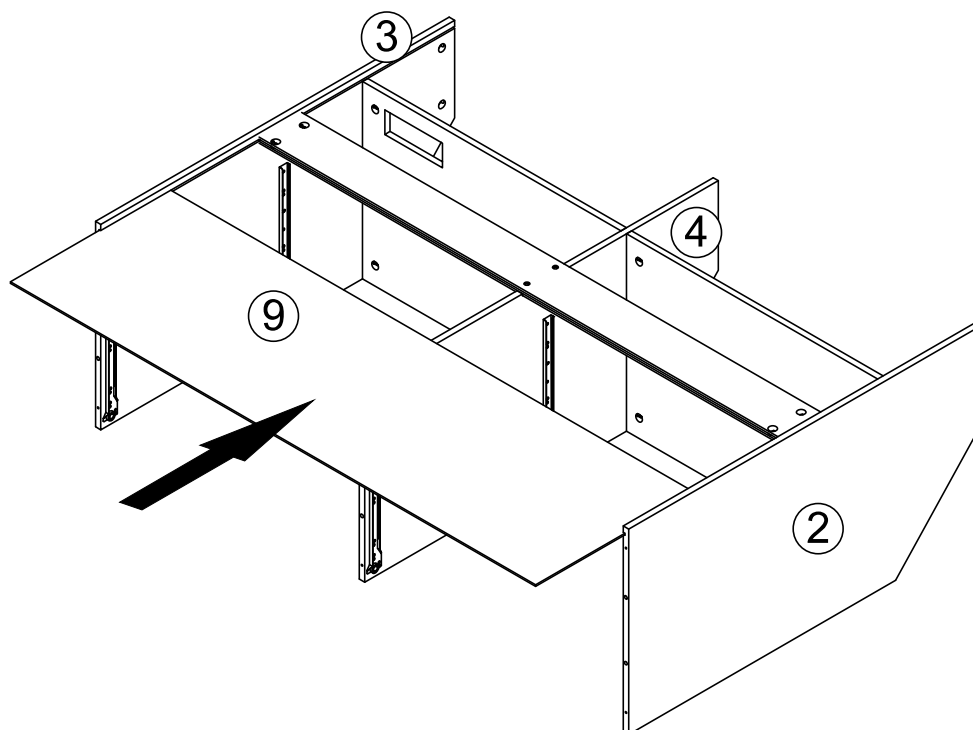


Assembly Instructions

STEP 9

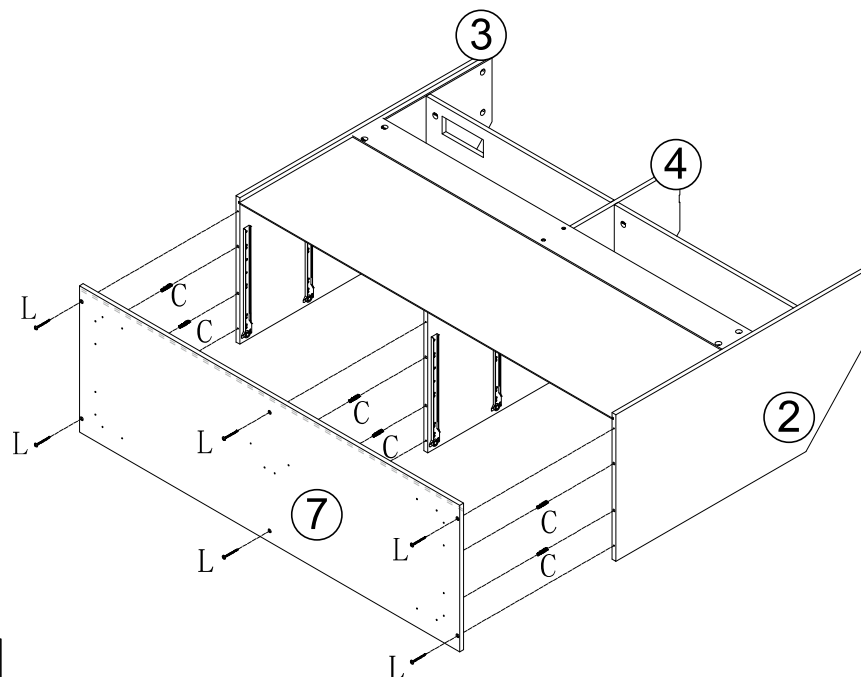


Cx6



M4x35mm

Lx6

STEP 10

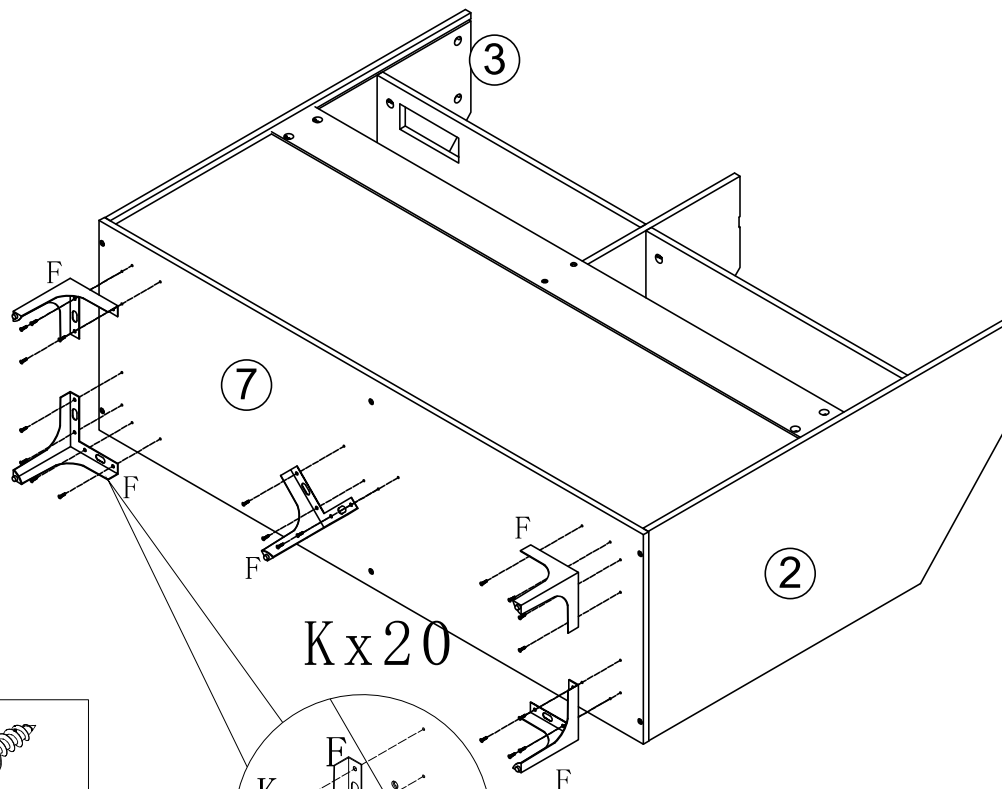

Fx5




Kx20


Kx20

Assembly Instructions

STEP 11

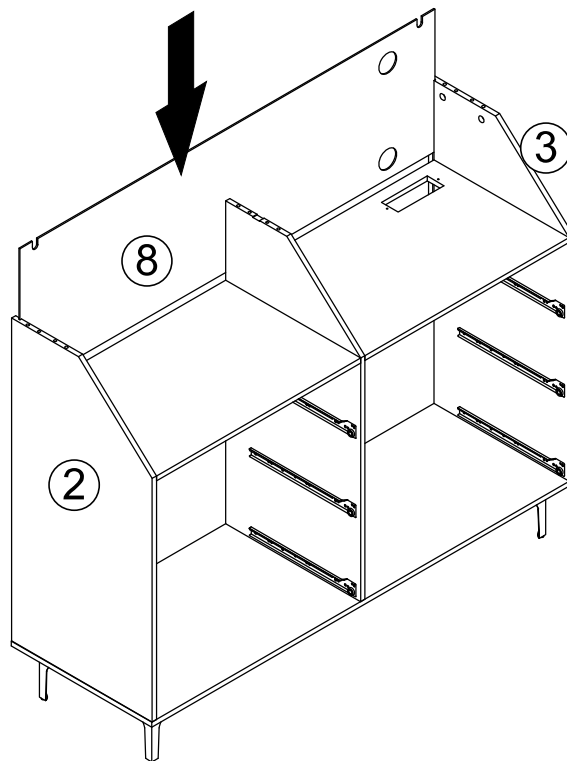


STEP 12

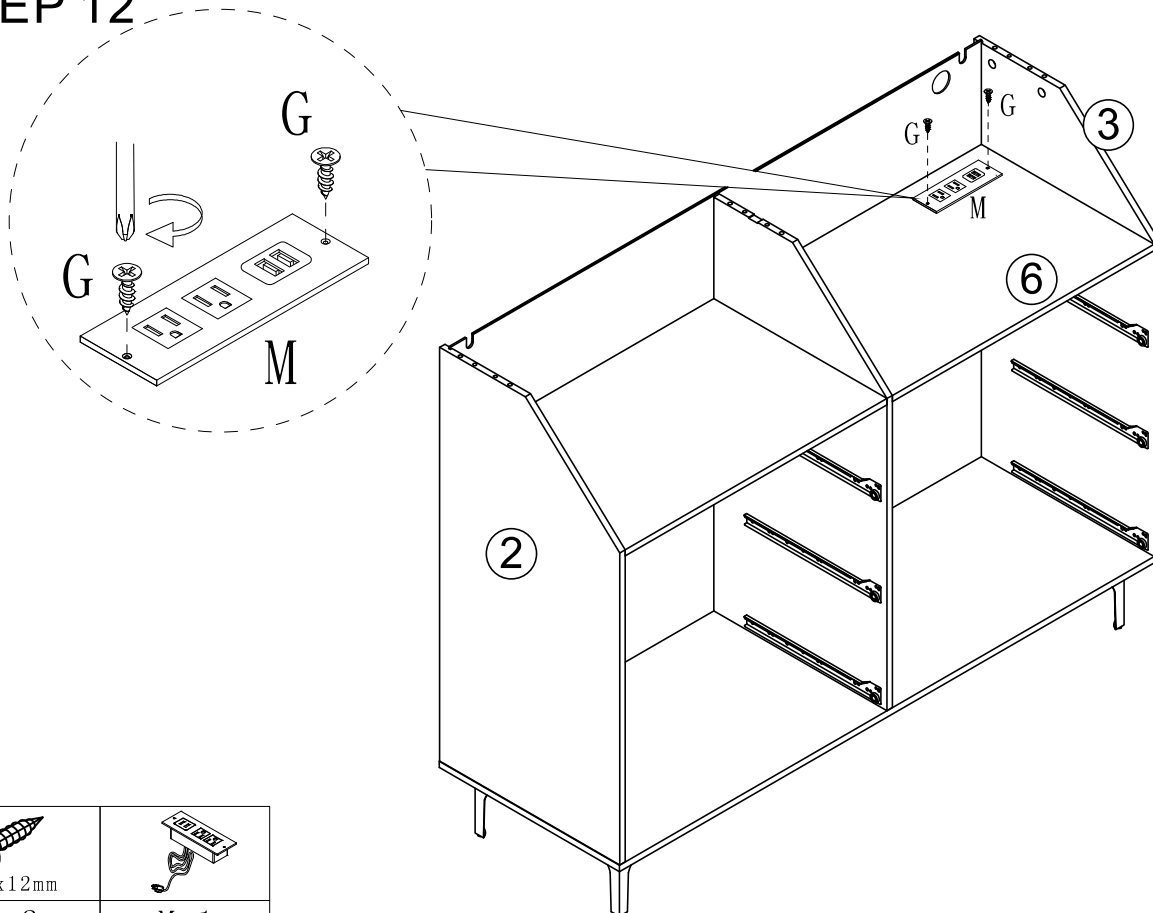

 M3x12mm	 M x 1
G x 2	M x 1

Assembly Instructions

STEP 13

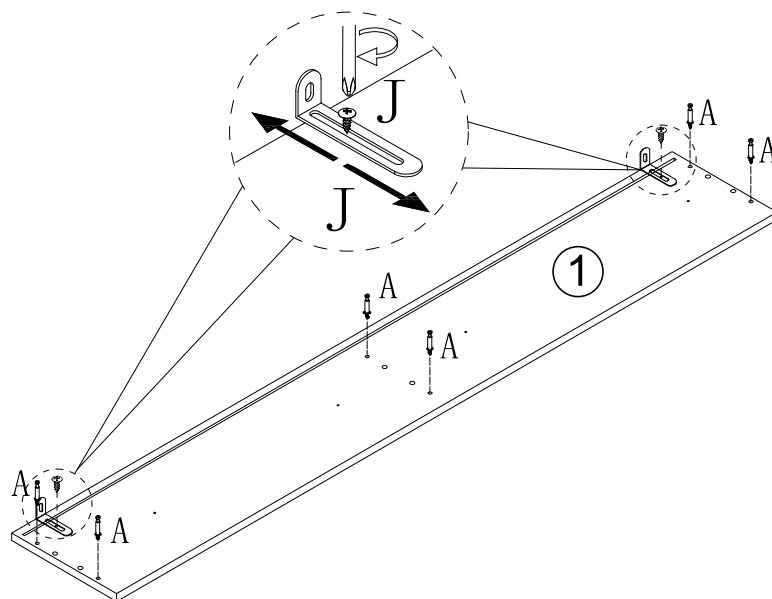


A x 6




J x 2

STEP 14

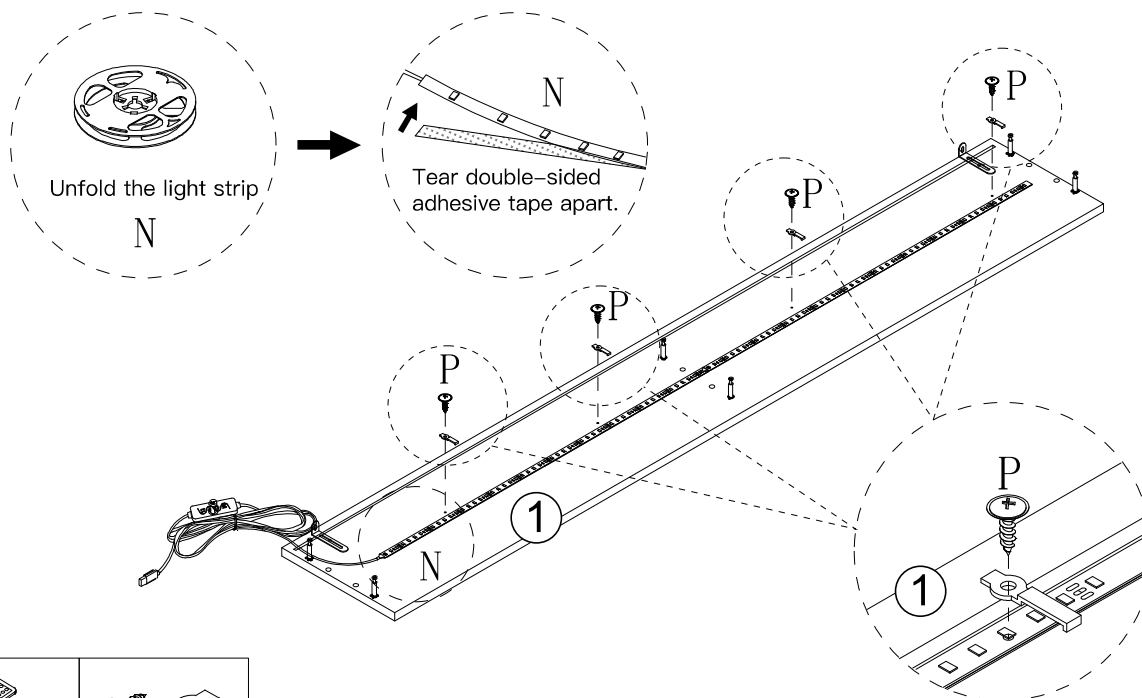


N x 1



P x 4

Assembly Instructions

STEP 15

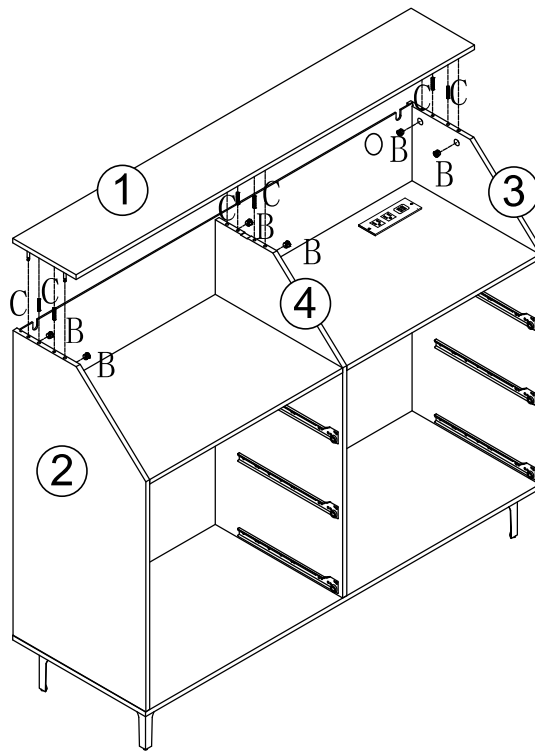


Bx6



Cx6


STEP 16

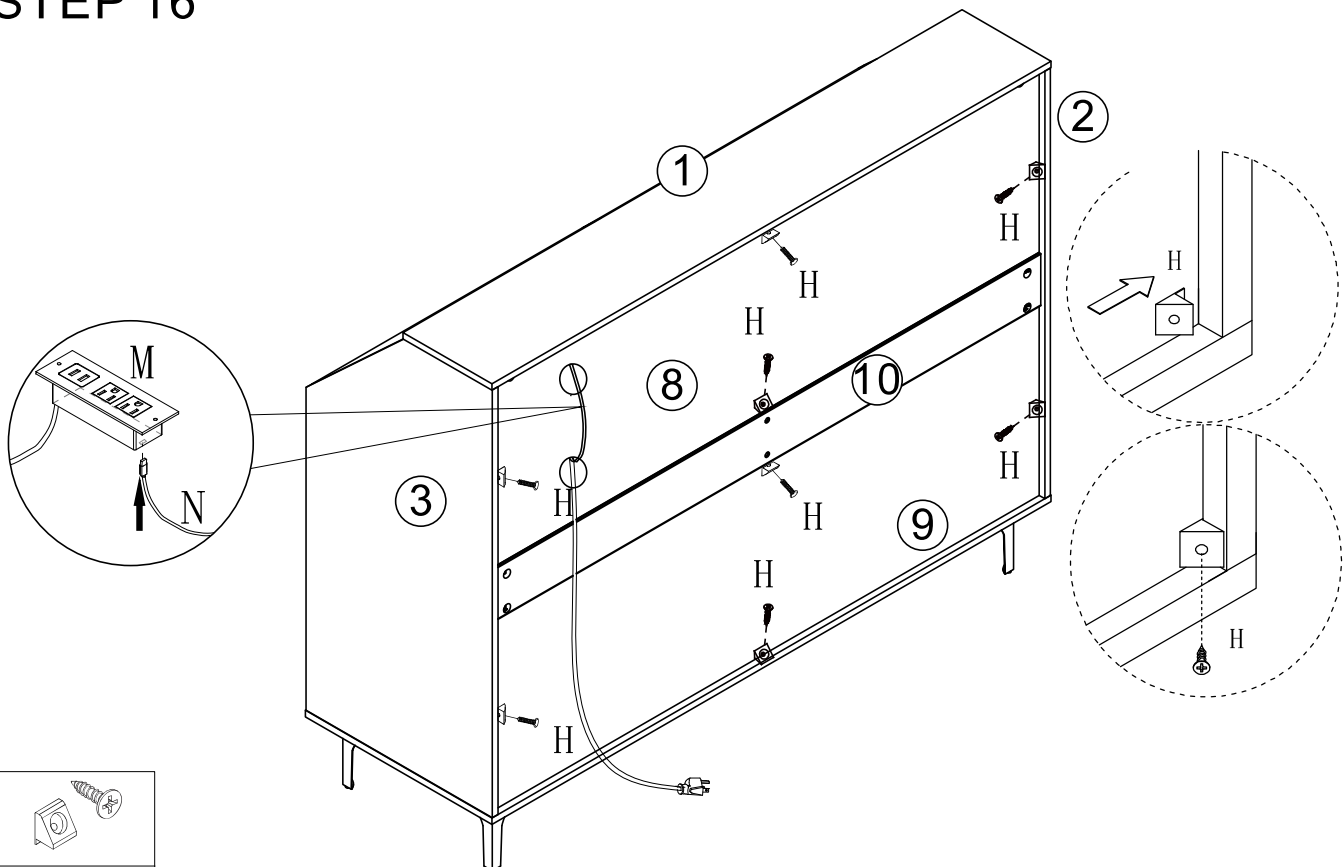

Hx8



Assembly Instructions


STEP 17

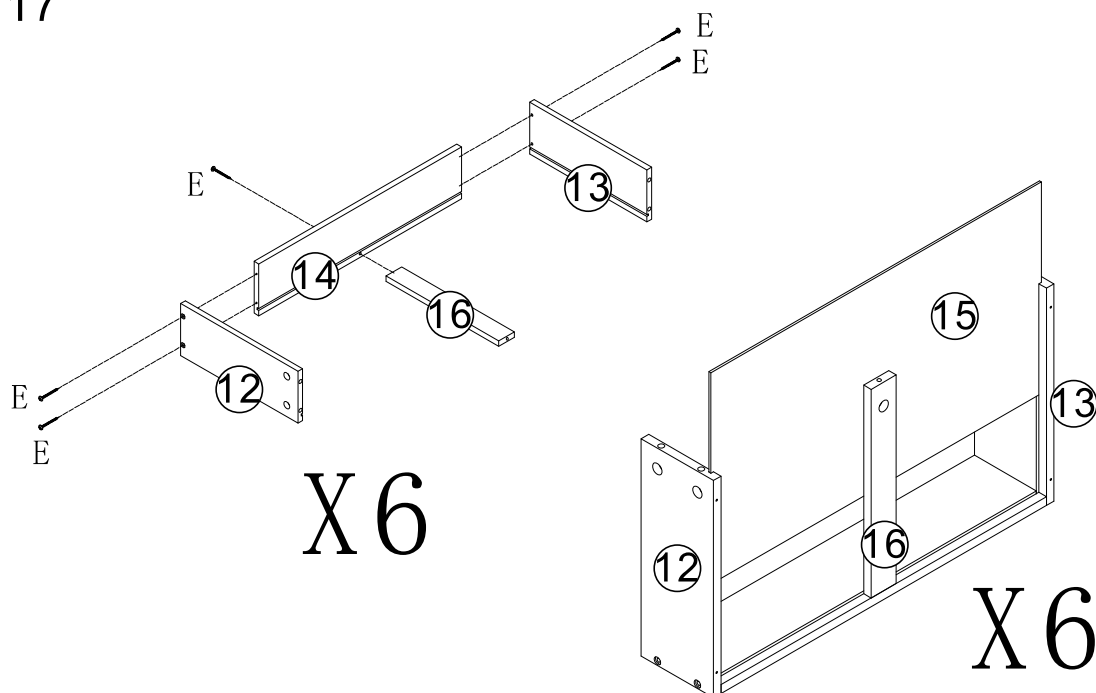


M4X30mm
Ex 30


STEP 18

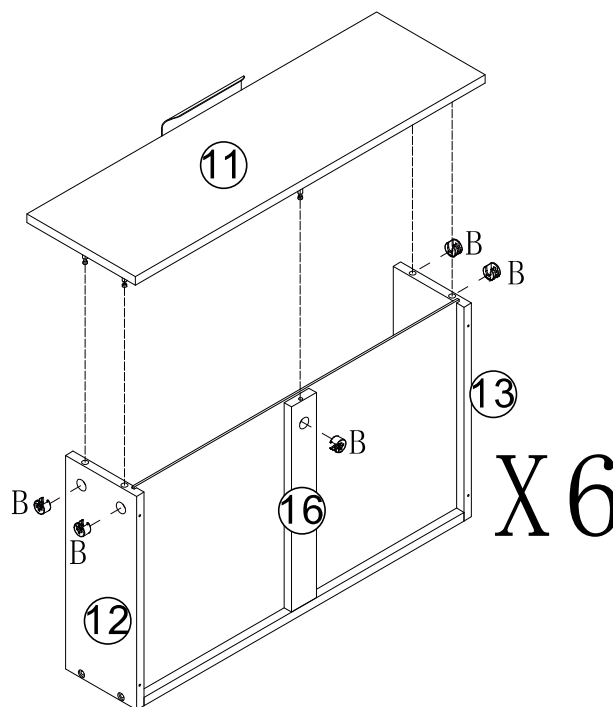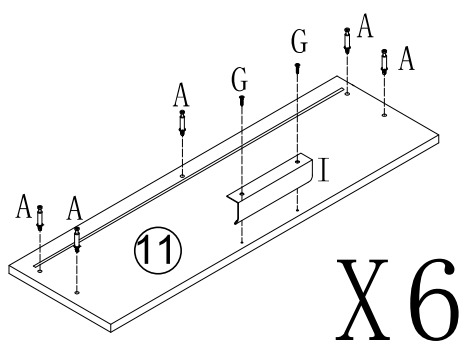

	
A x 30	B x 30
	
M3 x 12mm	I x 6


Assembly Instructions

STEP 19

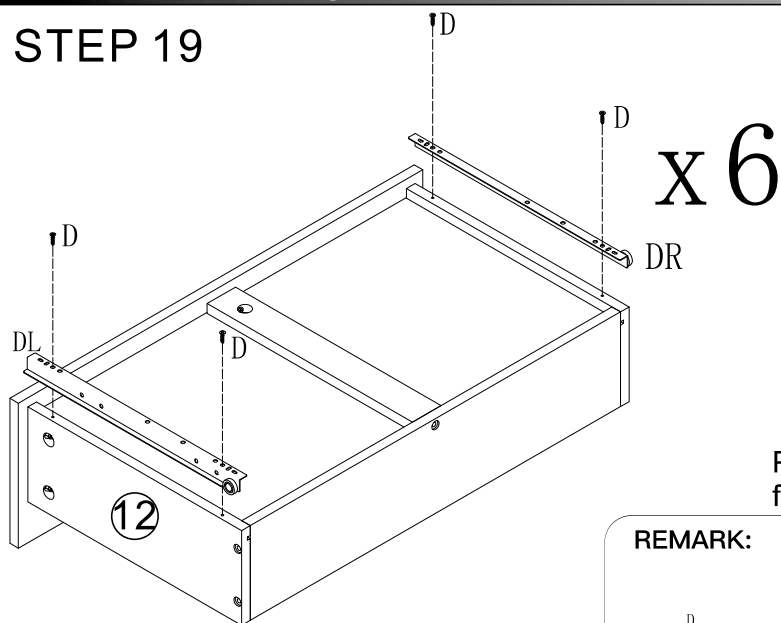


Please refer to this picture for the screw-in position


REMARK:

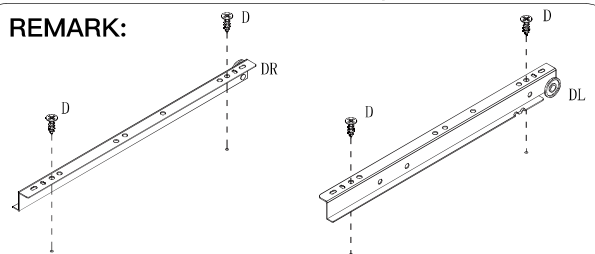

D x 24




DL x 6



DR x 6

STEP 20

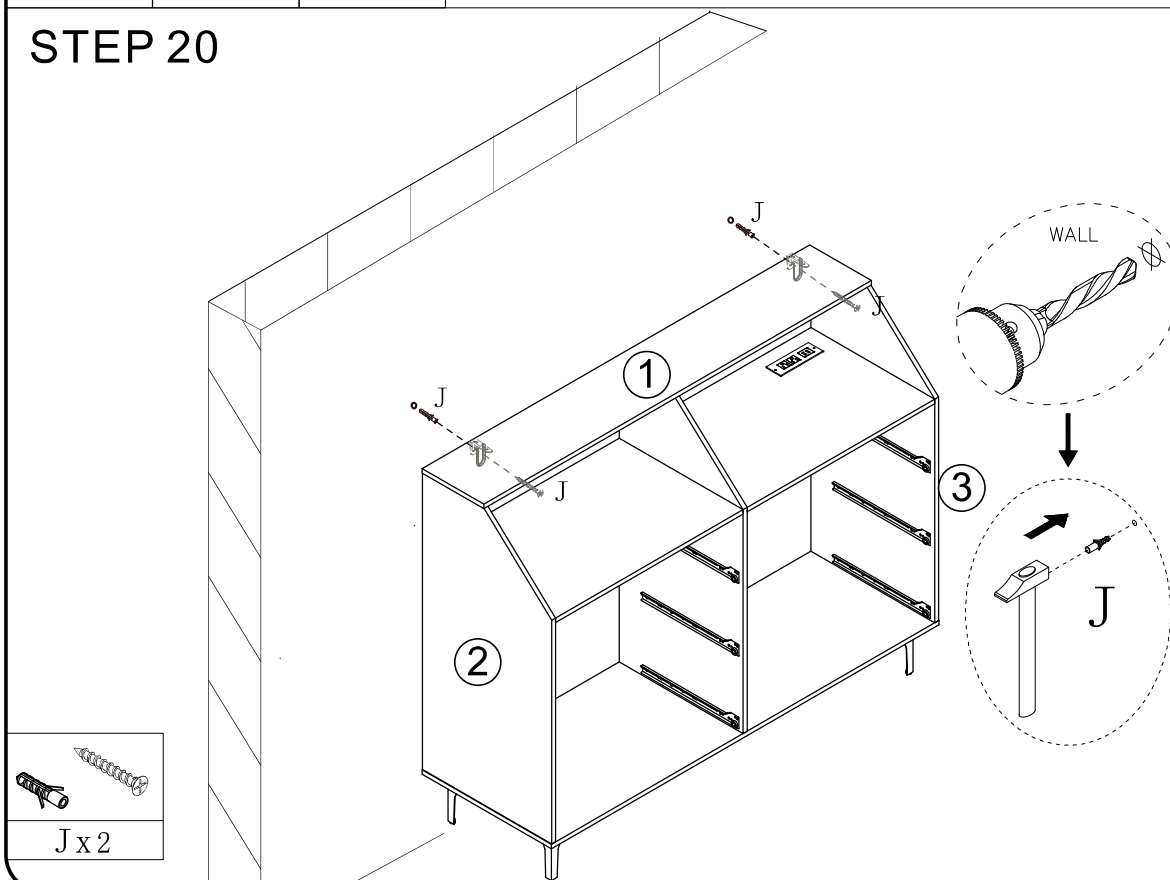

J x 2

Assembly Instructions

STEP 21

