



ASSEMBLY INSTRUCTIONS

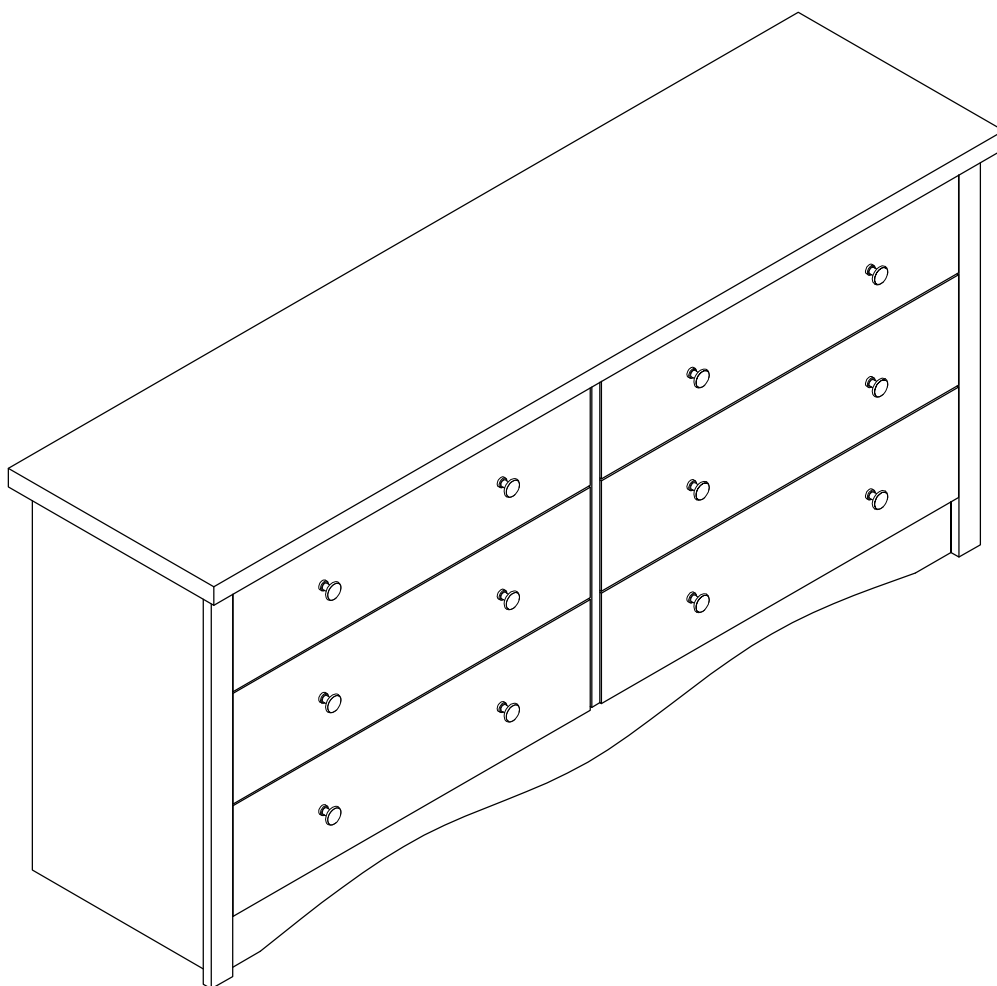


WARNING!

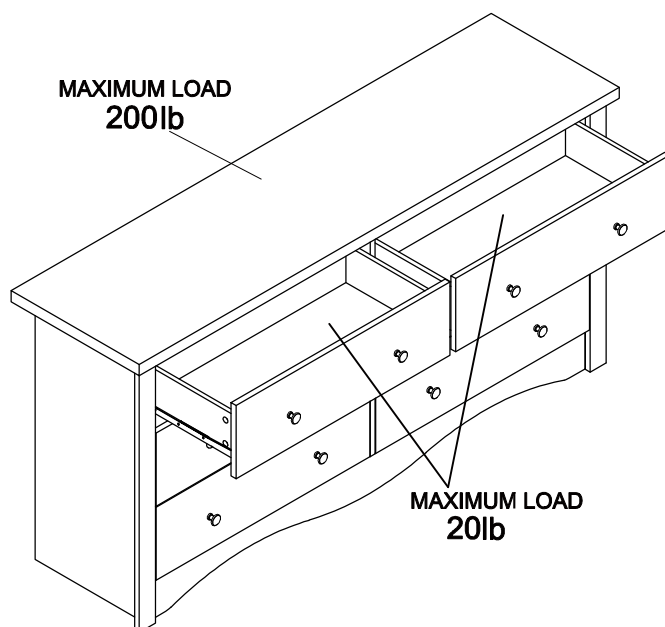


Estimated Time for Assembly

60mins

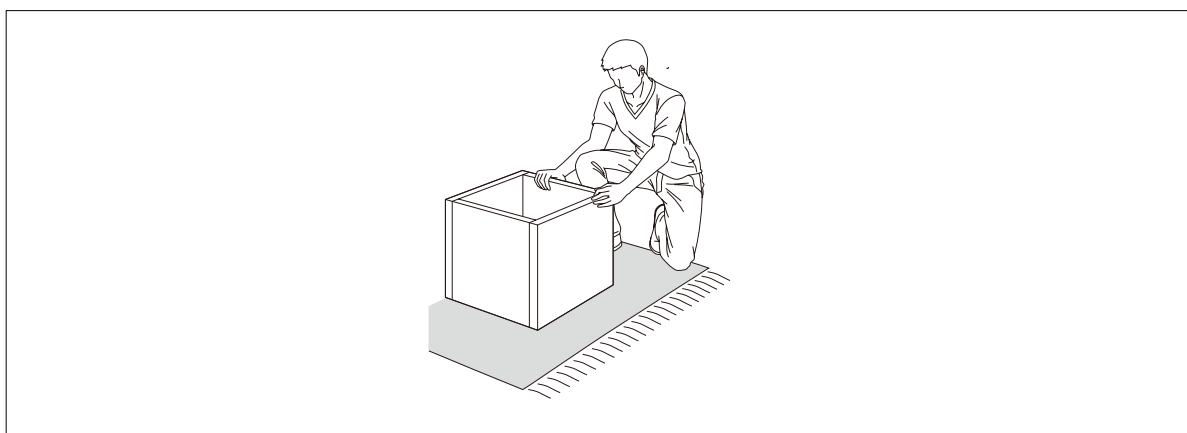

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

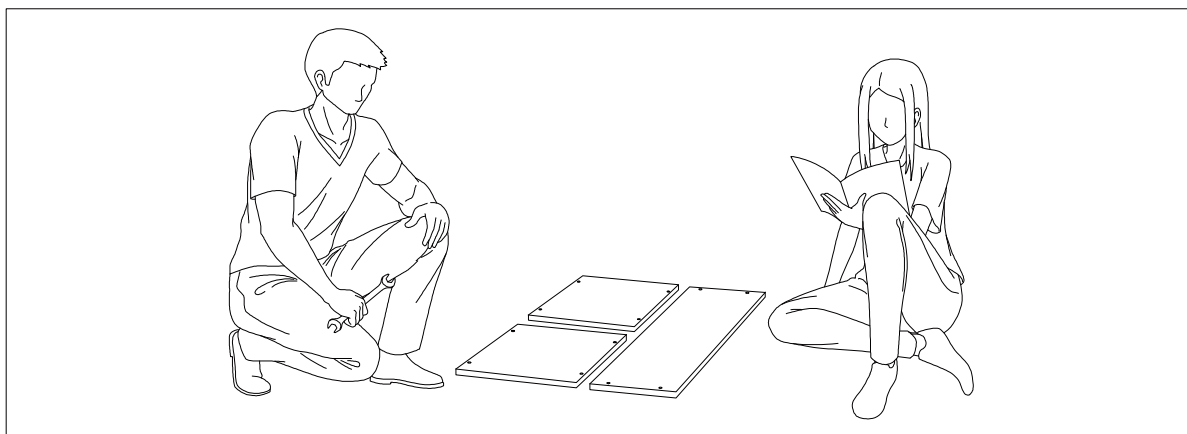


This furniture requires 2 people to assemble.

Make sure no parts are missing before assembly.


Board Identification

Not actual size

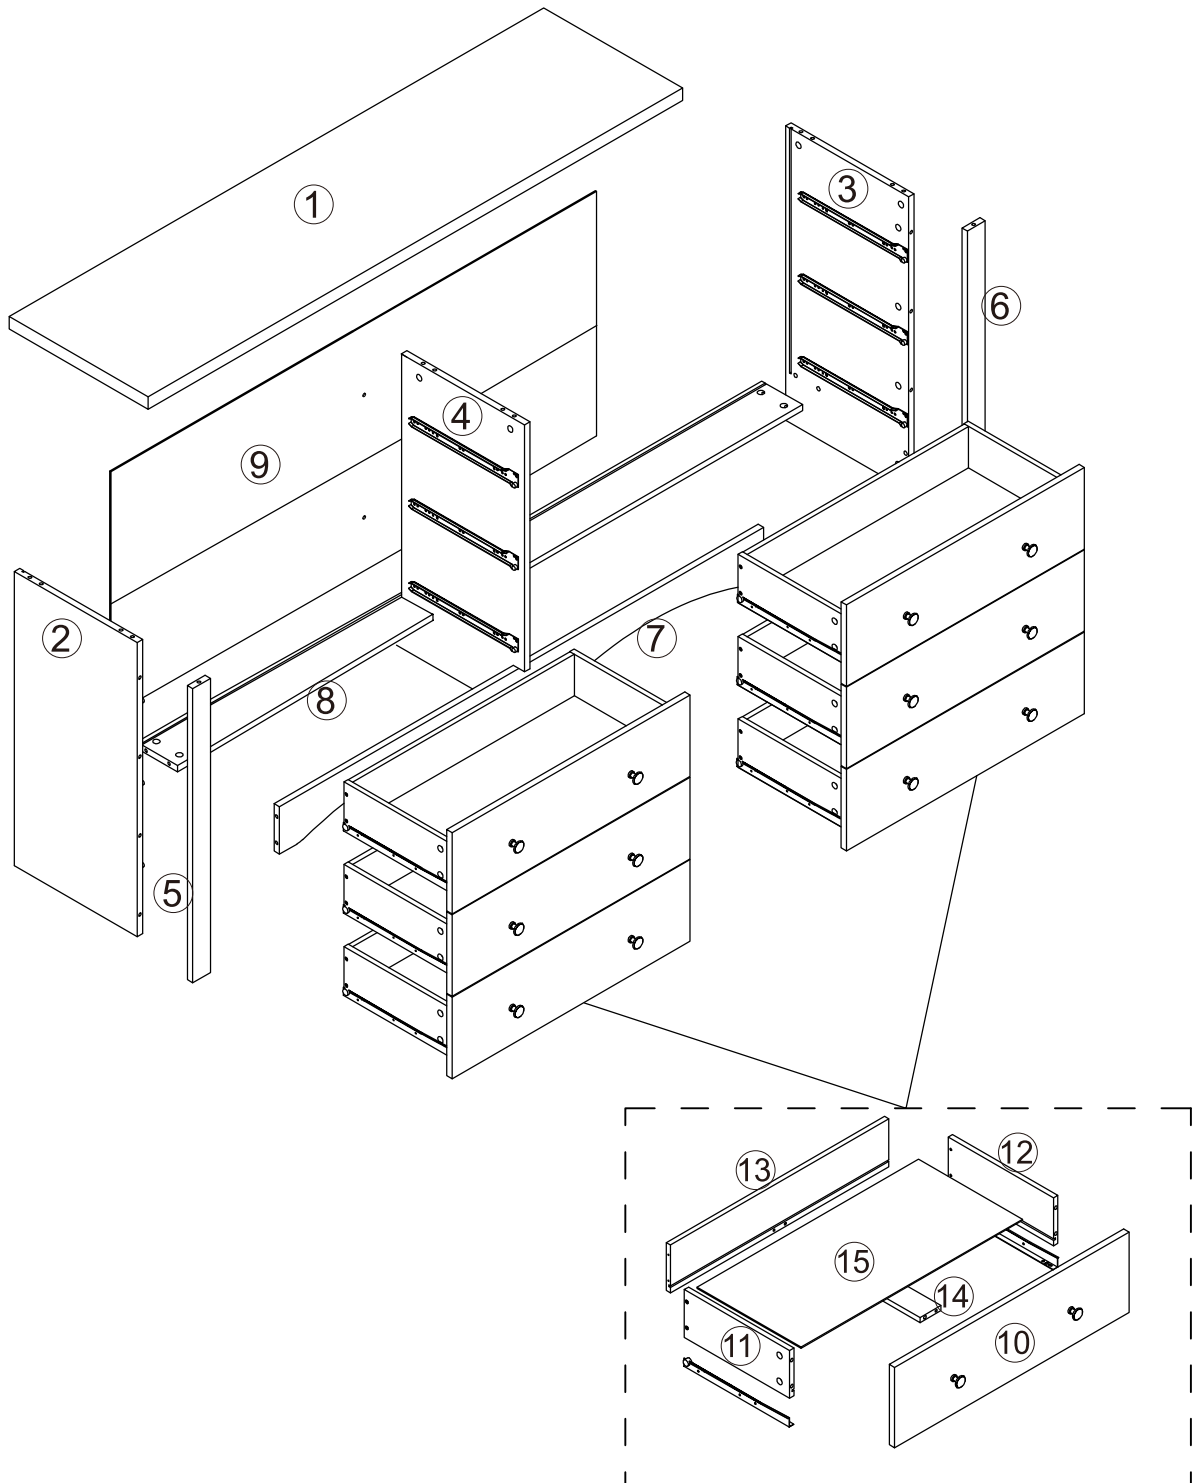


Board Identification


Not actual size

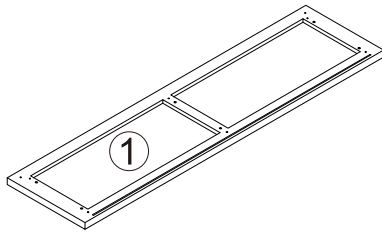


Face board x1

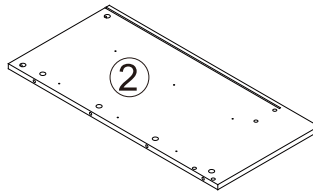


Left side board x1

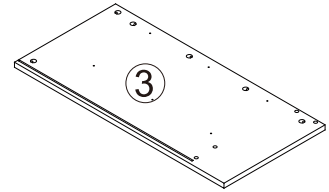


Right side board x1

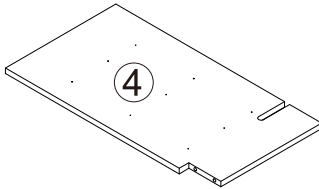


Middle side board x1

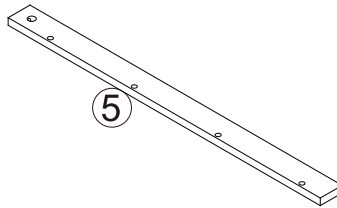


Left decorative stripx1

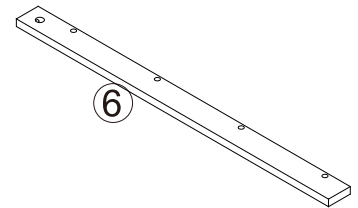


Right decorative stripx1

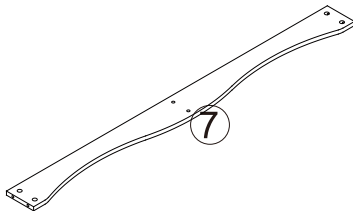


Bottom baffle board x1

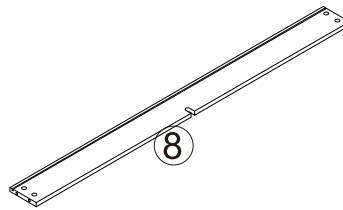


Bottom brace board x1

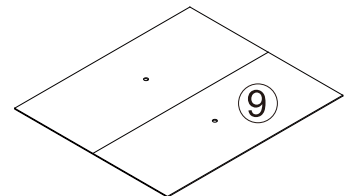


Back board x1

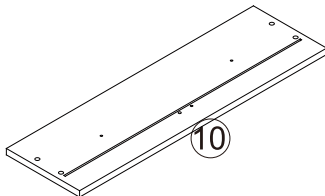


Drawer face board x6

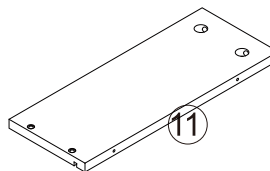


Drawer left board x6

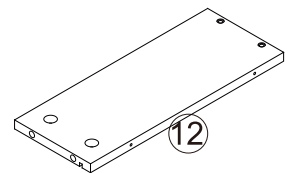


Drawer right board x6

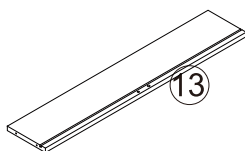

Drawer back board x6

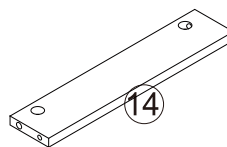









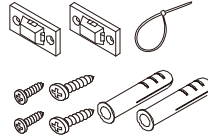

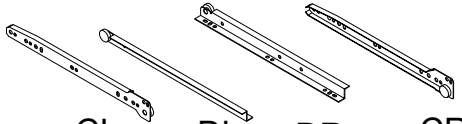


Drawer baffle board x6

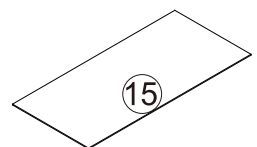



Drawer bottom board x6


Hardware List

 9.5×15mm A ×62+1	 B ×62+1	 8×30mm C ×18+1	 Ø19 D ×2
 3×15mm E ×4+1	 4×20mm F ×12+1	 3.5×12mm G ×60+1	 4×25mm H ×26+1
 I ×12	 J ×4	 K ×2	 L ×1
 CL DL DR CR M ×6			


STEP 1


	
CL	CR
M	x3


	
3.5x12mm	
G	x18





Assemble the screw into the hole
Mark with arrows

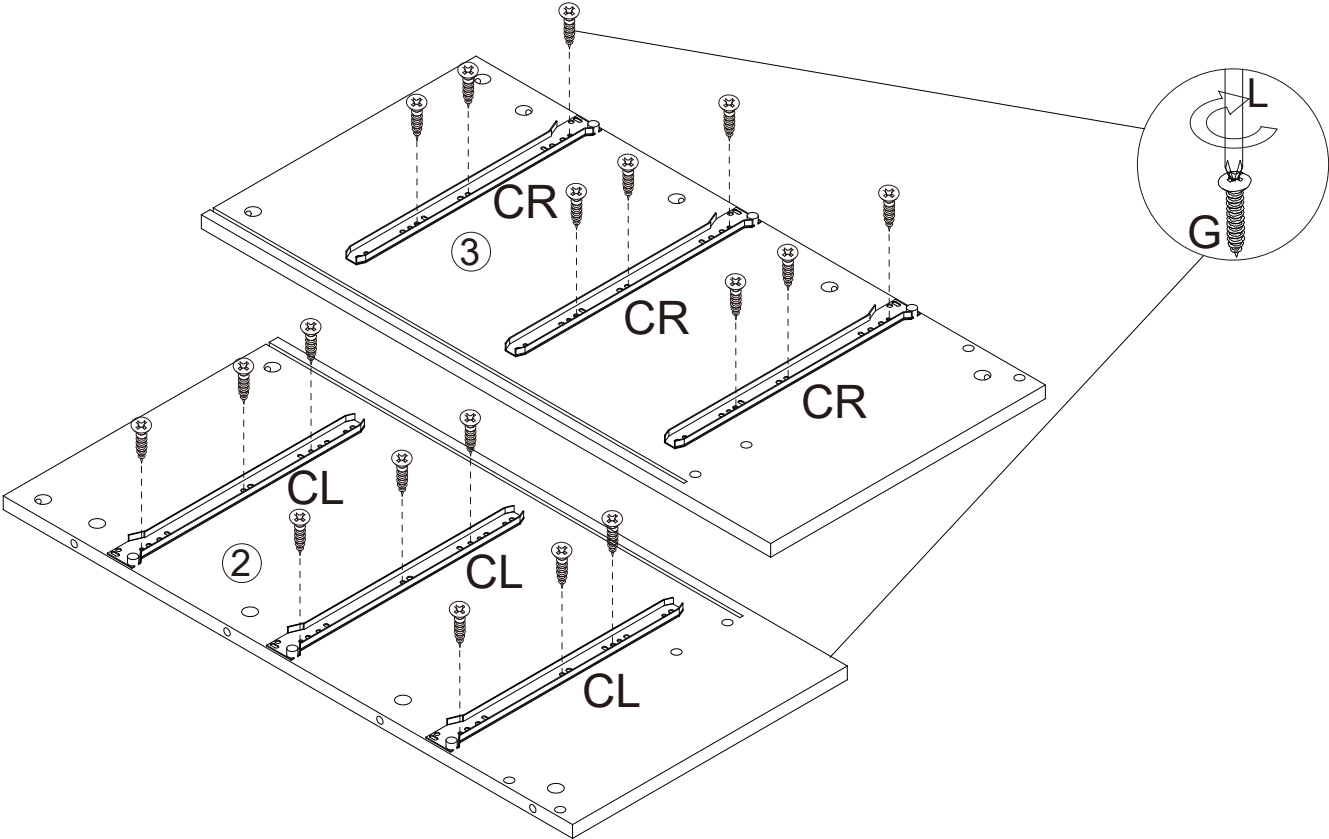


	
CL	
M	x3

	
3.5x12mm	
G	x9

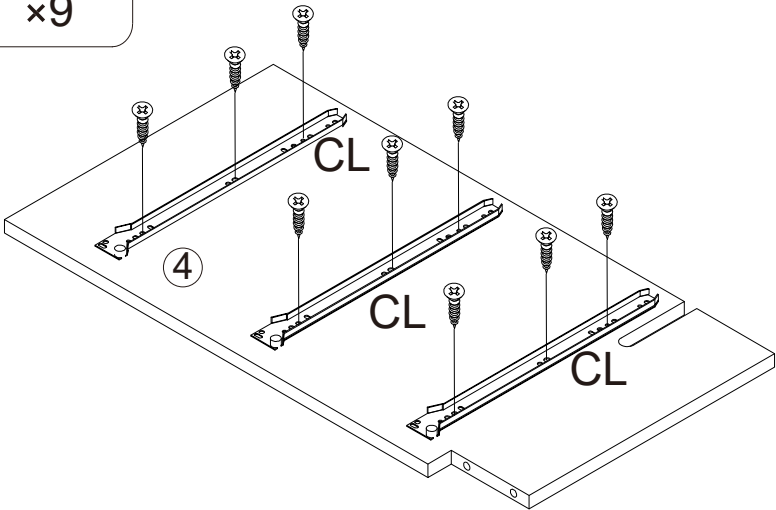


STEP 2



CR


M	×3
---	----




3.5x12mm

G	×9
---	----

Assemble the screw into the hole
Mark with arrows

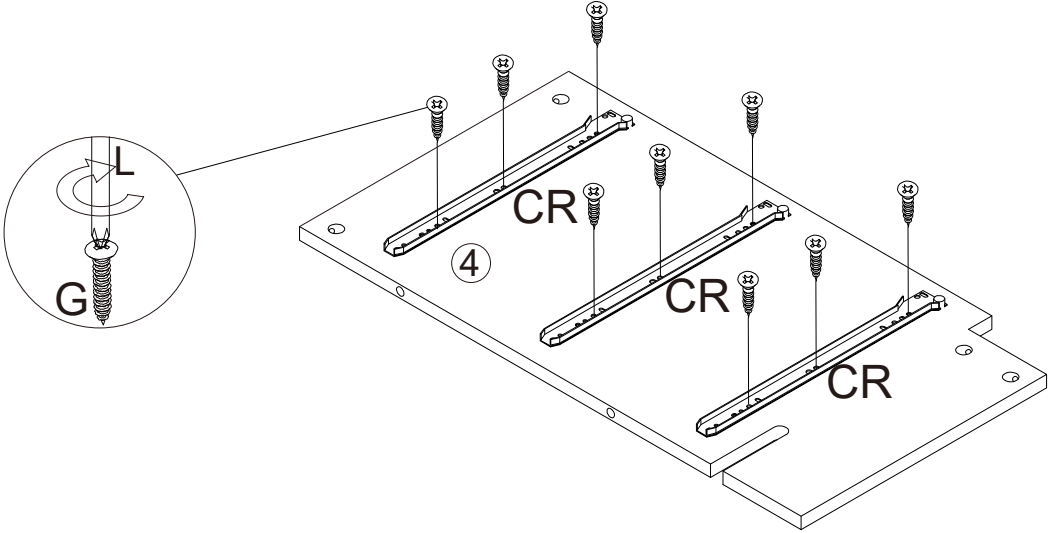


STEP 3





B



×10

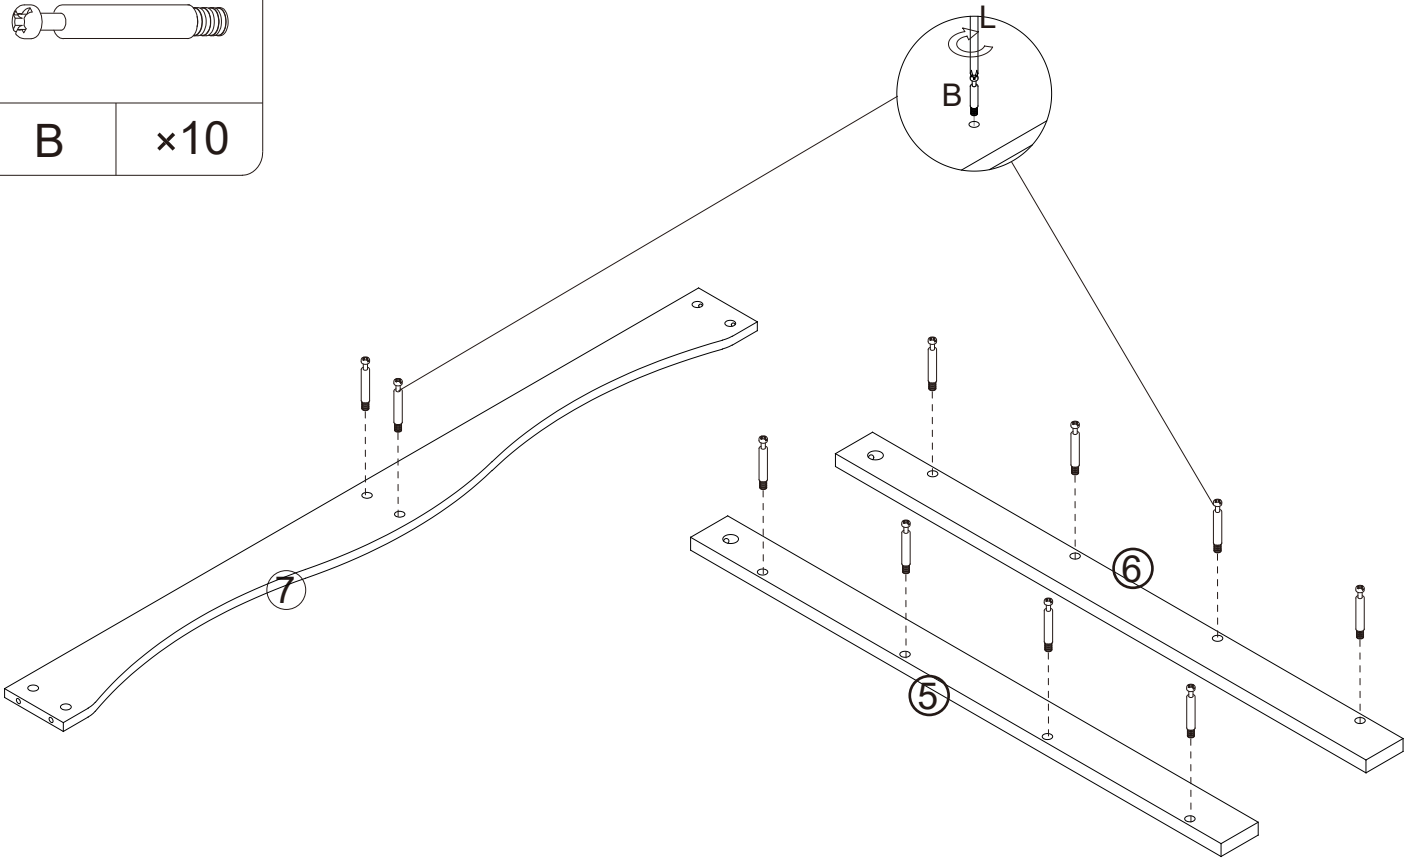



STEP 4

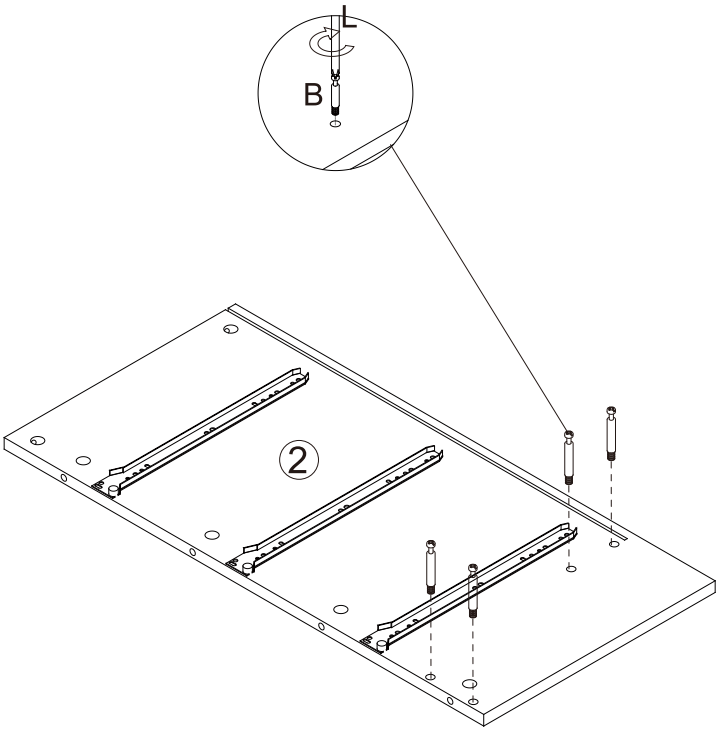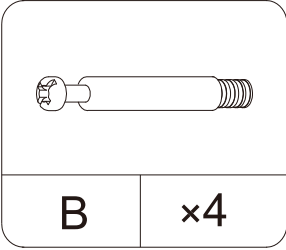



STEP 5

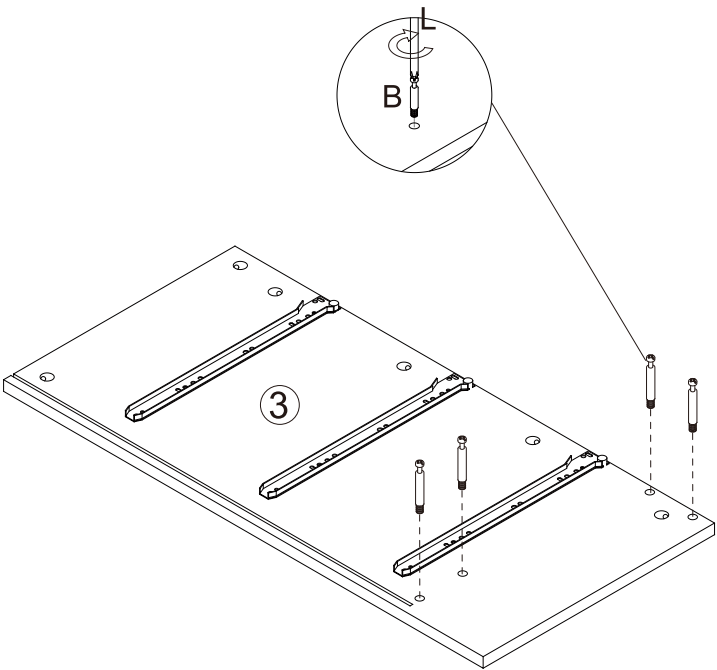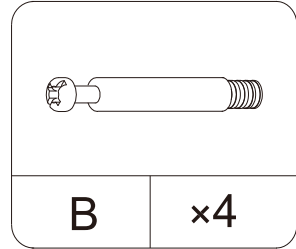



STEP 6

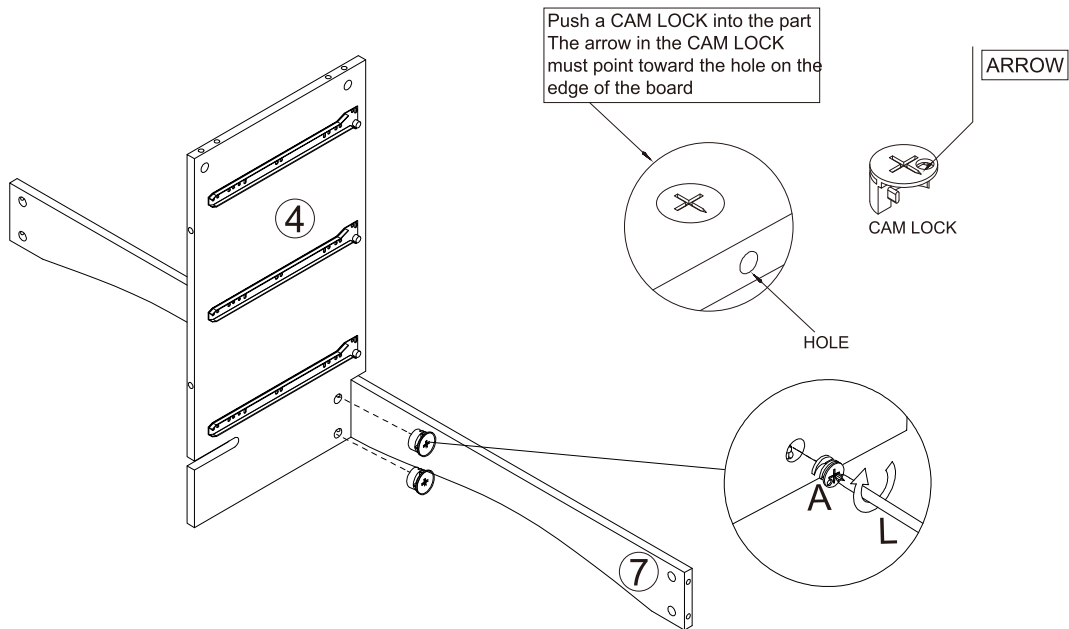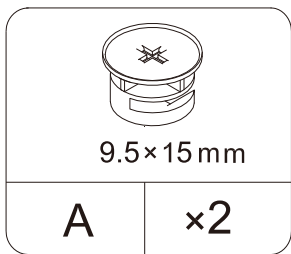





STEP 7

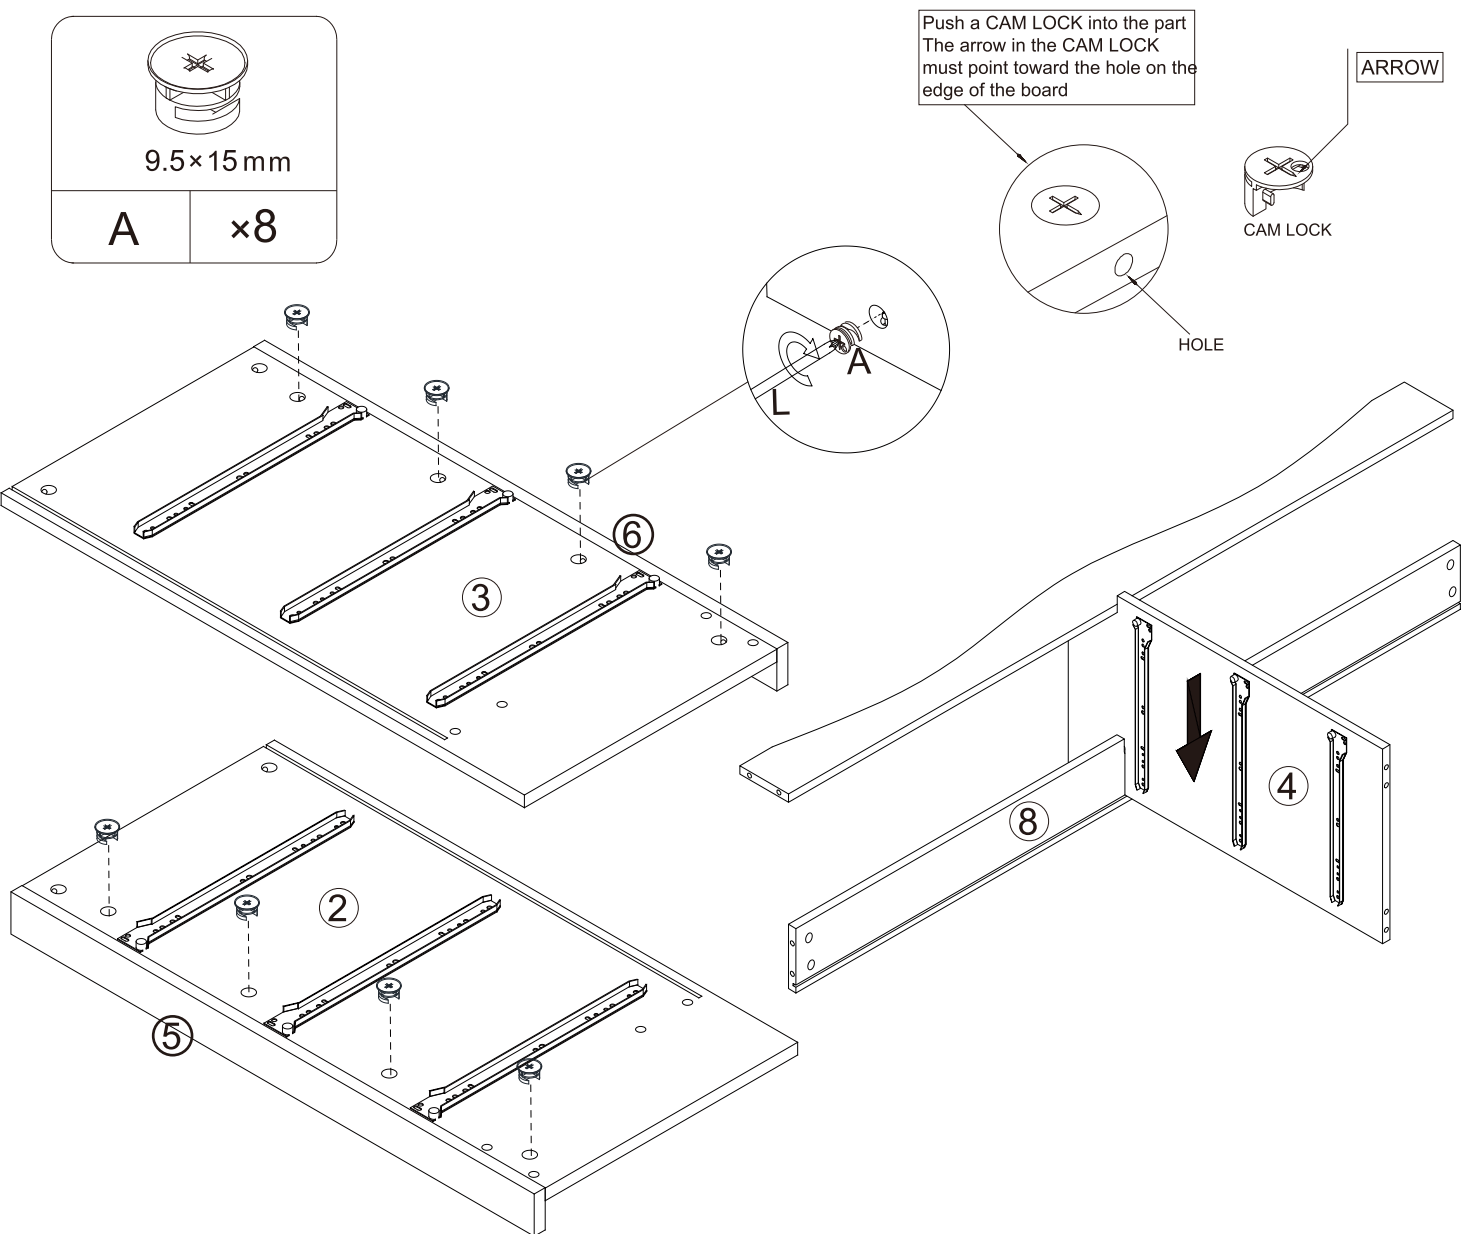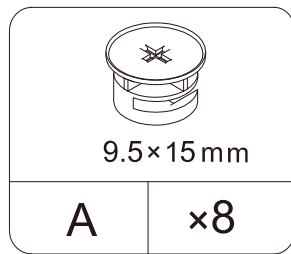


STEP 8

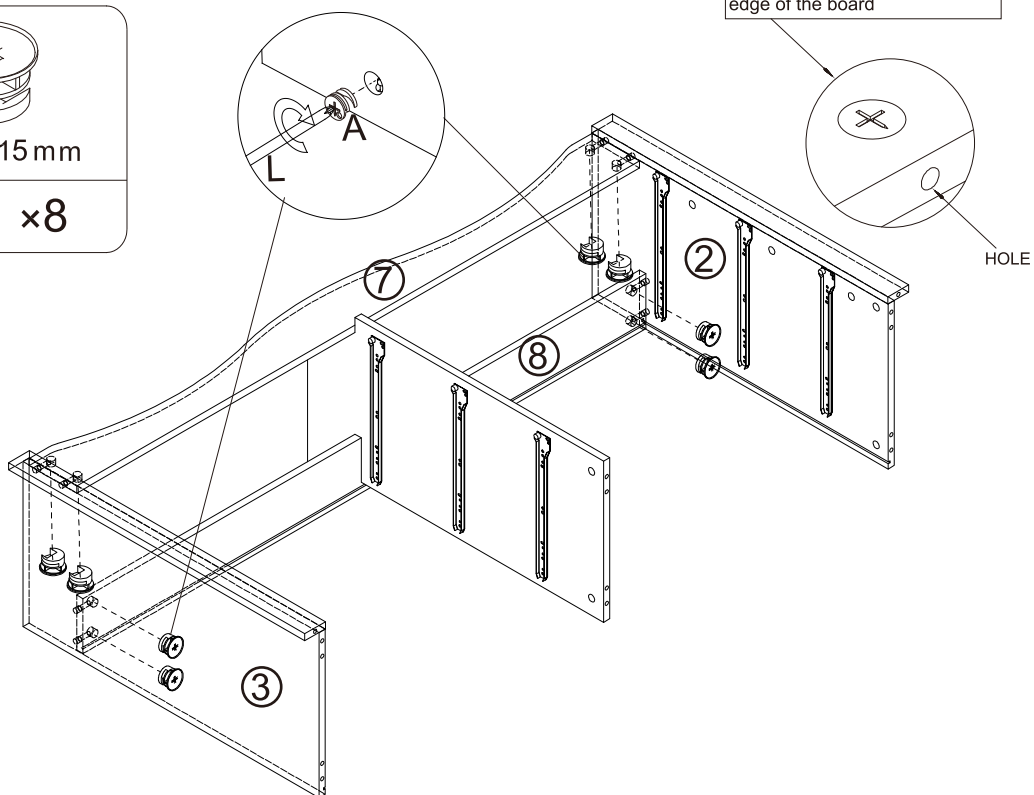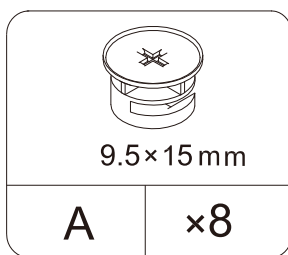

STEP 9

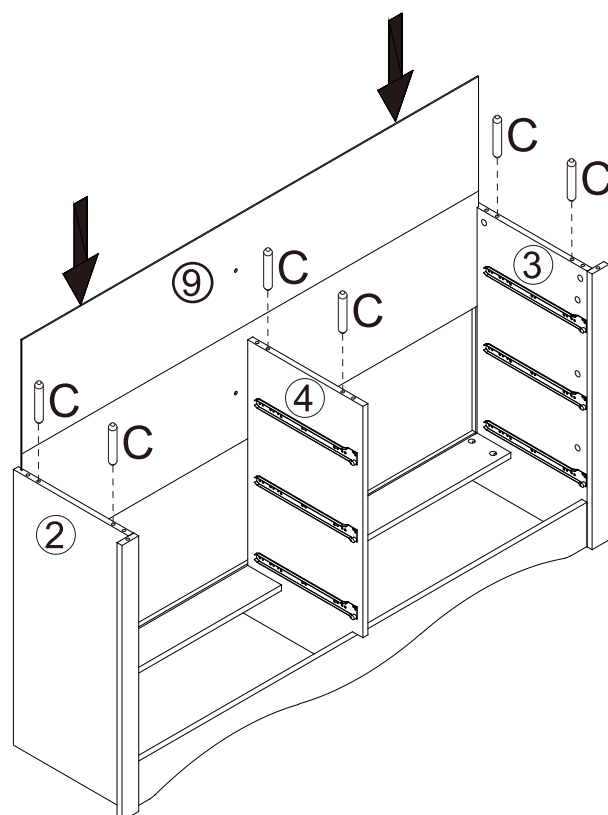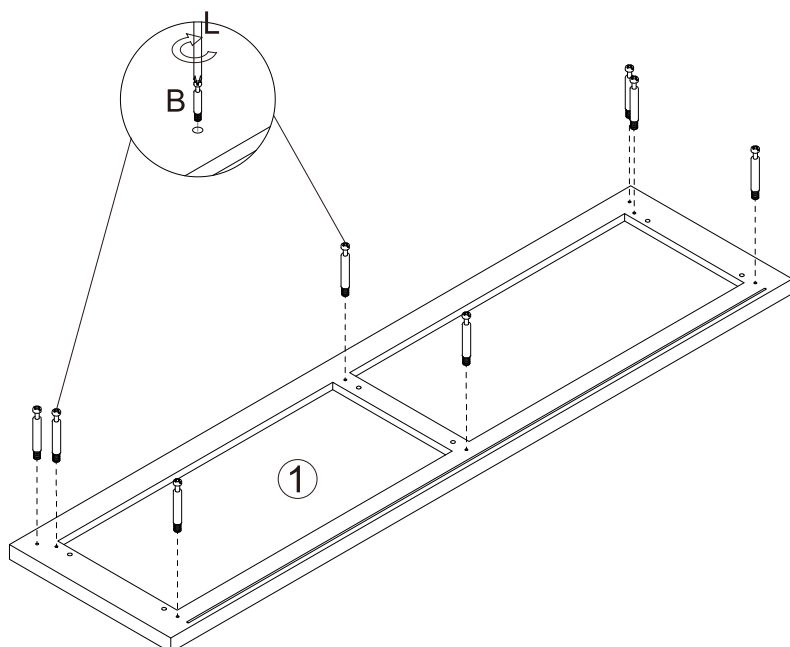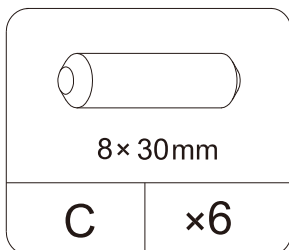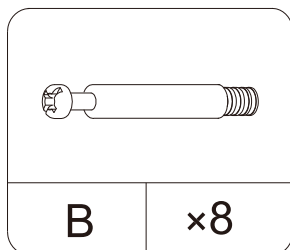


STEP 10



9.5×15 mm

A	×8
---	----

Push a CAM LOCK into the part
The arrow in the CAM LOCK
must point toward the hole on the
edge of the board

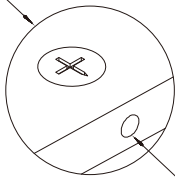


HOLE




CAM LOCK

ARROW

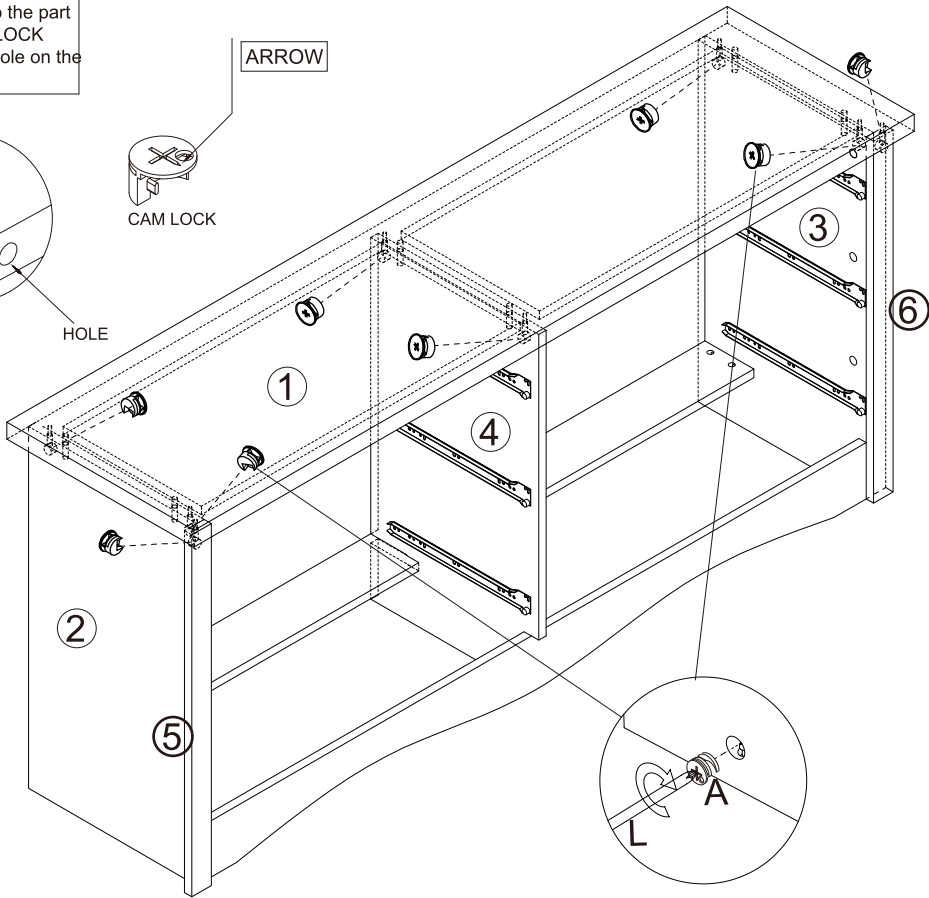


STEP 11



DL DR

M	×6
---	----





3.5x12mm







G	×24
---	-----





Assemble the screw into the hole
Mark with arrows

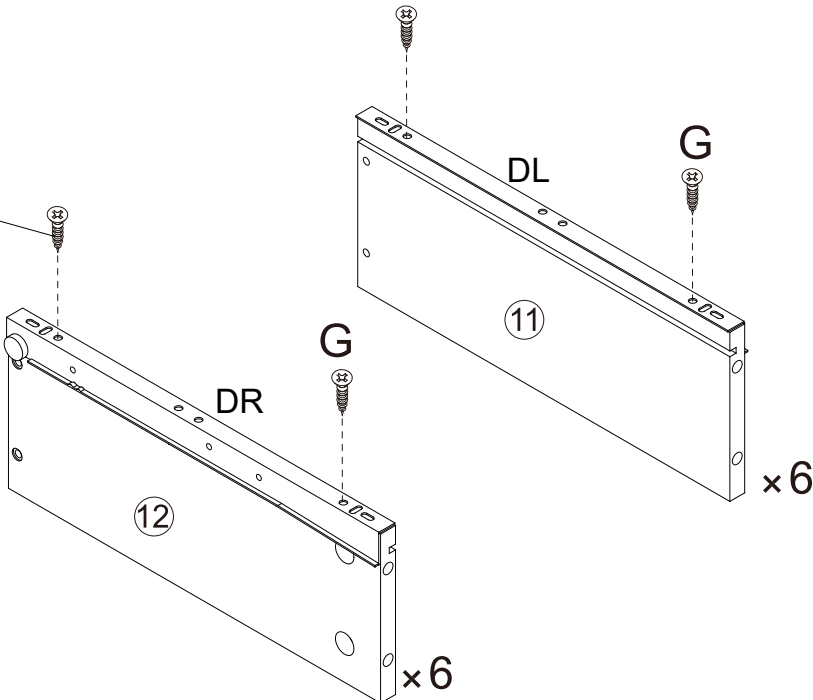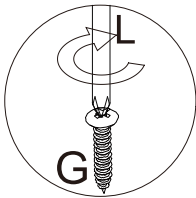


STEP 12

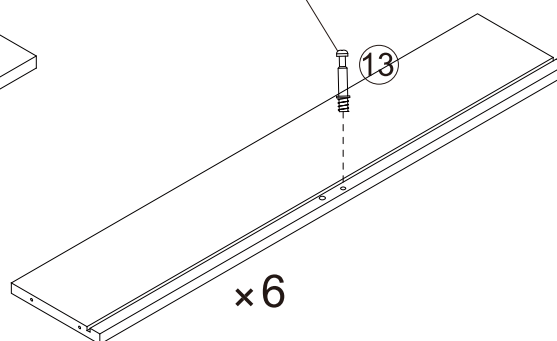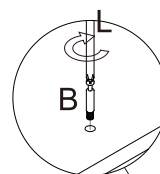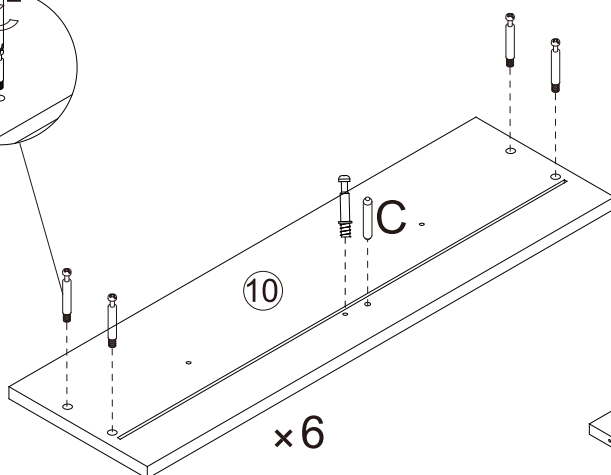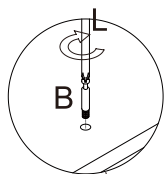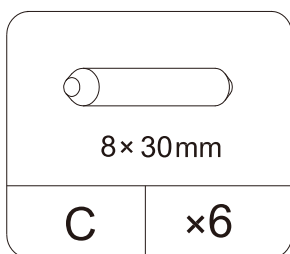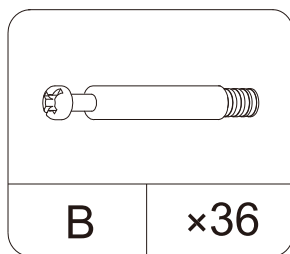




STEP 13

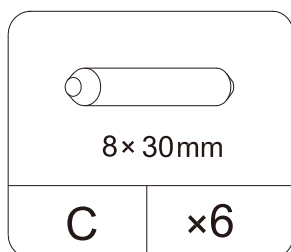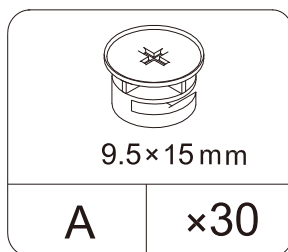


Push a CAM LOCK into the part
The arrow in the CAM LOCK
must point toward the hole on the
edge of the board

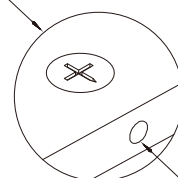

HOLE

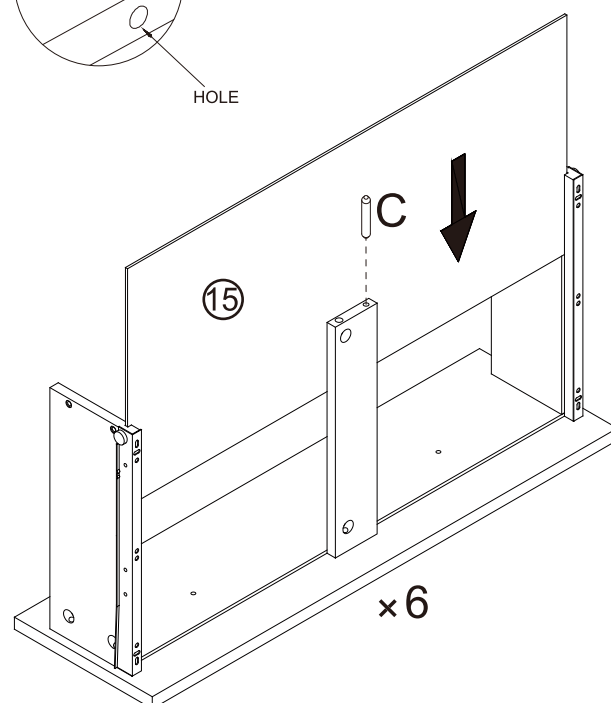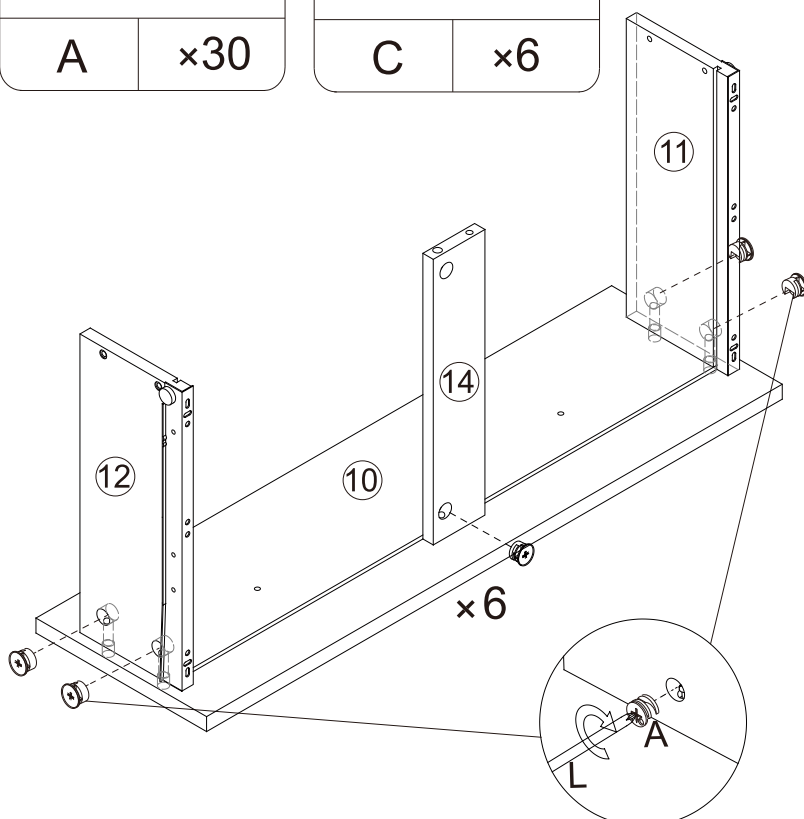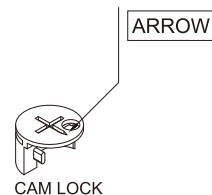


STEP 14



9.5×15mm




A	×6
---	----




4x25mm

H	×24
---	-----

Push a CAM LOCK into the part
The arrow in the CAM LOCK
must point toward the hole on the
edge of the board

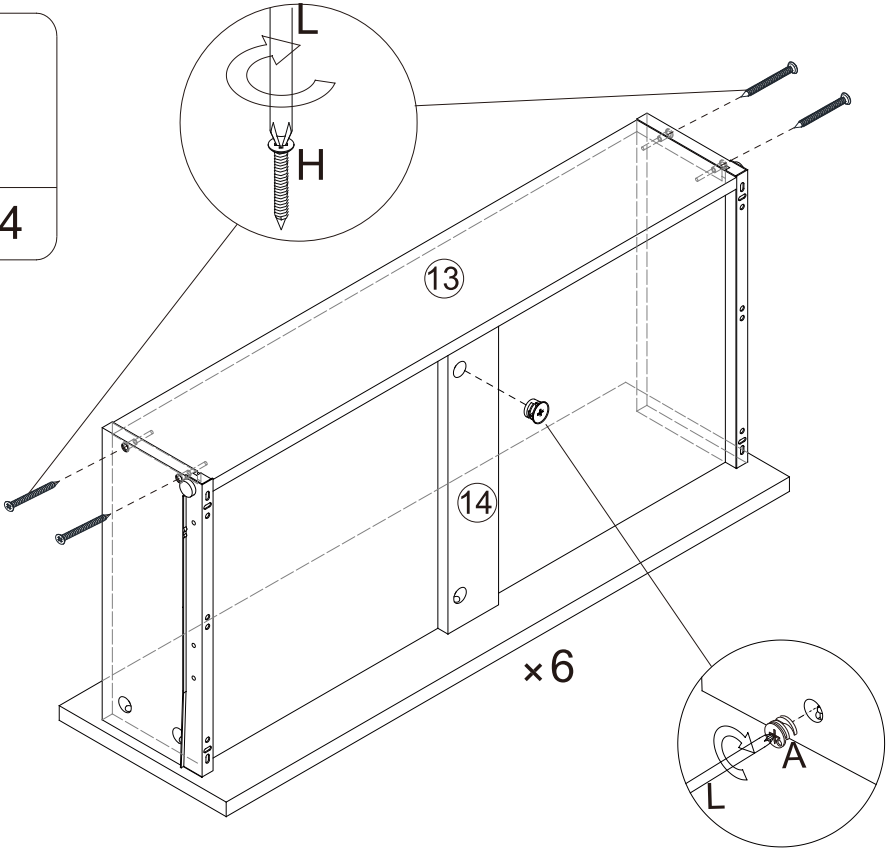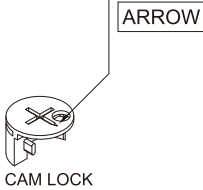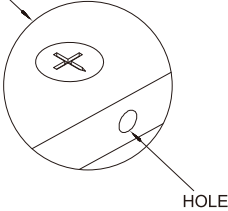


STEP 15




4x20mm


F	×12
---	-----







I	×12
---	-----

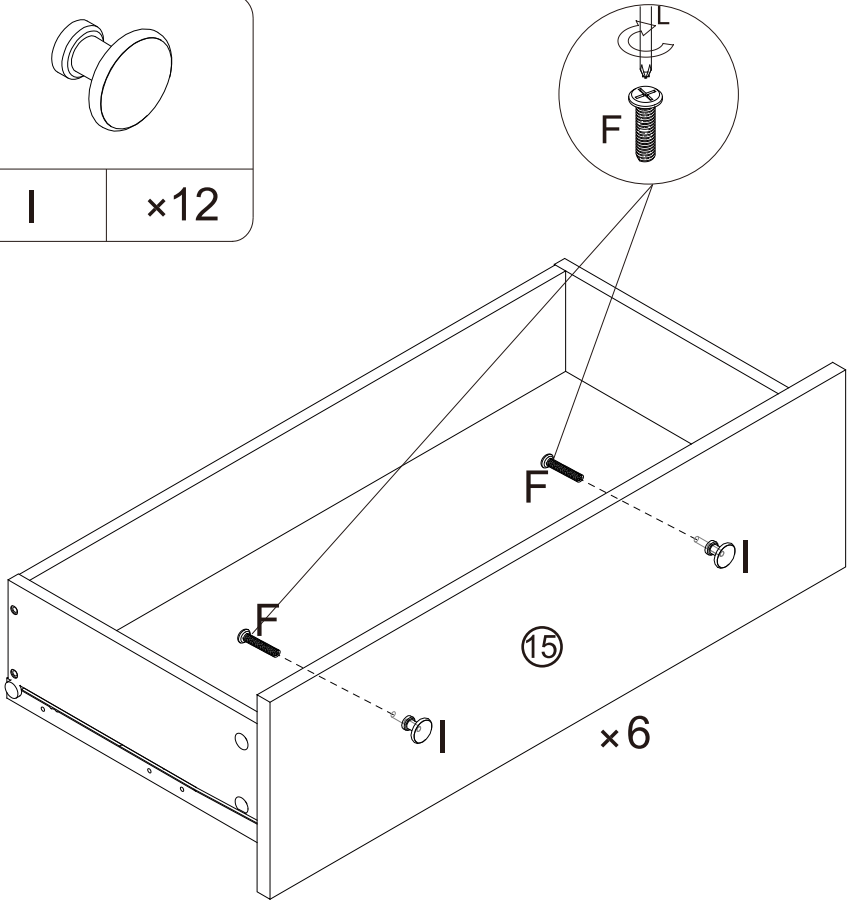


STEP 16



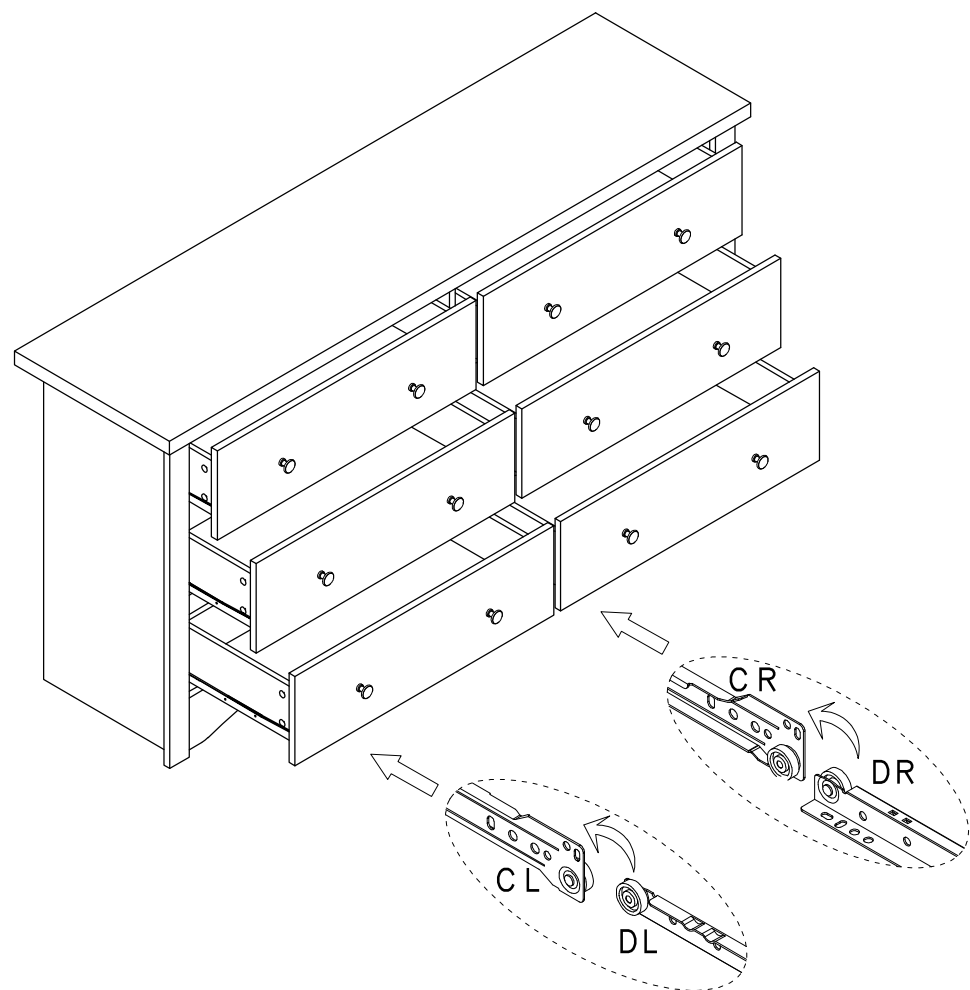


STEP 17

 3x15mm				 Ø19		 4x25mm	
E	x4	J	x4	D	x2	H	x2

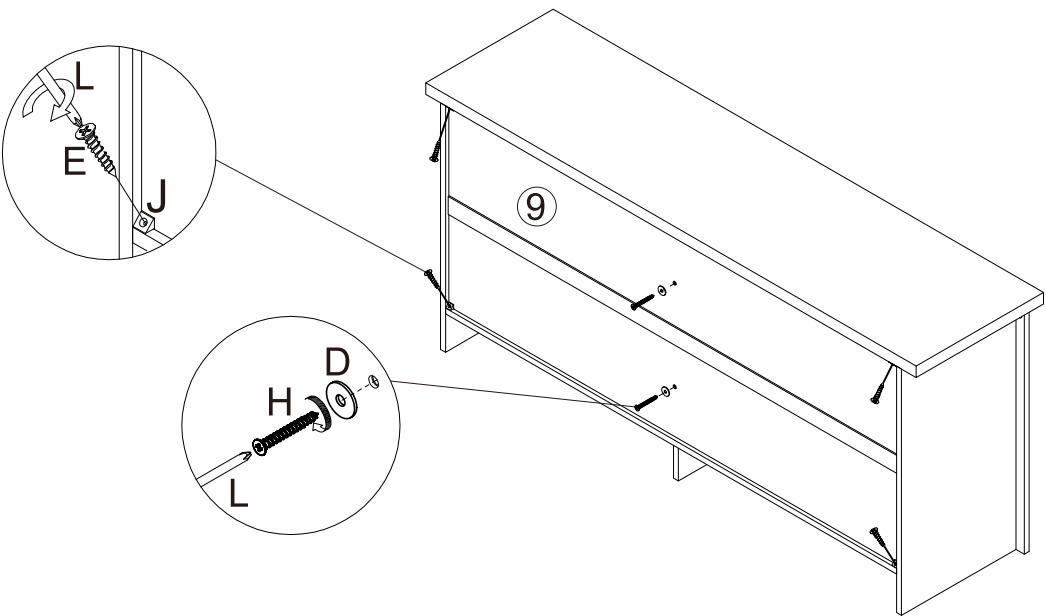

STEP 18

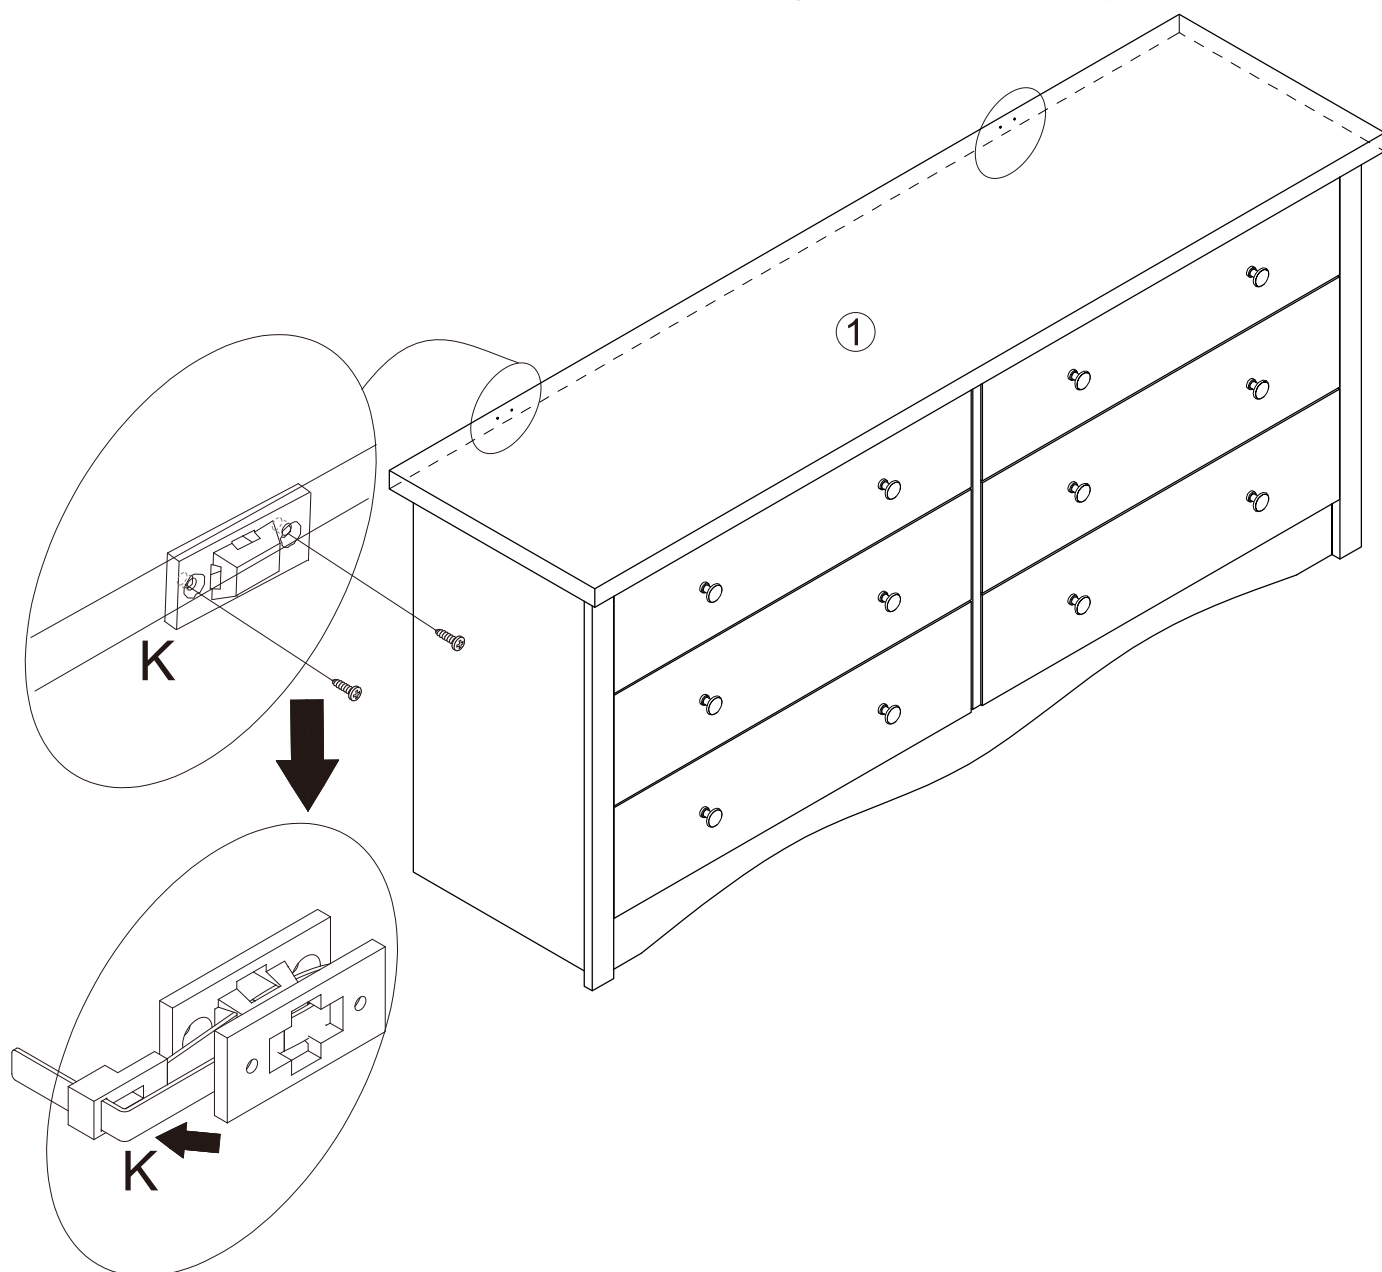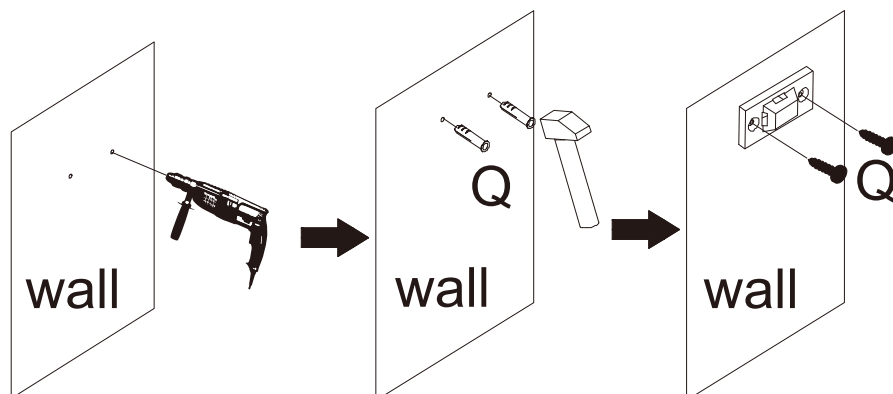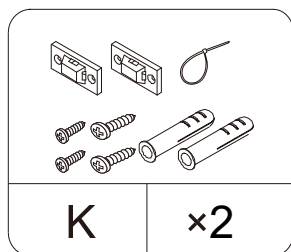

FURNITURE CARE AND MAINTENANCE

Particleboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- **Tighten all bolts and screws again within the first 2 weeks of assembly**
- **Check the tightness of all bolts every 2 months, tighten them if necessary**



CLEANING

- **Clean the surface of the PB(Particleboard) with a lightly dampened cloth.**
- **Small amount of mild soap can be used if necessary**
- **Dry the surface immediately after cleaning.**

- ⚠ **DO NOT use bleach or alcohol detergent to clean the surface.**
- ⚠ **DO NOT apply wood treatment on parts made with PB.**

**Particleboard will swell and distort when suffer .
Make sure to dry the furniture immediately after cleaning**