


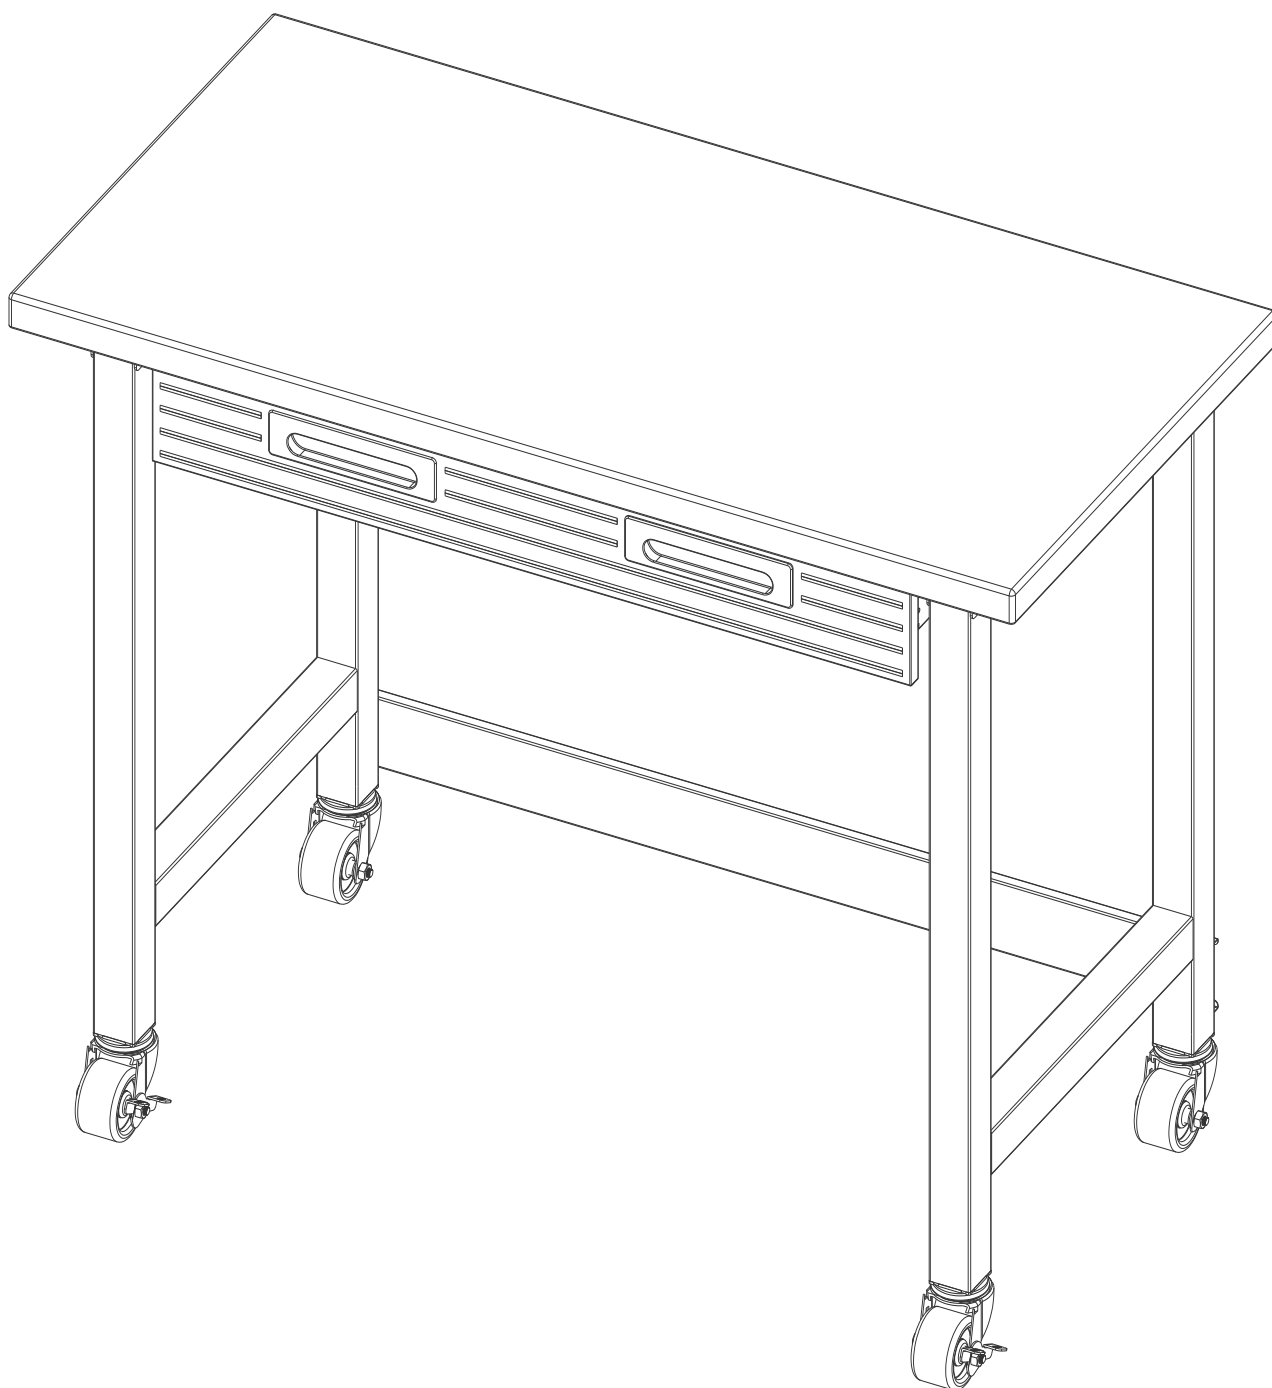

ASSEMBLY INSTRUCTIONS


UltraGraphite™ Mobile Workbench (Model No. WEB484)

48 in W X 24 in D X 37 in H



PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department (please refer to page 7).

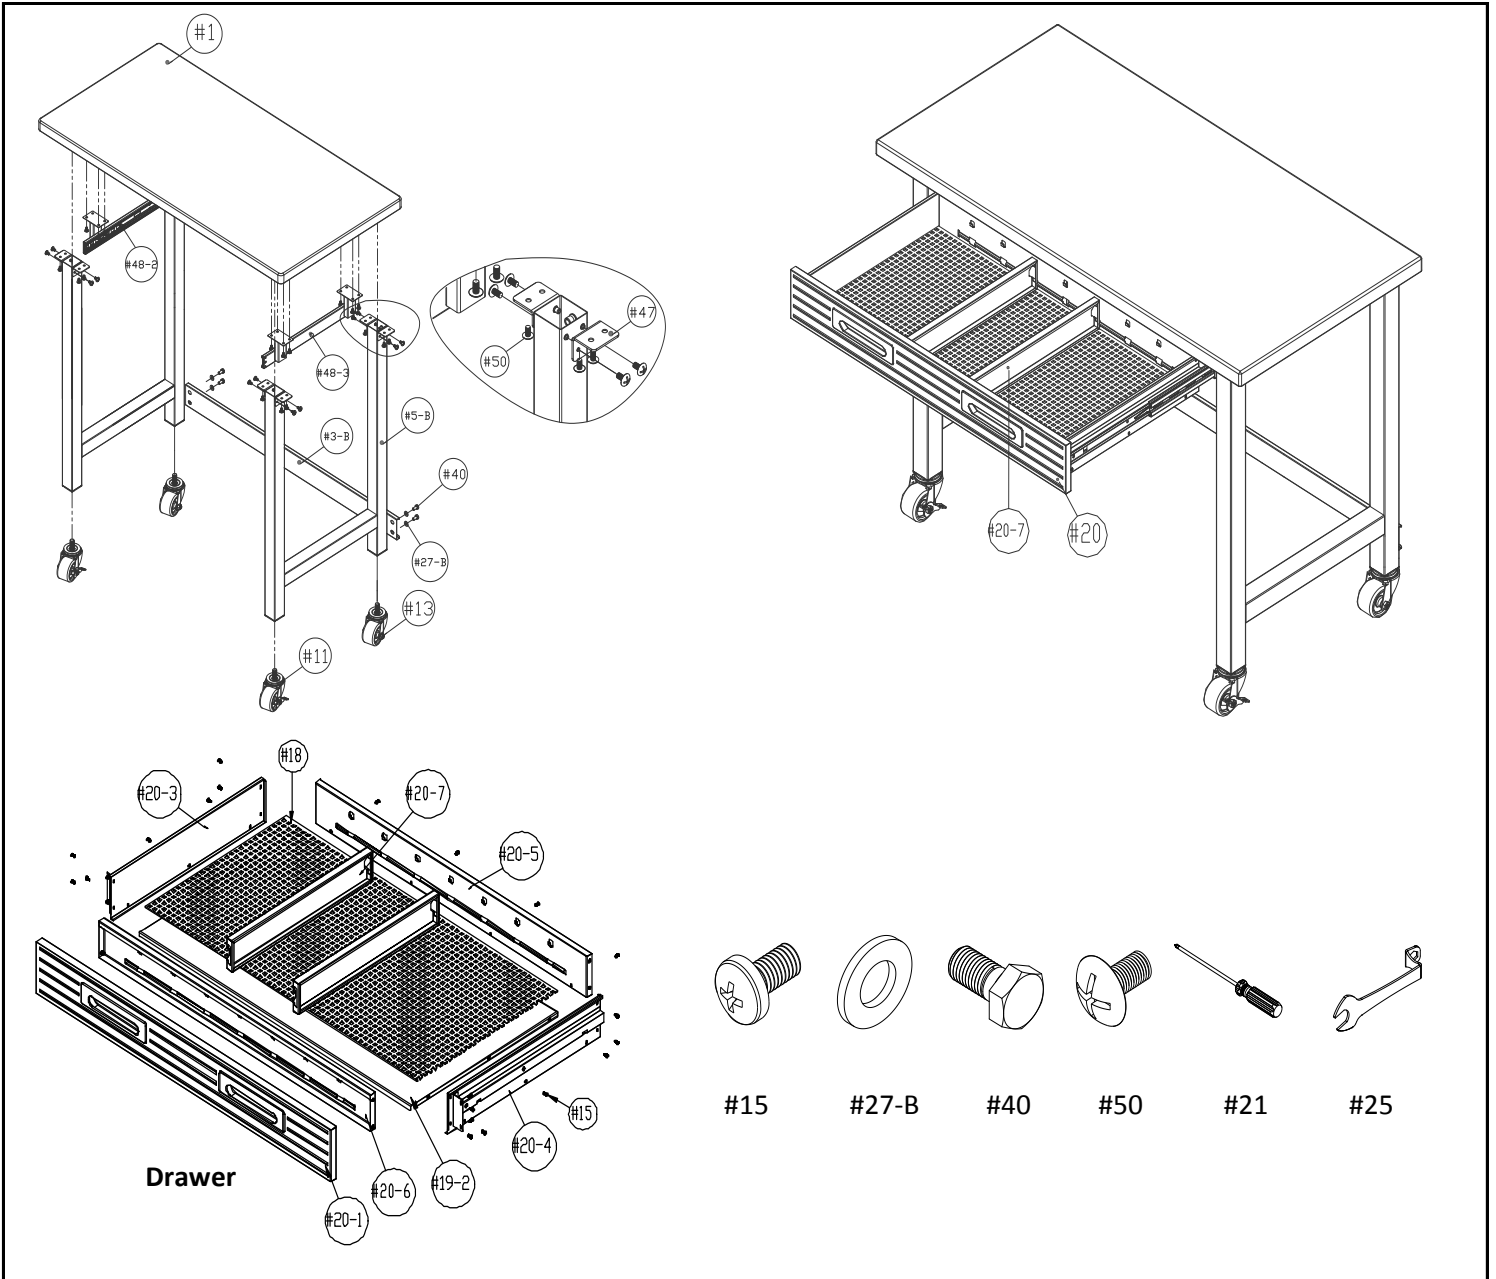

No.	Parts	Qty.
#1	SOLID HARDWOOD BOARD TOP	1 PC
#3-B	BOTTOM CROSSBAR	1 PC
#5-B	LEG PIECE	2 PCS
#11	WHEEL WITH BRAKE	2 PCS
#13	WHEEL W/O BRAKE	2 PCS
#18	DRAWER MAT	1 PC
#19-2	DRAWER BASE PANEL	1 PC
#20-1	DRAWER FRONT PANEL	1 PC
#20-3	DRAWER LEFT PANEL	1 PC
#20-4	DRAWER RIGHT PANEL	1 PC
#20-5	DRAWER BACK PANEL	1 PC

No.	Parts	Qty.
#20-6	DRAWER FRONT PANEL SUPPORT PLATE	1 PC
#20-7	DRAWER DIVIDER	2 PCS
#47	"L" BRACKET	8 PCS
#48-2	DRAWER LEFT SUPPORT	1 PC
#48-3	DRAWER RIGHT SUPPORT	1 PC
#50	SCREW I (M6 x 15L)	48 pcs
#40	SCREW E (M8 x 18L)	4 pcs
#27-B	WASHER	4 pcs
#15	SCREW B (M4 x 8L)	30 pcs
#21	SCREW DRIVER	1 pc
#25	WRENCH	1 pc

UltraGraphite™ Mobile Workbench (Model No. WEB484)



*NOTE: We recommend using TWO people to assemble the workbench.



Tip: A magnetic screwdriver is included for your convenience. If using a power screwdriver, keep torque setting on LOW.

Step 1: Install (#5-B) Leg Piece.


A: Open the package, and put the parts aside.

NOTE: Leave the Solid Hardwood Board Top (#1) on cardboard

Attach the (#47) "L" Bracket to the (#5-B) Leg Piece, use (#50) Screw I to tighten.

Repeat Step A to install (#47) "L" Brackets to another one (#5-B) Leg Piece.

Tighten the all the screws after the (#47) Brackets are flush with the (#5-B) Leg Piece.

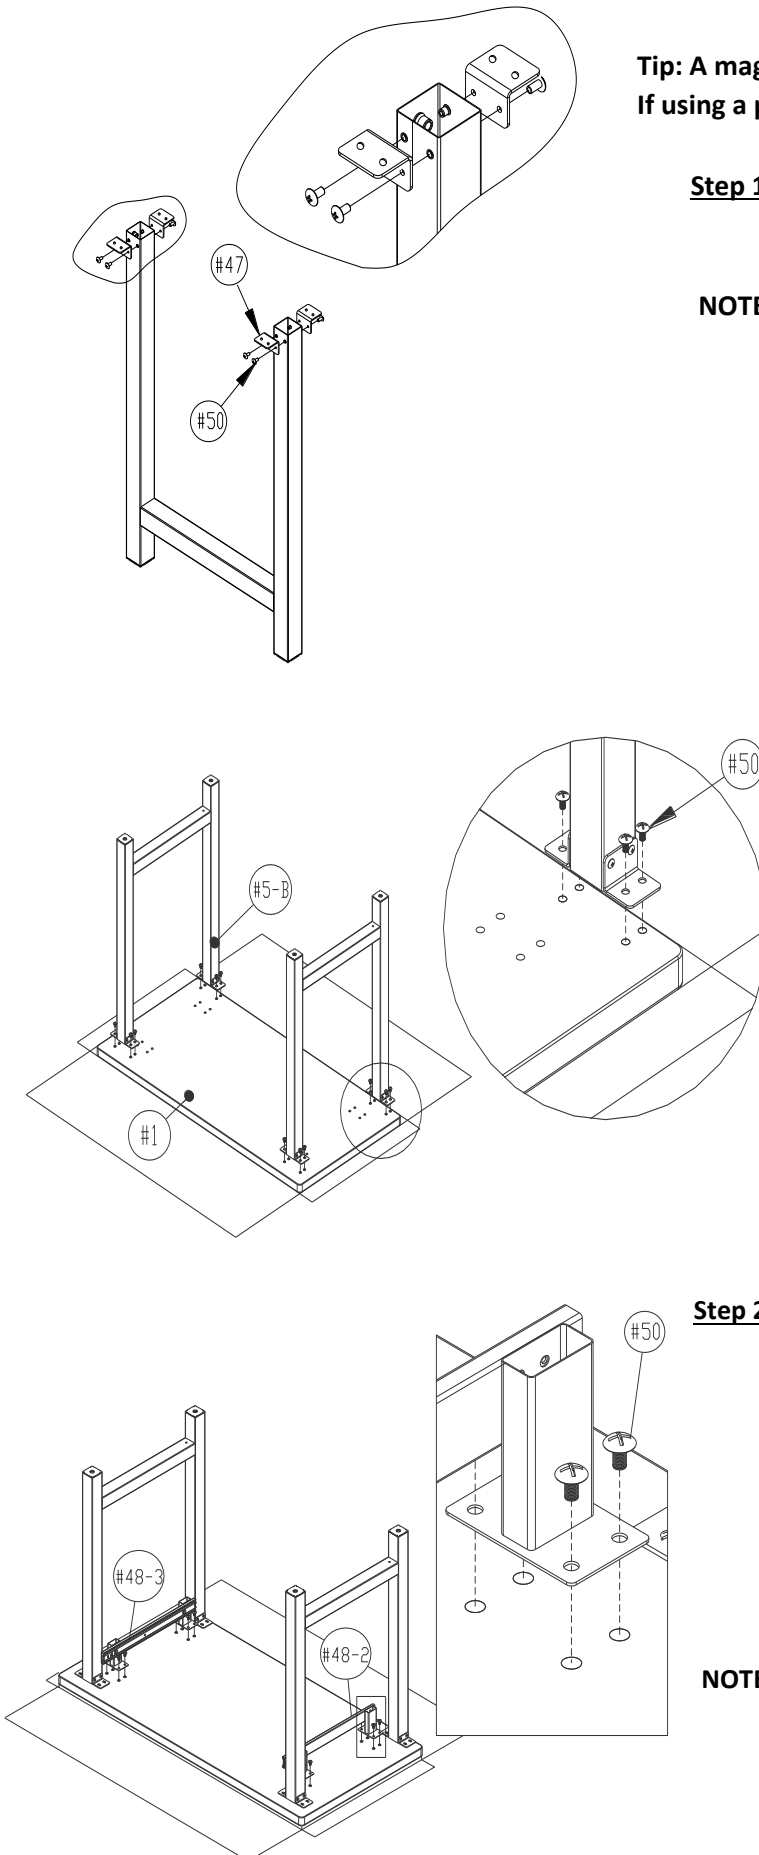

Step 2: Install (#48-2) Drawer Left Support, (#48-3) Drawer Right Support.

Attach the (#48-2) Small Drawer Left Support to the bottom of (#1) Solid Hardwood Board, line up the screw holes, use (#50) Screw I and (#21) Screwdriver to tighten.

Repeat this step to install (#48-3) Small Drawer Right Support.

NOTE: Do not fully tighten the screws. This will help you make any adjustments for alignment.

UltraGraphite™ Mobile Workbench (Model No. WEB484)




***NOTE:** We recommend using TWO people to assemble the workbench.




Step 3: Install (#3-B) Bottom Cross Bar and (#11) Swivel Wheel with Brake & (#13) Swivel Wheel w/o Brake.

Attach the (#3-B) Bottom Cross Bar to the back of (#5) Leg Piece, line up the screw holes, use (#40) Screw E with (#27-B) Washer and (#25) Wrench to tighten.

After installing (#5-B) Leg Pieces, attach (#11) Swivel Wheel with Brake & (#13) Swivel Wheel w/o Brake to (#5-B) Leg Pieces, use Wrench (#25) to tighten.

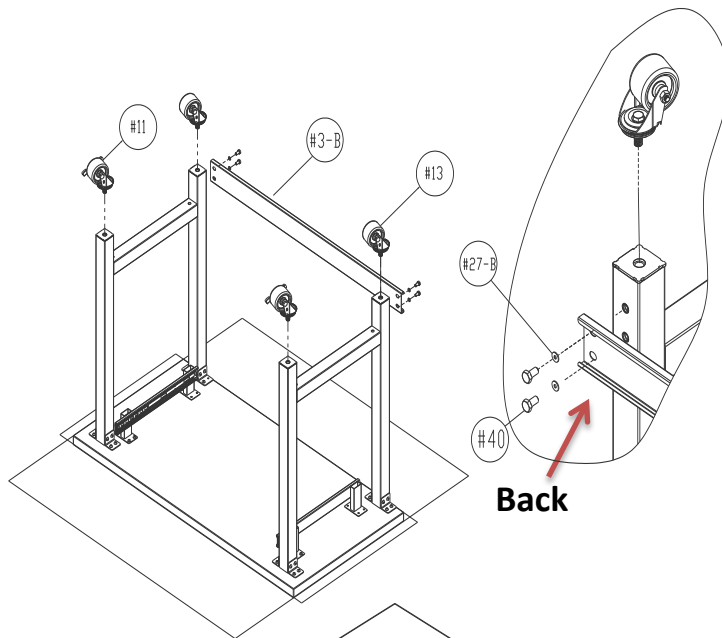

Step 4: Turn the workbench right side up once you finish this step. Step the break of the wheel (#11) as the side photo to stable the workbench.

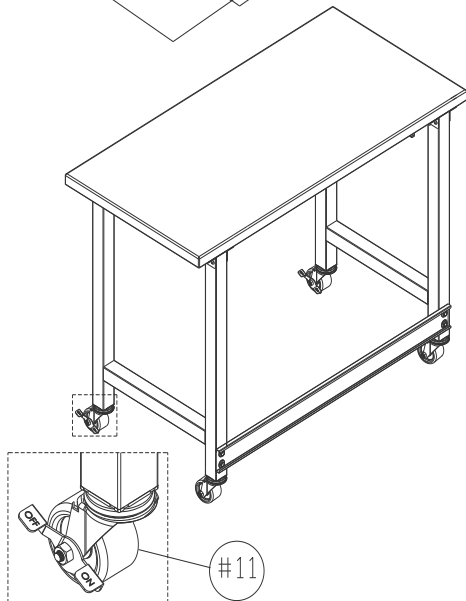


Step 5: Install (#20-3 & #20-4) Left & Right Drawer Side Panels and (#20-5) Drawer Back Panel.

Attach (#20-3 & #20-4) Left & Right Drawer Side Panels and (#20-5) Drawer Back Panel to the (#19-2) Drawer Base Panel. Line up the screw holes and use (#15) Screw B to tighten.

NOTE: Make sure the hook slots on the (#20-5) Drawer Back Panel are facing inward.


NOTE: Do not fully tighten the screws until next step had finish.

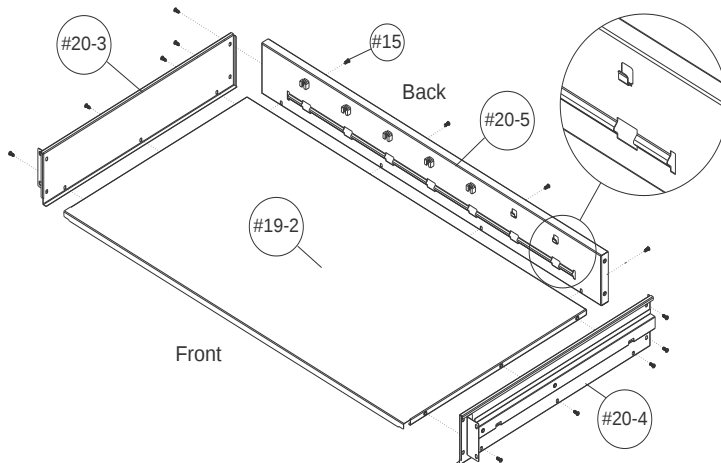

UltraGraphite™ Mobile Workbench (Model No. WEB484)



***NOTE: We recommend using TWO people to assemble the workbench.**

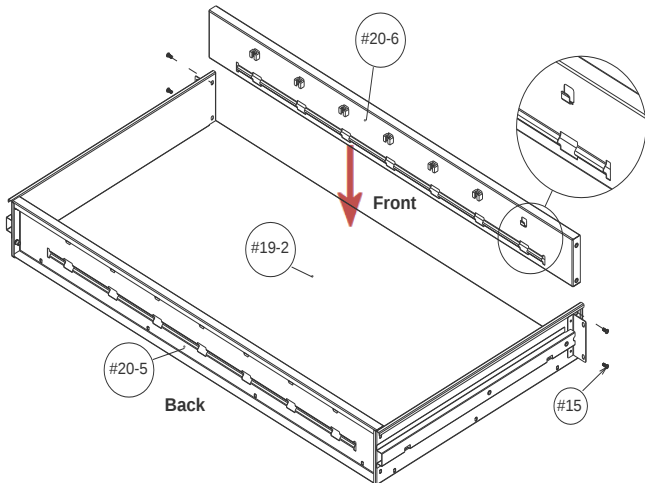


Step 6: Install (#20-6) Drawer Front Panel Support Plate

Attach (#20-6) Drawer Front Panel Support Plate as the left arrow shows. Line up the screw holes and use (#15) Screw B to tighten.


NOTE: Make sure the hook slots on the (#20-6) Drawer Front Panel Support Plate are facing inward.

NOTE: Once you adjust all the parts in position, tighten all screws.

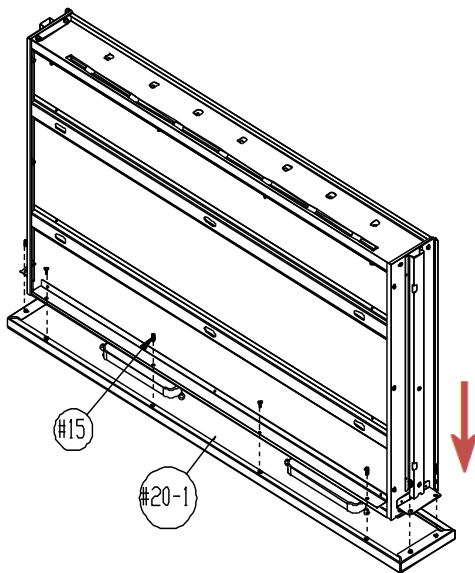

Step 7: Install (#20-1) Drawer Front Panel

Attach the Drawer Case to the (#20-1) Drawer Front Panel. Line up the screw holes and use (#15) Screw B to tighten.

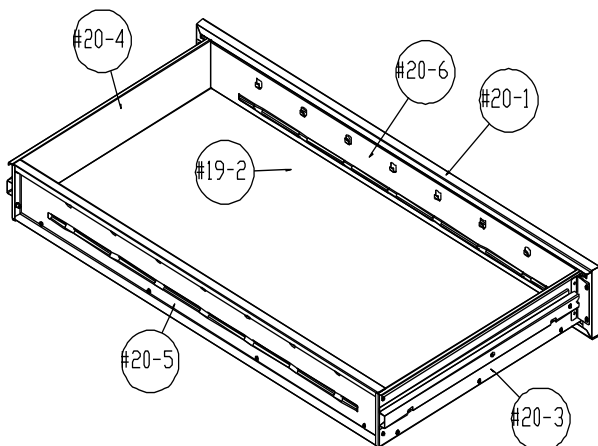


Note: Drawer's maximum loading capacity is 30 lbs to avoid the unit from tipping when drawer is fully extended.

UltraGraphite™ Mobile Workbench (Model No. WEB484)




***NOTE:** We recommend using TWO people to assemble the workbench.

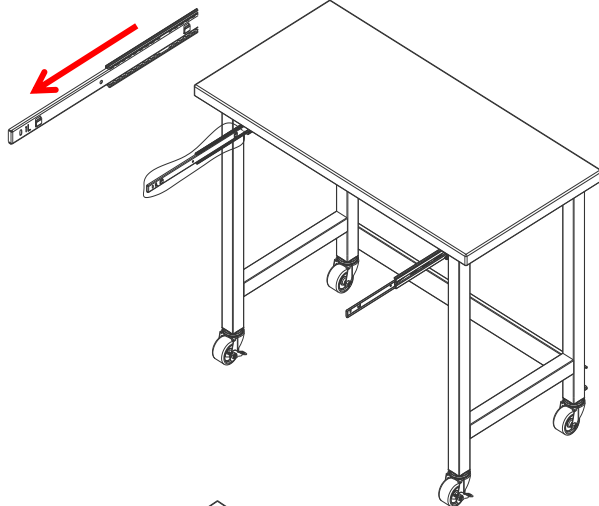


Step 8: Insert Drawer

Pull out the drawer sliders to full length, then attach and fit the Drawer to the inner track of the sliders and slide drawers in.

NOTE: Make sure to remove the rubber guards on the hooks of the inner track before fitting the drawer in.

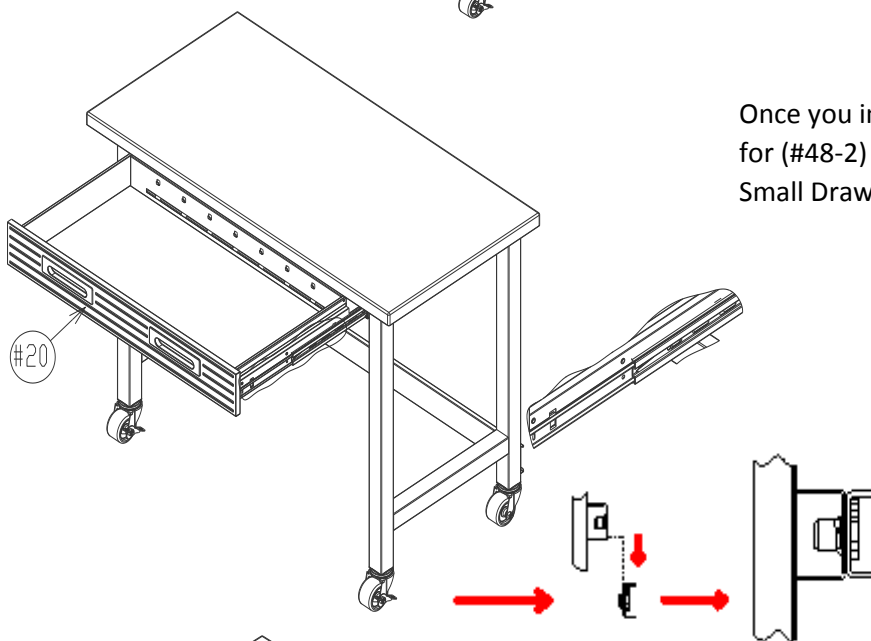

Once you insert the drawers, tighten (#15) Screw B for (#48-2) Small Drawer Left Support and (#48-3) Small Drawer Right Support.

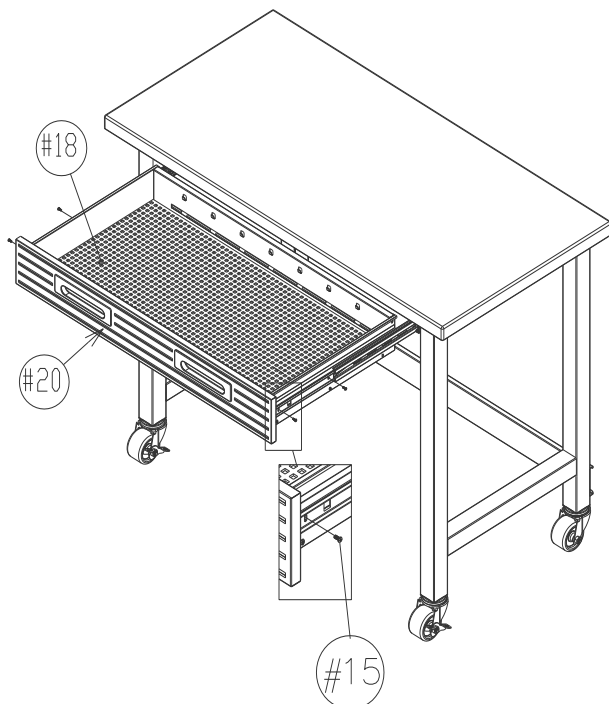


Step 9: Place (#18) Drawer Mat

Insert (#18) Drawer Mats to drawer before (or after) sliding drawer into bench.

UltraGraphite™ Mobile Workbench (Model No. WEB484)



*NOTE: We recommend using TWO people to assemble the workbench.

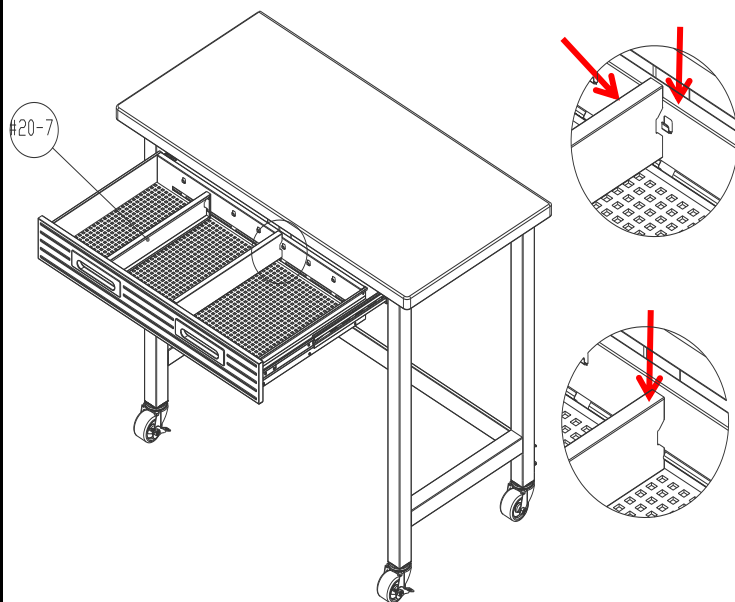

Step 10: Install (#20-7) Drawer Divider

Insert Drawer Divider into the drawer. The solid wall of the divider should be facing the desired slot position. Slide the divider towards the slot, then push down into the slots.

Repeat the above steps to assemble another Drawer Divider.

NOTE: Dividers can be added to the drawer before or after finishing assembly.

How to Remove Dividers

Lift the Drawer Divider up and to the side to remove from the slot.



[!] CAUTION: Potential Shock or Fire Hazard.

This unit is not intended for use in wet or potentially wet locations, such as showers, saunas, under or near fishtanks, sinks, etc.

UltraHD® Wood Top Care Instructions

Our tops are made with real wood, and while great care is taken to ensure consistent top color and graining, there may be natural variations between finished products. We hand select the wood for every top to ensure the material is undamaged and naturally beautiful. If the wood top is received with excessive damage or splitting, Seville Classics will guarantee replacement of the top. Variations of color, and minor scratches in the clear coat finish will not be reason for replacement.

Restore Shallow Scratches or Chips

The wood surface of this product is finished with a polyurethane coat. If the wood top becomes chipped or scratched, a polyurethane coat can be reapplied to restore a smooth texture and protect from future damage.

- Please follow the manufacturer's instruction on the product for application.

CONTACT INFORMATION


If you are missing any parts, have any questions, or need additional assistance in assembly, please contact our bilingual (English and Spanish) customer service department at:




Seville Classics, Inc.
19401 Harborage Way Torrance, CA 90501 USA
Telephone: (800) 323-5565 within USA
Fax: (310) 533-3899
Hours: 9:00am - 4:30pm (Pacific Standard Time)
E-mail: support@sevilleclassics.com
Website & Online Store: www.sevilleclassics.com

*****Please visit our website or call and inquire about our additional UltraHD Line*****

UltraHD® Line

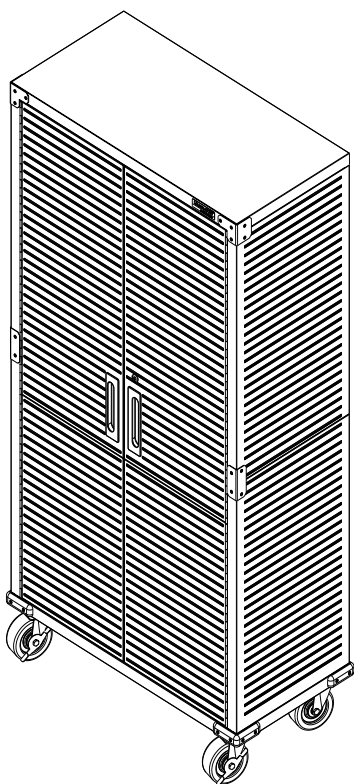


UltraHD® Tall Storage Cabinet
Model No. 16236 (Granite)
Model No. 20143 (Graphite)
Model No. 20153 (Red)
Model No. 20133 (White)

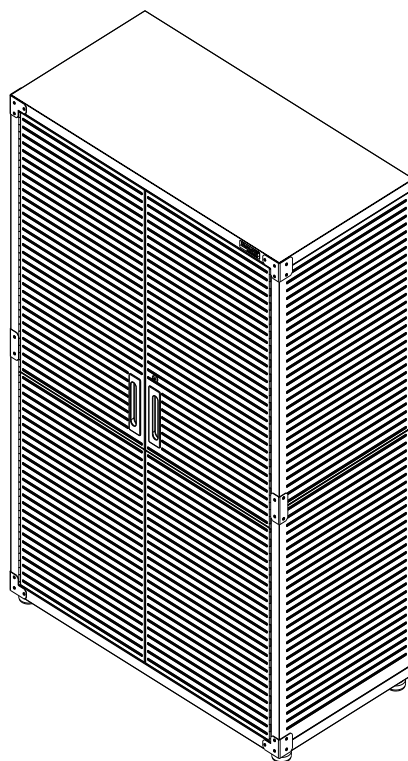


UltraHD® Mega Storage Cabinet
Model No. 16238 (Granite)
Model No. 20148 (Graphite)
Model No. 20158 (Red)


UltraHD® Line

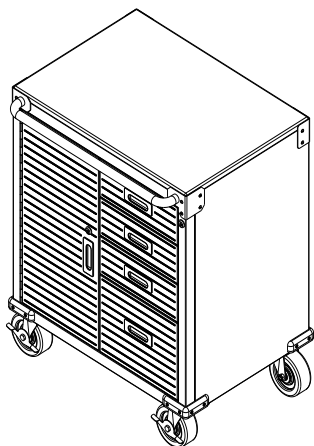


UltraHD® 4-Drawer Rolling Cabinet
Model No. 20205 (Granite)

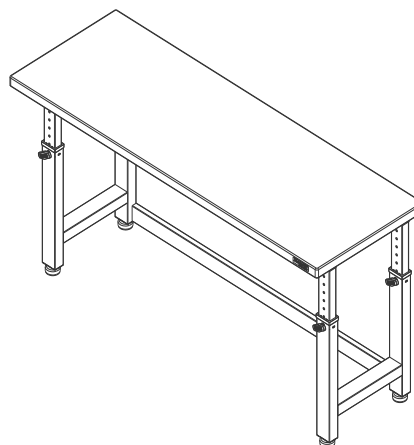


UltraHD® 6-Foot Height Adjustable Workbench
Model No. 20292 (Granite)
Model No. 20293 (Graphite)

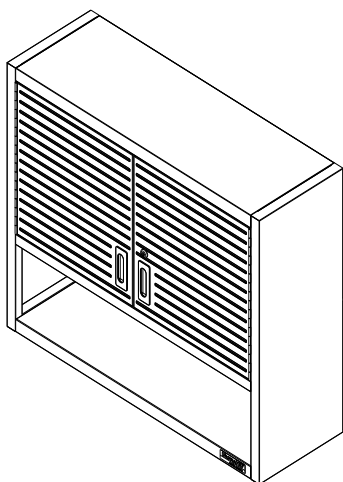


UltraHD® Wall Cabinet with Open Shelf
Model No. 20230 (Granite)
Model No. 20140 (Graphite)
Model No. 20150 (Red)

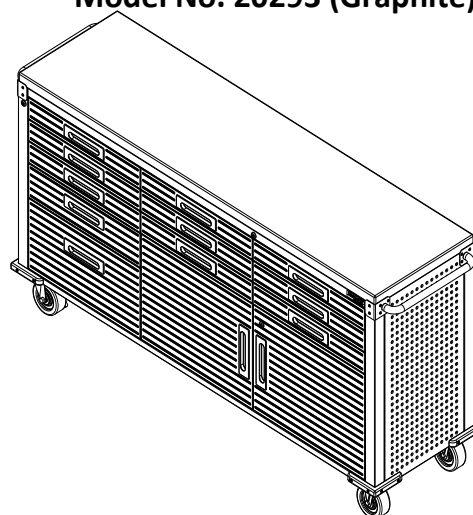

UltraHD® 2-Door Rolling Workbench
Model No. 20262 (Granite)
Model No. 20142 (Graphite)
Model No. 20152 (Red)

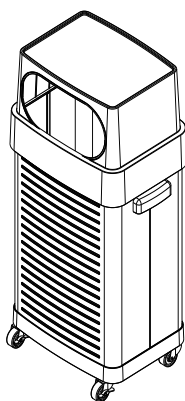

UltraHD® Rolling Trash Bin
Model No. 20215

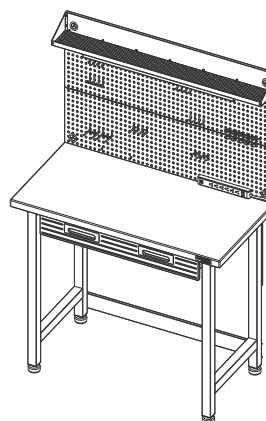

UltraHD® Lighted Workcenter
Model No. 20247 (Granite)
Model No. 20246 (Graphite)
Model No. 20157 (Red)