


ASSEMBLY INSTRUCTIONS:

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A FLAT SURFACE AND LINE THEM UP AS PER THE SKETCH.
2. SCREW SOCKET SECTION (B) INTO LAMP BODY (A), AND PULL WIRE OUT.
3. INSERT HARP (D) INTO SADDLE OF SOCKET SECTION (B).
4. SCREW BULB (C) INTO SOCKET OF SOCKET SECTION (B).
5. INSTALL SHADE (E) ONTO HARP (D), THEN SECURE WITH FINIAL (F), AND ADJUST THE BALANCE OF SHADE.
6. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

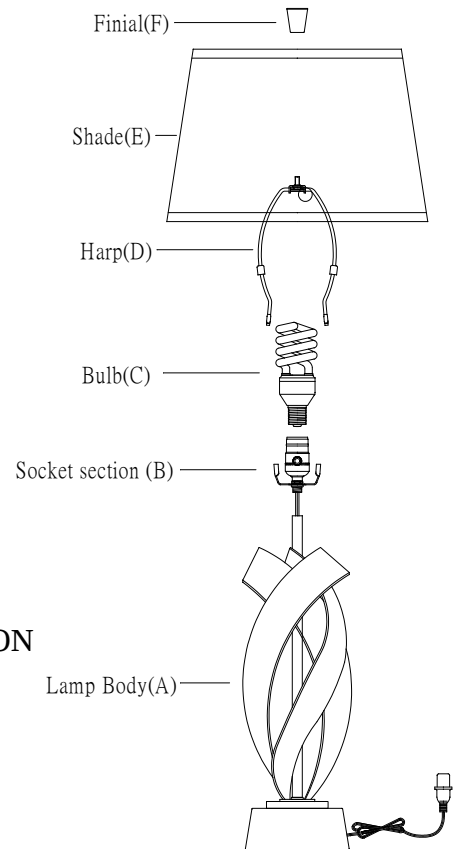

USE A 23W CFL TYPE BULB OR 100W (MAXIMUM) INCANDESCENT A TYPE BULB.

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

ATTENTION

POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT

- ※ PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.
- ※ SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.