



Step 1: Using a mortise and tenon joint, connect the **Top Wood Stand** to the **Bottom Wood Stand**.

Note: Ensure that the **bevel angle** on the Top Wood Stand is on the same side as the **higher pilot hole** on the Bottom Wood Stand.




Step 2: Use 3 black screws to secure the joint of the **Top Wood Stand** and the **Bottom Wood Stand**.



Step 3: Connect the Bottom **Wood Stand** to the **Foot Stand** using a mortise and tenon joint, then screw them together.



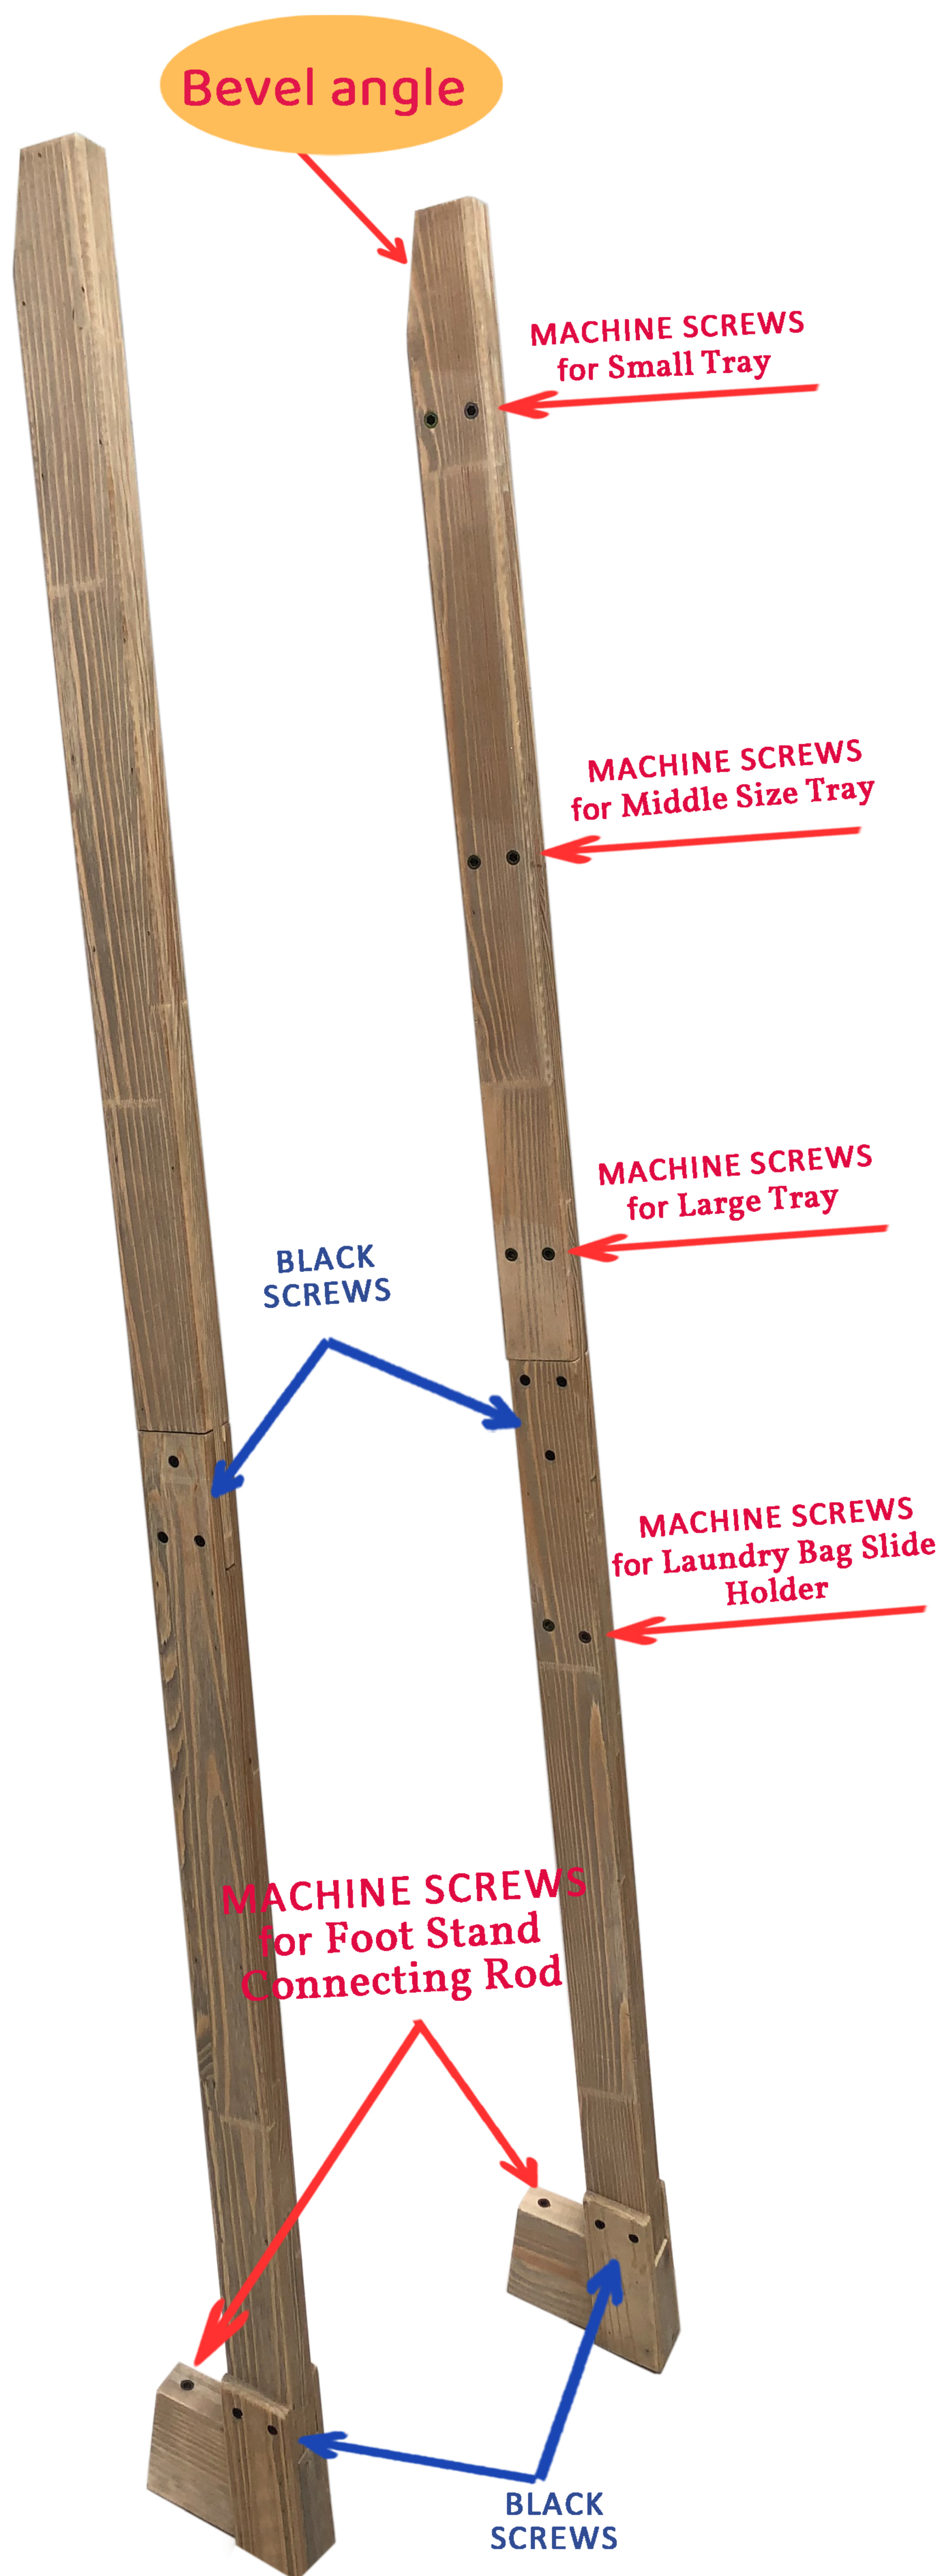

Step 4: Place the **Small Tray** between the two **wood stands**, positioning it as shown in the left image. Then, screw it into place.



Step 5: Place the **Middle Size Tray** between the two **Wood Stands**, positioning it as shown in the left image. Then, screw it into place.



Step 6: Place the **Large Tray** between the two **Wood Stands**, positioning it as shown in the left image. Then, screw it into place.