
27D09 SHOWER DOOR INSTALLATION INSTRUCTIONS


1

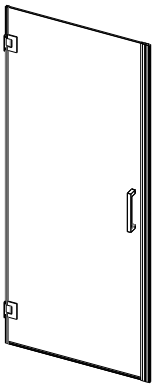

D + P01 + P03 + P05

PAGE
05-13


2

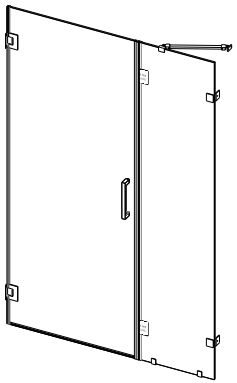

D + G + P01 + P03 + P05

PAGE
14-25


3

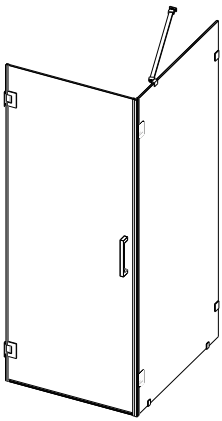

D + G + P01 + P03 + P05

PAGE
26-37

4

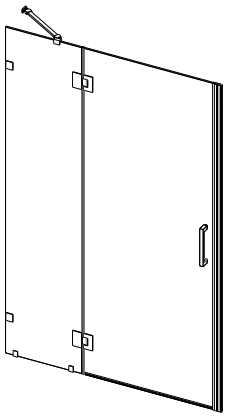

D + G + P01 + P04 + P05

PAGE
38-48

GENERAL INFORMATION


Please inspect the product immediately upon receipt for any shipping damage, missing hardware packs or parts, or manufacturing defects. Any damage or missing parts must be reported before installation. Claims submitted after installation may not be accepted. Handle the product with care and avoid striking or applying excessive force to the glass surfaces, edges, or corners.

WARNING: DO NOT CUT OR DRILL TEMPERED GLASS


Before drilling into any wall, check for concealed plumbing pipes, electrical wiring, and other utilities. This product is heavy. Two people are recommended for installation.

CARE AND MAINTENANCE

Clean the shower door after each use with mild soap and water. Do not use abrasive cleaners or harsh chemicals, as they may damage the glass and hardware. Use glass cleaner with caution and follow the manufacturer's instructions. Keep these instructions for future reference.

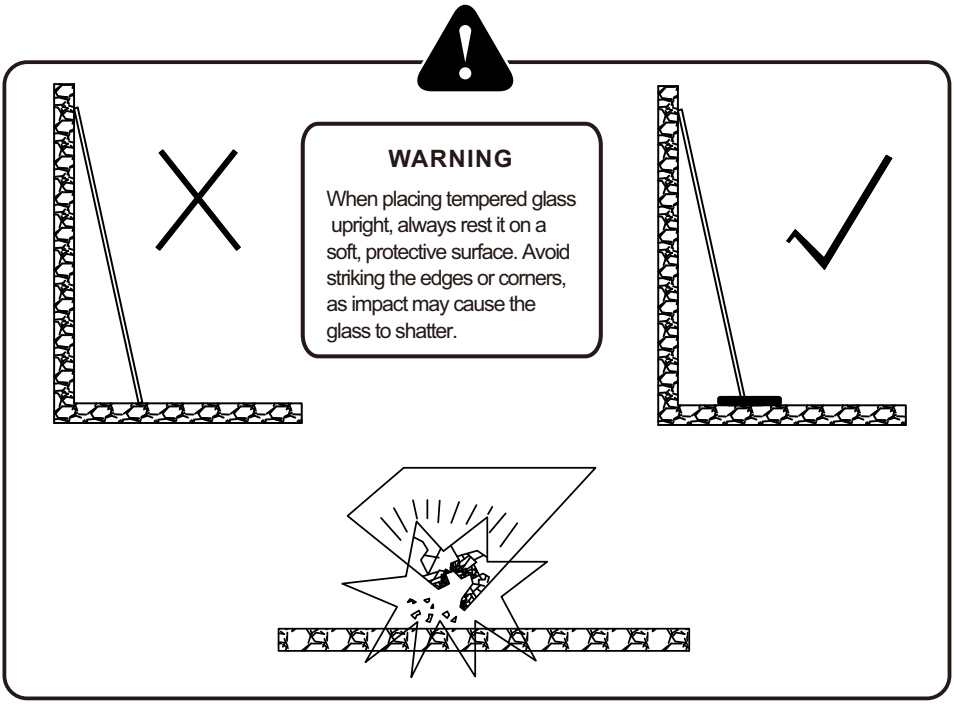


REQUIRED TOOLS - NOT INCLUDED

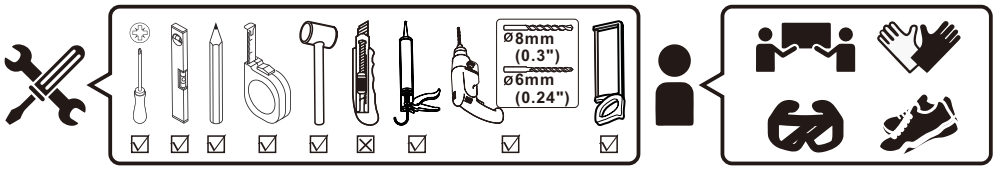

Box -D





[01] x1
Swing Panel



Shim x 2

Box -G

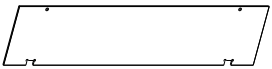


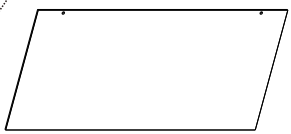


[02] x1
Fixed Panel

*Pre-drilled holes for decorative glass cover [05] only available on 6", 12", 18", and 30" fixed panels.

Box -P01

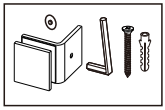


[03] x2
Wall Clamp

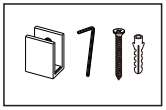


[04] x2
Floor Clamp



[05] x2
Decorative
Glass Cover




[06] x1
Handle

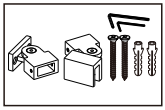

[07] x1
Support Bar
Hardware Kit




[08] x3
Wall Anchor




[09] x3
Screw

Box -P02

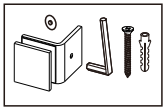


[03] x4
Wall Clamp

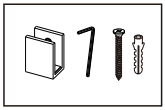


[04] x4
Floor Clamp



[05] x2
Decorative
Glass Cover




[06] x1
Handle

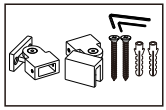

[07] x2
Support Bar
Hardware Kit


Box -P03

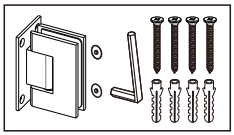

[10] x 2

Glass-to-Wall Hinge


Box -P04

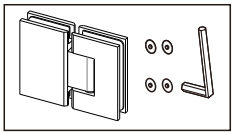


[11] x 2

Glass-to-Glass Hinge

Box -P05



[12] x1
Bottom Sweep




[13] x3
Side Door Seal



[14] x2
Magnetic Door Seal




[15] x1
Wall Profile




[16] x1
Support Bar

1

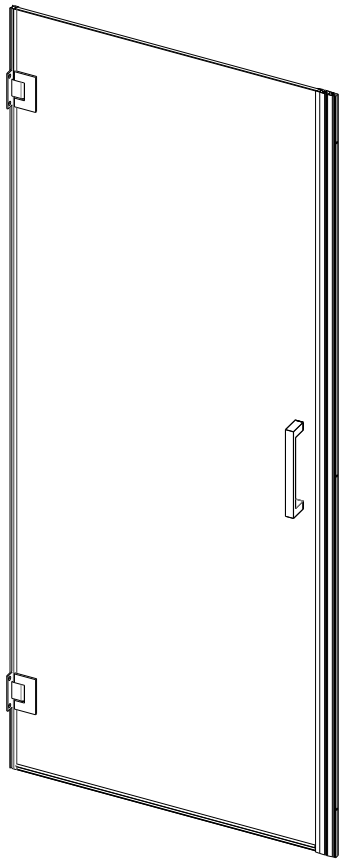



D + P01
+ P03 + P05


D + P01 + P03 + P05

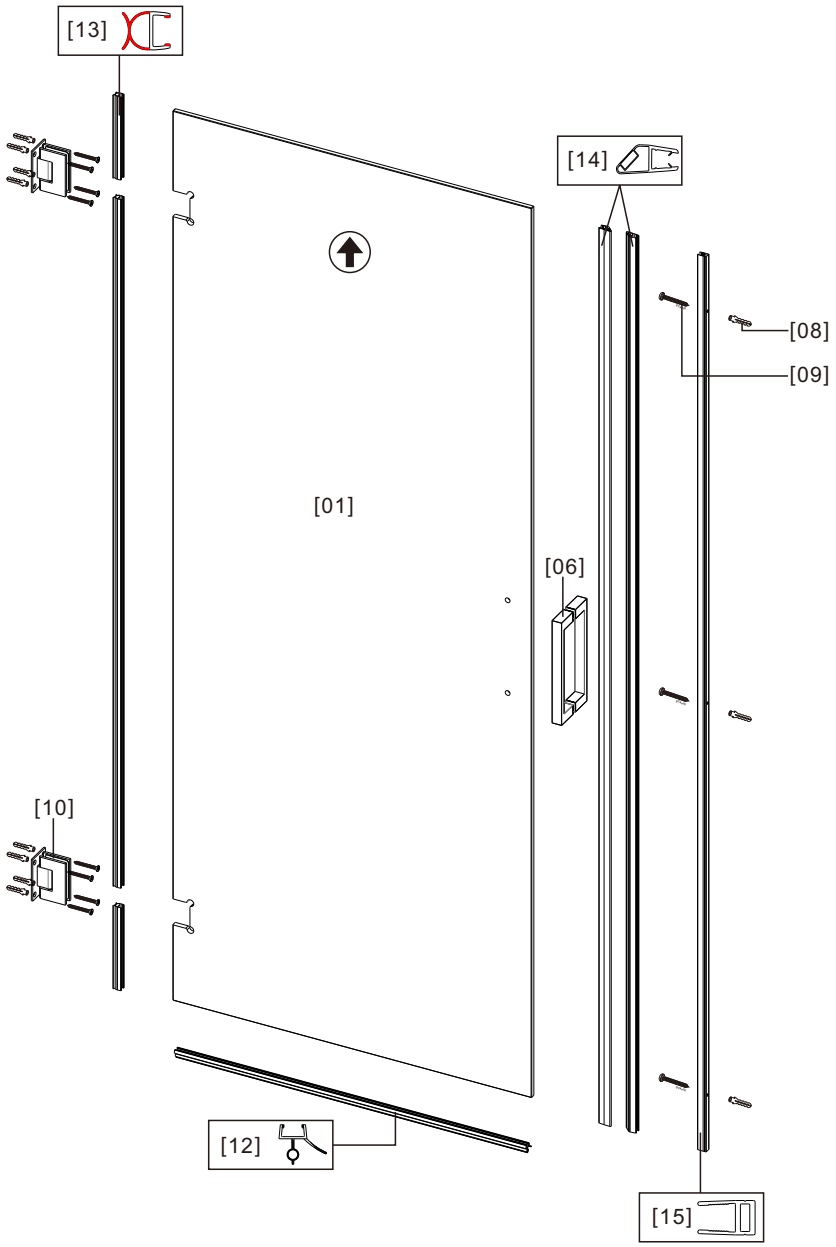

01

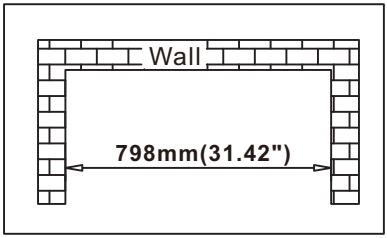

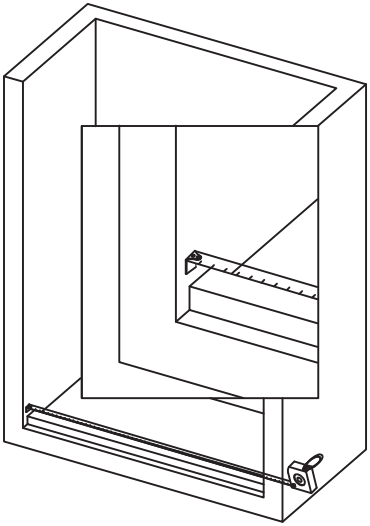


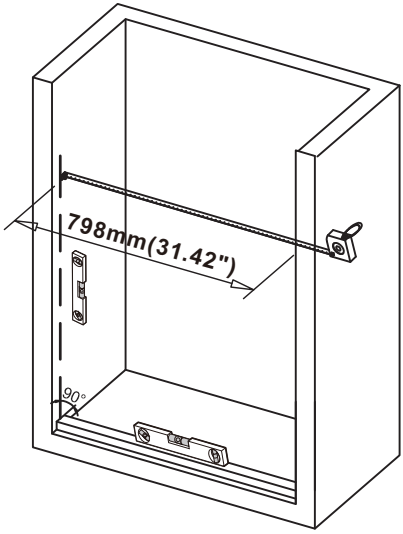


Ensure that the walls are plumb and the floor or shower base is level. The required installation width is 798 mm (31.42").


02

The **Swing Panel [01]** is reversible for left- or right-hand installation.

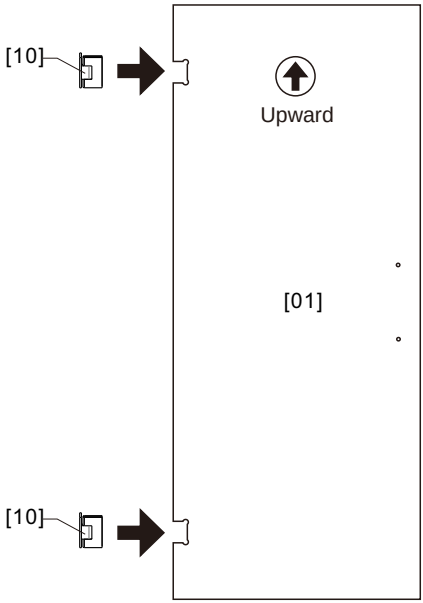

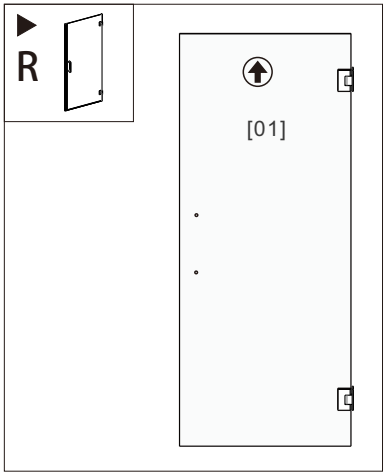


Repeat for both hinges.

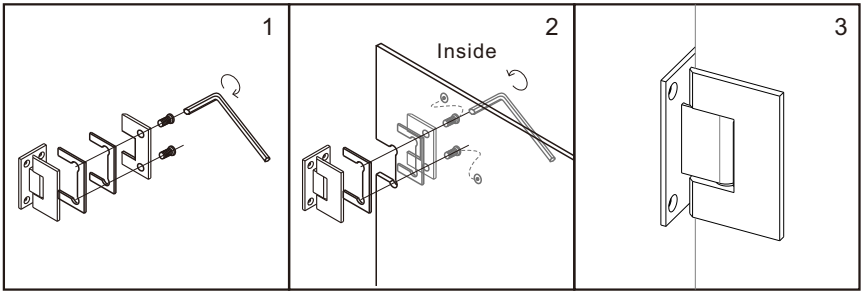


1. Use an Allen key to disassemble the **Glass-to-Wall Hinge [10].**

2. Install **Glass-to-Wall Hinge [10]** onto **Swing Panel [01]**, keeping the edge of the hinge parallel with the glass. Tighten the screws and install the screw caps. For left- or right-hand installation, flip the glass panel as required.

03

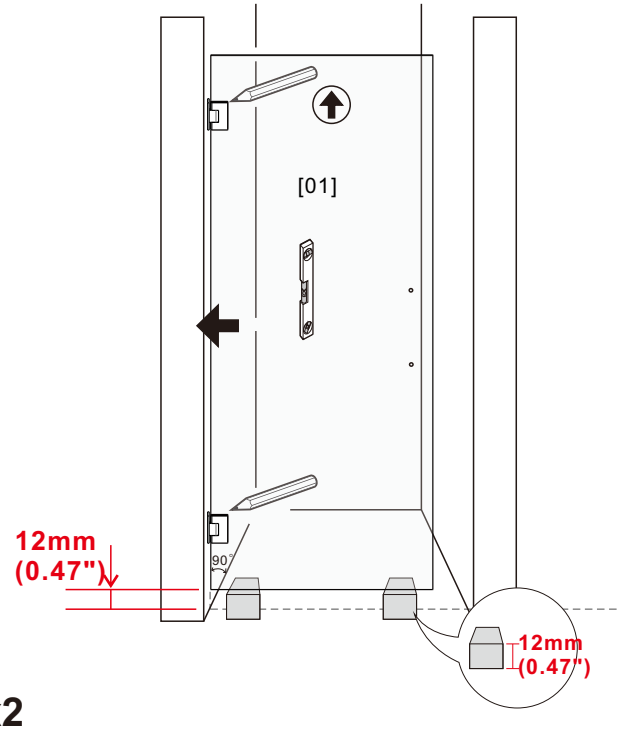

x2

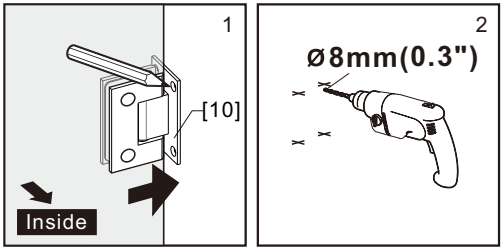


1. Position the **Swing Panel [01]** at the desired location. Place **Shims** under the panel, hold it against the wall, and mark the hinge holes with a pencil.


2. Drill holes at the marked locations using an 8 mm (0.3") drill bit.

3. Insert the 8 mm anchors.

4. Secure the **Glass-to-Wall Hinge [10]** to the wall using the supplied screws.

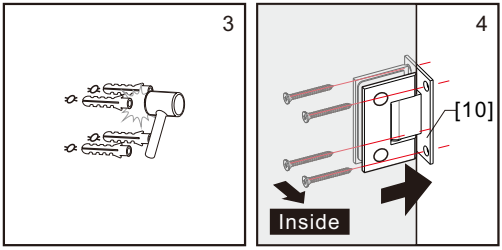

04

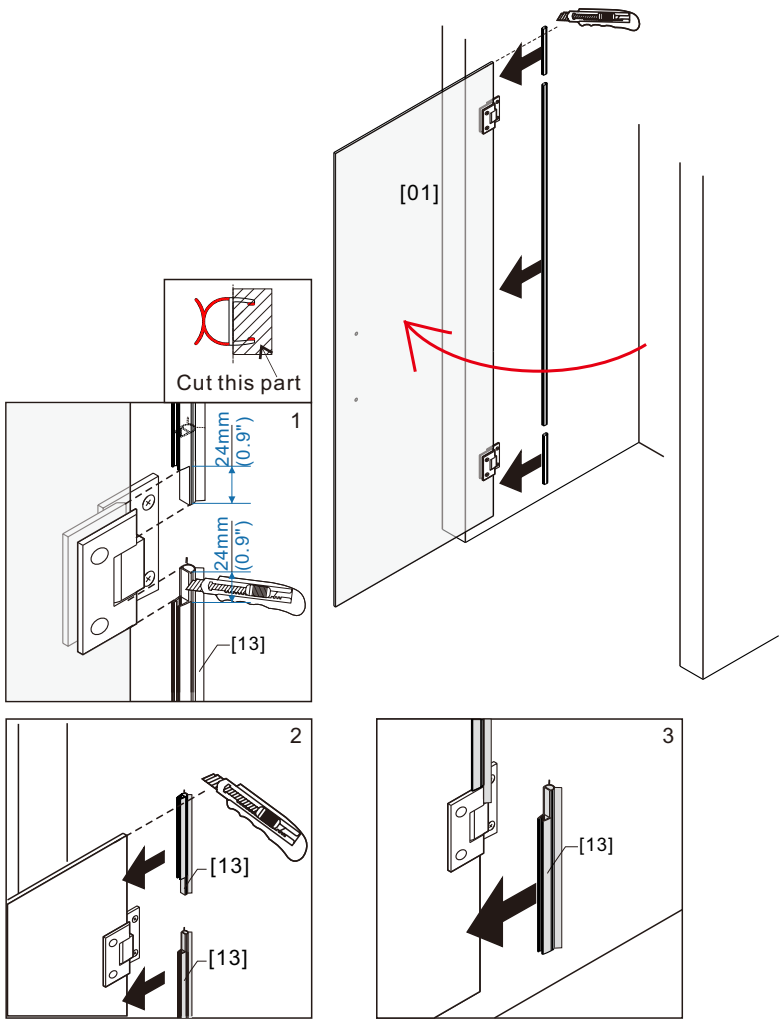


1. **Side Door Seal [13]** comes in three pieces: two short seals and one long seal. Trim off 24 mm (0.9") section where the seal fin overlaps the hinge from one end of each short strip and from both ends of the long strip, as shown in Fig. 1.


2. Press **Side Door Seal [13]** onto the **Swing Panel [01]**, align the cutouts with the hinges, and trim the upper seal flush with the top edge of the glass.


3. Install the remaining **Side Door Seal [13]** onto the lower section of the panel. Align the bottom of the seal with the floor or shower base.


05

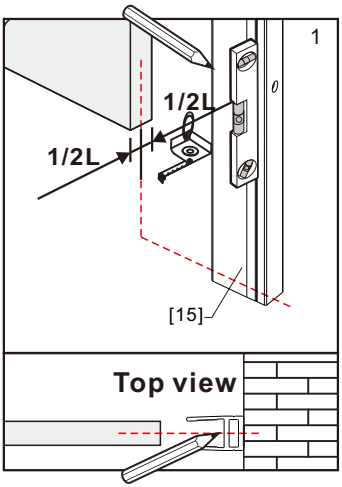


Align the centerline of **Wall Profile [15]** with the panel centerline.

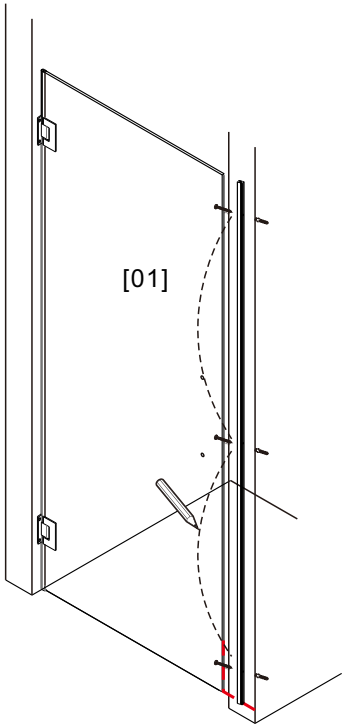

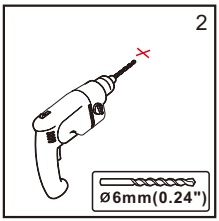

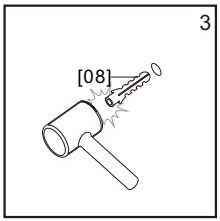

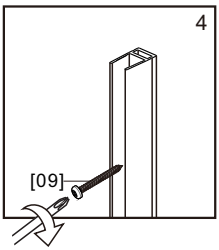


1. Close the **Swing Panel [01]** and make sure it is perpendicular to the wall. Align the centerline of **Wall Profile [15]** with the panel centerline, check that it is plumb with a level, then position it against the wall and mark the mounting-hole locations through the holes in the profile.

2. Drill holes at the marked locations using a 6 mm (0.24") drill bit.

3. Insert the 6 mm anchors.

4. Secure the **Wall Profile [15]** to the wall using the supplied ST4 × 30 mm screws.

06

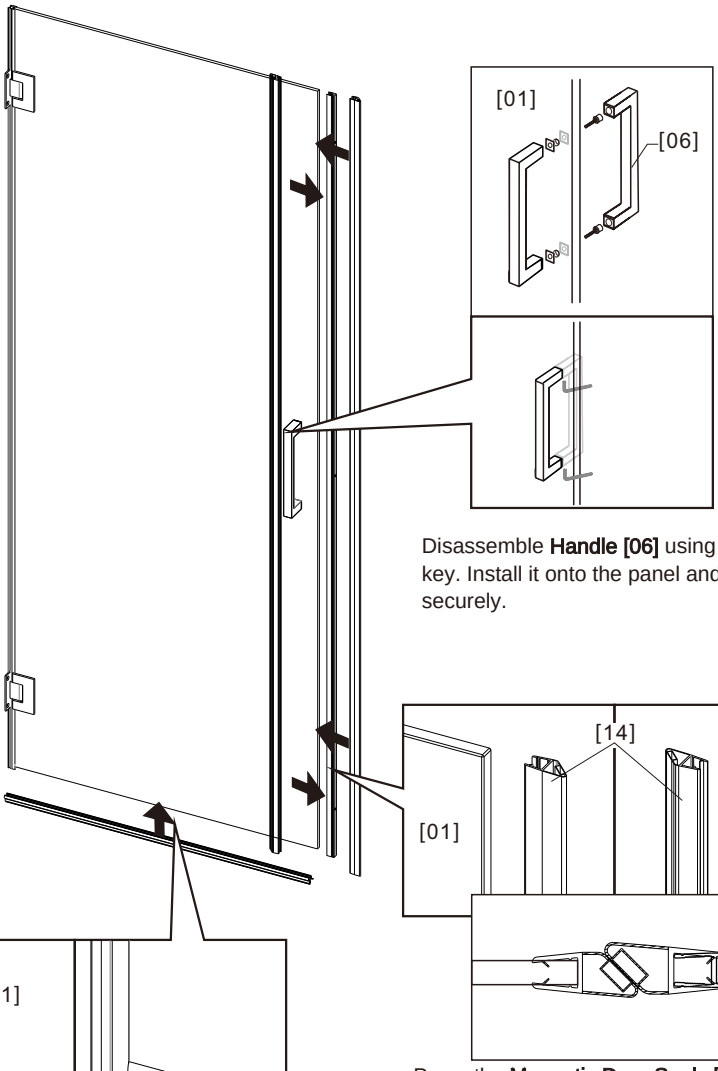


Disassemble **Handle [06]** using an Allen key. Install it onto the panel and tighten securely.

Press the **Magnetic Door Seals [14]** onto the **Swing Panel [01]** and the **Wall Profile [15].**

Press **Bottom Sweep [12]** onto the bottom edge of the swing panel. Make sure the sweep is facing the correct direction.


07

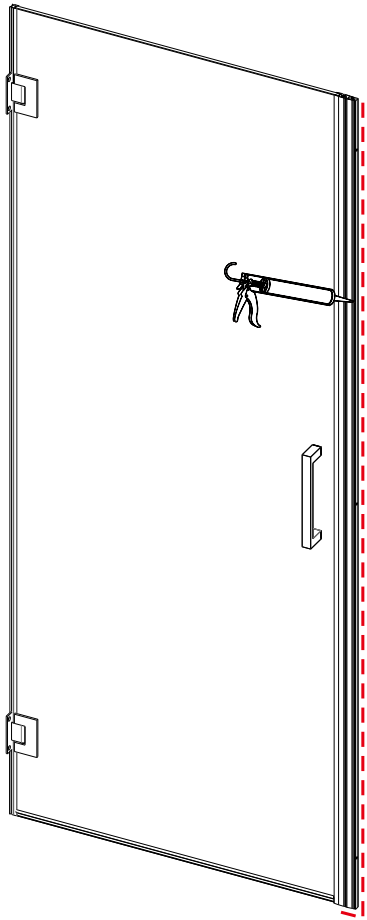




Apply silicone sealant along the outside joints where the **Wall Profile [15]** meets the wall and floor/shower base. Allow 24 hours to cure before using the shower.

2

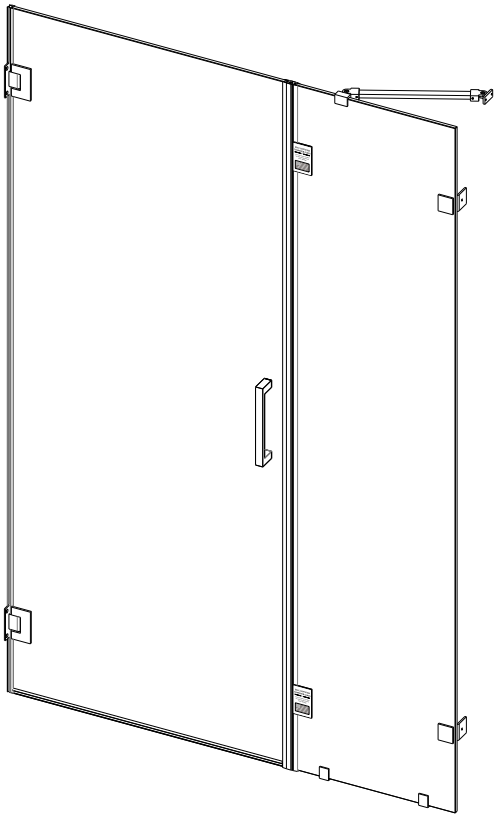


D + G + P01
+ P03 + P05

D + G + P01 + P03 + P05

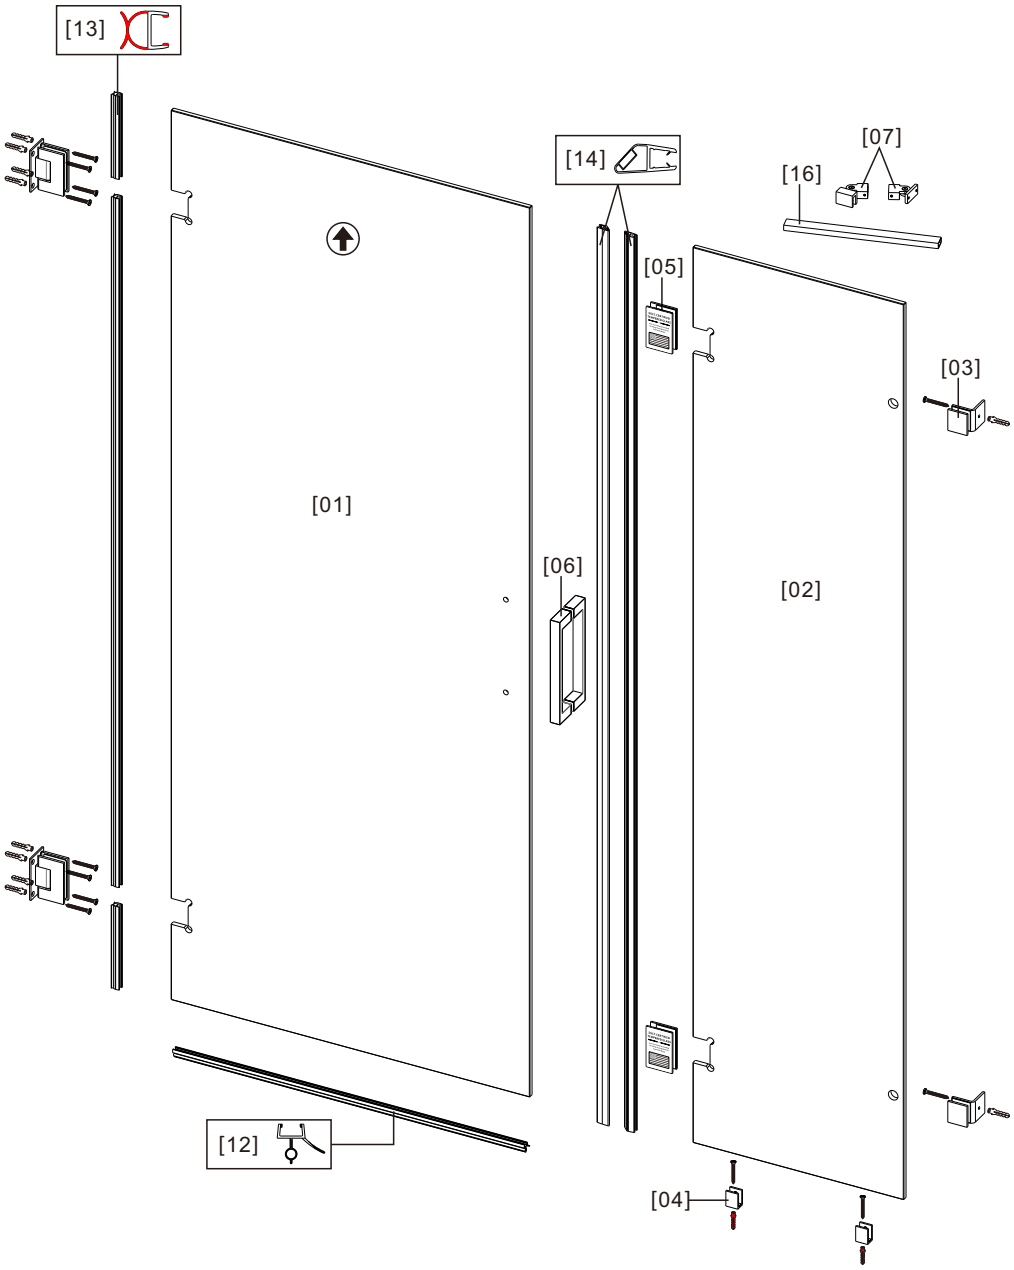


01


Installation size W / D / G	30"
6"	914mm(36")
12"	1067mm(42")
18"	1219mm(48")
30"	1524mm(60")
32"	1575mm(62")
36"	1676mm(66")

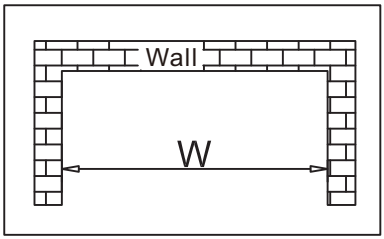

Ensure walls are plumb and floor/shower base is level. Refer to the table above for the required installation width (W).


D = Swing Panel [01]
W = Required Installation Width
G = Fixed Panel [02]

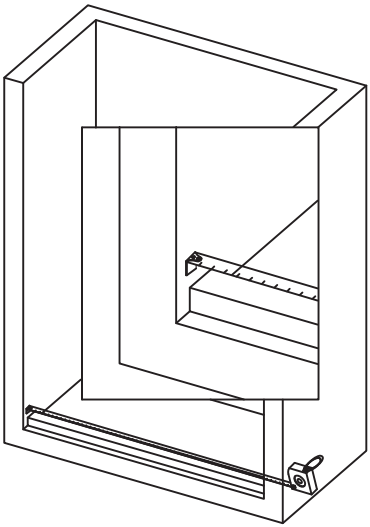


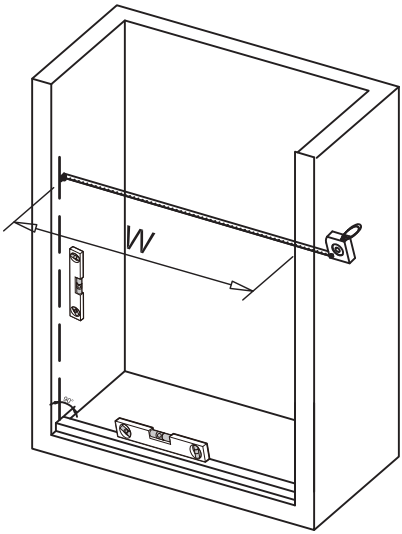


02

The **Swing Panel [01]** is reversible for left- or right-hand installation.

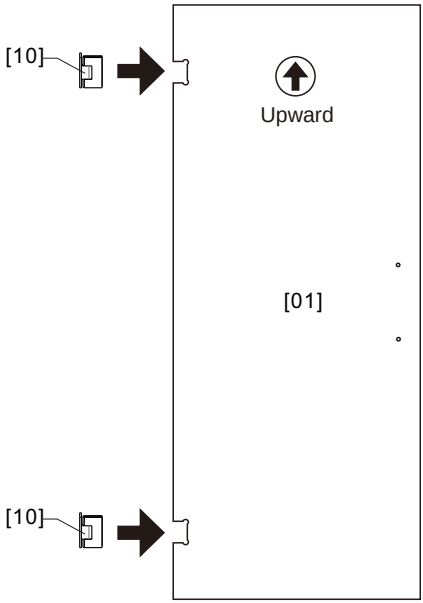

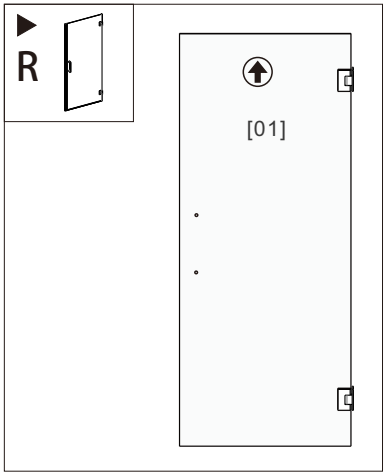


Repeat for both hinges.

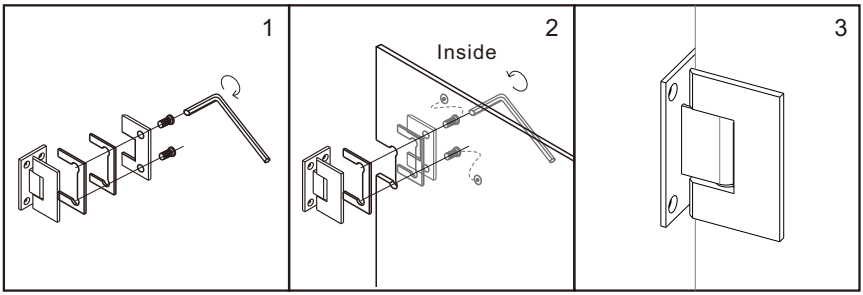


1. Use an Allen key to disassemble the **Glass-to-Wall Hinge [10].**


2. Install **Glass-to-Wall Hinge [10]** onto **Swing Panel [01]**, keeping the edge of the hinge parallel with the glass. Tighten the screws and install the screw caps. For left- or right-hand installation, flip the glass panel as required.

03

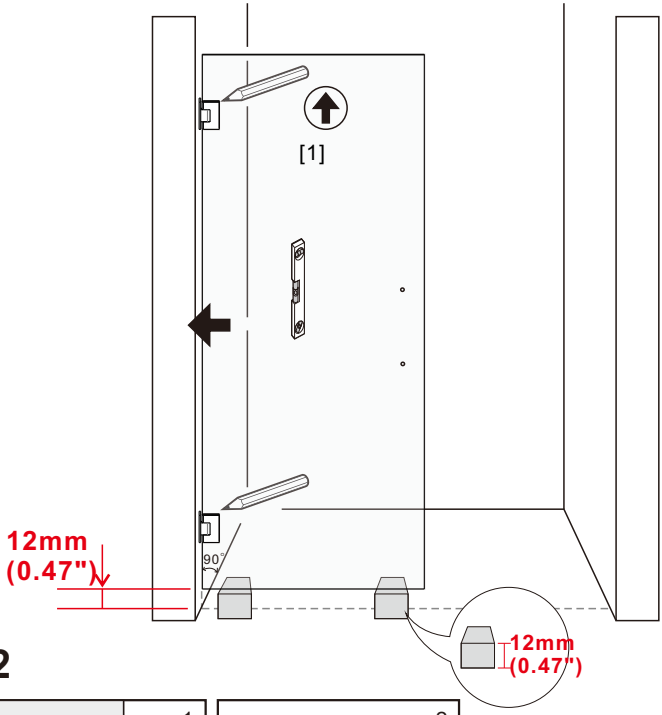

x2

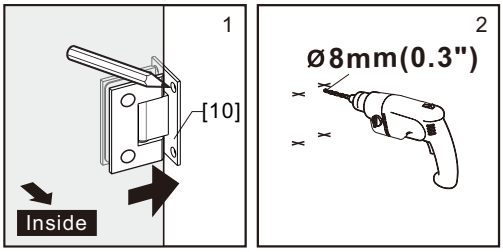

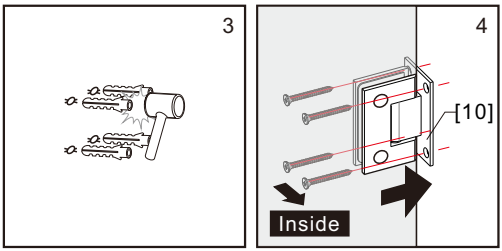


1. Position the **Swing Panel [01]** at the desired location. Place **Shims** under the panel, hold it against the wall, and mark the hinge holes with a pencil.

2. Drill holes at the marked locations using an 8 mm (0.3") drill bit.

3. Insert the 8 mm anchors.

4. Secure the **Glass-to-Wall Hinge [10]** to the wall using the supplied screws.

04

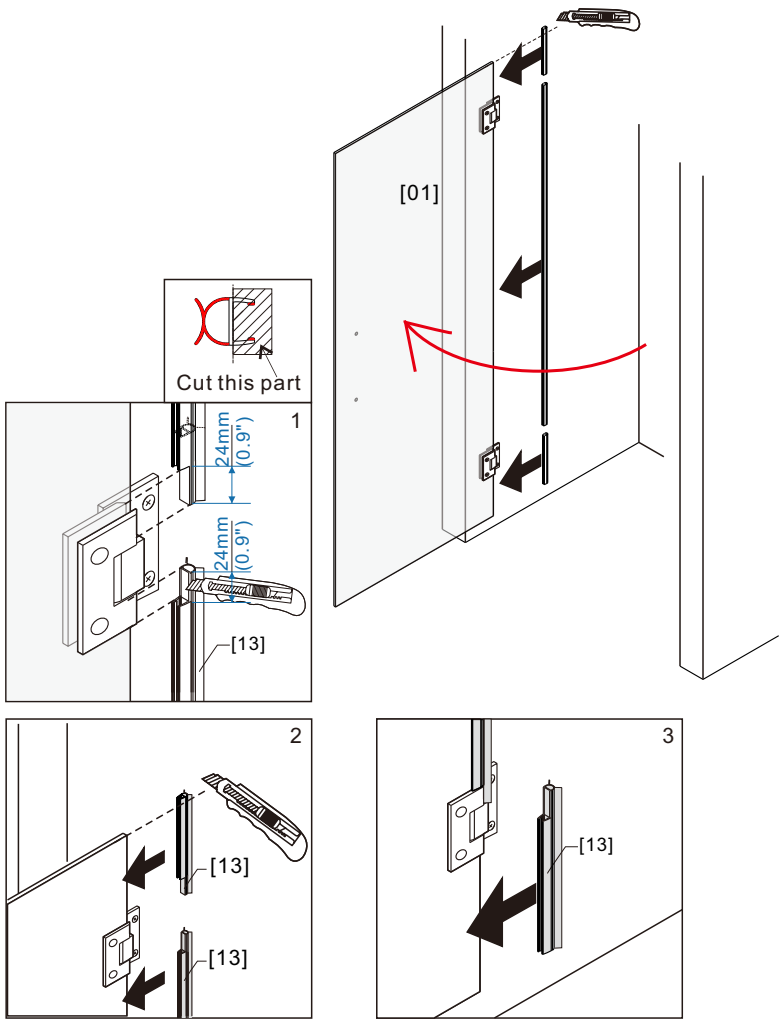



1. **Side Door Seal [13]** comes in three pieces: two short seals and one long seal. Trim off 24 mm (0.9") section where the seal fin overlaps the hinge from one end of each short strip and from both ends of the long strip, as shown in Fig. 1.


2. Press **Side Door Seal [13]** onto the **Swing Panel [01],** align the cutouts with the hinges, and trim the upper seal flush with the top edge of the glass.


3. Install the remaining **Side Door Seal [13]** onto the lower section of the panel. Align the bottom of the seal with the floor or shower base.

05

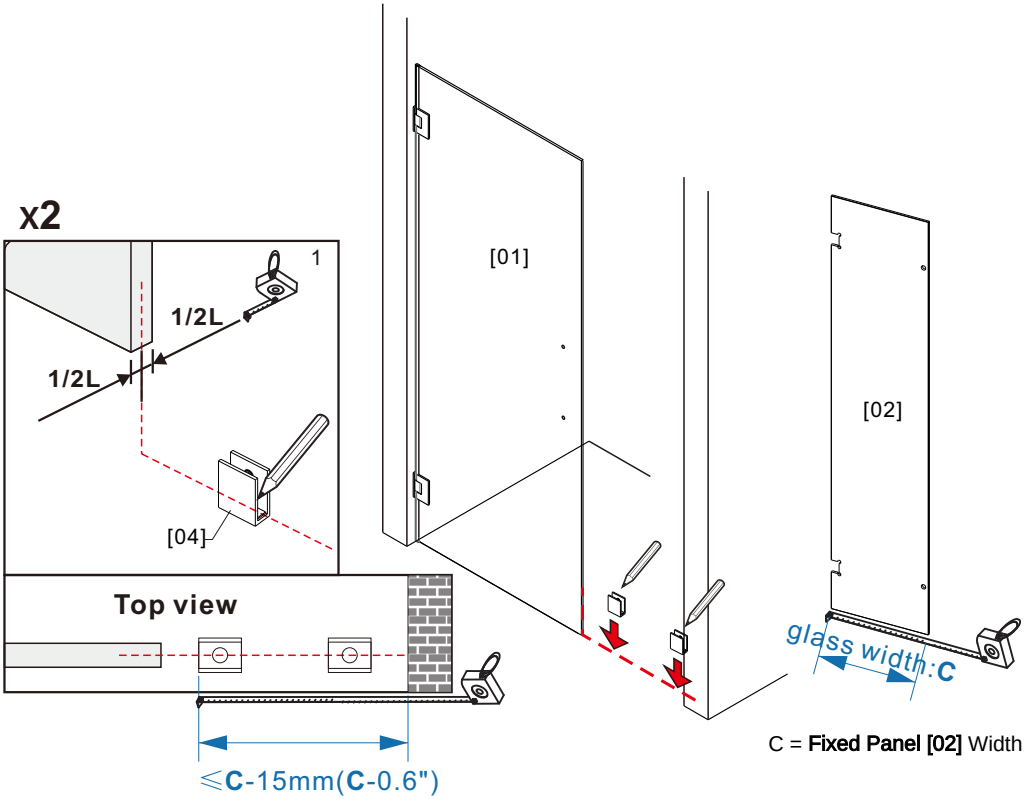

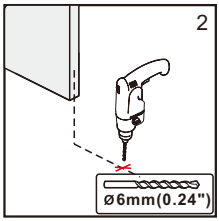

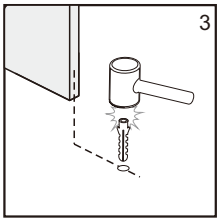

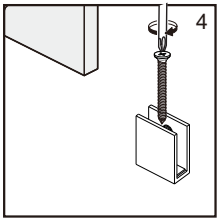


1. Close the **Swing Panel [01]** perpendicular to the wall. Align the center holes of the two **Floor Clamps [04]** with the panel centerline. The distance from the wall to the outer edge of the farthest floor clamp must not exceed C - 15 mm (C - 0.6"), where C is the width of **Fixed Panel [02]**. Mark the mounting-hole locations through the clamp holes on the floor or shower base.


2. Drill holes at the marked locations using a 6 mm (0.24") drill bit.


3. Insert the 6 mm anchors.


4. Secure the **Floor Clamps [04]** using the supplied screws.

06

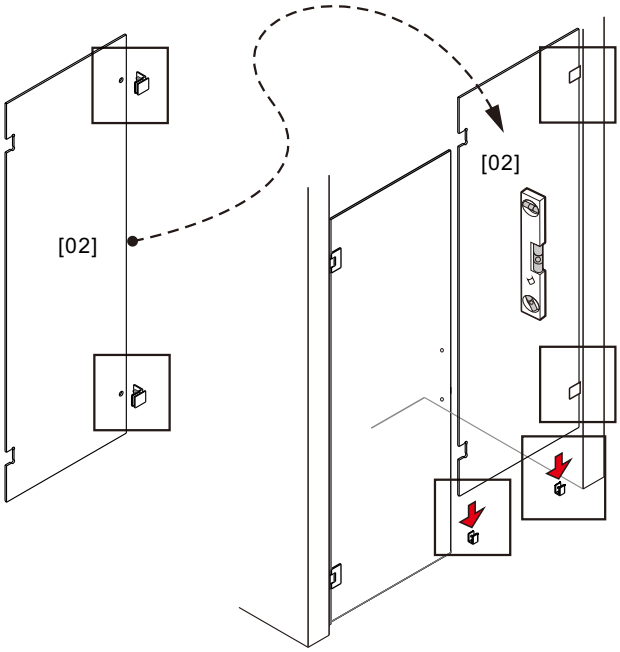

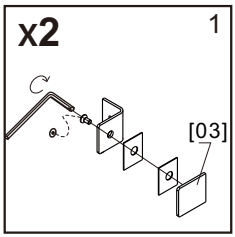

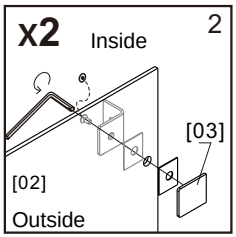


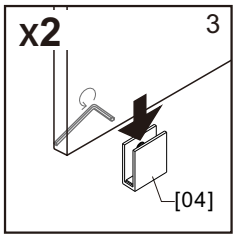



1. Disassemble **Wall Clamps [03].**

2. Install the two clamps onto **Fixed Panel [02]** with correct inside/outside orientation.

3. Place the Fixed Panel into position, secure it in the clamps, and tighten with an Allen key.

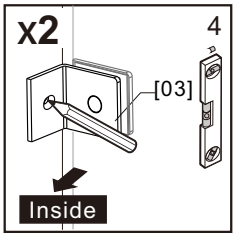

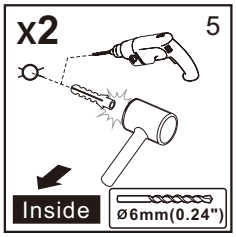

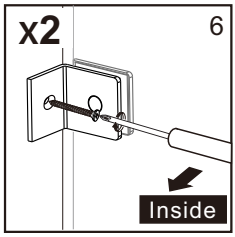


4. Use a level to make sure the **Fixed Panel [02]** is plumb. Mark the mounting-hole locations on the wall through the holes in the Wall Clamps **[03].**


5. Drill the marked locations using a 6 mm (0.24") drill bit, and insert the 6 mm anchors.

6. Secure the clamps using the supplied screws.


07

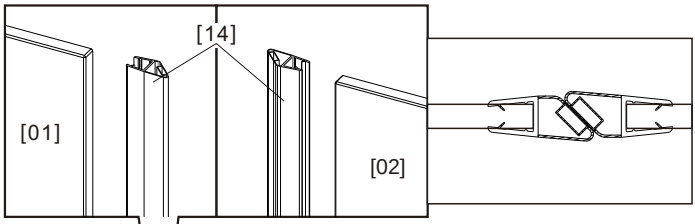

Press the **Magnetic Door Seals [14]** onto the **Swing Panel [01]** and the **Fixed Panel [02].**

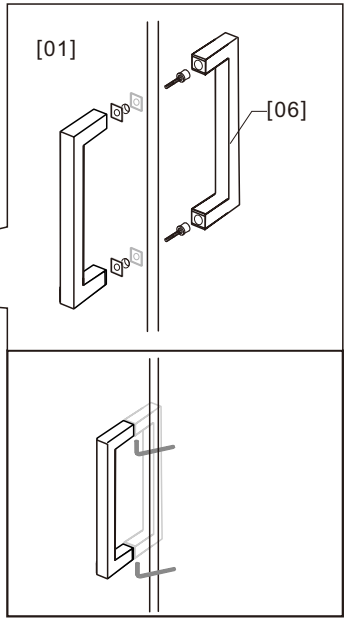


Disassemble **Handle [06]** using an Allen key. Install it onto the swing panel and tighten securely.

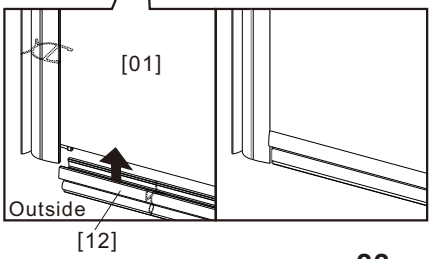



Press **Bottom Sweep [12]** onto the bottom edge of the swing panel. Make sure the sweep is facing the correct direction.


08

Skip this step if **Fixed Panel G** is 32" or 36".

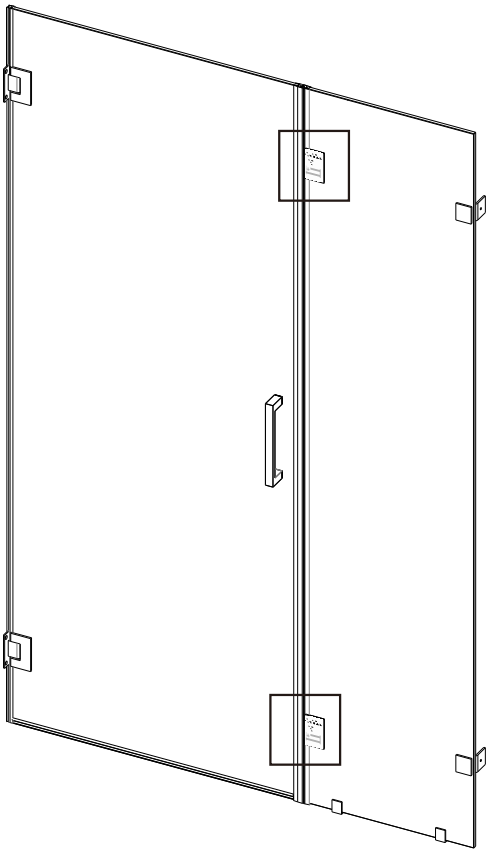

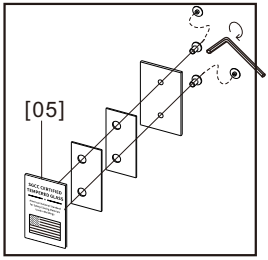

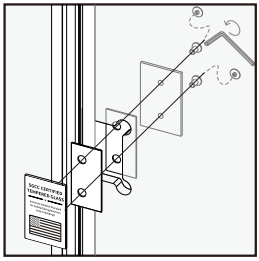

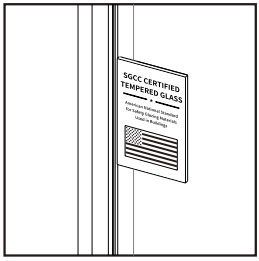


Disassemble **Decorative Glass Cover [05]** using an Allen key. Install it in the cutout on the fixed panel and tighten securely.

Note: Position the gasket away from the magnetic seals. Make sure the cover is flush with the edge of the glass and the printed side faces upward.

09


G = Fixed Panel [02]


A = Required Support Bar [16] Length

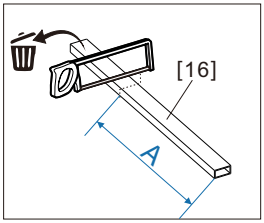


G size	A
6"	100mm(3.9")
12"	200mm(7.9")
18"	300mm(11.8")
30"	600mm(23.6")
32"	600mm(23.6")
36"	600mm(23.6")

Cut **Support Bar [16]** to the required length **A** according to the table above.

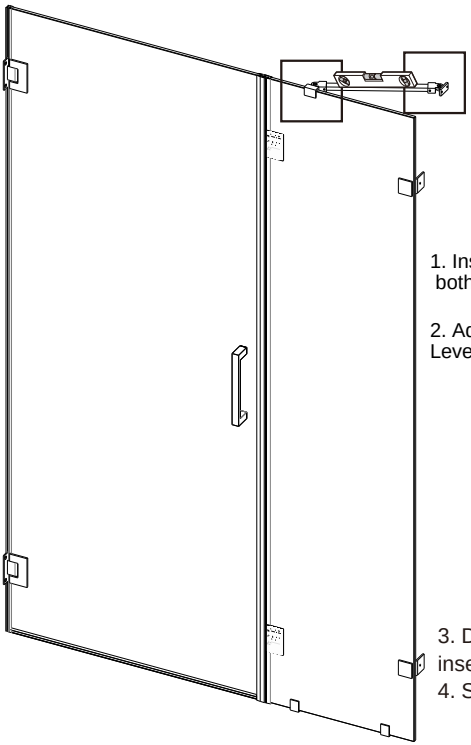


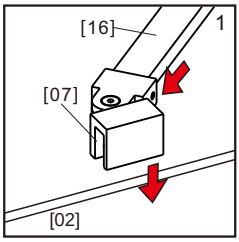


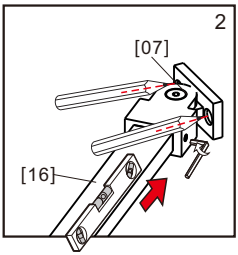

1. Insert **Support Bar Hardware [07]** (glass bracket & wall bracket) into both ends of bar, then clamp the glass bracket onto the fixed panel.


2. Adjust the angle of the wall bracket and position it against the wall. Level the support bar and mark the mounting holes.

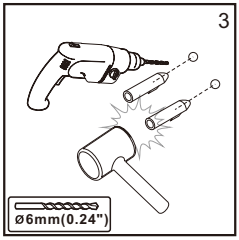


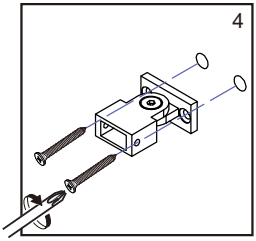

3. Drill the marked locations using a 6 mm (0.24") drill bit, and insert the 6 mm anchors.

4. Secure the wall bracket using the supplied screws.

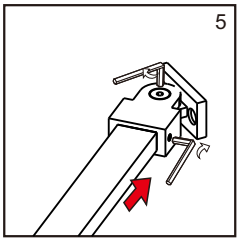


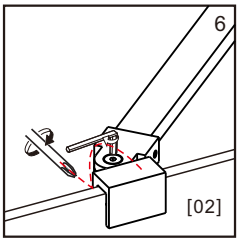

5. Tighten the wall bracket using an Allen key.


6. Tighten the glass bracket using an Allen key and a screwdriver.

10

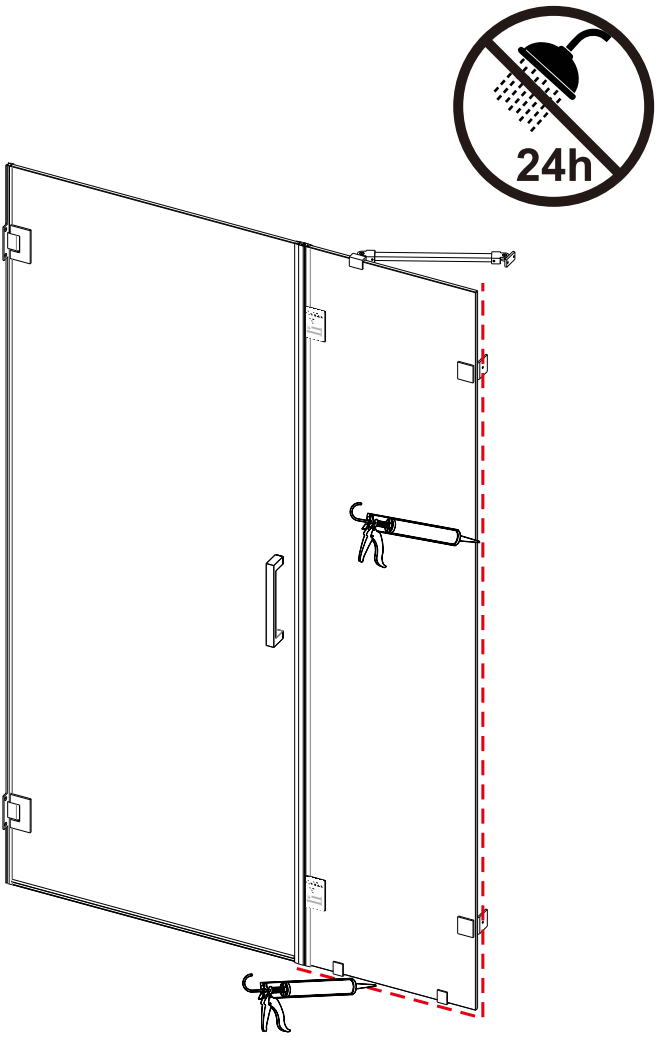


Apply silicone sealant along the outside joints where the **Fixed Panel [02]** meets the wall and floor/shower base. Allow 24 hours to cure before using the shower.

3

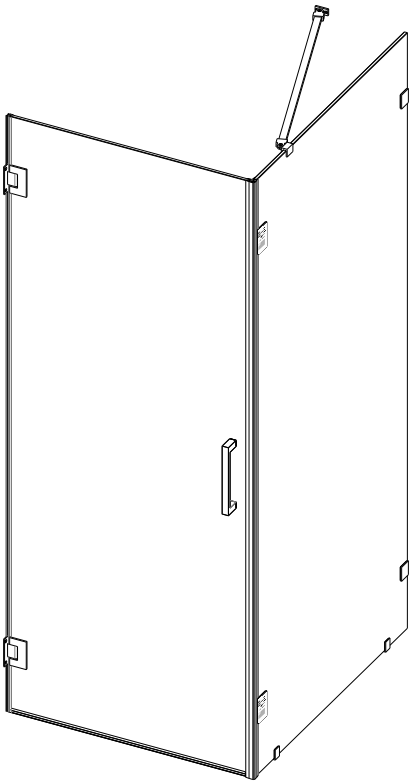

D + G + P01
+ P03 + P05


D + G + P01 + P03 + P05

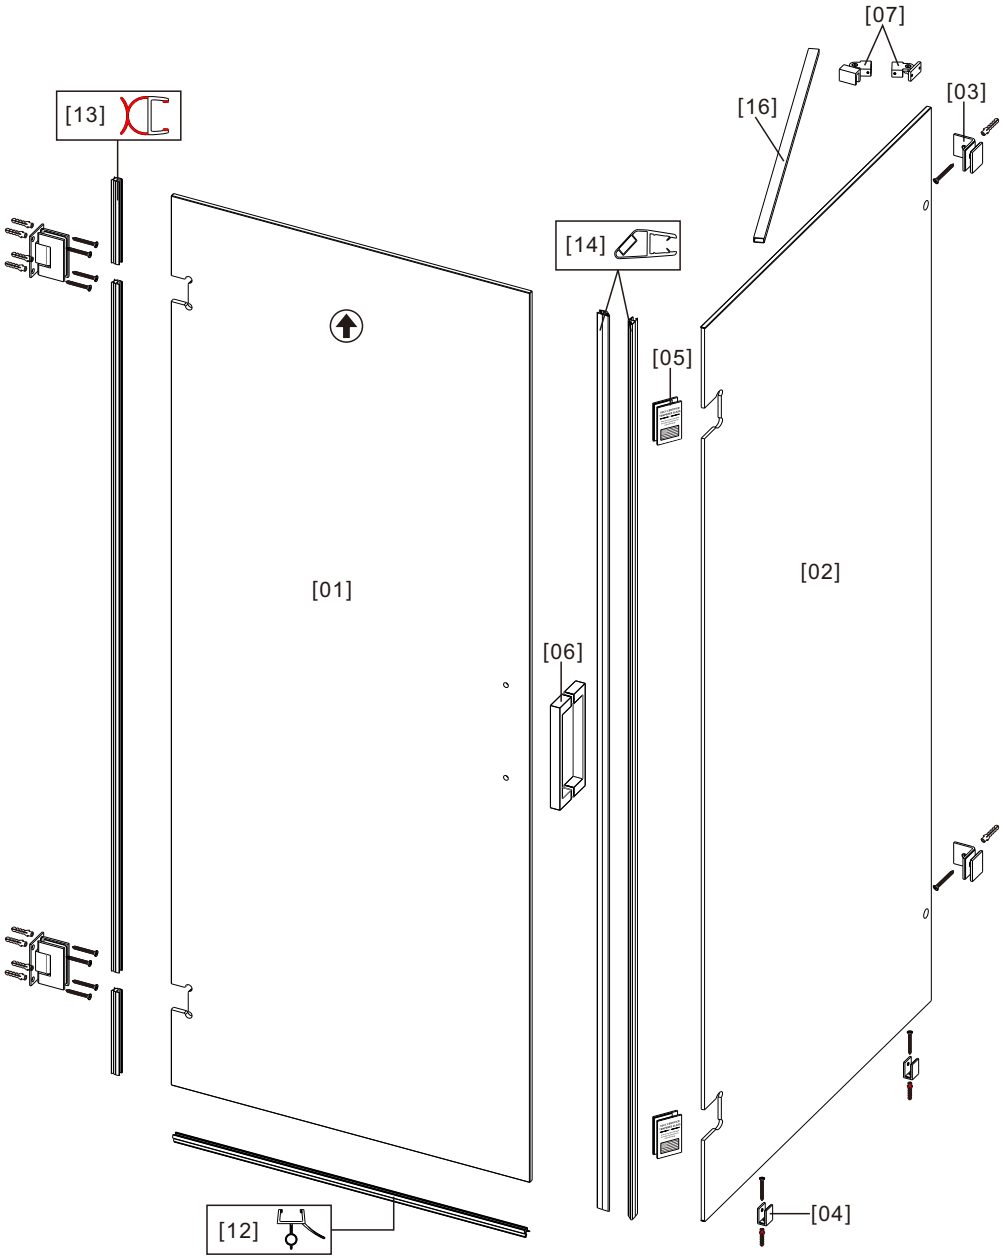

01

Min. Wall Width:

L + 25mm (L + 1")

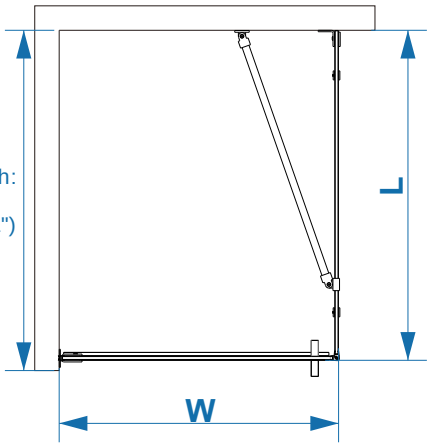


G size	Installation size L
30"	762mm(30")
32"	813mm(32")
36"	914mm(36")

D = Swing Panel [01]
G = Fixed Panel [02]
L = Fixed Panel Installation Length
W = Swing Panel Installation Width

D size	Installation size W
30"	777mm(30.6")


Ensure the walls are plumb and the floor or shower base is level. Refer to the tables above for installation dimensions (W and L).


Note: The wall width at the Swing Panel installation side must be at least L + 25 mm (L + 1") .

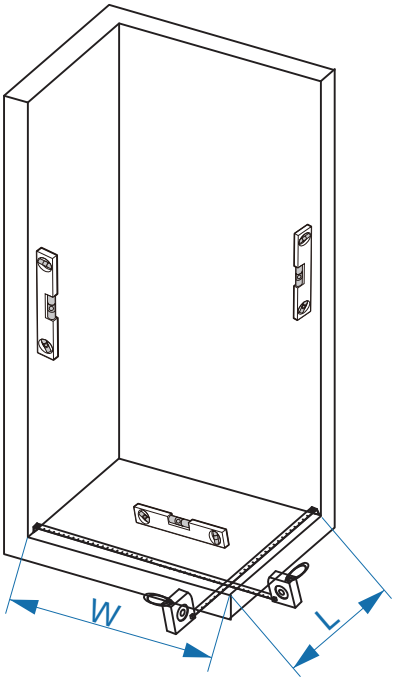


02

The **Swing Panel [01]** is reversible for left- or right-hand installation.

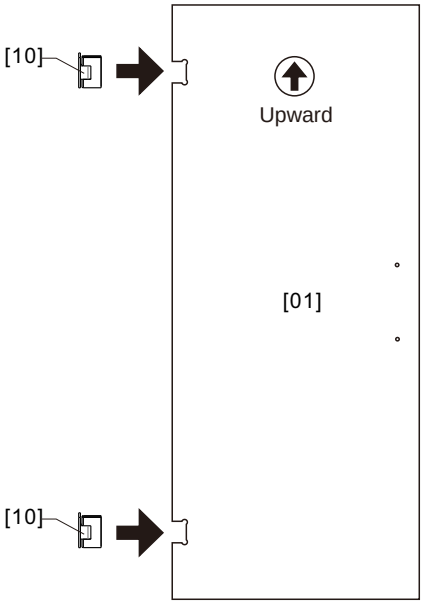

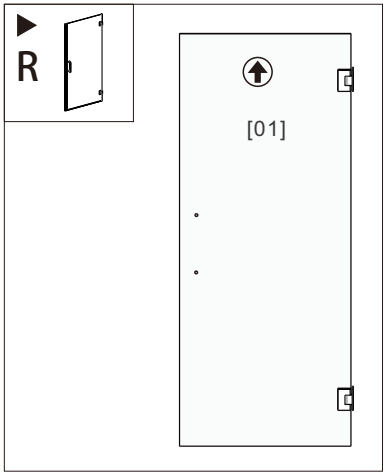


Repeat for both hinges.

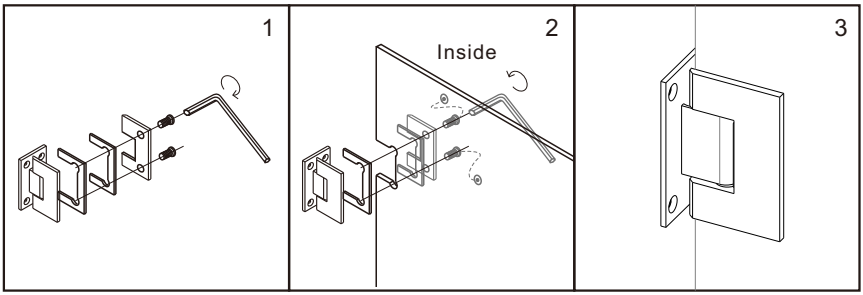

1. Use an Allen key to disassemble the **Glass-to-Wall Hinge [10].**


2. Install **Glass-to-Wall Hinge [10]** onto **Swing Panel [01]**, keeping the edge of the hinge parallel with the glass. Tighten the screws and install the screw caps. For left- or right-hand installation, flip the glass panel as required.

03

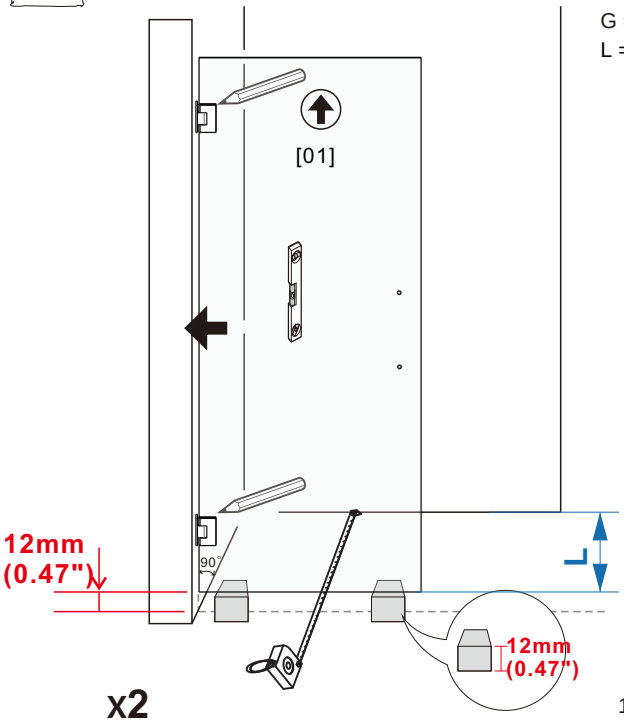



G = Fixed Panel [02]
L = Fixed Panel Installation Length

G size	Installation size **L**
30"	762mm(30")
32"	813mm(32")
36"	914mm(36")

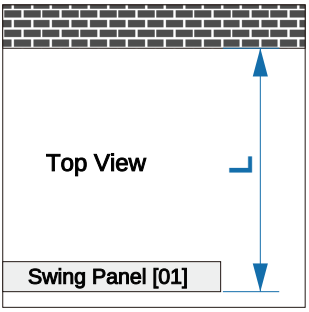

x2

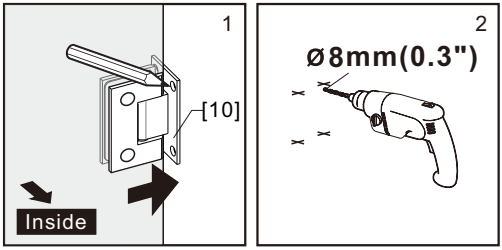

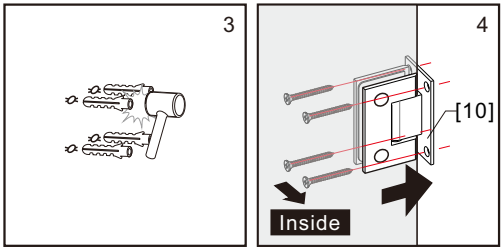


1. Place **Swing Panel [01]** to installation position against the wall according to the dimension shown in the table. Place 12 mm (0.47") shims underneath the panel, then mark the mounting-hole locations through the hinge holes.

2. Drill holes at the marked locations using an 8 mm (0.3") drill bit.

3. Insert the 8 mm anchors.

4. Secure the hinges to the wall using the supplied screws.

04

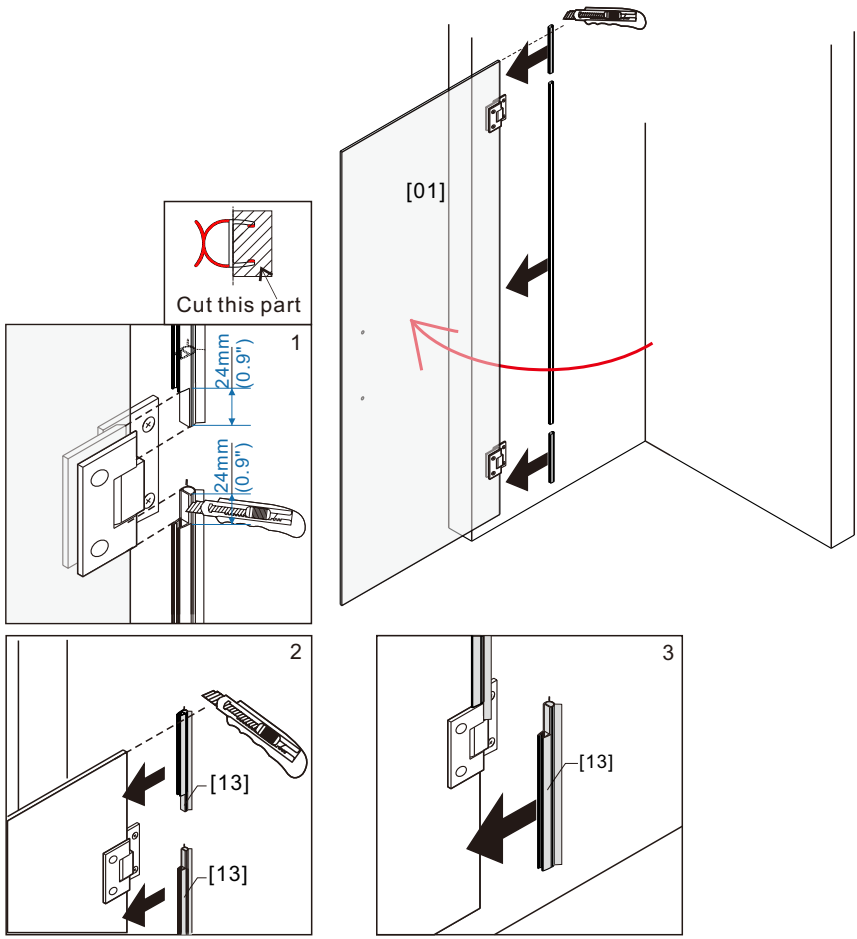


1. **Side Door Seal [13]** comes in three pieces: two short seals and one long seal. Trim off 24 mm (0.9") section where the seal fin overlaps the hinge from one end of each short strip and from both ends of the long strip, as shown in Fig. 1.

2. Press **Side Door Seal [13]** onto the **Swing Panel [01]**, align the cutouts with the hinges, and trim the upper seal flush with the top edge of the glass.

3. Install the remaining **Side Door Seal [13]** onto the lower section of the panel. Align the bottom of the seal with the floor or shower base.

05

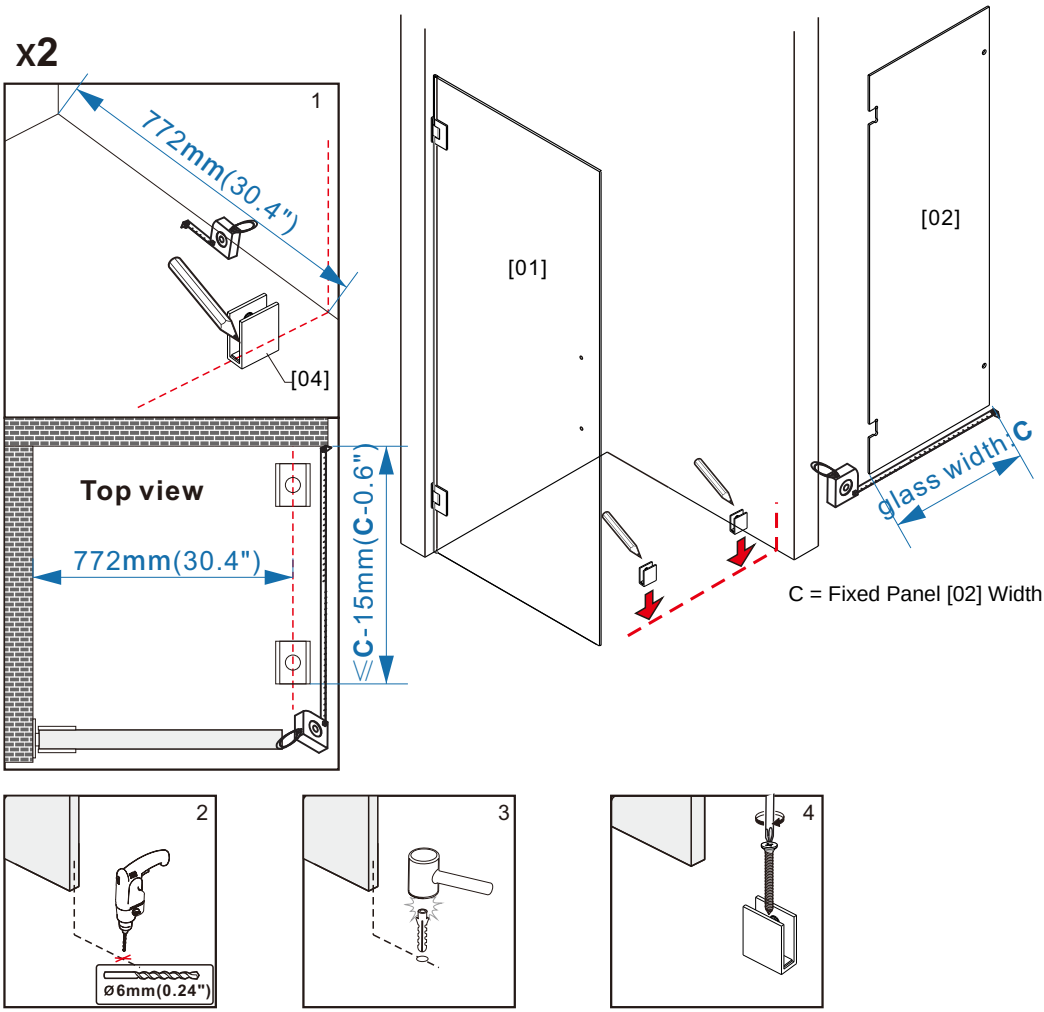


1. Close the **Swing Panel [01]** and align it at 90° to the wall. Position the two Floor Clamps [04] so that the center of their mounting holes is 772 mm (30.4") from the swing-panel wall. The distance from the fixed-panel wall to the outer edge of the farthest floor clamp must not exceed C - 15 mm (C - 0.6"), where C is the width of Fixed Panel [02]. Mark the mounting-hole locations through the floor clamp holes on the floor or shower base.


2. Drill holes at the marked locations using a 6 mm (0.24") drill bit.


3. Insert the 6 mm anchors.


4. Secure the **Floor Clamps [04]** using the supplied screws.

06

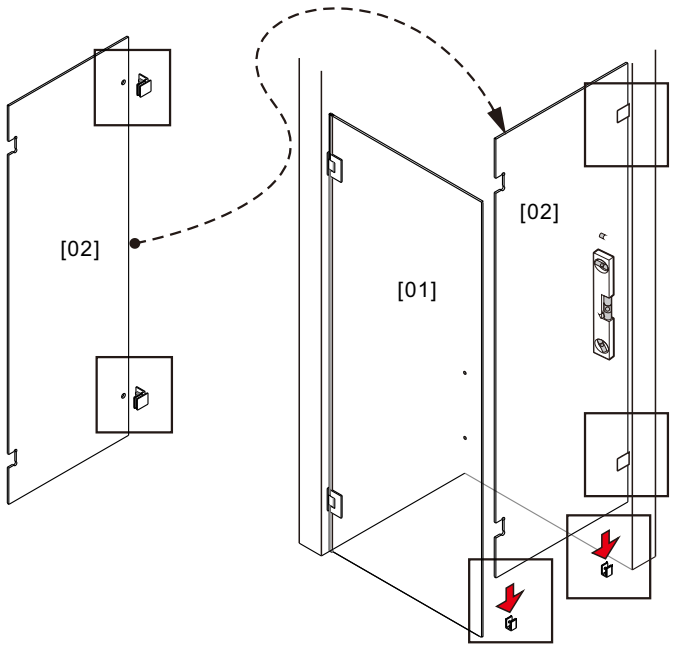


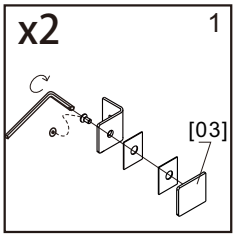


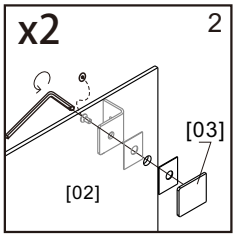


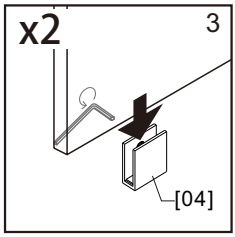

1. Disassemble **Wall Clamps [03].**
2. Install the two clamps onto **Fixed Panel [02]** with correct inside/outside orientation.
3. Place the Fixed Panel into position, secure it in the clamps, and tighten with an Allen key.

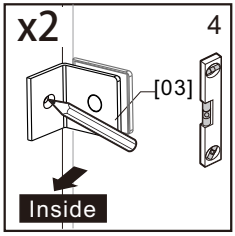


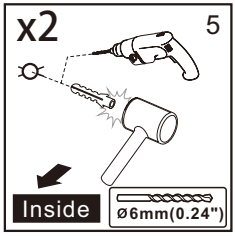

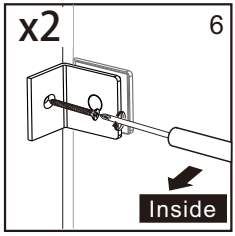



4. Use a level to make sure the **Fixed Panel [02]** is plumb. Mark the mounting-hole locations on the wall through the holes in the Wall Clamps **[03].**
5. Drill the marked locations using a 6 mm (0.24") drill bit, and insert the 6 mm anchors.
6. Secure the clamps using the supplied screws.

07

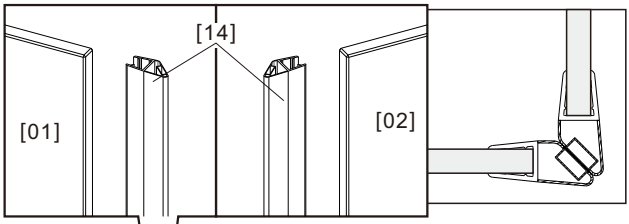


Press the **Magnetic Door Seals [14]** onto the **Swing Panel [01]** and the **Fixed Panel [02].**

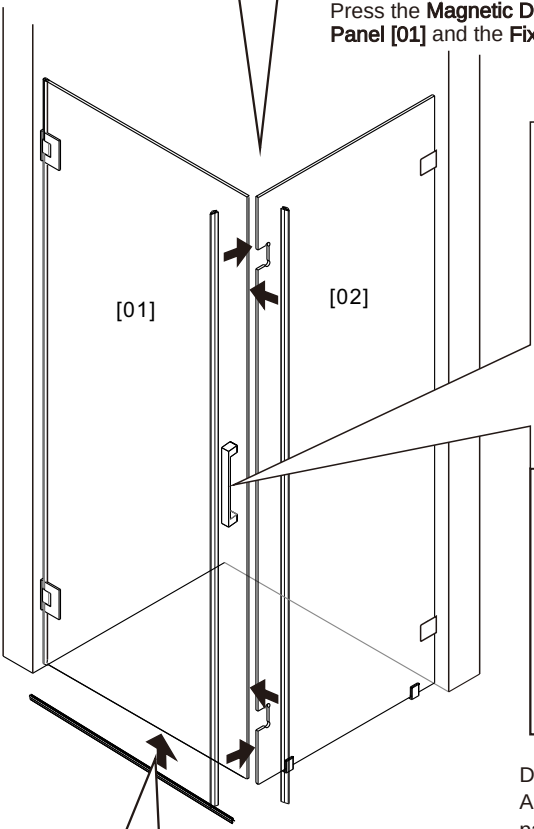

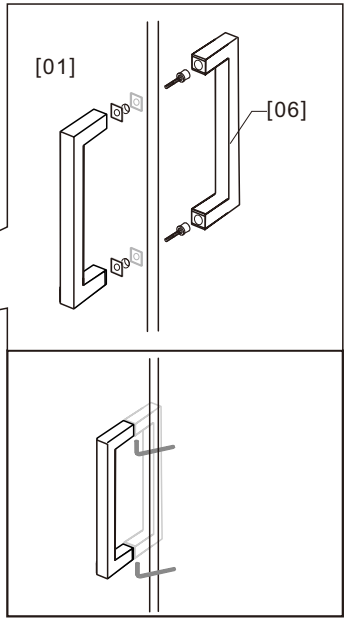


Disassemble **Handle [06]** using an Allen key. Install it onto the swing panel and tighten securely.

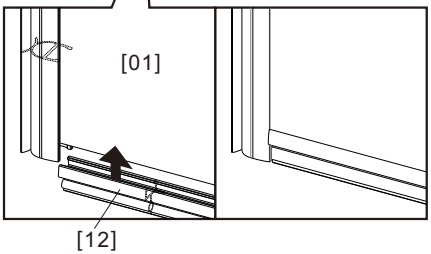



Press **Bottom Sweep [12]** onto the bottom edge of the swing panel. Make sure the sweep is facing the correct direction.

08

Skip this step if **Fixed Panel G** is 32" or 36".

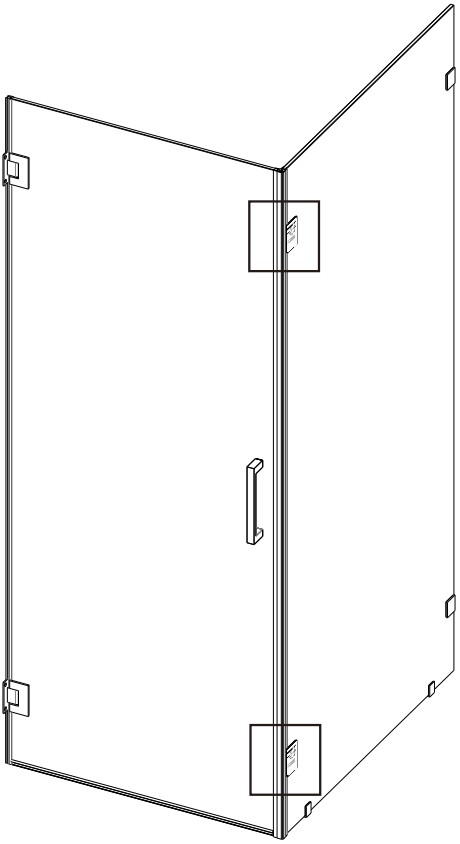

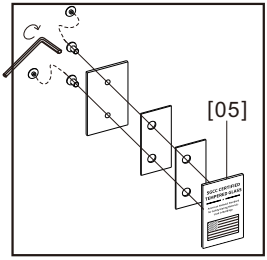

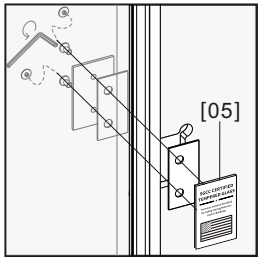




Disassemble **Decorative Glass Cover [05]** using an Allen key. Install it in the cutout on the fixed panel and tighten securely.

Note: Position the gasket away from the magnetic seals. Make sure the cover is flush with the edge of the glass and the printed side faces upward.

09


G = Fixed Panel [02]


A = Required Support Bar [16] Length

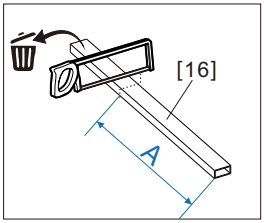


G size	A
6"	100mm(3.9")
12"	200mm(7.9")
18"	300mm(11.8")
30"	600mm(23.6")
32"	600mm(23.6")
36"	600mm(23.6")


Cut **Support Bar [16]** to the required length **A** according to the table above.

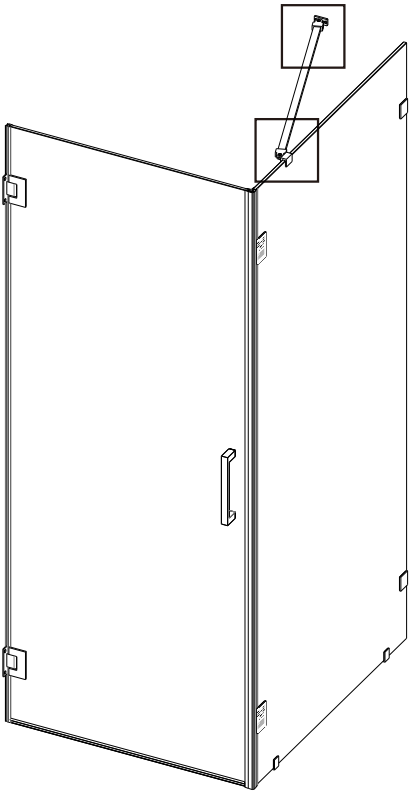


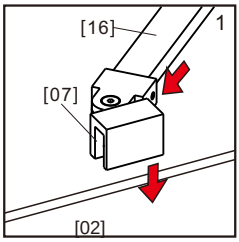

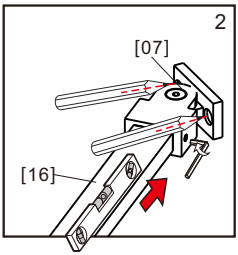



1.Insert **Support Bar Hardware [07]** (glass bracket & wall bracket) into both ends of bar, then clamp the glass bracket onto the fixed panel.
2. Adjust the angle of the wall bracket and position it against the wall. Level the support bar and mark the mounting holes.

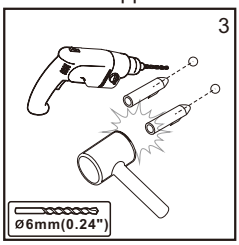

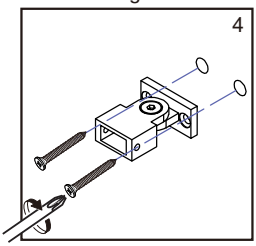


3. Drill the marked locations using a 6 mm (0.24") drill bit, and inset the 6 mm anchors.
4. Secure the wall bracket using the supplied screws.

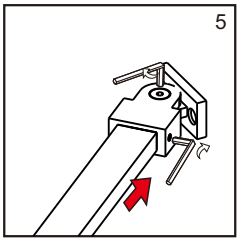

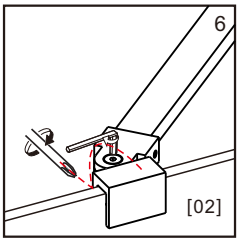


5. Tighten the wall bracket using an Allen key.
6. Tighten the glass bracket using an Allen key and a screwdriver.

10

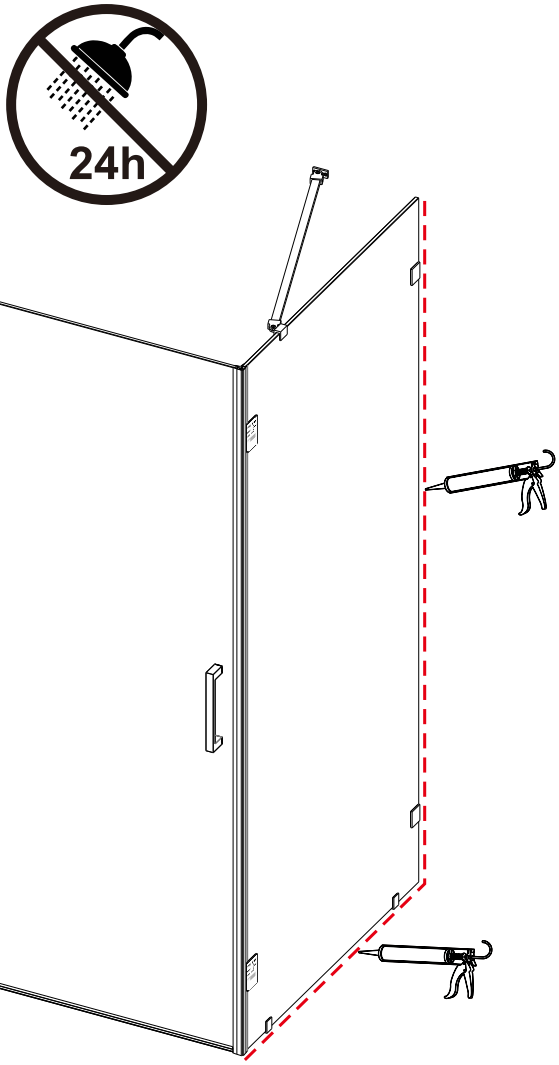


Apply silicone sealant along the outside joints where the **Fixed Panel [02]** meets the wall and floor/shower base. Allow 24 hours to cure before using the shower.

4

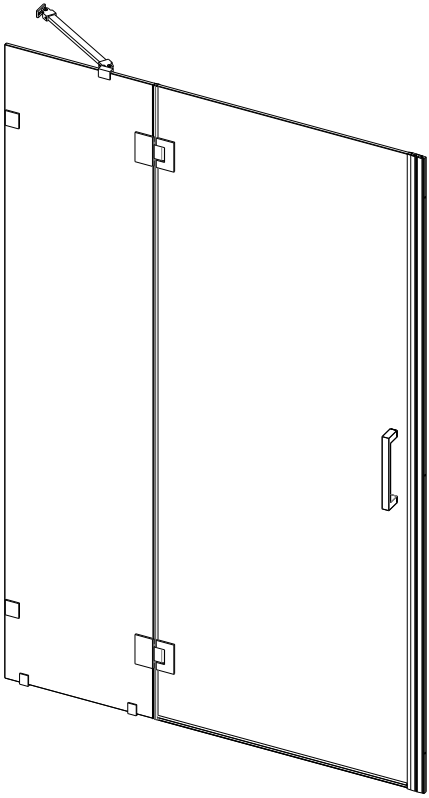

D + G + P01
+ P04 + P05

D + G + P01 + P04 + P05

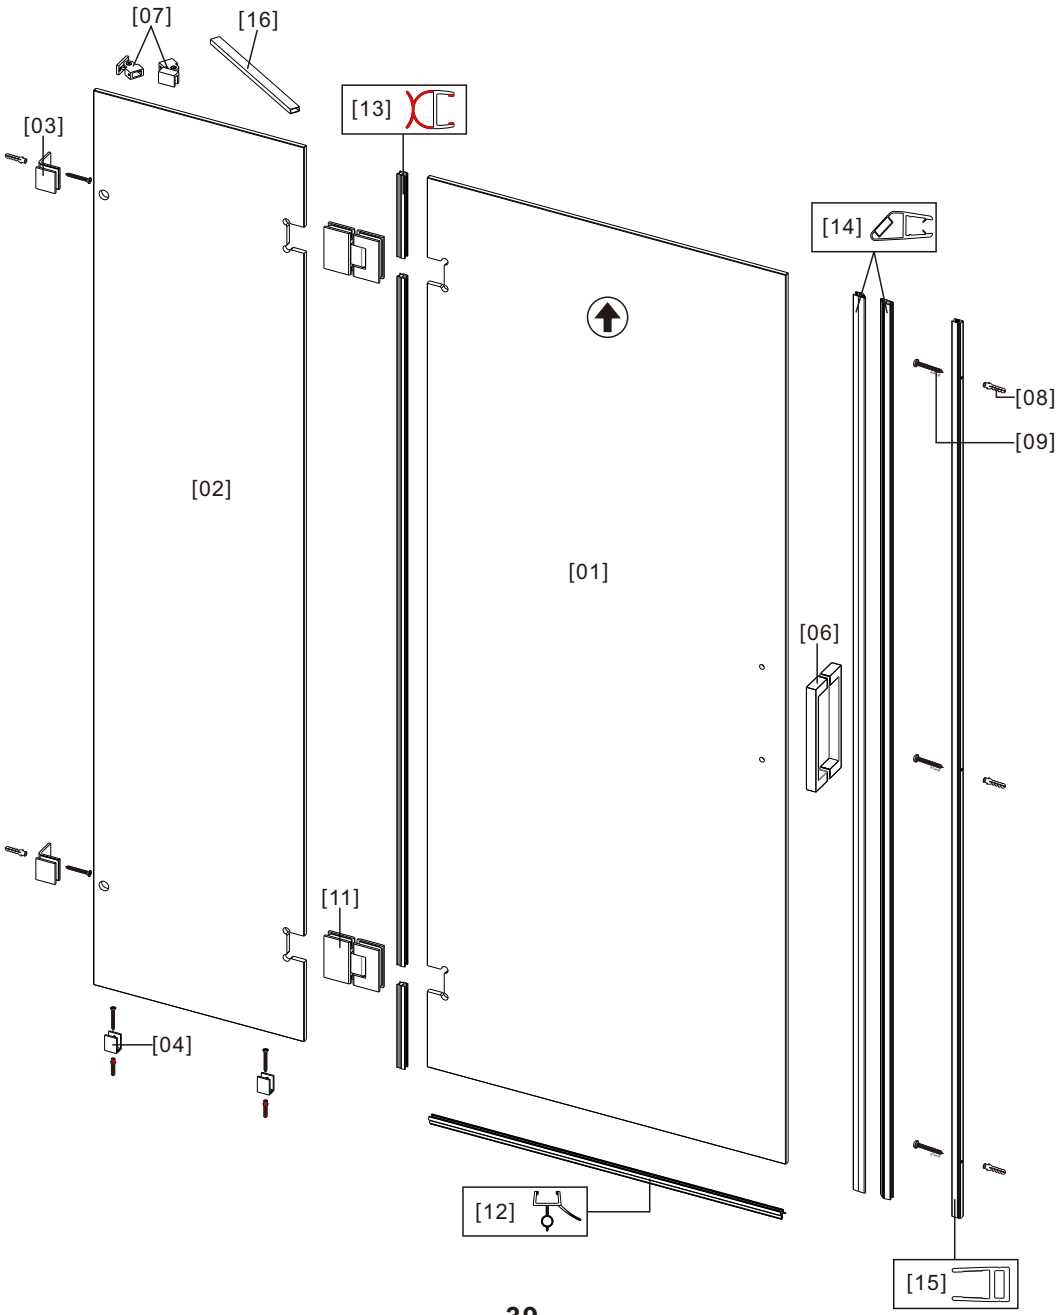

01


Ensure walls are plumb and floor/shower base is level.
Refer to the table below for the required installation width (W).


Installation size W / D size / G size	30"
6"	932mm(36.7")
12"	1085mm(42.7")
18"	1237mm(48.7")
30"	1542mm(60.7")
32"	1593mm(62.7")
36"	1694mm(66.7")


D = Swing Panel [01]


W = Required Installation Width

G = Fixed Panel [02]

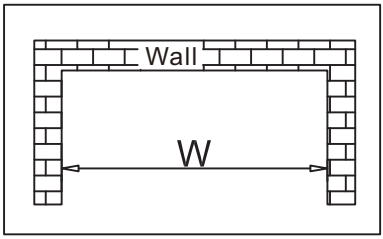

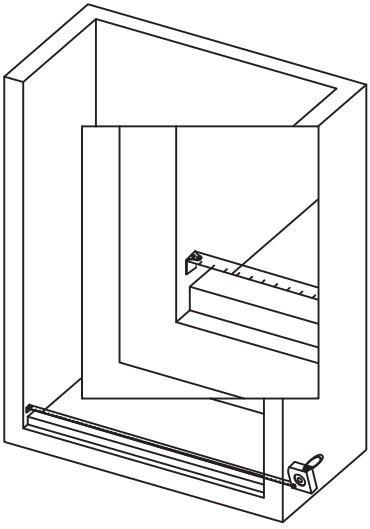

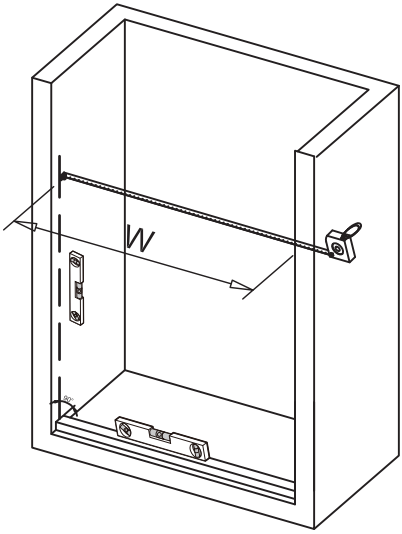


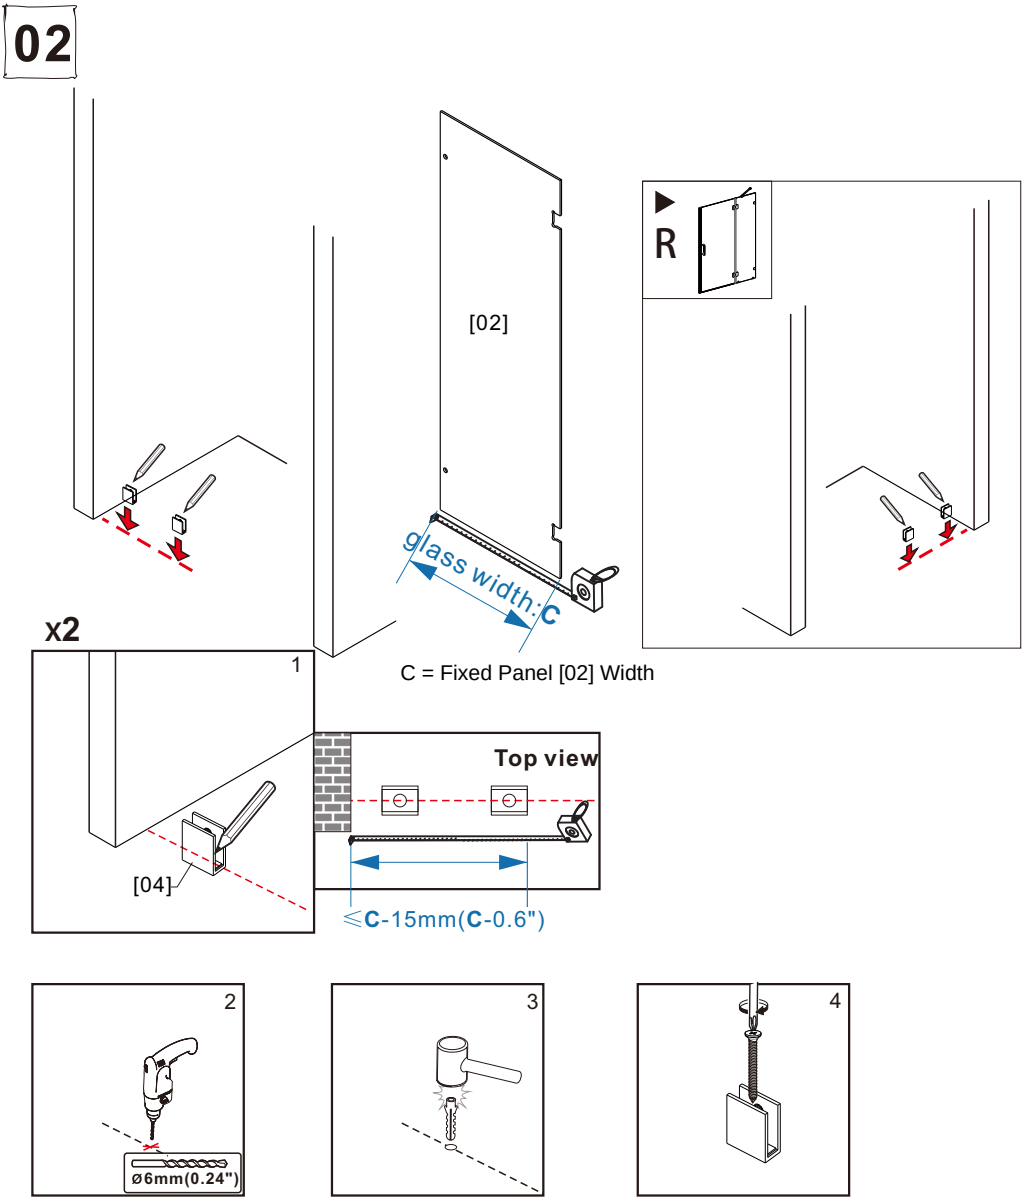


C = Fixed Panel [02] Width


1. Align the two **Floor Clamps [04]** in a straight line. The distance from the fixed-panel wall to the outer edge of the farthest floor clamp must not exceed C - 15 mm (C - 0.6"), where C is the width of **Fixed Panel [02]**. Mark the mounting-hole locations through the clamp holes onto the floor or shower base.
2. Drill holes at the marked locations using a 6 mm (0.24") drill bit.
3. Insert the 6 mm anchors
4. Secure the **Floor Clamps [04]** using the supplied screws.

03

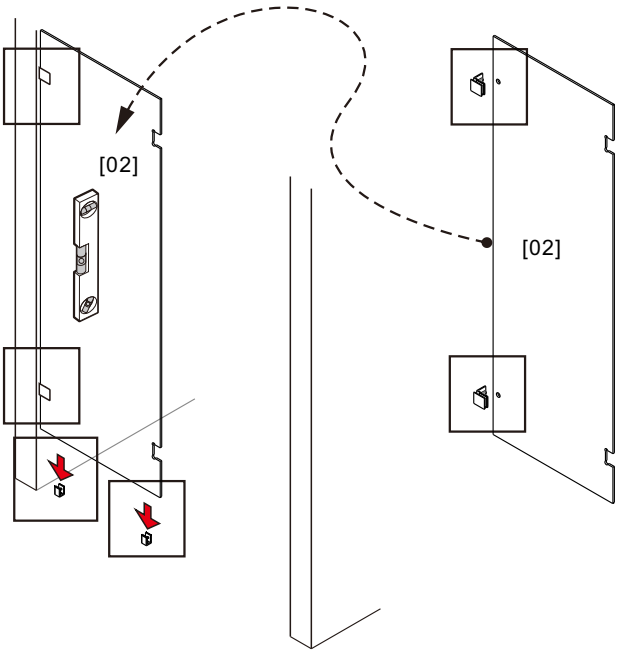

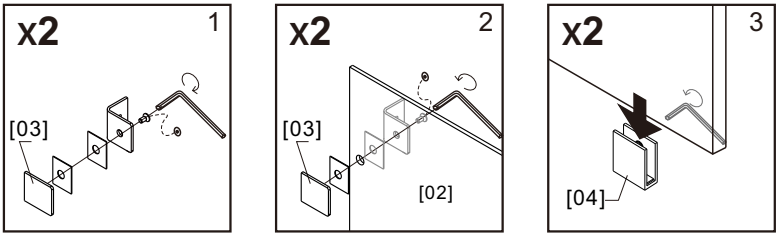


1. Disassemble **Wall Clamps [03].**
2. Install the two clamps onto **Fixed Panel [02]** with correct inside/outside orientation.
3. Place the Fixed Panel into position, secure it in the clamps, and tighten with an Allen key.

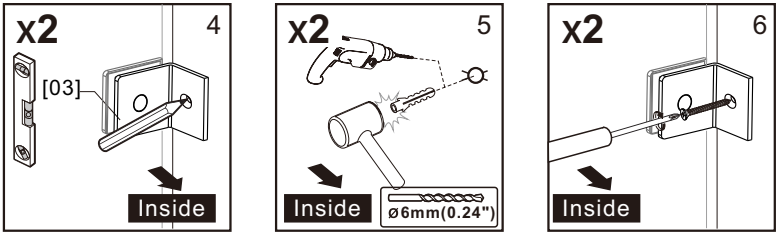


4. Use a level to make sure the **Fixed Panel [02]** is plumb. Mark the mounting-hole locations on the wall through the holes in the Wall Clamps **[03].**
5. Drill the marked locations using a 6 mm (0.24") drill bit, and insert the 6 mm anchors.
6. Secure the clamps using the supplied screws.


04

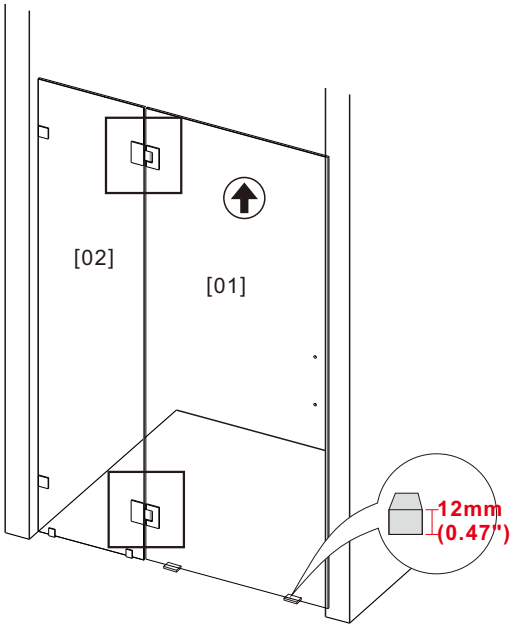

x2

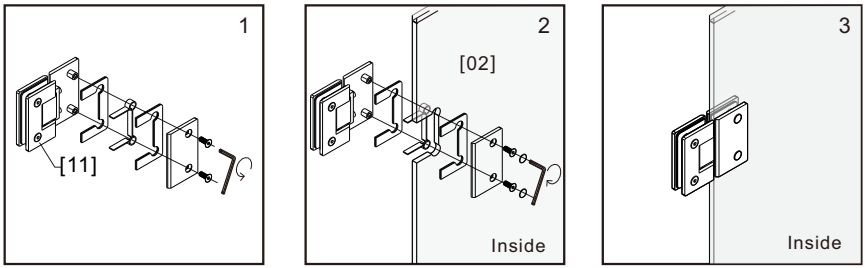


1. Use an Allen key to separate the Glass-to-Glass Hinge [11] components as shown.
2. Attach hinge to Fixed Panel [02], aligning the hinge edge parallel with the glass edge. Tighten the screws securely. Note: For left- or right-hand door installation, flip the glass panel as needed. Make sure the arrow on the Swing Panel points upward.
3. Reattach the Glass-to-Glass Hinge [11] components.

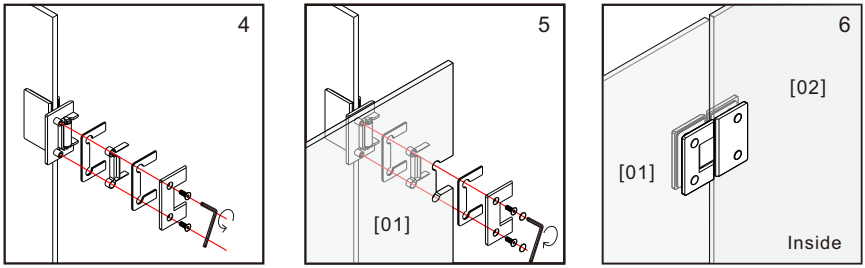


4. Rotate the hinge 90° and use an Allen key to separate the other side of hinge.
5. Move Swing Panel [01] into position. Place 12 mm (0.47") shims underneath the panel. Attach the panel to the hinges, ensuring the hinge edges are parallel with glass edge. Tighten screws. Install screw caps. Note: If the hinge holes do not align with the swing panel, slightly loosen the hinge screws on the fixed panel side and adjust the hinge position as needed.


05

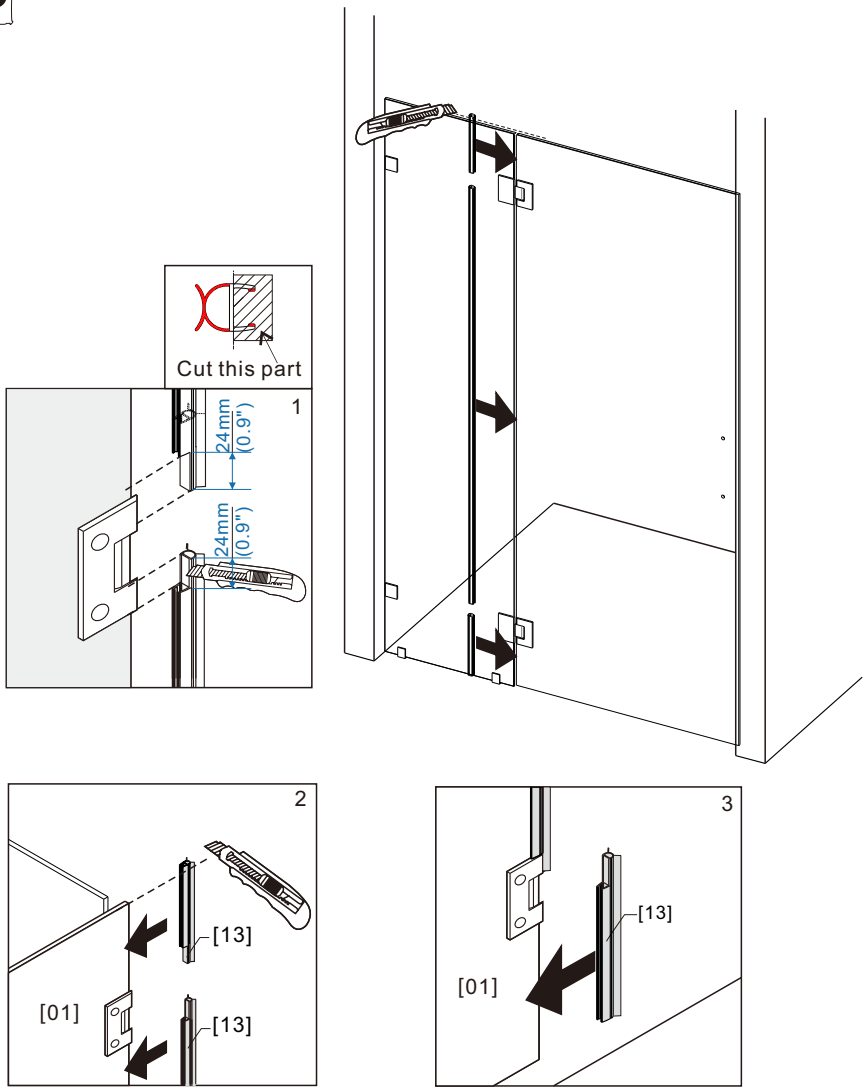



1. **Side Door Seal [13]** comes in three pieces: two short seals and one long seal. Trim off 24 mm (0.9") section where the seal fin overlaps the hinge from one end of each short strip and from both ends of the long strip, as shown above.
2. Open the **Swing Panel [01]** and press the **Side Door Seal [13]** onto the swing panel, aligning the cutouts with the hinges. Trim any excess from the upper seal so that it is flush with the top edge of the glass.
3. Install the remaining **Side Door Seal [13]** onto the lower section of the panel. Align the bottom of the seal with the floor or shower base.


06

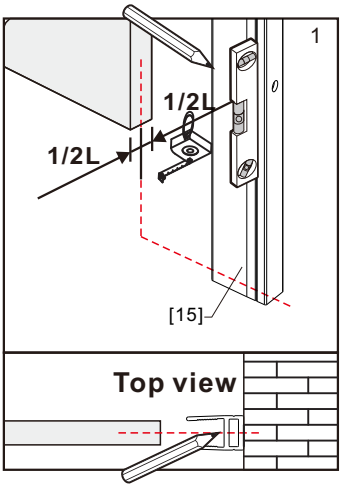

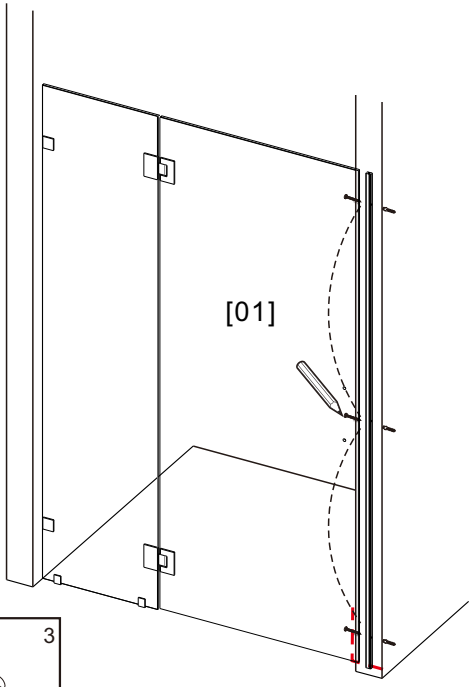

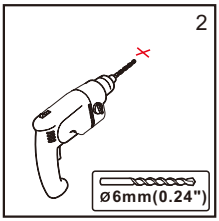

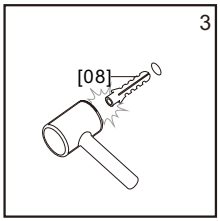

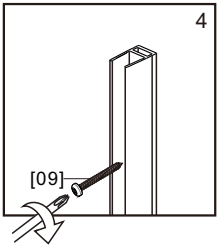


1. Close the **Swing Panel [01]** and make sure it is perpendicular to the wall. Align the centerline of **Wall Profile [15]** with the panel centerline, check that it is plumb with a level, then position it against the wall and mark the mounting-hole locations through the holes in the profile.

2. Drill holes at the marked locations using a 6 mm (0.24") drill bit.

3. Insert the 6 mm anchors.

4. Secure the **Wall Profile [15]** to the wall using the supplied ST4 x 30 mm screws.

07

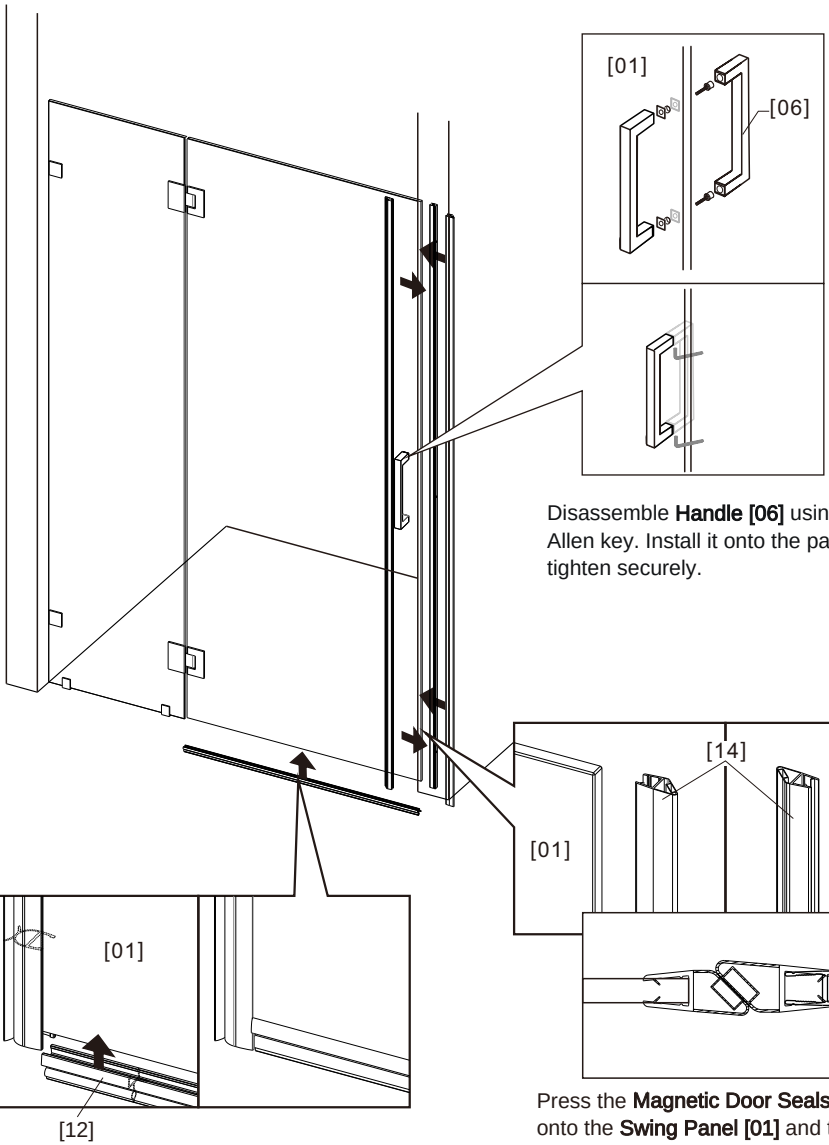

Disassemble **Handle [06]** using an Allen key. Install it onto the panel and tighten securely.


Press the **Magnetic Door Seals [14]** onto the **Swing Panel [01]** and the **Wall Profile [15].**

Press **Bottom Sweep [12]** onto the bottom edge of the swing panel. Make sure the sweep is facing the correct direction.

08


G = Fixed Panel [02]


A = Required Support Bar [16] Length

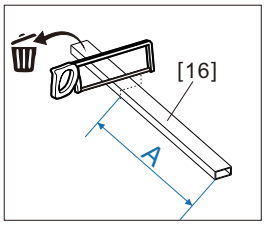


G size	A
6"	100mm(3.9")
12"	200mm(7.9")
18"	300mm(11.8")
30"	600mm(23.6")
32"	600mm(23.6")
36"	600mm(23.6")

Cut **Support Bar [16]** to the required length **A** according to the table above.

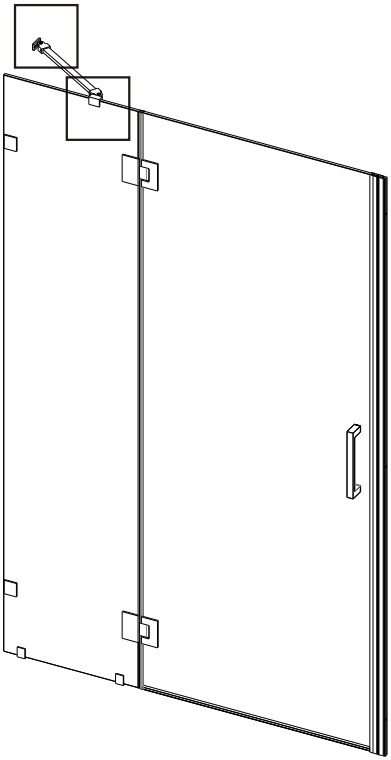


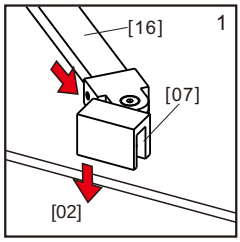


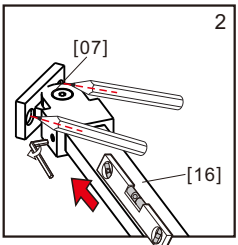


1. Insert **Support Bar Hardware [07]** (glass bracket & wall bracket) into both ends of bar, then clamp the glass bracket onto the fixed panel.


2. Adjust the angle of the wall bracket and position it against the wall. Level the support bar and mark the mounting holes.

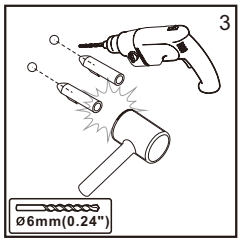

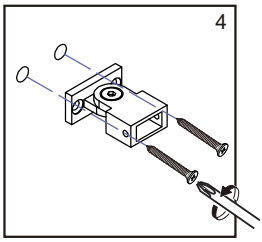


3. Drill the marked locations using a 6 mm (0.24") drill bit, and insert the 6 mm anchors.
4. Secure the wall bracket using the supplied screws.

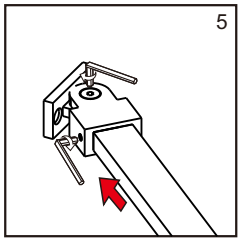

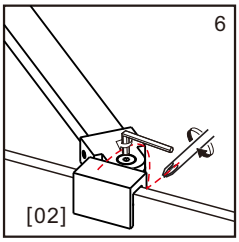

5. Tighten the wall bracket using an Allen key.
6. Tighten the glass bracket using an Allen key and a screwdriver.

09

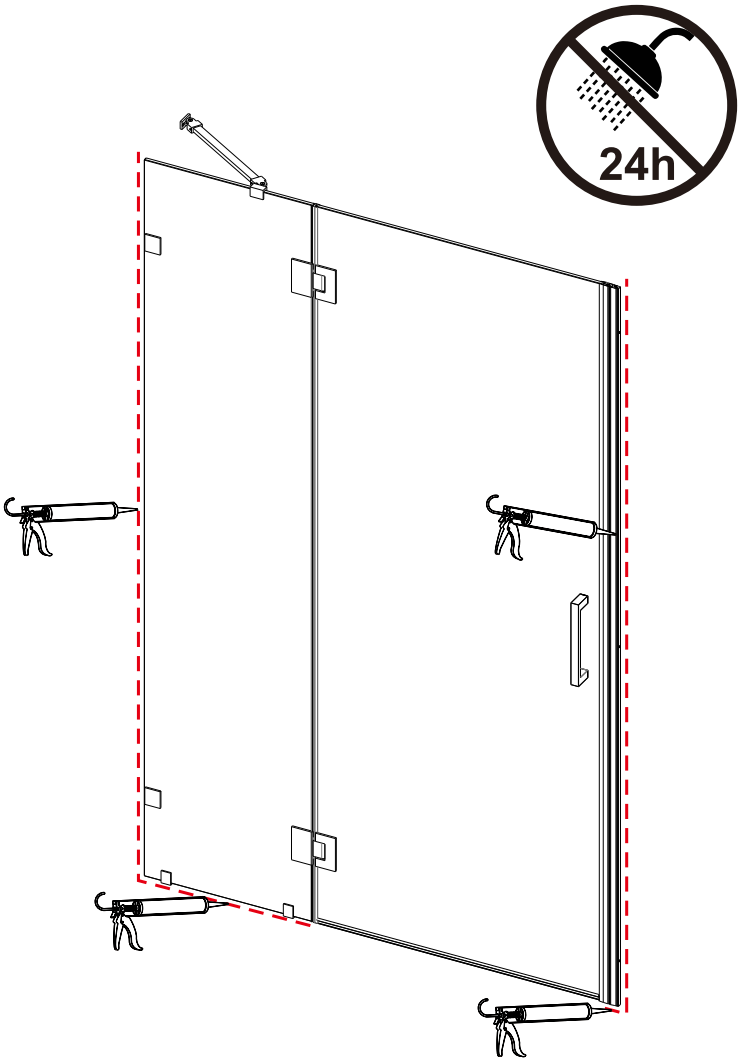

Apply silicone sealant from the outside of the shower enclosure along the joints where Wall Profile [15] and the Fixed Panel meet the wall and shower base.

Allow the silicone to cure for at least 24 hours before use.