



ASSEMBLY INSTRUCTIONS

A-44 PCS



B-44 PCS



Cams

C-4 PCS



Wooden dowels

D-4 PCS



(18mm)

E-2 PCS



(128mm)



F-8 PCS



G-6 PCS




(50mm)

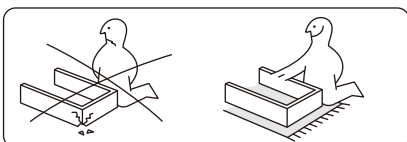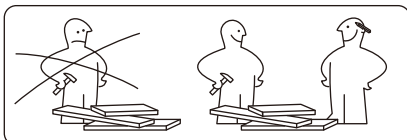

IMPORTANT!


Do not tighten too hard: this can damage boards. Please just screw 30%-50% until all the screws have been screwed into the holes.

J-1 PC



Allen key tool

M-2PCS



N-16PCS



(15mm)

P-4 PCS



(35mm)



Q-4 PCS














U-36 PCS














Cam covers

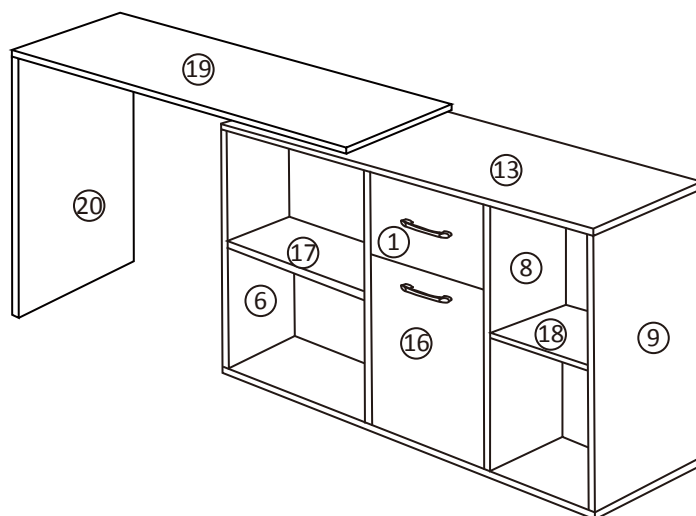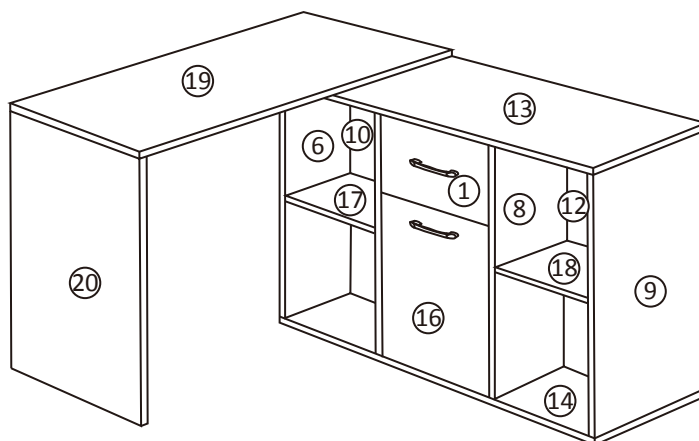


6090-7117

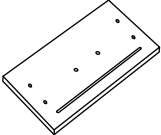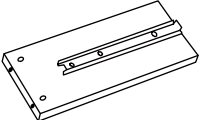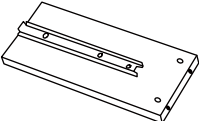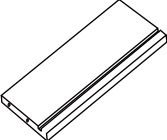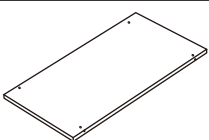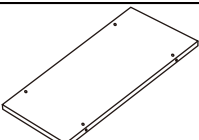	270×160×16mm	1	①
	250×100×16mm	1	②
	250×100×16mm	1	③
	218×100×16mm	1	④
	244×228×16mm	1	⑤
	685×298×16mm	1	⑥
	685×298×16mm	1	⑦
	685×298×16mm	1	⑧
	685×298×16mm	1	⑨
	685×462×16mm	1	⑩
	685×275×16mm	1	⑪

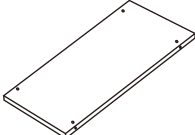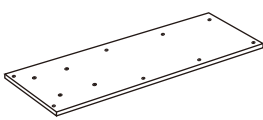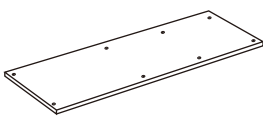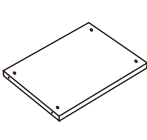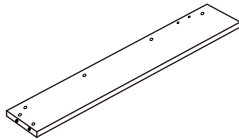
	685×275×16mm	1	⑫
	1080×300×16mm	1	⑬
	1080×300×16mm	1	⑭
	275×262×16mm	1	⑮
	517.5×270×16mm	1	⑯
	462×280×16mm	1	⑰
	275×280×16mm	1	⑱
	1350×600×16mm	1	⑲
	727×596×16mm	1	⑳
	1333×140×16mm	1	㉑

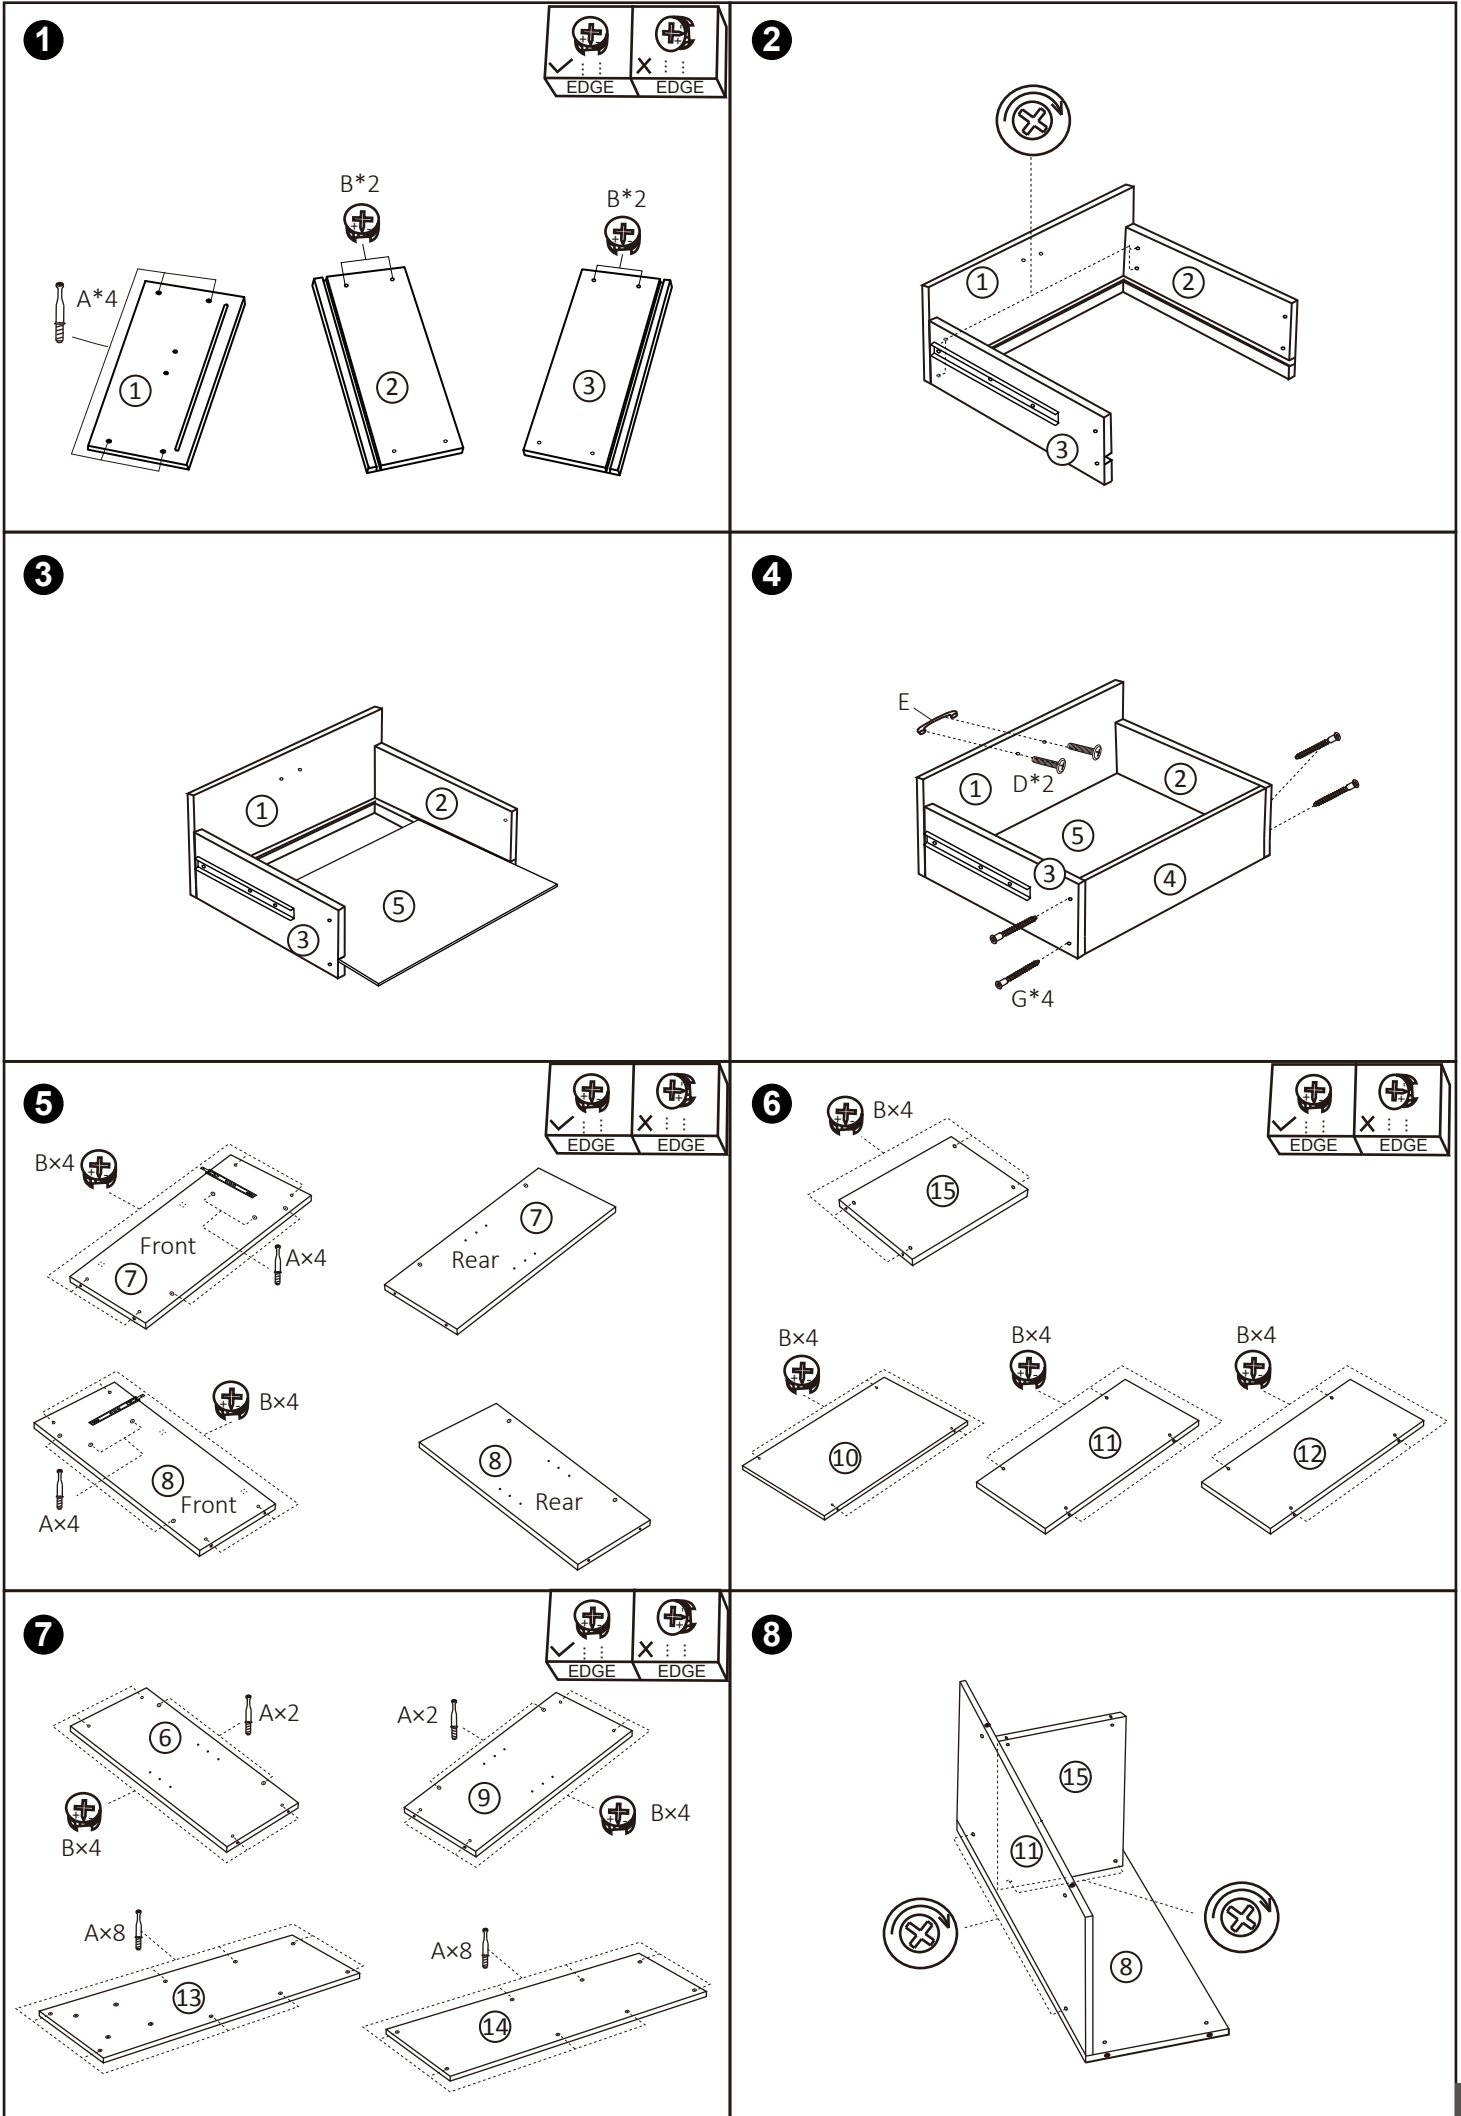


9

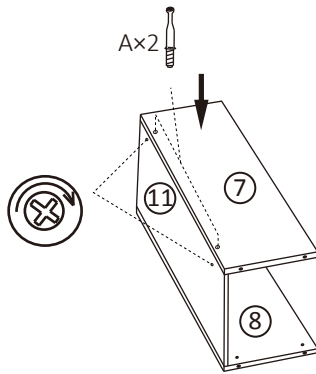


10

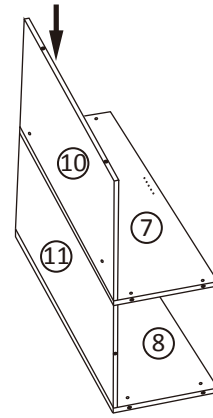


11

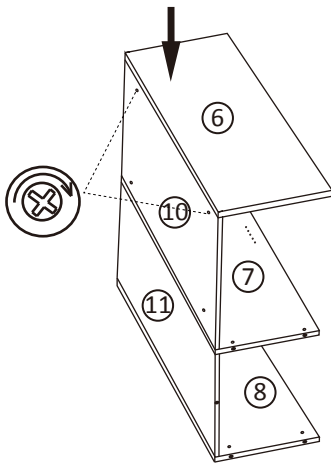


12

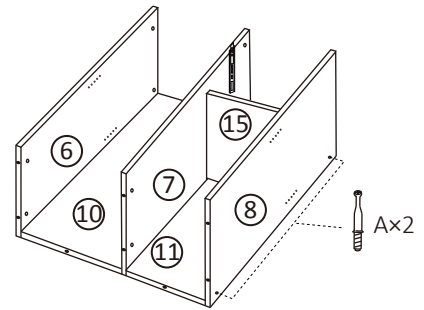


13

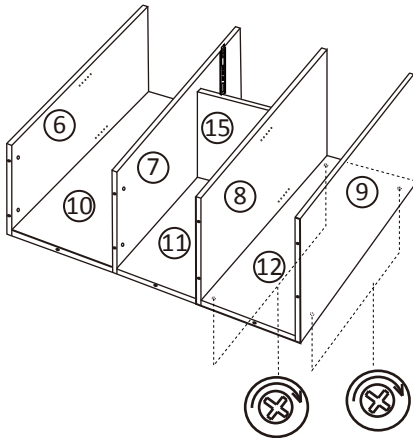


14

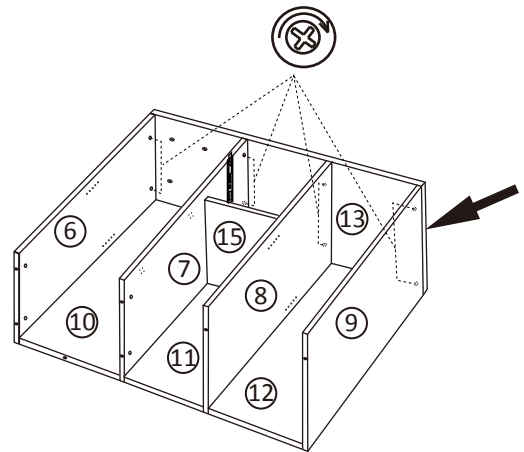


15

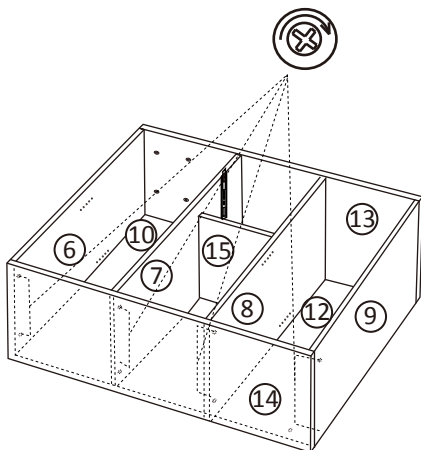


16

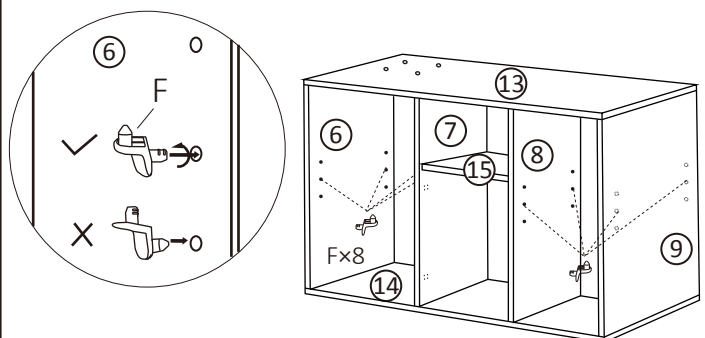


17

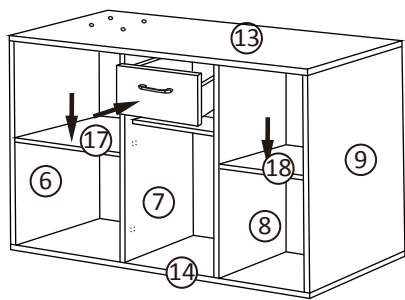


18

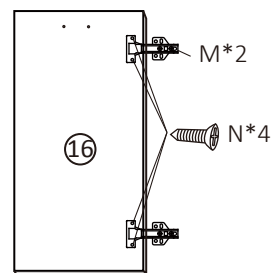


19

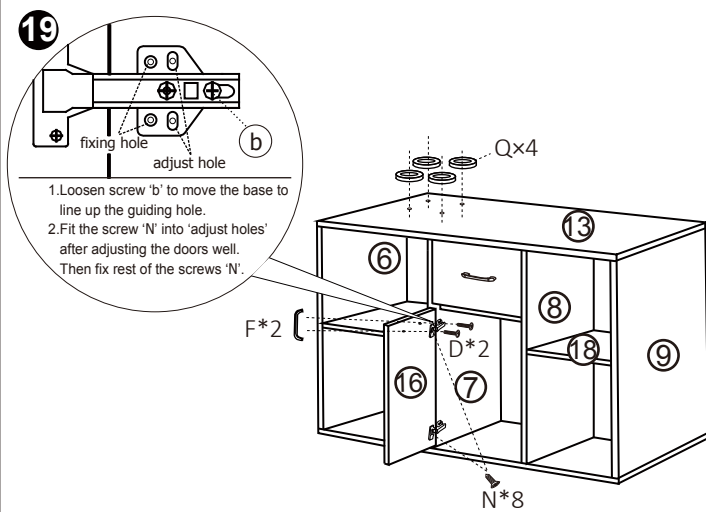


20

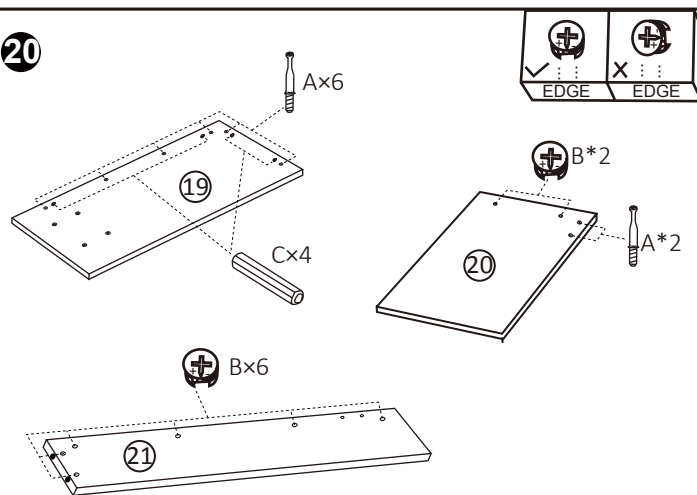

21

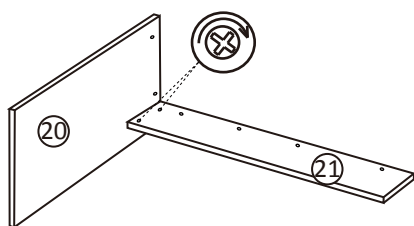

22

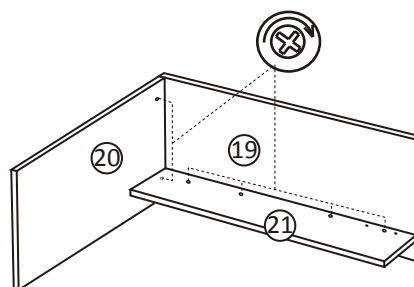

23

Note: Please fit cam covers (U) onto visible/exposed cams (B) to complete assembly.

