


INSTRUCTION MANUAL

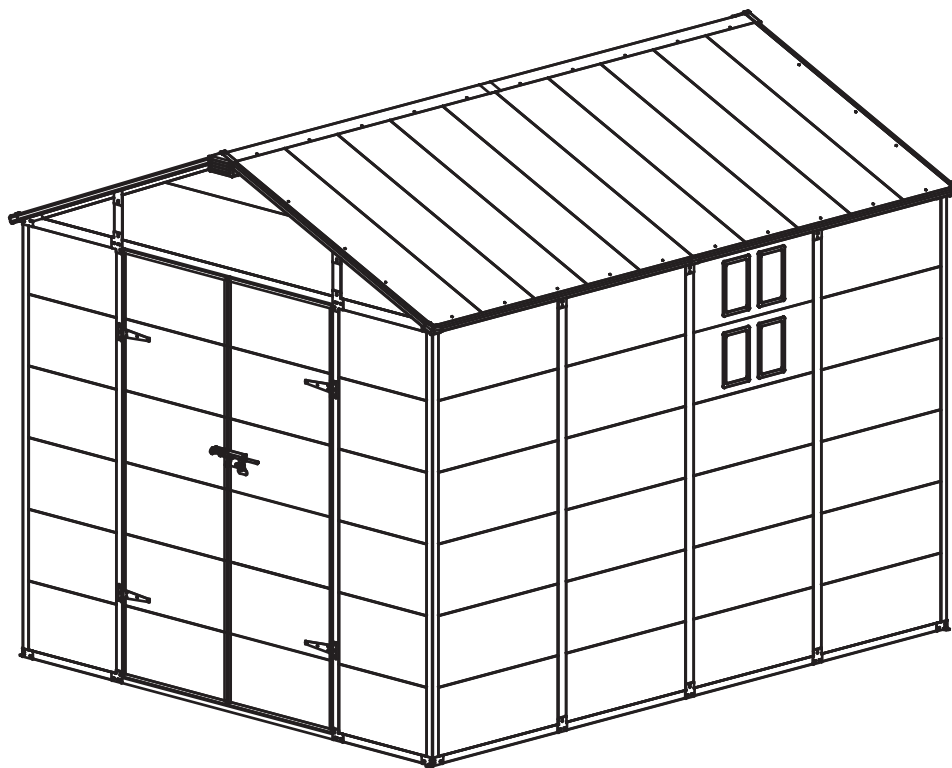

OUTDOOR 8'x10' STORAGE SHED Series G22

IF YOU PURCHASED THE OUTDOOR STORAGE SHED ONLINE
AND HAVE ANY QUESTIONS OR CONCERNS
CONTACT US VIA EMAIL,TEXT,OR PHONE

EMAIL:service2outdoor@gmail.com

TEXT(SMS ONLY):+1 628-263-4608

PHONE:+1 877-561-6450

Date of Manufacture: 26W22

Warnings and Cautions

Thank you for choosing our outdoor storage shed. Please read and understand this entire manual before attempting to assemble or install the product.

The shed is intended for storage purposes only. It is not designed for habitation.

GENERAL BEST PRACTICES FOR ASSEMBLY

1. Please check with your local governing authority/local municipal codes regarding installation and permitting of such structures before assembly.
2. The assembled outdoor storage shed should be located at least 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry lines or electrical wires.
3. It is strongly recommended to secure the shed to an immovable object or anchor to the ground by drilling holes in the shed floor (at the pre-marked locations) and inserting proper screws into the ground (screws are not included).
4. Familiarize yourself with the product and check all parts against the packing list. If any parts are missing or damaged, do not install. Contact us immediately.
5. Always wear work gloves, safety goggles and long sleeves when assembling or performing any maintenance on your shed.
6. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
7. Require two or more people to assemble and install safely and correctly.

WARNINGS



To reduce the risk of serious injury, read the following safety instructions thoroughly before assembling and using the outdoor storage shed.

8. The product is required to be installed on a level solid surface and is not intended for unsecured use. The outdoor storage shed is to be anchored to the surface with appropriate bolts or anchors. Do not assemble the shed on soil, earth, or bare ground.
9. Keep children and pets away from the working area during assembly and adjustments.
10. Please ensure that there is no snow or leaves on the roof. A large amount of snow on the roof can damage the cabin and make it unsafe. This product has passed the level 8 (46 miles per hour) of the wind resistance, and the roof load test with a capacity of 800 pounds.
11. On snowy days, it is necessary to regularly clear the accumulated snow. You can use plastic rakes to remove the excessive snow and ice blocks on the roof. Take corresponding safety precautions to prevent the fallen snow from causing damage.
12. Do not leave children unattended around or inside outdoor storage sheds.
13. The weight of the items hung on the hooks inside the roof should not exceed 30 pounds.
14. Avoid using a lawnmower or mechanical scythe near the shed.
15. Wash the shed with a garden hose or a mild detergent solution. Do not use a metal brush or abrasive cleaners, including degreasers and oil- or acetone-based cleaning materials, as these may stain or damage the shed.
16. Do not store hot items, such as recently used grills and blowtorches, and volatile chemicals in the shed.

17. Wind direction is an important factor to consider when determining the location of the shed.

Reduce exposure to the wind, in general, and of the door side in particular. Keep doors closed and locked when the shed is not in use to prevent wind damage.

18. Do not stand on the roof.

WARRANTY

WHAT IS COVERED?

The limited warranty is extended to the original purchaser and applies to material and manufacturer's defect provided the item is maintained with care and used only for personal residential purposes.

Warranty: 6 months

Lost Accessories or Parts Policy:

Lost accessories or parts costs will be incurred after 90 days of the date of purchase.


TIP: Our products have been designed for safety and quality. Any modifications made to the original product could damage the structural integrity of the product leading to failure and possible injury. We can not assume any responsibility for modified products. Furthermore modifications void any and all warranties.

Site preparation


1. Leveling the ground.




2. Recommendation: Construct a wooden or concrete base as a foundation.

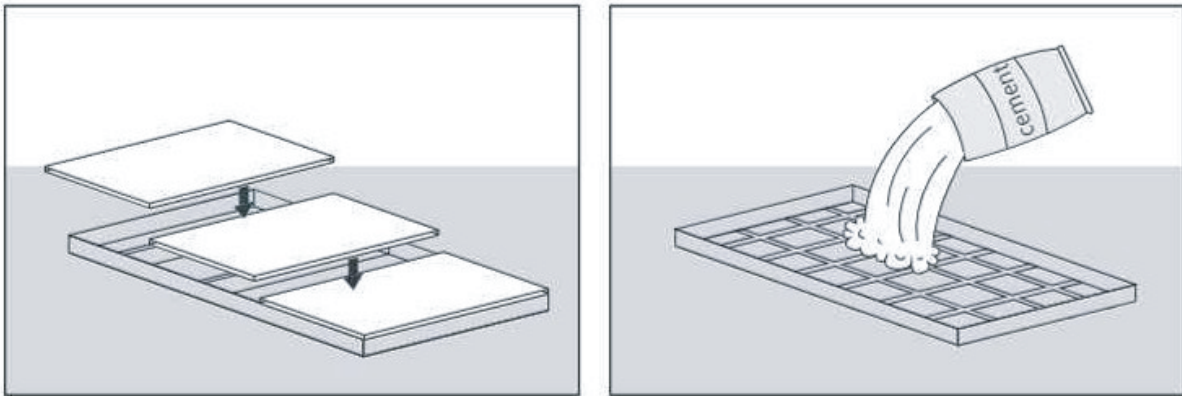













3. Parts are placed after unpacking.

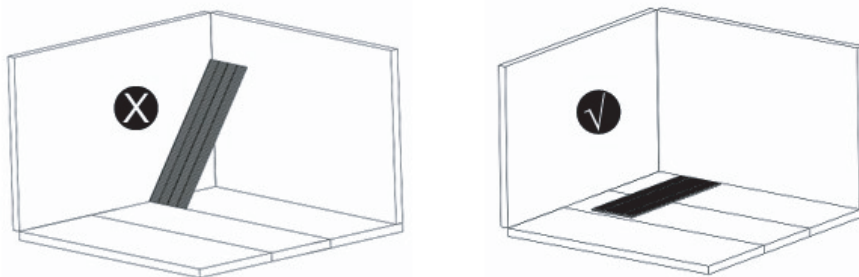














Tools Needed (Not Included)

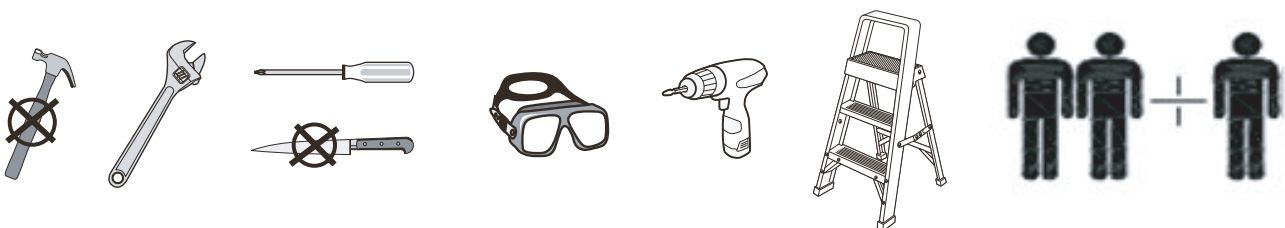



Parts List (Box 1)

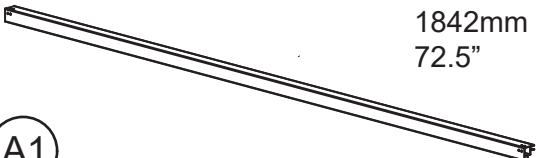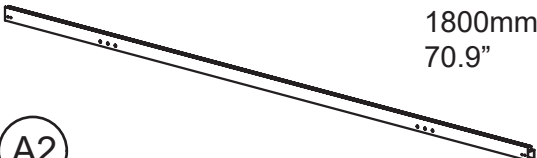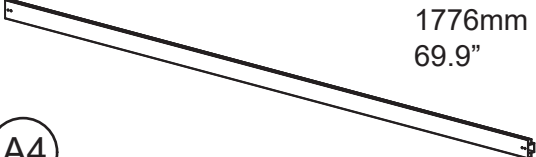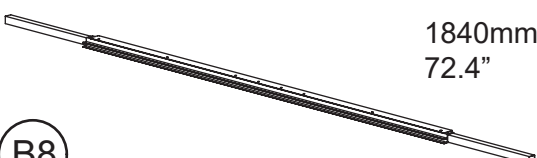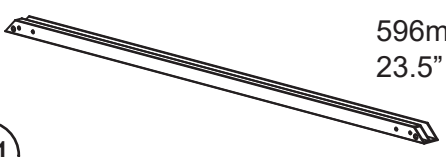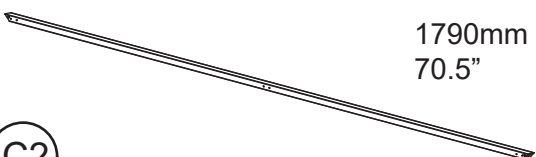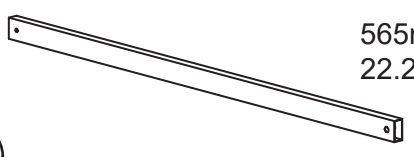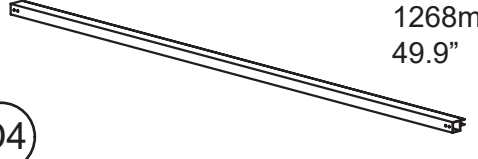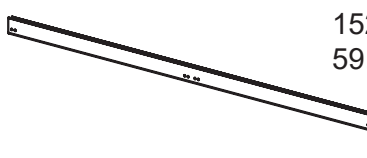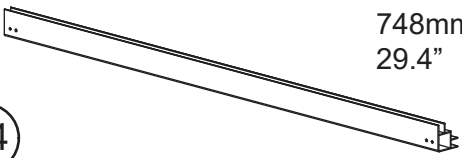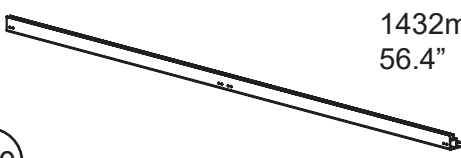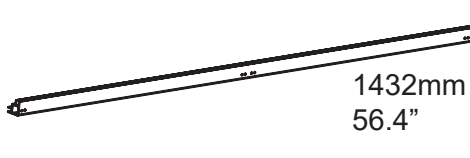 1842mm 72.5" (A1) 4×	 1800mm 70.9" (A2) 2×
 1776mm 69.9" (A4) 8×	 1520mm 59.8" (B5) 1×
 1518mm 59.8" (B6) 1×	 1840mm 72.4" (B8) 1×
 500mm 19.7" (B9) 2×	 596mm 23.5" (C1) 4×
 1790mm 70.5" (C2) 4×	 565mm 22.2" (C4) 2×
 500mm 19.7" (D2) 2×	 1268mm 49.9" (D4) 1×
 1520mm 59.8" (E3) 1×	 748mm 29.4" (E4) 1×
 1432mm 56.4" (E10) 2×	 1432mm 56.4" (E11) 2×


Parts List (Box 1)

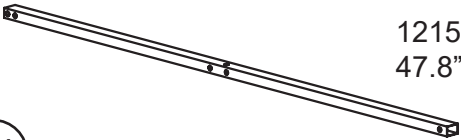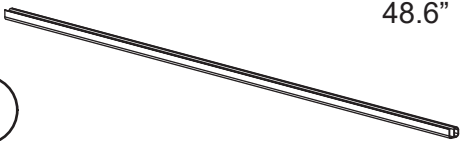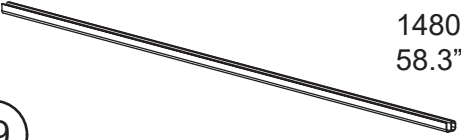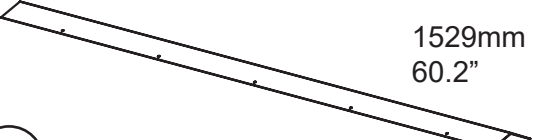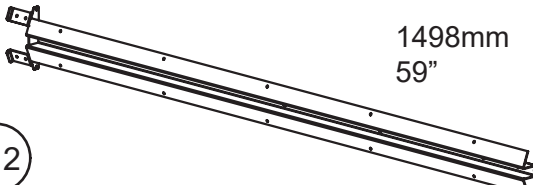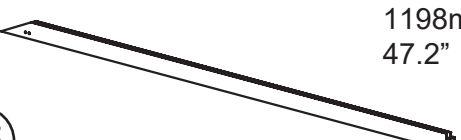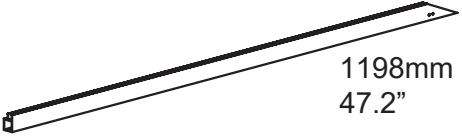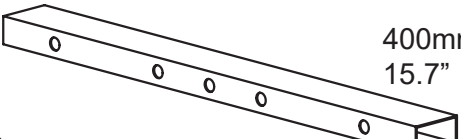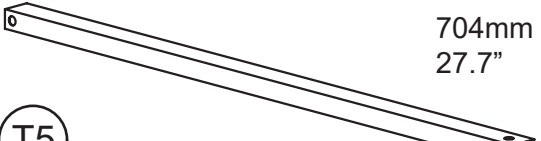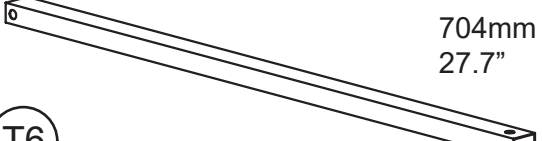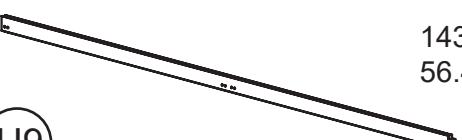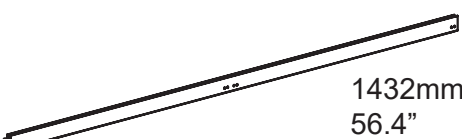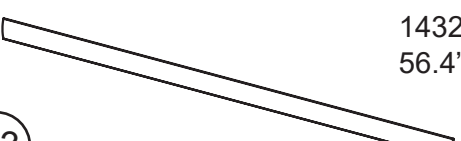(F4)  1215mm 47.8"  6x	(I5)  1235mm 48.6"  4x
(I9)  1480mm 58.3"  4x	(J13)  1244mm 49"  1x
(L11)  1529mm 60.2"  2x	(L12)  1498mm 59"  2x
(M5)  1198mm 47.2"  2x	(M6)  1198mm 47.2"  2x
(Q4)  400mm 15.7"  1x	(S2)  1152mm 45.4"  3x
(T5)  704mm 27.7"  4x	(T6)  704mm 27.7"  4x
(U9)  1432mm 56.4"  2x	(U10)  1432mm 56.4"  2x
(V3)  1432mm 56.4"  2x	






Parts List (Box 2)

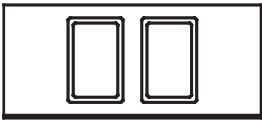 (H6) 592x307mm 23.3x12.1" 1x	 (H7) 592x307mm 23.3x12.1" 4x
 (H8) 592x288mm 23.3x11.3" 2x	 (H13) 592x307mm 23.3x12.1" 2x
 (H14) 592x307mm 23.3x12.1" 2x	 (H17) 592x307mm 23.3x12.1" 1x
 (H20) 704x307mm 27.7x12.1" 36x	 (H27) 704x300mm 27.7x11.8" 8x
 (K1) 4x	 (K2) 2x
 (N6) 704x307mm 27.7x12.1" 4x	







Parts List (Box 2)—Tool

 (17) 1x	 (18) 10-14 1x
---	--



Parts List (Box 3)

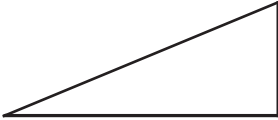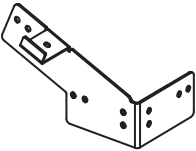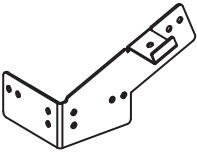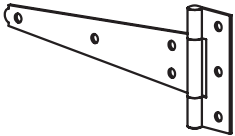 A5 187mm 7.4"  1×	 A6 285mm 11.2"  1×
 A7 187mm 7.4"  1×	 A8 285mm 11.2"  1×
 G4 1222*307mm 48.1x12.1" 1×	 G5 748x156mm 29.4x6.1" 2×
 G6 474x196mm 18.7x7.7" 2×	 G7 710x294mm 28x11.6" 2×
 H3 748x307mm 29.4x12.1" 7×	 J1 2×
 J2 2×	 J4 2×
 J7 8×	 J9 6×
 J10 4×	 J14 4×



Parts List (Box 3)

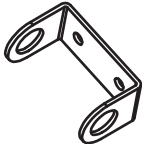J15		4x
J18		2x
J21		1x
J23		4x
J27		1x
J29		6x
J34		2x
J36		3x
J16		2x
J19		2x
J22		1x
J24		4x
J28		1x
J31		4x
J35		8x
J37		6x



Parts List (Box 3)

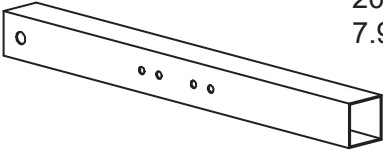
J38  4x	J39  6x
Q2  200mm 7.9"  7x	W1  1144x307mm 45x12.1" 18x
W2  1144x188mm 45x7.4" 2x	

Parts List (Box 3)—Hardware

 st4.2x20 32×	 st4.2x10 572×
 M6x15 77×	 M6x32 24×
 M5x18 21×	 M5 33×
 M6 24×	 32×
 4×	 2×
 M5x30 12×	 st4.2x12 52×
 4mm 1×	 3mm 1×
 8-10 1×	



Parts List (Box 4)

 H3 748x307mm 29.4x12.1" 9×	 H4 522x307mm 20.6x12.1" 10×
 H25 522x300mm 20.6x11.8" 2×	 H26 748x300mm 29.4x11.8" 3×
 P3 1266x307mm 49.8x12.1" 16×	 P3A 1266x307mm 49.8x12.1" 2×
 P3C 1266x292mm 49.8x11.5" 2×	

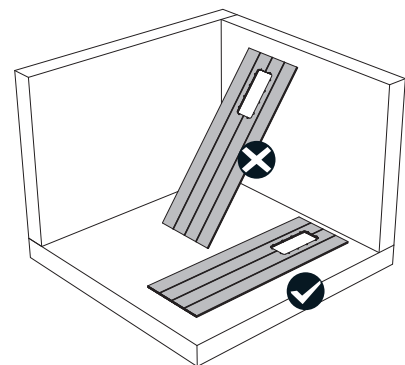



All parts must be appropriately positioned in their designated areas upon unpacking.

Item Specifications

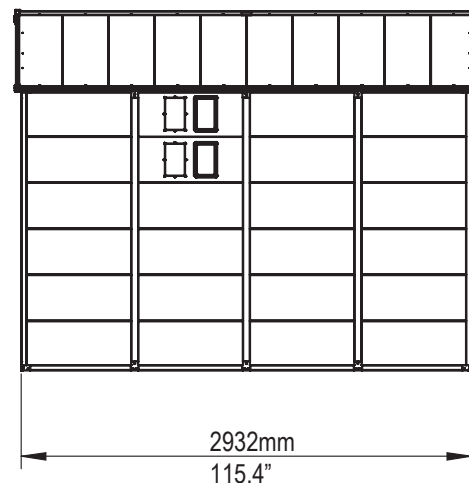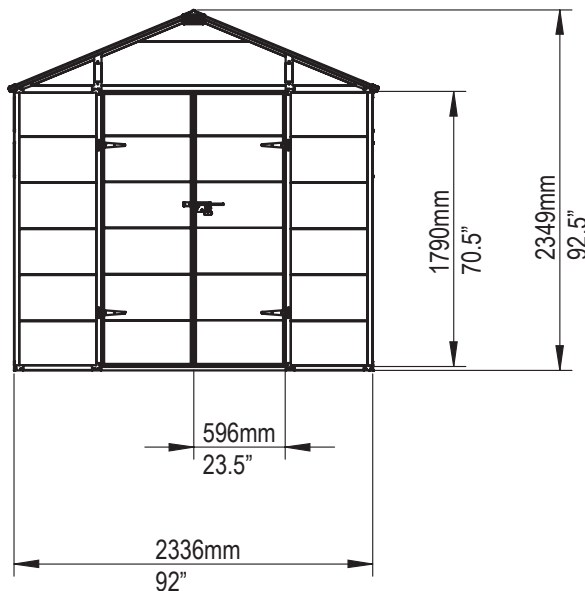

Base Depth

**Base Width & Door Width
Peak Height & Door Height**

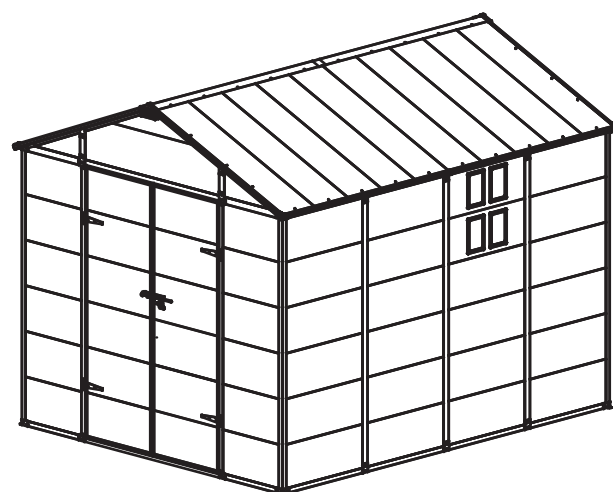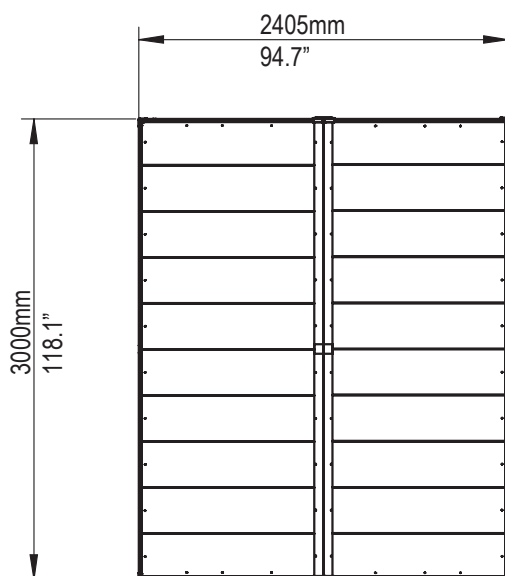




Roof Width & Depth

W1 18x

W2 2x

<1>

Floor assembly

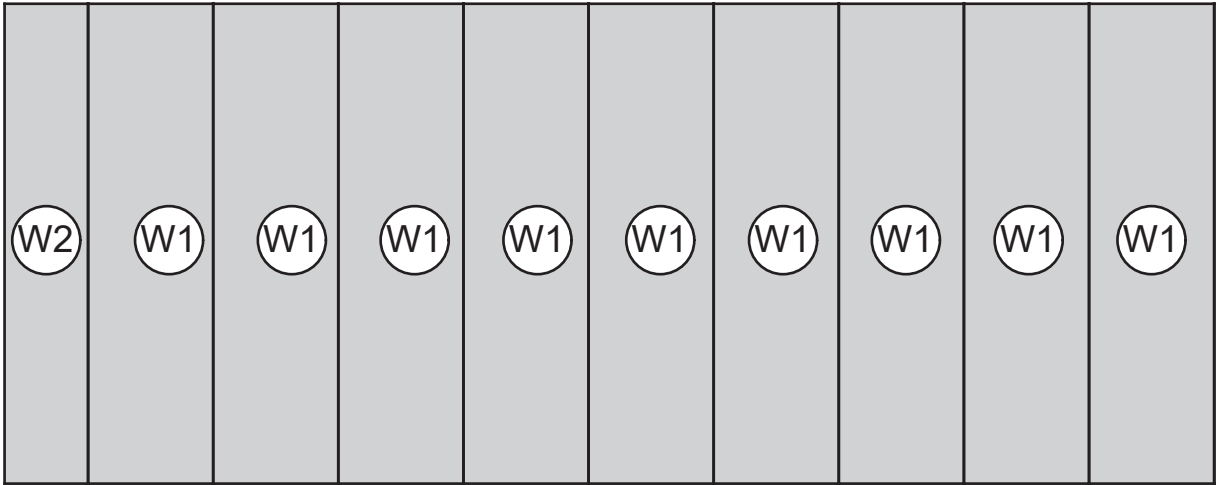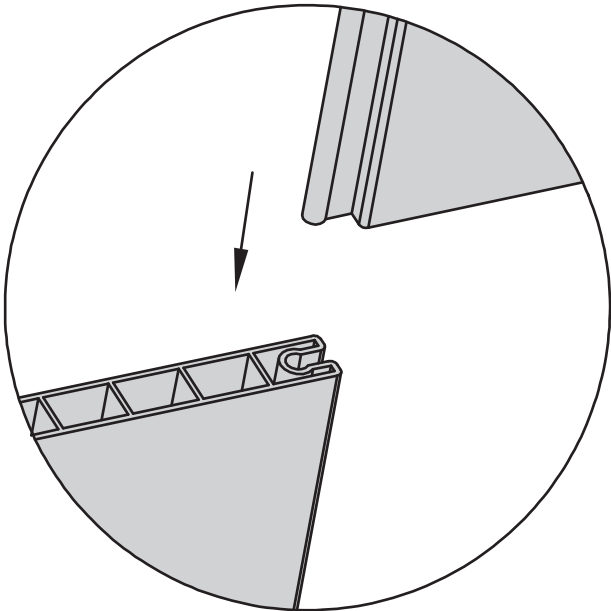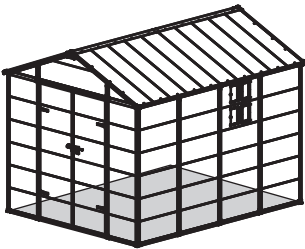




(E3) 1x



(E4) 1x



(Q2) 1x





(J7) 2x




st4.2x10

(2) 8x

<2>

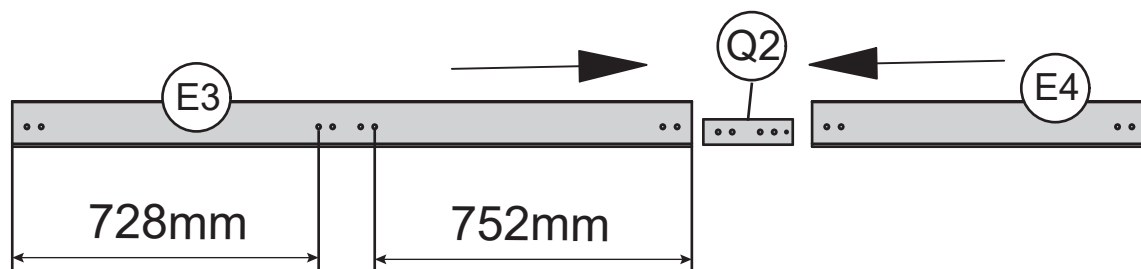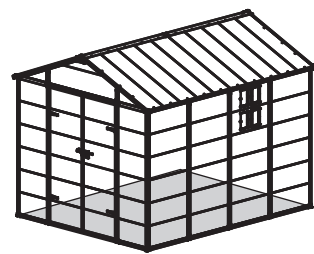

Pay attention to the direction of "E3"

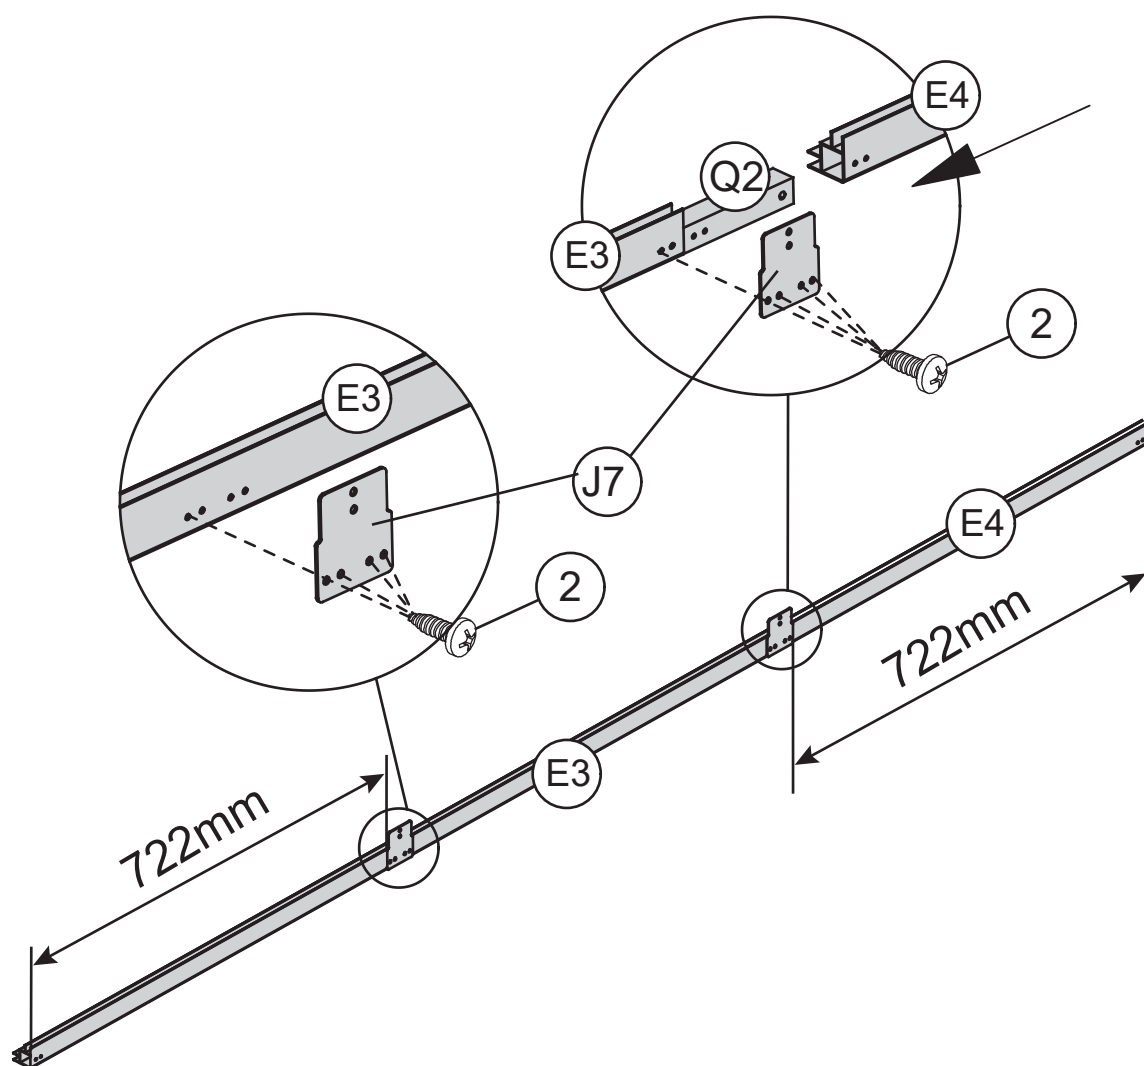




(E10) 2x



(E11) 2x



(Q2) 2x





(J7) 6x




st4.2x10

(2) 24x

<3>

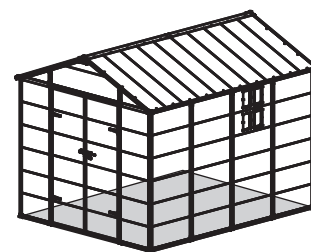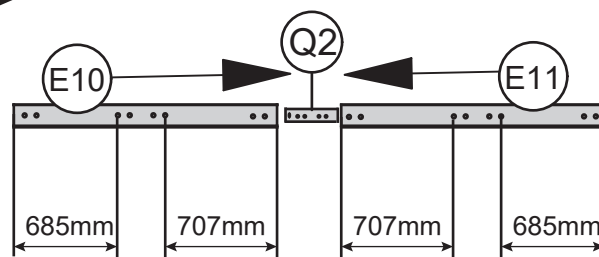

Pay attention to the direction of "E10" & "E11"

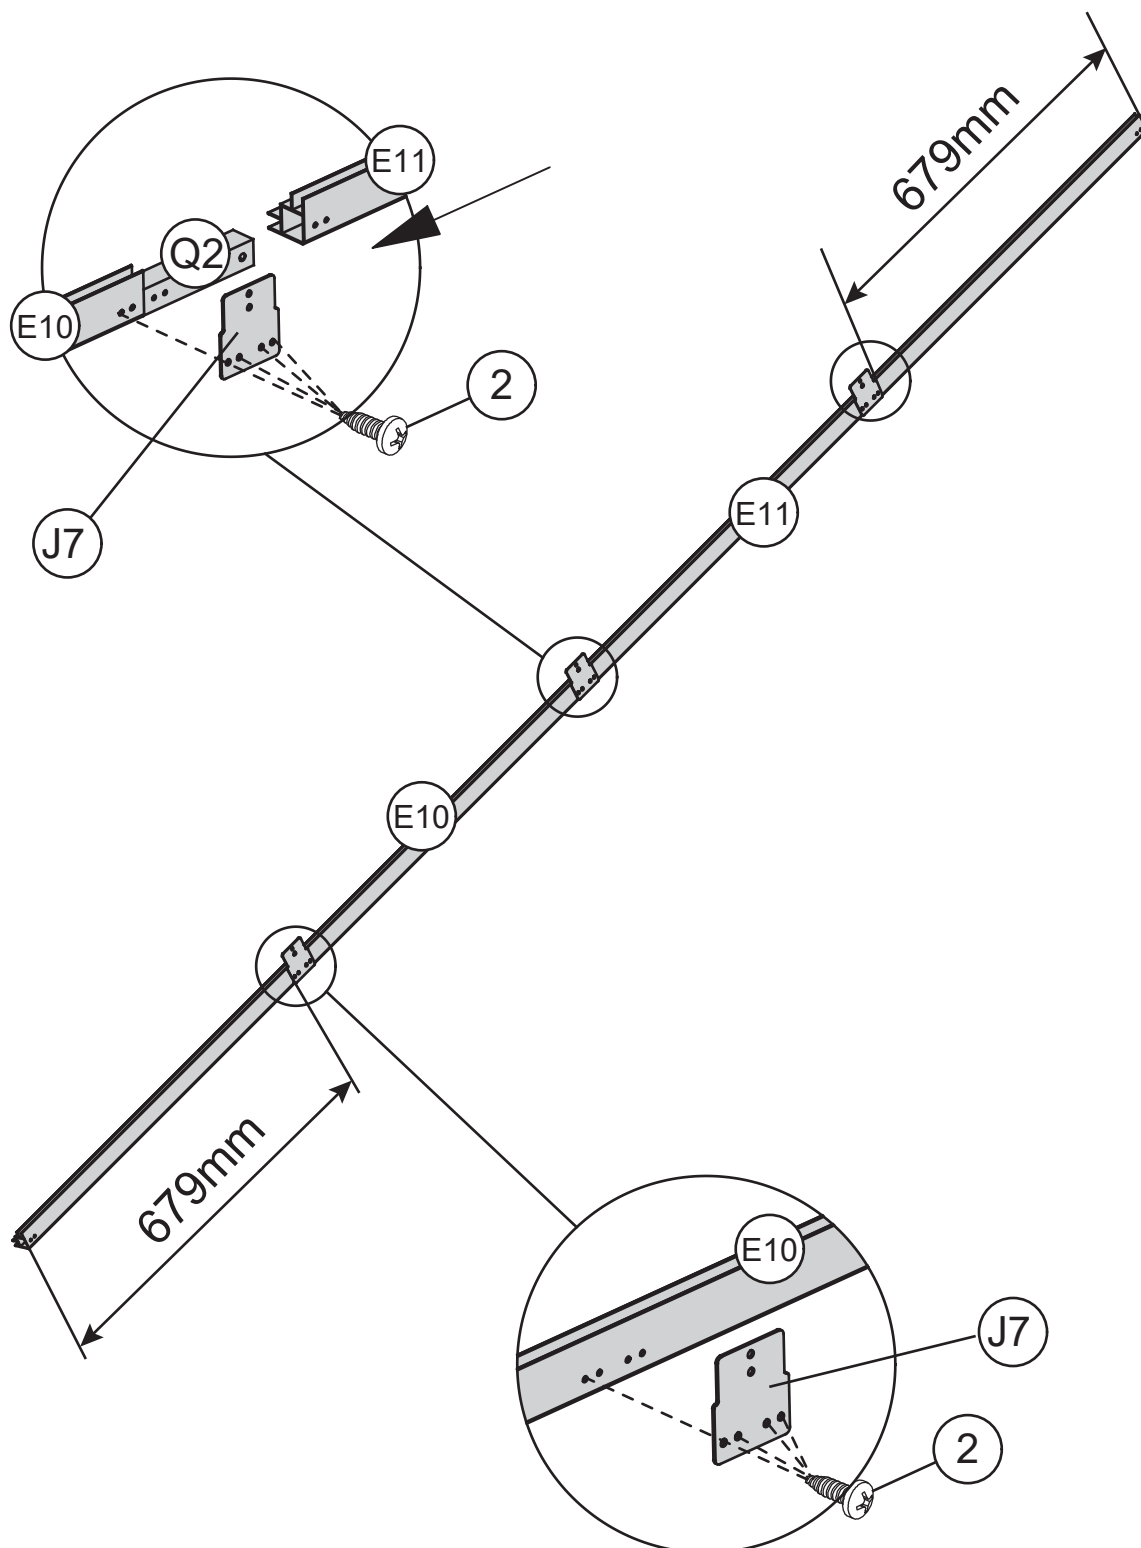




(D2) 2x



(D4) 1x



(Q2) 2x





(J4) 2x



st4.2x10

(2) 8x





<4>

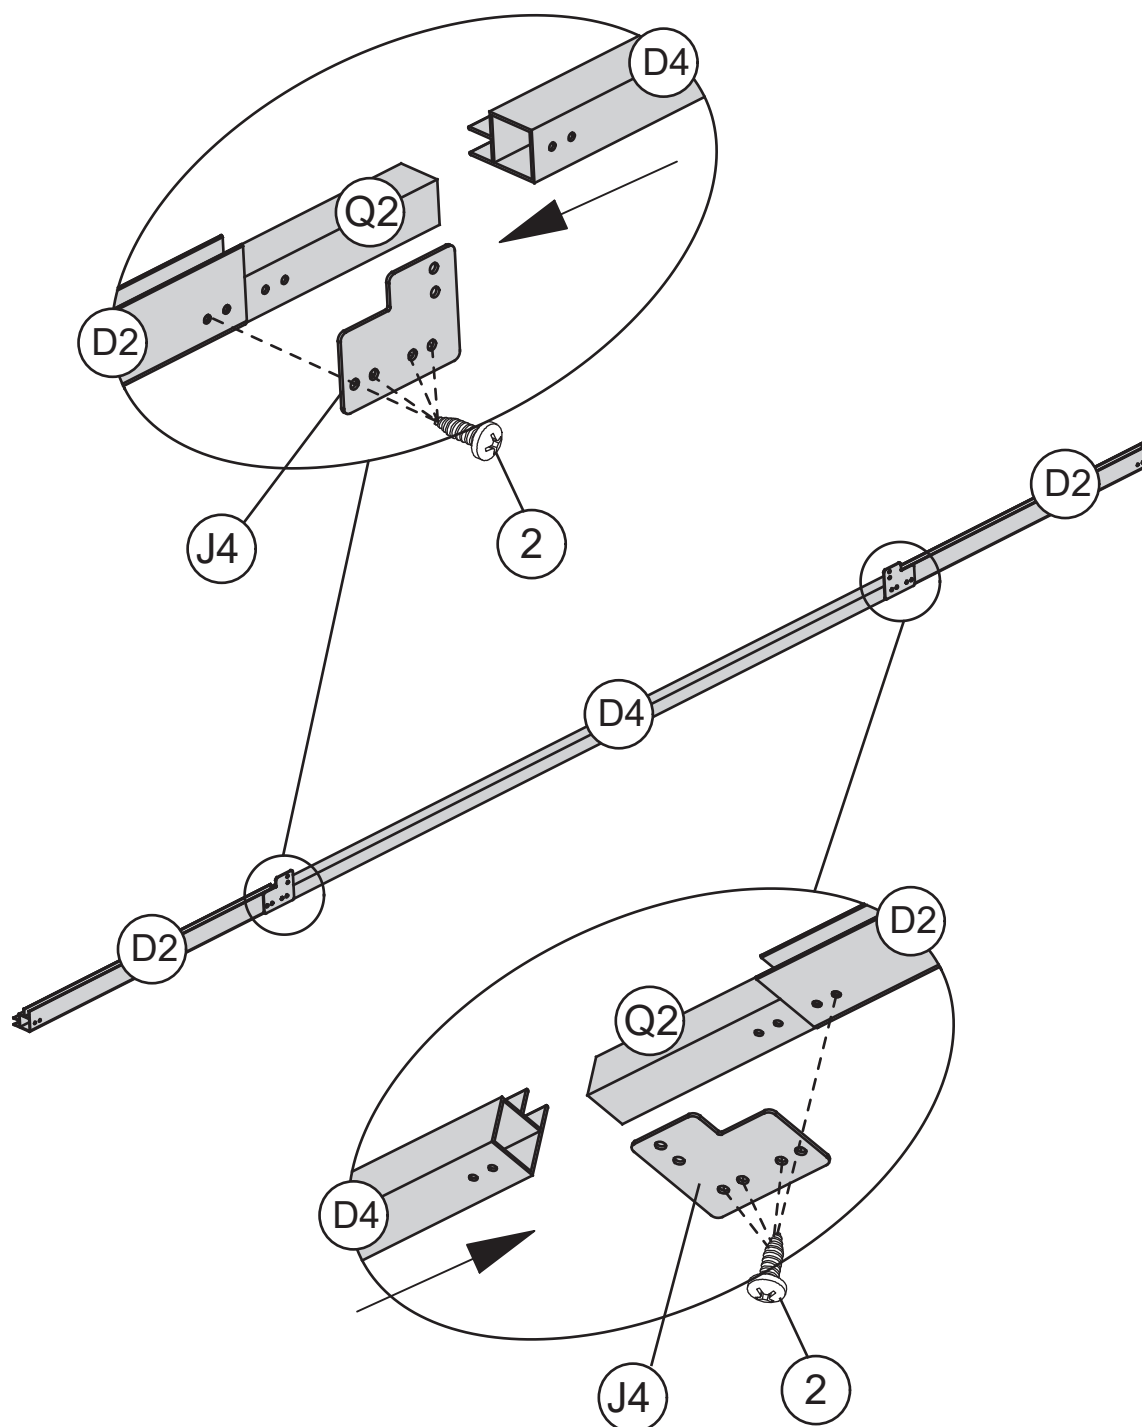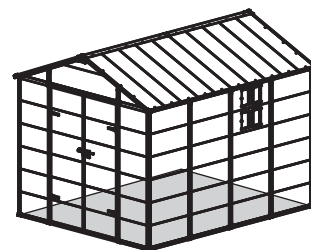




V3 2x

<5>

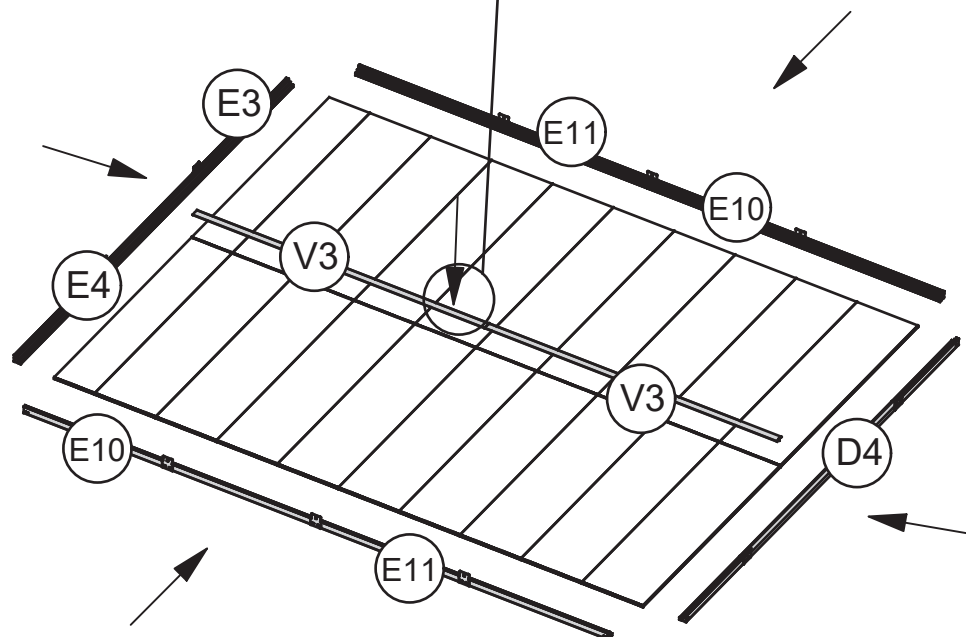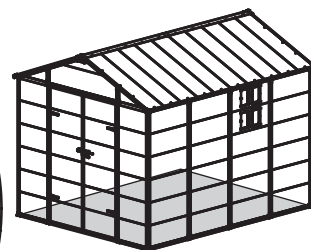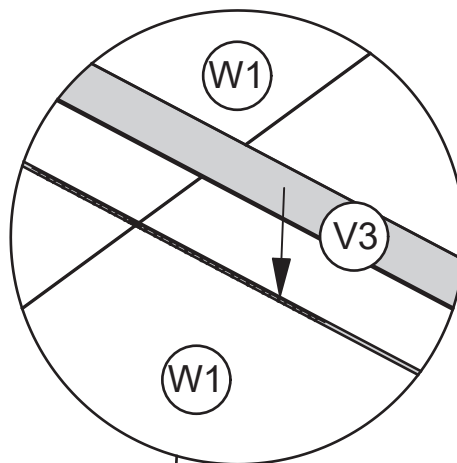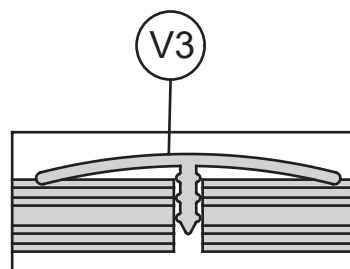

Two people are required to work together
to insert the floor panel into the slot.

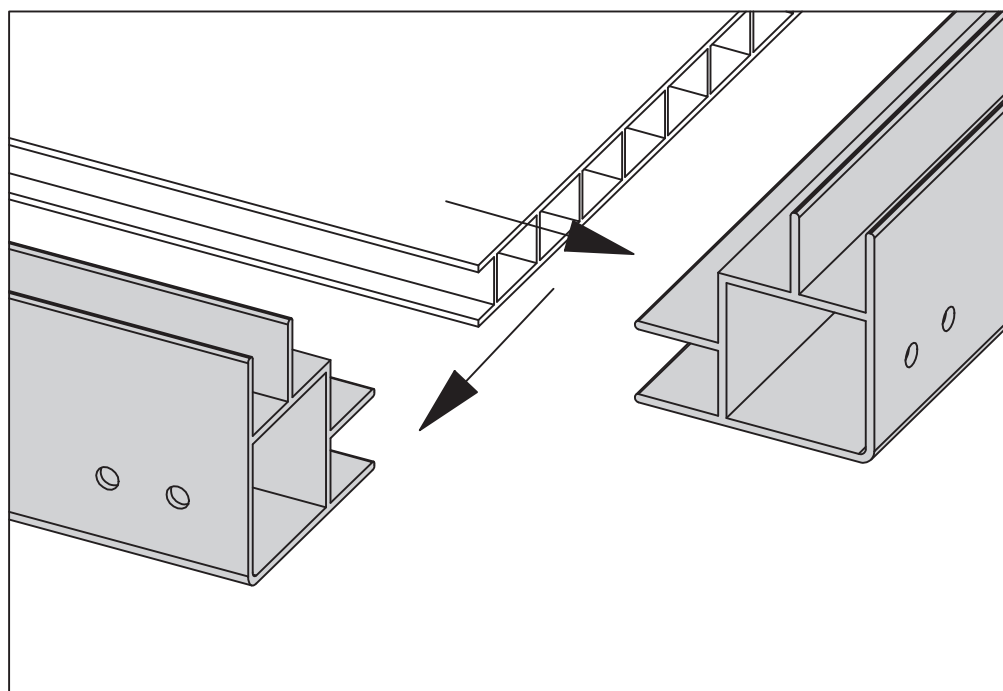



(A1) 4x





(J15) 4x



st4.2x10

(2) 16x

<6>

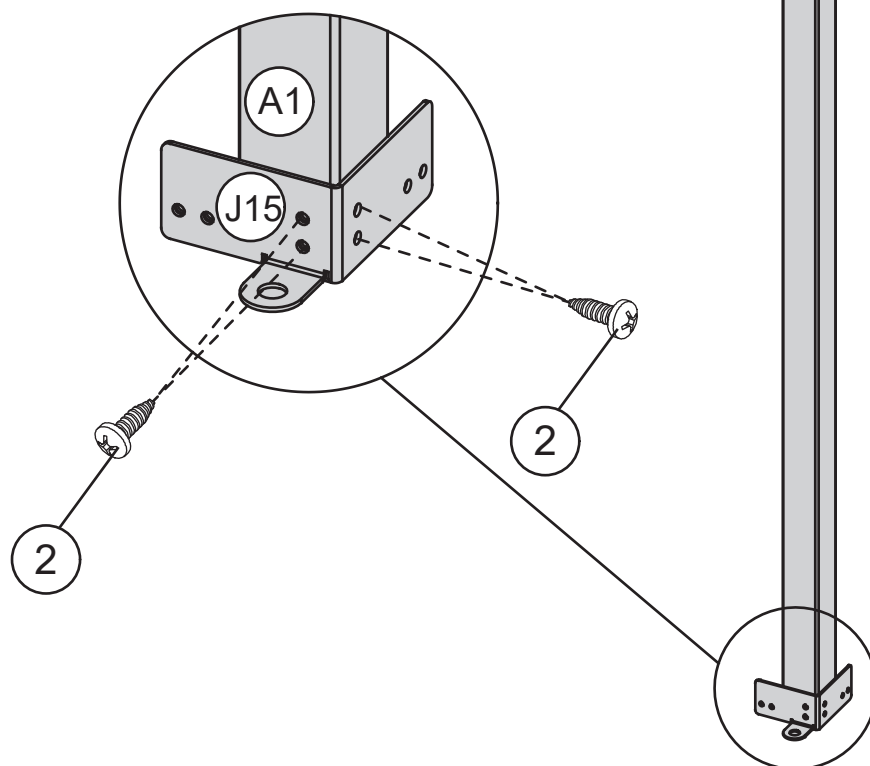
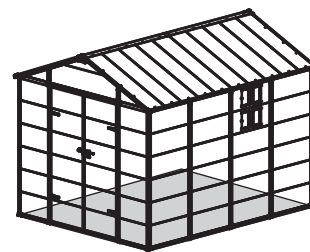




st4.2x10

2 16x

<7>

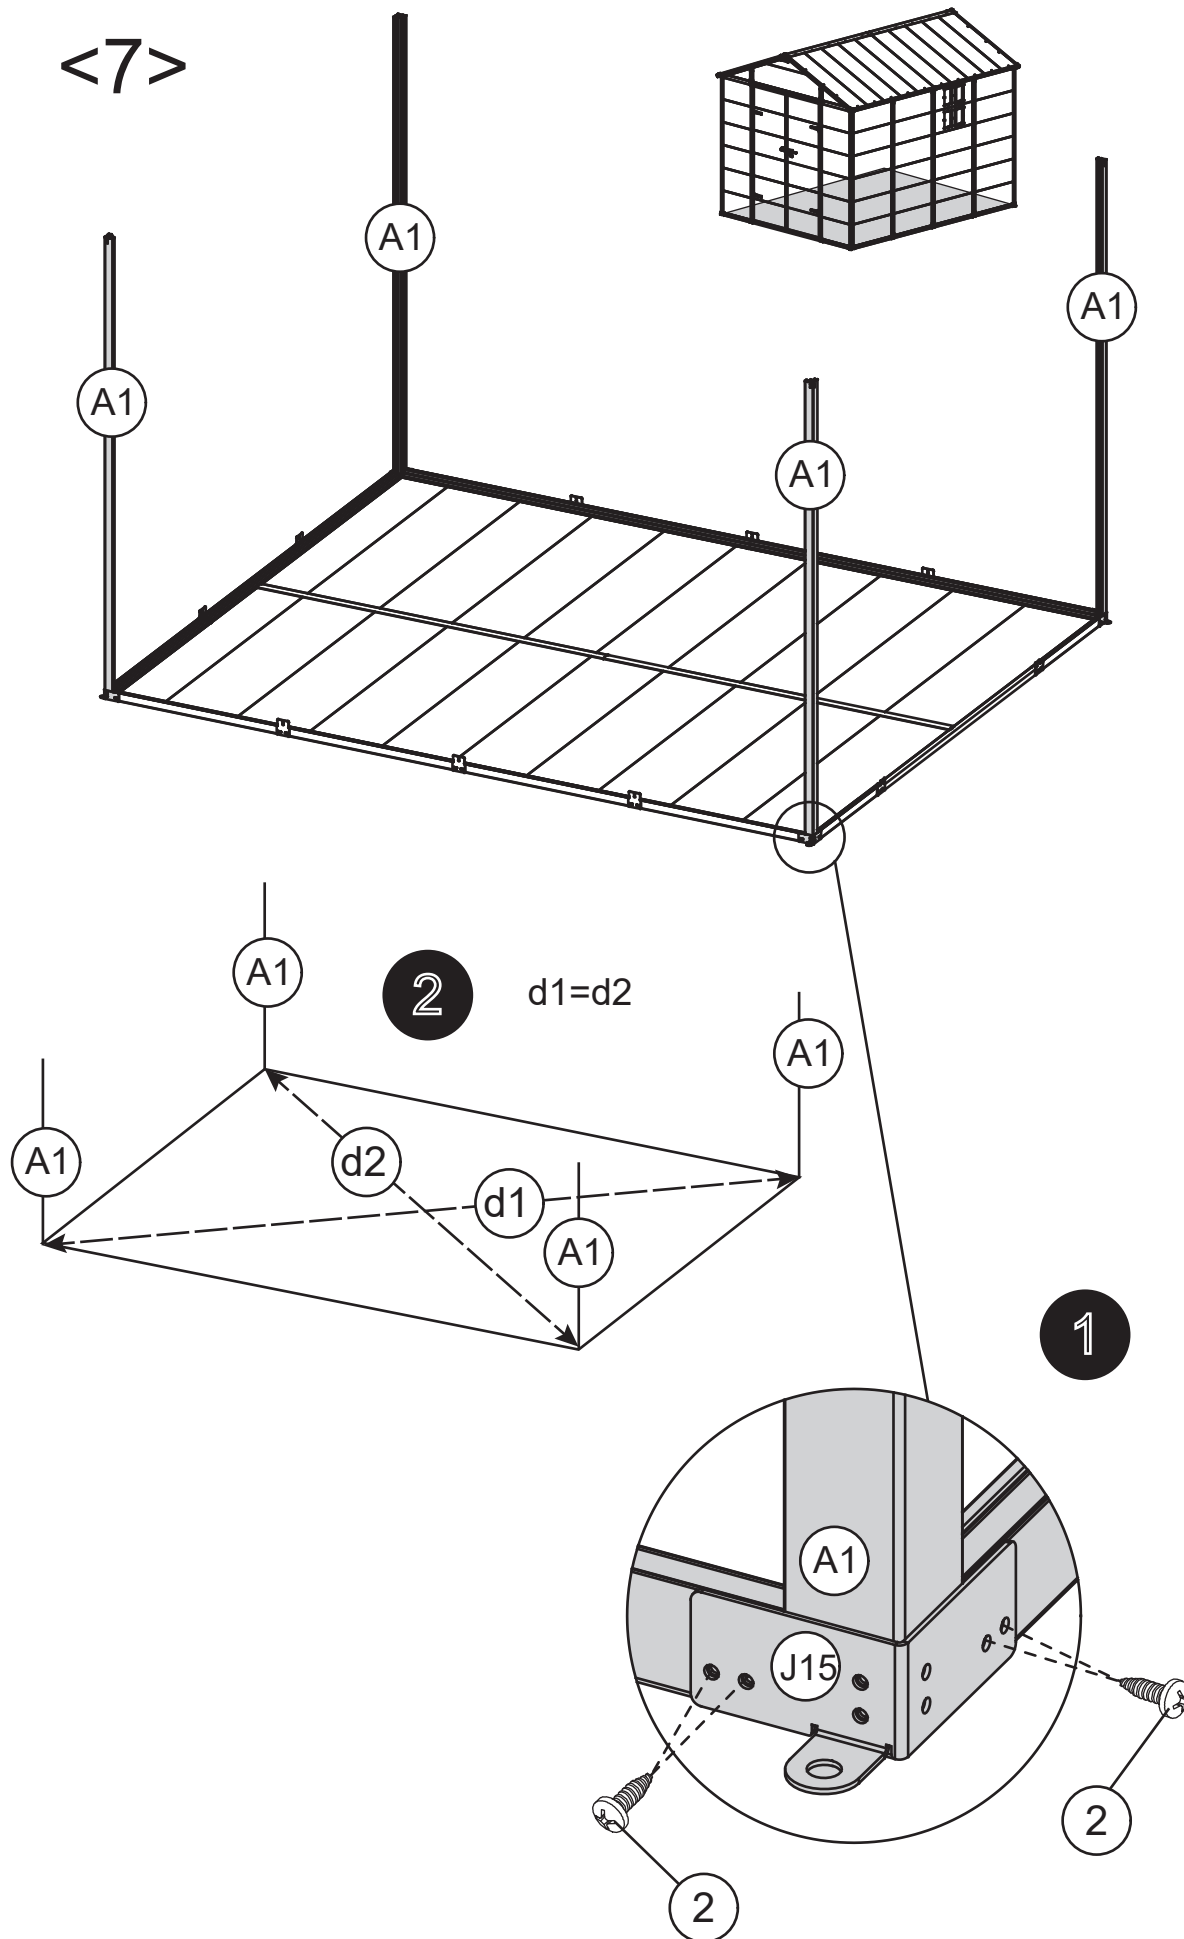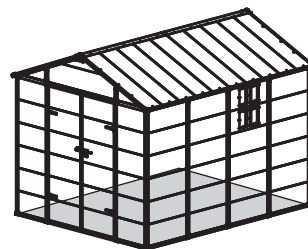

Tips:

Please measure to make sure the length of d1 is equal to d2 before moving to next step to ensure a square frame and best results. Otherwise, please make adjustments.







st4.2x10



2 50x

<8>


x20 Equal spacing

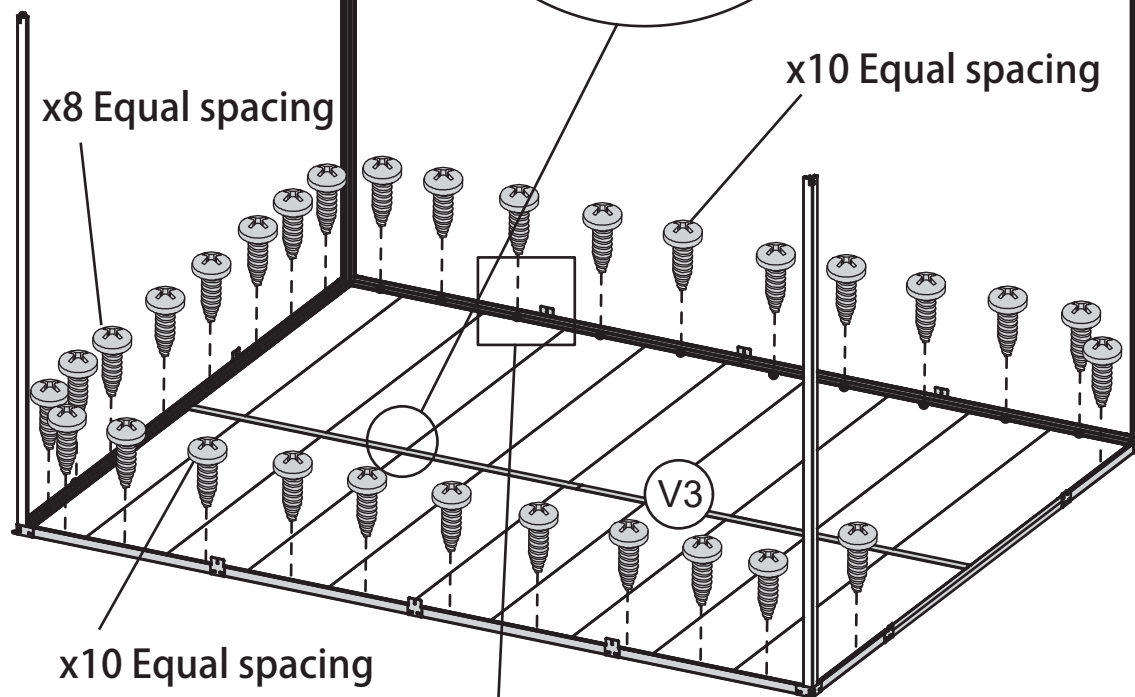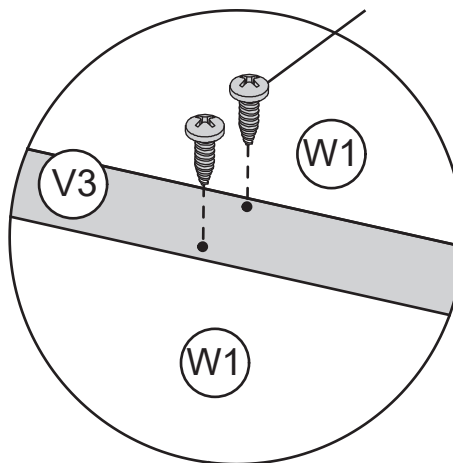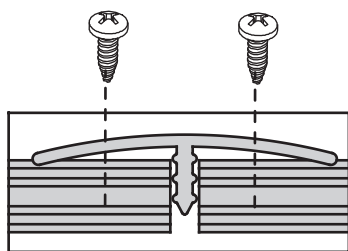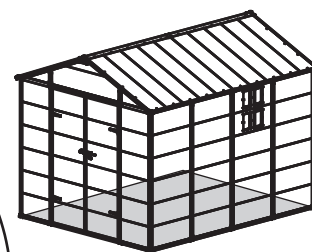

Fit the bottom frame tightly against the floor, then secure it with screws.

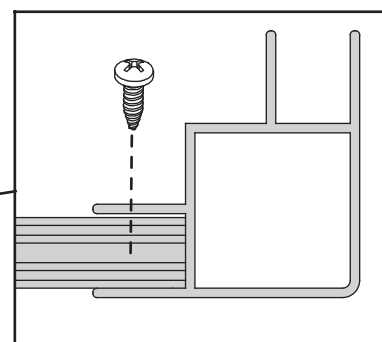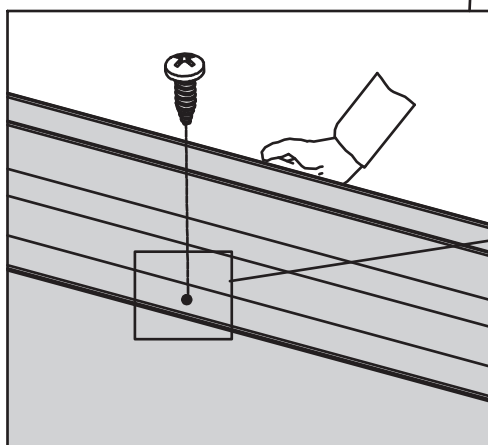

Note: Use discarded packaging cardboard to protect the floor surface during assembly.






A4 8x



st4.2x10
2 16x

<9>

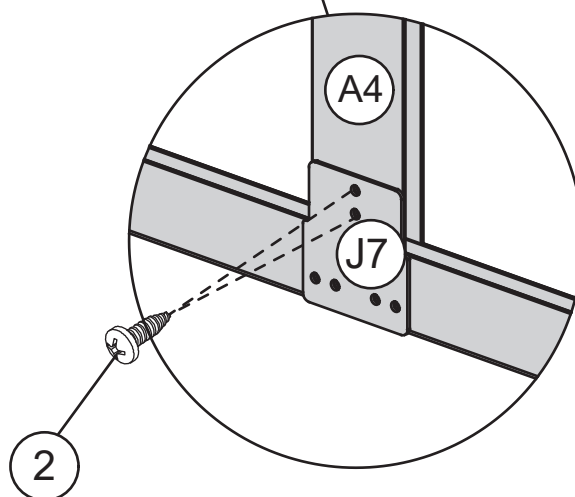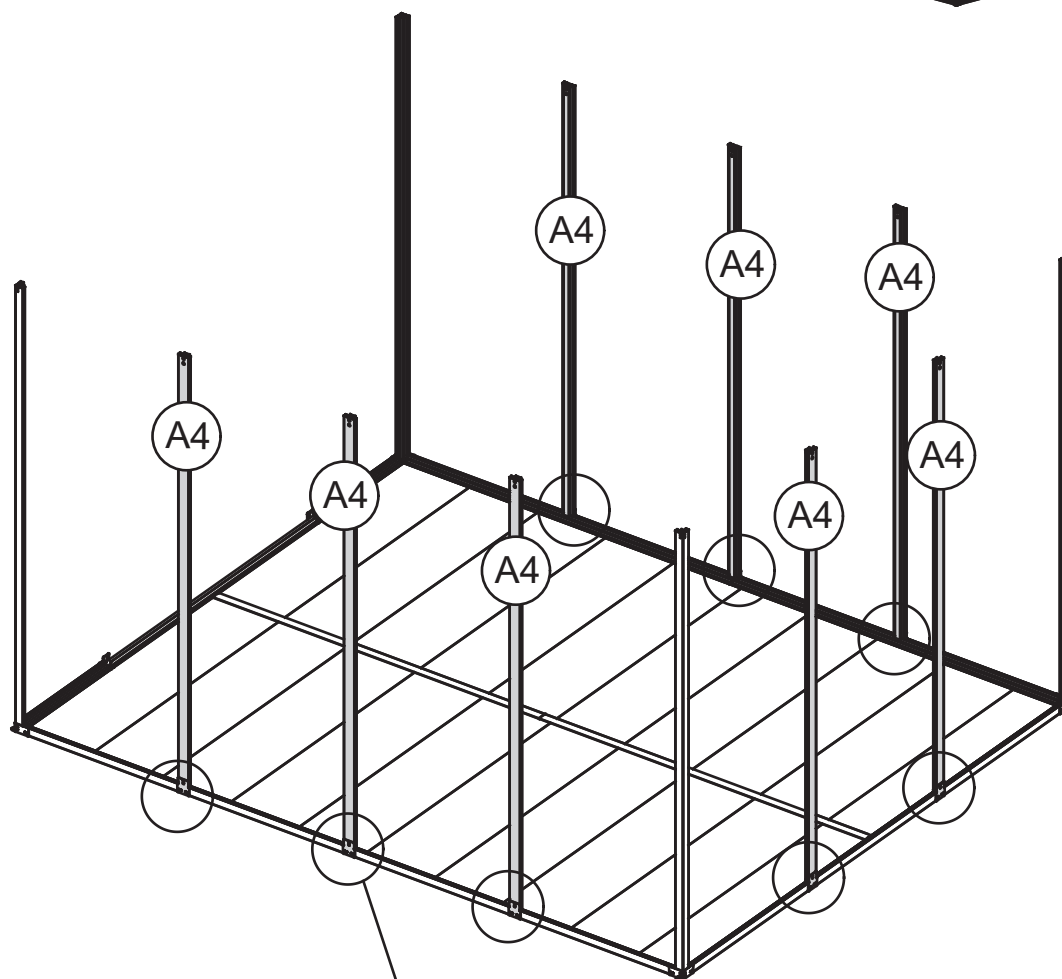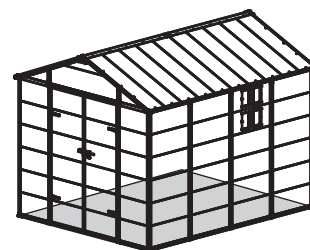



(H26) 3x



(H27) 8x




st4.2x10


(2) 22x

<10>



Wall panel assembly

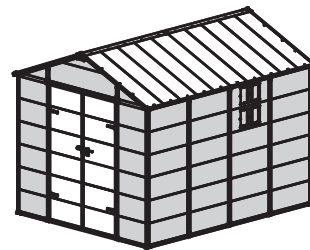


3

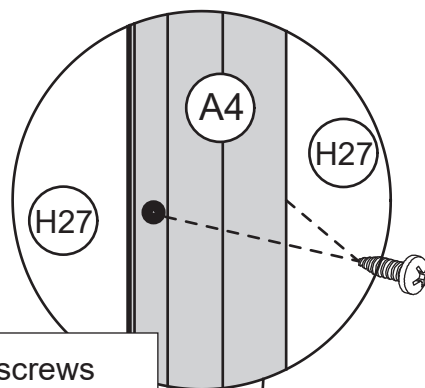

Fasten the screws
at the middle position.

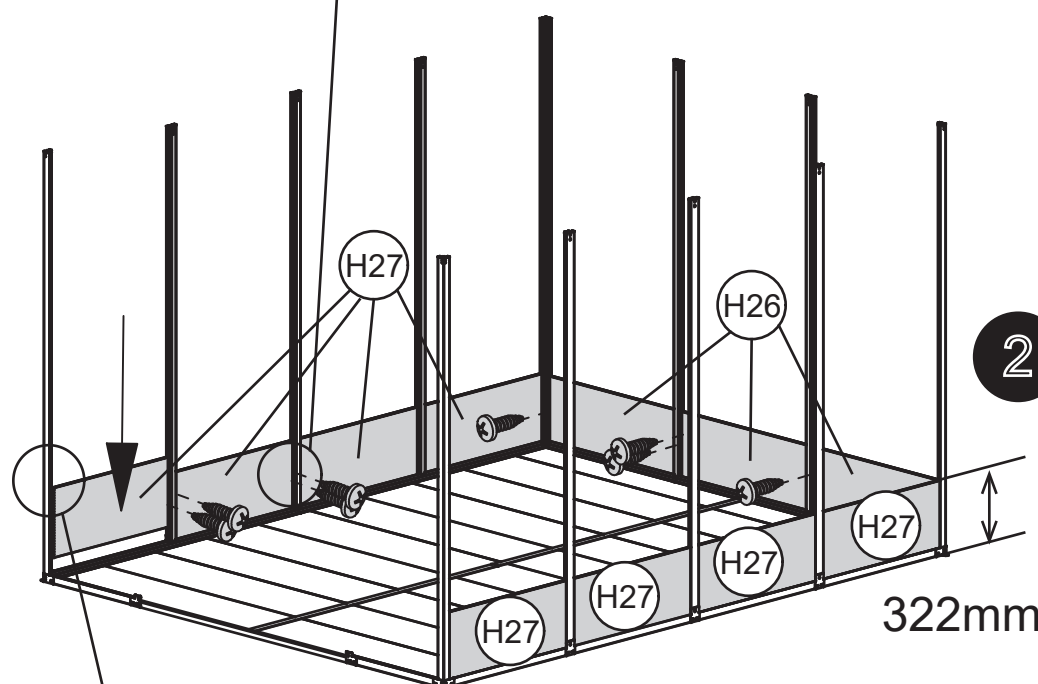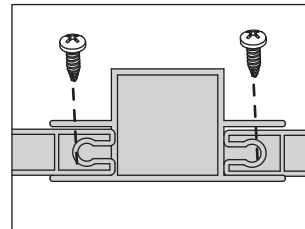


1

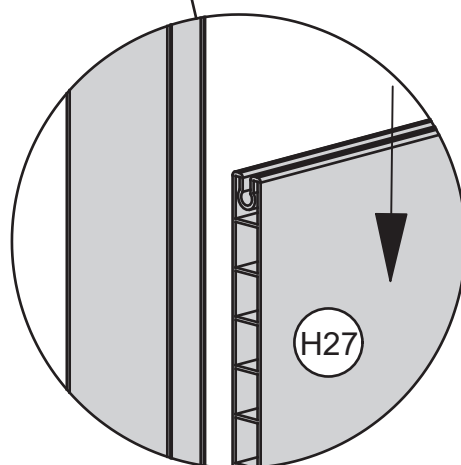

Ensure the wall panel is fully inserted
before tightening the screws.
The distance from the ground to
the panel is 322 mm/12.677 inch.
Once the board is plugged in,
a screw should be tightened to secure it.



(A2) 2x




(J10) 4x



M5




(7) 12x



M5x30

(12) 12x

<11>

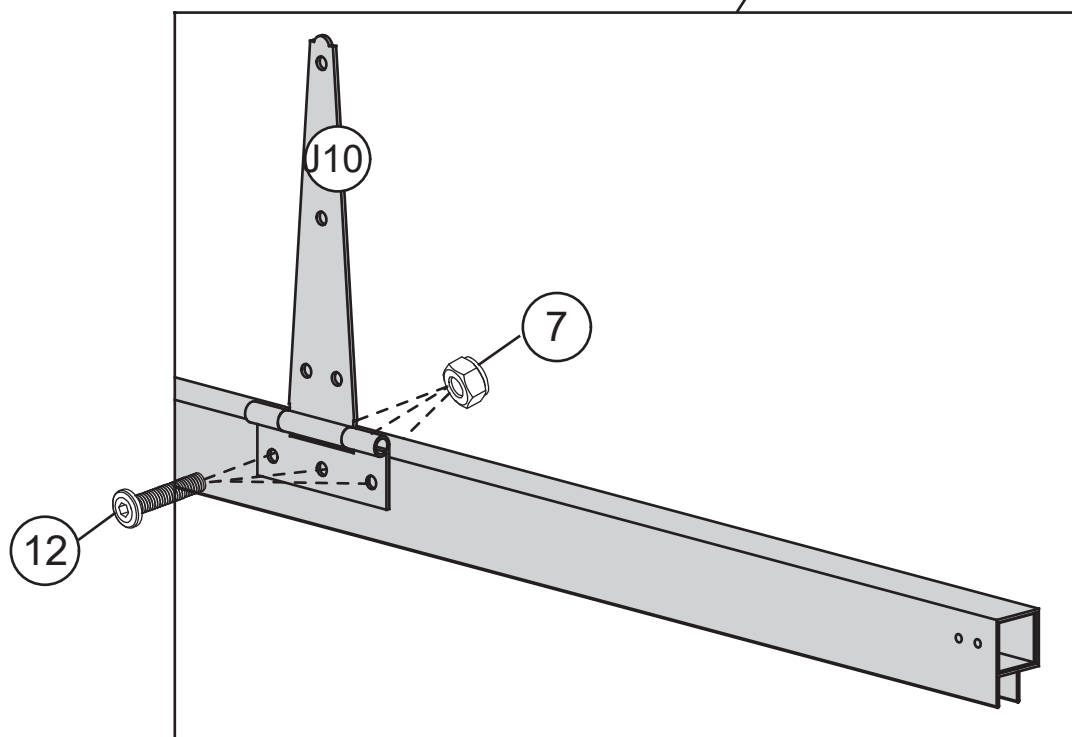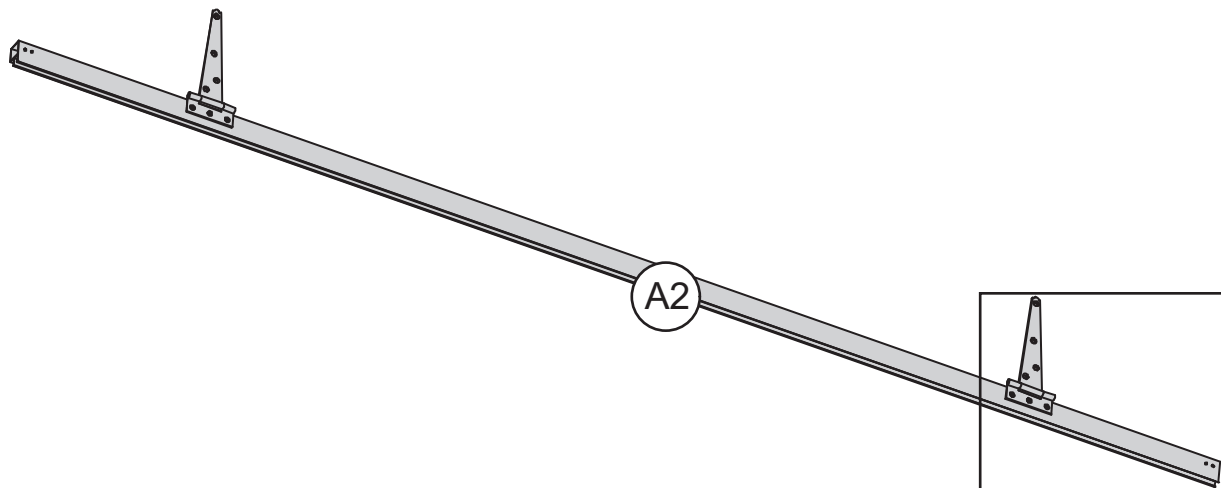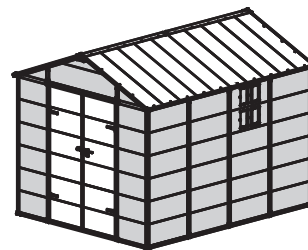



J13 1x




st4.2x10

2 12x

<12>

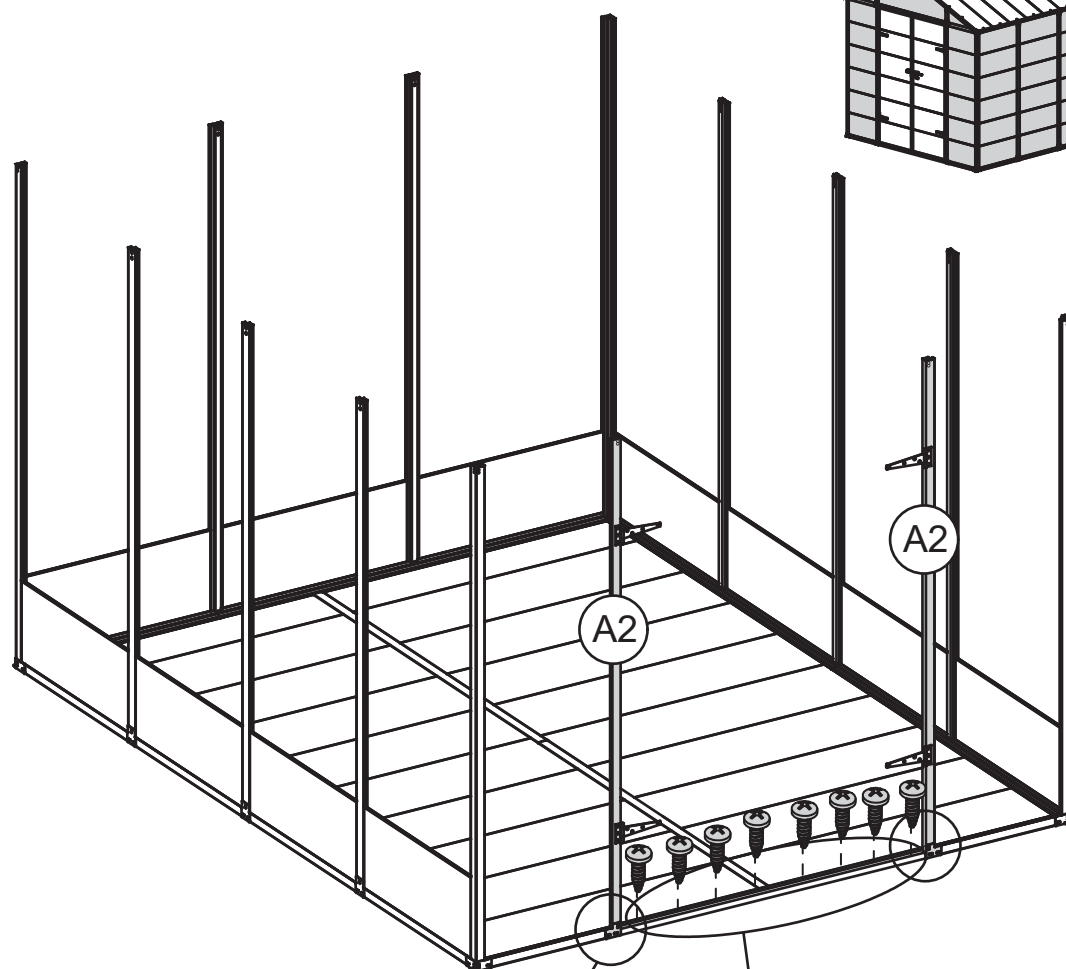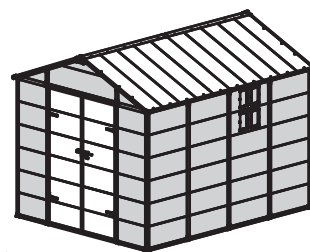

1

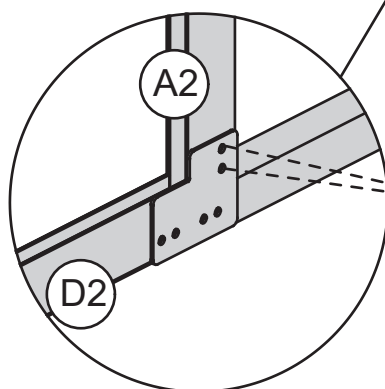


2

2


2 x8

J13

J13

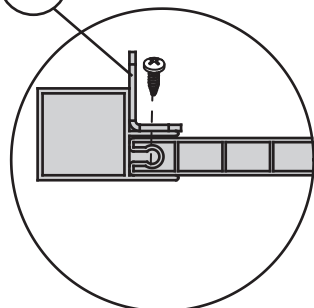

D2

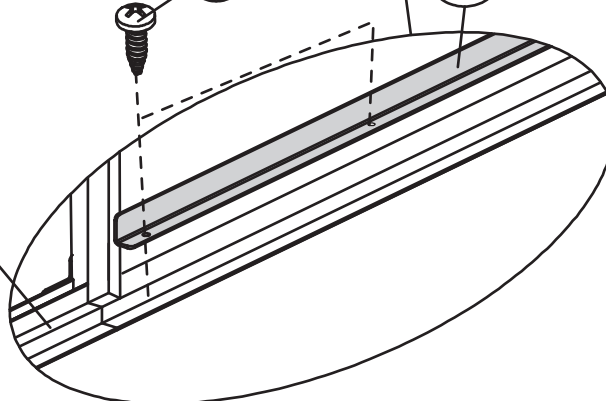



- H25 2x
- 

st4.2x10

2

4x

<13>

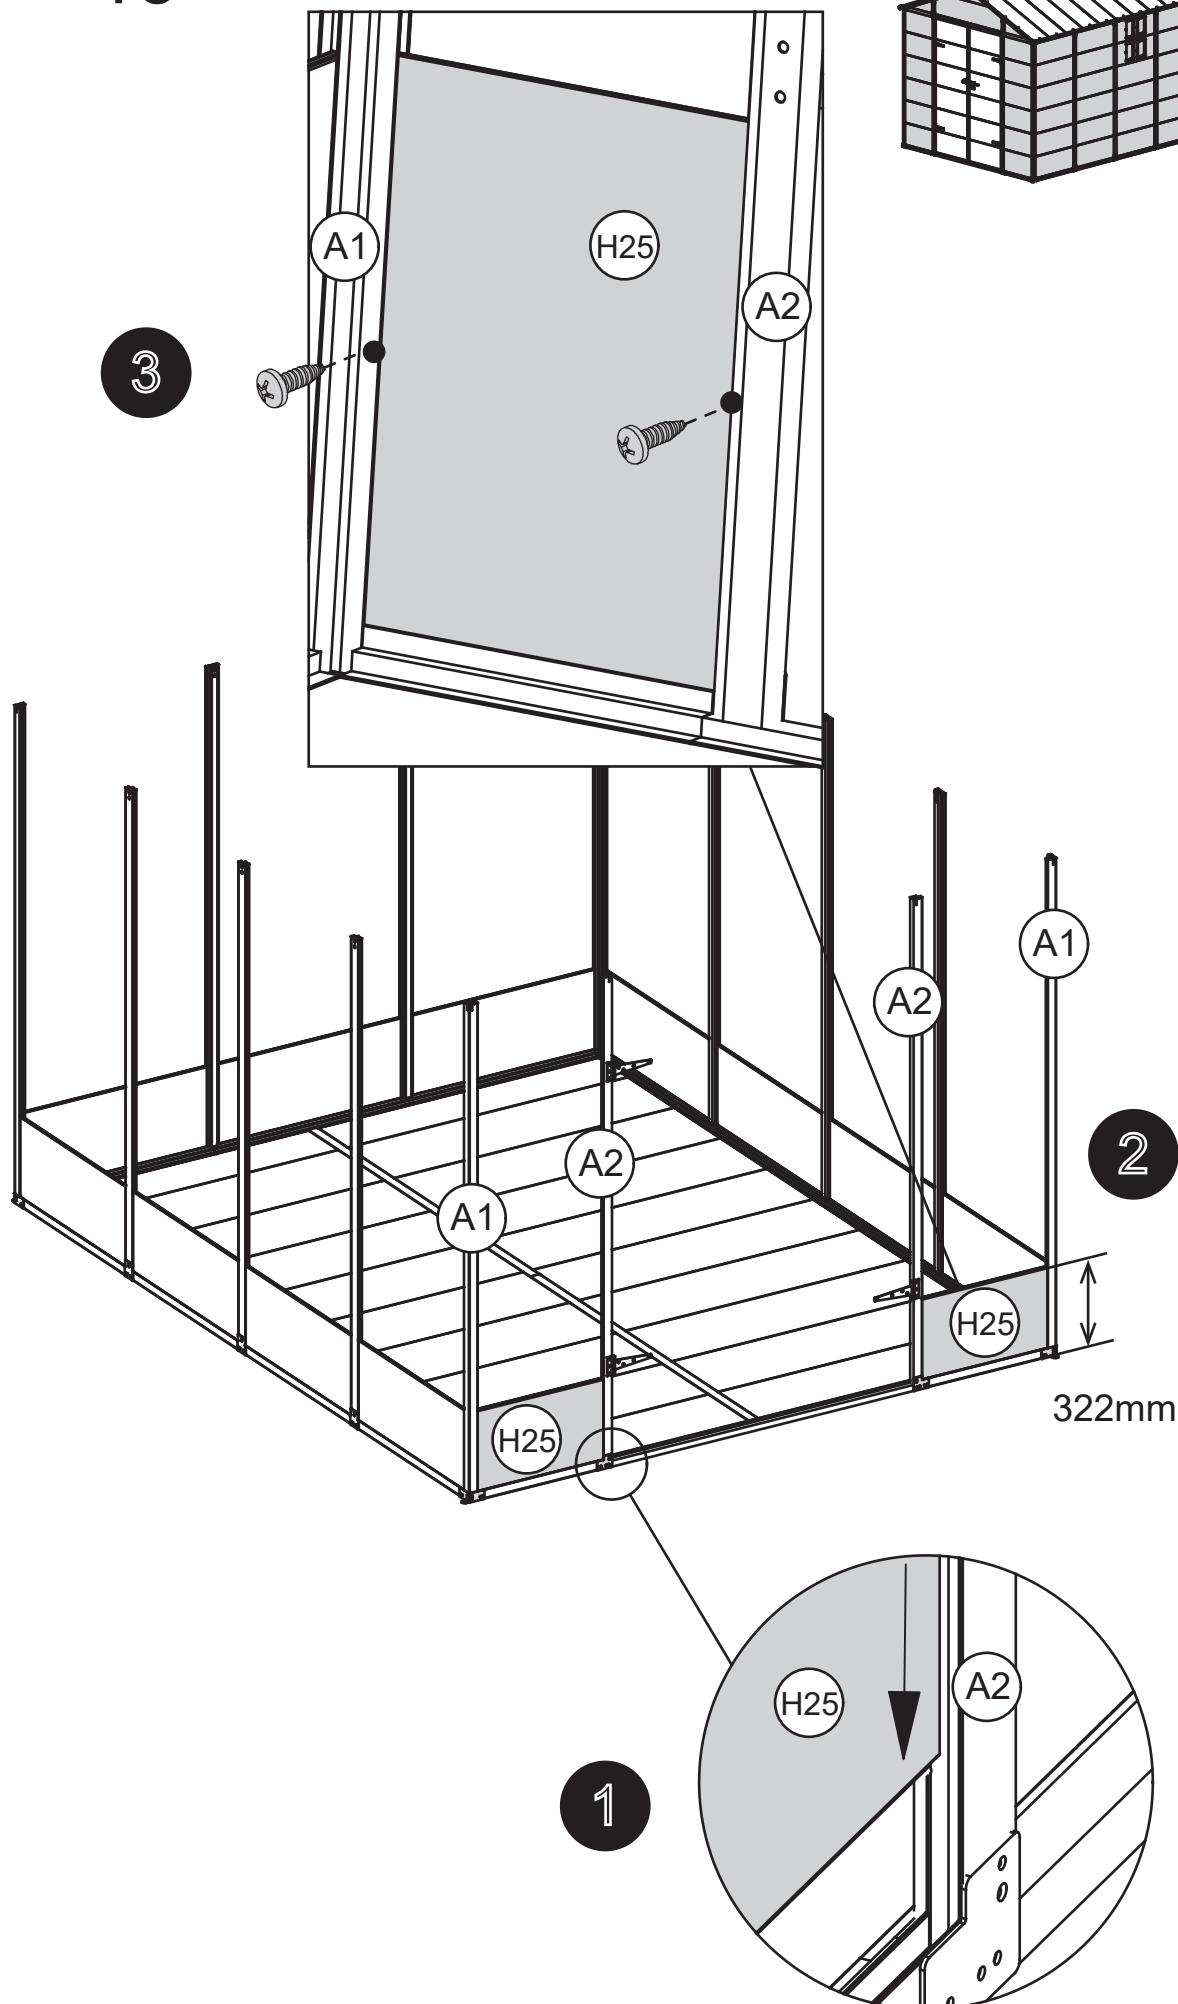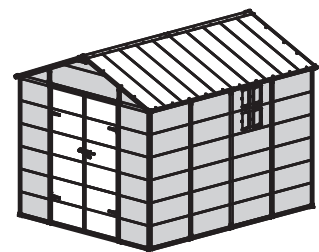




(H3) 15x



(H4) 10x




(H20) 36x



(N6) 4x




<14>

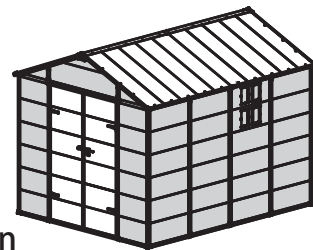


Notice:

1. Pay attention to the direction of the clamping groove when inserting the wall panel. Press down firmly to install. If it is hard to press into place, gently tap the panel with a rubber mallet to fit it into the corresponding groove.
2. If any individual wall panel is uneven during assembly, it will become flat once pressed into the clamping groove.
3. The window panel (N6) is interchangeable with any other standard panel (H20), and you may freely swap their positions according to your needs.
4. Important Notice: Supplementary requirements for wall panel fixing are provided on Page 61. To avoid improper fitting of parts during assembly which may affect subsequent installation, fix the screws only after the main product assembly is completed as instructed.

20mm

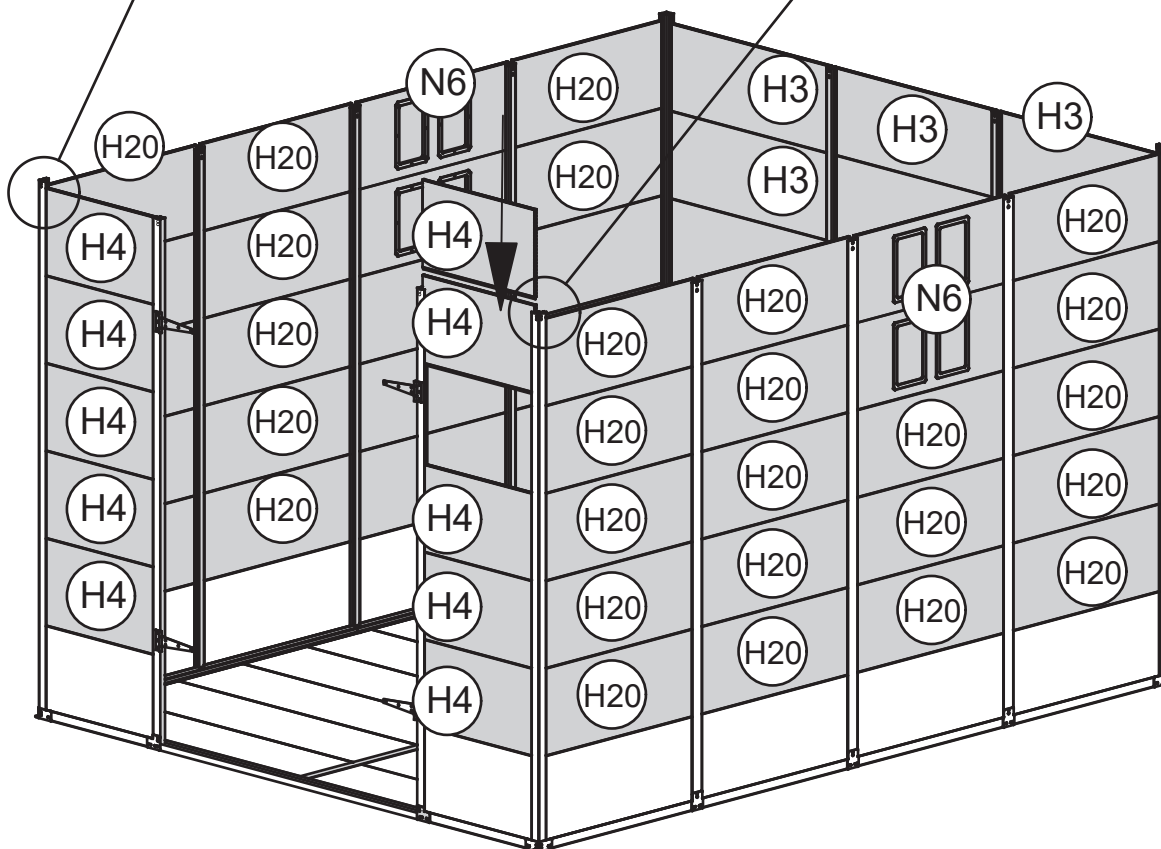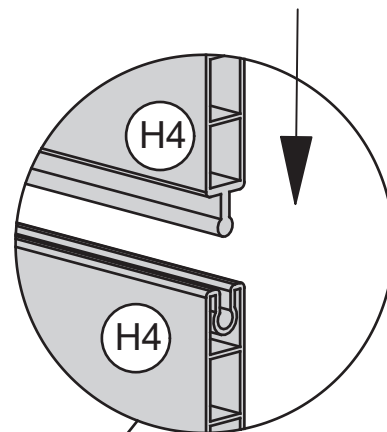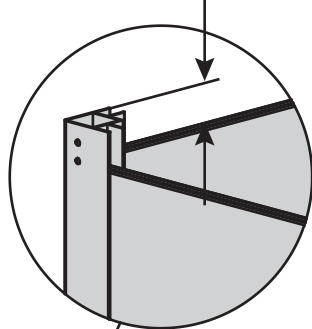

<15>

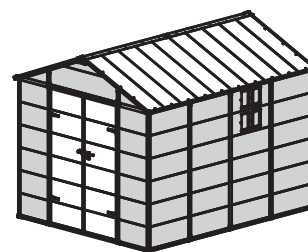

(B8) 1x




(B9) 2x




(J16) 2x




(2) st4.2x10
8x

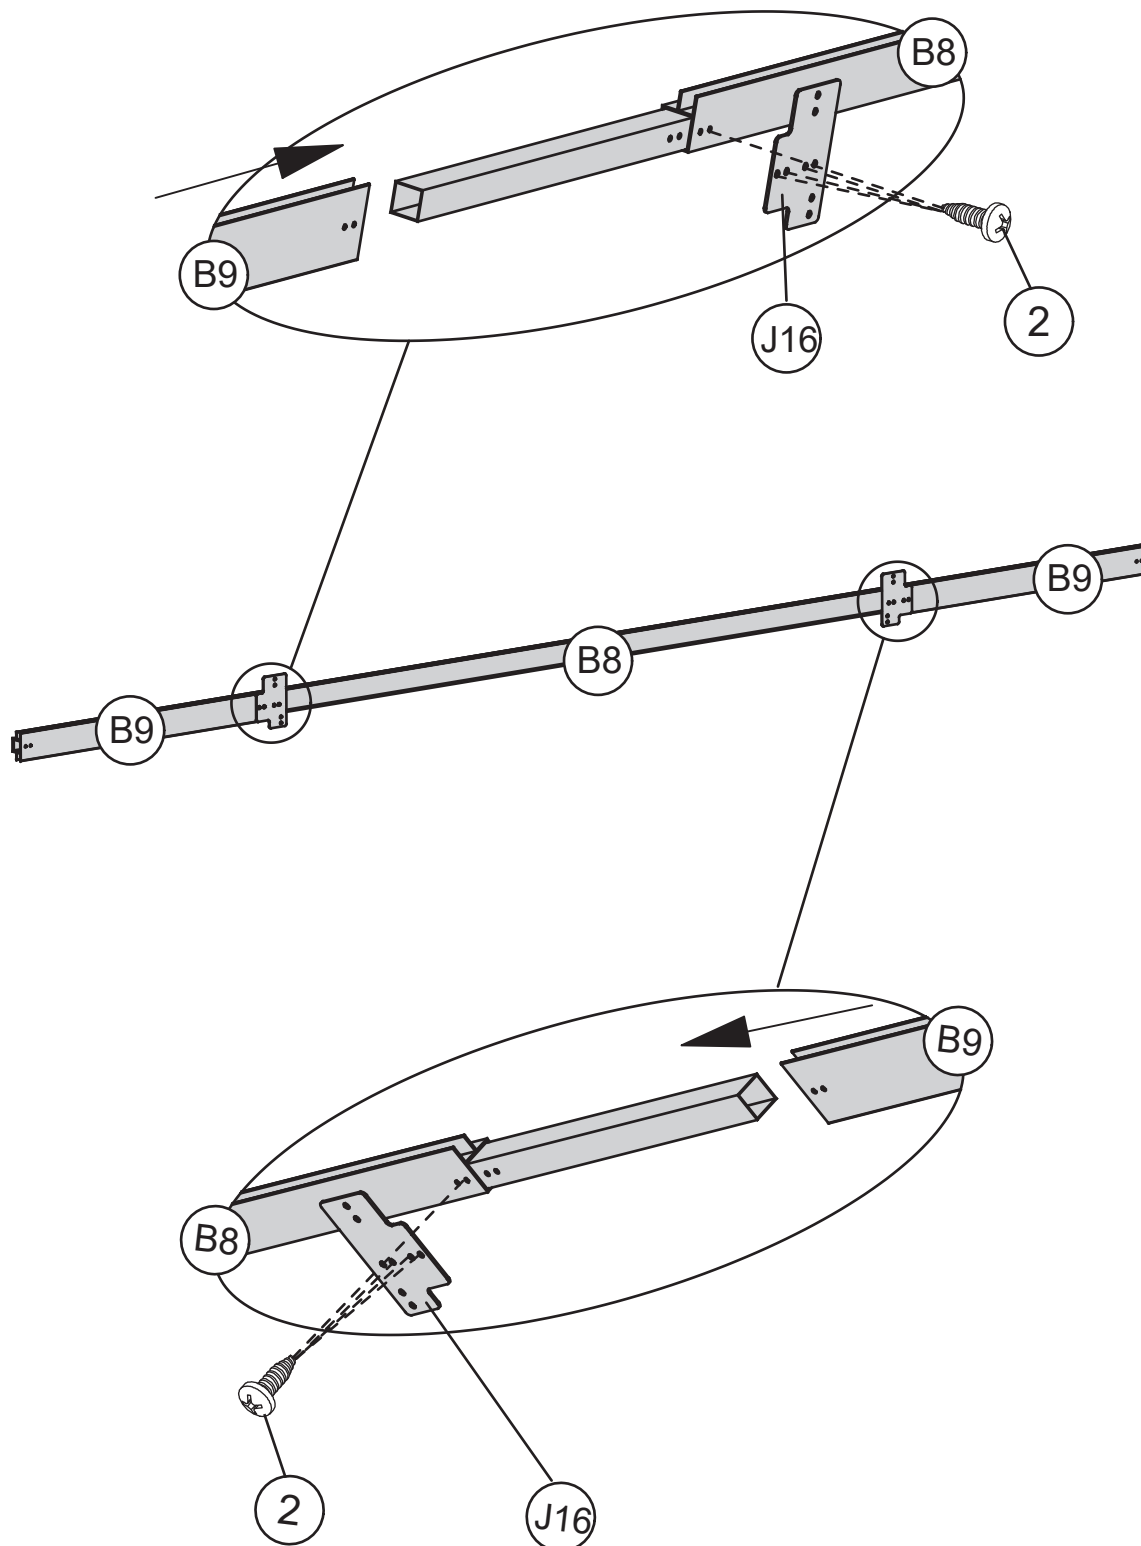

Pay attention to the direction of "J16"

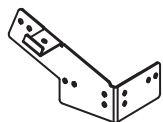

J1 1x

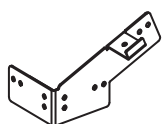

J2 1x





st4.2x10

2 16x

<16>

TIP: Pay attention to the direction of J1/J2.

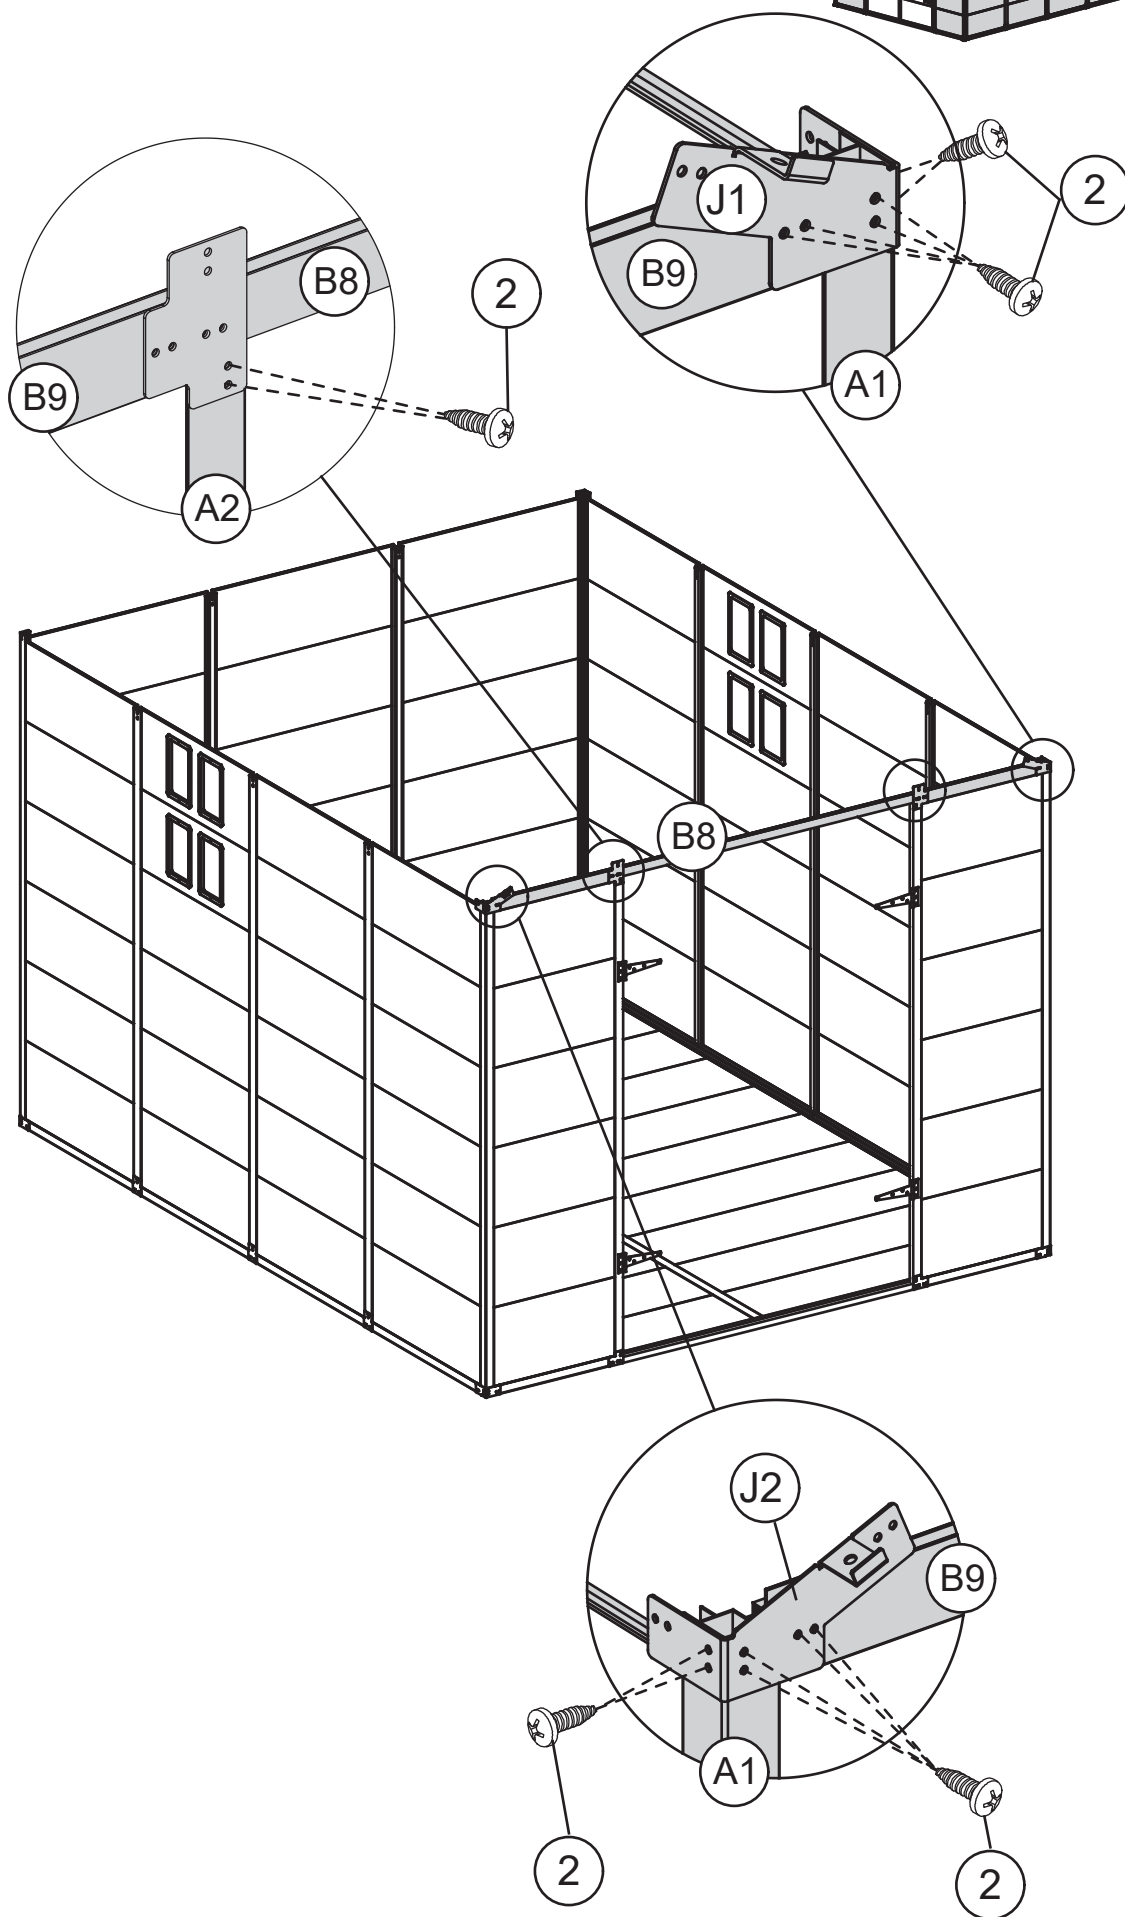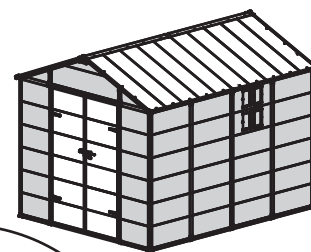





(B5) 1x



(B6) 1x

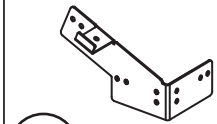

(J1) 1x

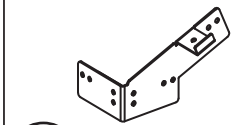

(J2) 1x



(J31) 4x



st4.2x10

(2) 12x



M6x32

(5) 8x








M6

(8) 8x

<17>

TIP: Pay attention to the direction of J1/J2.

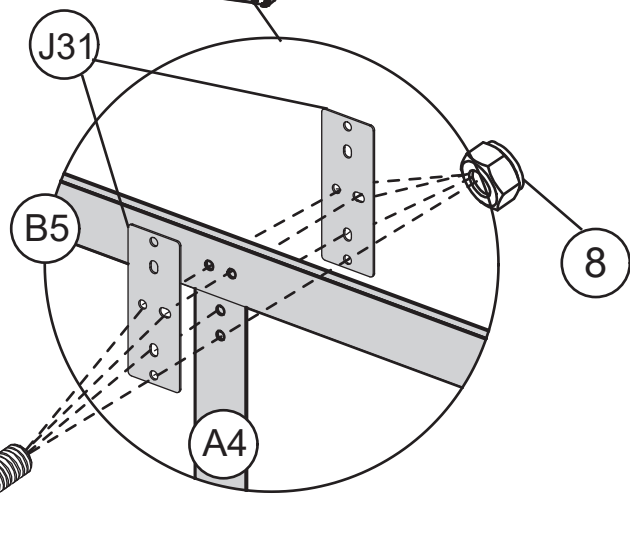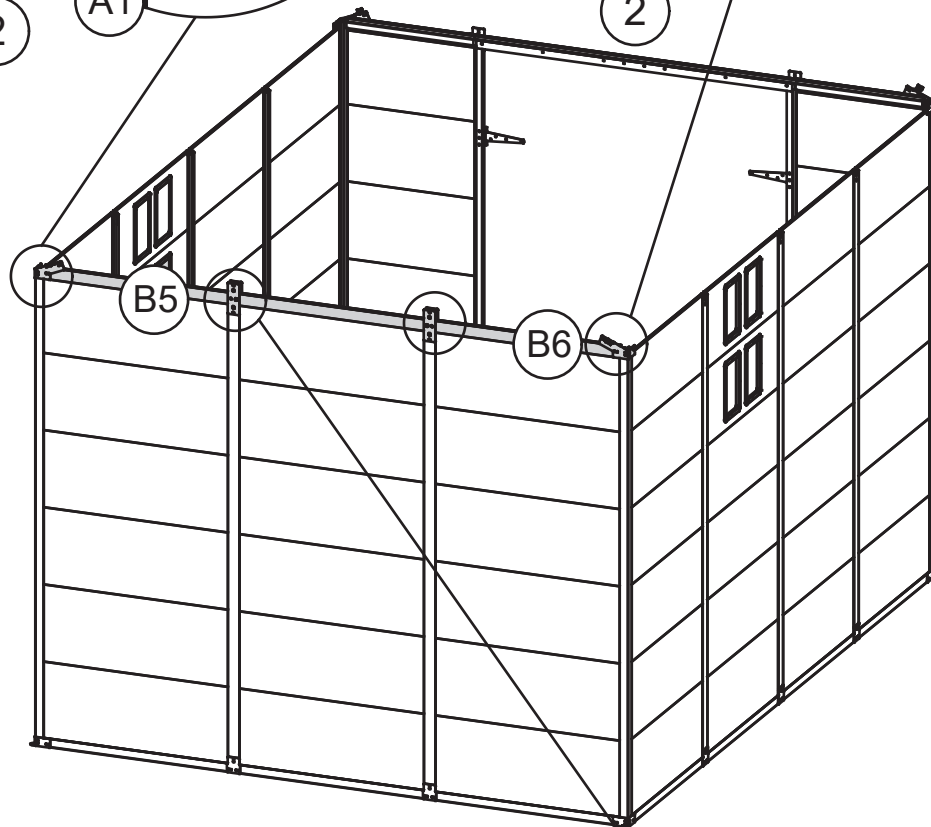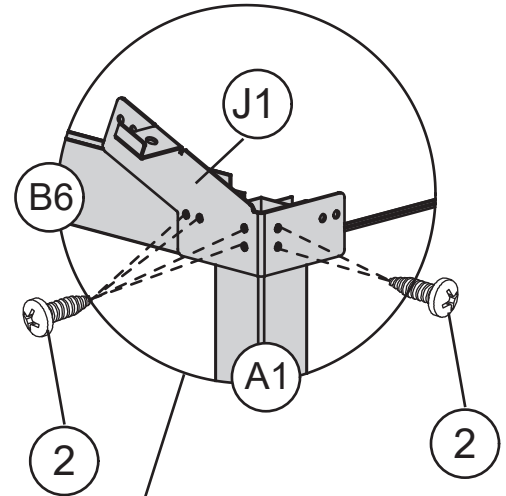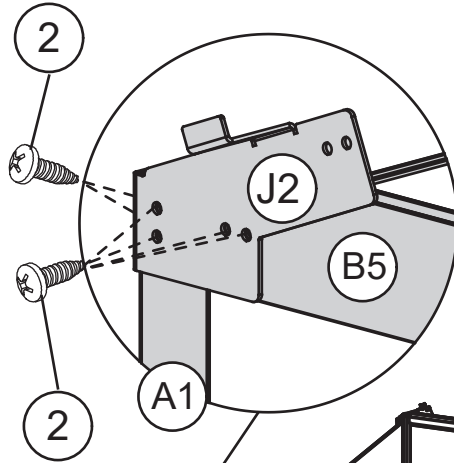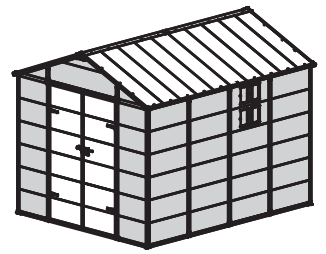




U9 2x



U10 2x



Q2 2x



J29 6x



J35 8x








st4.2x10

2 40x

<18>

Pay attention to the direction
of "U9" & "U10"

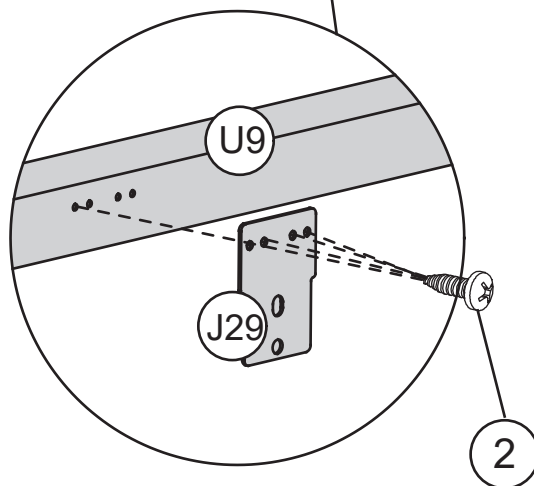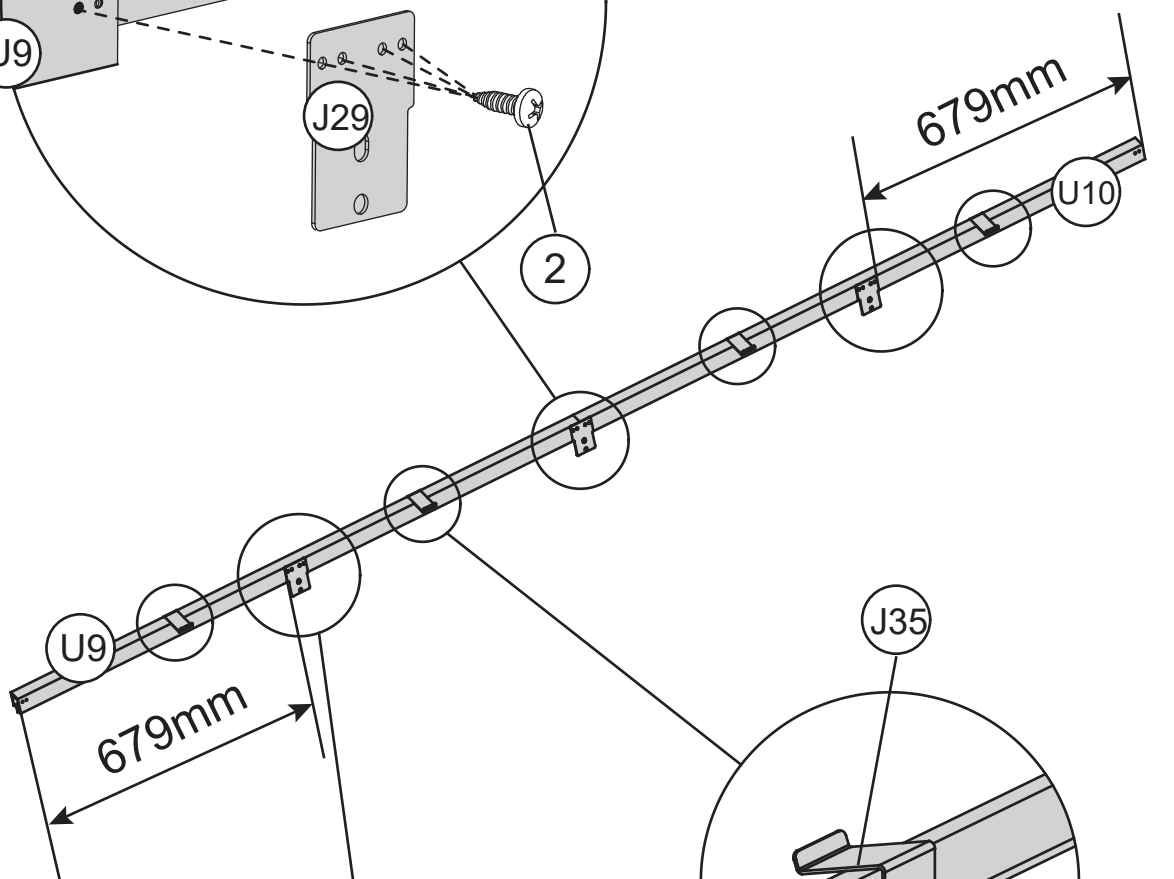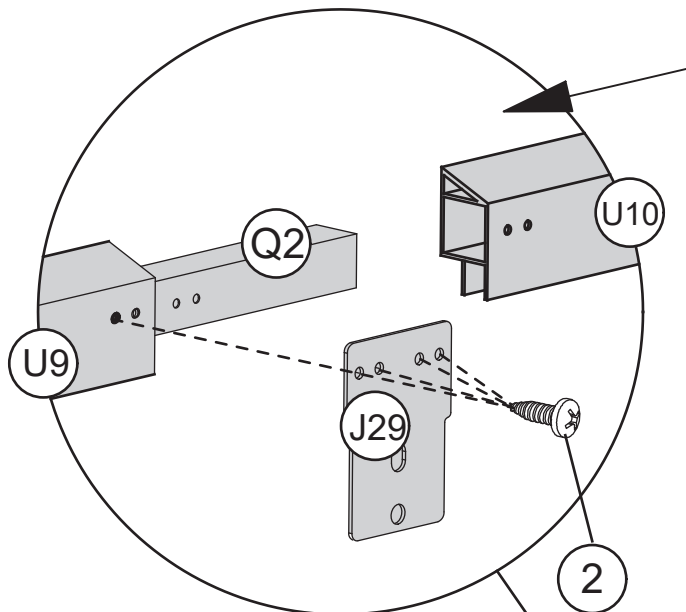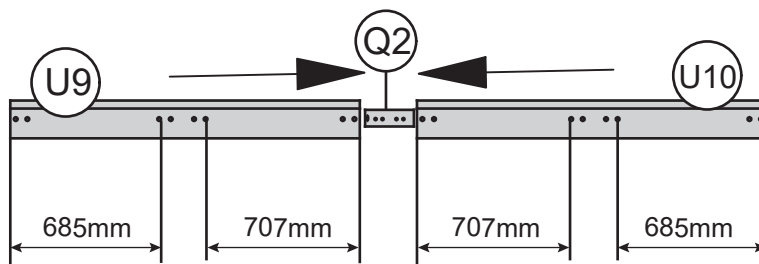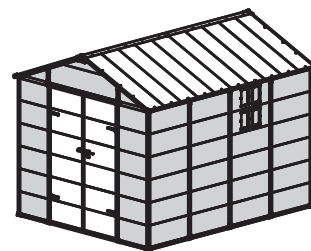



J39 6x



st4.2x10

2 8x



M6x32


5 12x





M6

8 12x

<19>

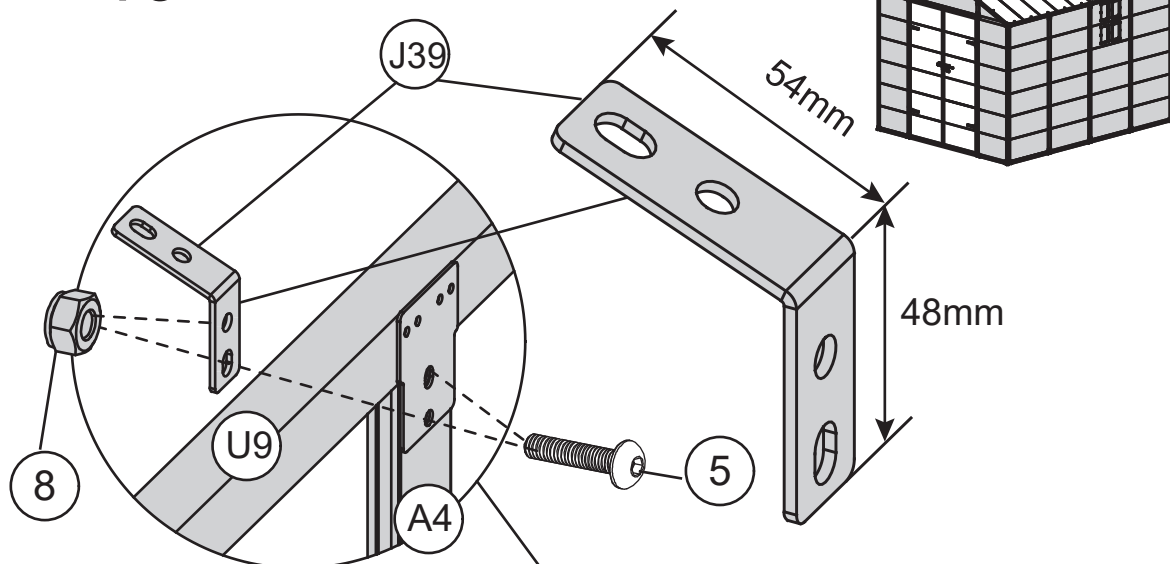

Pay attention to the direction of "J39"

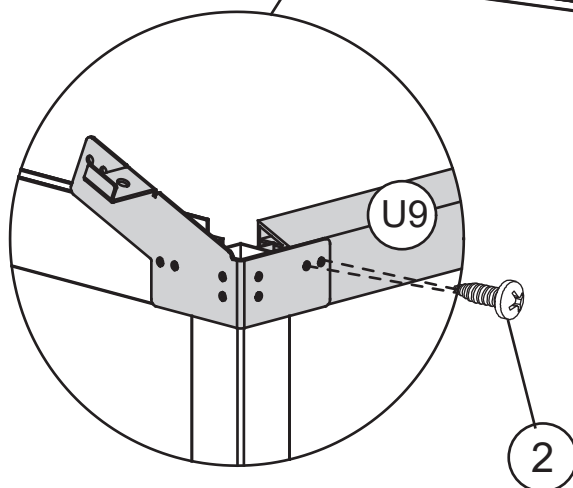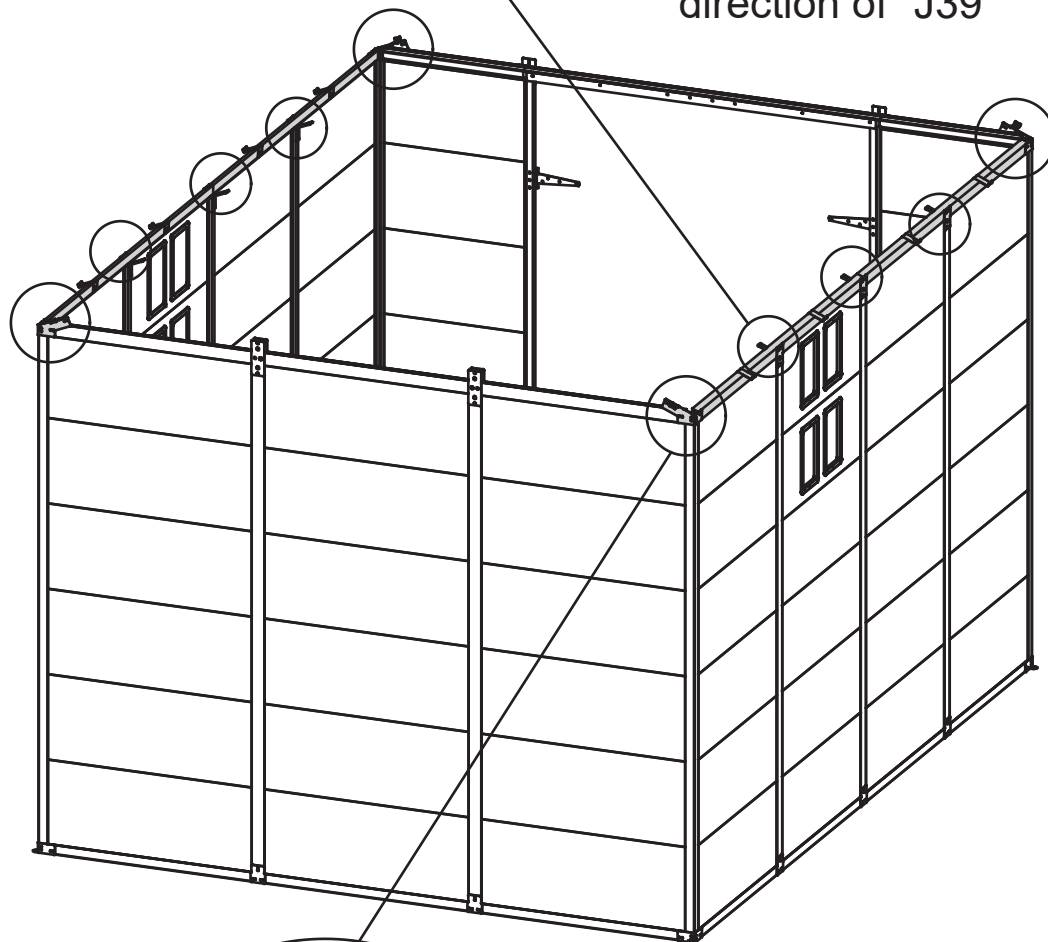




(A5) 1x



(A6) 1x



(A7) 1x



(A8) 1x



(J23) 4x



(2) 12x





(5) 4x



(8) 4x M6

<20>

TIP: Pay attention to the direction of J23.

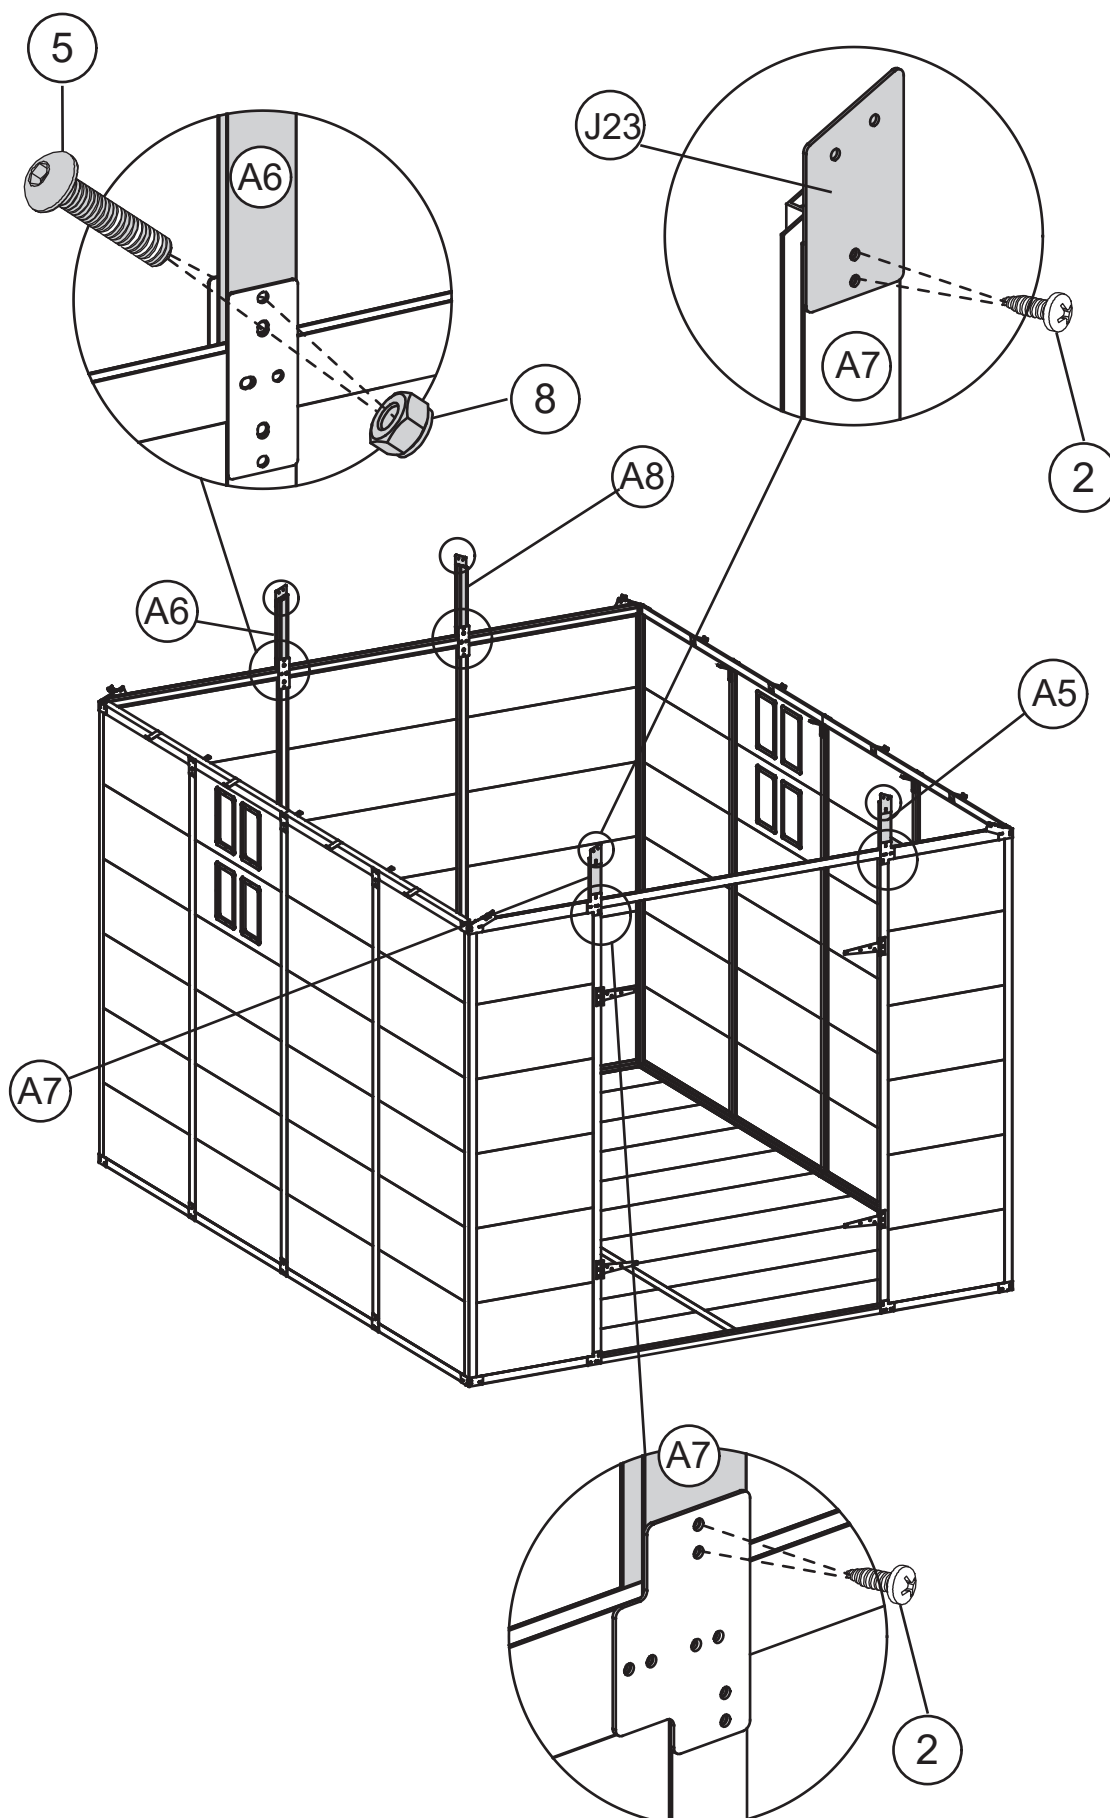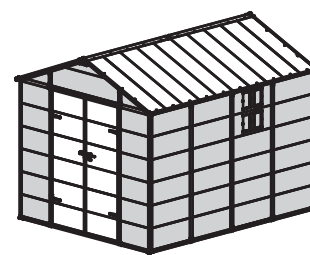



(G4) 1x







(G5) 1x



(G6) 2x

<21>

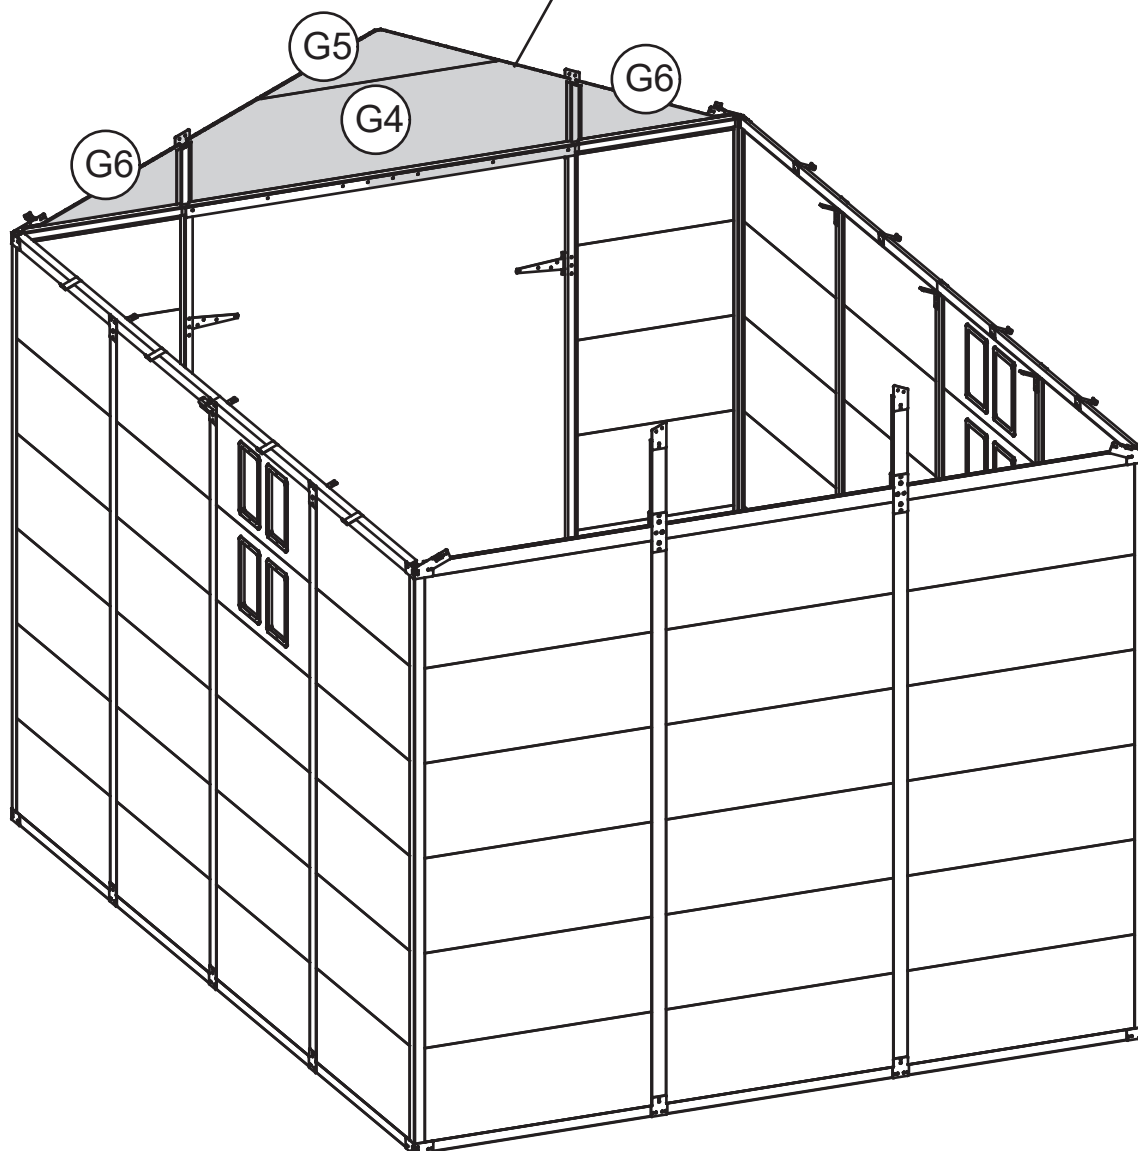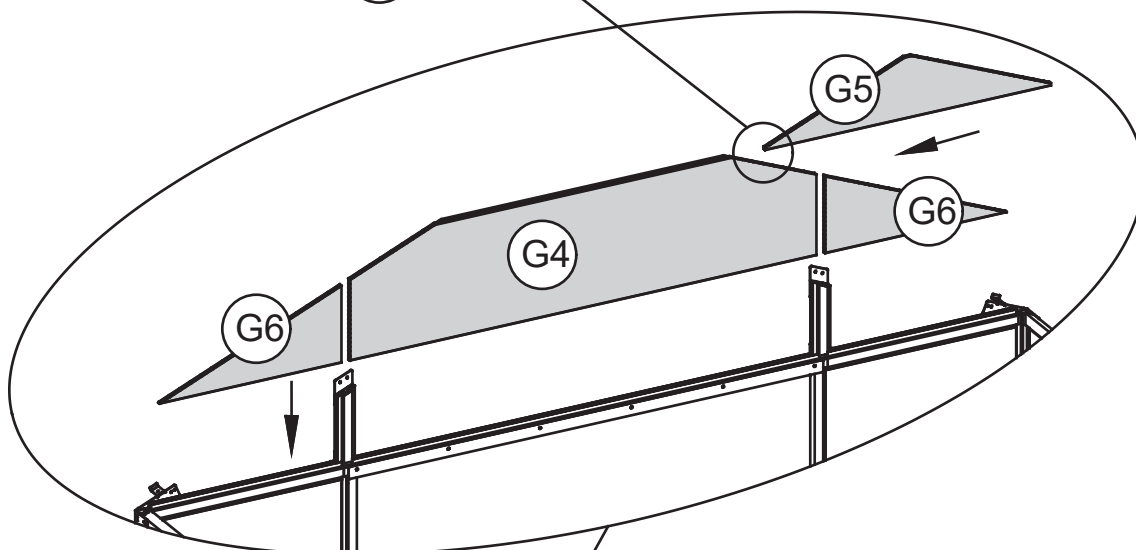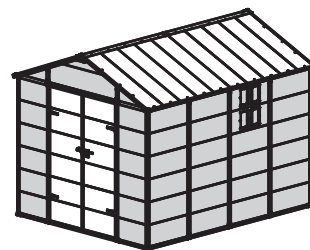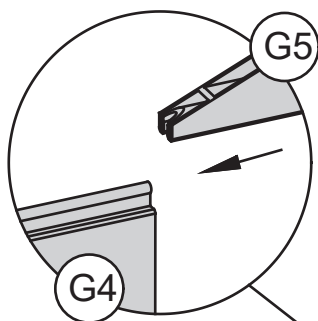



H3 1x







G5 1x



G7 2x

<22>

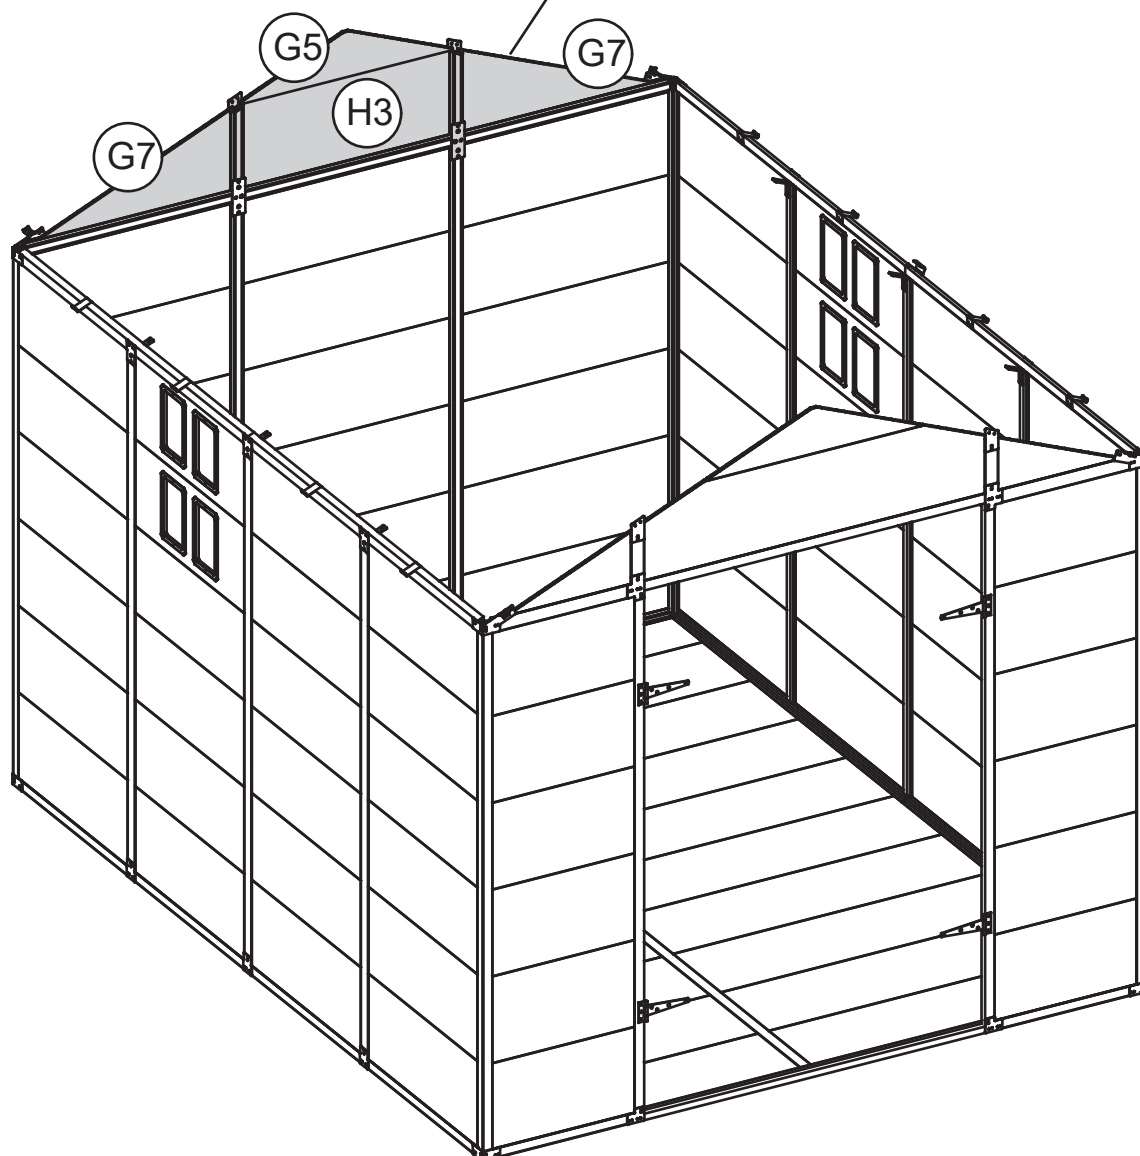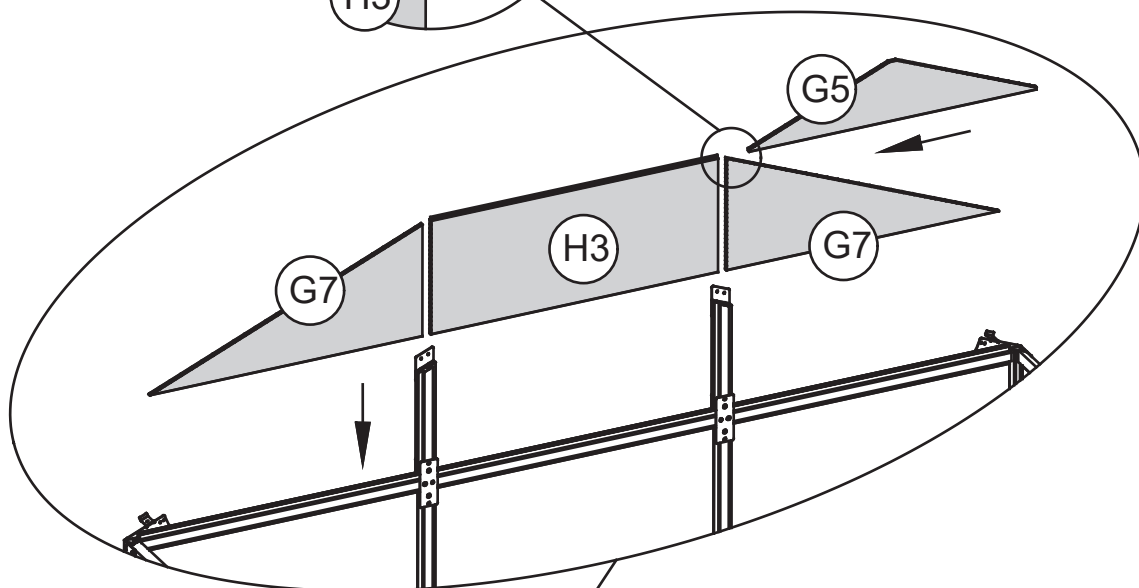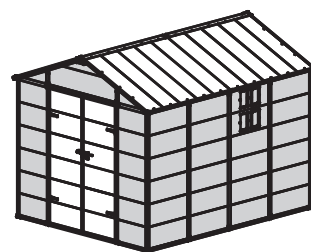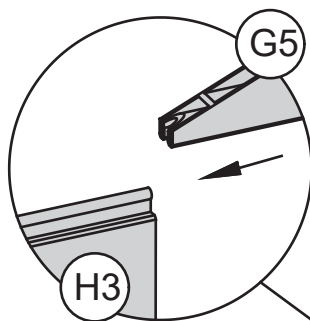



(M5) 2x



(M6) 2x





(J38) 4x



st4.2x10

(2) 8x

<23>

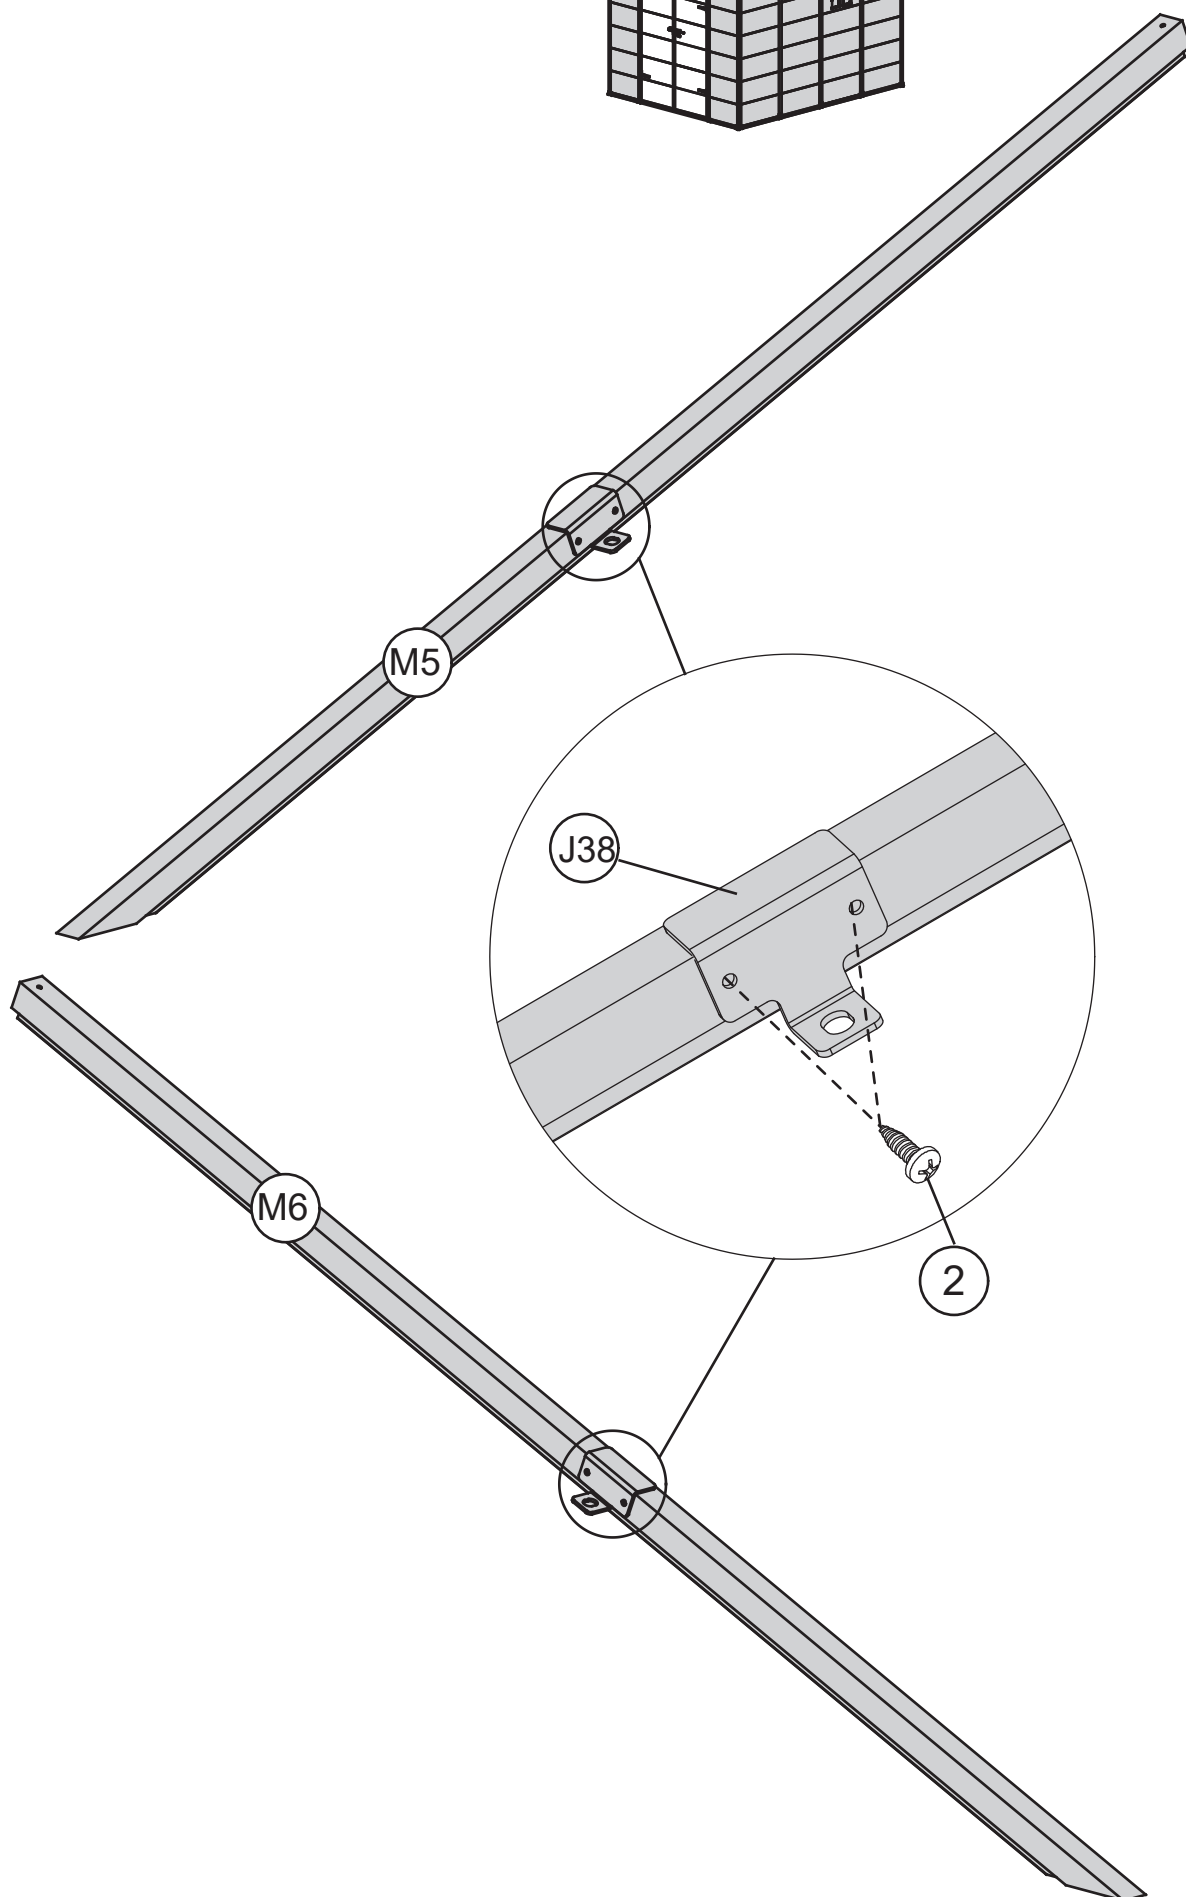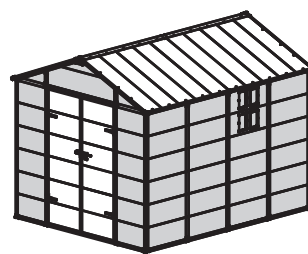




st4.2x10


2 16x

<24>

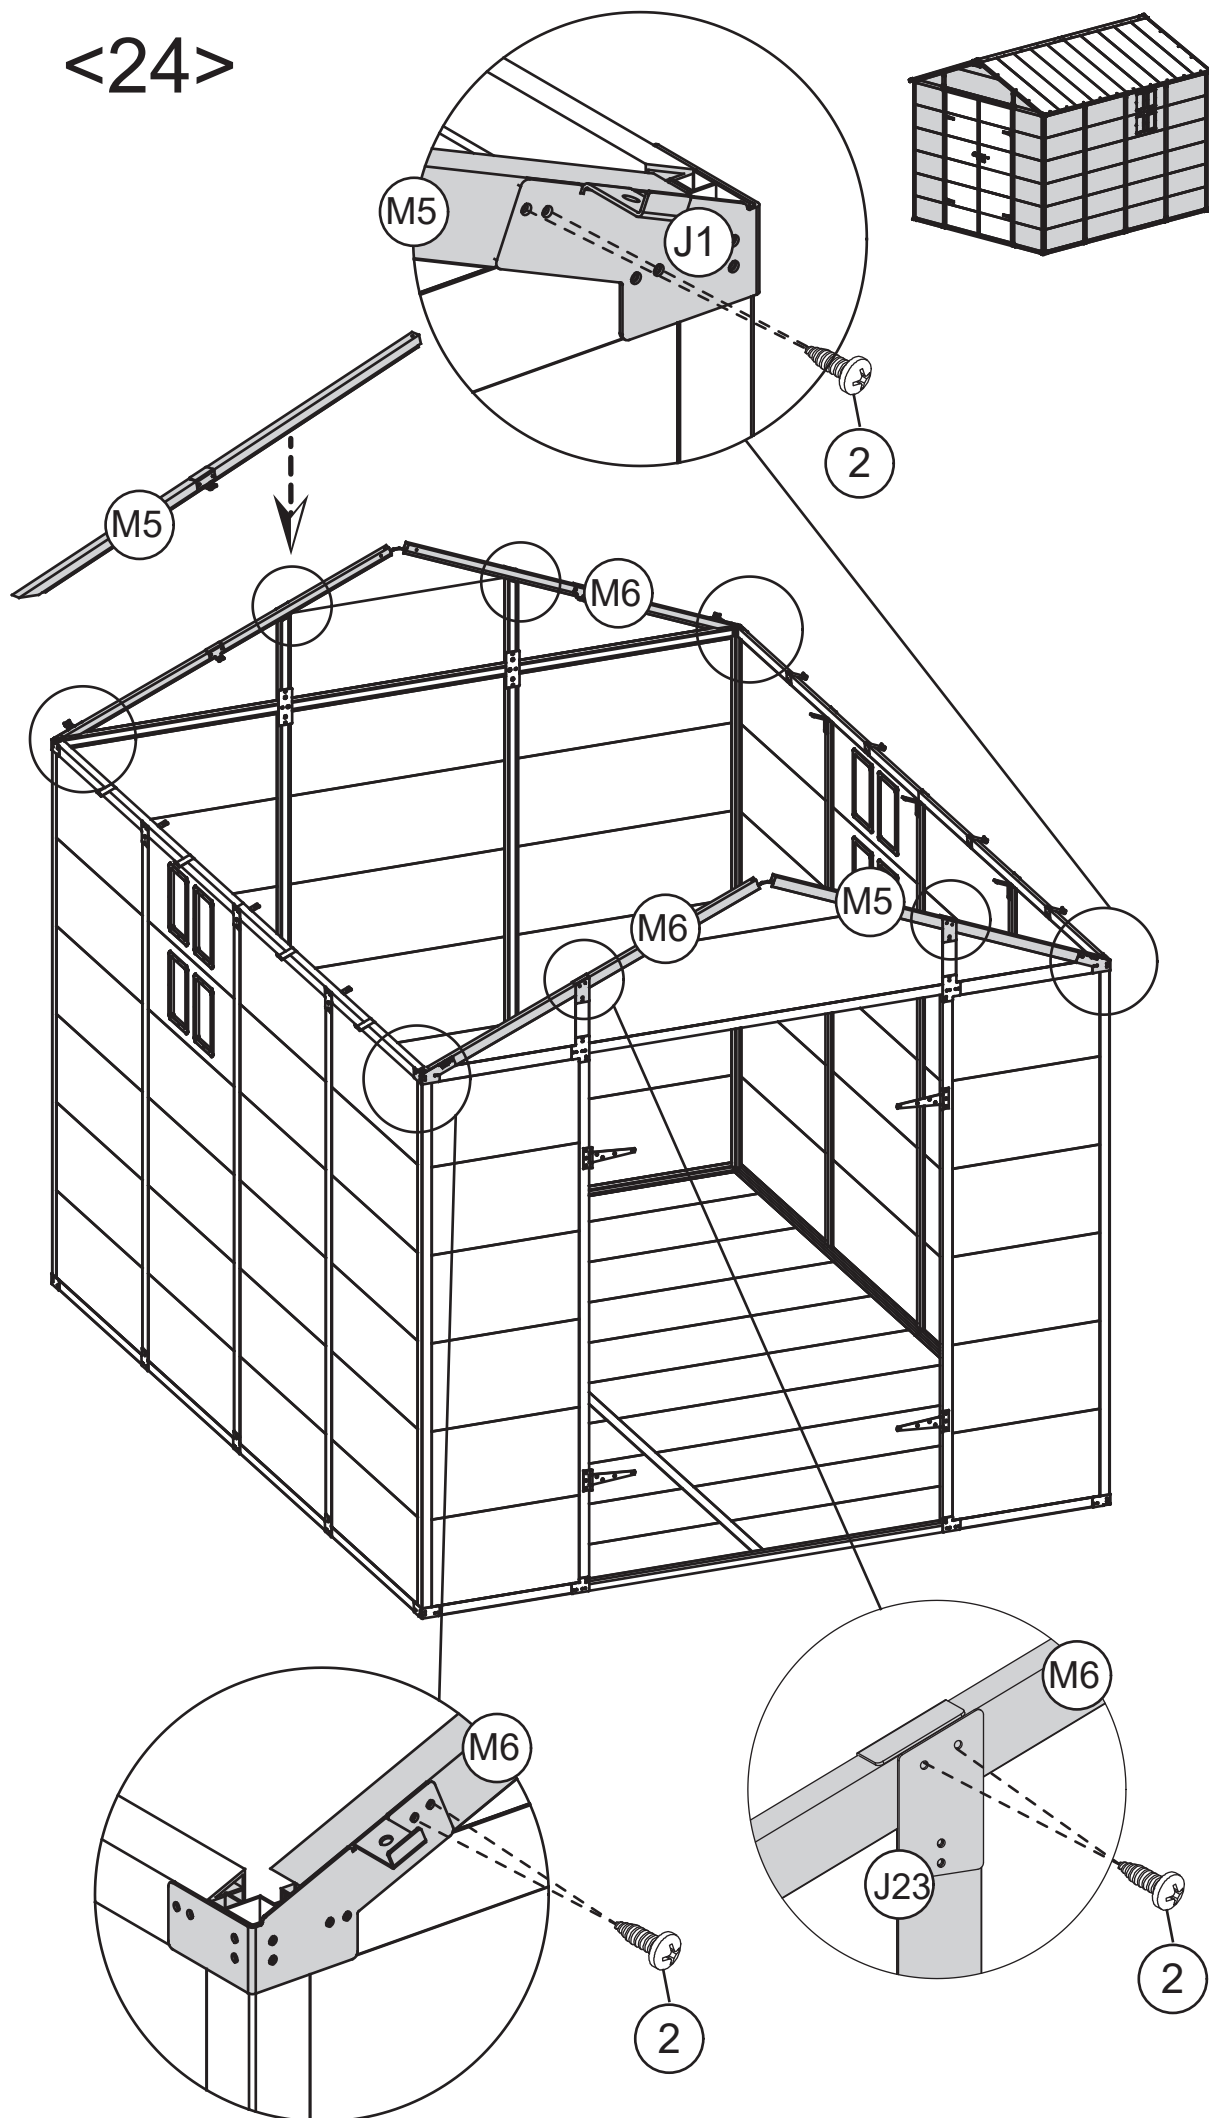



(L12) 2x



(Q4) 1x





M6x15

(4) 4x



(11) 2x

<25>

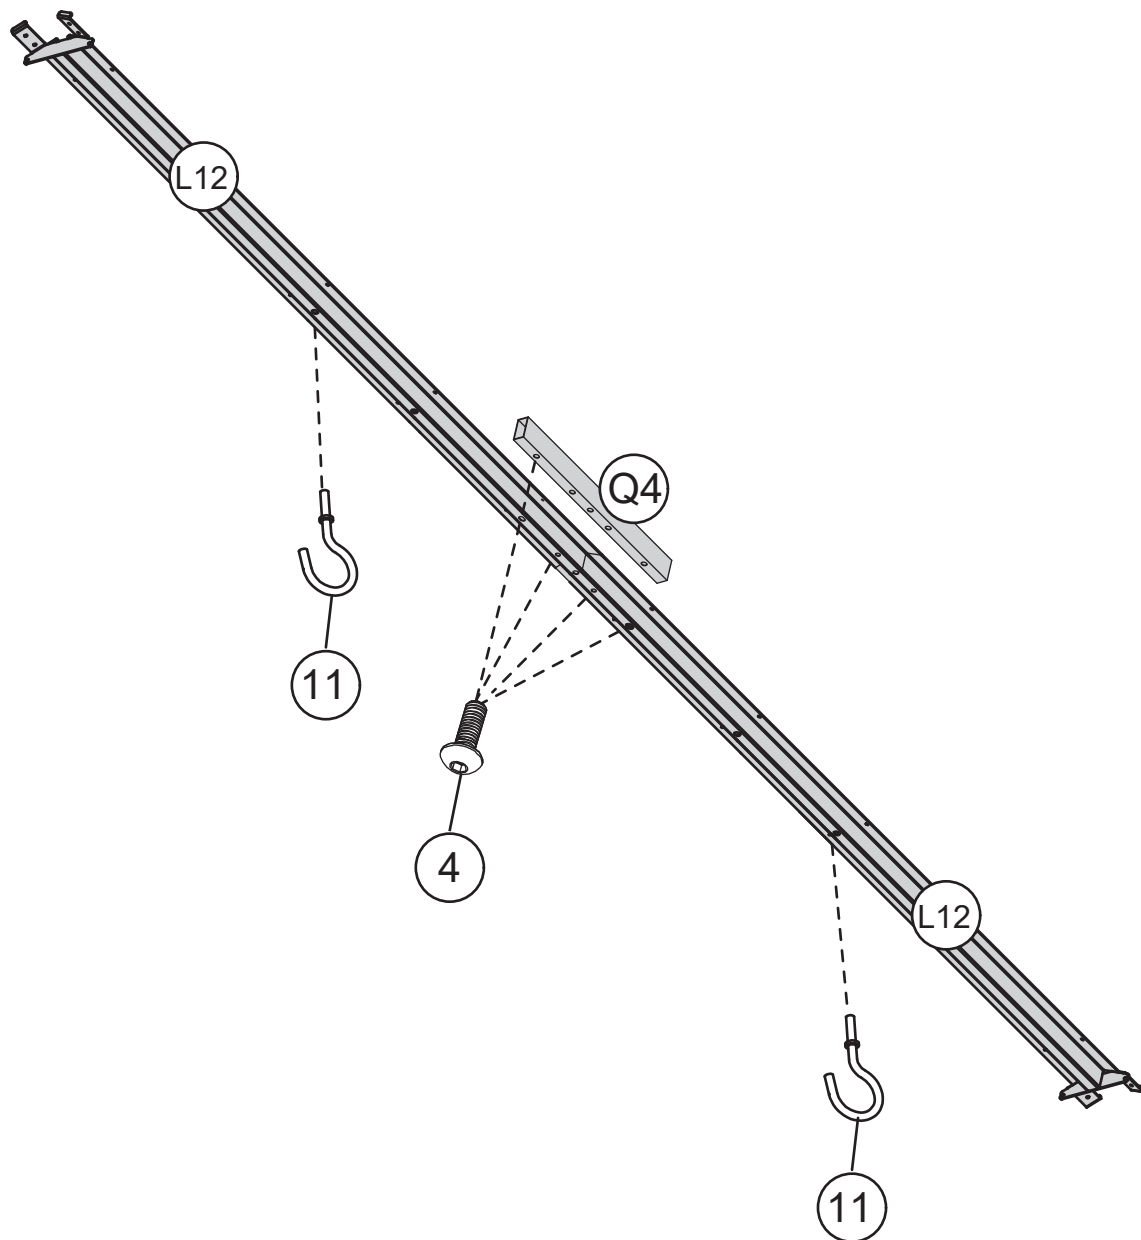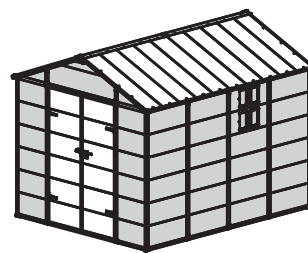




st4.2x10

2 8x

<26>

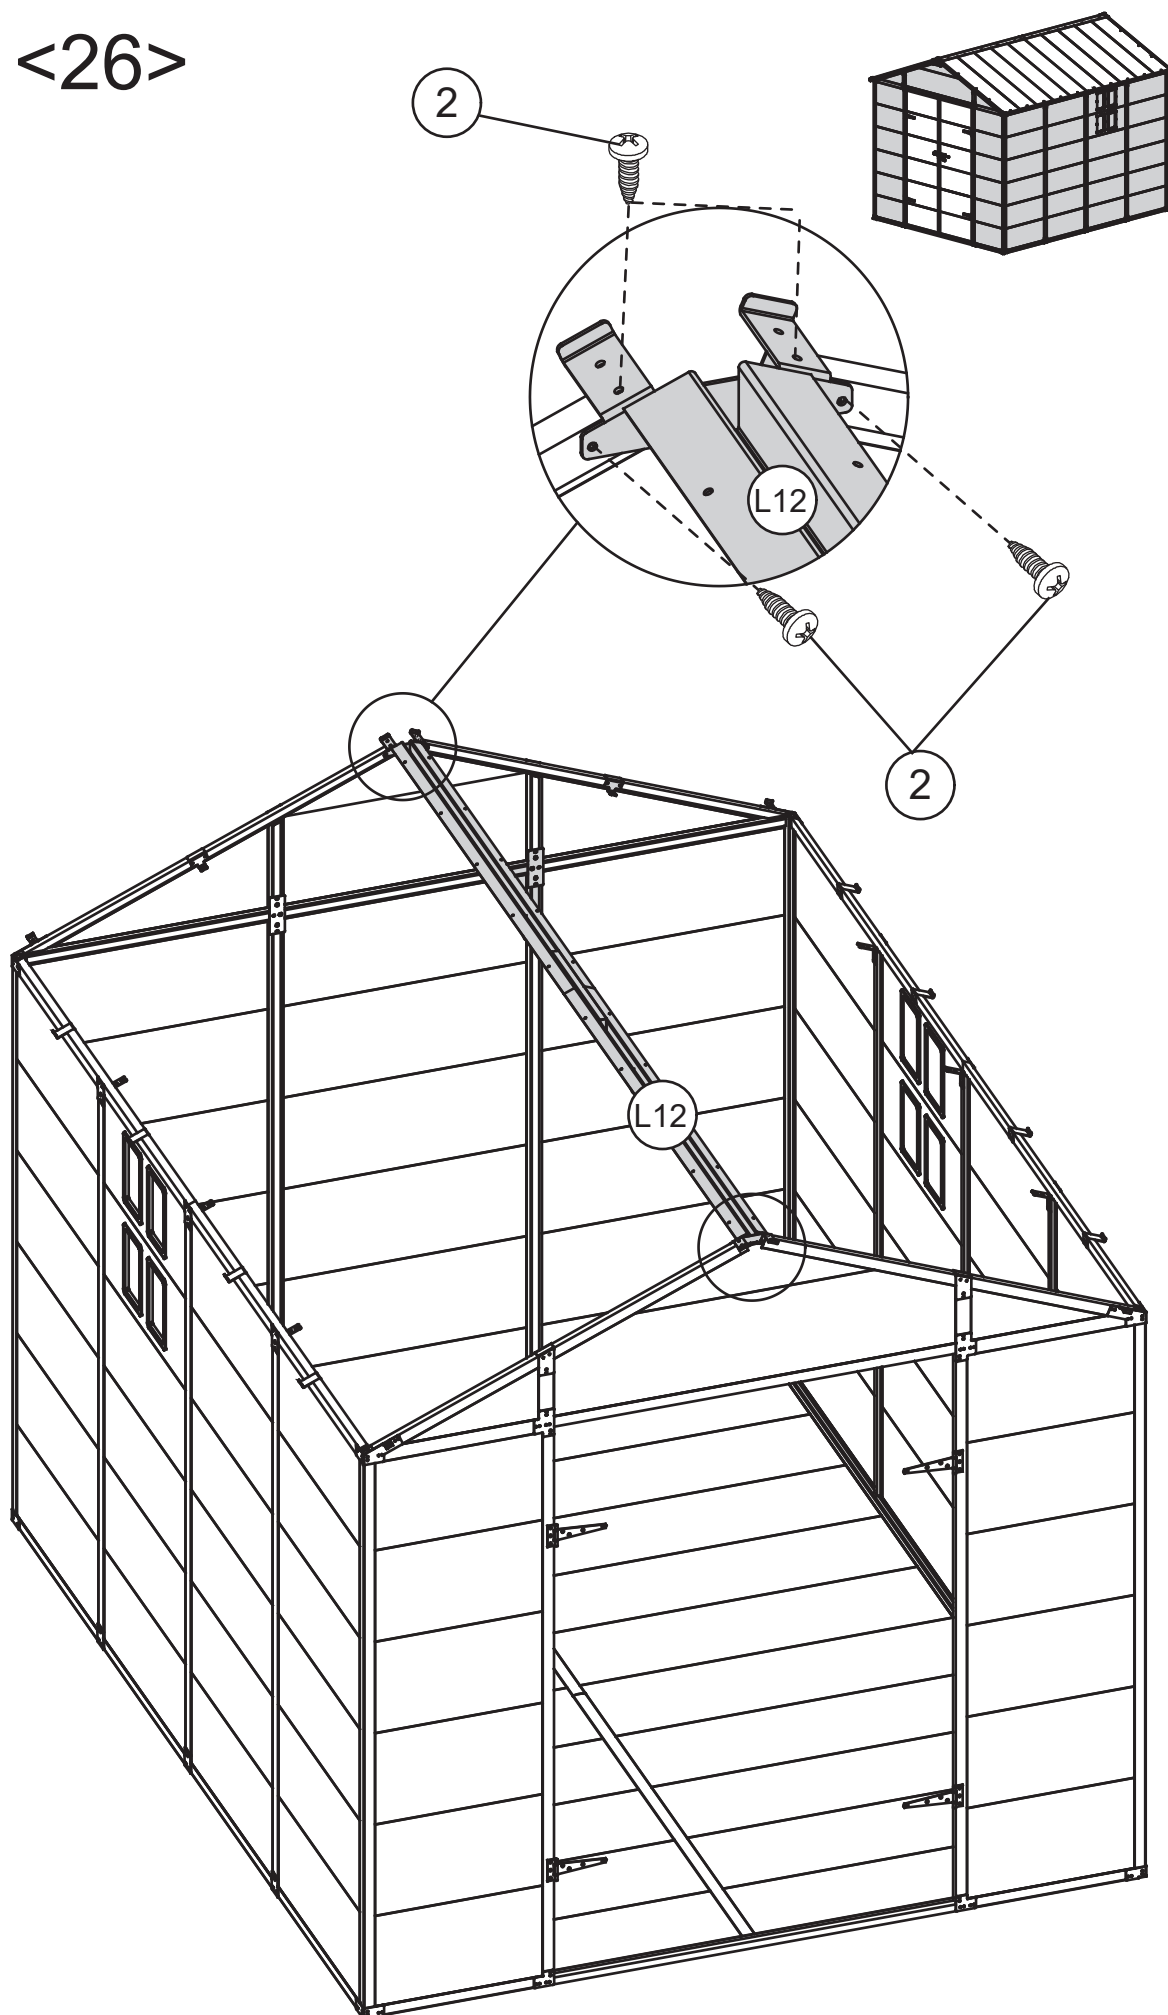



(F4) 6x







(J36) 3x



(4) M6x15
21x

<27>

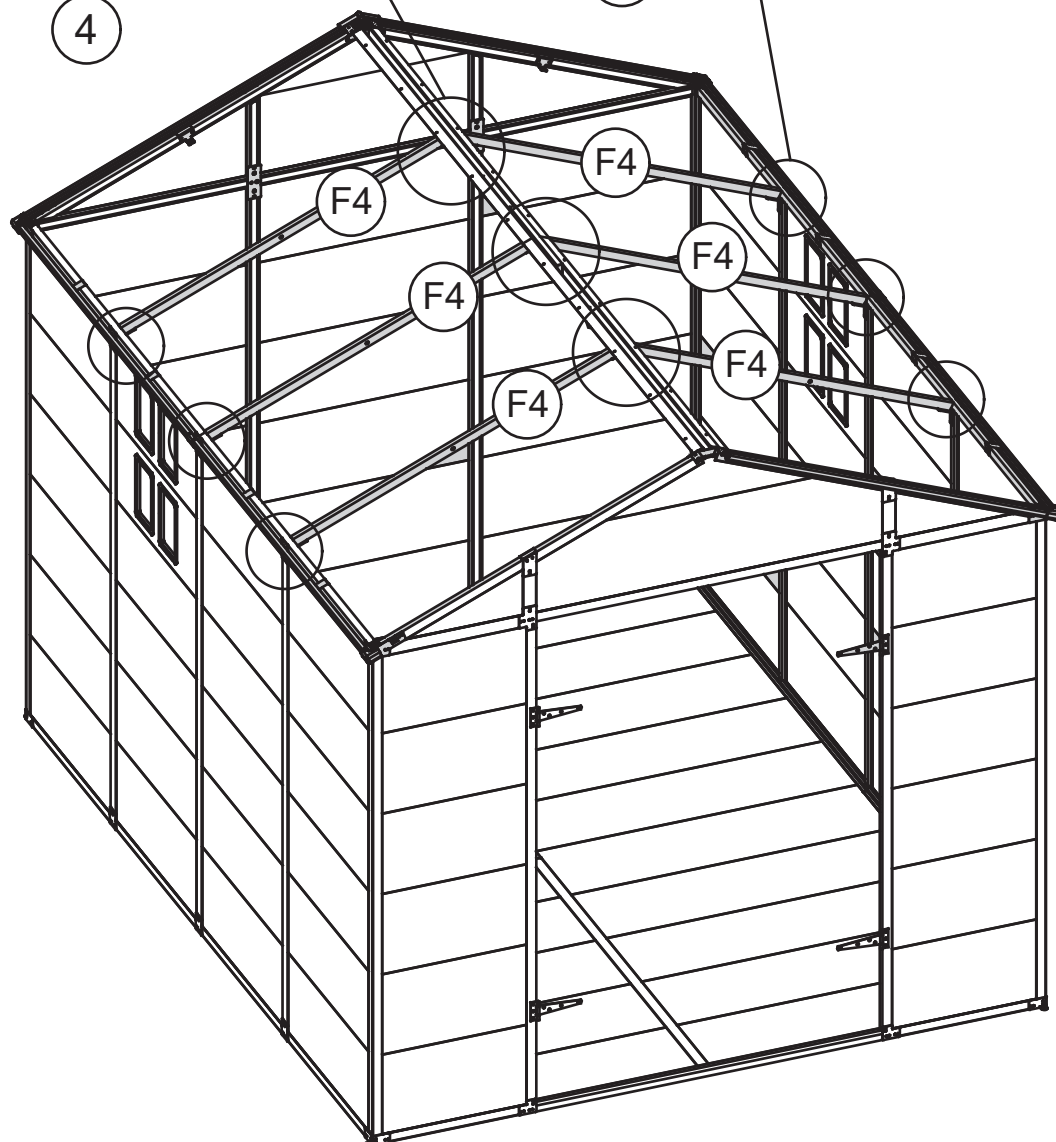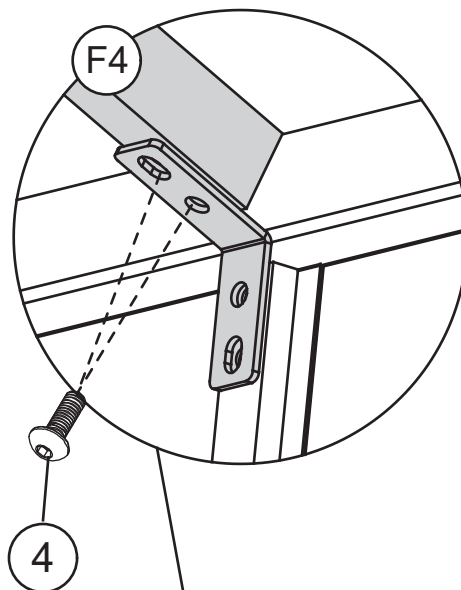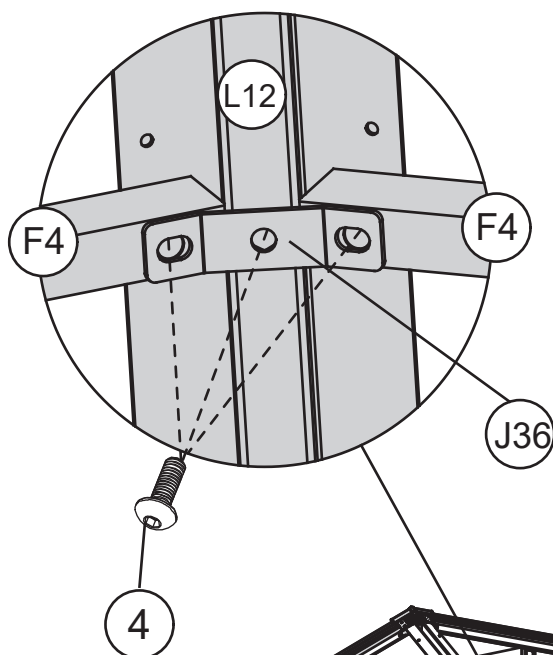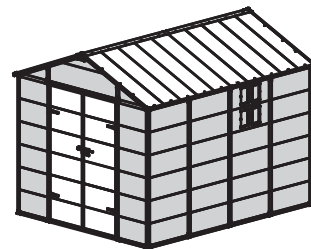






(S2) 3x



M6x15

(4) 6x

<28>

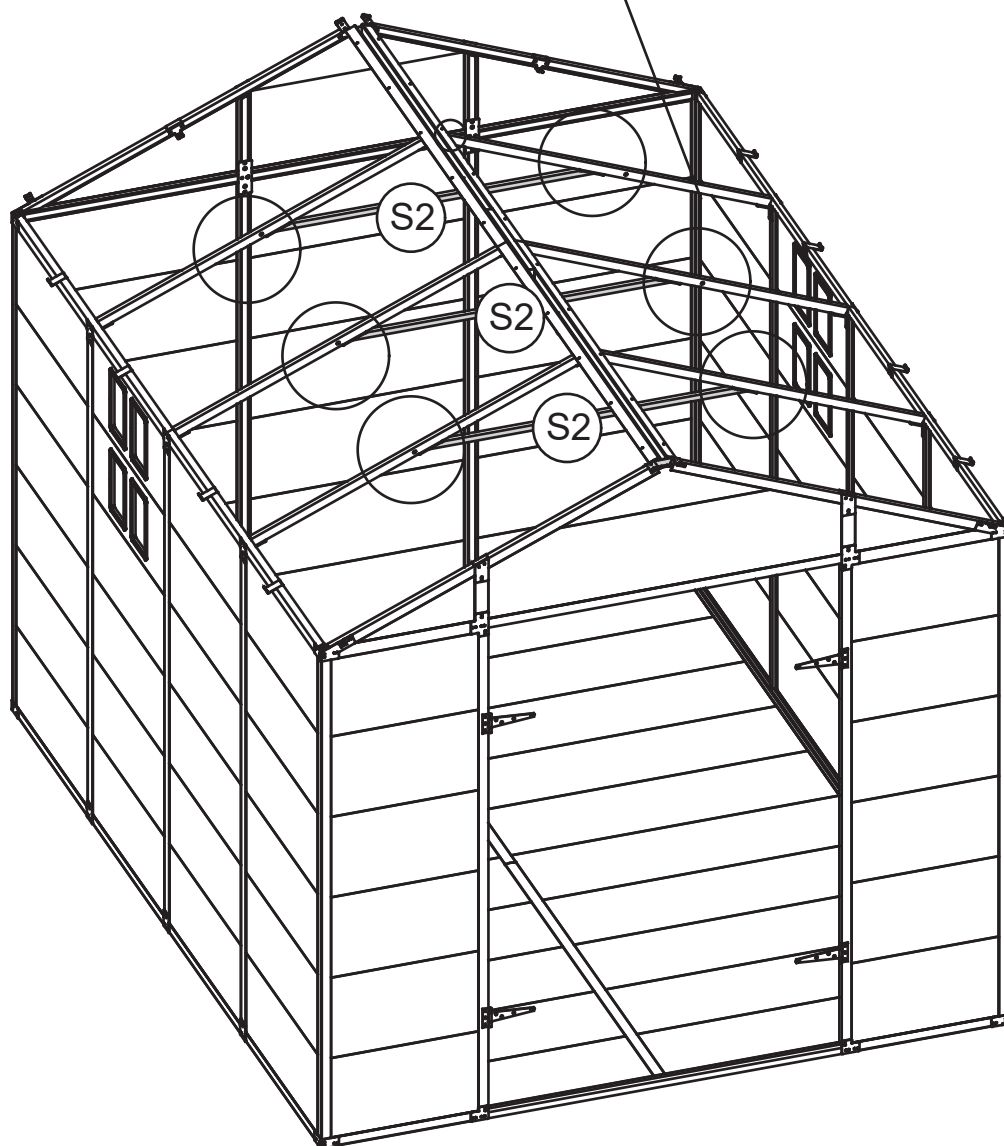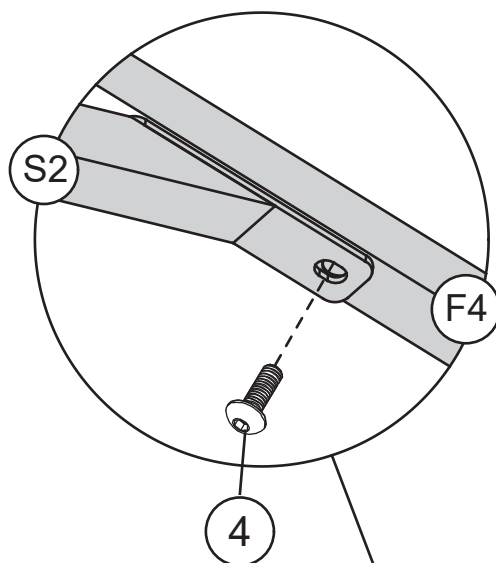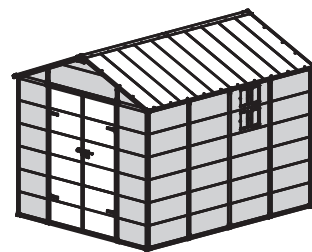




(T5) 4x



(T6) 4x

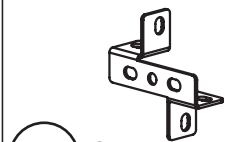






(J37) 6x



M6x15

(4) 46x

<29>

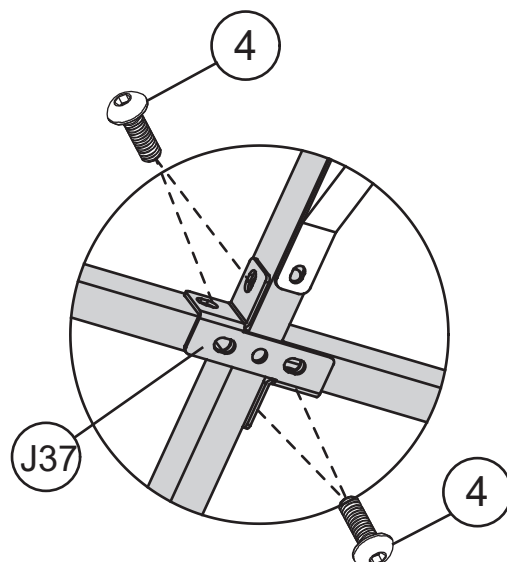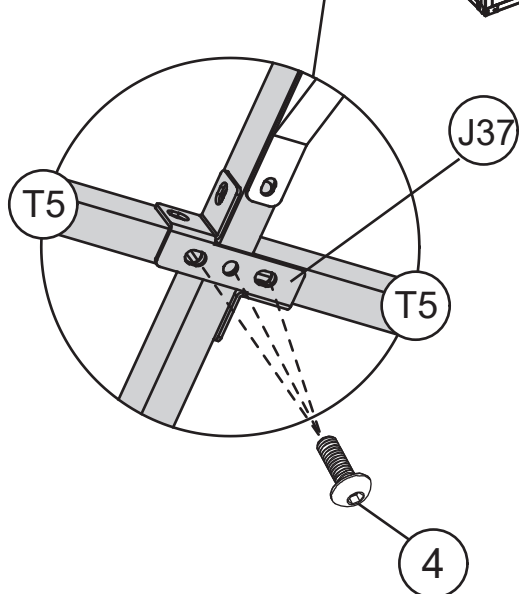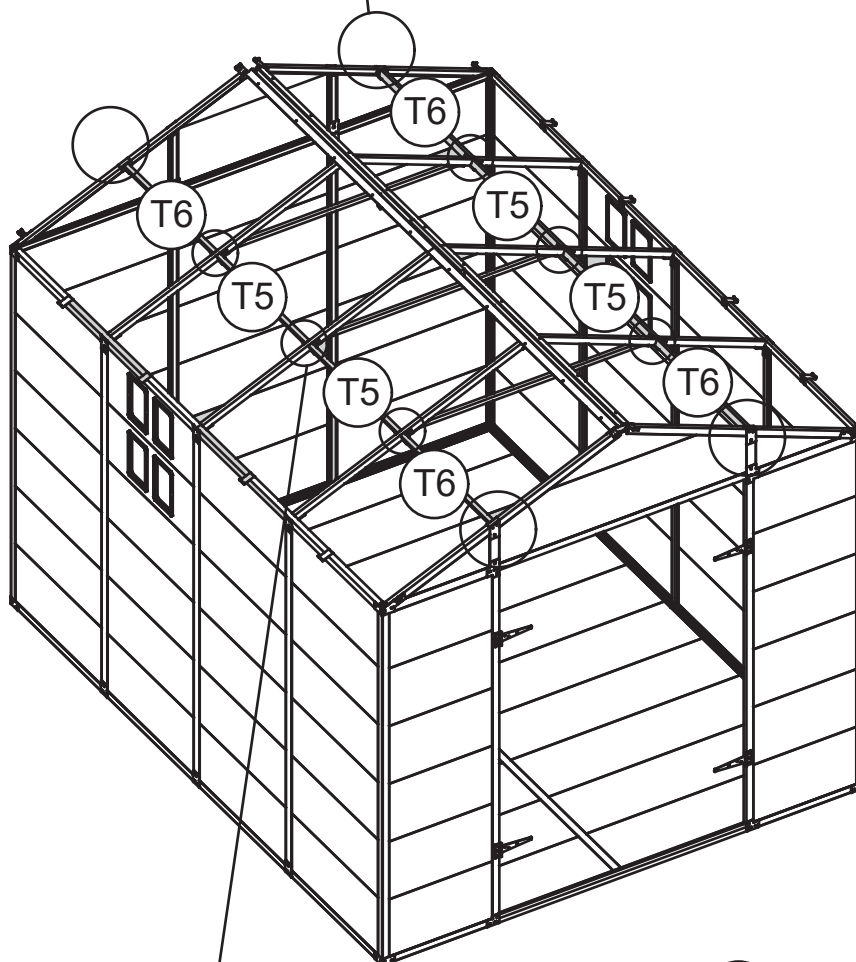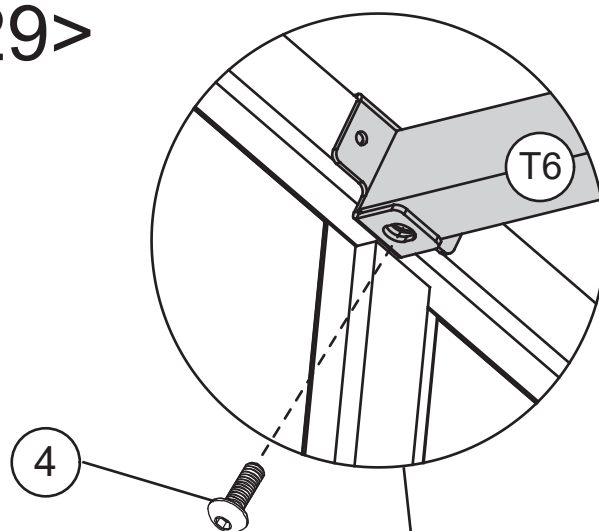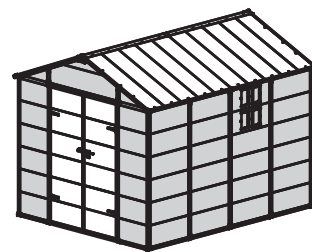

.

(P3) 16x

.



(P3A) 2x


.

(P3C) 2x

<30>

Roof assembly

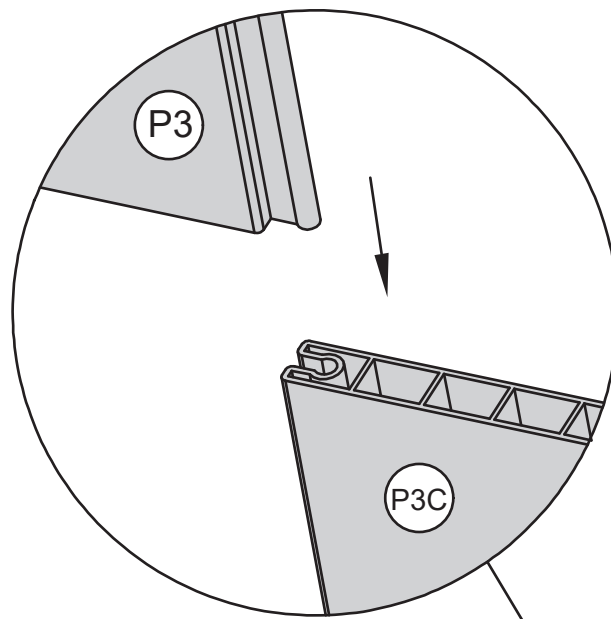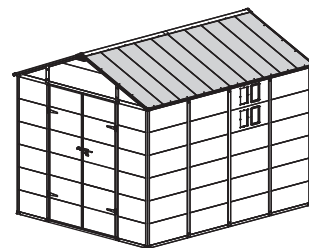



st4.2x20

1 32x





st4.2x10

2 8x



9 32x

<31>

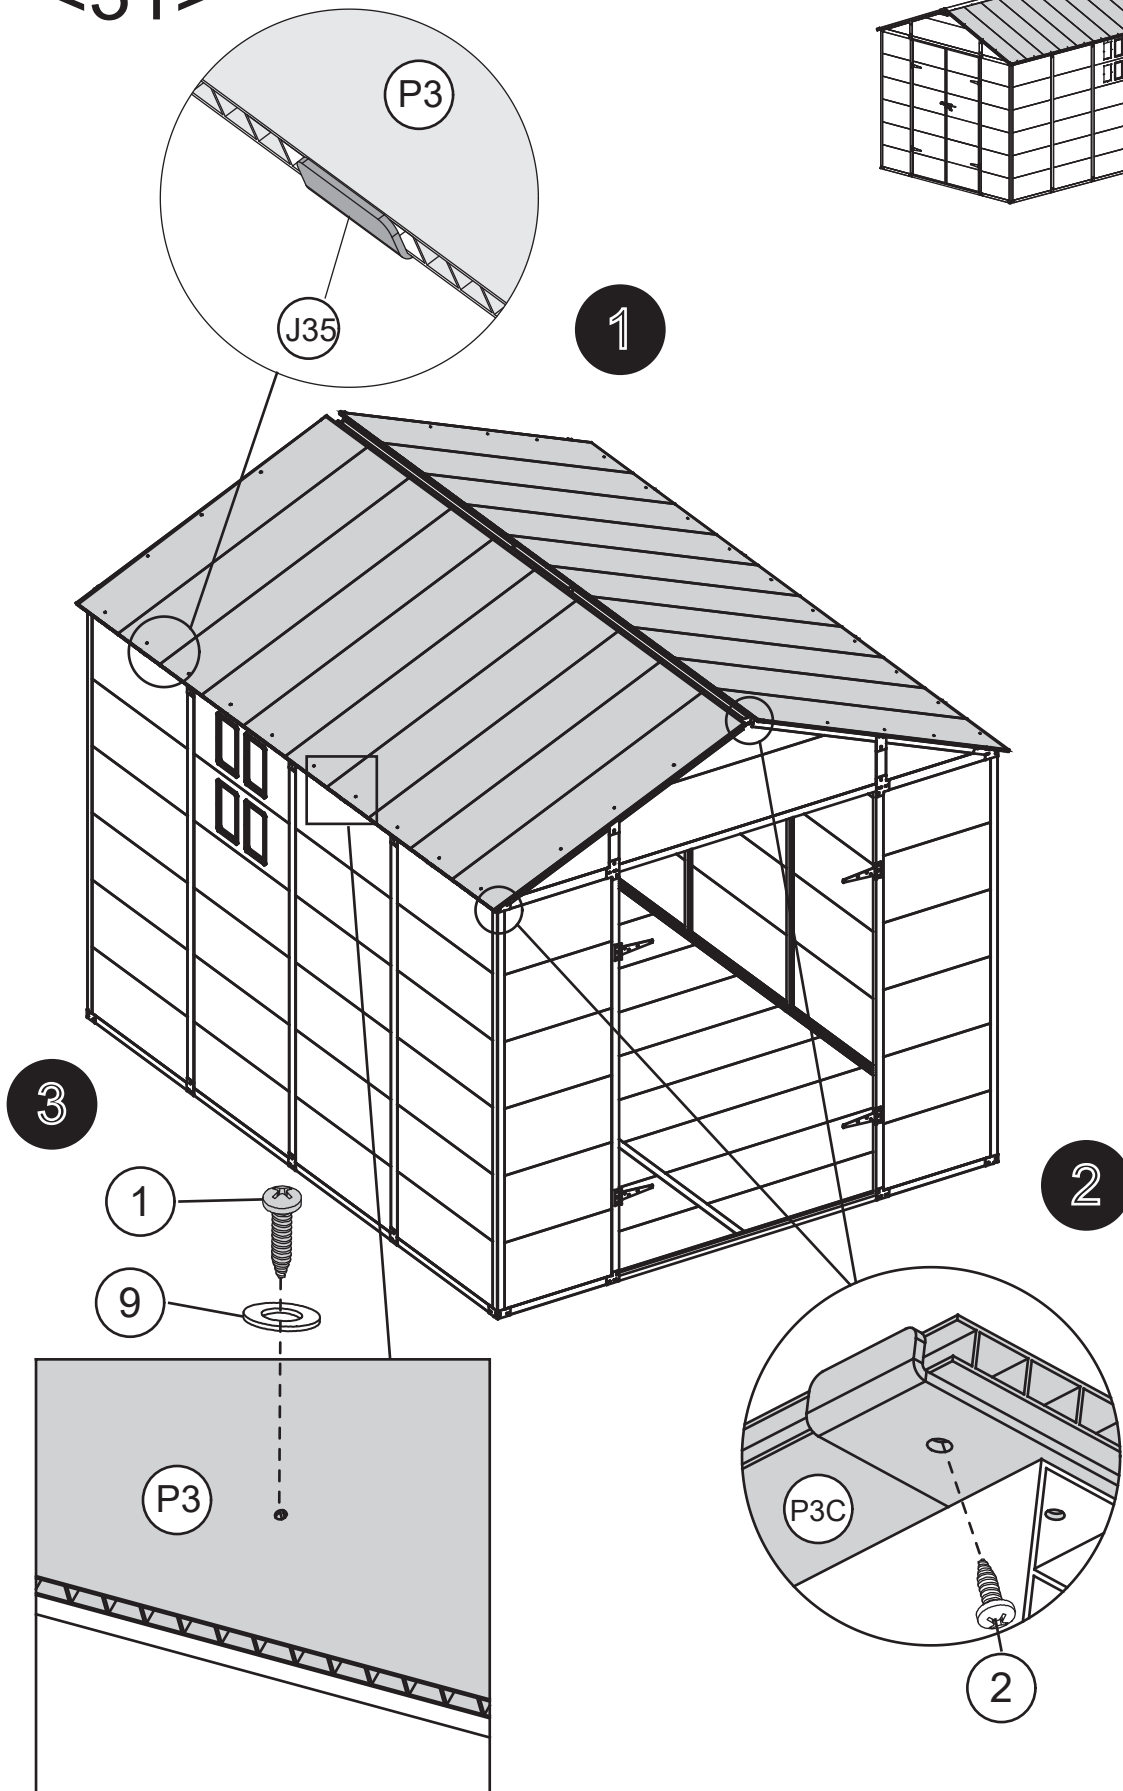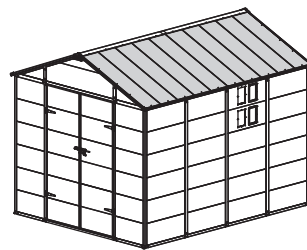

Note: Requires three people. Two people hold the roof panels in place on one side. The roof panels must be placed at the center, with the perforated end of P3 against J35. The third person tightens the screws in sequence, firstly secure the screws on two ends, then secure the other screws. Install one side at a time. Please refer to the diagram for the hole positions of the top cover plate.



(H7) 2x



(H8) 1x



(H13) 1x






(H14) 1x



(H17) 1x

<32>

Door panel assembly

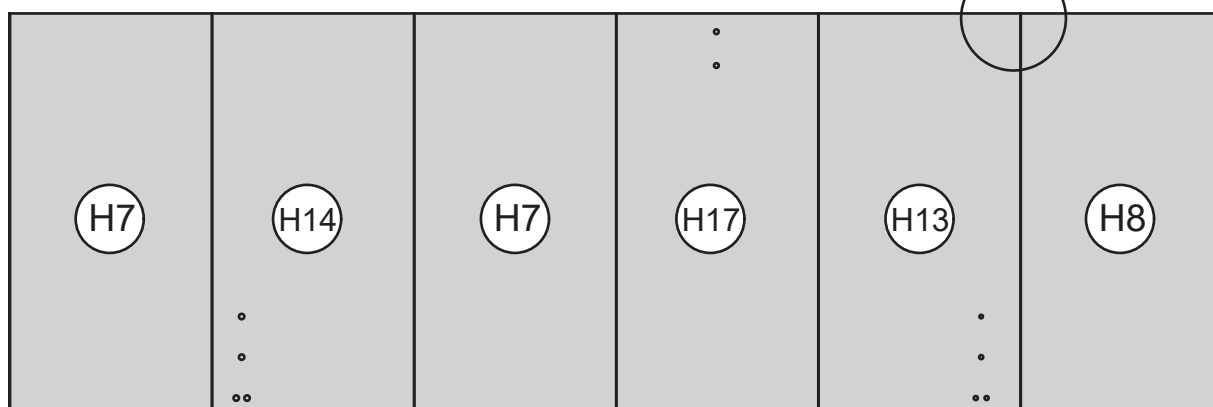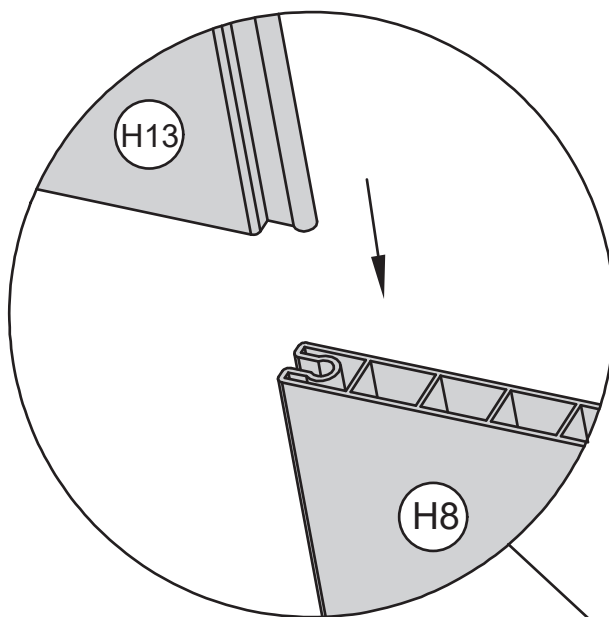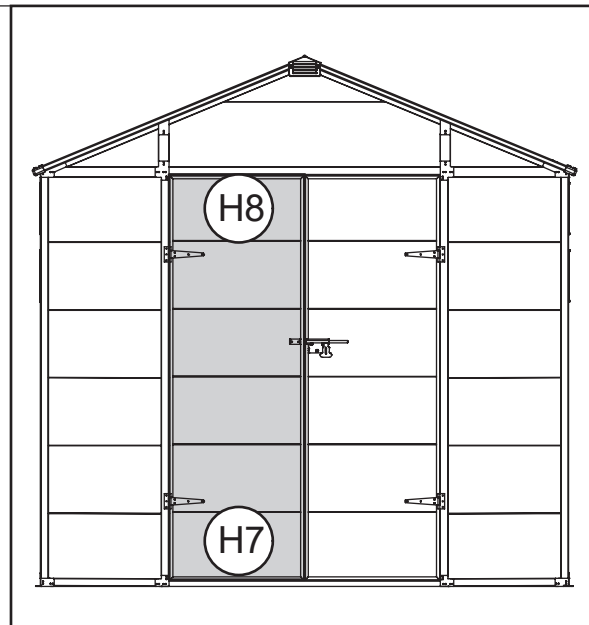




(C1) 2x






(C2) 2x

<33>

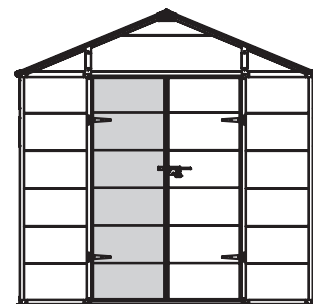


Interior side

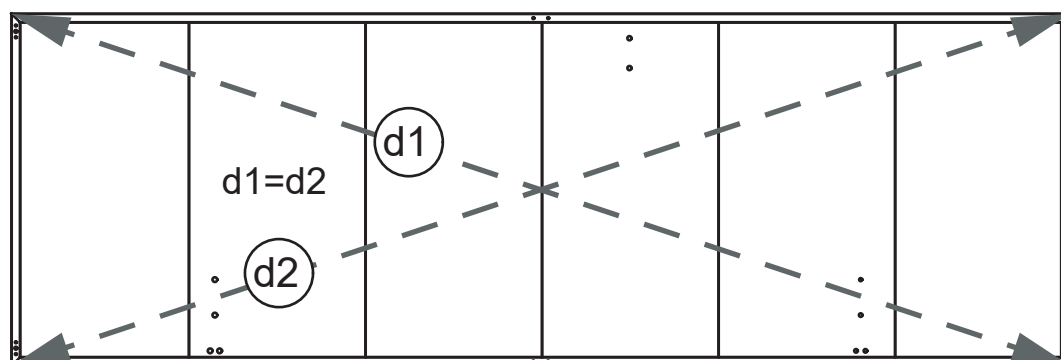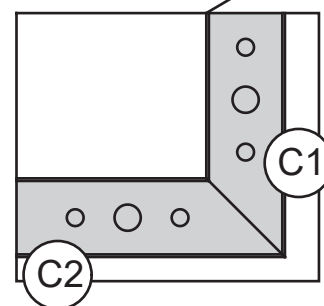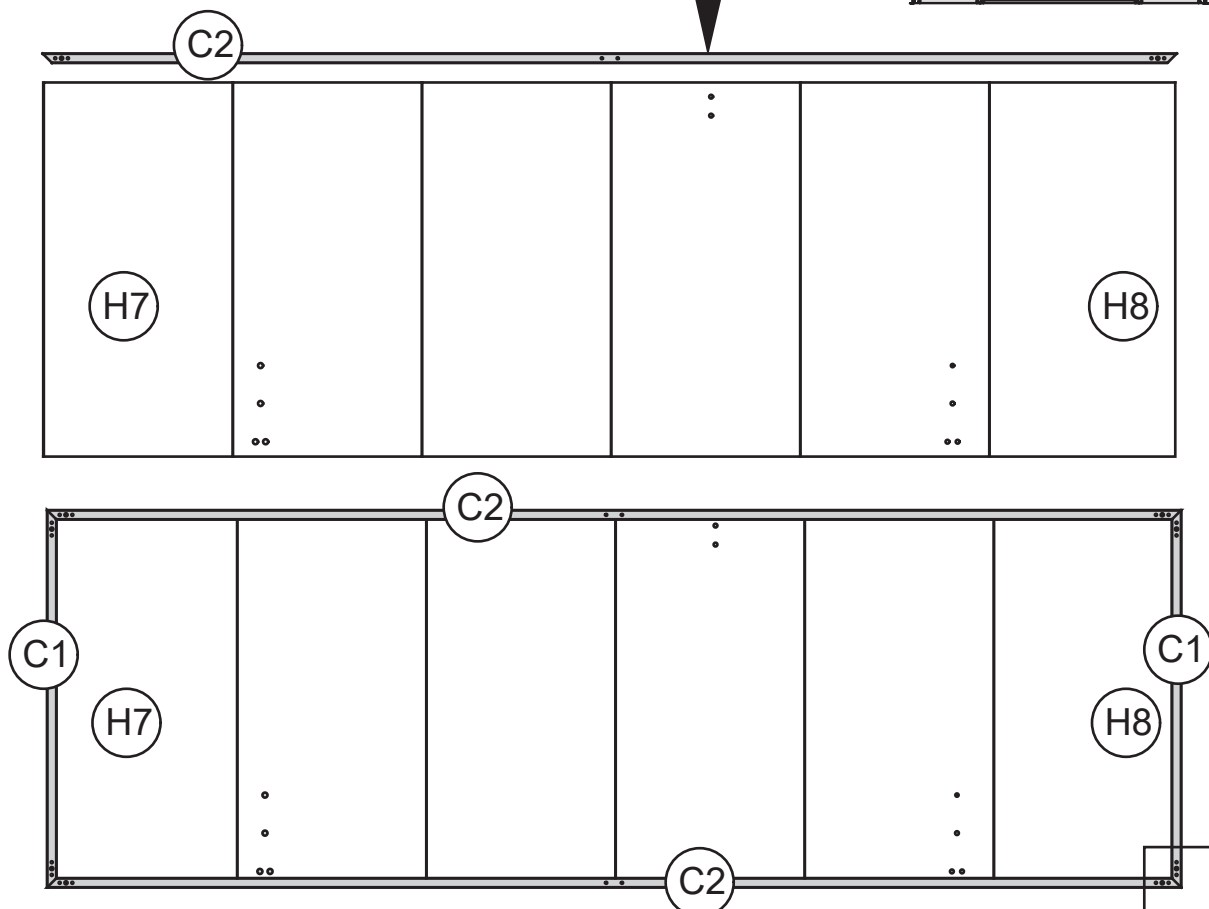

Tips: Please measure to make sure the length of d1 is equal to d2 before moving to next step to ensure a square frame and best results. Otherwise, please make adjustments.



J9 2x







J18 2x



st4.2x12
13 16x

<34>

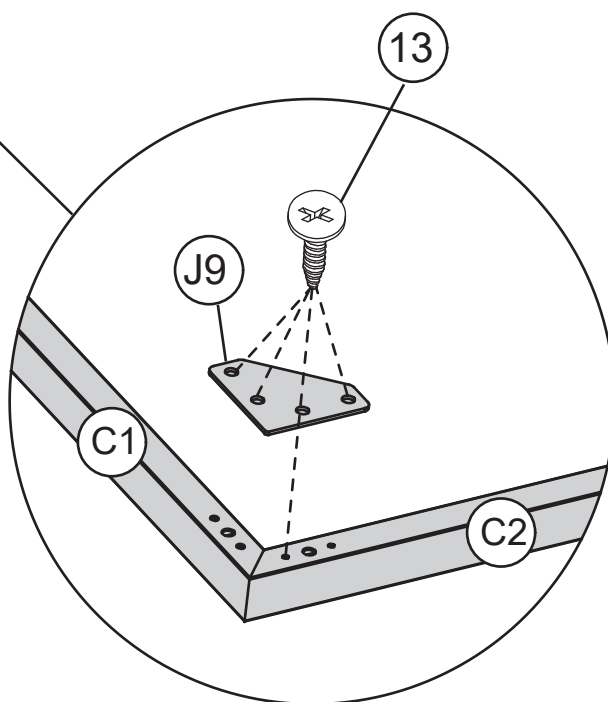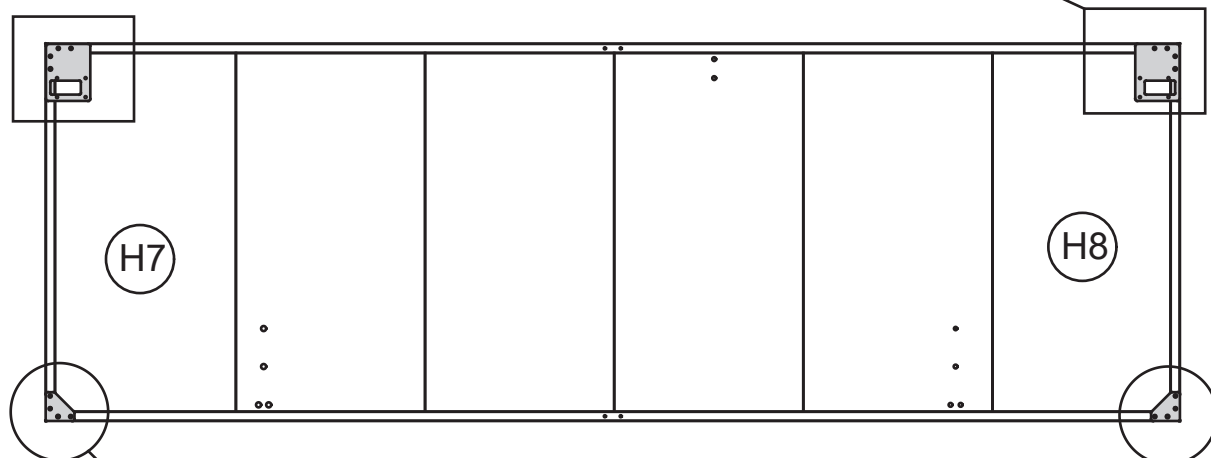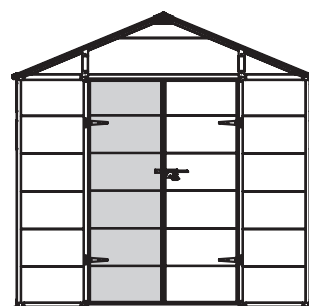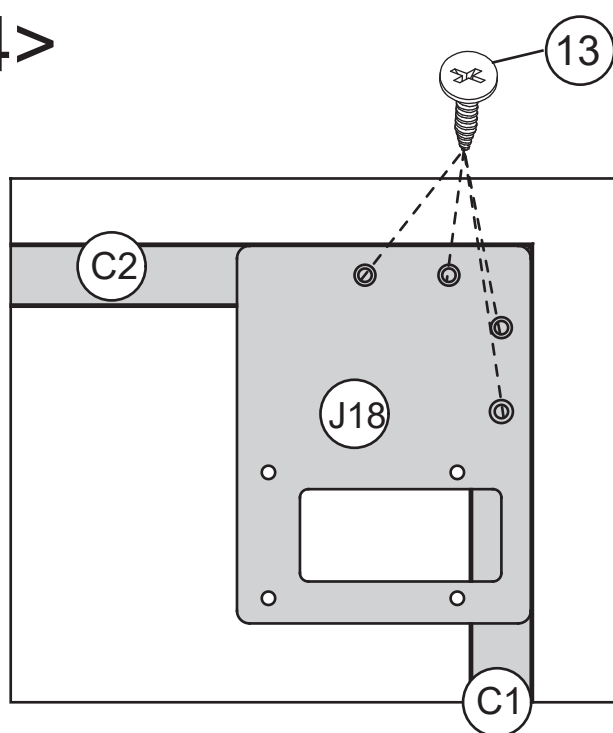



(C4) 1x





(J14) 2x




st4.2x12

(13) 6x

<35>

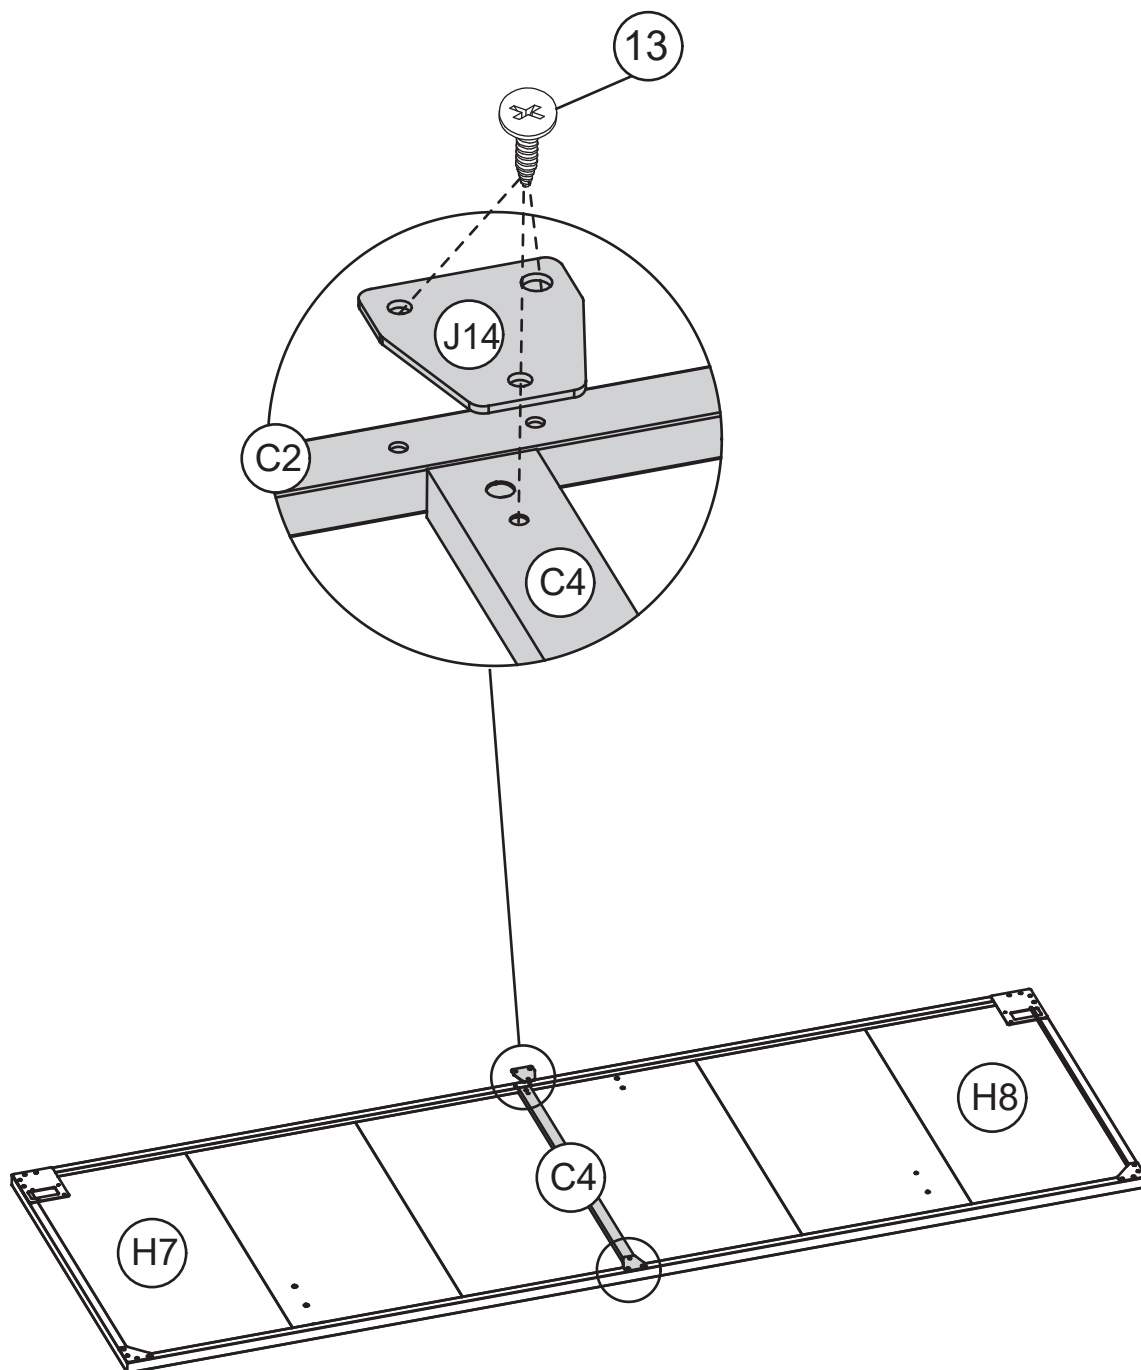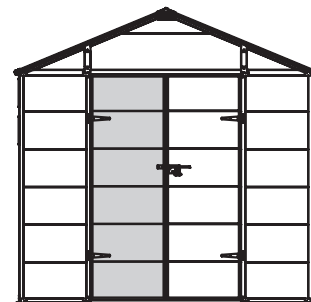






J19 2x



st4.2x12
13 8x

<36>

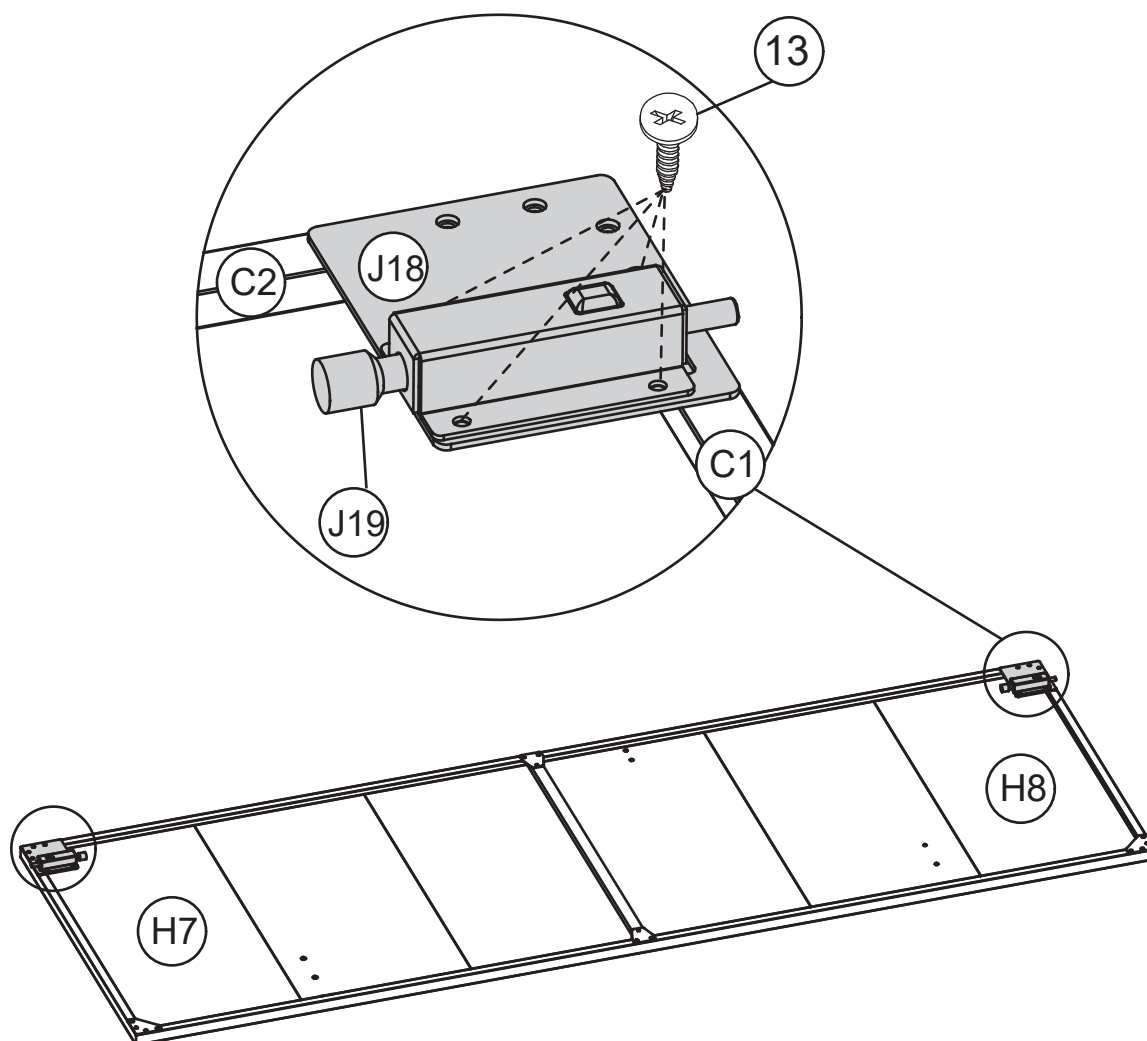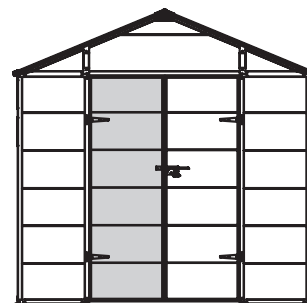

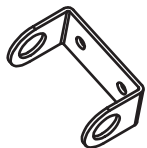

J27 1x



J28 1x






M5x18
6 2x



M5
7 2x

<37>

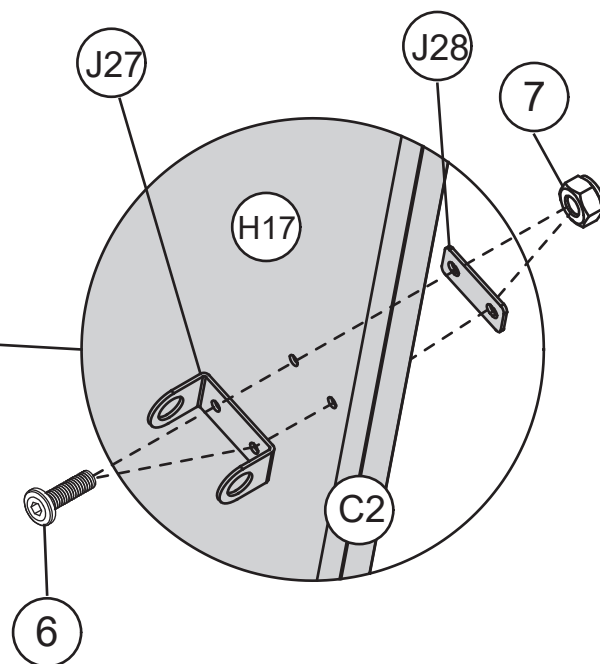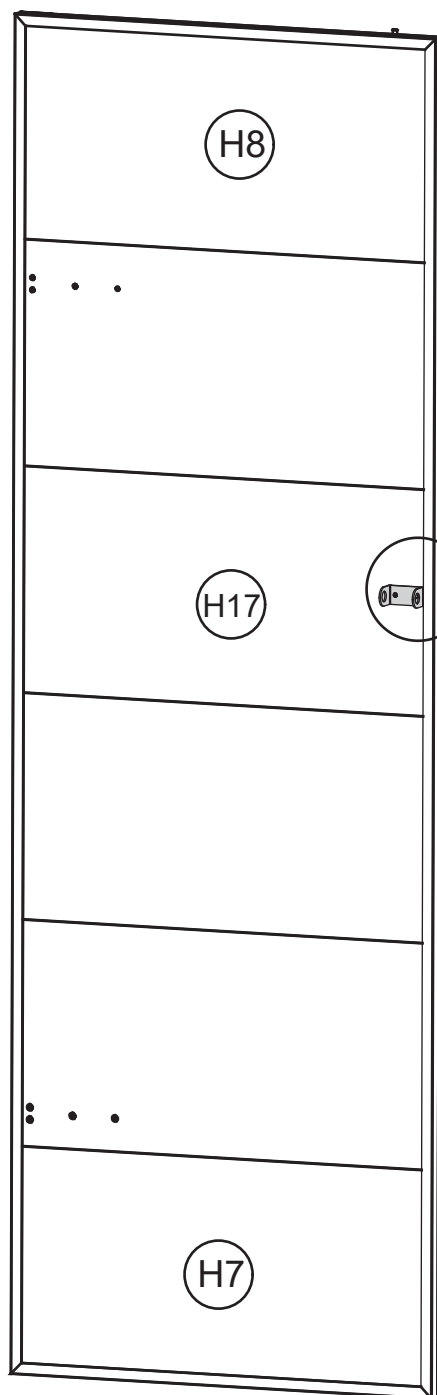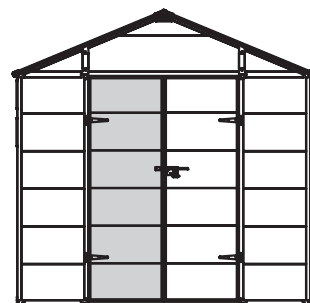

Note: Do not overtighten the screws, as this may deform the door panel. A manual hex wrench is recommended (using a power drill may apply excessive force and damage the panel).



J24 2x






6 8x M5x18



7 8x M5

<38>

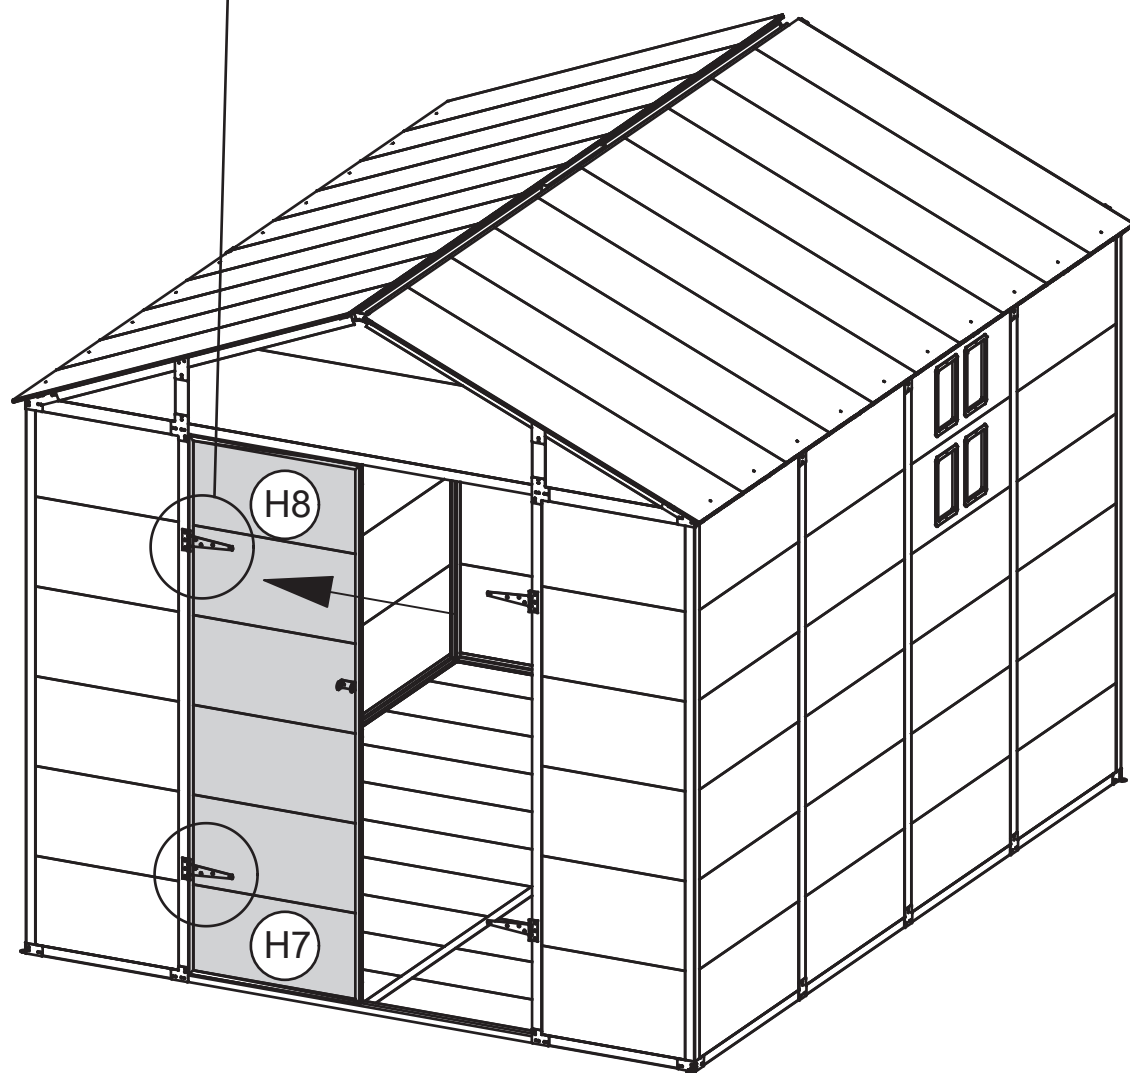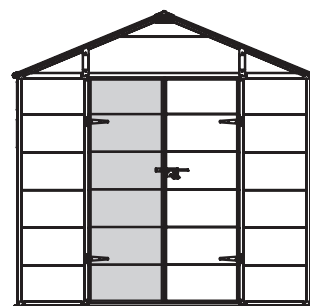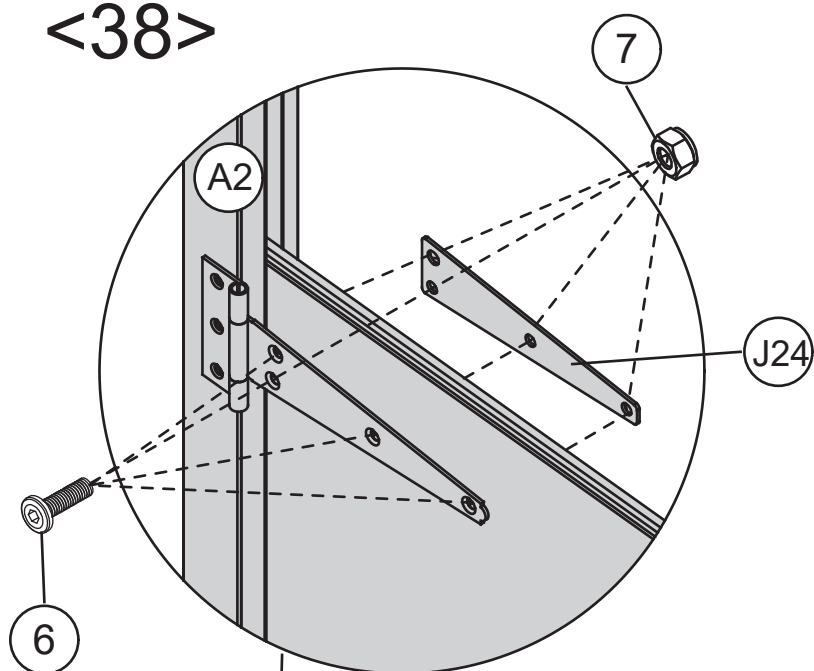

Note: Do not overtighten the screws, as this may deform the door panel. A manual hex wrench is recommended (using a power drill may apply excessive force and damage the panel).



(H6) 1x



(H7) 2x



(H8) 1x






(H13) 1x



(H14) 1x

<39>

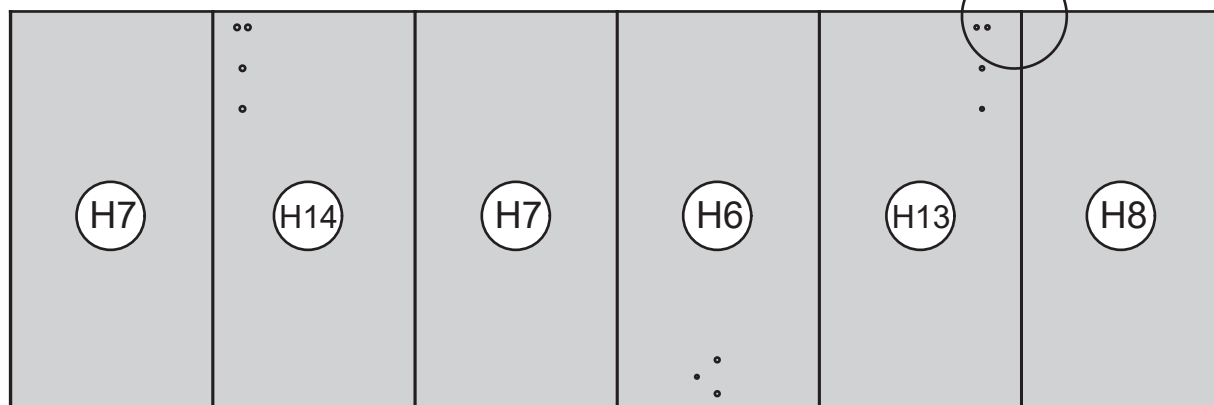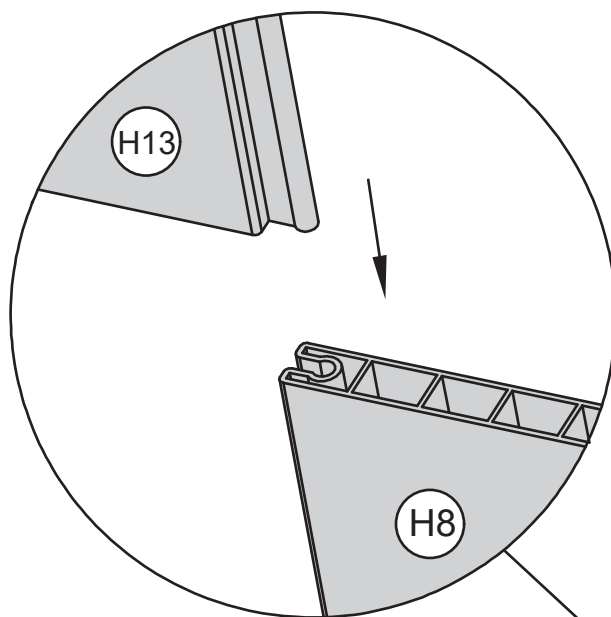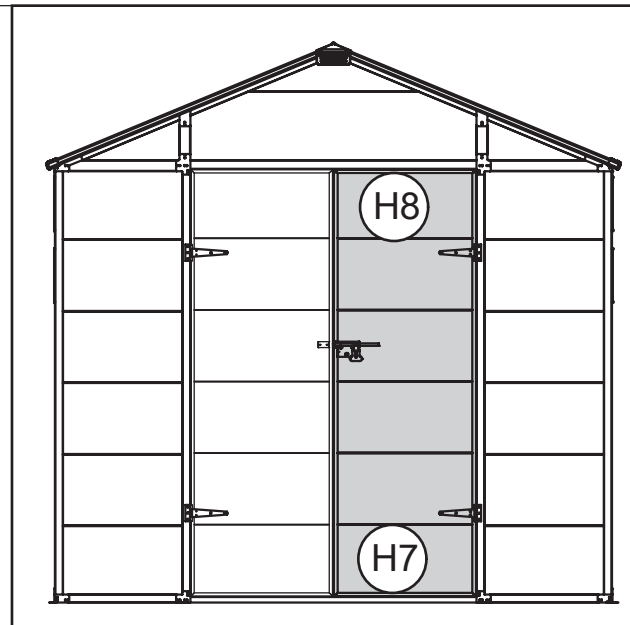




(C1) 2x 







(C2) 2x 


<40>

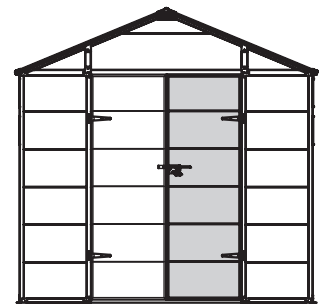

Interior side

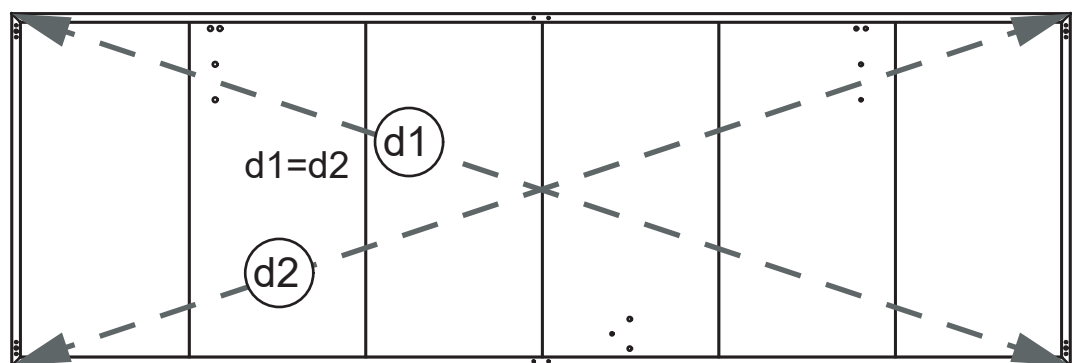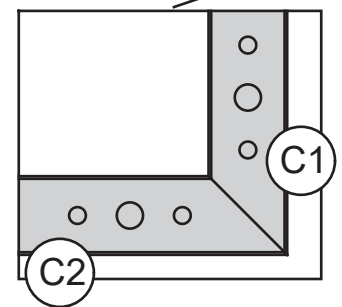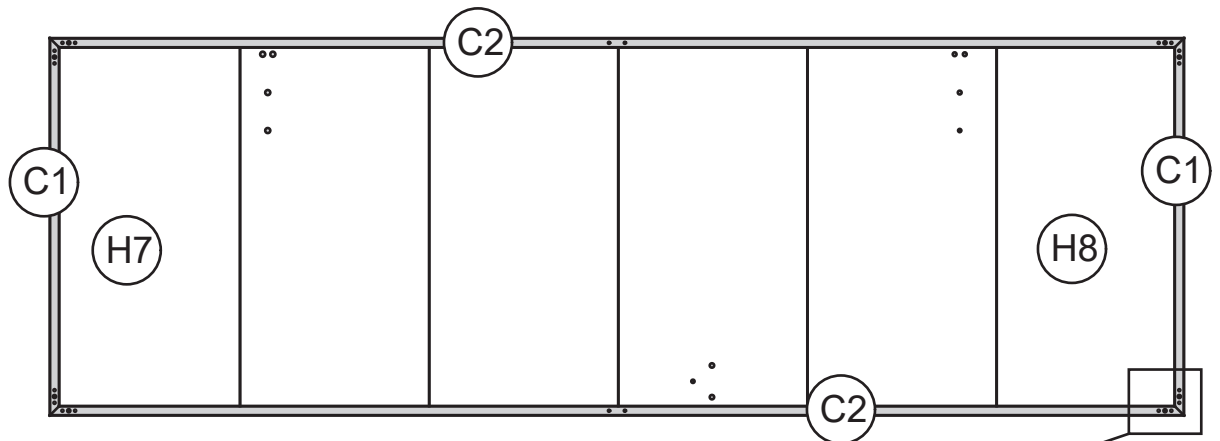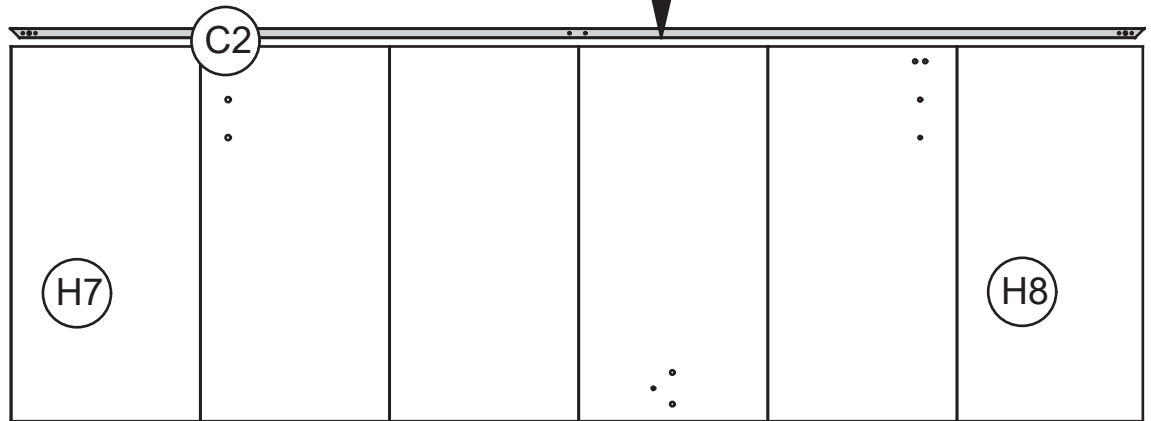

Tips: Please measure to make sure the length of d1 is equal to d2 before moving to next step to ensure a square frame and best results. Otherwise, please make adjustments.





J9 4x



st4.2x12

13 16x

<41>

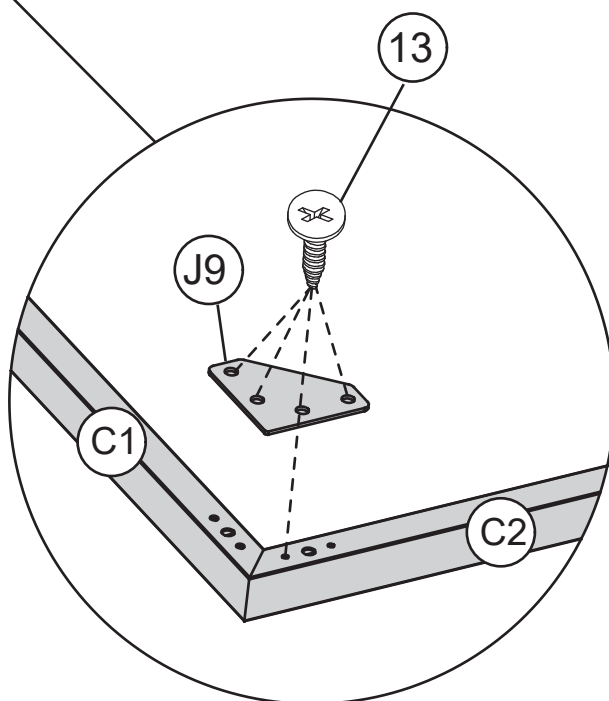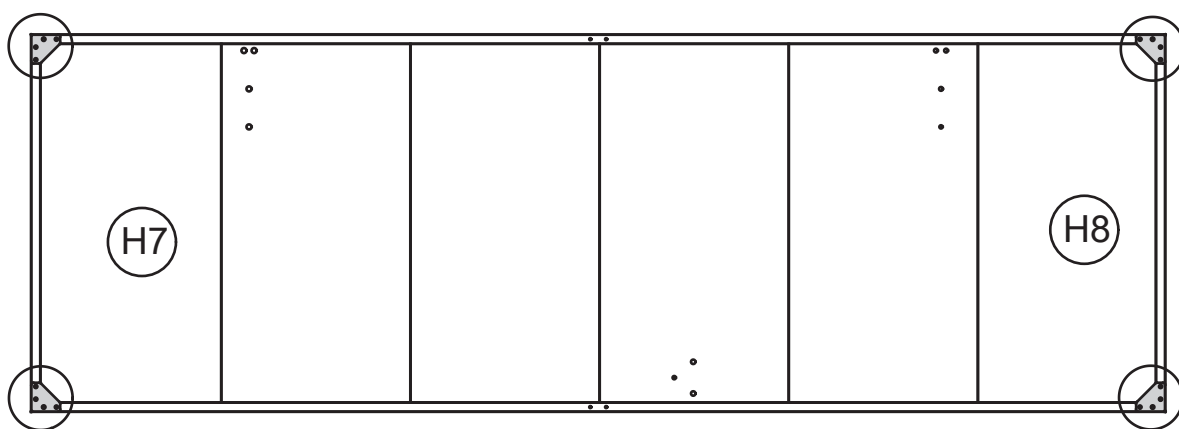



(C4) 1x










(J14) 2x





st4.2x12
(13) 6x

<42>

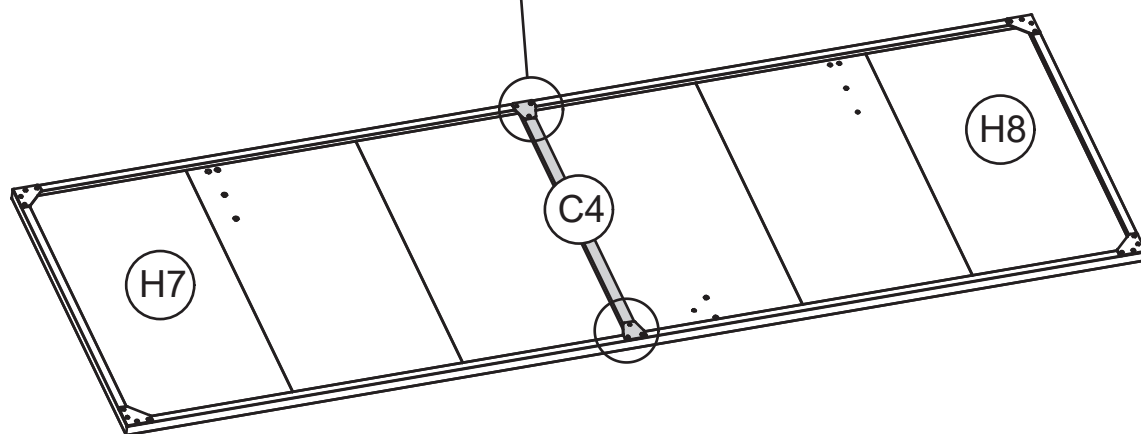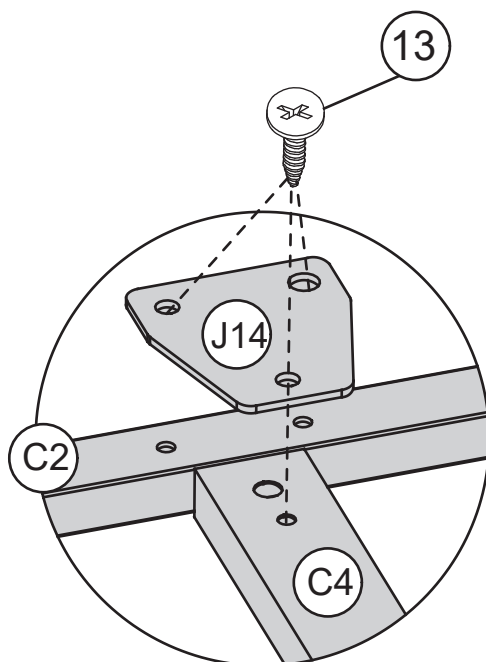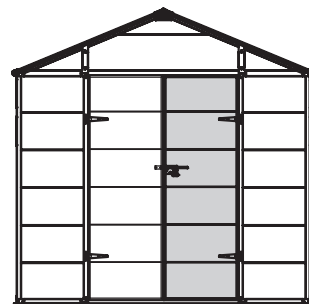

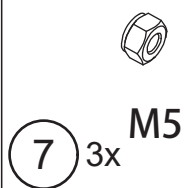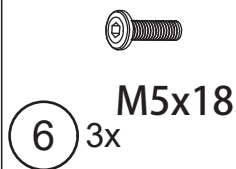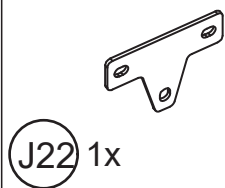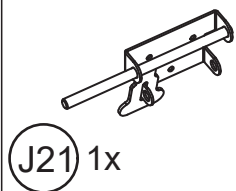

<43>

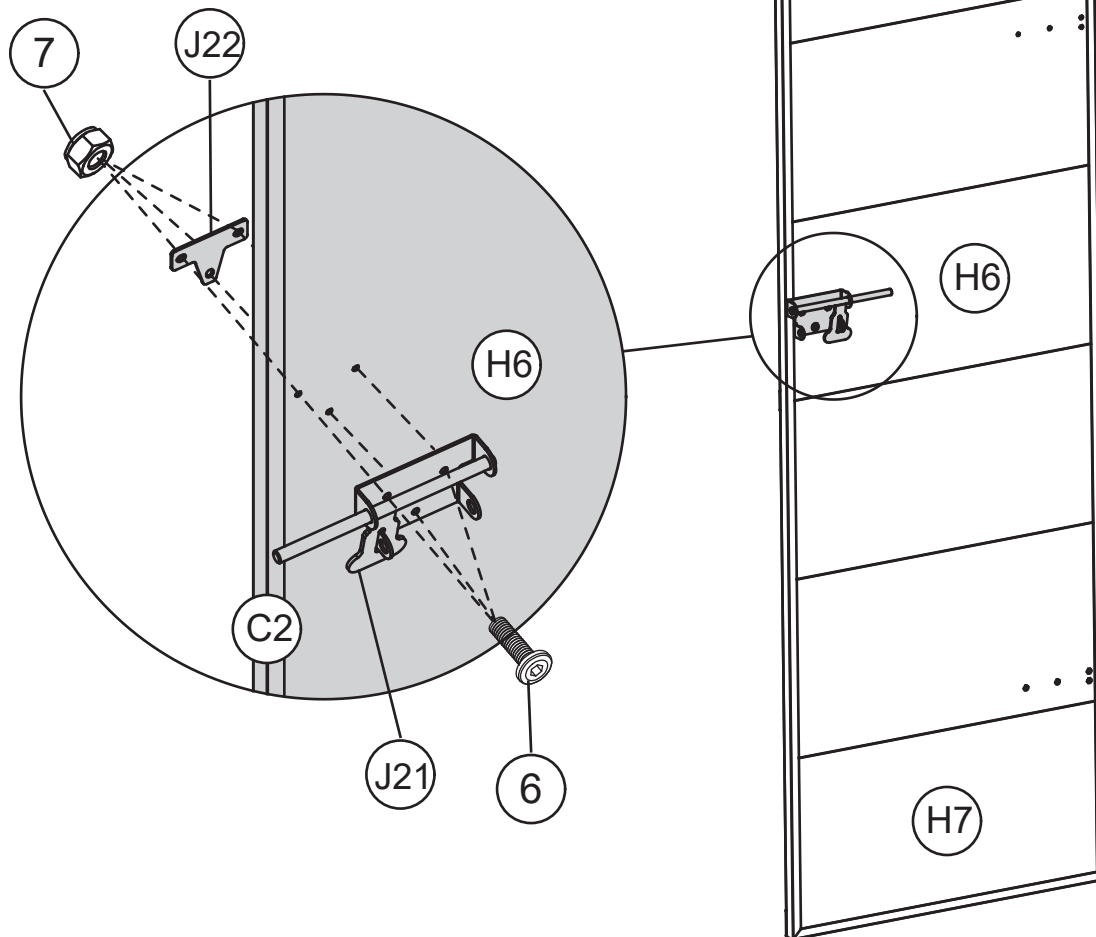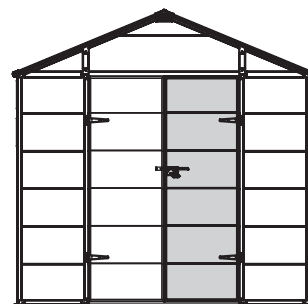

Note: Do not overtighten the screws, as this may deform the door panel. A manual hex wrench is recommended (using a power drill may apply excessive force and damage the panel).



J24 2x





6 M5x18
8x




7 M5
8x

<44>

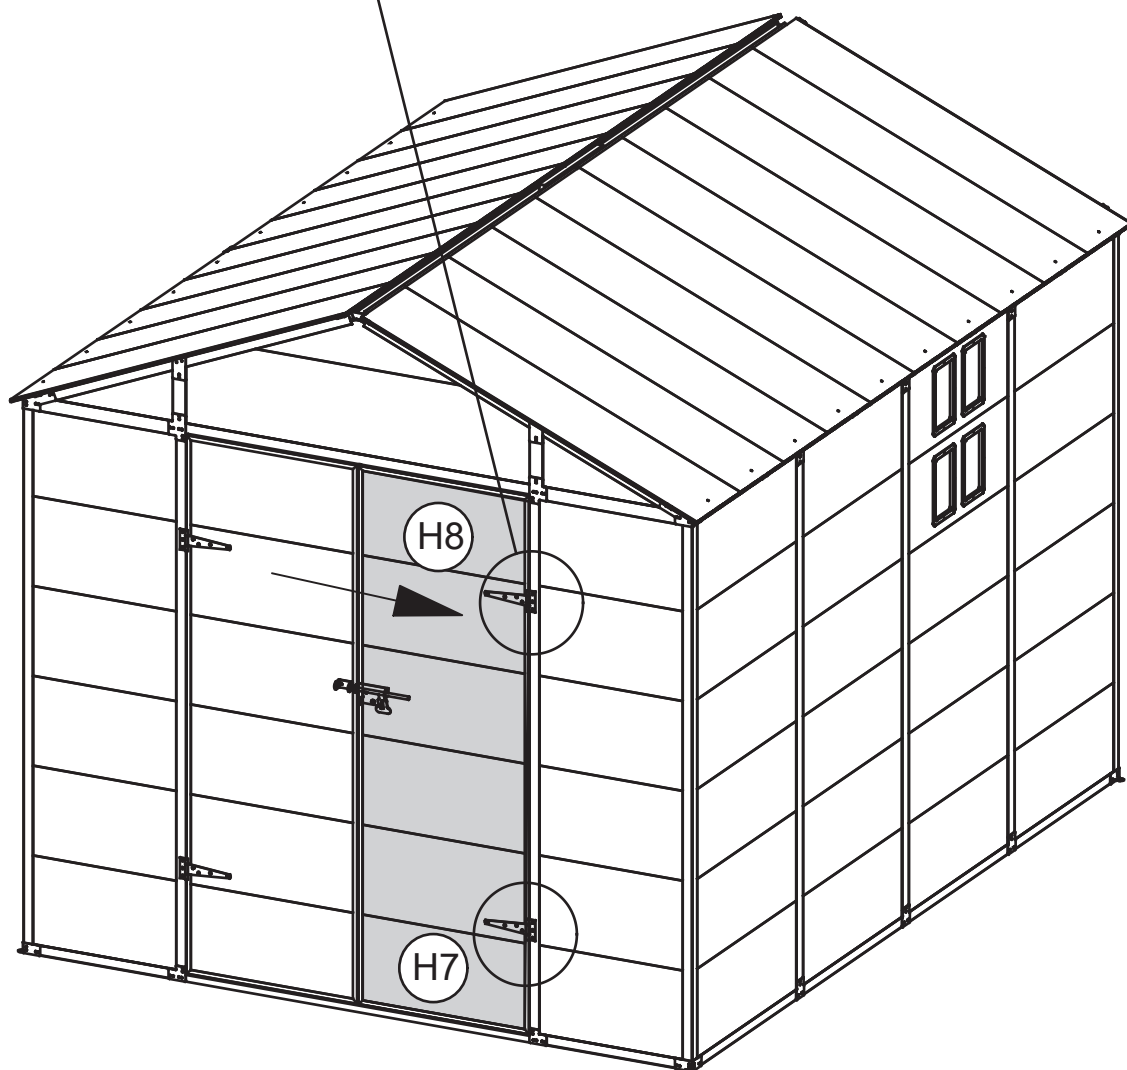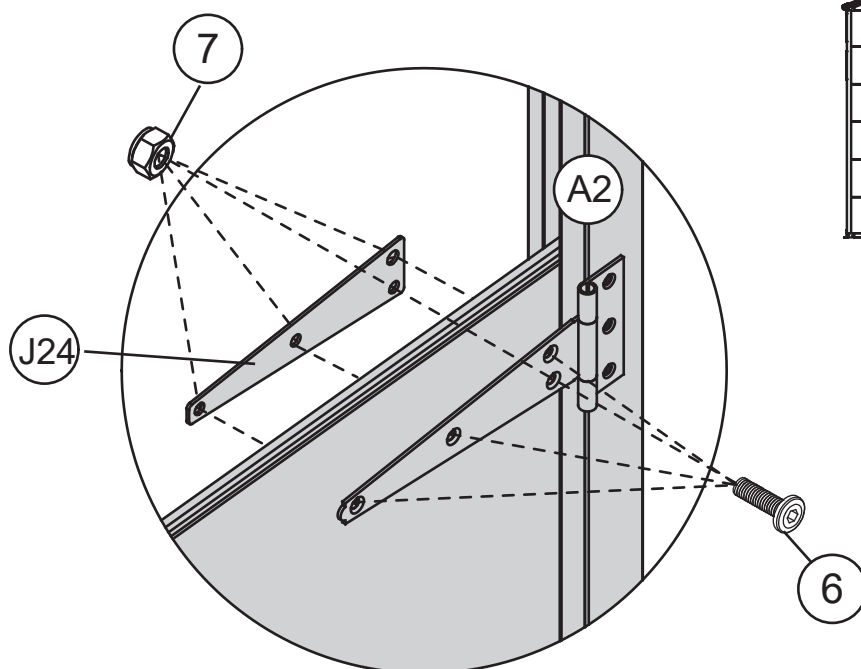

Note: Do not overtighten the screws, as this may deform the door panel. A manual hex wrench is recommended (using a power drill may apply excessive force and damage the panel).

<45>

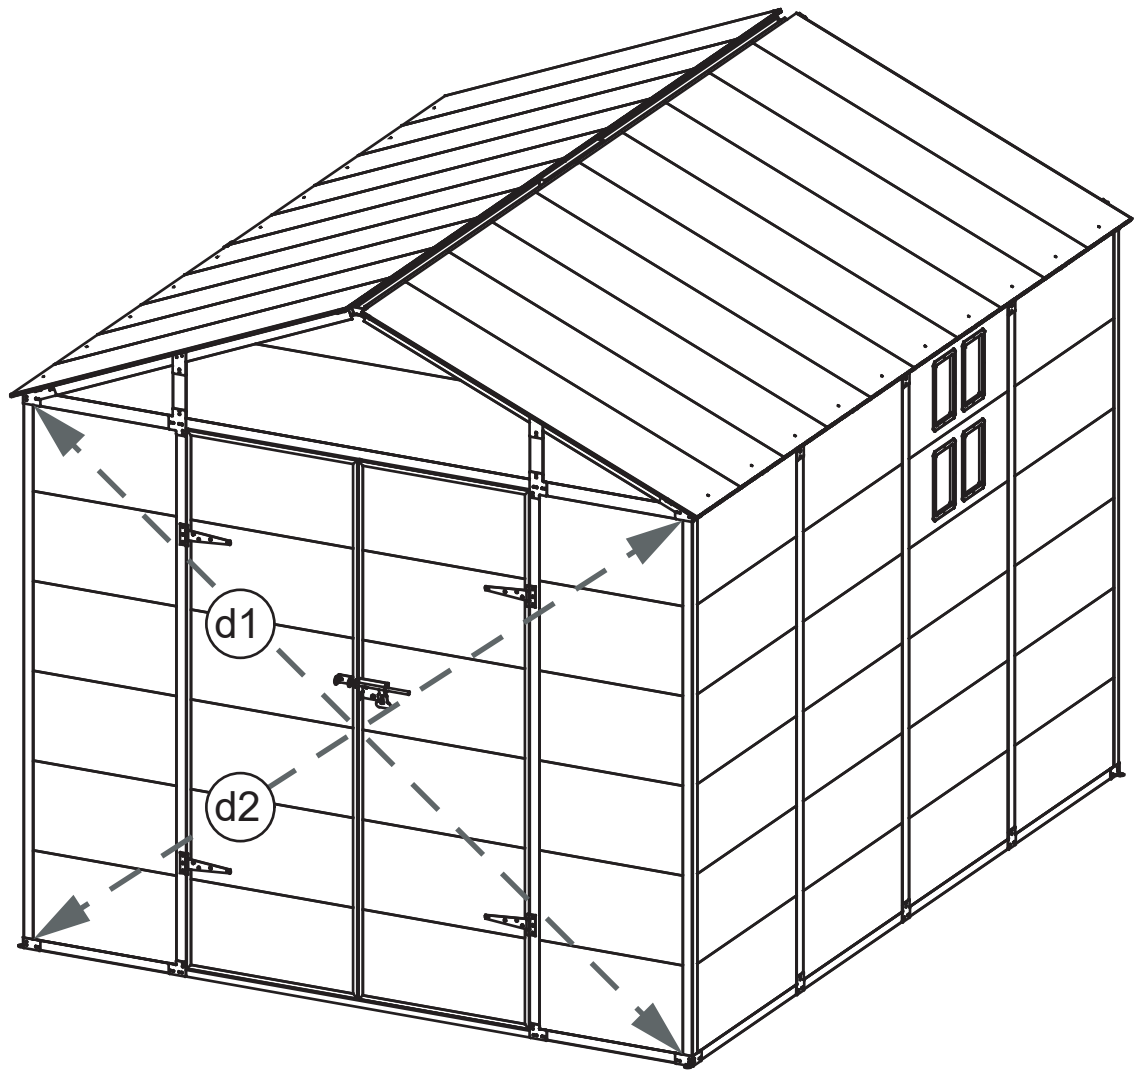

$$d1=d2$$


Tips: Please measure to make sure the length of d1 is equal to d2 before moving to next step to ensure a square frame and best results. Otherwise, please gently push the upper end of the left or right wall panel to adjust it.




st4.2x10

2 13x

<46>

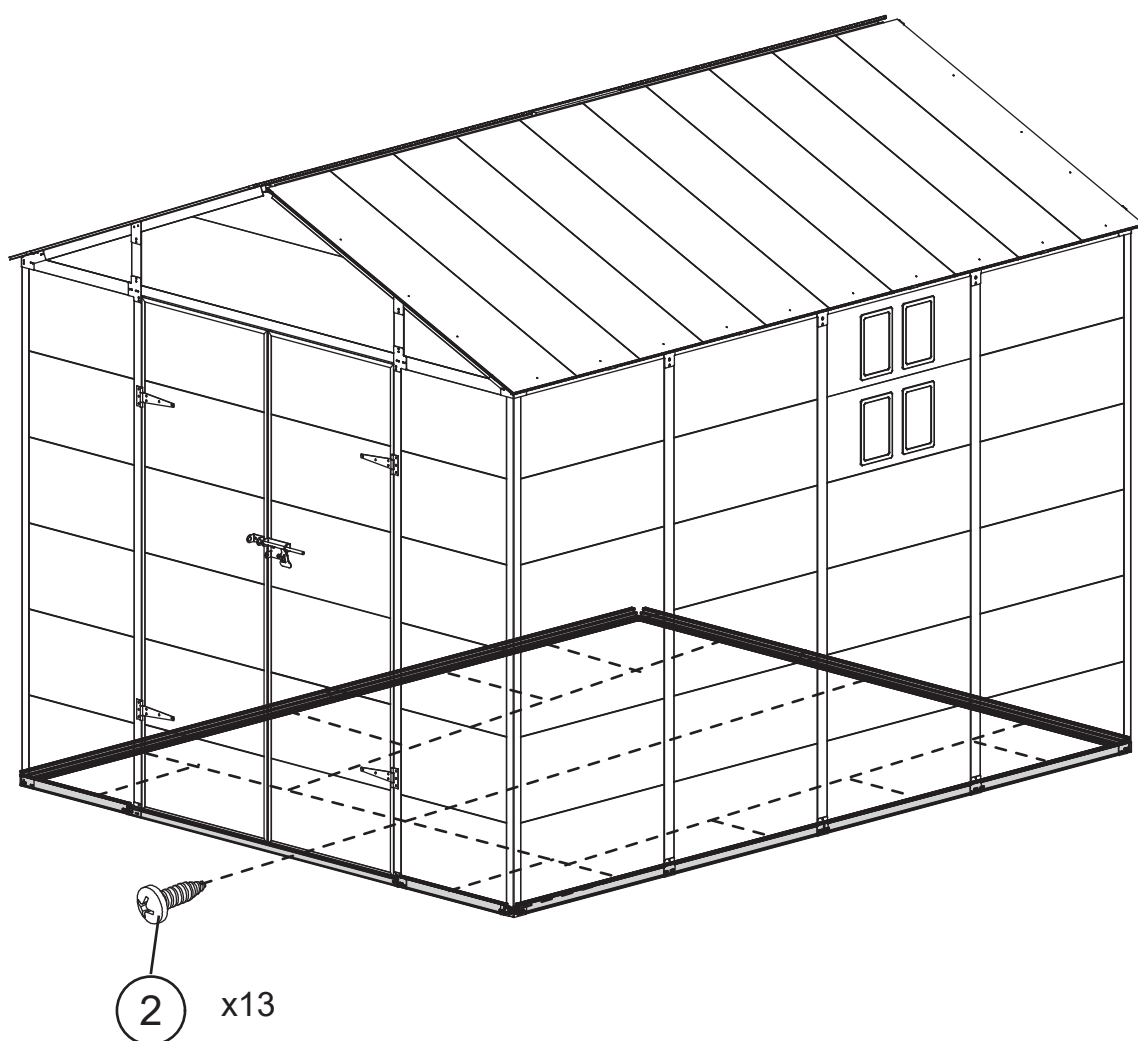

Drive self-tapping screws at the contact point between each board and the ground beam

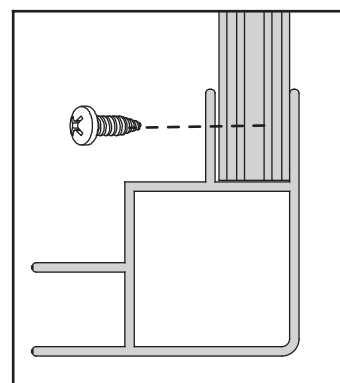





st4.2x10



2 138x

<47>

Tip: Before tightening the screws, first ensure the frame fits closely against the wall panels without tilting. Then follow the dashed line position to fasten the screws from the inside.
(Note: Fix the screws at the center of the wall panel.)

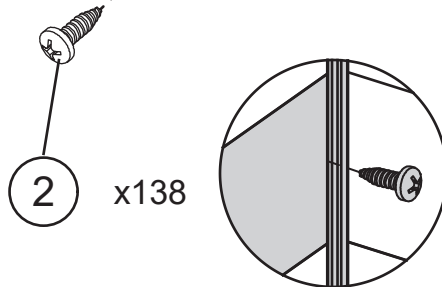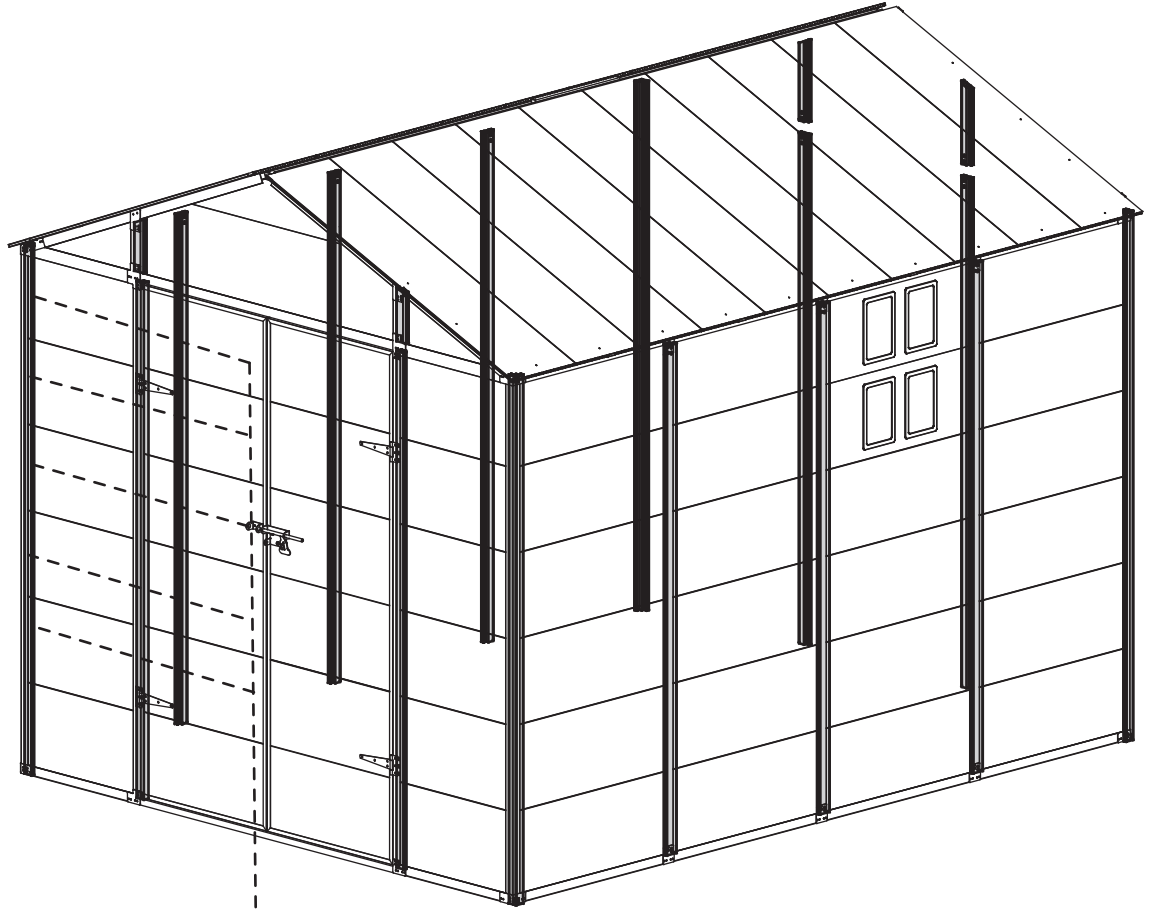

Drive self-tapping screws at the contact point between each board and the pillar

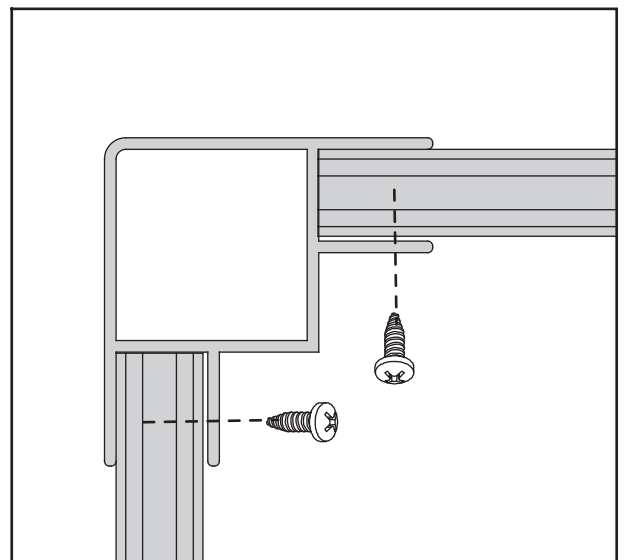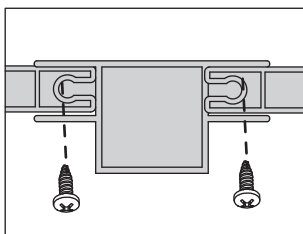





st4.2x10

2 27x

<48>

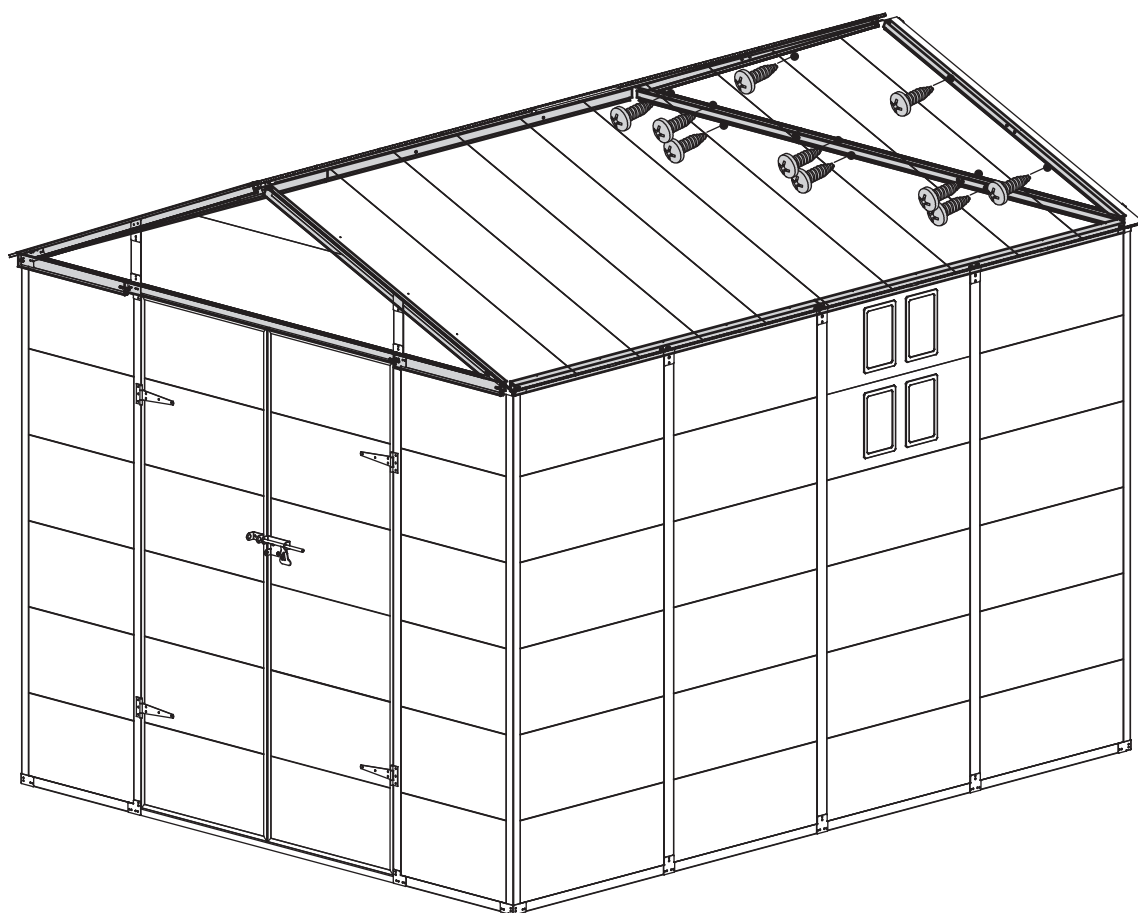

Apply self-tapping screws at the contact point
between each board and the beam


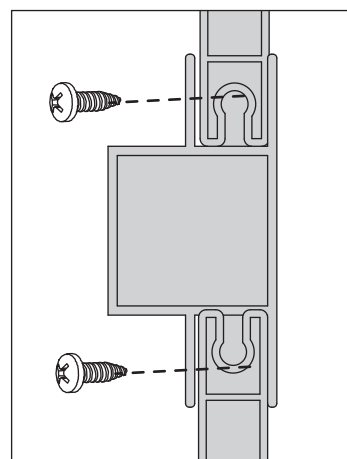





st4.2x10

2 20x

<49>

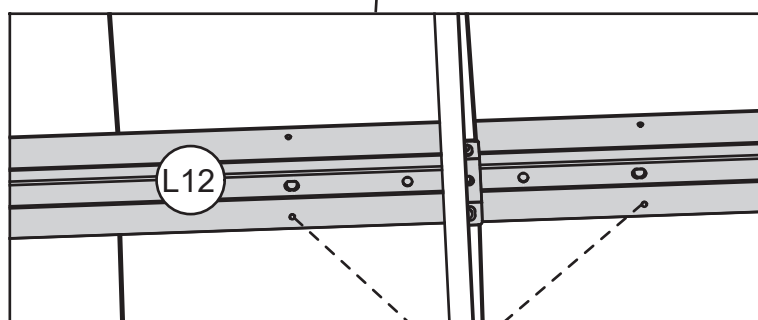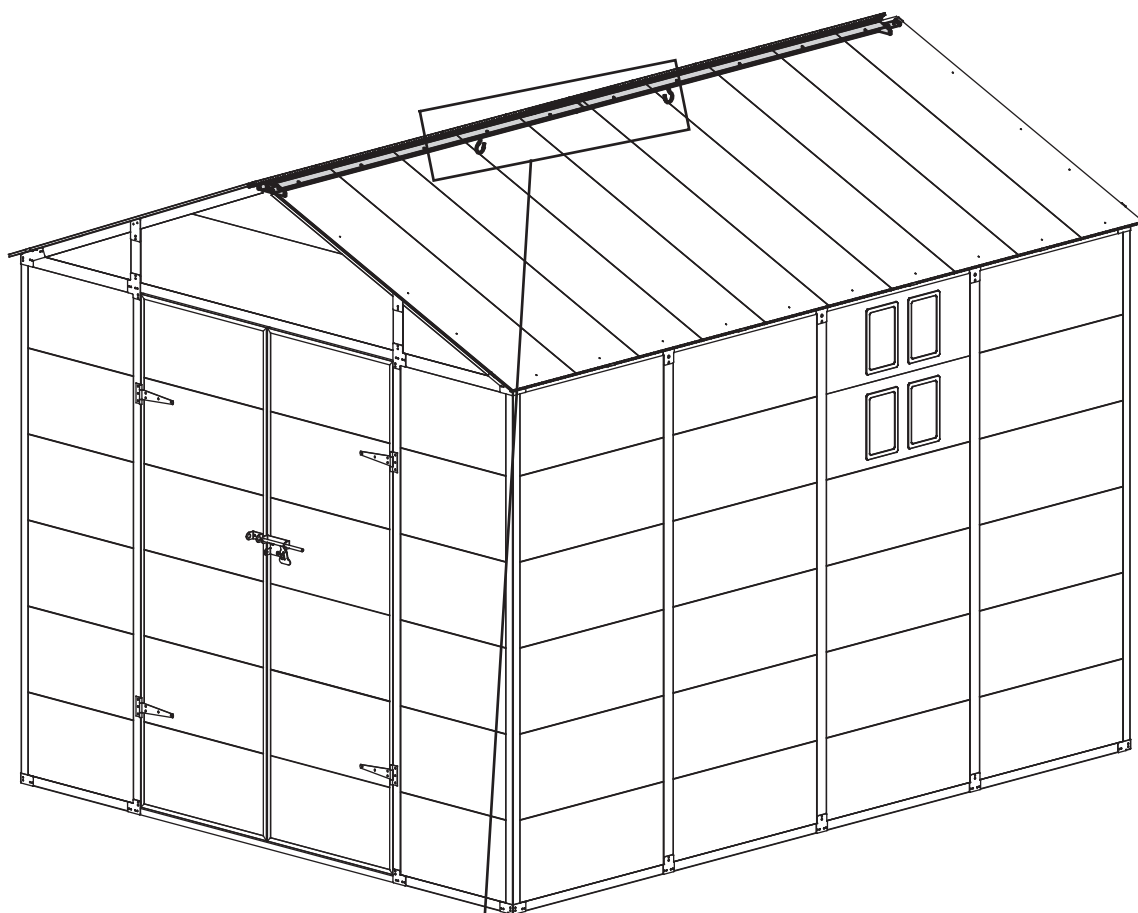

2

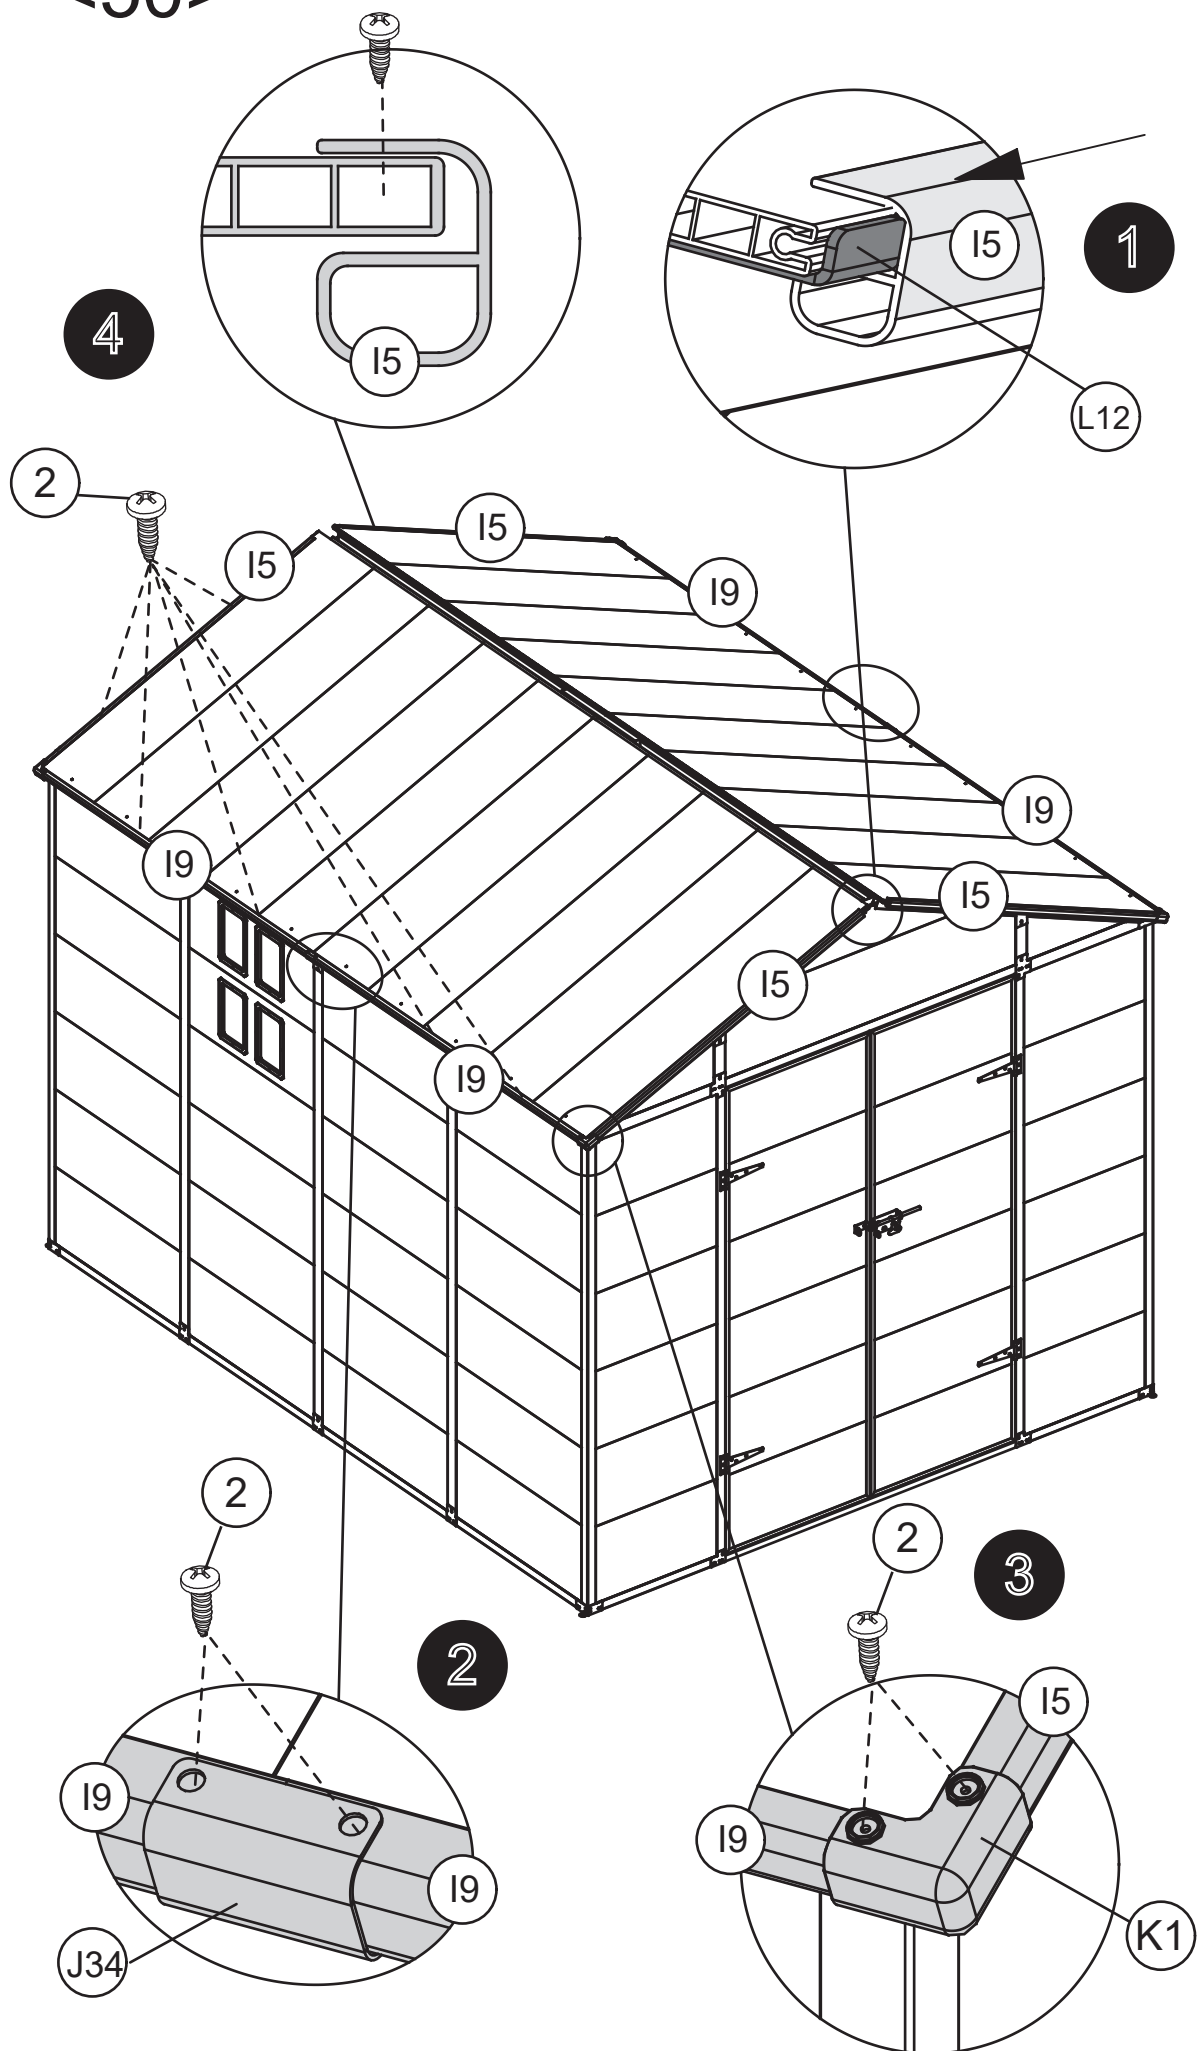



L11 2x





st4.2x10

2 20x

<51>

2

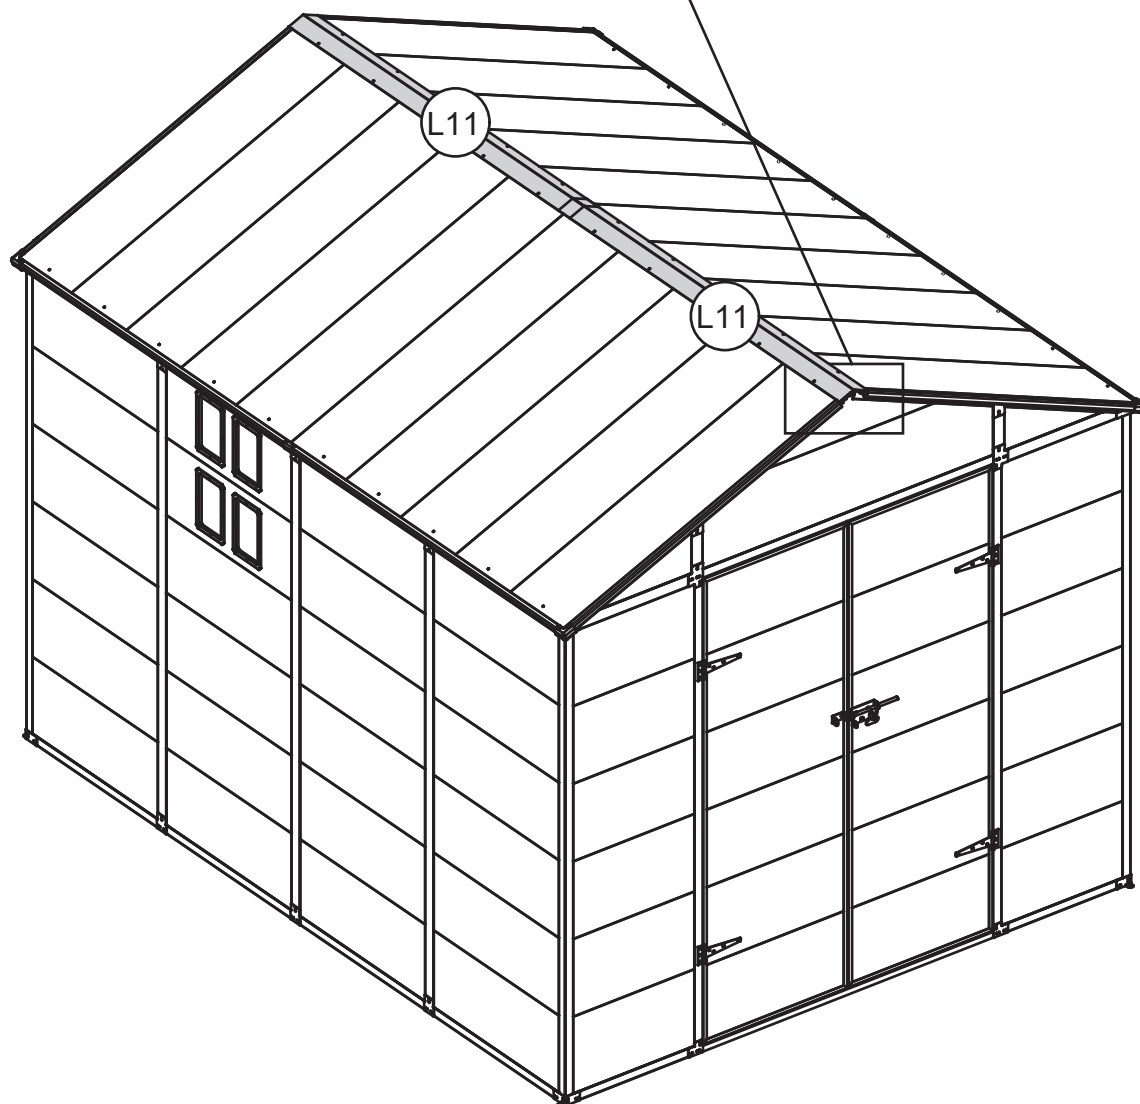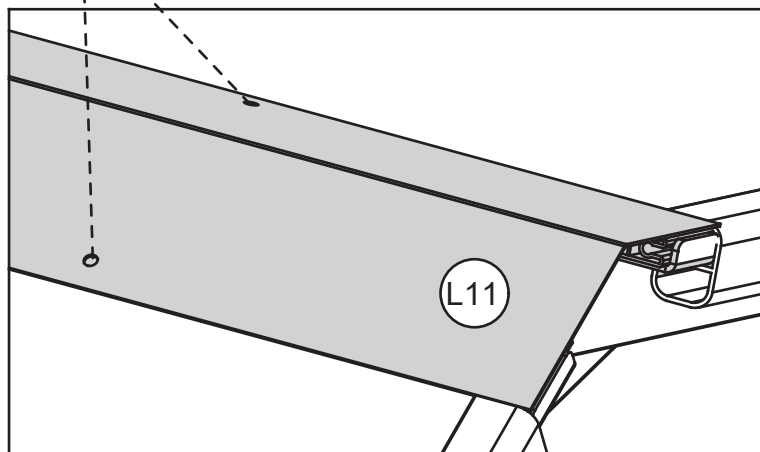





(K2) 2x



st4.2x10

(2) 4x




<52>

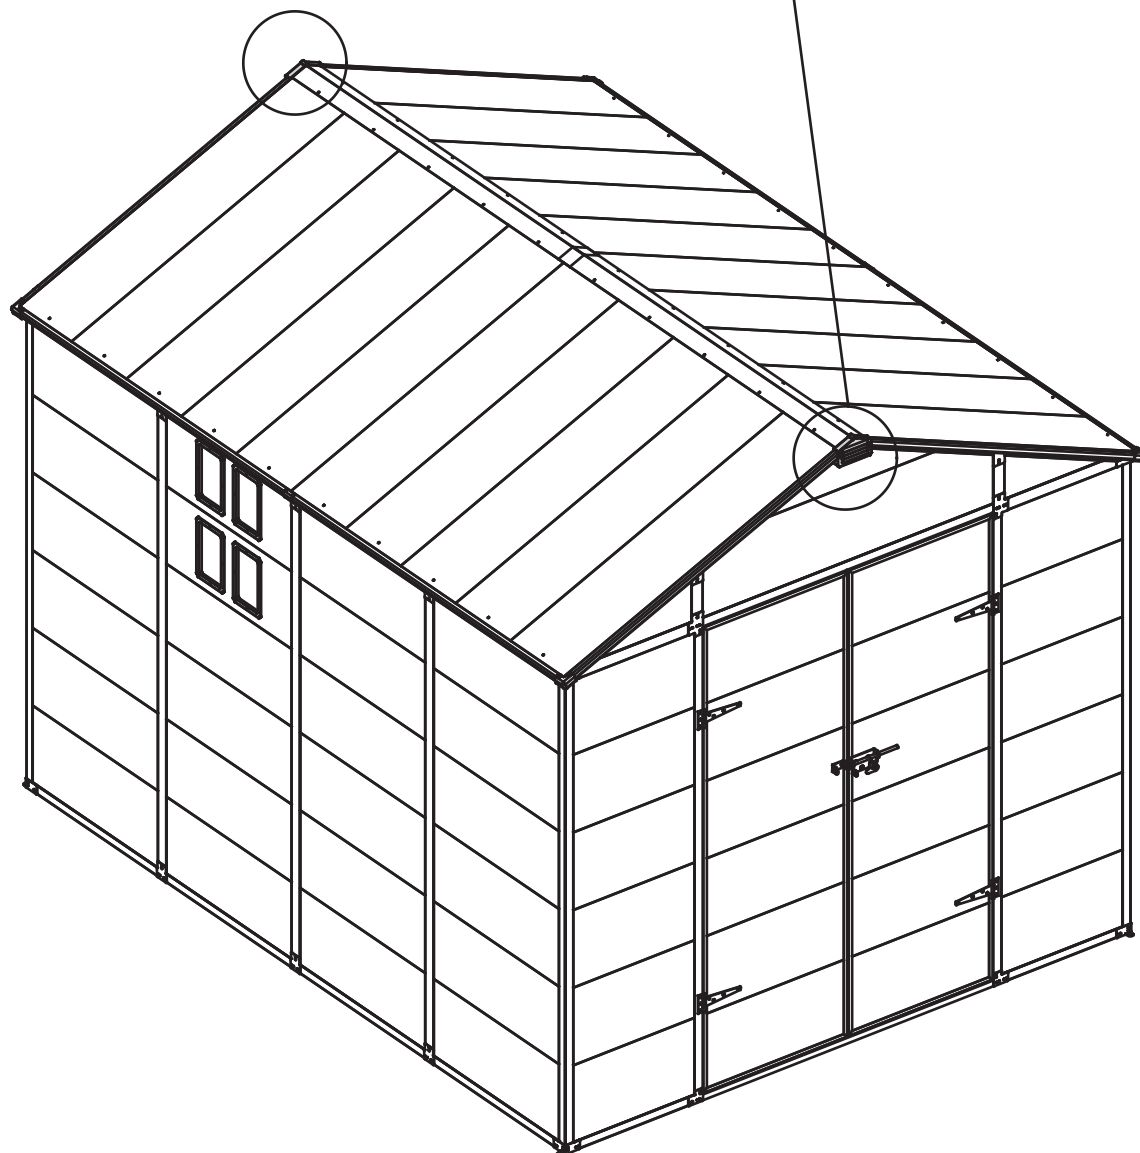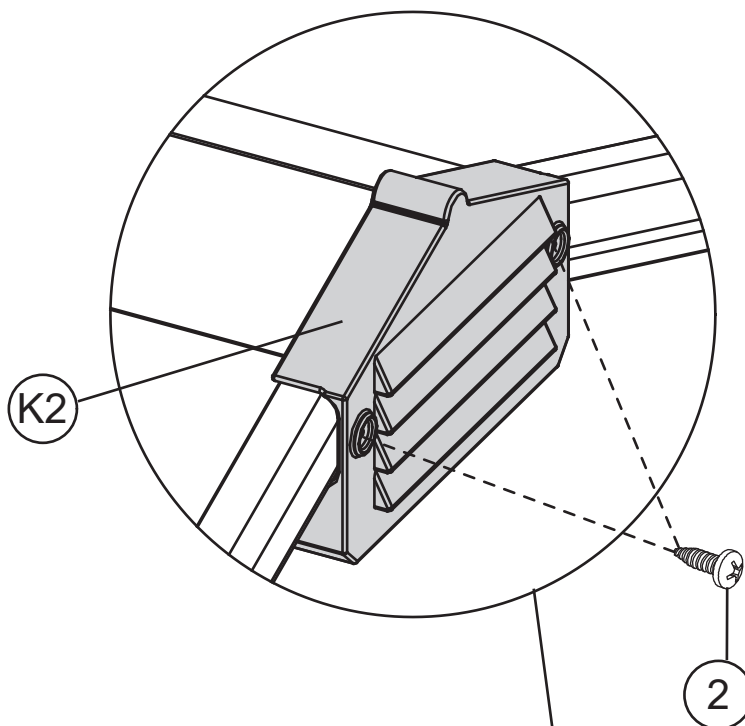



10 4x

<53>

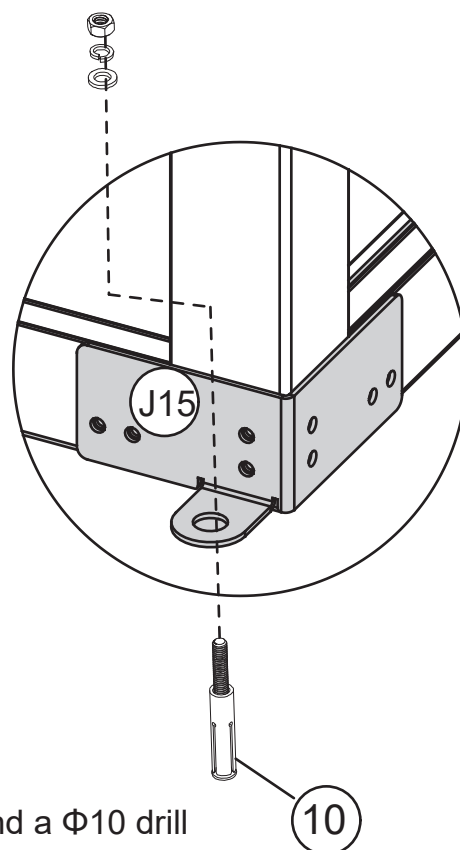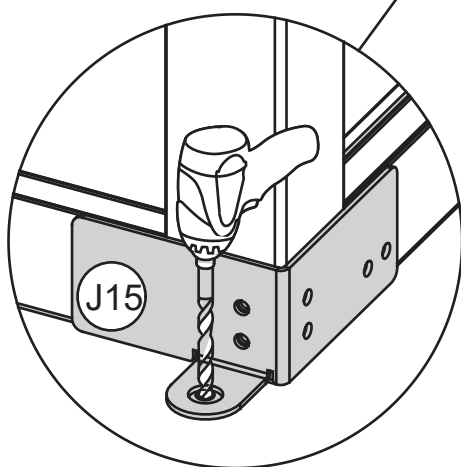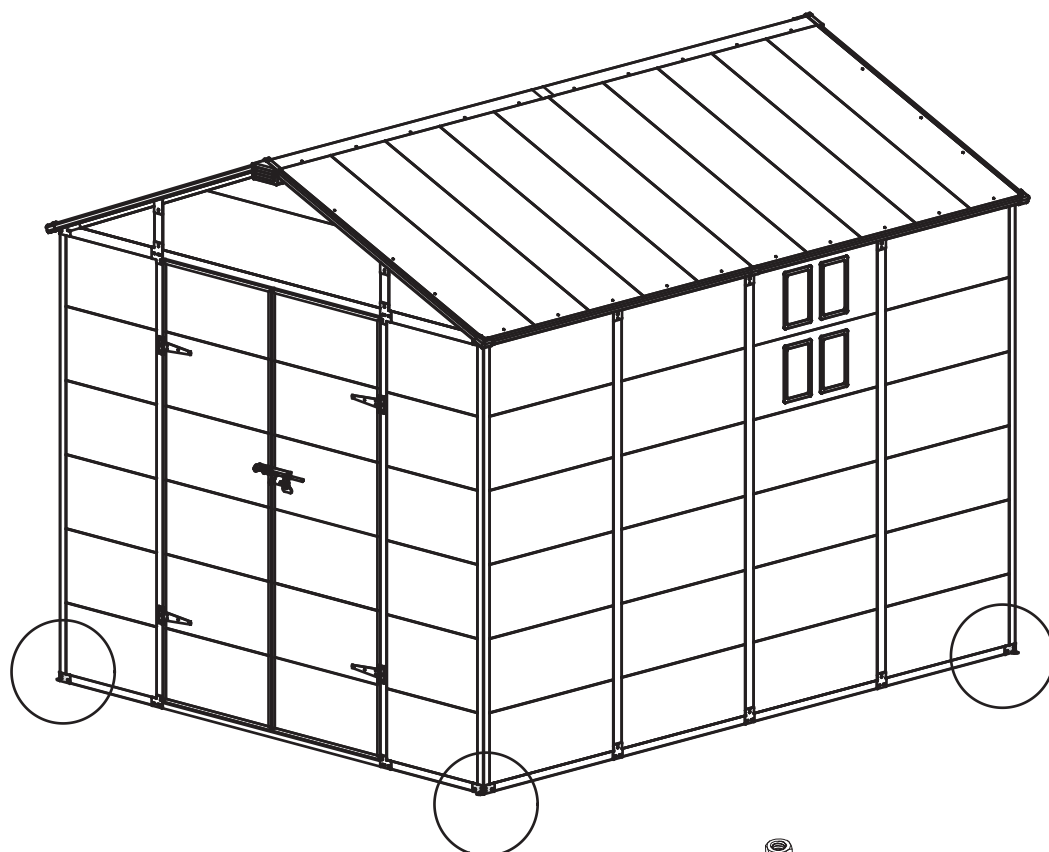

You need to prepare your own electric drill and a $\Phi 10$ drill to drill the hole.